

85SV3

DEPARTMENT No. 54
JULY 28, 1925

LIST OF PARTS COMPLETE



FOR

Machine No. 85 S.V. 3

THE SINGER MANUFACTURING COMPANY

LIST OF PARTS COMPLETE

FOR

MACHINE No. 85 S. V. 3

FOR EDGING KNITTED SLIPPERS, BED SPREADS, ETC. ONE
NEEDLE, ONE LATCH HOOK, SUPPLEMENTARY THREAD
DEVICE. DISTANCE BETWEEN STITCHES FROM $\frac{1}{16}$ IN. TO
 $\frac{5}{16}$ IN. GREATEST WIDTH OF BIGHT $\frac{5}{16}$ IN.

*37568	Arm with two each 624c and 42253.....	
16532	" Dowel Pin.....	
949E	" Screw.....	
37502	Balance Wheel, 2 $\frac{1}{4}$ in. pulley, with 423c and 1354c.	
1354C	" " Position Screw.....	
423C	" " Set Screw.....	
37504	Cloth Plate.....	
37505	Cloth Plate complete, Nos. 37504, 42005, 42231, two 236c and three 229D.....	
42231	Cloth Plate Extension.....	
229D	" " " Screw.....	
1437D	" " Hinge Screw.....	
1655E	" " " " Nut.....	
42005	" " Lock Spring.....	
236C	" " " " Screw.....	
37545	Feed Bar with 1253c.....	
42007	" " Hinge Pin.....	
1253C	" " " Set Screw.....	
37506	Connecting Rod with 37507 and two 1057E...	
*37507	" " " Cap.....	
1057E	" " " Screw.....	
1373C	" " " Hinge Screw.....	
1520E	" " " " Nut.....	
Ser. 24416	" Dog.....	
190D	" " Screw.....	
37509	" Eccentric with two 453c.....	
453C	" " Set Screw.....	
37510	" Lifting Eccentric with two 1253c.....	
42013	" " " Connection.....	
1253C	" " " Set Screw.....	
1374C	" Regulating Screw Stud.....	
1680C	" " " " Nut.....	
42290	" " " " Washer.....	

	42014	Feed Regulator with 233D and two 1259C.....
	37550	" " Connection with 1012E.....
	1012E	" " " Adjusting Screw.....
	1373C	" " " Hinge Screw.....
	1520E	" " " " " Nut.....
	42016	" " Hinge Stud.....
	1259C	" " Set Screw.....
	233D	" " Stop Screw.....
	42019	" Rock Shaft.....
	37552	Feed Rock Shaft complete, Nos. 37553 and 42019...
	37553	" " " Crank with 157E.....
	157E	" " " " Clamping Screw.....
	42098	" " " Hinge Pin.....
	42079	" " " " " Bushing.....
	1036C	" " " " " " Set Screw.....
	*37511	Frame.....
Ser.	24417	" Rotary Shaft.....
	42024	" " " Bushing (front).....
	1036C	" " " " " Set Screw.....
	42110	" " " Crank with 1036C and 1375C..
	1375C	" " " " Position Screw.....
	1036C	" " " " Set Screw.....
	42026	" " " Flanged Bushing (back) with 54967.....
	54967	Frame Rotary Shaft Flanged Bushing (back) Oil Pad (braided cotton).....
	1036C	Frame Rotary Shaft Flanged Bushing (back) Set Screw.....
	54648	Frame Rotary Shaft Oil Pad (braided cotton).....
	37587	" Side Cover.....
	193F	" " " Screw.....
	37515	" Top Cover.....
	742F	" " " Screw (left).....
	157D	" " " " (right).....
	37589	Guide.....
	193F	" Screw.....
	7071	" " Washer.....
Ser.	28784	Hook with Latch.....
	50072E	" Clamping Screw Stud.....
	1555F	" " " " Nut.....
Ser.	24418	" Guard.....
	704C	" " Screw.....
	37593	" Slide.....
	37519	" " Connecting Link with 223F.....
	40247	" " " " Hinge Pin.....
	223F	" " " " " Set Screw..
	37520	" " Guide (lower).....
	1182D	" " " " Screw.....

	37520	Hook Slide Guide (upper)
	464F	" " " " Adjusting Screw
	1182D	" " " " Screw
	37521	" " Lever
	37522	" " " Connecting Link
	50562C	" " " " " Hinge Screw
	1520E	" " " " " " " Nut	
Ser.	24419	" " " Driving Arm with 1255D
	1255D	" " " " " Clamping Screw
	37524	" " " " " Crank with 1259C	...
	42221	" " " " " " Ball Stud
	1259C	" " " " " " " " Set	
		Screw
	42075	Hook Slide Lever Driving Arm Crank Connection	
		with 42059, 42076 and four 896E
*	42076	Hook Slide Lever Driving Arm Crank Connection	
		Cap (lower)
	896E	Hook Slide Lever Driving Arm Crank Connection	
		Cap (lower) Screw
*	42059	Hook Slide Lever Driving Arm Crank Connection	
		Cap (upper)
	896E	Hook Slide Lever Driving Arm Crank Connection	
		Cap (upper) Screw
	42077	Hook Slide Lever Driving Arm Crank Connection	
		Guide
	171F	Hook Slide Lever Driving Arm Crank Connection	
		Guide Screw
	42078	Hook Slide Lever Driving Arm Crank Hinge Pin	
	42079	" " " " " " " "	
		Bushing
	1259C	Hook Slide Lever Driving Arm Crank Hinge Pin	
		Bushing Set Screw
	42053	Hook Slide Lever Hinge Stud
	1036C	" " " " " Set Screw
	37525	" " Rock Shaft with two each 464F, 37520	
		and four 1182D
Ser.	24420	Hook Slide Rock Shaft Cam with two 453C
	453C	" " " " " Set Screw
	37527	" " " " " Crank (forked) with 1057E	..
	1057E	" " " " " Clamping Screw
	37528	" " " " " Driving Lever with 190C,	
		203C and 37529
	38442	Hook Slide Rock Shaft Driving Lever Ball Stud	
	14016	" " " " " " " "	
		Block (two pieces)
	193F	Hook Slide Rock Shaft Driving Lever Ball Stud	
		Set Screw

37529	Hook Slide Rock Shaft Driving Lever Extension
203c	" " " " " " "
	Screw (lower).....
190c	Hook Slide Rock Shaft Driving Lever Extension
	Screw (upper).....
42045	Hook Slide Rock Shaft Driving Lever Hinge Stud
1036c	" " " " " " "
	Set Screw.....
37530	Hook Slide Rock Shaft Driving Lever Oil Pad.....
37531	" " " " " " " " Holder
	with 37530.....
Ser. 24421	Hook Stripper (adjustable).....
193F	" " Screw.....
7071	" " Washer.....
37532	Needle Bar (hollow).....
42253	" " Bushing.....
624c	" " Set Screw.....
37596	" " Connecting Bracket with 187D and 223F
187D	" " " " Clamping Screw...
42055	" " " Link.....
40247	" " " " Hinge Pin.....
904c	" " " " " " Set Screw
	(lower) for 37597.....
223F	Needle Bar Connecting Link Hinge Pin Set Screw
	(upper) for 37596.....
37533	Needle Bar Connecting Rod with 42059, 42076 and
	four 896E.....
*42076	Needle Bar Connecting Rod Cap (lower).....
896E	" " " " " " Screw....
*42059	" " " " " " (upper).....
896E	" " " " " " Screw....
42077	" " " " " Guide.....
171F	" " " " " Screw.....
42103	" " Crank (back) with 1258c and two 1259c
42221	" " " " Ball Stud.....
1259c	" " " " " Set Screw.....
1259c	" " " " Position Screw.....
1258c	" " " " Set Screw.....
37597	" " " (front) with 904c, 1258c and
	1259c.....
1259c	Needle Bar Crank (front) Position Screw.....
1258c	" " " " Set Screw.....
42105	" " " Shaft.....
1629c	" Clamping Nut.....
37598	" Guard.....
197F	" " Screw.....
37537	Presser Bar (hollow).....

37565	Presser Bar Lifter and Guide Bracket with 400c and 1454D.....	
400c	Presser Bar Lifter and Guide Bracket Adjusting Screw.....	
1454D	Presser Bar Lifter and Guide Bracket Clamping Screw.....	
37539	Presser Bar Spring.....	
Ser. 24422	" Foot.....	
Ser. 24423	" " Extension.....	
197D	" " " Screw.....	
Ser. 24424	Presser Foot complete, Nos. 197D, Serial 24422 and Serial 24423.....	
190D	Presser Foot Screw.....	
1210E	Pressure Regulating Thumb Screw.....	
2102	Tension (needle thread) Disc.....	
1560c	" " " Regulating Thumb Nut....	
916F	" " " Screw Stud.....	
10148	" " " Spring.....	
17547	" " " Thread Guide.....	
2102	" (thread carrier) Disc.....	
1560c	" " " Regulating Thumb Nut....	
916F	" " " Screw Stud.....	
10148	" " " Spring.....	
17547	" " " Thread Guide.....	
37601	Thread Carrier.....	
37602	" " Cam.....	
704c	" " " Screw.....	
1253F	" " Set Screw.....	
37603	" " Shaft with 1253F.....	
37604	" " " Bushing.....	
1259c	" " " " Set Screw.....	
37605	" " " Crank with 217F and 1820....	
1820	" " " Roller and Stud.....	
217F	" " " Set Screw.....	
37606	" " Spring.....	
37607	" " Adjusting Collar with 217F..	
217F	" " " " Set Screw..	
738D	" " " Screw.....	
18172	" Eyelet (top of arm).....	
Ser. 24425	Throat Plate for Serial 24416.....	
742F	" " Screw.....	

IRON BASE

42086	Machine Base with three wood screws 1¼ in. No. 12 and four each 935D, 4718, 42088 and 66707..	
4718	Machine Base Cushion (felt).....	
1408E	" " Thumb Screw.....	

IRON BASE

14063	Machine Base Thumb Screw Spring.....
9842	“ “ “ “ “ Washer.....
42088	“ Cushion (felt).....
935D	“ “ Screw.....
66707	“ “ “ Washer.....

ACCESSORIES

85 x 1 Needle (sizes 22, 23, 24 and 25).....

NOTE: Needle, size 23, is sent with this machine
unless otherwise specified on order.

36420	Hook Setting Gauge.....
120344	Oiler (copper plated) with 120345.....
120345	“ Spout, 5 in. long.....
120440	Screw Driver.....
4822	Wrench for 1547.....
8908	“ “ 1520 and 1655.....
42089	“ “ 1374 and 1629.....

FOOT LIFTER PARTS

6439 Chain, 36 in. to 45 in., with 56864 and 56865.....

NOTE: When ordering No. 6439 give length required.

4879	Chain Connecting Link.....
56864	“ Hook (large).....
56865	“ “ (small).....
37560	Lifting Lever.....
37615	“ “ Bracket.....
1186D	“ “ “ Screw.....
1301D	“ “ Hinge Screw.....
42132	“ “ Spring.....
1148F	“ “ Stop Screw.....
1547D	“ “ “ “ Nut.....
4881	Treadle.....
4882	“ Shaft.....
4883	“ Spring.....
4884	“ Stand.....
4885	Treadle complete, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16.....
37616	Foot Lifter complete, Nos. 1148F, 1301D, 1547r, 4885, 6439, 37560, 37615, 42132 and two 1186D

KNEE LIFTER PARTS

37563	Chain, length 15 in., with 56864 and 56865.....
56864	“ Hook (large).....
56865	“ “ (small).....

37560	Lifting Lever.....
37615	" " Bracket.....
1186D	" " " Screw.....
1301D	" " Hinge Screw.....
42132	" " Spring.....
1148F	" " Stop Screw.....
1547D	" " " " Nut.....
2763	Rock Shaft.....
12242	" " Hanger with two wood screws 1 in. No. 10.....
2765	Rock Shaft Knee Arm.....
2766	" " " " Hub with 356c.....
356c	" " " " " Set Screw.....
2768	Rock Shaft Knee Arm complete, Nos. 2765 to 2767.
2767	" " " " Plate with 356c.....
356c	" " " " " Set Screw.....
6337	" " Lifting Bracket with two 356c.....
7125	" " " " Hook.....
356c	" " " " " Set Screw.....
356c	" " " " " Set Screw.....
2770	" " Stop Dog with 356c.....
356c	" " " " " Set Screw.....
42143	Rock Shaft complete, Nos. 2763, 2768, 6337, 7125 and two each 2770 and 12242.....
37617	Knee Lifter complete, Nos. 1148F, 1301D, 1547D, 37560, 37563, 37615, 42132, 42143 and two 1186D

THREAD UNWINDER

FOR TWO SPOOLS

225395	Spool Rest with 201018c.....
225388	" " Rod.....
200383c	" " " Set Screw.....
201018c	" " Set Screw.....
202490	" Stand with 200383c.....
225391	Thread Guide.....
201696J	" " Lock Nut.....
225392	" " Rod with 208E and 225393.....
208E	" " " Screw.....
225393	" " " Washer.....
225396	Thread Unwinder complete, Nos. 201696J, 202490, 225388, 225392, 225395, two 225391 and three wood screws $\frac{7}{8}$ in. No. 13.....
27739	Thread Cone (wood) for large cones.....
225390	" " Holder for inverted cones.....

NOTE: Nos. 27739 and 225390 are used with,
but not included in, 225396.

