

LIST OF PARTS COMPLETE FOR MACHINE NO. 87-6

For embroidering initials, monograms, crests, floral designs, etc., makes six letters or designs simultaneously. Has six heads which work in unison, with embroidery hoops for holding the work, located underneath the needle and attached by means of a holder to a pantograph which is so arranged as to enable the operator to follow any design or pattern desired in the finished work. With iron work and wood work complete for power.

*49542	Arm with 450c, 2006 and 2803.....	
2002	" Dowel Pin.....	
138E	" Screw.....	
15305	" Shaft.....	
2006	" " Bushing (back).....	
450C	" " " " Set Screw.....	
*2803	" " " (front).....	
8300	" Side Cover.....	
286B	" " " Thumb Screw.....	
12403	" Spool Pin and Thread Eyelet.....	
8879	" " " Washer (cloth).....	
49543	Balance Wheel for 27284.....	
49544	" " (grooved for belt) for 27284.....	
*49545	Bed.....	
256B	Clamp Stop Motion Clamp Screw.....	
248A	" " " " Stop Screw.....	
2020	" " " " Washer.....	
*2021	" " " Flanged Bushing.....	
15152	" " " " " 2021 with two 462C.....	
2022	Clamp Stop Motion Flanged Bushing Pin.....	
462C	" " " " " Set Screw.....	
2019B	Clamp Stop Motion complete, Nos. 248A, 256B, 2020 and 15152.....	
2811	Crank Connecting Rod with 2812 and two 158E....	
*2812	" " " Cap.....	
158E	" " " " Screw.....	
375C	" " " Hinge Screw.....	
1518E	" " " " " Nut.....	

*49546	Face Plate.....	
49547	" " 49546 with 2815.....	
*2815	" " Tension Seat.....	
49548	Face Plate complete, Nos. 248A, 413D, 1560B, 2826, 2827, 2830, 10148, 49547, 49549 and two 2102	
190B	Face Plate Screw.....	
2827	" " Thread Guard with 8505.....	
8505	" " " " Rivet.....	
49536	Needle Bar.....	
49537	Needle Bar complete, Nos. 2273, 7649, 15588, 49536, 49538 and 49539.....	
15248	Needle Bar Connecting Link with 930E.....	
930E	" " " " Adjusting Screw.....	
570C	" " " " Hinge Screw.....	
1520E	" " " " " " Nut.....	
2052	" " " Stud with 155C.....	
155C	" " " " Set Screw.....	
290E	" " Screw Bushing.....	
49538	" " Yielding Presser.....	
15588	" " " " Pin.....	
7649	" " " " Spring.....	
49539	" Clamp with 206F.....	
2273	" " Pin.....	
49501	" Plate.....	
691A	" " Screw.....	
206F	" Set Screw.....	
2820	Oscillating Rock Shaft.....	
307C	" " " Screw Centre.....	
1513E	" " " " " Nut.....	
2056	" Shaft.....	
*2163	" " Crank with 1813.....	
2057	" " " 2163 with two 462C.....	
2049	" " " Pin.....	
1813	" " " Roller and Stud.....	
462C	" " " Set Screw.....	
862D	Presser Bar Hole Plug Screw.....	
2073	Shuttle Bobbin.....	
2211	" " Retaining Spring.....	
2212	" " " " Rivet.....	
*2213	" Body with 398E, 2082, 2084, 2211 and two 2212.....	
*2075	Shuttle Cover.....	
2076	" " Hinge Pin.....	
2078	" Delivery Eye Thread Guard.....	
2080	" " " " Rivet.....	
2082	" Main Spring.....	
398E	" " " Screw.....	
2084	" " " Steady Pin.....	

466H	Shuttle Tension Regulating Screw.....
2086	" " Spring.....
2090	" " " Plate.....
112D	" " " Screw.....
2208	Shuttle complete, Nos. 112D, 466H, 2073, 2075, 2076, 2078, 2080, 2086, 2090 and 2213.....
*2176	Shuttle Driver.....
2092	" " 2176 with two 457C.....
2049	" " Pin.....
457C	" " Set Screw.....
2095	" Race Back.....
190C	" " Screw.....
2096	" " Body.....
2093	Shuttle Race complete, Nos. 2095, 2096 and two 190C.....
158F	Shuttle Race Screw.....
2994	" " Slide.....
2995	Shuttle Race Slide complete, Nos. 2824, 2994 and two 240B.....
2824	Shuttle Race Slide Spring.....
240B	" " " " Screw.....
2102	Tension Disc.....
1560B	" Regulating Thumb Nut.....
413D	" Screw Stud.....
10148	" Spring.....
2826	" Thread Guard.....
10187	Thread Catch.....
337D	" " Screw.....
15271	" Take-up Cam with 448c and 1293c.....
1293C	" " " Position Screw.....
448C	" " " Set Screw.....
2316	" " Lever with 1822.....
79C	" " " Hinge Screw.....
1822	" " " Roller and Stud.....
49549	" " Spring.....
2830	" " " Regulator.....
248A	" " " " Set Screw.....

PANTOGRAPH PARTS

49550	Bell Crank (left, back).....
50140F	" " " " Hinge Screw.....
49551	" " " " Link (back).....
95F	" " " " Hinge Screw (left).....
95F	Bell Crank (left, back) Link (back) Hinge Screw (right).....

49552	Bell Crank (left, back) Link (front).....	
95F	" " " " " " Hinge Screw	
	(back).....	
907F	Bell Crank (left, back) Link (front) Hinge Screw	
	(front).....	
49553	Bell Crank (left, front).....	
907F	" " " " Hinge Screw.....	
49554	" " (right).....	
933F	" " " Hinge Screw.....	
49551	" " " Link (back).....	
95F	" " " " " Hinge Screw (left).....	
95F	" " " " " " " (right).....	
49552	" " " " (front).....	
95F	" " " " " Hinge Screw (back).....	
907F	" " " " " " " (front).....	
49555	Connecting Rod (back).....	
741F	" " " Hinge Screw (left).....	
95F	" " " " " (right).....	
49556	" " " Roller (wood).....	
49557	" " " " Bracket.....	
399D	" " " " " Screw.....	
49558	" " " " Plate (back) with	
	three wood screws $\frac{3}{4}$ in. No. 10.....	
49559	Connecting Rod (back) Roller Plate (front).....	
79D	" " " " " " Hinge	
	Screw.....	
250F	Connecting Rod (back) Roller Plate (front) Position	
	Screw.....	
49560	Connecting Rod (back) Roller Plate (front) Position	
	Screw Plate.....	
219D	Connecting Rod (back) Roller Plate (front) Position	
	Screw Plate Screw.....	
738D	Connecting Rod (back) Roller Screw.....	
1601E	" " " " " Nut.....	
49561	" " (front).....	
933F	" " " Hinge Screw (left).....	
95F	" " " " " (right).....	
49562	Counterbalance Cord, 16 ft. long, with two 49563...	
49563	" " Hook (brass).....	
8371	" " Pulley (lower, back).....	
49564	" " " " " Bracket	
49565	" " " " " "	
	Plate.....	
49566	Counterbalance Cord Pulley (lower, back) Bracket	
	Plate 49565 with 8371, 14010, 49564 and	
	49567.....	
14010	Counterbalance Cord Pulley (lower, back) Bracket	
	Rivet.....	

49567	Counterbalance Cord Pulley (lower, back) Pin.....
8371	" " " (lower, front).....
49564	" " " " " Bracket
49568	" " " " " "
	Plate.....
49569	Counterbalance Cord Pulley (lower, front) Bracket Plate 49568 with 8371, 14010, 49564 and 49567.....
49570	Counterbalance Cord Pulley (lower, front) Bracket Plate Clamp with 164D.....
164D	Counterbalance Cord Pulley (lower, front) Bracket Plate Clamp Screw.....
164D	Counterbalance Cord Pulley (lower, front) Bracket Plate Screw.....
14010	Counterbalance Cord Pulley (lower, front) Bracket Rivet.....
49567	Counterbalance Cord Pulley (lower, front) Pin.....
8371	" " " (upper, back).....
49564	" " " " " Bracket
49571	" " " " " "
	Arm.....
49572	Counterbalance Cord Pulley (upper, back) Bracket Arm 49571 with 8371, 14010, 49564 and 49567.....
49573	Counterbalance Cord Pulley (upper, back) Bracket Arm Clamp with 164D.....
164D	Counterbalance Cord Pulley (upper, back) Bracket Arm Clamp Screw.....
164D	Counterbalance Cord Pulley (upper, back) Bracket Arm Screw.....
14010	Counterbalance Cord Pulley (upper, back) Bracket Rivet.....
49567	Counterbalance Cord Pulley (upper, back) Pin.....
8371	" " " (upper, front).....
49564	" " " " " Bracket
49574	" " " " " "
	Plate.....
49575	Counterbalance Cord Pulley (upper, front) Bracket Plate 49574 with 8371, 14010, 49564 and 49567.....
49576	Counterbalance Cord Pulley (upper, front) Bracket Plate Eyelet.....
164D	Counterbalance Cord Pulley (upper, front) Bracket Plate Screw.....
14010	Counterbalance Cord Pulley (upper, front) Bracket Rivet.....
49567	Counterbalance Cord Pulley (upper, front) Pin.....
49577	" Frame Bar (horizontal).....
49578	" " " " " Bracket..
168D	" " " " " "
	Screw.....

49579	Counterbalance Frame Bar (upright).....
49580	" " " " Clamp.....
129D	" " " " " Screw....
49581	" " " " Holder.....
49582	" " " " " Bracket
168D	" " " " " " Screw.....
1149D	Counterbalance Frame Bar (upright) Holder Screw (lower).....
838D	Counterbalance Frame Bar (upright) Holder Screw (upper).....
49583	Counterbalance Weight (lead).....
49584	" " Holder.....
8991	" " " Cover.....
49585	" " Rod.....
1543D	" " " Thumb Nut.....
49586	Hand Lever.....
49587	" " Handle.....
49588	" " Pointer.....
49589	" " Support Stud.....
49590	Hoop (large) with 49591.....
49591	" " Block.....
49531	" " Ring with 49532 and two 49533.....
49532	" " " Cover.....
49533	" " " Handle (wood).....
49592	" (small) with 49593.....
49593	" " Block.....
49521	" " Ring with 49522 and two 49523.....
49522	" " " Cover.....
49523	" " " Handle (wood).....
49594	" Bracket.....
49595	" " Clamp with 168D.....
168D	" " " Screw.....
209F	" " Guide Screw.....
327D	" " Screw.....
9525	" " " Washer.....
10187	" " Thread Catch.....
337D	" " " " Screw.....
180D	" Screw.....
49596	Regulator Plate.....
49597	" " (left) Base.....
49598	" " " " Bar.....
838D	" " " " " Screw.....
838D	" " " " " Screw.....
50141E	" " " " " Stud.....
162D	" " " Screw.....
2117	" " " Steady Pin.....
49596	" "
49599	" " (right) Base.....

838D	Regulator Plate (right) Base Screw.....
50141E	" " " " Stud.....
162D	" " " Screw.....
2117	" " " Steady Pin.....
49600	Sliding Bar (lower) with two 49605.....
49601	" " " Cover (left).....
49602	" " " " (intermediate).....
49603	" " " " (right).....
164D	" " " Screw.....
49604	" " " Support.....
208D	" " " " Screw.....
907F	" " " Hinge Screw.....
49605	" " " " Bushing.....
49606	" " " Roller.....
49607	" " " Bracket.....
190D	" " " " Screw.....
316F	" " " " Screw Centre.....
1547D	" " " " " Nut.....
49608	" " (upper).....
49609	" " Connecting Link (left).....
907F	" " " " " Hinge Screw.....
49610	Sliding Bar (upper) Connecting Link (right).....
49611	" " " Support (left).....
193D	" " " " " Screw.....
49612	" " " " (right).....
193D	" " " " " Screw.....
79613	Table (back) wood, with 79614 and two each 49613 and 79615.....
79614	Table (back) Drawer (wood) 14 $\frac{3}{8}$ in. x 5 $\frac{3}{4}$ in.....
79615	" " " Guide (wood) with three wood screws 1 $\frac{1}{2}$ in. No. 7.....
49613	Table (back) Hinge with four each 838D and wood screws 1 in. No. 10.....
838D	Table (back) Hinge Screw for frame.....
49614	" " Support.....
49615	" " " Plate with three wood screws 3/4 in. No. 10.....
49616	Table (back) Support Stud with 2002.....
1672C	" " " " Nut.....
14690	" " " " Washer.....
2002	" " " " Position Pin.....
79616	" (front) wood with two 49617 and three dowels
49617	" " Hinge with six wood screws 1 in. No. 10.....
49618	Table (front) Support with 14596.....
49619	" " " Bracket with 736D and two wood screws 1 $\frac{1}{4}$ in. No. 12, R. H. B.....
736D	Table (front) Support Bracket Thumb Screw.....
14596	" " " Stop Pin.....

ELECTRICAL PARTS

49620	Battery.....					
79617	"	Box with 27998, 79618 and two 28183....				
79618	"	"	Door.....			
28183	"	"	"	Hinge, $\frac{3}{4}$ in. x $\frac{3}{4}$ in.....		
27998	"	"	"	Hook and Eye (brass) with wood screw $\frac{1}{2}$ in. No. 5.....		
49621	Battery Connecting Wire.....					
49622	Bell complete.....					
49623	Face Plate Slide (fibre).....					
49624	"	"	"	Contact Spring (brass) with 49626.		
226D	"	"	"	"	"	Screw.....
49625	"	"	"	"	"	"
49626	"	"	"	"	"	Block.....
49627	"	"	"	"	"	Washer (platinum)
49627	"	"	"	Holder.....		
49628	"	"	"	Spring.....		
329D	"	"	"	"	"	Screw.....
1607E	"	"	"	"	"	Nut.....
25075	"	"	"	"	"	Washer.....
49629	"	"	"	"	"	Washer (fibre).....
49630	Switch.....					
157D	"	"	"	"	"	Screw.....
49631	Wire from battery to bell.....					
49632	"	"	"	"	"	bell to switch.....
49633	"	"	"	"	"	battery to machine with six each 49635, 49637 and 49638.....
28076	Wire from battery to machine	Escutcheon (brass)..				
49634	"	"	"	"	"	Eyelet.....
193D	"	"	"	"	"	"
123E	"	"	"	"	"	Screw.....
49635	"	"	"	"	"	Sleeve.....
49636	"	"	"	"	"	"
49637	"	"	"	"	"	Holder (fibre).
49637	"	"	"	"	"	Wire.....
49638	"	"	"	"	"	"
						Contact Spring (brass).....
49639	Wire from battery to machine	Sleeve Wire Washer (fibre).....				
49640	Wire Staple.....					

ACCESSORIES

25955	Oiler with 25956.....	
25956	"	Spout, $8\frac{1}{2}$ in. long.....
11831	Screw Driver (large).....	
26026	"	" (small).....
26485	"	" (shuttle tension).....
8908	Wrench for 1520.....	
8909	"	" 1513, 1518 and 1524.....

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

FOR 2073

41570	Base.....
27302	Frame.....
32D	" Hinge Screw.....
27303	" Spring.....
27541	Pulley.....
27305	Spindle.....
27306	Spool Pin.....
27307	" Stand.....
27308	Spool Stand complete, Nos. 418D, 1562, 2106, 10141, 11241, 27306, 27307 and two each 2455 and wood screws 1 in. No. 10.....
11241	Spool Washer (cloth).....
41571	Stop Latch.....
35D	" " Hinge Screw.....
2455	Tension Disc.....
1562	" Regulating Thumb Nut.....
418D	" Screw Stud.....
10141	" Spring.....
2106	" Thread Guide.....
41572	Bobbin Winder, Nos. 32D, 35D, 27302, 27303, 27305, 27541, 41570, 41571 and three wood screws 1 in. No. 7.....
41573	Bobbin Winder (swinging automatic, right hand) complete, Nos. 27308 and 41572.....

POWER TABLE PARTS

27279	Brace.....
27280	" (end, back) with 492E, 12620 and two 636E..
492E	" " " Bolt (lower) with 1522E.....
27281	" " " " " Collar.....
1522E	" " " " " Nut.....
12620	" " " " " Washer.....
636E	" " " " " (upper).....
1524E	" " " " " Nut.....
27282	" (end, front) with 839E and two each 12620 and wood screws 1 1/4 in. No. 14.....
839E	Brace (end, front) Bolt.....
1522E	" " " " " Nut.....
12620	" " " " " Washer.....
492E	" Bolt (lower, long) with 1522E.....
839E	" " (lower, short) with 1522E.....

1522E	Brace Bolt (lower)	Nut.....							
12620	"	"	"	"	Washer.....				
636E	"	"	(upper)	with 1524E.....					
1524E	"	"	"	Nut.....					
27283	Chain.....								
27284	"	Sprocket Wheel (large).....							
27285	"	"	"	(small).....					
150D	"	"	"	"	Cap Screw (long)....				
50142D	"	"	"	"	"	"	(short)...		
6055	"	"	"	"	"	"	Washer...		
27286	"	"	"	"	Frame.....				
180D	"	"	"	"	"	"	Screw.....		
27287	"	"	"	"	Stud.....				
50142D	"	"	"	"	"	"	Cap Screw.....		
6055	"	"	"	"	"	"	"	"	"
		Washer.....							
27285	Chain Support Sprocket Wheel.....								
27288	"	"	"	"	Bracket.....				
50073D	"	"	"	"	"	"	Screw.....		
50142D	"	"	"	"	Cap Screw.....				
6055	"	"	"	"	"	"	Washer....		
27287	"	"	"	"	Stud.....				
50142D	"	"	"	"	"	"	Cap Screw.....		
6055	"	"	"	"	"	"	"	"	"
		Washer.....							
27289	Driving Shaft.....								
27290	"	"	Bracket (back)	with two 27291 and four each 129D and wood screws 1 in. No. 12					
*27291	Driving Shaft Bracket (back)	Cap.....							
129D	"	"	"	"	"	"	Screw.....		
27292	"	"	"	(front)	with 27293 and two 575D.....				
*27293	Driving Shaft Bracket (front)	Cap.....							
575D	"	"	"	"	"	"	Screw.....		
524C	"	"	"	"	"	"	Screw.....		
27294	"	"	Collar with 453C.....						
453C	"	"	"	Set Screw.....					
27295	"	"	Hand Wheel with 446C.....						
446C	"	"	"	"	Set Screw.....				
27296	"	"	Pulley (large) 8 in. diam., with two 446C.....						
446C	Driving Shaft Pulley (large)	Set Screw.....							
27297	"	"	"	(small) 3 in. diam., with 448C					
448C	"	"	"	"	Set Screw.....				
27298	Frame Bar (back).....								
636E	"	"	"	Bolt with 1524E.....					
1524E	"	"	"	"	Nut.....				
27299	"	"	(front).....						
838D	"	"	"	Screw.....					

27300	Frame Bar (intermediate).....	
838D	" " " Screw.....	
41001	" " (left).....	
169D	" " " Screw.....	
41002	" " (right).....	
169D	" " " Screw.....	
41003	" Cross Bar (left).....	
636E	" " " " Bolt with 1524E.....	
1524E	" " " " " Nut.....	
41004	" " " (intermediate).....	
636E	" " " " Bolt with 1524E...	
1524E	" " " " " Nut.....	
41005	" " " (right).....	
636E	" " " " Bolt with 1524E.....	
1524E	" " " " " Nut.....	
79619	" Filling Board.....	
41006	" Front Board Supporting Arm.....	
74E	" " " " " Hinge Screw..	
41007	" " " " " Stop Stud	
	(left).....	
41008	Frame Front Board Supporting Arm Stop Stud	
	(right).....	
41009	Leg (left).....	
41010	" (intermediate).....	
41011	" (right).....	
494E	" Screw.....	
12620	" " Washer.....	
79620	Machine Bed Extension (wood) ebonized.....	
742F	" " " " Screw.....	
41012	" Connecting Bar (back).....	
41013	" " " " Hinge.....	
1235D	" " " " " Screw.....	
159E	" " " " " Screw.....	
41014	" " " (front).....	
159E	" " " " " Screw.....	
41015	" " " " " Stop Arm.....	
2117	" " " " " " Hinge	
	Pin.....	
525D	Machine Connecting Bar (front) Stop Arm Hinge	
	Stud.....	
1519E	Machine Connecting Bar (front) Stop Arm Hinge	
	Stud Nut.....	
2718	Machine Connecting Bar (front) Stop Arm Hinge	
	Stud Nut Washer.....	
41016	Rail.....	
839E	" Bolt with 1522E.....	
1522E	" " Nut.....	
12620	" " " Washer.....	

41017	Drip Pan.....
41018	" " Bar.....
190D	" " " Screw.....
3021	" " Rivet.....
41019	" " Support Bracket.....
164D	" " " " Screw.....

POWER TABLE PARTS

FOR DIRECT CURRENT MOTOR

27636	Starting Treadle.....
9082	" " Bearing Cotter Pin.....
27639	" " Pitman Rod (lower).....
41578	" " " " (upper).....
9079	" " " " Clamp with 354c.....
354C	" " " " " Screw.....
41579	Starting Treadle Pitman complete, Nos. 2762, 9079, 27639 and 41578.....
2878	Starting Treadle Stand.....
2762	" " Stop Collar with 362F.....
362F	" " " " Set Screw.....
27642	Starting Treadle complete, Nos. 2878, 9082, 27636 and four wood screws 1 in. No. 16.....
41580	Starting Treadle and Pitman complete, Nos. 27642 and 41579.....
79621	Table (wood) with 28076.....

POWER TABLE PARTS

FOR ALTERNATING CURRENT MOTOR

41020	Motor Bracket (left).....
41021	" " (right).....
490E	" " Bolt with 1600E.....
1600E	" " " Nut.....
9281	" " " Washer.....
1062E	" Screw.....
9842	" " Washer.....
79622	Table (wood) with 28076.....

UNDER DRIVER

LEVER PRESSURE, THREE SPEED, RIGHT HAND
(OIL CONTROLLING PULLEY)

27508	Belt Guard.....
649E	" " Screw.....
27509	Cone Pulley (grooved) three speed, 2½ in., 3¾ in. and 5¼ in. diam., with 27473.....
27473	Cone Pulley Centre Bearing.....
27474	Dress Guard (right hand).....
138E	" " Screw.....
27630	Driving Pulley (grooved) 6 in. diam., with 433C, 27598 and two 7958.....
27598	Driving Pulley Friction Ring (leather).....
7958	" " " " Stop Pin.....
27631	" " Hollow Stud with 27600.....
27600	" " " " Position Stud.....
356C	" " " " Set Screw.....
27632	" " " " Wick.....
27633	" " " " " Wire with 27632.....
433C	" " Screw Centre Bearing.....
7958	" " " " " Dowel Pin.....
27634	Frame.....
41574	" Packing Block (wood).....
41338	Lever.....
27483	" Brake Spring.....
27497	" " Strip (leather).....
12178	" Centre Plug (wood).....
427E	" " " Adjusting Screw.....
1508E	" " " " " Nut.....
27485	" Hinge Pin.....
27635	Oil Cup.....
145E	" " Screw.....
27636	Treadle.....
9082	" Bearing Cotter Pin.....
27637	" Pitman Rod (lower).....
27638	" " " " Spring.....
27639	" " " (upper).....
9079	" " " Clamp with 354C.....
354C	" " " " Screw.....
27640	Treadle Pitman complete, Nos. 2762, 9079 and 27637 to 27639.....
2878	Treadle Stand.....
2762	" Stop Collar with 362F.....
362F	" " " Set Screw.....
27642	Treadle complete, Nos. 2878, 9082, 27636 and four wood screws 1 in. No. 16.....
27643	Treadle and Pitman complete, Nos. 27640 and 27642.....

- 27644 Transmitter complete for 41574, Nos. 138E, 356C, 427E, 649E, 1508E, 12178, 27474, 27483, 27485, 27497, 27508, 27509, 27630, 27631, 27633 to 27635, 41338, two 145E and four wood screws 1½ in. No. 16.....
- 41575 Under Driver, lever pressure (right hand) three speed (oil controlling pulley) complete, Nos. 27643 and 27644.....

POWER TABLE PARTS

FOR STEAM POWER

- 27014 Floor Stand, 4 in., with six wood screws 1½ in. No. 16.....
- 27017 Floor Stand complete, 27014 with 492E, 12620, 27023, 27027 and 27028.....
- 27023 Journal Box (babbitted) with 27029, 27031 and two 121E.....
- 27029 Journal Box Oil Feeder (felt).....
- 27031 " " " Reservoir.....
- 121E " " Screw.....
- 27027 " " Bracket, 5 in. high, with 421E and 1507E.....
- 421E Journal Box Set Screw.....
- 1507E " " " " Nut.....
- 27025 " " Bracket, 6 in. drop, with 421E and 1507E, for leg.....
- 27028 Journal Box Bracket Adjusting Slide.....
- 489E " " " Bolt with 1522E, for 27025...
- 492E " " " " " " " 27017...
- 1522E " " " " Nut.....
- 12620 " " " " " Washer.....
- Seven feet of 1¾ in. Shafting.....
- 27108 Shaft Collar with 432C.....
- 432C " " Set Screw.....
- 79623 Table (wood) with 28076.....

UNDER DRIVER

LEVER PRESSURE (RIGHT HAND) TWO SPEED

- 27593 Brake (fibre).....
- 27594 " Bracket with 27593 and two 327E.....
- 927C " " Adjusting Screw.....
- 1513E " " " " Nut.....
- 307C " " Screw Centre.....
- 1513E " " " " Nut.....

327E	Brake Screw.....	
27595	Cone Pulley (grooved) two speed, 4½ in. and 5½ in. diam., with 27473.....	
27473	Cone Pulley Centre Bearing.....	
27597	Driving Pulley (grooved) 6¼ in. diam., with 433C, 27598 and two 7958.....	
27598	Driving Pulley Friction Ring (leather).....	
7958	" " " " Stop Pin.....	
27631	" " Hollow Stud with 27600.....	
27600	" " " " Position Stud.....	
356C	" " " " Set Screw.....	
27632	" " " " Wick.....	
27633	" " " " " Wire with 27632.....	
433C	" " Screw Centre Bearing.....	
7958	" " " " " Dowel Pin.....	
27601	Frame.....	
41574	" Packing (wood).....	
27605	Lever.....	
27606	" Centre Plug (wood).....	
427E	" " " Adjusting Screw.....	
1508E	" " " " " Nut.....	
307C	" Screw Centre.....	
1513E	" " " Nut.....	
27607	" Spring.....	
27066	Shaft Driving Pulley (sectional, grooved) 6 in. diam., 1¾ in. bore, with two 597C.....	
597C	Shaft Driving Pulley Clamping Screw.....	
27636	Treadle.....	
9082	" Bearing Cotter Pin.....	
27637	" Pitman Rod (lower).....	
27638	" " " " Spring.....	
27639	" " " (upper).....	
9079	" " " Clamp with 354C.....	
354C	" " " " Screw.....	
27640	Treadle Pitman complete, Nos. 2762, 9079 and 27637 to 27639.....	
2878	Treadle Stand.....	
2762	" Stop Collar with 362F.....	
362F	" " " Set Screw.....	
27642	Treadle complete, Nos. 2878, 9082, 27636 and four wood screws 1 in. No. 16.....	
27643	Treadle and Pitman complete, Nos. 27640 and 27642.....	
41576	Transmitter complete for 41577, Nos. 356C, 427E, 927C, 1508E, 27594, 27595, 27597, 27601, 27605 to 27607, 27631, 27633, three wood screws 1½ in. No. 16, four 307C and five 1513E.....	
41577	Under Driver, lever pressure (right hand) two speed, complete, Nos. 27066, 27643 and 41576.....	

TABLE BELT GUIDE (Double)

39218	Belt Guide with two 168E.....
168E	" " Set Screw.....
49641	Bracket with 153E.....
17893	Pulley.....
39219	" Shaft with 17896.....
17896	" " Plug.....
153E	" " Set Screw.....
49642	Table Belt Guide (double) complete, Nos. 39219, 49641, two each 17893, 39218 and three wood screws 1¼ in. No. 12.....

TABLE BELT GUIDE (Single)

39218	Belt Guide with two 168E.....
168E	" " Set Screw.....
49643	Bracket with 453C.....
1177D	" Screw.....
17893	Pulley.....
39219	" Shaft with 17896.....
17896	" " Plug.....
453C	" " Set Screw.....
49644	Table Belt Guide (single) complete, Nos. 17893, 39218, 39219 and 49643.....

