

PRICE LIST

OF

PARTS



MACHINES

Nos. 92-3, 92-4, 92-5 and 92-6

THE SINGER MANUFACTURING COMPANY

COPYRIGHT, U. S. A., 1914, 1916 AND 1917, BY THE SINGER
MANUFACTURING Co.
ALL RIGHTS RESERVED FOR ALL COUNTRIES.

INDEX

	PAGE
ACCESSORIES.....	42
FOOT LIFTER PARTS.....	43
HEMMER.....	42
IRON BASE.....	42
KNEE LIFTER PARTS.....	44
MACHINE No. 92-3.....	9
" " 92-4.....	19
" " 92-5.....	27
" " 92-6.....	35
NUMERICAL LIST OF PARTS.....	47
OBSOLETE PARTS.....	45
THREAD UNWINDER.....	45

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the part **NUMBER** in the **FIRST** column.

The number stamped on a Sewing Machine part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not Polished.
- F. Hardened and Polished.
- G.
- H. Blued.
- J. Plated only.
- K. Hardened and Plated.
- L. Brass or Gilt.
- M. Oxidized.
- P. Japanned.

 
These letters **MUST BE USED** *when* they appear in the list, and **AFTER** the number *as* in the list.

In this series

- 1 to 1500 and 50001 to 51500 are Screw Numbers.
- 1501 to 1800 are Nut Numbers.
- 1801 to 2000 are Roller Numbers.
- 2001 to 50000 and 52001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are **NOT TO BE USED** in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

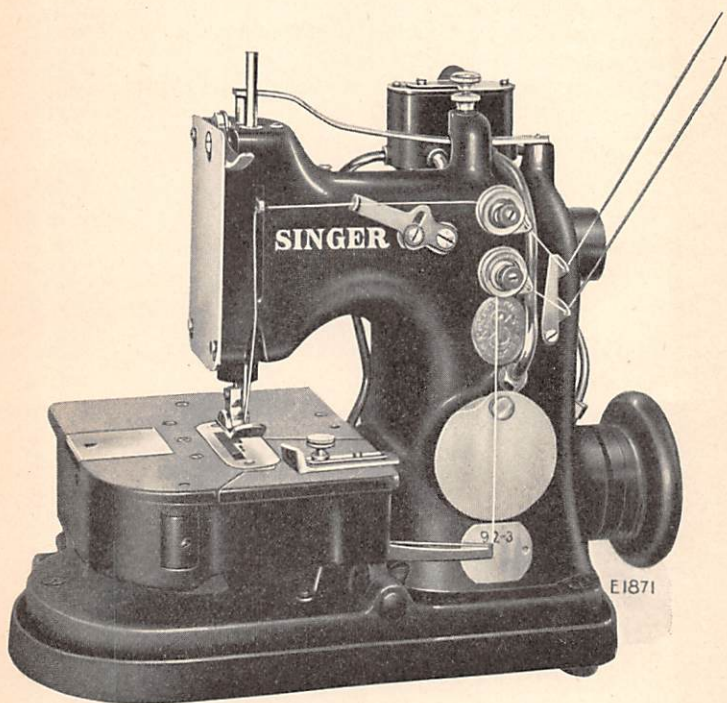

MACHINE No. 92-3

LIST OF PARTS COMPLETE FOR MACHINE NO. 92-3

FOR SEWING CLAY FILLED AND OTHER BAGS. STITCH FROM $\frac{1}{8}$ TO $\frac{1}{3}$ IN. LONG, HAS ONE NEEDLE, ONE LOOPER AND THROAT PLATE FOR SINGLE THREAD, ALSO LOOPER AND THROAT PLATE FOR TWO THREAD CHAIN STITCH FITTED WITH DEVICE FOR AUTOMATICALLY OILING THE PRINCIPAL BEARINGS OF THE MACHINE.

FORMERLY 92 S. V. 3 MACHINE.

NO.	PLATE	NAME	EACH
*49168	—	Arm, upper and lower (solid)	\$30 00
18130	6205	“ Oil Tube with 29599, for front bearing	06
18130	6205	Arm Oil Tube with 29599, for intermediate bearing	06
11119	6205	Arm Oil Tube with 29599, for oiling 49101	06
49169	6206	Arm Oil Tube with 49013, for oiling 49049	20
49091	6205	Arm Oil Tube with 49092, for oiling 49108 (lower bearing)	20
49170	6206	Arm Oil Tube with 2653 and 49174, for oiling 46223	10
49171	6206	Arm Oil Tube with 2653 and 49174, for oiling 49108 (upper bearing)	10
49172	6206	Arm Oil Tube with 2653 and 49174, for oiling 49023	10
54897	6206	Arm Oil Tube Oil Cup	10
49173	6206	“ “ “ “ “ Holder with 54897, for 49169	25
49013	6205	Arm Oil Tube Packing (braided cotton) for 49169	01
49174	6206	Arm Oil Tube Packing (braided cotton) for 49170 to 49172	01
29599	6205	Arm Oil Tube Packing (felt) for 11119 and 18130 per 100	25
49092	6205	Arm Oil Tube Packing (felt) for 49091	01
2653	6206	“ “ “ “ Stop Pin for 49170 to 49172	01

NO.	PLATE	NAME	EACH
49156	6207	Arm Rock Shaft.....\$	75
49003	6208	" " " Bushing (back).....	25
446C	6208	" " " " " Set Screw	03
49004	6208	" " " " (intermediate)	25
446C	6208	" " " " " " "	
		Set Screw.....	03
49006	6208	Arm Rock Shaft Collar with two 443c...	30
443C	6208	" " " " Set Screw.....	03
49157	6208	" " " Crank (back) with 1036c	
		and 50083c.....	1 50
50083C	6208	Arm Rock Shaft Crank (back) Position	
		Screw.....	05
1036C	6208	Arm Rock Shaft Crank (back) Set Screw.	03
49008	6208	" " " " (front) w i t h	
		50084c and 50282E.....	1 00
50282E	6208	Arm Rock Shaft Crank (front) Position	
		Screw.....	05
50084C	6208	Arm Rock Shaft Crank (front) Set Screw.	04
49005	6208	" " " Flanged Bushing (front)	50
430C	6208	" " " " " " "	
		Set Screw.....	04
49084	6181	Arm Rock Shaft Oil Cover.....	10
193D	6181	" " " " " Screw.....	03
49097	6207	" Rotary Shaft.....	2 50
49011	6181	" " " Bushing (front).....	35
430C	6181	" " " " " S e t	
		Screw.....	04
49010	6209	Arm Rotary Shaft Collar with two 1259c.	30
1259C	6209	" " " " Set Screw.....	03
49012	6179	" " " Flanged Bushing(back)	1 50
49093	6205	" " " " " " "	
		Oil Pad (long) braided cotton.....	02
49013	6205	Arm Rotary Shaft Flanged Bushing (back)	
		Oil Pad (short) braided cotton.....	01
159F	6198	Arm Rotary Shaft Flanged Bushing (back)	
		Screw.....	03
49014	6181	Arm Rotary Shaft Flanged Bushing (intermediate).....	50
448C	6181	Arm Rotary Shaft Flanged Bushing (intermediate) Set Screw.....	03
49013	6205	Arm Rotary Shaft Oil Pad (braided cotton) for front bearing.....	01
49013	6205	Arm Rotary Shaft Oil Pad (braided cotton) for intermediate bearing.....	01
50249E	6206	Arm Rotary Shaft Oil Pad Cap Screw...	04
144D	6198	" " " Screw.....	08

PARTS FOR MACHINE NO. 92-3

11

NO.	PLATE	NAME	EACH
4288	6179	Arm Side Cover (back).....	\$ 10
286D	6198	" " " " Thumb Screw....	10
17677	6207	" " " (front).....	10
286D	6198	" " " " Thumb Screw....	10
23873	6210	Balance Wheel with two 430c.....	80
430C	6181	" " Set Screw.....	04
49175	6210	Cloth Plate with three 46224.....	1 90
46224	6206	" " Oil Cup.....	05
50085F	6198	" " Screw.....	08
49016H	—	" " Slide.....	30
49017H	6179	Cloth Plate Slide complete, Nos. 38419, 49016H and two 725H.....	30
38419	6181	Cloth Plate Slide Spring.....	05
725H	6181	" " " " Screw.....	02
49176	—	Cloth Plate complete, Nos. 49017H, 49053, 49054, 49116, 49175 and two 226D....	3 45
49108	6207	Crank Connecting Rod with 896E, 49099, 49109 and two 145E.....	1 50
896E	6209	Crank Connecting Rod Adjusting Screw..	04
49109	6181	" " " " Washer.	01
*49099	—	" " " Cap.....	—
145E	6198	" " " " Screw.....	04
50147C	6198	" " " Hinge Screw.....	20
1513J	6198	" " " " " Nut.	05
49020P	6179	Face Plate.....	75
193F	6181	" " Screw.....	03
49021	6209	Feed Bar with 220D and 457C.....	75
49022	6209	" " Hinge Pin.....	10
457C	6196	" " " " Set Screw.....	02
49023	6209	" Connecting Rod with 2653, 4784, 49024 and two 896E.....	1 00
*49024	—	Feed Connecting Rod Cap.....	—
896E	6209	" " " " Screw.....	04
4784	6192	" " " Oil Pad (felt)....	01
2653	6206	" " " " Pin.....	01
49025	6182	" Dog, for large bags.....	35

NOTE: No. 49025 is sent with this machine unless another Feed Dog is specified on order.

49153	6188	Feed Dog, for small bags.....	60
49125	6184	" " (double).....	80
49103	6182	" " (spiked teeth) for clay-filled bags.....	60
172C	6194	Feed Dog Screw.....	04
220D	6209	" " Stop Screw.....	02
49026	6209	" Eccentric with two 1259c.....	50
1259C	6209	" " Set Screw.....	03

NO.	PLATE	NAME	EACH
49113	6197	Feed Lifting Eccentric with two 1259c...	\$ 50
49028	6209	" " " Connection with	
		457c, 2653, 4784, 49029 and two 896E..	1 00
*49029	—	Feed Lifting Eccentric Connection Cap	—
896E	6209	" " " " "	
		Screw.....	04
49030	6209	Feed Lifting Eccentric Connection Hinge	
		Pin.....	10
457c	6196	Feed Lifting Eccentric Connection Hinge	
		Pin Set Screw.....	02
4784	6192	Feed Lifting Eccentric Connection Oil Pad	
		(felt).....	01
2653	6206	Feed Lifting Eccentric Connection Oil Pad	
		Pin.....	01
1259c	6209	Feed Lifting Eccentric Set Screw.....	03
50086c	6181	" Regulating Screw Stud.....	22
1714c	6181	" " " " Nut.....	04
49031	6181	" " " " Sleeve.....	50
49032	6181	" " " " Washer.....	05
49177	6211	" Rock Shaft.....	1 00
49178	—	Feed Rock Shaft complete, Nos. 49035,	
		49177 and 49179.....	1 85
49035	6179	Feed Rock Shaft Crank with two 896E..	75
896E	6209	" " " " Clamplng Screw.	04
11398	6179	" " " Hinge Pin.....	75
1508E	6198	" " " " " Nut.....	06
622c	6198	" " " " " Screw Bearing	12
1508E	6198	" " " " " " "	
		Nut.....	06
49179	6209	Feed Rock Shaft Oil Cup with 49013....	10
49013	6205	" " " " " Packing (braided	
		cotton).....	01
27398	6181	Feed Rock Shaft Washer.....	05
36221	6200	Guide.....	15
194D	6200	" Screw Stud.....	02
671D	6200	" Thumb Screw.....	10
49036	6192	Looper (double thread) with 590D and	
		49080.....	90
49037	6192	Looper (single thread).....	90
49038	6207	" Bell Crank with 4784.....	2 00
49039	6207	" " " Hinge Stud.....	60
448c	6181	" " " " " Set Screw.	03
4784	6192	" " " Oil Pad (felt).....	01
49158	6207	" " " Pitman with 46223,	
		49041 and two each 171E and 1057E...	1 75
50070c	6192	Looper Bell Crank Pitman Ball Screw Stud	
		(lower).....	15

PARTS FOR MACHINE NO. 92-3

13

NO.	PLATE	NAME	EACH
1636E	6198	Looper Bell Crank Pitman Ball Screw Stud (lower) Nut.....	\$ 03
50069C	6208	Looper Bell Crank Pitman Ball Screw Stud (upper).....	20
1619E	6208	Looper Bell Crank Pitman Ball Screw Stud (upper) Nut.....	05
*49041	—	Looper Bell Crank Pitman Cap (lower)	—
171E	6192	“ “ “ “ “ “ Screw.....	03
*46223	—	Looper Bell Crank Pitman Cap (upper)	35
1057E	6209	“ “ “ “ “ “ Screw.....	04
49043	6192	Looper Bell Crank Pitman Washer (fibre)	02
49044	6192	“ Carrier with 4784 and two each 175E and 1147c.....	1 00
175E	6192	Looper Carrier Clamping Screw.....	02
49165	6192	“ “ Hinge Pin.....	20
49166	6192	“ “ “ “ Collar with two 202F.....	15
202F	6192	Looper Carrier Hinge Pin Collar Set Screw	02
157D	6193	“ “ “ “ Set Screw.....	04
4784	6192	“ “ Oil Pad (felt).....	01
49045	6192	Looper Carrier Pitman complete, Nos. 1708E, 1709E, 49046, 49088 and 49089.	3 25
50070C	6192	Looper Carrier Pitman Ball Screw Stud (right).....	15
1519E	6192	Looper Carrier Pitman Ball Screw Stud (right) Nut.....	03
46237	6192	Looper Carrier Pitman Ball Stud (left)...	25
1147C	6192	“ “ “ “ “ “ Set Screw.....	03
*49085	—	Looper Carrier Pitman Cap (left).....	—
171E	6192	“ “ “ “ “ “ Screw..	03
*49085	—	“ “ “ “ (right).....	—
171E	6192	“ “ “ “ “ “ Screw.	03
*49086	—	“ “ “ “ End B e a r i n g (left).....	—
*49087	—	Looper Carrier Pitman End Bearing (right).....	—
49088	6192	Looper Carrier Pitman Head (left) Nos. 46237, 49085, 49086 and two 171E....	1 50
49089	6192	Looper Carrier Pitman Head (right) Nos. 49085, 49087, 50070c and two 171E....	1 50
49046	6192	Looper Carrier Pitman Rod.....	10
1708E	6192	“ “ “ “ Nut (left)...	03
1709E	6192	“ “ “ “ “ (right)...	03
49043	6192	“ “ “ “ Washer (fibre)...	02


NO.	PLATE	NAME	EACH
49047	6193	Looper Carrier Rock Shaft.....	\$ 50
11411	6193	“ “ “ “ Collar with 453c.....	10
453c	6193	Looper Carrier Rock Shaft Collar Set Screw.....	02
49048	6193	Looper Carrier Rock Shaft Crank (back) forked, with 50083c.....	1 25
50083c	6193	Looper Carrier Rock Shaft Crank (back) Set Screw.....	05
49049	6193	Looper Carrier Rock Shaft Crank (back) Slide Block.....	1 50
49248	6193	Looper Carrier Rock Shaft Crank (front) with 157D and two 1324E.....	1 00
1324E	6193	Looper Carrier Rock Shaft Crank (front) Clamping Screw.....	05
49142	6193	Looper Eccentric with two 1036c.....	50
1036c	6193	“ “ Set Screw.....	03
49116	6210	“ Gate with 448c.....	1 00
49053	6181	“ “ Hinge Pin.....	10
448c	6181	“ “ “ “ Set Screw.....	03
49054	6181	“ “ Lock Spring.....	10
226D	6181	“ “ “ “ Screw.....	02
1147c	6192	“ Set Screw.....	03
49080	6192	“ Thread Guard.....	10
590D	6192	“ “ “ Screw.....	02
49055	6194	Needle Bar (hollow).....	75
49056	6194	“ “ Bushing (lower).....	25
435c	6194	“ “ “ “ Set Screw...	04
49056	6194	“ “ “ (upper).....	25
1133E	6194	“ “ “ “ Set Screw...	02
49101	6194	“ “ Connecting Link.....	75
49057	6194	“ “ “ “ Hinge Stud	50
1517E	6194	“ “ “ “ “ “ “ Nut.....	04
49058	6194	Needle Bar Connecting Stud with 391E..	50
391E	6194	“ “ “ “ Clamping Screw.....	02
1629c	6194	Needle Clamping Nut.....	05
49180	6212	Oil Cup.....	85
49181	—	Oil Cup complete, Nos. 195E, 49180, 49182 to 49184 and two 175E.....	1 25
49182	6212	Oil Cup Cover.....	15
175E	6192	“ “ “ Screw.....	02
49183	6206	“ “ Oil Hole Cover.....	10
195E	6206	“ “ “ “ “ Screw.....	02
49184	6212	“ “ “ Strainer.....	10
690D	6206	“ “ “ Screw.....	05

PARTS FOR MACHINE NO. 92-3

15

NO.	PLATE	NAME	EACH
49185	6212	Oil Pipe with 49191, for oiling 49108.....	\$ 45
49186	6212	" " " " " " 49012.....	45
49187	6212	" " " " " " 49011 and 49014.....	60
49188	6206	Oil Pipe Connection with 49189 and two 198D, for 49187, for oiling 49014.....	50
*49189	—	Oil Pipe Connection Cap.....	—
198D	6206	" " " " Screw.....	02
49190	6206	" " Coupling.....	08
1733D	6206	" " " Nut.....	10
49191	6206	" " Sleeve.....	05
49059	6195	Presser Bar.....	40
49060	6195	" " Bushing (lower).....	25
435C	6195	" " " " Set Screw...	04
49061	6195	" " " (upper).....	25
1133E	6195	" " " " Set Screw...	02
49062	6195	" " Lifter.....	30
212D	6195	" " " Cap Screw.....	04
49063	6195	" " " Friction Washer.....	02
49064	6195	" " " Hinge Stud.....	25
453C	6195	" " " " " Set Screw..	02
49065	6195	" " Lifting Bracket with 453C and 892F.....	1 25
892F	6195	Presser Bar Lifting Bracket Adjusting Screw.....	05
453C	6195	Presser Bar Lifting Bracket Set Screw...	02
49066	6195	" " " Link.....	25
212D	6195	" " " " Cap Screw.....	04
724D	6195	" " " " Hinge Screw....	05
49067	6179	" " Spring (flat).....	25
38468	6195	" " " Stud.....	03
50087D	6198	" Foot Hinge Screw.....	06
49126	—	" " Plate.....	75
49127	—	" " Shank.....	40
49128	6184	Presser Foot (hinged) complete for 49025 and 49125, Nos. 49126, 49127 and 50087D.....	80
NOTE: No. 49128 is sent with this machine unless another Presser Foot is specified on order.			
50087D	6198	Presser Foot Hinge Screw.....	06
49068	—	" " Plate.....	75
49069	—	" " Shank.....	40
49070	6182	Presser Foot (hinged) complete for 49025 and 49103, Nos. 49068, 49069 and 50087D.....	80
190D	6198	Presser Foot Screw.....	03

NO.	PLATE	NAME	EACH
574D	6198	Pressure Regulating Thumb Screw.....	\$ 15
1539D	6198	“ “ “ “ Lock Nut.....	05
2102	6194	Tension (under thread) Disc.....	05
1560c	6194	“ “ “ Regulating Thumb Nut.....	04
916c	6194	Tension (under thread) Screw Stud.....	08
10148	6194	“ “ “ Spring.....	03
17547	6194	“ “ “ Thread Guide...	25
2102	6194	“ (upper thread) Disc.....	05
1560c	6194	“ “ “ Regulating Thumb Nut.....	04
916c	6194	Tension (upper thread) Screw Stud.....	08
13710	6194	“ “ “ Spring.....	03
17547	6194	“ “ “ Thread Guide...	25
49192	6206	Thread Guide (double, side of arm).....	40
190b	6196	“ “ “ “ “ “ Screw	03
49071	6194	“ (under) Eyelet.....	10
172c	6194	“ “ “ Screw.....	04
49072	6196	“ “ Take-up.....	30
190b	6196	“ “ “ Screw.....	03
49073	6196	“ (upper) Controller.....	75
974F	6196	“ “ “ Hinge Screw...	06
914F	6196	“ “ “ Screw.....	04
39541	6196	“ “ “ “ Washer.	05
49075	6196	“ “ Take-up with 457c.....	80
457c	6196	“ “ “ Set Screw.....	02
49131	6182	Throat Plate, for double thread, for 49025 and 49103.....	50
49132	6182	Throat Plate with 665D and 49078, for single thread, for 49025 and 49103.....	65
NOTE: Nos. 49131 and 49132 are sent with this machine unless another Throat Plate is specified on order.			
49129	6184	Throat Plate, for double thread, for 49125	60
49130	6184	“ “ with 665D and 49078, for single thread, for 49125.....	75
49154	6188	Throat Plate, for double thread, for 49153	50
49155	6188	“ “ with 665D and 49078, for single thread, for 49153.....	65
691F	6198	Throat Plate Screw.....	04
49078	6181	“ “ Thread Retainer.....	15
665D	6181	“ “ “ “ Screw.....	02

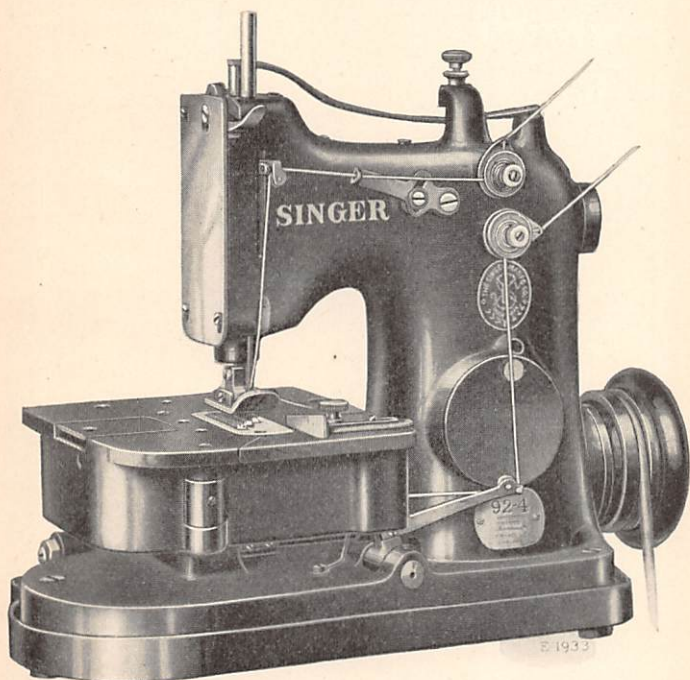 

MACHINE No. 92-4

NO.	PLATE	NAME	EACH
49157	6208	Arm Rock Shaft Crank (back) with 1036c and 50083c.....	\$ 1 50
50083c	6208	Arm Rock Shaft Crank (back) Position Screw.....	05
1036c	6208	Arm Rock Shaft Crank (back) Set Screw.	03
49008	6208	" " " " (front) w i t h 50084c and 50282E.....	1 00
50282E	6208	Arm Rock Shaft Crank (front) Position Screw.....	05
50084c	6208	Arm Rock Shaft Crank (front) Set Screw.	04
49005	6208	" " " Flanged Bushing (front)	50
430c	6208	" " " " " "	
		Set Screw.....	04
49084	6181	Arm Rock Shaft Oil Cover.....	10
193d	6181	" " " " " Screw.....	03
49105	6211	" Rotary Shaft.....	2 50
49011	6181	" " " Bushing (front).....	35
430c	6181	" " " " " S e t Screw.....	04
49010	6209	Arm Rotary Shaft Collar with two 1259c.	30
1259c	6209	" " " " Set Screw.....	03
49012	6179	" " " Flanged B u s h i n g (back).....	1 50
49093	6205	Arm Rotary Shaft Flanged Bushing (back) Oil Pad (long) braided cotton...	02
49013	6205	Arm Rotary Shaft Flanged Bushing (back) Oil Pad (short) braided cotton..	01
159F	6198	Arm Rotary Shaft Flanged Bushing (back) Screw.....	03
49014	6181	Arm Rotary Shaft Flanged Bushing (intermediate).....	50
448c	6181	Arm Rotary Shaft Flanged Bushing (intermediate) Set Screw.....	03
49013	6205	Arm Rotary Shaft Oil Pad (braided cotton) for front bearing.....	01
49013	6205	Arm Rotary Shaft Oil Pad (braided cotton) for intermediate bearing.....	01
144d	6198	Arm Rotary Shaft Screw.....	08
4288	6179	" Side Cover (back).....	10
286d	6198	" " " Thumb Screw....	10
4288	6179	" " " (front).....	10
286d	6198	" " " Thumb Screw....	10
46220	6210	Balance Wheel, 3 in. pulley, with two 430c	80
430c	6181	" " Set Screw.....	04
49195	6210	Cloth Plate.....	1 75
50175F	6213	" " Screw.....	08
49016H	—	" " Slide.....	30

PARTS FOR MACHINE NO. 92-4

21

NO.	PLATE	NAME	EACH
49017H	6179	Cloth Plate Slide complete, Nos. 38419, 49016H and two 725H.....	\$ 30
38419	6181	Cloth Plate Slide Spring.....	05
725H	6181	" " " " Screw.....	02
49196	—	Cloth Plate complete, Nos. 49017H, 49053, 49054, 49195, 49212 and two 226D....	3 30
49108	6207	Crank Connecting Rod with 896E, 49099, 49109 and two 145E.....	1 50
896E	6209	Crank Connecting Rod Adjusting Screw..	04
49109	6181	" " " " Washer	01
*49099	—	" " " Cap.....	—
145E	6198	" " " " Screw.....	04
50147C	6198	" " " Hinge Screw.....	20
1513J	6198	" " " " " Nut.	05
49020P	6179	Face Plate	75
193F	6181	" " Screw.....	03
49197	6213	Feed Bar with 220D and 457C.....	75
49022	6209	" " Hinge Pin.....	10
457C	6196	" " " " Set Screw.....	02
49198	6213	" Connecting Rod with 4784, 49199, 49241 and two 896E	1 50
*49199	—	Feed Connecting Rod Cap.....	—
896E	6209	" " " " Screw.....	04
49200	6213	" " " Hinge Pin.....	10
457C	6196	" " " " " Set Screw	02
4784	6192	" " " Oil Pad (felt).....	01
49241	6213	" " " " " P i n , per 100.....	25
49201	6189	Feed Dog.....	1 00
172C	6194	" " Screw.....	04
220D	6209	" " Stop Screw.....	02
49112	6197	" Eccentric with two 1259C.....	50
1259C	6209	" " Set Screw.....	03
49113	6197	" Lifting Eccentric with two 1259C...	50
49028	6209	" " " Connection with 457C, 2653, 4784, 49029 and two 896E..	1 00
*49029	—	Feed Lifting Eccentric Connection Cap	—
896E	6209	" " " " " Screw.....	04
49030	6209	Feed Lifting Eccentric Connection Hinge Pin.....	10
457C	6196	Feed Lifting Eccentric Connection Hinge Pin Set Screw.....	02
4784	6192	Feed Lifting Eccentric Connection Oil Pad (felt).....	01
2653	6206	Feed Lifting Eccentric Connection Oil Pad Pin.....	01

NO.	PLATE	NAME	EACH
1259C	6209	Feed Lifting Eccentric Set Screw.....\$	03
49202	6213	" Regulator with 457c and 914c.....	75
49203	6213	" " Connection.....	50
914C	6196	" " " Screw.....	04
50331E	6213	" Regulating Screw.....	12
49204	6213	" " " Friction Washer..	01
931E	6213	" " " Stop S c r e w	
		Bushing.....	10
49205	6213	Feed Regulating Screw Washer (fibre)...	02
49206	6213	" " " " (steel)...	02
49033	6179	" Rock Shaft.....	1 00
49207	—	Feed Rock Shaft complete, Nos. 49033 and 49208.....	4 00
49208	6213	Feed Rock Shaft Crank with two 896E...	3 00
896E	6209	" " " " Clamping Screw.	04
11398	6179	" " " Hinge Pin.....	75
1508E	6198	" " " " " Nut.....	06
622C	6198	" " " " " Screw Bearing	12
1508E	6198	" " " " " " " "	
		Nut.....	06
27398	6181	Feed Rock Shaft Washer.....	05
36421	6200	Guide.....	15
194D	6200	" Screw Stud.....	02
671D	6200	" Thumb Screw.....	10
49209	6214	Looper (double thread) with 590D and 49213.....	90
49210	6214	Looper (single thread).....	90
49038	6207	" Bell Crank with 4784.....	2 00
49039	6207	" " " Hinge Stud.....	60
448C	6181	" " " " " Set Screw.	03
4784	6192	" " " Oil Pad (felt).....	01
49158	6207	" " " Pitman with 46223, 49041 and two each 171E and 1057E...	1 75
50070C	6192	Looper Bell Crank Pitman Ball Screw Stud (lower).....	15
1636E	6198	Looper Bell Crank Pitman Ball Screw Stud (lower) Nut.....	03
50069C	6208	Looper Bell Crank Pitman Ball Screw Stud (upper).....	20
1619E	6208	Looper Bell Crank Pitman Ball Screw Stud (upper) Nut.....	05
*49041	—	Looper Bell Crank Pitman Cap (lower)	—
171E	6192	" " " " " " "	
		Screw.....	03
*46223	—	Looper Bell Crank Pitman Cap (upper)	35
1057E	6209	" " " " " " "	
		Screw.....	04

PARTS FOR MACHINE NO. 92-4

23

NO.	PLATE	NAME	EACH
49043	6192	Looper Bell Crank Pitman Washer (fibre)\$	02
49211	6214	" Carrier with 4784 and two each	
		175E and 1147c.....	1 00
175E	6192	Looper Carrier Clamping Screw.....	02
49165	6192	" " Hinge Pin.....	20
49166	6192	" " " " Collar with two	
		202F.....	15
202F	6192	Looper Carrier Hinge Pin Collar Set Screw	02
157D	6193	" " " " Set Screw.....	04
4784	6192	" " Oil Pad (felt).....	01
49045	6192	Looper Carrier Pitman complete, Nos.	
		1708E, 1709E, 49046, 49088 and 49089.	3 25
50070c	6192	Looper Carrier Pitman Ball Screw Stud	
		(right).....	15
1519E	6192	Looper Carrier Pitman Ball Screw Stud	
		(right) Nut.....	03
46237	6192	Looper Carrier Pitman Ball Stud (left)	25
1147C	6192	" " " " " "	
		Set Screw.....	03
*49085	—	Looper Carrier Pitman Cap (left).....	—
171E	6192	" " " " " Screw..	03
*49085	—	" " " " (right).....	—
171E	6192	" " " " " Screw	03
*49086	—	" " " End Bearing	
		(left).....	—
*49087	—	Looper Carrier Pitman End Bearing	
		(right).....	—
49088	6192	Looper Carrier Pitman Head (left) Nos.	
		46237, 49085, 49086 and two 171E....	1 50
49089	6192	Looper Carrier Pitman Head (right) Nos.	
		49085, 49087, 50070c and two 171E....	1 50
49046	6192	Looper Carrier Pitman Rod.....	10
1708E	6192	" " " " Nut (left)...	03
1709E	6192	" " " " " (right)...	03
49043	6192	" " " Washer (fibre)...	02
49047	6193	" " Rock Shaft.....	50
11411	6193	" " " " Collar with	
		453c.....	10
453c	6193	Looper Carrier Rock Shaft Collar Set	
		Screw.....	02
49048	6193	Looper Carrier Rock Shaft Crank (back)	
		forked, with 50083c.....	1 25
50083c	6193	Looper Carrier Rock Shaft Crank (back)	
		Set Screw.....	05
49049	6193	Looper Carrier Rock Shaft Crank (back)	
		Slide Block.....	1 50

NO.	PLATE	NAME	EACH
49248	6193	Looper Carrier Rock Shaft Crank (front) with 157D and two 1324E.....	\$ 1 00
1324E	6193	Looper Carrier Rock Shaft Crank (front) Clamping Screw.....	05
49142	6193	Looper Eccentric with two 1036c.....	50
1036C	6193	" " Set Screw.....	03
49212	6210	" Gate with 448c.....	1 00
49053	6181	" " Hinge Pin.....	10
448C	6181	" " " " Set Screw.....	03
49054	6181	" " Lock Spring.....	10
226D	6181	" " " " Screw.....	02
1147C	6192	" Set Screw.....	03
49213	6214	" Thread Guard.....	10
590D	6192	" " " " Screw.....	02
49214	6214	Needle Bar (hollow).....	75
49215	6214	" " Bushing (lower).....	25
435C	6194	" " " " Set Screw...	04
49216	6214	" " " (upper).....	25
1133E	6194	" " " " Set Screw..	02
49101	6194	" " Connecting Link.....	75
49057	6194	" " " " Hinge Stud	50
1517E	6194	" " " " " " "	
		Nut.....	04
49217	6214	Needle Bar Connecting Stud with 193E..	50
193E	6181	" " " " Clamping Screw.....	03
1740C	6214	Needle Clamping Nut.....	05
49059	6195	Presser Bar.....	40
49060	6195	" " Bushing (lower).....	25
435C	6195	" " " " Set Screw...	04
49061	6195	" " " (upper).....	25
1133E	6195	" " " " Set Screw...	02
49062	6195	" " Lifter.....	30
212D	6195	" " " Cap Screw.....	04
49063	6195	" " " Friction Washer.....	02
49064	6195	" " " Hinge Stud.....	25
453C	6195	" " " " Set Screw..	02
49065	6195	" " Lifting Bracket with 453c and 892F.....	1 25
892F	6195	Presser Bar Lifting Bracket Adjusting Screw.....	05
453C	6195	Presser Bar Lifting Bracket Set Screw...	02
49066	6195	" " " Link.....	25
212D	6195	" " " Cap Screw.....	04
724D	6195	" " " " Hinge Screw....	05
49067	6179	" " Spring (flat).....	25
38468	6195	" " " Stud.....	03

PARTS FOR MACHINE NO. 92-4

25

NO.	PLATE	NAME	EACH
50087D	6198	Presser Foot Hinge Screw.....	\$ 06
49218	—	“ “ Plate.....	1 00
49119	—	“ “ Shank.....	40
49219	6189	Presser Foot (hinged) complete, Nos. 49119, 49218 and 50087D.....	1 10
190D	6198	Presser Foot Screw.....	03
574D	6198	Pressure Regulating Thumb Screw.....	15
1539D	6198	“ “ “ “ Lock Nut.....	05
2102	6194	Tension (under thread) Disc.....	05
1560c	6194	“ “ “ Regulating Thumb Nut.....	04
916c	6194	Tension (under thread) Screw Stud.....	08
10148	6194	“ “ “ Spring.....	03
49220	6214	“ “ “ Thread Guide....	25
2102	6194	“ (upper thread) Disc.....	05
1560c	6194	“ “ “ Regulating Thumb Nut.....	04
916c	6194	Tension (upper thread) Screw Stud.....	08
13710	6194	“ “ “ Spring.....	03
49220	6214	“ “ “ Thread Guide....	25
49221	6214	Thread (under) Eyelet.....	10
172c	6194	“ “ “ Screw.....	04
49222	6214	“ “ Take-up with 49223 and 49224.....	75
49223	6214	Thread (under) Take-up Roller.....	10
49224	6214	“ “ “ “ Pin.....	01
190D	6196	“ “ “ Screw.....	03
49073	6196	“ (upper) Controller.....	75
974F	6196	“ “ “ Hinge Screw..	06
914F	6196	“ “ “ Screw.....	04
39541	6196	“ “ “ “ Washer..	05
49225	6214	“ “ Take-up Arm with 457c..	80
457c	6196	“ “ “ “ Set Screw..	02
49223	6214	“ “ “ Roller.....	10
49226	6214	“ “ “ “ Bracket with 49223 and 49224.....	70
207D	6214	Thread (upper) Take-up Roller Bracket Screw.....	02
49224	6214	Thread (upper) Take-up Roller Pin.....	01
49227	—	Thread (upper) Take-up complete, Nos. 207D, 49225 and 49226.....	1 50
49228	6189	Throat Plate, for double thread, for 49201	1 00

NO.	PLATE	NAME	EACH
49229	6189	Throat Plate with 665D and 49078, for single thread, for 49201.....	\$ 1 15
742F	6198	Throat Plate Screw.....	05
49078	6181	“ “ Thread Retainer.....	15
665D	6181	“ “ “ “ Screw.....	02

LIST OF PARTS COMPLETE **FOR** **MACHINE NO. 92-5**

FOR STITCHING HEAVY BURLAP BAGS WITH FLAX, JUTE OR HEMP
TWINE. MAKES TWO TO FOUR STITCHES TO THE INCH. HAS ONE
NEEDLE, ONE LOOPER AND THROAT PLATE FOR SINGLE THREAD.
ALSO LOOPER AND THROAT PLATE FOR TWO THREAD CHAIN
STITCH. HAS THE MECHANISM FOR REGULATING THE
LENGTH OF STITCH ARRANGED SO THAT IT CAN BE
ADJUSTED FROM THE TOP OF THE CLOTH PLATE,
THERE BEING A CLEARANCE HOLE IN THE CLOTH
PLATE FOR THIS PURPOSE.

NO.	PLATE	NAME	EACH
*49231	—	Arm, upper and lower (solid).....	\$30 00
18130	6205	“ Oil Tube with 29599, for front bearing.....	06
18130	6205	Arm Oil Tube with 29599, for intermediate bearing.....	06
11119	6205	Arm Oil Tube with 29599, for oiling 49101.....	06
18130	6205	Arm Oil Tube with 29599, for oiling 49049.....	06
49091	6205	Arm Oil Tube with 49092, for oiling 49108 (lower bearing).....	20
49141	6213	Arm Oil Tube with 49092, for oiling 49108 (upper bearing).....	10
29599	6205	Arm Oil Tube Packing (felt) for 11119 and 18130.....per 100	25
49092	6205	Arm Oil Tube Packing (felt) for 49091 and 49141.....	01
49156	6207	Arm Rock Shaft.....	75
49003	6208	“ “ “ Bushing (back).....	25
446c	6208	“ “ “ “ “ Set Screw	03
49004	6208	“ “ “ “ “ (intermediate)	25
446c	6208	“ “ “ “ “ “	
		Set Screw.....	03
49232	6215	Arm Rock Shaft Collar and Thread (upper) Nipper Eccentric with two 446c.....	75
446c	6215	Arm Rock Shaft Collar and Thread (upper) Nipper Eccentric Set Screw...	03

NO.	PLATE	NAME	EACH
49157	6208	Arm Rock Shaft Crank (back) with 1036c and 50083c.....	\$ 1 50
50083c	6208	Arm Rock Shaft Crank (back) Position Screw.....	05
1036c	6208	Arm Rock Shaft Crank (back) Set Screw.....	03
49008	6208	" " " " (front) with 50084c and 50282E.....	1 00
50282E	6208	Arm Rock Shaft Crank (front) Position Screw.....	05
50084c	6208	Arm Rock Shaft Crank (front) Set Screw.....	04
49005	6208	" " " Flanged Bushing (front).....	50
430c	6208	" " " " " " " " Set Screw.....	04
49105	6211	Arm Rotary Shaft.....	2 50
49011	6181	" " " Bushing (front).....	35
430c	6181	" " " " " " " " Set Screw.....	04
49010	6209	Arm Rotary Shaft Collar with two 1259c.....	30
1259c	6209	" " " " " Set Screw.....	03
49012	6179	" " " Flanged Bushing (back).....	1 50
49093	6205	Arm Rotary Shaft Flanged Bushing (back) Oil Pad (long) braided cotton..	02
49013	6205	Arm Rotary Shaft Flanged Bushing (back) Oil Pad (short) braided cotton..	01
159F	6198	Arm Rotary Shaft Flanged Bushing (back) Screw.....	03
49014	6181	Arm Rotary Shaft Flanged Bushing (intermediate).....	50
448c	6181	Arm Rotary Shaft Flanged Bushing (intermediate) Set Screw.....	03
49013	6205	Arm Rotary Shaft Oil Pad (braided cotton) for front bearing.....	01
49013	6205	Arm Rotary Shaft Oil Pad (braided cotton) for intermediate bearing.....	01
144b	6198	Arm Rotary Shaft Screw.....	08
4288	6179	" Side Cover (back).....	10
286b	6198	" " " " Thumb Screw....	10
4288	6179	" " " (front).....	10
286b	6198	" " " " Thumb Screw....	10
23873	6210	Balance Wheel with two 430c.....	80
430c	6181	" " " Set Screw.....	04
49195	6210	Cloth Plate.....	1 75
50175F	6213	" " " Screw.....	08
49016H	—	" " " Slide.....	30
49017H	6179	Cloth Plate Slide complete, Nos. 38419, 49016H and two 725H.....	30

PARTS FOR MACHINE NO. 92-5

29

NO.	PLATE	NAME	EACH
38419	6181	Cloth Plate Slide Spring.....	\$ 05
725H	6181	" " " " Screw.....	02
49196	—	Cloth Plate complete, Nos. 49017H, 49053, 49054, 49195, 49212 and two 226D....	3 30
49108	6207	Crank Connecting Rod with 896E, 49099, 49109 and two 145E.....	1 50
896E	6209	Crank Connecting Rod Adjusting Screw..	04
49109	6181	" " " " Washer	01
*49099	—	" " " Cap.....	—
145E	6198	" " " " Screw.....	04
50147C	6198	" " " " Hinge Screw.....	20
1513J	6198	" " " " " Nut.	05
49020P	6179	Face Plate.....	75
193F	6181	" " Screw.....	03
49197	6213	Feed Bar with 220D and 457C.....	75
49022	6209	" " Hinge Pin.....	10
457C	6196	" " " " Set Screw.....	02
49198	6213	" Connecting Rod with 4784, 49199, 49241 and two 896E.....	1 50
*49199	—	Feed Connecting Rod Cap.....	—
896E	6209	" " " " Screw.....	04
49200	6213	" " " Hinge Pin.....	10
457C	6196	" " " " " Set Screw.....	02
4784	6192	Feed Connecting Rod Oil Pad (felt)....	01
49241	6213	" " " " " Pin, per 100	25
49138	6190	" Dog, for medium and light bags....	80
172C	6194	" " Screw.....	04
220D	6209	" " Stop Screw.....	02
49112	6197	" Eccentric with two 1259C.....	50
1259C	6209	" " Set Screw.....	03
49113	6197	" Lifting Eccentric with two 1259C...	50
49028	6209	" " " Connection with 457C, 2653, 4784, 49029 and two 896E..	1 00
*49029	—	Feed Lifting Eccentric Connection Cap	—
896E	6209	" " " " " " Screw.....	04
49030	6209	Feed Lifting Eccentric Connection Hinge Pin.....	10
457C	6196	Feed Lifting Eccentric Connection Hinge Pin Set Screw.....	02
4784	6192	Feed Lifting Eccentric Connection Oil Pad (felt).....	01
2653	6206	Feed Lifting Eccentric Connection Oil Pad Pin.....	01
1259C	6209	Feed Lifting Eccentric Set Screw.....	03
49202	6213	" Regulator with 457C and 914C....	75

NO.	PLATE	NAME	EACH
49203	6213	Feed Regulator Connection.....	\$ 50
914c	6196	" " " Screw.....	04
50331E	6213	" Regulating Screw.....	12
49204	6213	" " " Friction Washer..	01
931E	6213	" " " Stop Screw	
		Bushing.....	10
49205	6213	Feed Regulating Screw Washer (fibre)...	02
49206	6213	" " " " (steel)...	02
49033	6179	" Rock Shaft.....	1 00
49207	—	Feed Rock Shaft complete, Nos. 49033 and 49208.....	4 00
49208	6213	Feed Rock Shaft Crank with two 896E...	3 00
896E	6209	" " " " Clamping Screw.	04
11398	6179	" " " " Hinge Pin.....	75
1508E	6198	" " " " " Nut.....	06
622c	6198	" " " " " Screw Bearing	12
1508E	6198	" " " " " " " "	
		Nut.....	06
27398	6181	Feed Rock Shaft Washer.....	05
36421	6200	Guide.....	15
194D	6200	" Screw Stud.....	02
671D	6200	" Thumb Screw.....	10
49233	6215	Looper (double thread) with 590D and 49213.....	90
49037	6192	Looper (single thread).....	90
49038	6207	" Bell Crank with 4784.....	2 00
49039	6207	" " " " Hinge Stud.....	60
448c	6181	" " " " " Set Screw	03
4784	6192	" " " " Oil Pad (felt).....	01
49158	6207	" " " " Pitman with 46223, 49041 and two each 171E and 1057E...	1 75
50070c	6192	Looper Bell Crank Pitman Ball Screw Stud (lower).....	15
1636E	6198	Looper Bell Crank Pitman Ball Screw Stud (lower) Nut.....	03
50069c	6208	Looper Bell Crank Pitman Ball Screw Stud (upper).....	20
1619E	6208	Looper Bell Crank Pitman Ball Screw Stud (upper) Nut.....	05
*49041	—	Looper Bell Crank Pitman Cap (lower)	—
171E	6192	" " " " " "	
		Screw.....	03
*46223	—	Looper Bell Crank Pitman Cap (upper)	35
1057E	6209	" " " " " "	
		Screw.....	04
49043	6192	Looper Bell Crank Pitman Washer (fibre)	02

PARTS FOR MACHINE NO. 92-5

31

NO.	PLATE	NAME	EACH
49211	6214	Looper Carrier with 4784 and two each 175E and 1147c.....	\$ 1 00
175E	6192	Looper Carrier Clamping Screw.....	02
49165	6192	" " Hinge Pin.....	20
49166	6192	" " " " Collar with two 202F.....	15
202F	6192	Looper Carrier Hinge Pin Collar Set Screw.....	02
157D	6193	Looper Carrier Hinge Pin Set Screw.....	04
4784	6192	" " Oil Pad (felt).....	01
49045	6192	Looper Carrier Pitman complete, Nos. 1708E, 1709E, 49046, 49088 and 49089.	3 25
50070c	6192	Looper Carrier Pitman Ball Screw Stud (right).....	15
1519E	6192	Looper Carrier Pitman Ball Screw Stud (right) Nut.....	03
46237	6192	Looper Carrier Pitman Ball Stud (left)...	25
1147c	6192	" " " " " " Set Screw.....	03
*49085	—	Looper Carrier Pitman Cap (left).....	—
171E	6192	" " " " " " Screw..	03
*49085	—	" " " " " (right).....	—
171E	6192	" " " " " " Screw	03
*49086	—	" " " " End Bearing (left)	—
*49087	—	" " " " " (right)	—
49088	6192	" " " " Head (left) Nos. 46237, 49085, 49086 and two 171E....	1 50
49089	6192	Looper Carrier Pitman Head (right) Nos. 49085, 49087, 50070c and two 171E....	1 50
49046	6192	Looper Carrier Pitman Rod.....	10
1708E	6192	" " " " Nut (left)...	03
1709E	6192	" " " " " (right)...	03
49043	6192	" " " " Washer (fibre)...	02
49047	6193	" " " " Rock Shaft.....	50
11411	6193	" " " " " " Collar with 453c.....	10
453c	6193	Looper Carrier Rock Shaft Collar Set Screw.....	02
49048	6193	Looper Carrier Rock Shaft Crank (back) forked, with 50083c.....	1 25
50083c	6193	Looper Carrier Rock Shaft Crank (back) Set Screw.....	05
49049	6193	Looper Carrier Rock Shaft Crank (back) Slide Block.....	1 50
49248	6193	Looper Carrier Rock Shaft Crank (front) with 157D and two 1324E.....	1 00

NO.	PLATE	NAME	EACH
1324E	6193	Looper Carrier Rock Shaft Crank (front)	
		Clamping Screw.....	\$ 05
49142	6193	Looper Eccentric with two 1036c.....	50
1036C	6193	" " Set Screw.....	03
49212	6210	" Gate with 448c.....	1 00
49053	6181	" " Hinge Pin.....	10
448C	6181	" " " " Set Screw.....	03
49054	6181	" " Lock Spring.....	10
226D	6181	" " " " Screw.....	02
1147C	6192	" Set Screw.....	03
49213	6214	" Thread Guard.....	10
590D	6192	" " " " Screw.....	02
49055	6194	Needle Bar (hollow).....	75
49117	6197	" " Bushing (lower).....	25
435C	6194	" " " " Set Screw...	04
49056	6194	" " " (upper).....	25
1133E	6194	" " " " Set Screw...	02
49101	6194	" " Connecting Link.....	75
49057	6194	" " " " Hinge Stud	50
1517E	6194	" " " " " " "	
		Nut.....	04
49058	6194	Needle Bar Connecting Stud with 391E..	50
391E	6194	" " " " Clamping	
		Screw.....	02
1629C	6194	Needle Clamping Nut.....	05
49059	6195	Presser Bar.....	40
49060	6195	" " Bushing (lower).....	25
435C	6195	" " " " Set Screw...	04
49061	6195	" " " (upper).....	25
1133E	6195	" " " " Set Screw...	02
49062	6195	" " Lifter.....	30
212D	6195	" " Cap Screw.....	04
49063	6195	" " Friction Washer.....	02
49064	6195	" " Hinge Stud.....	25
453C	6195	" " " " Set Screw..	02
49065	6195	" " Lifting Bracket with 453c and	
		892F.....	1 25
892F	6195	Presser Bar Lifting Bracket Adjusting	
		Screw.....	05
453C	6195	Presser Bar Lifting Bracket Set Screw...	02
49066	6195	" " " Link.....	25
212D	6195	" " " Cap Screw.....	04
724D	6195	" " " Hinge Screw....	05
49067	6179	" " Spring (flat).....	25
38468	6195	" " Stud.....	03
50087D	6198	" Foot Hinge Screw.....	06
49234	—	" " Plate.....	1 00

PARTS FOR MACHINE NO. 92-5

33

NO.	PLATE	NAME	EACH
49119	—	Presser Foot Shank.....	\$ 40
49235	6190	Presser Foot (hinged) complete, Nos. 49119, 49234 and 50087D.....	1 10
190D	6198	Presser Foot Screw.....	03
574D	6198	Pressure Regulating Thumb Screw.....	15
1539D	6198	" " " " Lock Nut.....	05
2102	6194	Tension (under thread) Disc.....	05
1560C	6194	" " " Regulating Thumb Nut.....	04
916C	6194	Tension (under thread) Screw Stud.....	08
10148	6194	" " " Spring.....	03
49220	6214	" " " Thread Guide....	25
2102	6194	" (upper thread) Disc.....	05
1560C	6194	" " " Regulating Thumb Nut.....	04
916C	6194	Tension (upper thread) Screw Stud.....	08
13710	6194	" " " Spring.....	03
49220	6214	" " " Thread Guide....	25
49221	6214	Thread (under) Eyelet.....	10
172C	6194	" " " Screw.....	04
49222	6214	" " " Take-up with 49223 and 49224.....	75
49223	6214	Thread (under) Take-up Roller.....	10
49224	6214	" " " " Pin.....	01
190D	6196	" " " Screw.....	03
49073	6196	" (upper) Controller.....	75
974F	6196	" " " Hinge Screw..	06
914F	6196	" " " Screw.....	04
39541	6196	" " " " Washer.	05
49236	6215	" " " Nipper Bracket.....	30
181D	6215	" " " " Screw...	04
2102	6215	" " " Disc.....	05
1560C	6215	" " " Regulating Thumb Nut.....	04
32572	6215	Thread (upper) Nipper Releasing Disc...	05
49237	6215	" " " " Stud...	10
50133C	6215	" " " Screw Stud.....	12
54738	6215	" " " Spring.....	05
49238	6215	" " " Thread Guide....	25
49245	6215	" " " Take-up Arm with 457C..	80
457C	6196	" " " " Set Screw..	02
49223	6214	" " " Roller.....	10
49226	6214	" " " " Bracket with 49223 and 49224.....	70
207D	6214	Thread (upper) Take-up Roller Bracket Screw.....	02

NO.	PLATE	NAME	EACH
49224	6214	Thread (upper) Take-up Roller Pin.....	\$ 01
49246	—	Thread (upper) Take-up complete, Nos. 207D, 49226 and 49245.....	1 50
49239	6190	Throat Plate, for double thread, for 49138	60
49240	6190	“ “ with 665D and 49078, for single thread, for 49138.....	75
742F	6198	Throat Plate Screw.....	05
49078	6181	“ “ Thread Retainer.....	15
665D	6181	“ “ “ “ Screw.....	02

LIST OF PARTS COMPLETE **FOR** **MACHINE NO. 92-6**

**FOR STITCHING HEAVY BURLAP BAGS WITH FLAX, JUTE OR HEMP
TWINE. MAKES TWO TO FOUR STITCHES TO THE INCH, HAS
ONE NEEDLE, ONE LOOPER AND THROAT PLATE FOR
SINGLE THREAD. ALSO LOOPER AND THROAT PLATE
FOR TWO THREAD CHAIN STITCH.**

NO.	PLATE	NAME	EACH
*49231	—	Arm, upper and lower (solid)	\$30 00
18130	6205	“ Oil Tube with 29599, for front bearing	06
18130	6205	Arm Oil Tube with 29599, for intermediate bearing	06
11119	6205	Arm Oil Tube with 29599, for oiling 49101	06
18130	6205	Arm Oil Tube with 29599, for oiling 49049	06
49091	6205	Arm Oil Tube with 49092, for oiling 49108 (lower bearing)	20
49141	6213	Arm Oil Tube with 49092, for oiling 49108 (upper bearing)	10
29599	6205	Arm Oil Tube Packing (felt) for 11119 and 18130 per 100	25
49092	6205	Arm Oil Tube Packing (felt) for 49091 and 49141	01
49156	6207	Arm Rock Shaft	75
49003	6208	“ “ “ Bushing (back)	25
446c	6208	“ “ “ “ “ Set Screw	03
49004	6208	“ “ “ “ (intermediate)	25
446c	6208	“ “ “ “ “	
		Set Screw	03
49232	6215	Arm Rock Shaft Collar and Thread (upper) Nipper Eccentric with two 446c	75
446c	6215	Arm Rock Shaft Collar and Thread (upper) Nipper Eccentric Set Screw . . .	03
49157	6208	Arm Rock Shaft Crank (back) with 1036c and 50083c	1 50
50083c	6208	Arm Rock Shaft Crank (back) Position Screw	05
1036c	6208	Arm Rock Shaft Crank (back) Set Screw.	03

NO.	PLATE	NAME	EACH
49008	6208	Arm Rock Shaft Crank (front) with 50084c and 50282E.....	\$ 1 00
50282E	6208	Arm Rock Shaft Crank (front) Position Screw.....	05
50084c	6208	Arm Rock Shaft Crank (front) Set Screw.	04
49005	6208	" " " Flanged Bushing (front)	50
430c	6208	" " " " " " Set Screw.....	04
49105	6211	Arm Rotary Shaft.....	2 50
49011	6181	" " " Bushing (front).....	35
430c	6181	" " " " " " Set Screw.....	04
49010	6209	Arm Rotary Shaft Collar with two 1259c.	30
1259c	6209	" " " " Set Screw.....	03
49012	6179	" " " Flanged Bushing (back).....	1 50
49093	6205	Arm Rotary Shaft Flanged Bushing (back) Oil Pad (long) braided cotton...	02
49013	6205	Arm Rotary Shaft Flanged Bushing (back) Oil Pad (short) braided cotton.	01
159F	6198	Arm Rotary Shaft Flanged Bushing (back) Screw.....	03
49014	6181	Arm Rotary Shaft Flanged Bushing (intermediate).....	50
448c	6181	Arm Rotary Shaft Flanged Bushing (intermediate) Set Screw.....	03
49013	6205	Arm Rotary Shaft Oil Pad (braided cotton) for front bearing.....	01
49013	6205	Arm Rotary Shaft Oil Pad (braided cotton) for intermediate bearing.....	01
144D	6198	Arm Rotary Shaft Screw.....	08
4288	6179	" Side Cover (back).....	10
286D	6198	" " " " Thumb Screw....	10
4288	6179	" " " (front).....	10
286D	6198	" " " " Thumb Screw....	10
23873	6210	Balance Wheel with two 430c.....	80
430c	6181	" " Set Screw.....	04
49143	6210	Cloth Plate.....	1 75
50175F	6213	" " Screw.....	08
49016H	—	" " Slide.....	30
49017H	6179	Cloth Plate Slide complete, Nos. 38419, 49016H and two 725H.....	30
38419	6181	Cloth Plate Slide Spring.....	05
725H	6181	" " " " Screw.....	02
49144	—	Cloth Plate complete, Nos. 49017H, 49053, 49054, 49143, 49145 and two 226D.....	3 30

PARTS FOR MACHINE NO. 92-6

37

NO.	PLATE	NAME	EACH
49108	6207	Crank Connecting Rod with 896E, 49099, 49109 and two 145E.....	\$ 1 50
896E	6209	Crank Connecting Rod Adjusting Screw..	04
49109	6181	" " " " Washer	01
*49099	—	" " " Cap.....	—
145E	6198	" " " " Screw.....	04
50147C	6198	" " " " Hinge Screw.....	20
1513J	6198	" " " " " Nut.	05
49020P	6179	Face Plate.....	75
193F	6181	" " Screw.....	03
49110	6197	Feed Bar with 220D and 457C.....	75
49022	6209	" " Hinge Pin.....	10
457C	6196	" " " " Set Screw.....	02
49023	6209	" Connecting Rod with 2653, 4784, 49024 and two 896E.....	1 00
*49024	—	Feed Connecting Rod Cap.....	—
896E	6209	" " " " Screw.....	04
4784	6192	" " " Oil Pad (felt)....	01
2653	6206	" " " " " Pin.....	01
49138	6190	" Dog, for medium and light bags....	80
172C	6194	" " Screw.....	04
220D	6209	" " Stop Screw.....	02
49112	6197	" Eccentric with two 1259C.....	50
1259C	6209	" " Set Screw.....	03
49113	6197	" Lifting Eccentric with two 1259C... ..	50
49028	6209	" " " Connection with 457C, 2653, 4784, 49029 and two 896E..	1 00
*49029	—	Feed Lifting Eccentric Connection Cap	—
896E	6209	" " " " " "	04
49030	6209	Screw.....	04
49030	6209	Feed Lifting Eccentric Connection Hinge Pin.....	10
457C	6196	Feed Lifting Eccentric Connection Hinge Pin Set Screw.....	02
4784	6192	Feed Lifting Eccentric Connection Oil Pad (felt).....	01
2653	6206	Feed Lifting Eccentric Connection Oil Pad Pin.....	01
1259C	6209	Feed Lifting Eccentric Set Screw.....	03
50086C	6181	" Regulating Screw Stud.....	22
1714C	6181	" " " " Nut.....	04
49031	6181	" " " " Sleeve.....	50
49032	6181	" " " " Washer.....	05
49033	6179	" Rock Shaft.....	1 00
49114	—	Feed Rock Shaft complete, Nos. 49033 and 49115.....	1 75

NO.	PLATE	NAME	EACH
49115	6179	Feed Rock Shaft Crank with two 896E...	\$ 75
896E	6209	" " " " Clamping Screw.	04
11398	6179	" " " " Hinge Pin.....	75
1508E	6198	" " " " " Nut.....	06
622C	6198	" " " " " Screw Bearing	12
1508E	6198	" " " " " " " "	
		Nut.....	06
27398	6181	Feed Rock Shaft Washer.....	05
36421	6200	Guide.....	15
194D	6200	" Screw Stud.....	02
671D	6200	" Thumb Screw.....	10
49233	6215	Looper (double thread) with 590D and 49213.....	90
49037	6192	Looper (single thread).....	90
49038	6207	" Bell Crank with 4784.....	2 00
49039	6207	" " " " Hinge Stud.....	60
448C	6181	" " " " " Set Screw.	03
4784	6192	" " " " Oil Pad (felt).....	01
49158	6207	" " " " Pitman with 46223, 49041 and two each 171E and 1057E...	1 75
50070C	6192	Looper Bell Crank Pitman Ball Screw Stud (lower).....	15
1636E	6198	Looper Bell Crank Pitman Ball Screw Stud (lower) Nut.....	03
50069C	6208	Looper Bell Crank Pitman Ball Screw Stud (upper).....	20
1619C	6208	Looper Bell Crank Pitman Ball Screw Stud (upper) Nut.....	05
*49041	—	Looper Bell Crank Pitman Cap (lower)	—
171E	6192	" " " " " " "	
		Screw.....	03
*46223	—	Looper Bell Crank Pitman Cap (upper)	35
1057E	6209	" " " " " " "	
		Screw.....	04
49043	6192	Looper Bell Crank Pitman Washer (fibre)	02
49044	6192	" Carrier with 4784 and two each 175E and 1147C.....	1 00
175E	6192	Looper Carrier Clamping Screw.....	02
49165	6192	" " " " Hinge Pin.....	20
49166	6192	" " " " Collar with two 202F.....	15
202F	6192	Looper Carrier Hinge Pin Collar Set Screw	02
157D	6193	" " " " " Set Screw....	04
4784	6192	" " " " Oil Pad (felt).....	01
49045	6192	Looper Carrier Pitman complete, Nos. 1708E, 1709E, 49046, 49088 and 49089.	3 25

NO.	PLATE	NAME	EACH
50070c	6192	Looper Carrier Pitman Ball Screw Stud (right).....	\$ 15
1519E	6192	Looper Carrier Pitman Ball Screw Stud (right) Nut.....	03
46237	6192	Looper Carrier Pitman Ball Stud (left)	25
1147c	6192	" " " " " "	
		Set Screw.....	03
*49085	—	Looper Carrier Pitman Cap (left).....	—
171E	6192	" " " " " Screw..	03
*49085	—	" " " " (right).....	—
171E	6192	" " " " " Screw.	03
*49086	—	" " " End Bearing (left)	—
*49087	—	" " " " (right)	—
49088	6192	" " " Head (left) Nos.	
		46237, 49085, 49086 and two 171E....	1 50
49089	6192	Looper Carrier Pitman Head (right) Nos.	
		49085, 49087, 50070c and two 171E....	1 50
49046	6192	Looper Carrier Pitman Rod.....	10
1708E	6192	" " " " Nut (left)...	03
1709E	6192	" " " " (right)...	03
49043	6192	" " " Washer (fibre)...	02
49047	6193	" " Rock Shaft.....	50
11411	6193	" " " " Collar with	
		453c.....	10
453c	6193	Looper Carrier Rock Shaft Collar Set	
		Screw.....	02
49048	6193	Looper Carrier Rock Shaft Crank (back)	
		forked, with 50083c.....	1 25
50083c	6193	Looper Carrier Rock Shaft Crank (back)	
		Set Screw.....	05
49049	6193	Looper Carrier Rock Shaft Crank (back)	
		Slide Block.....	1 50
49248	6193	Looper Carrier Rock Shaft Crank (front)	
		with 157D and two 1324E.....	1 00
1324E	6193	Looper Carrier Rock Shaft Crank (front)	
		Clamping Screw.....	05
49142	6193	Looper Eccentric with two 1036c.....	50
1036c	6193	" " Set Screw.....	03
49145	6210	" Gate with 448c.....	1 00
49053	6181	" " Hinge Pin.....	10
448c	6181	" " " Set Screw.....	03
49054	6181	" " Lock Spring.....	10
226D	6181	" " " Screw.....	02
1147c	6192	" Set Screw.....	03
49213	6214	" Thread Guard.....	10
590D	6192	" " " Screw.....	02
49055	6194	Needle Bar (hollow).....	75

NO.	PLATE	NAME	EACH
49117	6197	Needle Bar Bushing (lower).....	\$ 25
435C	6194	" " " " Set Screw...	04
49056	6194	" " " (upper).....	25
1133E	6194	" " " " Set Screw...	02
49101	6194	" " Connecting Link.....	75
49057	6194	" " " " Hinge Stud	50
1517E	6194	" " " " " "	
		Nut.....	04
49058	6194	Needle Bar Connecting Stud with 391E..	50
391E	6194	" " " " Clamping	
		Screw.....	02
1629C	6194	Needle Clamping Nut.....	05
49059	6195	Presser Bar.....	40
49060	6195	" " Bushing (lower).....	25
435C	6195	" " " " Set Screw...	04
49061	6195	" " " (upper).....	25
1133E	6195	" " " " Set Screw...	02
49062	6195	" " Lifter.....	30
212D	6195	" " " Cap Screw.....	04
49063	6195	" " " Friction Washer.....	02
49064	6195	" " " Hinge Stud.....	25
453C	6195	" " " " Set Screw..	02
49065	6195	" " Lifting Bracket with 453C	
		and 892F.....	1 25
892F	6195	Presser Bar Lifting Bracket Adjusting	
		Screw.....	05
453C	6195	Presser Bar Lifting Bracket Set Screw...	02
49066	6195	" " " Link.....	25
212D	6195	" " " " Cap Screw.....	04
724D	6195	" " " " Hinge Screw...	05
49067	6179	" " Spring (flat).....	25
38468	6195	" " " Stud.....	03
50087D	6198	" Foot Hinge Screw.....	06
49234	—	" " Plate.....	1 00
49119	—	" " Shank.....	40
49235	6190	Presser Foot (hinged) complete, Nos.	
		49119, 49234 and 50087D.....	1 10
190D	6198	Presser Foot Screw.....	03
574D	6198	Pressure Regulating Thumb Screw.....	15
1539D	6198	" " " " Lock	
		Nut.....	05
2102	6194	Tension (under thread) Disc.....	05
1560C	6194	" " " Regulating	
		Thumb Nut.....	04
916C	6194	Tension (under thread) Screw Stud.....	08
10148	6194	" " " Spring.....	03
49220	6214	" " " Thread Guide....	25

PARTS FOR MACHINE NO. 92-6

41

NO.	PLATE	NAME	EACH
2102	6194	Tension (upper thread) Disc.....	\$ 05
1560c	6194	" " " R e g u l a t i n g	
		Thumb Nut.....	04
916c	6194	Tension (upper thread) Screw Stud.....	08
13710	6194	" " " Spring.....	03
49220	6214	" " " Thread Guide....	25
49221	6214	Thread (under) Eyelet.....	10
172c	6194	" " " Screw.....	04
49222	6214	" " Take-up with 49223 and	
		49224.....	75
49223	6214	Thread (under) Take-up Roller.....	10
49224	6214	" " " Pin.....	01
190d	6196	" " " Screw.....	03
49073	6196	" (upper) Controller.....	75
974F	6196	" " " Hinge Screw..	06
914F	6196	" " " Screw.....	04
39541	6196	" " " Washer..	05
49236	6215	" " Nipper Bracket.....	30
181d	6215	" " " Screw...	04
2102	6215	" " " Disc.....	05
1560c	6215	" " " Regulating Thumb	
		Nut.....	04
32572	6215	Thread (upper) Nipper Releasing Disc...	05
49237	6215	" " " Stud...	10
50133c	6215	" " " Screw Stud.....	12
54738	6215	" " " Spring.....	05
49238	6215	" " " Thread Guide....	25
49245	6215	" " Take-up Arm with 457c..	80
457c	6196	" " " Set Screw..	02
49223	6214	" " " Roller.....	10
49226	6214	" " " Bracket	
		with 49223 and 49224.....	70
207d	6214	Thread (upper) Take-up Roller Bracket	
		Screw.....	02
49224	6214	Thread (upper) Take-up Roller Pin.....	01
49246	—	Thread (upper) Take-up complete, Nos.	
		207d, 49226 and 49245.....	1 50
49239	6190	Throat Plate, for double thread, for 49138	60
49240	6190	" " with 665d and 49078, f o r	
		single thread, for 49138.....	75
742F	6198	Throat Plate Screw.....	05
49078	6181	" " Thread Retainer.....	15
665d	6181	" " " Screw.....	02

IRON BASE

NO.	PLATE	NAME	EACH
49123	6199	Machine Base Oil Pipe.....	\$ 25
49124	6199	“ “ “ Valve.....	40
663E	6199	“ “ Screw.....	08
50144J	6199	“ “ Thumb Screw with 49095..	25
49095	6199	“ “ “ Washer.....	05
49096	6199	“ Washer (leather).....	05
49094	6216	“ Base with 49123, 49124 and three each 663E and 49096, for 92-4 to 92-6 Machines.....	2 50
49193	6217	Machine Base with 49123, 49124 and three each 663E and 49096, for 92-3 Machine.	2 50

ACCESSORIES

NO.	PLATE	NAME	EACH
4718	6218	Machine Cushion.....	\$ 01
50144J	6199	“ Thumb Screw with 49095, for power table.....	25
49095	6199	Machine Thumb Screw Washer.....	05
36563	6201	Oiler (copper plated) with 36564.....	12
36564	6201	“ Spout, 5 in. long.....	06
11831	6201	Screw Driver (large).....	20
26026	6201	“ “ (small).....	10
35095	6201	Tweezers, 6 in.....	40
23766	6201	Wrench for 1508 and 1636.....	10
8909	6201	“ “ 1513 and 1517.....	10
8908	6201	“ “ 1519, 1708 and 1709.....	08
19221	6201	“ “ 1619.....	15
19079	6201	“ “ 1324 and 1629.....	10
49079	6201	“ “ 1714.....	15
49242	6201	“ “ 1740.....	10

HEMMER

NO.	PLATE	NAME	EACH
36436	6200	Hemmer on Shank, for burlap bags.....	\$ 1 50
49125	6184	Feed Dog (double) for 92-3 Machine.....	80
49201	6189	“ “ for 92-4 Machine.....	1 00
49138	6190	“ “ “ medium and light bags, for 92-5 and 92-6 Machines.....	80

HEMMER

43

NO.	PLATE	NAME	EACH
50087D	6198	Presser Foot Hinge Screw.....	\$ 06
49126	—	“ “ Plate.....	75
49127	—	“ “ Shank.....	40
49128	6184	Presser Foot (hinged) complete for 49125 and 49138, Nos. 49126, 49127 and 50087D.....	80
50087D	6198	Presser Foot Hinge Screw.....	06
49218	—	“ “ Plate.....	1 00
49119	—	“ “ Shank.....	40
49219	6189	Presser Foot (hinged) complete for 49201, Nos. 49119, 49218 and 50087D.....	1 10
50087D	6198	Presser Foot Hinge Screw.....	06
49234	—	“ “ Plate.....	1 00
49119	—	“ “ Shank.....	40
49235	6190	Presser Foot (hinged) complete for 49138, Nos. 49119, 49234 and 50087D.....	1 10
49129	6184	Throat Plate, for double thread, for 49125	60
49130	6184	“ “ with 665D and 49078, for single thread, for 49125.....	75
49228	6189	Throat Plate, for double thread, for 49201	1 00
49229	6189	“ “ with 665D and 49078, for single thread, for 49201.....	1 15
49239	6190	Throat Plate, for double thread, for 49138	60
49240	6190	“ “ with 665D and 49078, for single thread, for 49138.....	75
49078	6181	Throat Plate Thread Retainer.....	15
665D	6181	“ “ “ “ Screw.....	02

FOOT LIFTER PARTS

NO.	PLATE	NAME	EACH
6439	—	Chain, 36 to 45 in.....	\$ 20
NOTE: When ordering No. 6439 give length required.			
4879	6218	Chain Connecting Link for 4885.....	03
49160	6211	Lifting Lever.....	35
802D	6218	“ “ Hinge Screw.....	10
49161	6218	“ “ Link.....	30
50183D	6218	“ “ Hinge Screw.....	08
49162	6218	“ “ Spring.....	03
4881	6216	Treadle.....	30
4882	6218	“ Shaft.....	05
4883	6218	“ Spring.....	10
4884	6216	“ Stand.....	25
4885	6216	Treadle complete, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16.	75
49164	—	Foot Lifter complete, Nos. 802D, 4885, 6439, 49160 to 49162 and 50183D.....	1 80

KNEE LIFTER PARTS

NO.	PLATE	NAME	EACH
49159	—	Chain, length 13½ in., with 39575 and 39576.....	\$ 15
39575	6205	Chain Hook (lower).....	05
39576	6205	“ “ (upper).....	05
49160	6211	Lifting Lever.....	35
802D	6218	“ “ Hinge Screw.....	10
49161	6218	“ “ Link.....	30
50183D	6218	“ “ “ Hinge Screw.....	08
49162	6218	“ “ Spring.....	03
7124	6216	Rock Shaft.....	10
2764	6216	“ “ Hanger (back) with two wood screws 1 in. No. 10.....	08
16128	6216	Rock Shaft Hanger (front) with two wood screws 1 in. No. 10.....	08
16646	6216	Rock Shaft Knee Arm.....	10
16647	—	Rock Shaft Knee Arm complete, Nos. 2766, 2767 and 16646.....	40
2766	6216	Rock Shaft Knee Arm Hub with 356c... ..	15
356c	6198	“ “ “ “ “ Set Screw....	06
2767	6216	“ “ “ Plate with 356c.....	18
356c	6198	“ “ “ “ Set Screw.....	06
6337	6216	“ “ Lifting Bracket with two 356c.....	20
6338	6216	Rock Shaft Lifting Bracket Hook.....	15
356c	6198	“ “ “ “ “ S e t Screw.....	06
356c	6198	Rock Shaft Lifting Bracket Set Screw... ..	06
2770	6216	“ “ Stop Dog with 356c.....	12
356c	6198	“ “ “ “ Set Screw.....	06
16129	6216	Rock Shaft complete, Nos. 2764, 6337, 6338, 7124, 16128, 16647 and two 2770.	1 25
49163	—	Knee Lifter complete, Nos. 802D, 16129, 49159 to 49162 and 50183D.....	2 25

THREAD UNWINDER

FOR TWO LARGE SPOOLS OR TWO LARGE
CONES OF THREAD

NO.	PLATE	NAME	EACH
27623	2837	Spool Pin.....	\$ 08
155c	6198	" " Set Screw.....	03
41530	2837	" Rest.....	30
41531	—	" " 41530 with 1149c and two each 155c and 27623.....	50
1149c	6198	Spool Rest Set Screw.....	04
27940	2837	" Stand with 453c.....	20
41514	2837	" Weight, 4 in. diam., with 41515....	15
41515	6199	" " Centre Pin.....	05
27739	2837	Thread Cone (wood).....	05
41631	2837	" Guard with 208E and two 41569..	35
41569	6199	" " Eyelet.....	02
41637	2837	" " Rod (lower).....	10
41638	2837	" " " (upper).....	15
41639	2837	" " " Coupling with two 456c.....	20
456c	6198	Thread Guard Rod Coupling Set Screw..	02
41640	—	Thread Guard Rod complete, 30 in. long, Nos. 41637 to 41639.....	45
453c	6181	Thread Guard Rod Set Screw.....	02
208E	6198	" " Screw.....	02
41533	2837	Thread Unwinder complete, Nos. 27940, 41531, 41631, 41640, two each 27739, 41514 and three wood screws 1 in. No. 12.....	1 80

OBSOLETE PARTS

NO.	PLATE	NAME	EACH
38440	6192	Looper Carrier Hinge Pin.....	\$ 20

NUMERICAL LIST OF PARTS
FOR
MACHINES
Nos. 92-3, 92-4, 92-5 and 92-6

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
144D	6198	Arm Rotary Shaft Screw.....	\$ 08
145E	6198	Crank Connecting Rod Cap Screw for 49108.....	04
155C	6198	Thread Unwinder Spool Pin Set Screw for 41531.....	03
157D	6193	Looper Carrier Hinge Pin Set Screw for 49248.....	04
159F	6198	Arm Rotary Shaft Flanged Bushing (back) Screw.....	03
171E	6192	Looper Bell Crank Pitman Cap (lower) Screw for 49158.....	03
171E	6192	Looper Carrier Pitman Cap (left) Screw for 49088.....	03
171E	6192	Looper Carrier Pitman Cap (right) Screw for 49089.....	03
172C	6194	Feed Dog Screw.....	04
172C	6194	Thread (under) Eyelet Screw.....	04
175E	6192	Looper Carrier Clamping Screw for 49044 and 49211.....	02
175E	6192	Oil Cup Cover Screw for 49181.....	02
181D	6215	Thread (upper) Nipper Bracket Screw for 92-5 and 92-6 Machines.....	04
190D	6198	Presser Foot Screw.....	03
190D	6196	Thread Guide (double, side of arm) Screw for 92-3 Machine.....	03
190D	6196	Thread (under) Take-up Screw.....	03
193D	6181	Arm Rock Shaft Oil Cover Screw for 92-3 and 92-4 Machines.....	03
193F	6181	Face Plate Screw.....	03
193E	6181	Needle Bar Connecting Stud Clamping Screw for 49217.....	03
194D	6200	Guide Screw Stud.....	02
195E	6206	Oil Cup Oil Hole Cover Screw for 49181..	02
198D	6206	" Pipe Connection Cap Screw for 49188	02
202F	6192	Looper Carrier Hinge Pin Collar Set Screw for 49166.....	02
207D	6214	Thread (upper) Take-up Roller Bracket Screw for 49227 and 49246.....	02
208E	6198	Thread Unwinder Thread Guard Screw for 41631.....	02
212D	6195	Presser Bar Lifter Cap Screw.....	04
212D	6195	" " Lifting Link Cap Screw.....	04

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
220D	6209	Feed Dog Stop Screw for 49021, 49110 and 49197.....	\$ 02
226D	6181	Looper Gate Lock Spring Screw for 49144, 49176 and 49196.....	02
286D	6198	Arm Side Cover (back) Thumb Screw...	10
286D	6198	" " " (front) Thumb Screw...	10
356C	6198	Rock Shaft Knee Arm Hub Set Screw for 2766.....	06
356C	6198	Rock Shaft Knee Plate Set Screw for 2767	06
356C	6198	" " Lifting Bracket Hook Set Screw for 6337.....	06
356C	6198	Rock Shaft Lifting Bracket Set Screw for 6337.....	06
356C	6198	Rock Shaft Stop Dog Set Screw for 2770.	06
391E	6194	Needle Bar Connecting Stud Clamping Screw for 49058.....	02
430C	6208	Arm Rock Shaft Flanged Bushing (front) Set Screw.....	04
430C	6181	Arm Rotary Shaft Bushing (front) Set Screw.....	04
430C	6181	Balance Wheel Set Screw for 23873 and 46220.....	04
435C	6194	Needle Bar Bushing (lower) Set Screw...	04
435C	6195	Presser Bar Bushing (lower) Set Screw...	04
443C	6208	Arm Rock Shaft Collar Set Screw for 49006.....	03
446C	6208	Arm Rock Shaft Bushing (back) Set Screw.....	03
446C	6208	Arm Rock Shaft Bushing (intermediate) Set Screw.....	03
446C	6215	Arm Rock Shaft Collar and Thread (upper) Nipper Eccentric Set Screw for 49232.....	03
448C	6181	Arm Rotary Shaft Flanged Bushing (intermediate) Set Screw.....	03
448C	6181	Looper Bell Crank Hinge Stud Set Screw.	03
448C	6181	" Gate Hinge Pin Set Screw for 49116, 49145 and 49212.....	03
453C	6193	Looper Carrier Rock Shaft Collar Set Screw for 11411.....	02
453C	6195	Presser Bar Lifter Hinge Stud Set Screw.	02
453C	6195	" " Lifting Bracket Set Screw for 49065.....	02
453C	6181	Thread Unwinder Thread Guard Rod Set Screw for 27940.....	02
456C	6198	Thread Unwinder Thread Guard Rod Coupling Set Screw for 41639.....	02

NUMERICAL LIST OF PARTS

49

NO.	PLATE	NAME	EACH
457c	6196	Feed Bar Hinge Pin Set Screw for 49021, 49110 and 49197.....	\$ 02
457c	6196	Feed Connecting Rod Hinge Pin Set Screw for 49202.....	02
457c	6196	Feed Lifting Eccentric Connection Hinge Pin Set Screw for 49028.....	02
457c	6196	Thread (upper) Take-up Arm Set Screw for 49225 and 49245.....	02
457c	6196	Thread (upper) Take-up Set Screw for 49075.....	02
574D	6198	Pressure Regulating Thumb Screw.....	15
590D	6192	Looper Thread Guard Screw for 49036, 49209 and 49233.....	02
622c	6198	Feed Rock Shaft Hinge Pin Screw Bearing	12
663E	6199	Machine Base Screw for 49094 and 49193	08
665D	6181	Throat Plate Thread Retainer Screw for 49130, 49132, 49155, 49229 and 49240.	02
671D	6200	Guide Thumb Screw.....	10
690D	6206	Oil Cup Screw for 92-3 Machine.....	05
691F	6198	Throat Plate Screw for 92-3 Machine....	04
724D	6195	Presser Bar Lifting Link Hinge Screw....	05
725H	6181	Cloth Plate Slide Spring Screw for 49017H	02
742F	6198	Throat Plate Screw for 92-4 to 92-6 Machines.....	05
802D	6218	Lifting Lever Hinge Screw for 49163 and 49164.....	10
892F	6195	Presser Bar Lifting Bracket Adjusting Screw for 49065.....	05
896E	6209	Crank Connecting Rod Adjusting Screw for 49108.....	04
896E	6209	Feed Connecting Rod Cap Screw for 49023 and 49198.....	04
896E	6209	Feed Lifting Eccentric Connection Cap Screw for 49028.....	04
896E	6209	Feed Rock Shaft Crank Clamping Screw for 49035, 49115 and 49208.....	04
914F	6196	Thread (upper) Controller Screw.....	04
914c	6196	Feed Regulator Connection Screw for 49202.....	04
916c	6194	Tension (under thread) Screw Stud.....	08
916c	6194	" (upper thread) Screw Stud.....	08
931E	6213	Feed Regulating Screw Stop Screw Bush- ing for 92-4 and 92-5 Machines.....	10
974F	6196	Thread (upper) Controller Hinge Screw..	06
1036c	6208	Arm Rock Shaft Crank (back) Set Screw for 49157.....	03
1036c	6193	Looper Eccentric Set Screw for 49142....	03

NO.	PLATE	NAME	EACH
1057E	6209	Looper Bell Crank Pitman Cap (upper)	
		Screw for 49158.....	\$ 04
1133E	6194	Needle Bar Bushing (upper) Set Screw...	02
1133E	6195	Presser Bar Bushing (upper) Set Screw..	02
1147C	6192	Looper Carrier Pitman Ball Stud (left) Set	
		Screw for 49044 and 49211.....	03
1147C	6192	Looper Set Screw for 49044 and 49211...	03
1149C	6198	Thread Unwinder Spool Rest Set Screw	
		for 41531.....	04
1259C	6209	Arm Rotary Shaft Collar Set Screw for	
		49010.....	03
1259C	6209	Feed Eccentric Set Screw for 49026 and	
		49112.....	03
1259C	6209	Feed Lifting Eccentric Set Screw for	
		49113.....	03
1324E	6193	Looper Carrier Rock Shaft Crank (front)	
		Clamping Screw for 49248.....	05
1508E	6198	Feed Rock Shaft Hinge Pin Nut.....	06
1508E	6198	“ “ “ “ “ Screw Bear-	
		ing Nut.....	06
1513J	6198	Crank Connecting Rod Hinge Screw Nut	05
1517E	6194	Needle Bar Connecting Link Hinge Stud	
		Nut.....	04
1519E	6192	Looper Carrier Pitman Ball Screw Stud	
		(right) Nut.....	03
1539D	6198	Pressure Regulating Thumb Screw Lock	
		Nut.....	05
1560C	6194	Tension (under thread) Regulating Thumb	
		Nut.....	04
1560C	6194	Tension (upper thread) Regulating Thumb	
		Nut.....	04
1560C	6215	Thread (upper) Nipper Regulating Thumb	
		Nut for 92-5 and 92-6 Machines.....	04
1619E	6208	Looper Bell Crank Pitman Ball Screw	
		Stud (upper) Nut.....	05
1629C	6194	Needle Clamping Nut for 92-3, 92-5 and	
		92-6 Machines.....	05
1636E	6198	Looper Bell Crank Pitman Ball Screw	
		Stud (lower) Nut.....	03
1708E	6192	Looper Carrier Pitman Rod Nut (left)-for	
		49045.....	03
1709E	6192	Looper Carrier Pitman Rod Nut (right)	
		for 49045.....	03
1714C	6181	Feed Regulating Screw Stud Nut for 92-3	
		and 92-6 Machines.....	04
1733D	6206	Oil Pipe Coupling Nut for 92-3 Machine..	10
1740C	6214	Needle Clamping Nut for 92-4 Machine..	05

NUMERICAL LIST OF PARTS

51

NO.	PLATE	NAME	EACH
2102	6194	Tension (under thread) Disc.....	\$ 05
2102	6194	“ (upper thread) Disc.....	05
2102	6215	Thread (upper) Nipper Disc for 92-5 and 92-6 Machines.....	05
2653	6206	Arm Oil Tube Packing Stop Pin for 49170 to 49172.....	01
2653	6206	Feed Connecting Rod Oil Pad Pin for 49023.....	01
2653	6206	Feed Lifting Eccentric Connection Oil Pad Pin for 49028.....	01
2764	6216	Rock Shaft Hanger (back) with two wood screws 1 in. No. 10, for 16129.....	08
2766	6216	Rock Shaft Knee Arm Hub with 356c, for 16647.....	15
2767	6216	Rock Shaft Knee Plate with 356c, for 16647.....	18
2770	6216	Rock Shaft Stop Dog with 356c, for 16129	12
4288	6179	Arm Side Cover (back).....	10
4288	6179	“ “ “ (front) for 92-4 to 92-6 Machines.....	10
4718	6218	Machine Cushion (Accessories).....	01
4784	6192	Feed Connecting Rod Oil Pad (felt) for 49023 and 49198.....	01
4784	6192	Feed Lifting Eccentric Connection Oil Pad (felt) for 49028.....	01
4784	6192	Looper Bell Crank Oil Pad (felt) for 49038	01
4784	6192	“ Carrier Oil Pad (felt) for 49044 and 49211.....	01
4879	6218	Chain Connecting Link for 4885.....	03
		Nos. 4881 TO 4884 FOR 4885.	
4881	6216	Treadle.....	30
4882	6218	“ Shaft.....	05
4883	6218	“ Spring.....	10
4884	6216	“ Stand.....	25
4885	6216	Treadle complete for 49164, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16.....	75
6337	6216	Rock Shaft Lifting Bracket with two 356c, for 16129.....	20
6338	6216	Rock Shaft Lifting Bracket Hook for 16129.....	15
6439	—	Chain, 36 in. to 45 in., for 49164.....	20
7124	6216	Rock Shaft for 16129.....	10
8908	6201	Wrench for 1519, 1708 and 1709 (Ac- cessories).....	08
8909	6201	Wrench for 1513 and 1517 (Accessories).	10

NO.	PLATE	NAME	EACH
10148	6194	Tension (under thread) Spring.....	\$ 03
11119	6205	Arm Oil Tube with 29599, for oiling 49101	06
11398	6179	Feed Rock Shaft Hinge Pin.....	75
11411	6193	Looper Carrier Rock Shaft Collar with 453c.....	10
11831	6201	Screw Driver, large (Accessories).....	20
13710	6194	Tension (upper thread) Spring.....	03
16128	6216	Rock Shaft Hanger (front) with two wood screws 1 in. No. 10, for 16129.....	08
16129	6216	Rock Shaft complete for 49163, Nos. 2764, 6337, 6338, 7124, 16128, 16647 and two 2770.....	1 25
16646	6216	Rock Shaft Knee Arm for 16647.....	10
16647	—	Rock Shaft Knee Arm complete for 16129, Nos. 2766, 2767 and 16646.....	40
17547	6194	Tension (under thread) Thread Guide for 92-3 Machine.....	25
17547	6194	Tension (upper thread) Thread Guide for 92-3 Machine.....	25
17677	6207	Arm Side Cover (front) for 92-3 Machine.	10
18130	6205	“ Oil Tube with 29599, for front bear- ing.....	06
18130	6205	Arm Oil Tube with 29599, for intermediate bearing.....	06
18130	6205	Arm Oil Tube with 29599, for oiling 49049, for 92-4 to 92-6 Machines.....	06
19079	6201	Wrench for 1324 and 1629 (Accessories)..	10
19221	6201	“ “ 1619 (Accessories).....	15
23766	6201	“ “ 1508 and 1636 (Accessories)..	10
23873	6210	Balance Wheel with two 430c, for 92-3, 92-5 and 92-6 Machines.....	80
26026	6201	Screw Driver, small (Accessories).....	10
27398	6181	Feed Rock Shaft Washer.....	05
27623	2837	Thread Unwinder Spool Pin for 41531...	08
27739	2837	“ “ Thread Cone (wood) for 41533.....	05
27940	2837	Thread Unwinder Spool Stand with 453c, for 41533.....	20
29599	6205	Arm Oil Tube Packing (felt) for 11119 and 18130.....per 100	25
32572	6215	Thread (upper) Nipper Releasing Disc for 92-5 and 92-6 Machines.....	05
35095	6201	Tweezers, 6 in. (Accessories).....	40
36221	6200	Guide for 92-3 Machine.....	15
36421	6200	“ “ 92-4 to 92-6 Machines.....	15
36436	6200	Hemmer on Shank, for burlap bags.....	1 50

NUMERICAL LIST OF PARTS

53

NO.	PLATE	NAME	EACH
36563	6201	Oiler (copper plated) with 36564 (Accessories).....	\$ 12
36564	6201	Oiler Spout, 5 in. long, for 36563.....	06
38419	6181	Cloth Plate Slide Spring for 49017H.....	05
38440	6192	Looper Carrier Hinge Pin, obsolete.....	20
38468	6195	Presser Bar Spring Stud.....	03
39541	6196	Thread (upper) Controller Screw Washer.....	05
39575	6205	Chain Hook (lower) for 49159.....	05
39576	6205	“ “ (upper) for 49159.....	05
41514	2837	Thread Unwinder Spool Weight, 4 in. diam., with 41515, for 41533.....	15
41515	6199	Thread Unwinder Spool Weight Centre Pin for 41514.....	05
41530	2837	Thread Unwinder Spool Rest for 41531..	30
41531	—	“ “ “ “ 41530 with 1149c and two each 155c and 27623, for 41533.....	50
41533	2837	Thread Unwinder complete, for two large spools or two large cones of thread, Nos. 27940, 41531, 41631, 41640, two each 27739, 41514 and three wood screws 1 in. No. 12.....	1 80
41569	6199	Thread Unwinder Thread Guard Eyelet for 41631.....	02
41631	2837	Thread Unwinder Thread Guard with 208E and two 41569, for 41533.....	35
Nos. 41637 TO 41639 FOR 41640.			
41637	2837	Thread Unwinder Thread Guard Rod (lower).....	10
41638	2837	Thread Unwinder Thread Guard Rod (upper).....	15
41639	2837	Thread Unwinder Thread Guard Rod Coupling with two 456c.....	20
41640	—	Thread Unwinder Thread Guard Rod complete, 30 in. long, for 41533, Nos. 41637 to 41639.....	45
46220	6210	Balance Wheel, 3 in. pulley, with two 430c, for 92-4 Machine.....	80
*46223	—	Looper Bell Crank Pitman Cap (upper) for 49158.....	35
46224	6206	Cloth Plate Oil Cup for 49175.....	05
46237	6192	Looper Carrier Pitman Ball Stud (left) for 49088.....	25
*49001	—	Arm, upper and lower (solid) for 92-4 Machine.....	30 00

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
49003	6208	Arm Rock Shaft Bushing (back).....	\$ 25
49004	6208	“ “ “ “ (intermediate)..	25
49005	6208	“ “ “ Flanged Bushing (front).	50
49006	6208	“ “ “ Collar with two 443c, for 92-3 and 92-4 Machines.....	30
49008	6208	Arm Rock Shaft Crank (front) with 50084c and 50282E.....	1 00
49010	6209	Arm Rotary Shaft Collar with two 1259c.	30
49011	6181	“ “ “ Bushing (front).....	35
49012	6179	“ “ “ Flanged B u s h i n g (back).....	1 50
49013	6205	Arm Oil Tube Packing (braided cotton) for 49169.....	01
49013	6205	Arm Rotary Shaft Flanged Bushing (back) Oil Pad (short) braided cotton.....	01
49013	6205	Arm Rotary Shaft Oil Pad (braided cotton) for front bearing.....	01
49013	6205	Arm Rotary Shaft Oil Pad (braided cotton) for intermediate bearing.....	01
49013	6205	Feed Rock Shaft Oil Cup Packing (braided cotton) for 49179.....	01
49014	6181	Arm Rotary Shaft Flanged Bushing (intermediate).....	50
49016H	—	Cloth Plate Slide for 49017H.....	30
49017H	6179	Cloth Plate Slide complete for 49144, 49176 and 49196, Nos. 38419, 49016H and two 725H.....	30
49020P	6179	Face Plate.....	75
49021	6209	Feed Bar with 220D and 457c, for 92-3 Machine.....	75
49022	6209	Feed Bar Hinge Pin.....	10
49023	6209	“ Connecting Rod with 2653, 4784, 49024 and two 896E, for 92-3 and 92-6 Machines.....	1 00
*49024	—	Feed Connecting Rod Cap for 49023.....	—
49025	6182	“ Dog, for large bags, for 92-3 Machine	35
49026	6209	“ Eccentric with two 1259c, for 92-3 Machine.....	50
49028	6209	Feed Lifting Eccentric Connection with 457c, 2653, 4784, 49029 and two 896E..	1 00
*49029	—	Feed Lifting Eccentric Connection Cap for 49028.....	—
49030	6209	Feed Lifting Eccentric Connection Hinge Pin.....	10
49031	6181	Feed Regulating Screw Stud Sleeve for 92-3 and 92-6 Machines.....	50

NUMERICAL LIST OF PARTS

55

NO.	PLATE	NAME	EACH
49032	6181	Feed Regulating Screw Stud Washer for 92-3 and 92-6 Machines.....	\$ 05
49033	6179	Feed Rock Shaft for 49114 and 49207....	1 00
49035	6179	" " " Crank with two 896E, for 49178.....	75
49036	6192	Looper (double thread) with 590D and 49080, for 92-3 Machine.....	90
49037	6192	Looper (single thread) for 92-3, 92-5 and 92-6 Machines.....	90
49038	6207	Looper Bell Crank with 4784.....	2 00
49039	6207	" " " Hinge Stud.....	60
*49041	—	" " " Pitman Cap (lower) for 49158.....	—
49043	6192	Looper Bell Crank Pitman Washer (fibre)	02
49043	6192	" Carrier Pitman Washer (fibre)...	02
49044	6192	" " with 4784 and two each 175E and 1147C, for 92-3 and 92-6 Machines.....	1 00
49045	6192	Looper Carrier Pitman complete, Nos. 1708E, 1709E, 49046, 49088 and 49089.	3 25
49046	6192	Looper Carrier Pitman Rod for 49045....	10
49047	6193	" " Rock Shaft.....	50
49048	6193	" " " " Crank (back) forked, with 50083C.....	1 25
49049	6193	Looper Carrier Rock Shaft Crank (back) Slide Block.....	1 50
49053	6181	Looper Gate Hinge Pin for 49144, 49176 and 49196.....	10
49054	6181	Looper Gate Lock Spring for 49144, 49176 and 49196.....	10
49055	6194	Needle Bar (hollow) for 92-3, 92-5 and 92-6 Machines.....	75
49056	6194	Needle Bar Bushing (lower) for 92-3 Machine.....	25
49056	6194	Needle Bar Bushing (upper) for 92-3, 92-5 and 92-6 Machines.....	25
49057	6194	Needle Bar Connecting Link Hinge Stud.	50
49058	6194	" " " Stud with 391E, for 92-3, 92-5 and 92-6 Machines.....	50
49059	6195	Presser Bar.....	40
49060	6195	" " Bushing (lower).....	25
49061	6195	" " " (upper).....	25
49062	6195	" " Lifter.....	30
49063	6195	" " " Friction Washer.....	02
49064	6195	" " " Hinge Stud.....	25
49065	6195	" " Lifting Bracket with 453C and 892F.....	1 25

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
49066	6195	Presser Bar Lifting Link.....	\$ 25
49067	6179	“ “ Spring (flat).....	25
49068	—	“ Foot Plate for 49070.....	75
49069	—	“ “ Shank for 49070.....	40
49070	6182	Presser Foot (hinged) complete for 49025 and 49103, Nos. 49068, 49069 and 50087D.....	80
49071	6194	Thread (under) Eyelet for 92-3 Machine.	10
49072	6196	“ “ Take-up for 92-3 Machine	30
49073	6196	“ (upper) Controller.....	75
49075	6196	“ “ Take-up with 457c, for 92-3 Machine.....	80
49078	6181	Throat Plate Thread Retainer for 49130, 49132, 49155, 49229 and 49240.....	15
49079	6201	Wrench for 1714 (Accessories).....	15
49080	6192	Looper Thread Guard for 49036.....	10
49084	6181	Arm Rock Shaft Oil Cover for 92-3 and 92-4 Machines.....	10
*49085	—	Looper Carrier Pitman Cap (left) for 49088.....	—
*49085	—	Looper Carrier Pitman Cap (right) for 49089.....	—
*49086	—	Looper Carrier Pitman End Bearing (left) for 49088.....	—
*49087	—	Looper Carrier Pitman End Bearing (right) for 49089.....	—
49088	6192	Looper Carrier Pitman Head (left) Nos. 46237, 49085, 49086 and two 171E, for 49045.....	1 50
49089	6192	Looper Carrier Pitman Head (right) Nos. 49085, 49087, 50070c and two 171E, for 49045.....	1 50
49091	6205	Arm Oil Tube with 49092, for oiling 49108 (lower bearing).....	20
49092	6205	Arm Oil Tube Packing (felt) for 49091 and 49141.....	01
49093	6205	Arm Rotary Shaft Flanged Bushing (back) Oil Pad (long) braided cotton.....	02
49094	6216	Machine Base with 49123, 49124 and three each 663E and 49096, for 92-4 to 92-6 Machines.....	2 50
49095	6199	Machine Base Thumb Screw Washer for 50144J.....	05
49095	6199	Machine Thumb Screw Washer for 50144J.....	05
49096	6199	Machine Washer (leather) for 49094 and 49193.....	05

NUMERICAL LIST OF PARTS

57

NO.	PLATE	NAME	EACH
49097	6207	Arm Rotary Shaft for 92-3 Machine.....	\$ 2 50
*49099	—	Crank Connecting Rod Cap for 49108....	—
49101	6194	Needle Bar Connecting Link.....	75
49103	6182	Feed Dog (spiked teeth) for clay filled bags, for 92-3 Machine.....	60
49105	6211	Arm Rotary Shaft for 92-4 to 92-6 Machines.....	2 50
49108	6207	Crank Connecting Rod with 896E, 49099, 49109 and two 145E.....	1 50
49109	6181	Crank Connecting Rod Adjusting Washer for 49108.....	01
49110	6197	Feed Bar with 220D and 457C, for 92-6 Machine.....	75
49112	6197	Feed Eccentric with two 1259C, for 92-4 to 92-6 Machines.....	50
49113	6197	Feed Lifting Eccentric with two 1259C...	50
49114	—	Feed Rock Shaft complete for 92-6 Machine, Nos. 49033 and 49115.....	1 75
49115	6179	Feed Rock Shaft Crank with two 896E, for 49114.....	75
49116	6210	Looper Gate with 448C, for 49176.....	1 00
49117	6197	Needle Bar Bushing (lower) for 92-5 and 92-6 Machines.....	25
49119	—	Presser Foot Shank for 49219 and 49235.	40
49123	6199	Machine Base Oil Pipe for 49094 and 49193.....	25
49124	6199	Machine Base Oil Pipe Valve for 49094 and 49193.....	40
49125	6184	Feed Dog (double) for 92-3 Machine and for 36436 for the same machine.....	80
49126	—	Presser Foot Plate for 49128.....	75
49127	—	“ “ Shank for 49128.....	40
49128	6184	Presser Foot (hinged) complete for 49025 and 49125 for 92-3 Machine and for 49138 for 36436 for 92-5 and 92-6 Machines, Nos. 49126, 49127 and 50087D.....	80
49129	6184	Throat Plate, for double thread, for 49125	60
49130	6184	“ “ with 665D and 49078, for single thread, for 49125.....	75
49131	6182	Throat Plate, for double thread, for 49025 and 49103.....	50
49132	6182	Throat Plate with 665D and 49078, for single thread, for 49025 and 49103....	65
49138	6190	Feed Dog, for medium and light bags, for 92-5 and 92-6 Machines and for 36436 for the same machines.....	80

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
49141	6213	Arm Oil Tube with 49092, for oiling 49108 (upper bearing) for 92-4 to 92-6 Machines.....	\$ 10
49142	6193	Looper Eccentric with two 1036c.....	50
49143	6210	Cloth Plate for 49144.....	1 75
49144	—	Cloth Plate complete for 92-6 Machine, Nos. 49017H, 49053, 49054, 49143, 49145 and two 226D.....	3 30
49145	6210	Looper Gate with 448c, for 49144.....	1 00
49153	6188	Feed Dog, for small bags, for 92-3 Machine.....	60
49154	6188	Throat Plate, for double thread, for 49153	50
49155	6188	“ “ with 665D and 49078, for single thread, for 49153.....	65
49156	6207	Arm Rock Shaft.....	75
49157	6208	“ “ “ Crank (back) with 1036c and 50083c.....	1 50
49158	6207	Looper Bell Crank Pitman with 46223, 49041 and two each 171E and 1057E....	1 75
49159	—	Chain, length 13½ in., with 39575 and 39576, for 49163.....	15
Nos. 49160 TO 49162 FOR 49163 AND 49164.			
49160	6211	Lifting Lever.....	35
49161	6218	“ “ Link.....	30
49162	6218	“ “ Spring.....	03
49163	—	Knee Lifter complete, Nos. 802D, 16129, 49159 to 49162 and 50183D.....	2 25
49164	—	Foot Lifter complete, Nos. 802D, 4885, 6439, 49160 to 49162 and 50183D.....	1 80
49165	6192	Looper Carrier Hinge Pin.....	20
49166	6192	“ “ “ “ Collar with two 202F.....	15
Nos. 49168 TO 49193 FOR 92-3 MACHINE.			
*49168	—	Arm, upper and lower (solid).....	30 00
49169	6206	“ Oil Tube with 49013, for oiling 49049.....	20
49170	6206	Arm Oil Tube with 2653 and 49174, for oiling 46223.....	10
49171	6206	Arm Oil Tube with 2653 and 49174, for oiling 49108 (upper bearing).....	10
49172	6206	Arm Oil Tube with 2653 and 49174, for oiling 49023.....	10
49173	6206	Arm Oil Tube Oil Cup Holder with 54897, for 49169.....	25

NUMERICAL LIST OF PARTS

59

NO.	PLATE	NAME	EACH
49174	6206	Arm Oil Tube Packing (braided cotton) for 49170 to 49172.....	\$ 01
49175	6210	Cloth Plate with three 46224, for 49176..	1 90
49176	—	Cloth Plate complete, Nos. 49017H, 49053, 49054, 49116, 49175 and two 226D.....	3 45
49177	6211	Feed Rock Shaft for 49178.....	1 00
49178	—	Feed Rock Shaft complete, Nos. 49035, 49177 and 49179.....	1 85
49179	6209	Feed Rock Shaft Oil Cup with 49013, for 49178.....	10
49180	6212	Oil Cup for 49181.....	85
49181	—	Oil Cup complete, Nos. 195E, 49180, 49182 to 49184 and two 175E.....	1 25
49182	6212	Oil Cup Cover for 49181.....	15
49183	6206	" " Oil Hole Cover for 49181.....	10
49184	6212	" " " Strainer for 49181.....	10
49185	6212	" Pipe with 49191, for oiling 49108....	45
49186	6212	" " " " " " 49012.....	45
49187	6212	" " " " " " 49011 and 49014.....	60
49188	6206	Oil Pipe Connection with 49189 and two 198D, for 49187, for oiling 49014.....	50
*49189	—	Oil Pipe Connection Cap for 49188.....	—
49190	6206	" " Coupling.....	08
49191	6206	" " Sleeve for 49185 to 49187.....	05
49192	6206	Thread Guide (double) side of arm....	40
49193	6217	Machine Base with 49123, 49124 and three each 663E and 49096.....	2 50
Nos. 49195 TO 49200 FOR 92-4 AND 92-5 MACHINES.			
49195	6210	Cloth Plate for 49196.....	1 75
49196	—	Cloth Plate complete, Nos. 49017H, 49053, 49054, 49195, 49212 and two 226D....	3 30
49197	6213	Feed Bar with 220D and 457C.....	75
49198	6213	" Connecting Rod with 4784, 49199, 49241 and two 896E.....	1 50
*49199	—	Feed Connecting Rod Cap for 49198....	—
49200	6213	" " " Hinge Pin.....	10
49201	6189	" Dog for 92-4 Machine and for 36436 for the same machine.....	1 00
Nos. 49202 TO 49208 FOR 92-4 AND 92-5 MACHINES.			
49202	6213	Feed Regulator with 457C and 914C....	75
49203	6213	" " Connection.....	50

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
49204	6213	Feed Regulating Screw Friction Washer..\$	01
49205	6213	“ “ “ Washer (fibre)...	02
49206	6213	“ “ “ “ (steel)...	02
49207	—	Feed Rock Shaft complete, Nos. 49033 and 49208.....	4 00
49208	6213	Feed Rock Shaft Crank with two 896E, for 49207.....	3 00
49209	6214	Looper (double thread) with 590D and 49213, for 92-4 Machine.....	90
49210	6214	Looper (single thread) for 92-4 Machine..	90
49211	6214	“ Carrier with 4784 and two each 175E and 1147C, for 92-4 and 92-5 Machines.....	1 00
49212	6210	Looper Gate with 448C, for 49196.....	1 00
49213	6214	“ Thread Guard for 49209 and 49233.....	10
Nos. 49214 TO 49219 FOR 92-4 MACHINE.			
49214	6214	Needle Bar (hollow).....	75
49215	6214	“ “ Bushing (lower).....	25
49216	6214	“ “ “ (upper).....	25
49217	6214	“ “ Connecting Stud with 193E..	50
49218	—	Presser Foot Plate for 49219.....	1 00
49219	6189	Presser Foot (hinged) complete for 49201, Nos. 49119, 49218 and 50087D.....	1 10
Nos. 49220 TO 49224 FOR 92-4 TO 92-6 MACHINES.			
49220	6214	Tension (under thread) Thread Guide...	25
49220	6214	“ (upper thread) Thread Guide....	25
49221	6214	Thread (under) Eyelet.....	10
49222	6214	“ “ Take-up with 49223 and 49224.....	75
49223	6214	Thread (under) Take-up Roller for 49222	10
49223	6214	“ (upper) Take-up Roller for 49226.	10
49224	6214	“ (under) Take-up Roller Pin for 49222.....	01
49224	6214	Thread (upper) Take-up Roller Pin for 49226.....	01
49225	6214	Thread (upper) Take-up Arm with 457C, for 49227.....	80
49226	6214	Thread (upper) Take-up Roller Bracket with 49223 and 49224, for 49227 and 49246.....	70
49227	—	Thread (upper) Take-up complete for 92-4 Machine, Nos. 207D, 49225 and 49226.	1 50
49228	6189	Throat Plate, for double thread, for 49201	1 00

NUMERICAL LIST OF PARTS

61

NO.	PLATE	NAME	EACH
49229	6189	Throat Plate with 665D and 49078, for single thread, for 49201.....	\$ 1 15
*49231	—	Arm, upper and lower (solid) for 92-5 and 92-6 Machines.....	30 00
49232	6215	Arm Rock Shaft Collar and Thread (upper) Nipper Eccentric with two 446c, for 92-5 and 92-6 Machines.....	75
49233	6215	Looper (double thread) with 590D and 49213, for 92-5 and 92-6 Machines.....	90
49234	—	Presser Foot Plate for 49235.....	1 00
49235	6190	Presser Foot (hinged) complete for 49138 for 92-5 and 92-6 Machines and for 49138 for 36436 for the same machines, Nos. 49119, 49234 and 50087D.....	1 10

Nos. 49236 TO 49240 FOR 92-5 AND 92-6
MACHINES.

49236	6215	Thread (upper) Nipper Bracket.....	30
49237	6215	“ “ “ Releasing Stud...	10
49238	6215	“ “ “ Thread Guide....	25
49239	6190	Throat Plate, for double thread, for 49138	60
49240	6190	“ “ with 665D and 49078, for single thread, for 49138.....	75
49241	6213	Feed Connecting Rod Oil Pad Pin for 49198.....	per 100 25
49242	6201	Wrench for 1740 (Accessories).....	10
49245	6215	Thread (upper) Take-up Arm with 457c, for 49246.....	80
49246	—	Thread (upper) Take-up complete for 92-5 and 92-6 Machines, Nos. 207D, 49226 and 49245.....	1 50
49248	6193	Looper Carrier Rock Shaft Crank (front) with 157D and two 1324E.....	1 00
50069c	6208	Looper Bell Crank Pitman Ball Screw Stud (upper).....	20
50070c	6192	Looper Bell Crank Pitman Ball Screw Stud (lower).....	15
50070c	6192	Looper Carrier Pitman Ball Screw Stud (right) for 49089.....	15
50083c	6208	Arm Rock Shaft Crank (back) Position Screw for 49157.....	05
50083c	6193	Looper Carrier Rock Shaft Crank (back) Set Screw for 49048.....	05
50084c	6208	Arm Rock Shaft Crank (front) Set Screw for 49008.....	04
50085f	6198	Cloth Plate Screw for 92-3 Machine.....	08

NO.	PLATE	NAME	EACH
50086c	6181	Feed Regulating Screw Stud for 92-3 and 92-6 Machines.....	\$ 22
50087d	6198	Presser Foot Hinge Screw for 49070, 49128, 49219 and 49235.....	06
50133c	6215	Thread (upper) Nipper Screw Stud for 92-5 and 92-6 Machines.....	12
50144j	6199	Machine Base Thumb Screw with 49095.	25
50144j	6199	“ Thumb Screw with 49095, for power table (Accessories).....	25
50147c	6198	Crank Connecting Rod Hinge Screw.....	20
50175f	6213	Cloth Plate Screw for 92-4 to 92-6 Machines.....	08
50183d	6218	Lifting Lever Link Hinge Screw for 49163 and 49164.....	08
50249e	6206	Arm Rotary Shaft Oil Pad Cap Screw for 92-3 Machine.....	04
50282e	6208	Arm Rock Shaft Crank (front) Position Screw for 49008.....	05
50331e	6213	Feed Regulating Screw for 92-4 and 92-5 Machines.....	12
54738	6215	Thread (upper) Nipper Spring for 92-5 and 92-6 Machines.....	05
54897	6206	Arm Oil Tube Oil Cup for 49173.....	10

ILLUSTRATIONS OF PARTS
FOR
MACHINES
Nos. 92-3, 92-4, 92-5 and 92-6

PLATE 2837—ONE-FOURTH SIZE

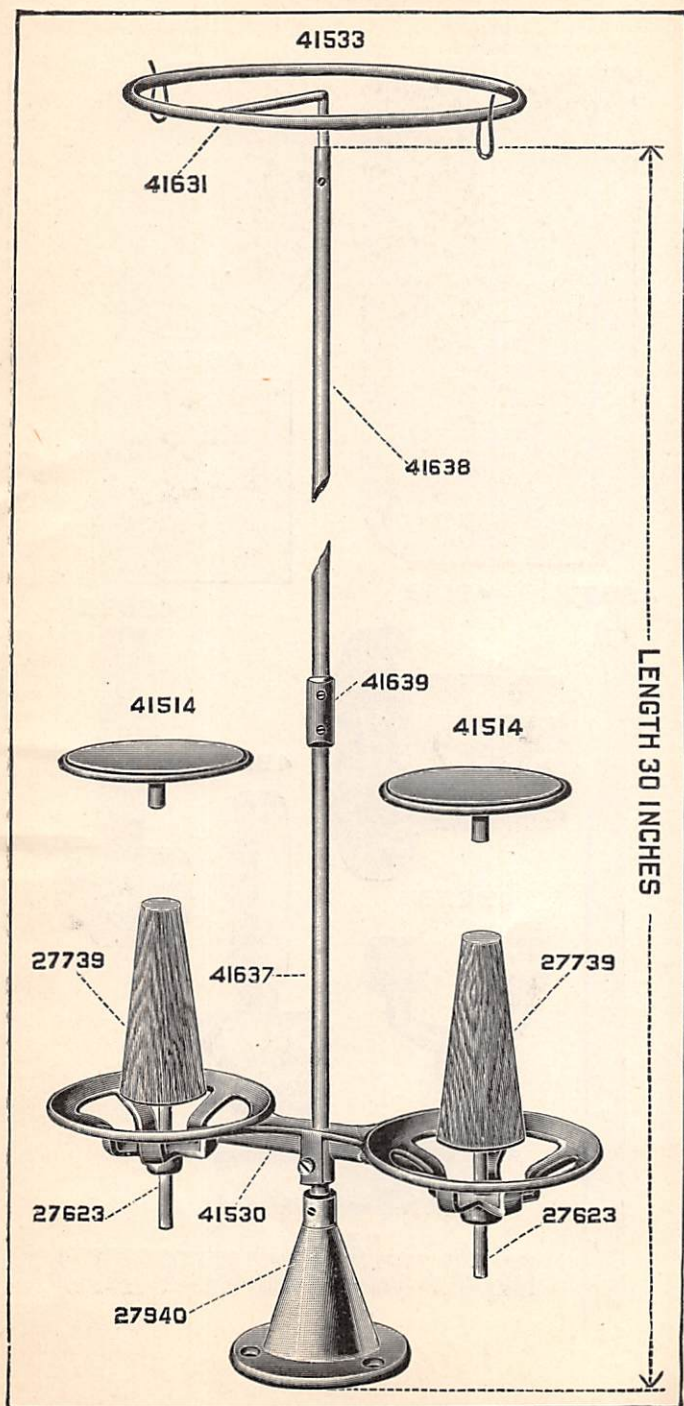 


PLATE 6179—ONE-HALF SIZE

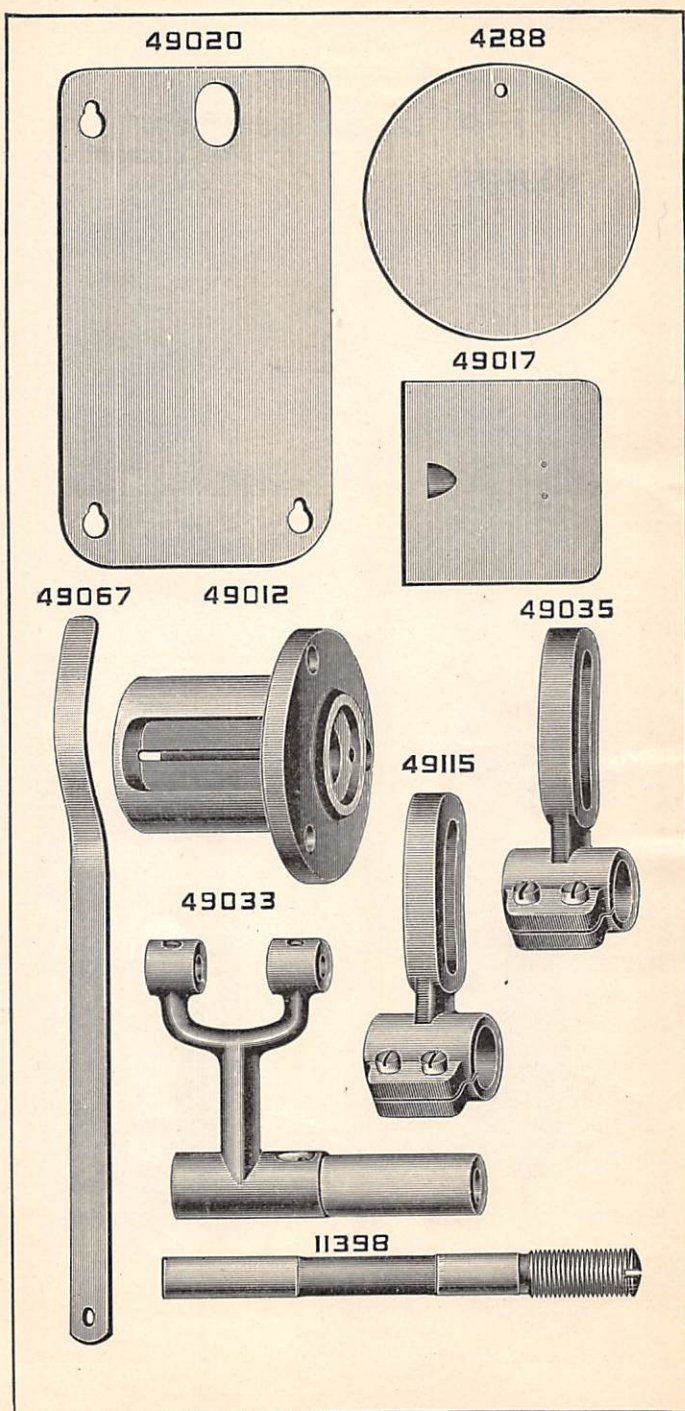 


PLATE 6181—FULL SIZE

50086



49031



49032



448



 
1714




430




49011

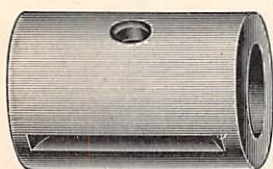

49014

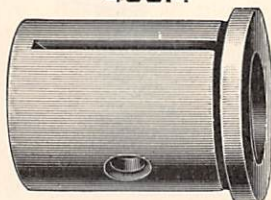 

49084

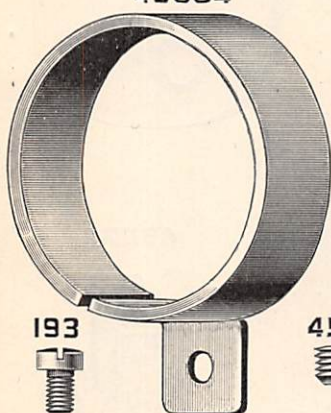 

49053 49054



193



453



38419



725



226



27398



49109



49078



665



PLATE 6182—FULL SIZE

 
49025




49103



49132

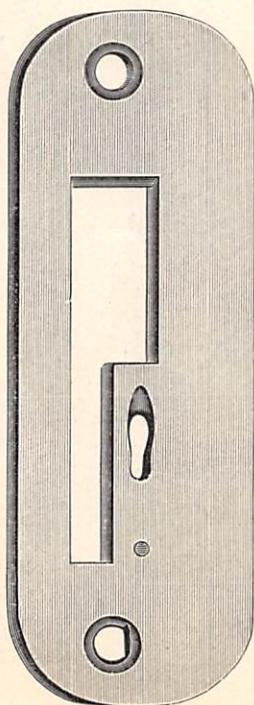

49131

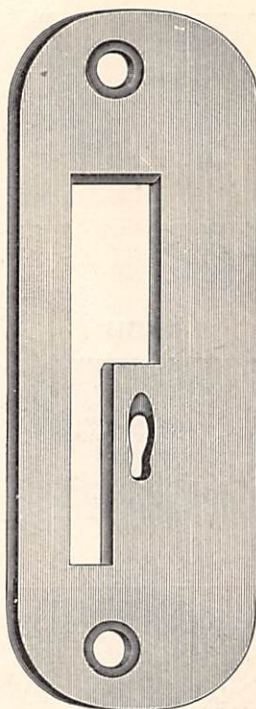 

49070



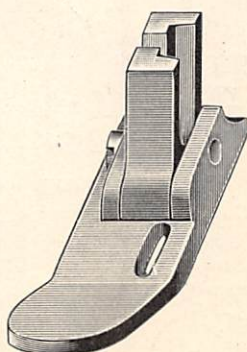 


PLATE 6184—FULL SIZE

 
49129

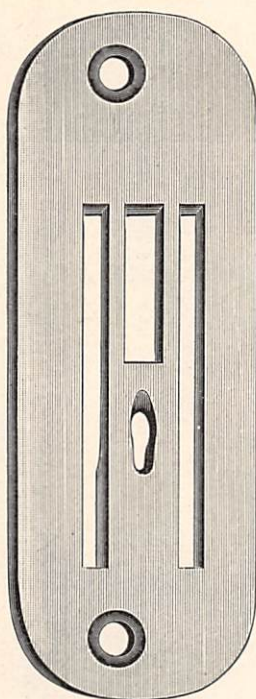

49125

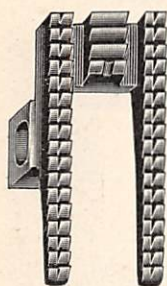 

49130

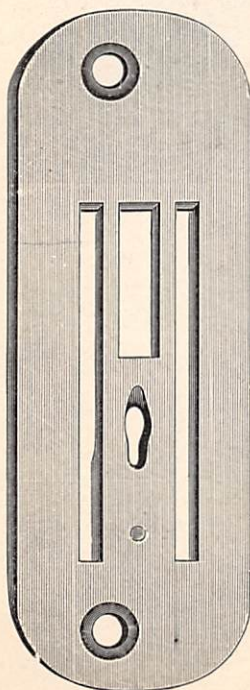 

49128


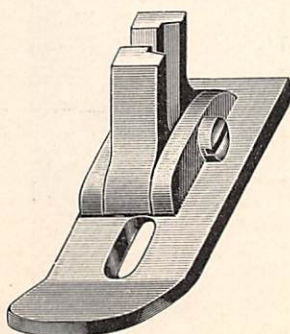 


PLATE 6188—FULL SIZE

 49154



49153

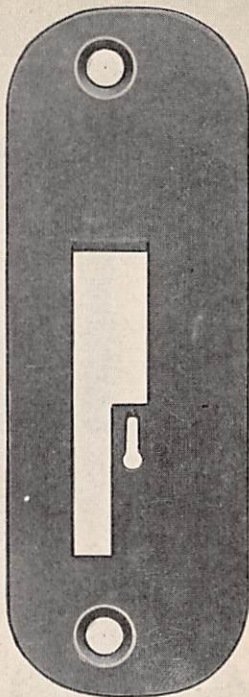

49155


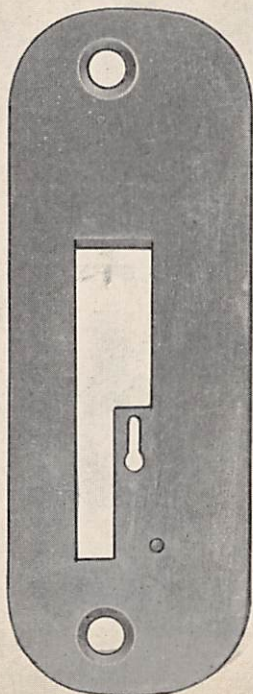 


PLATE 6189—FULL SIZE

 
49201



49228

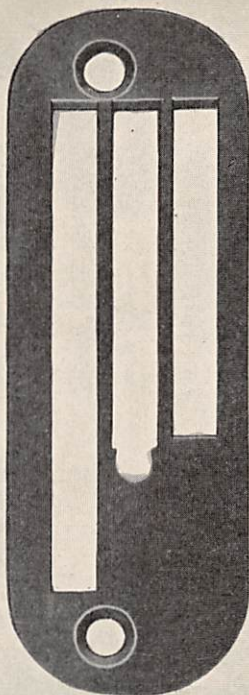

 49229

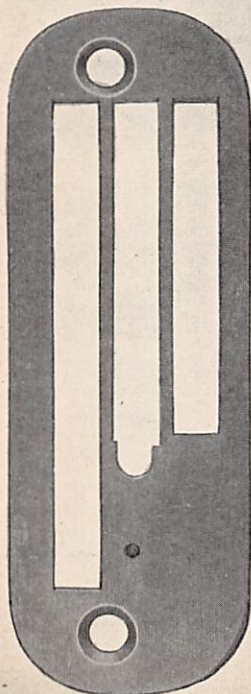

49219


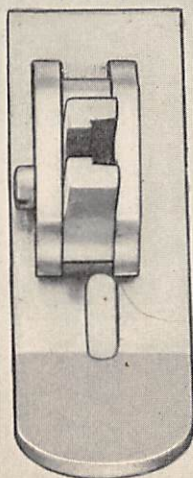 


PLATE 6190—FULL SIZE

 
49138



49239

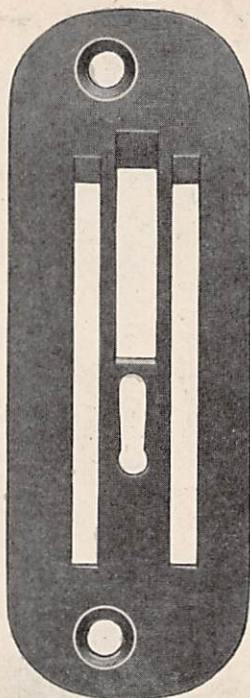

 49240

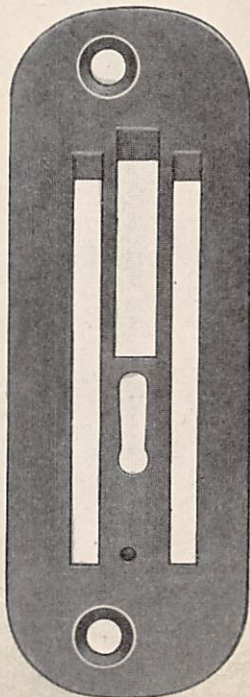

49235

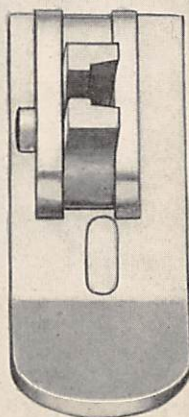 


PLATE 6192—FULL SIZE

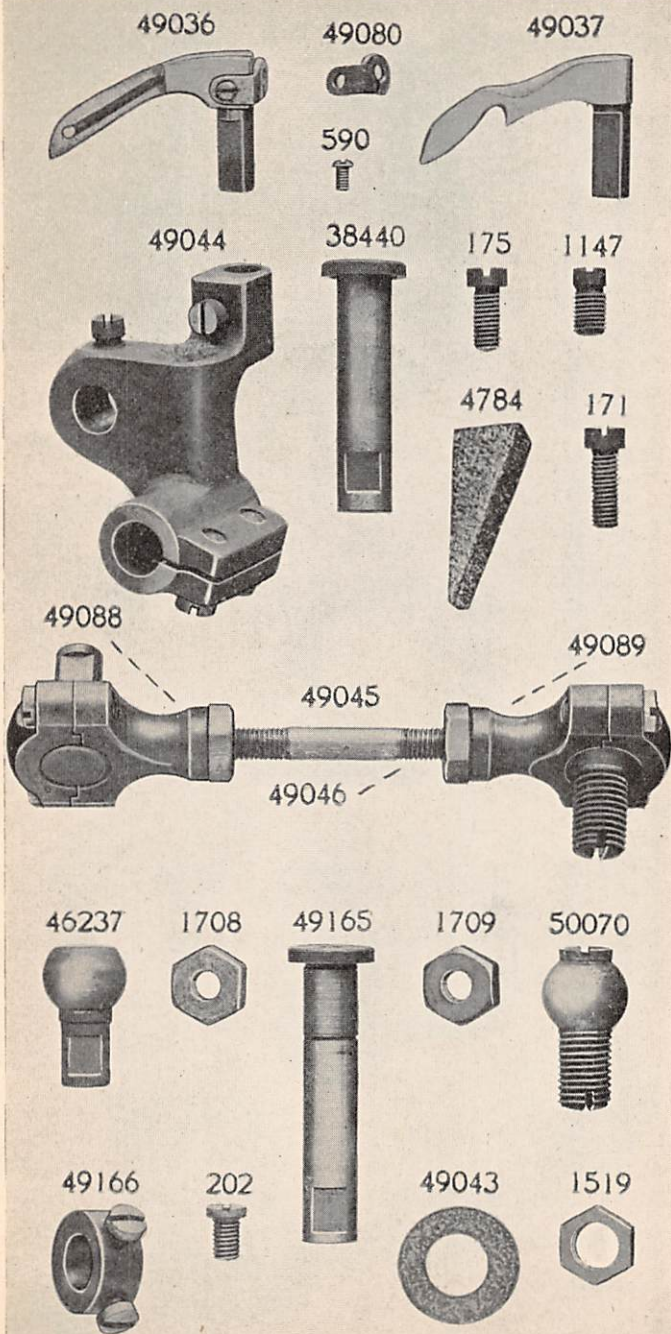 


PLATE 6193—FULL SIZE

 
49047




453



49048

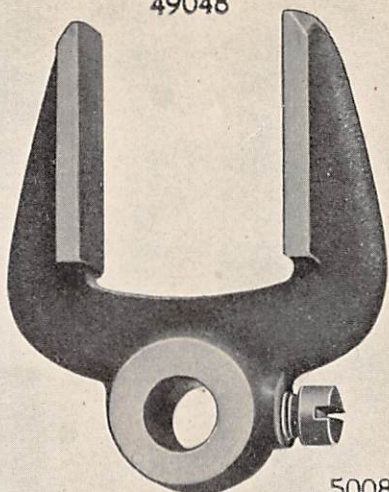

49049

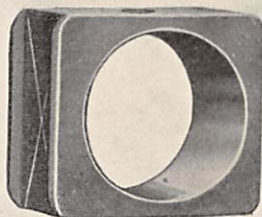 


50083



1036



 49142

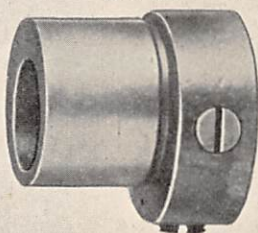

157



1324



11411



49248

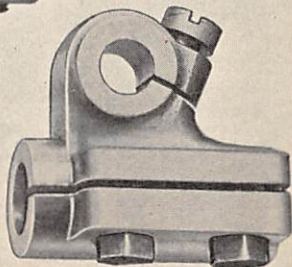 


PLATE 6194—FULL SIZE

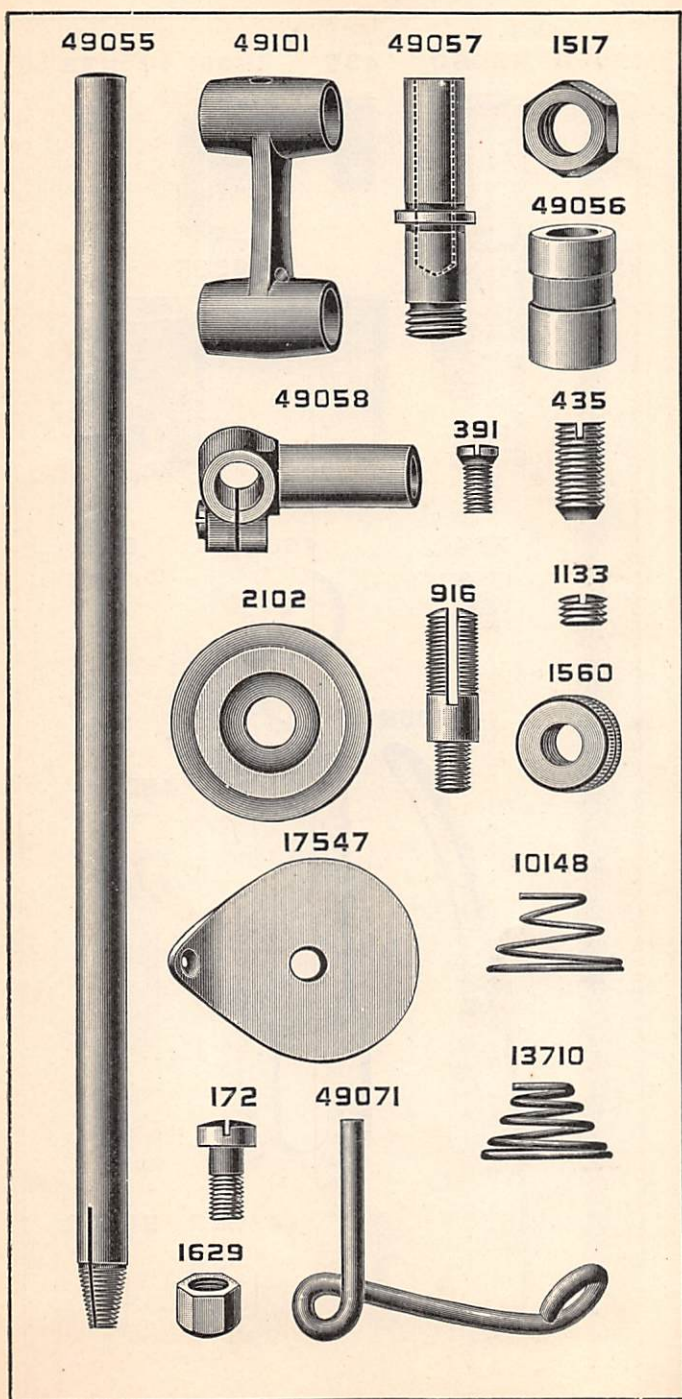 


PLATE 6195—FULL SIZE

49059



49060



435



 
49061



1133



49065

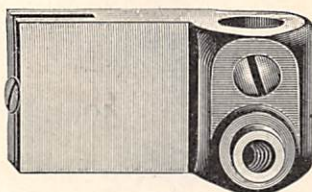


212



724



 49066

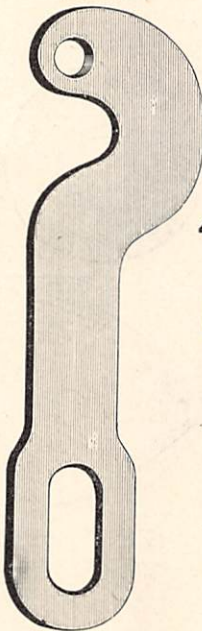


892




453



 49062

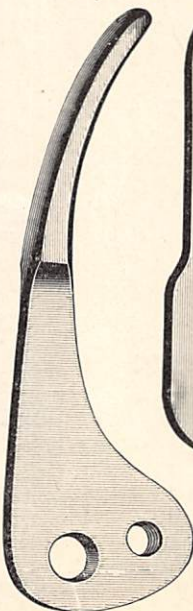

49064

 

49063



38468



PLATE 6196—FULL SIZE

 
49072 190



39541



49073

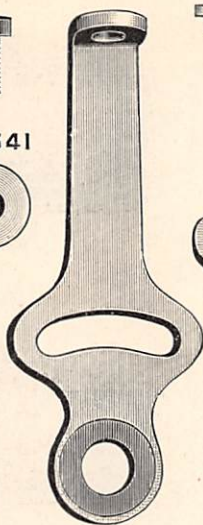


974



914



 49075

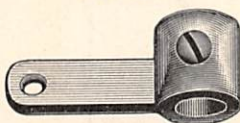 


457

 


PLATE 6197—FULL SIZE

 
49110

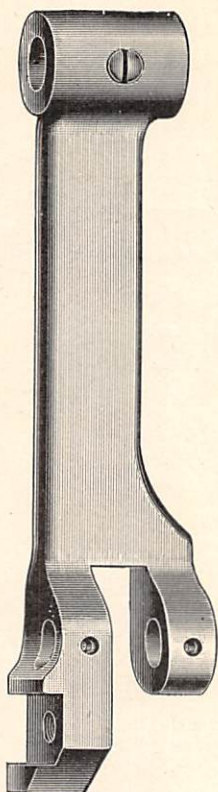

49112

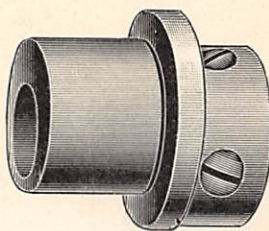

49113

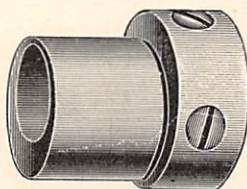

49117



PLATE 6198—FULL SIZE



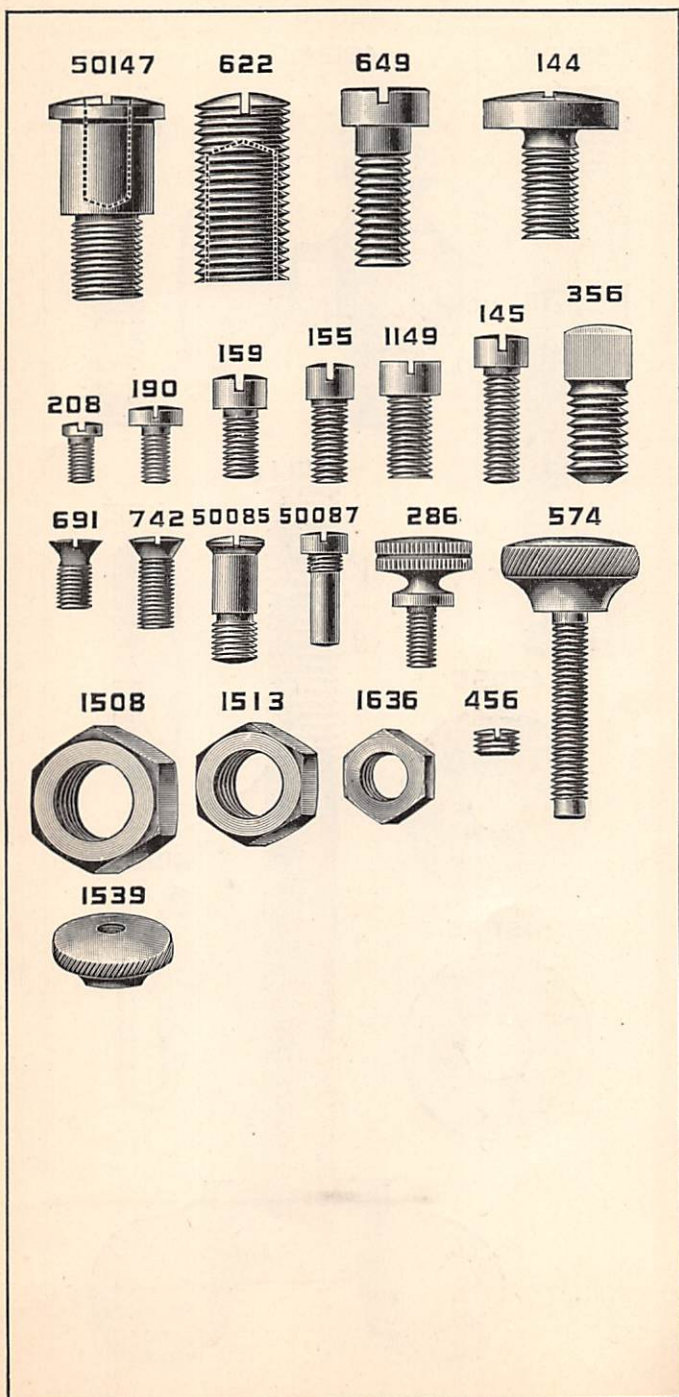 


PLATE 6199—FULL SIZE

 
49123



49124

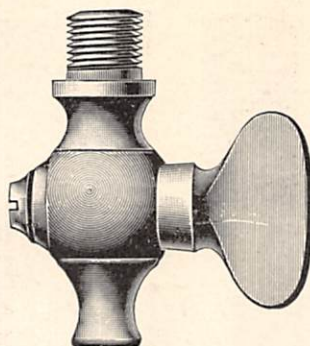 

663

 

50144



49096



41515



49095



41569



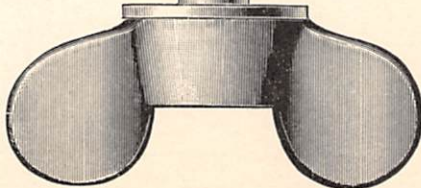 


PLATE 6200—FULL SIZE

 
36436

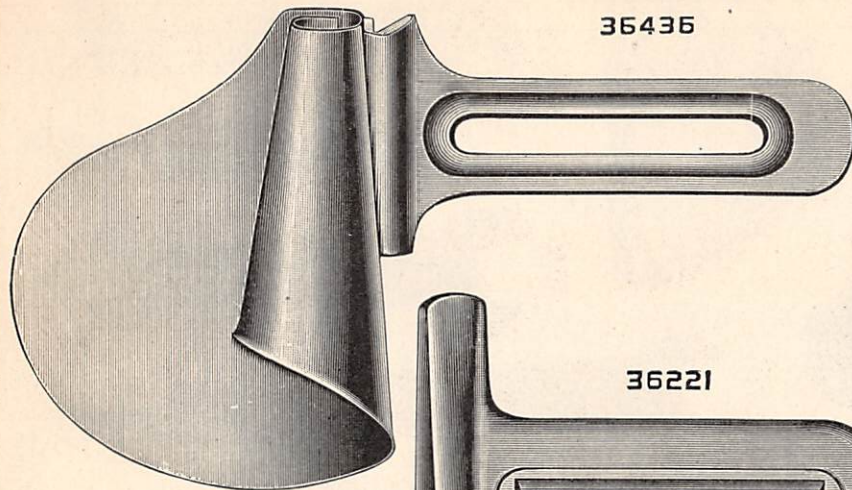

36421

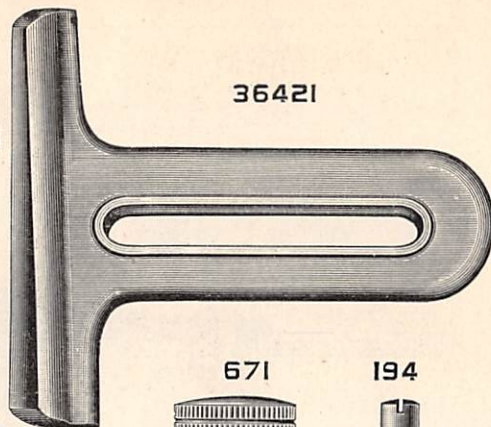 

36221

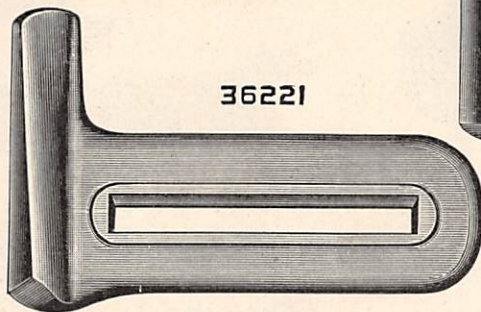 

671



194



PLATE 6201—ONE-HALF SIZE

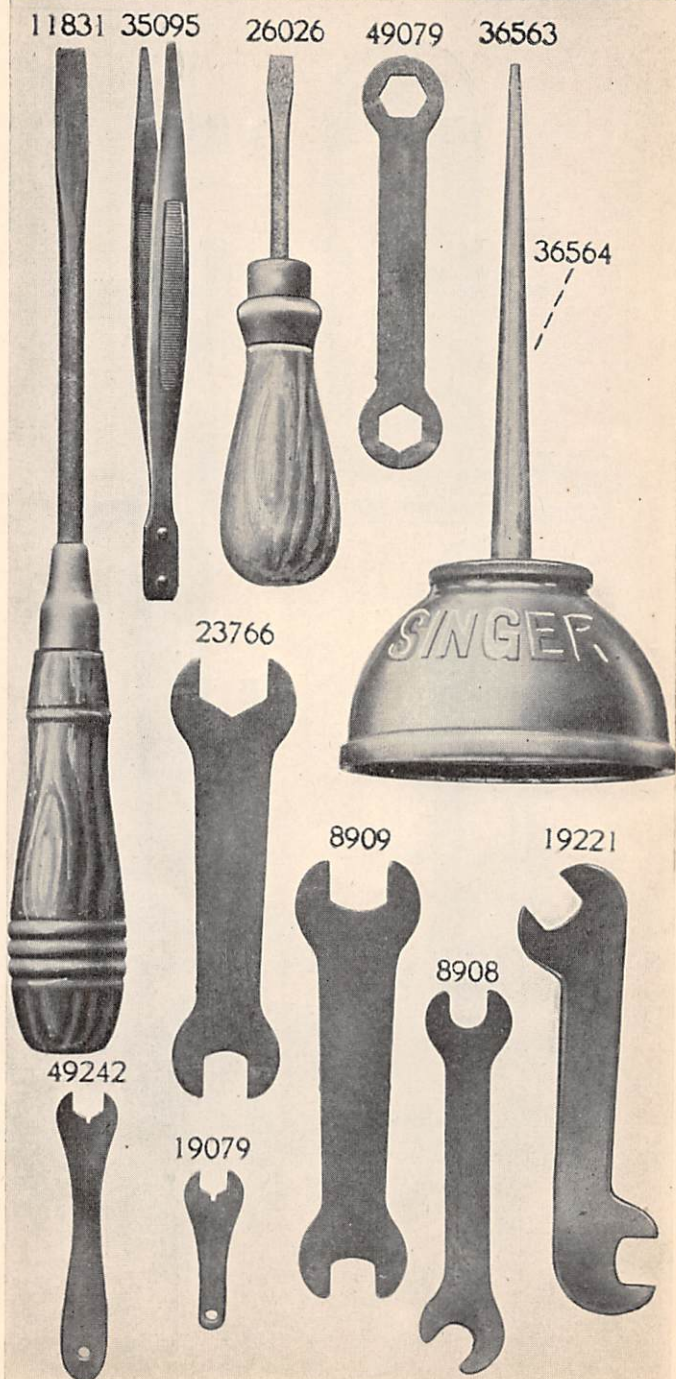 


PLATE 6205—FULL SIZE

49093



49013



49091



18130



11119



49092



29599



39575



39576



PLATE 6206—FULL SIZE

49169



54897



49170



49173



 
49171



49174



49172

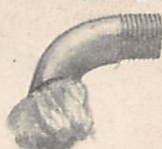

2653



690



49190



1733



49188



 
198



49191




49192

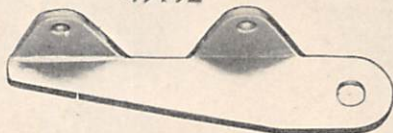

46224



 49183

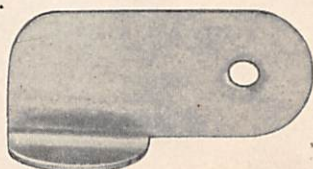

50249



195



PLATE 6207—ONE-HALF SIZE

 
49097




49156




49158

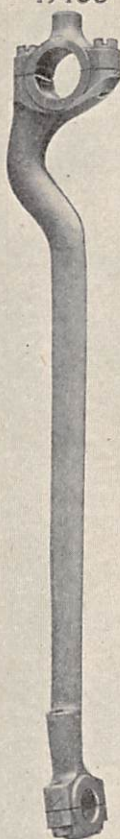

49108

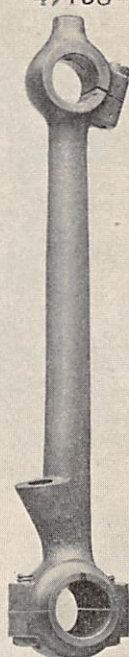 

49038

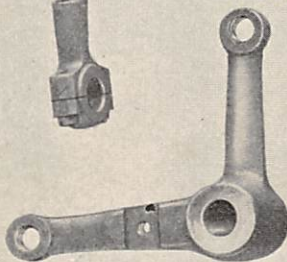 

49039



17677


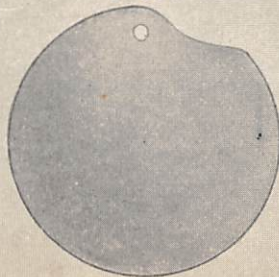 


PLATE 6208—FULL SIZE

 
49003



49008

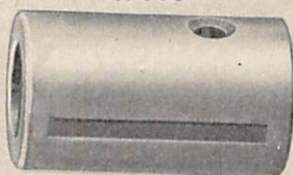

 49004

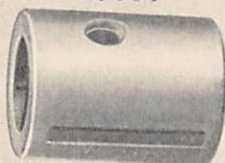

50084



 
50282




446



49157

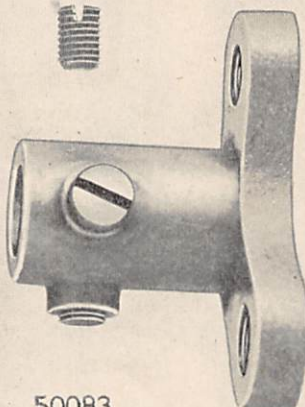

50069

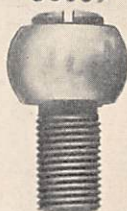 

1619



 
50083




1036



49006

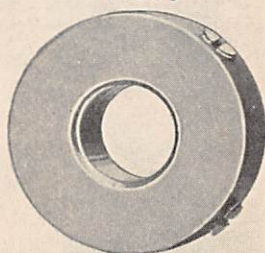

49005

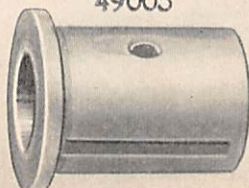 

430



443



PLATE 6209—FULL SIZE


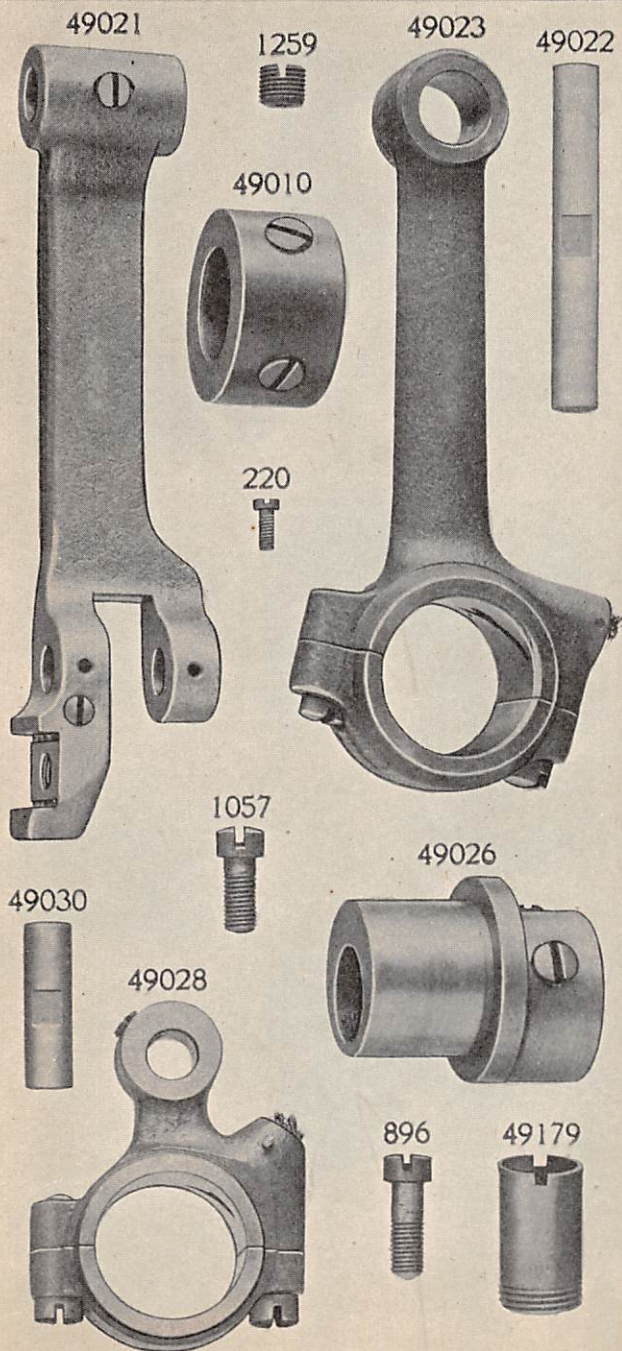 


PLATE 6210—ONE-FOURTH SIZE

 
49175




23873

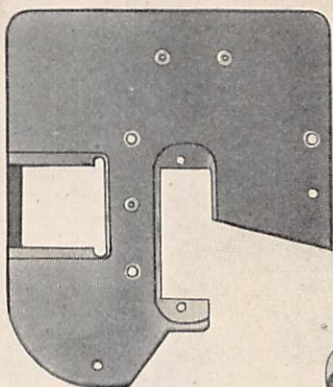

 
49116

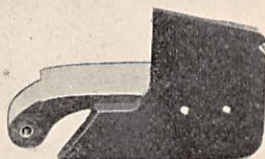


49195

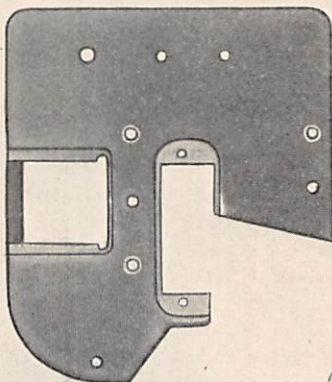 


46220

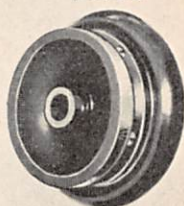 

49212

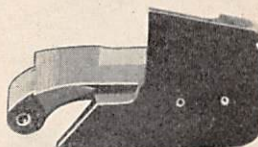 

49143

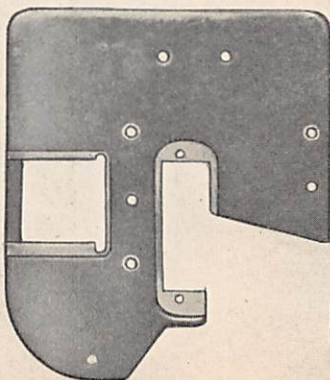 

49145

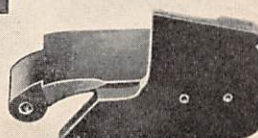 


PLATE 6211—ONE-HALF SIZE

49105



49160



49177


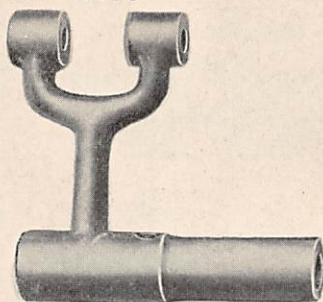 


PLATE 6212—ONE-HALF SIZE

 
49182



49184

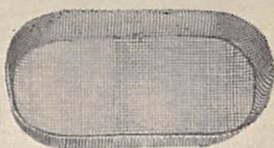

 49180

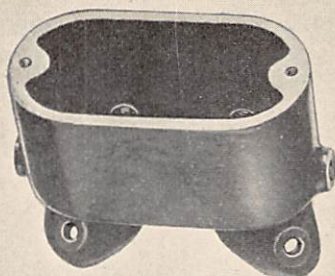

49187



49186



49185



PLATE 6213—FULL SIZE


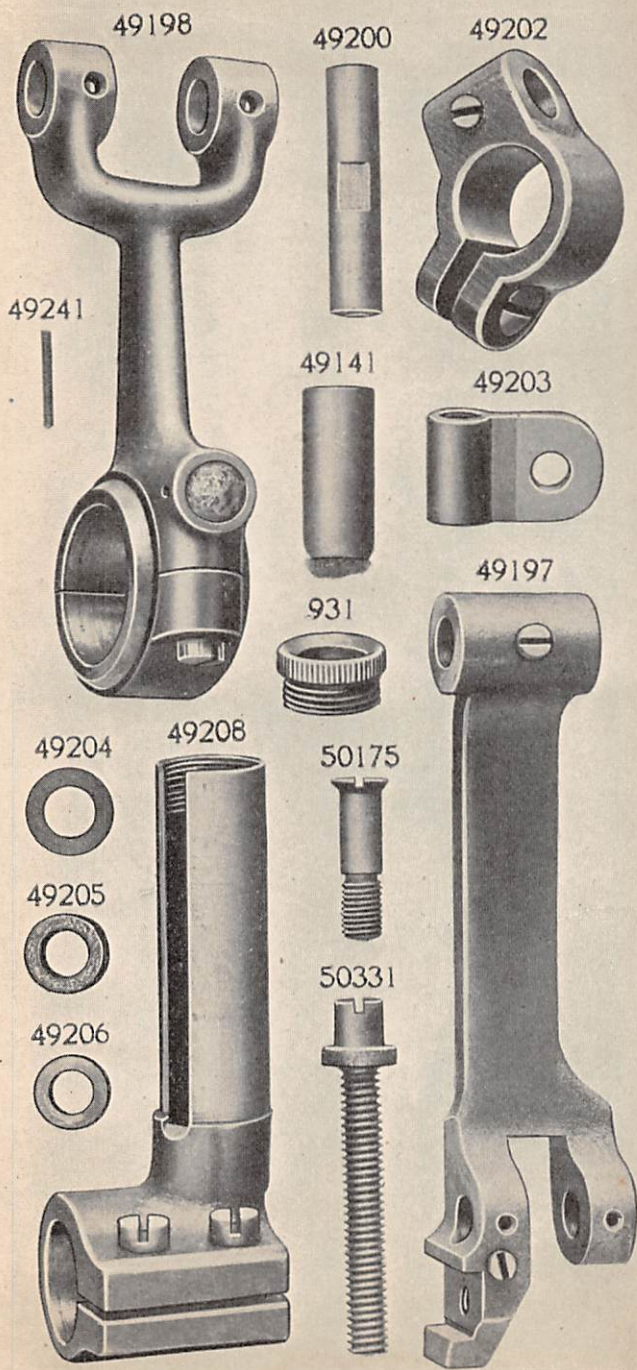 


PLATE 6214—FULL SIZE

 
49214



49209

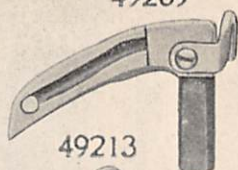

 
49211

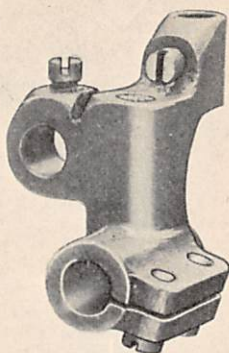

49213



 49210

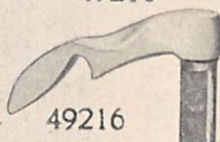


49216



49217




 49220

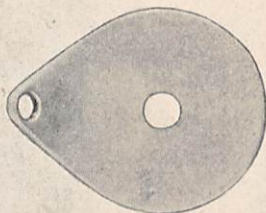

49221

 49222

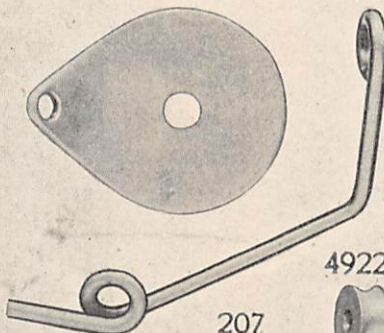

49223



207



49215



49224



49226



49225



1740

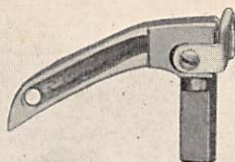 


PLATE 6215—FULL SIZE

 
49245



49233




49236

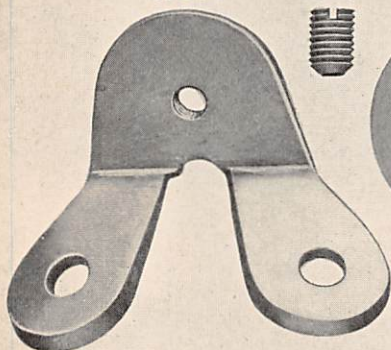

446



 49232

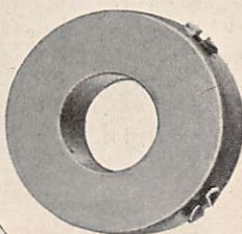


181



50133



 
54738

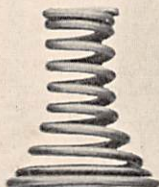


1560



 2102

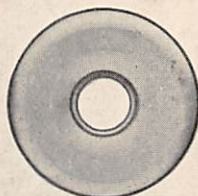

49238

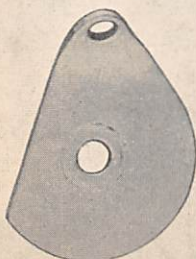 

49237



32572

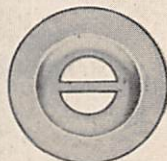 


PLATE 6216—ONE-FOURTH SIZE

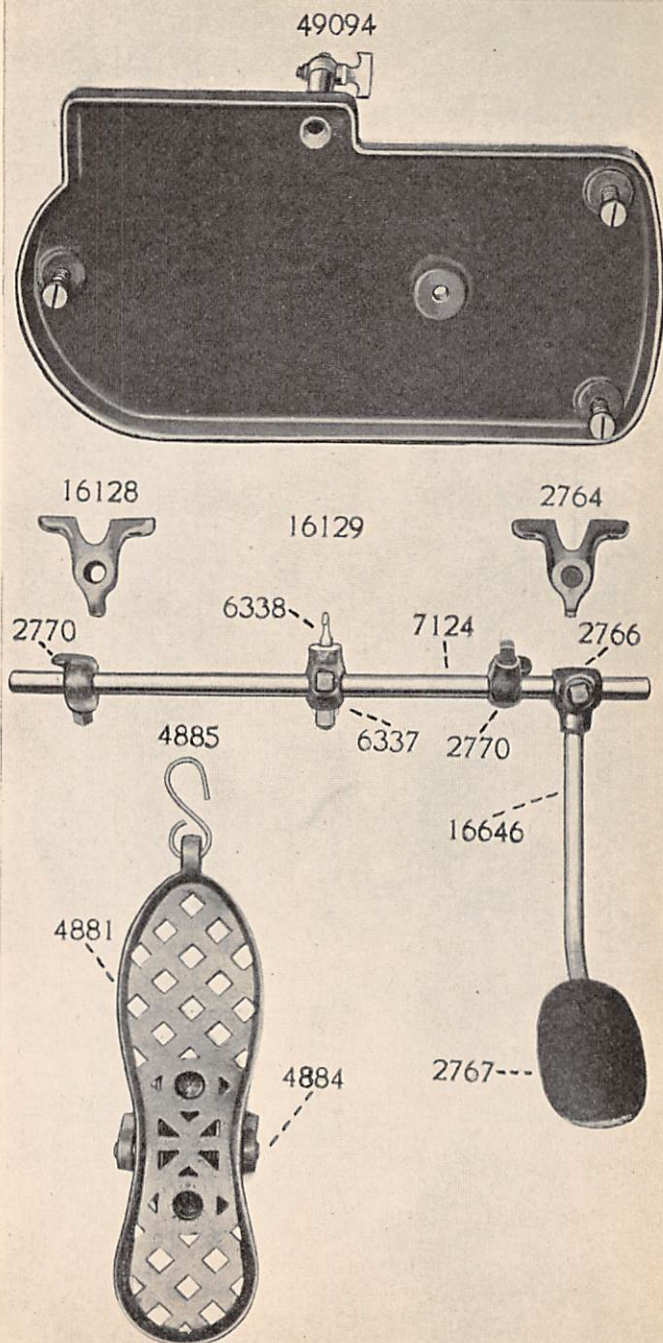 


PLATE 6217—ONE-FOURTH SIZE

49193

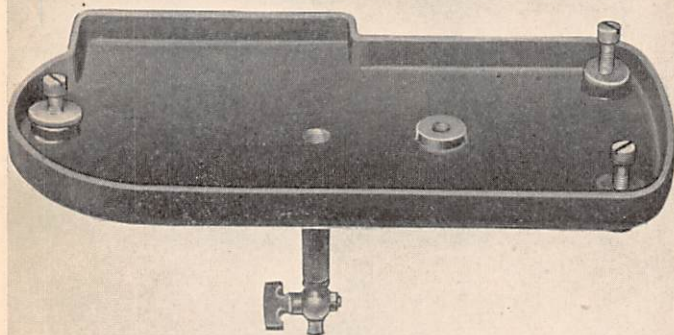 


PLATE 6218—FULL SIZE

