

PRICE LIST

OF

PARTS



MACHINE NO. 95-11

THE SINGER MANUFACTURING COMPANY

COPYRIGHT, U. S. A., 1917, BY THE SINGER MANUFACTURING CO.
ALL RIGHTS RESERVED FOR ALL COUNTRIES.

INDEX

	PAGE
ACCESSORIES.....	16
BOBBIN WINDERS.....	17
FINGER GUARD.....	16
FOOT LIFTER PARTS.....	19
IRON BASE.....	16
KNEE LIFTER PARTS.....	20
MACHINE No. 95-11.....	9
NUMERICAL LIST OF PARTS.....	23
OBSOLETE PARTS.....	22
SPOOL HOLDER (DISC).....	21
THREAD UNWINDER.....	21

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the part **NUMBER** in the **FIRST** column.

The number stamped on a Sewing Machine part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not Polished.
- F. Hardened and Polished.
- G.
- H. Blued.
- J. Plated only.
- K. Hardened and Plated.
- L. Brass or Gilt.
- M. Oxidized.
- P. Japanned.

These letters **MUST BE USED** *when* they appear in the list, and **AFTER** the number *as* in the list.

In this series

- 1 to 1500 and 50001 to 51500 are Screw Numbers.
- 1501 to 1800 are Nut Numbers.
- 1801 to 2000 are Roller Numbers.
- 2001 to 50000 and 52001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are **NOT TO BE USED** in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.



MACHINE No. 95-11

LIST OF PARTS COMPLETE FOR MACHINE NO. 95-11

FOR COLLAR AND CUFF WORK. DROP FEED

NO.	PLATE	NAME	EACH
*52077	—	Arm with two 56015.....	\$4 25
16532	5900	" Dowel Pin.....	02
24131	5900	" Oil Tube with 29599, for oiling 24036.....	06
52084	5900	Arm Oil Tube with 29599, for oiling 24040.....	06
18130	5900	Arm Oil Tube with 29599, for oiling 52022.....	06
12454	5900	Arm Oil Tube with 29599, for oiling 52024.....	06
24131	5900	Arm Oil Tube with 29599, for oiling 12430, for 52043.....	06
29599	5900	Arm Oil Tube Packing (felt).....per 100	25
116E	5875	" Screw (back).....	08
868E	5875	" " (front).....	10
52058	5895	" Shaft (horizontal).....	1 00
52059	5894	" " " Flanged Bushing (back).....	50
56006	5900	Arm Shaft (horizontal) Flanged Bushing (back) Oil Pad (braided cotton).....	01
446c	5899	Arm Shaft (horizontal) Flanged Bushing (back) Set Screw.....	03
52078	5894	Arm Shaft (horizontal) Flanged Bushing (front).....	50
56006	5900	Arm Shaft (horizontal) Flanged Bushing (front) Oil Pad (braided cotton).....	01
435c	5899	Arm Shaft (horizontal) Flanged Bushing (front) Set Screw.....	04
52060	5898	Arm Shaft (horizontal) Gear with two 1036c.....	1 35
52071	5894	Arm Shaft (horizontal) Gear Case (two pieces) with 121E and 50234D.....	75
50234D	5899	Arm Shaft (horizontal) Gear Case Plug Screw.....	06
121E	5899	Arm Shaft (horizontal) Gear Case Screw..	06
1036c	5861	" " " " Set Screw..	03
144D	5875	" " " " Screw.....	08

NO.	PLATE	NAME	EACH
52062	5898	Arm Shaft (upright).....	\$ 50
56099	5898	“ “ “ Bushing (lower)....	35
432C	5898	“ “ “ “ “ Set	
		Screw.....	04
56100	5898	Arm Shaft (upright) Bushing (upper)....	50
1149C	5875	“ “ “ “ “ Set	
		Screw.....	04
56013	5898	Arm Shaft (upright) Gear (lower) with two 1253c.....	75
1253C	5869	Arm Shaft (upright) Gear (lower) Set	
		Screw.....	03
56101	5898	Arm Shaft (upright) Gear (upper) with two 1253c.....	75
1253C	5869	Arm Shaft (upright) Gear (upper) Set	
		Screw.....	03
56015	5900	Arm Shaft (upright) Oil Tube (lower)....	05
56015	5900	“ “ “ “ “ (upper)....	05
54897	5900	“ “ Front Bearing Oil Cup.....	10
12480	5894	“ Side Cap.....	05
219D	5875	“ “ “ Screw.....	02
12193	5894	“ “ Cover.....	10
50053D	5899	“ “ “ Thumb Screw.....	10
12403	5900	“ Spool Pin and Thread Eyelet.....	05
8879	5936	“ “ “ Washer (cloth).....	01
52042	5896	“ Top Cover.....	15
52043	5896	“ “ “ 52042 with 12403 and 24131.....	25
180D	5875	Arm Top Cover Screw.....	03
52005	5893	Balance Wheel (power) light rim, 2½ in. pulley, with two 448c.....	80
52081	5893	Balance Wheel (stand) heavy rim, 3 in. pulley, with two 448c.....	80
52063	5894	Balance Wheel Oil Cover.....	10
210D	5875	“ “ “ “ “ Screw.....	04
448C	5875	“ “ “ “ “ Set Screw.....	03
*52064	—	Bed.....	4 50
12431	—	“ Slide.....	25
12432	5894	Bed Slide complete, Nos. 4307, 12431 and two 725E.....	30
4307	5894	Bed Slide Spring.....	05
725E	5875	“ “ “ “ “ Screw.....	02
52051	—	Face Plate.....	50
52052	5894	Face Plate complete, Nos. 52051, 52053, 56086 and two 226D.....	60
190D	5875	Face Plate Screw.....	03
52053	5900	“ “ Thread Guard (lower).....	02

PARTS FOR MACHINE NO. 95-11

11

NO.	PLATE	NAME	EACH
226D	5900	Face Plate Thread Guard (lower) Screw.	\$ 02
56086	5900	" " " " (upper).....	02
226D	5900	" " " " Screw..	02
50190D	5899	" " Thumb Screw.....	10
52011	5896	Feed Bar.....	40
313C	5875	" " Screw Centre.....	04
1519E	5872	" " " " Nut.....	03
3033	5897	" Connecting Link.....	20
375C	5897	" " " " Hinge Screw.....	12
1518E	5897	" " " " " " Nut..	04
52073	5897	" " " " " Stud.....	12
50083C	5897	" " " " " " S e t	
		Screw.....	05
20163	5857	Feed Dog, $\frac{1}{16}$ in. stitch.....	40
20164	5857	" " $\frac{1}{8}$ in. stitch.....	40
50117E	5875	" " Screw.....	02
24035	5895	" and Feed Lifting Eccentric with	
		448c.....	50
448C	5875	Feed and Feed Lifting Eccentric Set	
		Screw.....	03
24036	5896	Feed and Feed Lifting Eccentric Sleeve..	75
24037	5895	" Forked Connection.....	75
375C	5897	" " " " Hinge Screw....	12
1518E	5897	" " " " " " Nut	04
52065	5895	" Lifting Rock Shaft.....	40
52066	—	Feed Lifting Rock Shaft complete, Nos.	
		12376 and 52065.....	80
12430	5896	Feed Lifting Rock Shaft Connecting Rod	
		(steel) with 12204 and two 966E.....	80
*12204	—	Feed Lifting Rock Shaft Connecting Rod	
		Cap.....	—
966E	5899	Feed Lifting Rock Shaft Connecting Rod	
		Cap Screw.....	04
375C	5897	Feed Lifting Rock Shaft Connecting Rod	
		Hinge Screw.....	12
1518E	5897	Feed Lifting Rock Shaft Connecting Rod	
		Hinge Screw Nut.....	04
12376	5897	Feed Lifting Rock Shaft Crank with 157E	
		and 1813.....	40
157E	5897	Feed Lifting Rock Shaft Crank Clamping	
		Screw.....	04
1813	5897	Feed Lifting Rock Shaft Crank Roller and	
		Stud.....	20
50191C	5899	Feed Lifting Rock Shaft Screw Centre...	06
1513E	5872	" " " " " " Nut	05
52074	5897	" Regulator with 50083c.....	50

PARTS FOR MACHINE NO. 95-11

NO.	PLATE	NAME	EACH
1128E	5897	Feed Regulator Hinge Screw.....	\$ 12
818D	5897	“ “ Thumb Screw.....	10
21351	5874	“ “ “ “ Stop.....	20
52068	5895	“ Rock Shaft.....	40
52069	—	Feed Rock Shaft complete, Nos. 29633 and 52068.....	65
29633	5897	Feed Rock Shaft Crank with 157E.....	25
157E	5897	“ “ “ “ Clamping Screw.	04
50191C	5899	“ “ “ Screw Centre.....	06
1513E	5872	“ “ “ “ “ Nut.....	05
25873	6138	Guide (combination).....	15
284D	6138	“ Thumb Screw.....	10
3146	6138	“ “ “ Washer.....	01
52012	5861	Needle Bar (hollow) with 857H.....	75
52013	5861	“ “ Bushing (lower) with 29532..	80
1133E	5861	“ “ “ “ Set Screw...	02
52014	5861	“ “ “ (upper).....	80
1133E	5861	“ “ “ “ Set Screw...	02
24040	5861	“ “ Connecting Link with 794E..	50
794E	5861	“ “ “ “ Adjusting Screw.....	05
775E	5861	Needle Bar Connecting Link Cap Screw..	06
24041	5861	“ “ “ Stud with 207E..	35
207E	5861	“ “ “ “ Clamping Screw.....	02
52015	5895	Needle Bar Crank with 858C, 1036C, 1037C and 1065C.....	80
1065C	5875	Needle Bar Crank Position Screw.....	10
858C	5875	“ “ “ Set Screw.....	03
29532	5861	“ “ Oil Cup.....	03
857H	5861	“ Set Screw.....	02
12391	5896	Presser Bar (hollow).....	80
52338	5936	“ “ Guide Bracket with 223C and 453C.....	60
453C	5936	Presser Bar Guide Bracket Set Screw....	02
52016	5936	“ “ Lifter.....	20
689C	5936	“ “ “ Screw.....	10
1520E	5936	“ “ “ “ Nut.....	03
12327	5936	“ “ Lifting and Releasing Lever Bracket.....	50
11167	5896	Presser Bar Spring.....	05
11170	5936	“ “ “ Washer.....	01
12435	5865	Presser Foot with 228D.....	60

NOTE: No. 12435 is sent with this machine unless
another Presser Foot is specified on order.

PARTS FOR MACHINE NO. 95-11

13

NO.	PLATE	NAME	EACH
12462	5866	Presser Foot, for $\frac{3}{16}$ in. to $\frac{1}{4}$ in. gauge...	\$ 50
NOTE: When ordering No. 12462 give width of turned edge from seam.			
12463	5866	Presser Foot with Strip Guide.....	75
12335	5865	" " (narrow).....	40
26276	5900	" " Hinge Pin.....	01
20133	—	" " Plate.....	65
19223	—	" " Shank.....	60
20134	5866	Presser Foot (hinged) complete, for $\frac{3}{16}$ in. to $\frac{1}{4}$ in. gauge, Nos. 19223, 20133 and 26276.....	1 25
NOTE: When ordering No. 20134, give width of turned edge from seam.			
2532	5900	Presser Foot Hinge Pin.....per 100	10
20155	—	" " Plate.....	60
20156	—	" " Shank.....	75
20157	5865	Presser Foot (hinged) complete, Nos. 228D, 2532, 20155 and 20156.....	1 35
20343	5865	Presser Foot with Guide on bottom to the right of needle hole.....	60
26276	5900	Presser Foot Hinge Pin.....	01
20360	—	" " Plate.....	65
19335	—	" " Shank.....	60
20361	5866	Presser Foot (hinged) plain bottom, complete, Nos. 19335, 20360 and 26276....	1 25
36574	5945	Presser Foot.....	50
36575	5945	" " 36574 with 36576 and two 50202D.....	60
36576	5945	Presser Foot Finger Guard.....	06
50202D	5945	" " " " Screw.....	02
26279	5089	" " Extension, $\frac{1}{16}$ in.....	15
26280	5089	" " " $\frac{1}{8}$ in.....	15
26281	5089	" " " $\frac{1}{4}$ in.....	15
26282	5089	" " " $\frac{3}{8}$ in.....	15
26283	5089	" " " $\frac{1}{2}$ in.....	15
228D	5875	" " " Screw.....	02
25967	5089	" " Strip Gauge.....	15
228D	5875	" " " " Screw.....	02
190D	5875	" " " " Screw.....	03
688E	5875	Pressure Regulating Thumb Screw.....	25
52089	5898	Rotating Hook with 40274, 52090, two 1253C, three 1367F and four 1053D....	2 50
40264	5869	Rotating Hook Bobbin.....	05
40392	5869	" " " Case Latch.....	10
55625	5869	" " " " " Lever.....	10

NO.	PLATE	NAME	EACH
2974	5869	Rotating Hook Bobbin Case Latch Lever	
		Fulcrum Pin.....per 100	\$ 10
2975	5869	Rotating Hook Bobbin Case Latch Spring	02
592E	5869	" " " " " S t o p	
		Screw.....	02
40393	—	Rotating Hook Bobbin Case Hinge, Nos.	
		2974, 40392 and 55625.....	25
591F	5869	Rotating Hook Bobbin Case Tension	
		Regulating Screw.....	02
40394	5869	Rotating Hook Bobbin Case Tension	
		Spring.....	10
1380D	5869	Rotating Hook Bobbin Case Tension	
		Spring Screw.....	02
40395	5869	Rotating Hook Bobbin Case complete,	
		Nos. 591F, 592E, 1380D, 2975, 40393 and	
		40394.....	75
40408	—	Rotating Hook Bobbin Case 40395 with	
		40396.....	2 50
40396	5869	Rotating Hook Bobbin Case Holder.....	1 75
52018	5869	" " " " " Position	
		Bracket.....	60
914D	5869	Rotating Hook Bobbin Case Holder	
		Position Bracket Screw.....	04
40274	5869	Rotating Hook Section.....	75
1367F	5869	" " " Screw.....	02
1253C	5869	" " Set Screw.....	03
52070	5895	" " Shaft.....	60
56106	5898	" " " Bushing (back)....	50
52045	5898	" " " " " Pack-	
		ing (cotton).....	01
447C	5898	Rotating Hook Shaft Bushing (back) Set	
		Screw.....	03
56107	5898	Rotating Hook Shaft Bushing (front)	50
52045	5898	" " " " " "	
		Packing (cotton).....	01
1148C	5898	Rotating Hook Shaft Bushing (front)	
		Set Screw.....	05
56013	5898	Rotating Hook Shaft Gear with two	
		1253C.....	75
52072	5894	Rotating Hook Shaft Gear Case (two	
		pieces) with 121E and 50234D.....	40
50234D	5899	Rotating Hook Shaft Gear Case Plug	
		Screw.....	06
121E	5899	Rotating Hook Shaft Gear Case Screw...	06
1253C	5869	" " " " Set Screw....	03
52090	5898	" " Thread Guard.....	25
1053D	5869	" " " " Screw.....	02

PARTS FOR MACHINE NO. 95-11

15

NO.	PLATE	NAME	EACH
52337	5936	Slack Thread Regulator.....	\$ 10
223c	5936	“ “ “ Set Screw.....	02
2102	5872	Tension Disc.....	05
1560c	5872	“ Regulating Thumb Nut.....	04
32572	5872	“ Releasing Disc.....	05
43944	5872	“ “ Lever.....	20
12398	5872	“ “ “ Hinge Pin.....	01
12329	5872	“ “ “ Spring.....	02
32574	5872	“ “ Pin.....	03
13710	5872	“ Spring.....	03
50304c	5899	“ Stud.....	12
50305c	5899	“ “ Set Screw.....	02
52026	5861	Thread Eyelet for 52013.....	05
52027	5872	“ Guard (side of arm).....	01
210958	5900	“ Retaining Collar.....	08
210993	5900	“ “ Sleeve.....	05
52398	5900	“ “ Spring.....	01
52378	5900	“ “ Stud.....	07
460c	5872	“ “ “ Set Screw.....	02
52379	—	Thread Retainer complete, Nos. 52378, 52398, 210958 and 210993.....	20
52021	5861	Thread Take-up Crank.....	80
1036c	5861	“ “ “ Position Screw...	03
1037c	5861	“ “ “ Set Screw.....	04
52022	5861	“ “ Lever.....	40
52023	5861	“ “ “ Hinge Pin.....	05
52024	5861	“ “ “ Link.....	25
11204	5861	“ “ “ “ Hinge Pin...	15
435c	5899	“ “ “ “ “ Set Screw.....	04
52025	—	Thread Take-up Lever complete, Nos. 52022 to 52024.....	75
52082	5899	Thread Take-up Spring.....	03
52083	5899	“ “ “ Regulator with 50305c.....	30
448c	5872	Thread Take-up Spring Regulator Set Screw.....	03
20123	5857	Throat Plate for 20163 and 20164.....	70
691f	5875	“ “ Screw.....	04
24079	5877	Drip Pan with four 1 in. wire nails.....	25

IRON BASE

NO.	PLATE	NAME	EACH
24106	5874	Bed Frame Cushion (felt).....	\$ 02
158E	5899	" " " Screw.....	03
24107	5874	" " Hinge Connection.....	15
9261	5874	" " " Pin.....	02
970D	5874	" " Thumb Screw.....	20
24108	5876	Bed Frame complete, Nos. 970D, two each 9261, 24107, four each 158E, 24106 and six wood screws 1¼ in. No. 12.....	1 75

ACCESSORIES

NO.	PLATE	NAME	EACH
12361	5874	Machine Hinge Connection.....	\$ 15
12362	5874	" " Plate.....	15
12363	—	Machine Hinge complete, Nos. 12361, 12362 and two wood screws 1¼ in. No. 14.....	30
12405	5874	Machine Rest (felt).....	02
36569	5879	Oiler with 36571.....	05
36570	—	" 36569, filled with oil.....	08
36571	5879	" Spout, 1¾ in. long, with 36807....	01
36807	5900	" " Washer (leather).....	01
26026	5879	Screw Driver (large).....	10
26485	5879	" " (small).....	05
8909	5879	Wrench for 1513 and 1518.....	10
8908	5879	" " 1519 and 1520.....	08

FINGER GUARD

NO.	PLATE	NAME	EACH
36818	5945	Finger Guard.....	\$ 06
36819	5945	" " Friction Washer.....	01
50316J	5945	" " Hinge Screw.....	04
36820	5945	" " Holder with 196J.....	10
196J	5945	" " " Clamping Screw...	02
36821	5945	Finger Guard complete, Nos. 36818 to 36820 and 50316J.....	20

BOBBIN WINDERS

BOBBIN WINDER

SWINGING AUTOMATIC, RIGHT HAND

NO.	PLATE	NAME	EACH
52042	5896	Arm Top Cover.....	\$ 15
52043	5896	" " " 52042 with 12403 and 24131.....	25
24131	5900	Arm Top Cover Oil Tube with 29599....	06
29599	5900	" " " " " Packing (felt)per 100	25
180D	5875	Arm Top Cover Screw.....	03
12403	5900	" " " Spool Pin and Thread Eyelet.....	05
8879	5936	Arm Top Cover Spool Pin Washer (cloth)	01
41339	2833	Base.....	15
41340	2833	Frame.....	15
1429D	2834	" Hinge Screw.....	05
41341	2833	" Spring.....	05
207D	2834	" " Screw.....	02
41342	2833	Pulley with 200F.....	20
200F	2834	" Set Screw.....	03
41343	2834	Spindle.....	15
27306	2834	Spool Pin.....	05
27307	2833	" Stand.....	10
27308	2833	Spool Stand complete, Nos. 418E, 1562J, 2106, 10141, 11241, 27306, 27307 and two each 2455 and wood screws 1 in. No. 10.....	35
11241	2833	Spool Washer (cloth).....per 100	25
41344	2834	Stop Latch.....	10
41345	2834	" " Finger.....	10
152F	2834	" " " Screw.....	03
1430D	2834	" " Hinge Screw.....	05
1550H	2834	" " " " Nut.....	03
41346	2834	" " Lever.....	15
1430D	2834	" " " Hinge Screw.....	05
2455	2834	Tension Disc.....	02
1562J	2834	" Regulating Thumb Nut.....	04
418E	2834	" Screw Stud.....	08
10141	2834	" Spring.....	01
2106	2834	" Thread Guide.....	01

BOBBIN WINDERS

NO.	PLATE	NAME	EACH
41347	2833	Bobbin Winder, Nos. 152F, 207D, 1429D, 1550H, 41339 to 41346, two each 9331, wood screws 1 in. No. 10, R. H. B. and three 1430D.....	\$ 1 35
41348	—	Bobbin Winder (swinging automatic, right hand) complete, Nos. 27308 and 41347.	1 60
9331	2834	Bobbin Winder Washer.....	01

BOBBIN WINDER

SWINGING AUTOMATIC, LEFT HAND

NO.	PLATE	NAME	EACH
41913	5902	Bracket with 457C.....	\$ 35
41583	5902	Frame with 457C.....	60
34105	5902	" Hinge Pin.....	05
457C	5899	" " " Set Screw.....	02
41914	5902	" Spring.....	05
41585	5902	Pulley with 171D.....	20
171D	5899	" Set Screw.....	03
41586	5902	Spindle.....	20
41587	5902	Stop Latch.....	10
42614	5902	" " Hinge Stud.....	15
457C	5899	" " " Set Screw.....	02
41588	5902	" " Tripping Arm with 185H....	10
185H	5899	" " " C l a m p i n g Screw.....	02
41591	5902	Tension Bracket with 460C.....	25
41592	5902	Tension Bracket complete, Nos. 12403, 24131, 41591, 41593 to 41595 and two 2455.....	55
24131	5900	Tension Bracket Oil Tube with 29599....	06
29599	5900	" " " " Packing (felt),per 100	25
180D	5875	Tension Bracket Screw.....	03
12403	5900	" " Spool Pin and Thread Eyelet.....	05
8879	5936	Tension Bracket Spool Pin Washer (cloth)	01
2455	2834	" Disc.....	02
41593	5936	" Spring.....	02
41594	5936	" Stud.....	10
460C	5872	" " Set Screw.....	02
41595	5936	" Thread Guide.....	03
41915	5902	Bobbin Winder, Nos. 880D, 25446, 34105, 41583, 41585 to 41588, 41913, 41914 and 42614.....	1 90

BOBBIN WINDERS

19

NO.	PLATE	NAME	EACH
41916	—	Bobbin Winder (swinging automatic, left hand) complete, Nos. 41592 and 41915.	\$ 2 45
880b	5899	Bobbin Winder Screw.....	06
25446	5900	“ “ “ Washer.....	02

FOOT LIFTER PARTS

NO.	PLATE	NAME	EACH
5596	5878	Bell Crank.....	\$ 05
5599	5878	“ “ Bracket.....	08
178c	5875	“ “ “ Screw.....	03
5601	5874	“ “ Hinge Pin.....	01
5735	5874	“ “ Spring.....	02
5598	5878	Bell Crank complete, Nos. 5596, 5599, 5601 and 5735.....	20
5670	—	Chain, length 26 in. to 35 in.....	15
NOTE: When ordering No. 5670 give length required.			
4879	5878	Chain Connecting Link.....	03
16510	5878	Lifting Lever with 448c.....	20
52028	5878	“ “ Connecting Rod.....	10
12416	5874	“ “ “ “ Joint.....	08
76d	5875	“ “ “ “ “ Hinge Screw.....	06
1521e	5872	Lifting Lever Connecting Rod Lock Nut.....	03
802b	5875	“ “ Hinge Screw.....	10
12241	5936	“ “ Link.....	10
766b	5875	“ “ “ Hinge Screw.....	05
12240	5936	“ “ Pin.....	05
448c	5875	“ “ “ Set Screw.....	03
2763	5876	Rock Shaft.....	10
12242	5876	“ “ Hanger with two wood screws 1 in. No. 10.....	08
6337	5876	Rock Shaft Lifting Bracket with two 356c.....	20
12243	5876	Rock Shaft Lifting Bracket Hook.....	15
7125	5876	“ “ “ “ “ “.....	15
356c	5875	“ “ “ “ “ “ S e t Screw.....	06
356c	5875	Rock Shaft Lifting Bracket Set Screw...	06
2770	5876	“ “ Stop Dog with 356c.....	12
356c	5875	“ “ “ “ “ Set Screw.....	06
4880	5876	Rock Shaft complete, Nos. 2763, 2770, 7125, 12243 and two each 6337 and 12242.....	1 00

FOOT LIFTER PARTS

NO.	PLATE	NAME	EACH
4881	5876	Treadle.....	\$ 30
4882	5878	“ Shaft.....	05
4883	5878	“ Spring.....	10
4884	5876	“ Stand.....	25
4885	5876	Treadle complete, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16.....	75
52029	—	Foot Lifter complete, Nos. 76D, 766D, 802D, 1521E, 4880, 4885, 5598, 5670, 12240, 12241, 12416, 16510, 52028 and two 178c.....	2 95

KNEE LIFTER PARTS

NO.	PLATE	NAME	EACH
5596	5878	Bell Crank.....	\$ 05
5599	5878	“ “ Bracket.....	08
178c	5875	“ “ “ Screw.....	03
5601	5874	“ “ Hinge Pin.....	01
5735	5874	“ “ Spring.....	02
5598	5878	Bell Crank complete, Nos. 5596, 5599, 5601 and 5735.....	20
16510	5878	Lifting Lever with 448c.....	20
52028	5878	“ “ Connecting Rod.....	10
12416	5874	“ “ “ “ Joint.....	08
76D	5875	“ “ “ “ “ Hinge Screw.....	06
1521E	5872	Lifting Lever Connecting Rod Lock Nut.....	03
802D	5875	“ “ Hinge Screw.....	10
12241	5936	“ “ Link.....	10
766D	5875	“ “ “ Hinge Screw.....	05
12240	5936	“ “ Pin.....	05
448c	5875	“ “ “ Set Screw.....	03
2763	5876	Rock Shaft.....	10
12242	5876	“ “ Hanger with two wood screws 1 in. No. 10.....	08
2765	5877	Rock Shaft Knee Arm.....	10
2766	5877	“ “ “ “ Hub with 356c....	15
356c	5875	“ “ “ “ “ Set Screw....	06
2768	—	Rock Shaft Knee Arm complete, Nos. 2765 to 2767.....	40
2767	5877	Rock Shaft Knee Plate with 356c.....	18
356c	5875	“ “ “ “ Set Screw.....	06
6337	5876	“ “ Lifting Bracket with two 356c.....	20

KNEE LIFTER PARTS

21

NO.	PLATE	NAME	EACH
2778	5877	Rock Shaft Lifting Bracket Hook.....	\$ 05
356c	5875	" " " " " S e t Screw.....	06
356c	5875	Rock Shaft Lifting Bracket Set Screw...	06
2770	5876	" " Stop Dog with 356c.....	12
356c	5875	" " " " Set Screw.....	06
2777	5877	Rock Shaft complete, Nos. 2763, 2768, 2770, 2778, 6337 and two 12242.....	1 00
52030	—	Knee Lifter complete (power table) Nos. 76d, 766d, 802d, 1521e, 2777, 5598, 12240, 12241, 12416, 16510, 52028 and two 178c.....	2 00

SPOOL HOLDER (Disc)

NO.	PLATE	NAME	EACH
26763	5879	Bracket with 219F and 287D.....	\$ 15
219F	5875	" Screw.....	02
287D	5875	" Thumb Screw.....	10
19066	5879	Spindle.....	25
19067	5879	" Thread Guiding Disc.....	15
691F	5875	" " " " Screw....	04
26764	5879	Spool Holder (disc) complete, Nos. 691F, 19066, 19067 and 26763.....	60

THREAD UNWINDER

FOR TWO LARGE SPOOLS OR TWO LARGE CONES OF THREAD

NO.	PLATE	NAME	EACH
27623	2837	Spool Pin.....	\$ 08
155c	5875	" " Set Screw.....	03
41530	2837	" Rest.....	30
41531	—	" " 41530 with 1149c and two each 155c and 27623.....	50
1149c	5875	Spool Rest Set Screw.....	04
27940	2837	" Stand with 453c.....	20
41514	2837	" Weight, 4 in. diam., with 41515....	15
41515	5900	" " Centre Pin.....	05
27739	2837	Thread Cone (wood).....	05
41631	2837	" Guard with 208E and two 41569..	35
41569	5899	" " Eyelet.....	02
41637	2837	" " Rod (lower).....	10
41638	2837	" " " (upper).....	15

THREAD UNWINDER

NO.	PLATE	NAME	EACH
41639	2837	Thread Guard Rod Coupling with two 456c.....	\$ 20
456c	5899	Thread Guard Rod Coupling Set Screw..	02
41640	—	Thread Guard Rod complete, 30 in. long, Nos. 41637 to 41639.....	45
453c	5936	Thread Guard Rod Set Screw.....	02
208E	5899	“ “ Screw.....	02
41533	2837	Thread Unwinder complete, Nos. 27940, 41531, 41631, 41640, two each 27739, 41514 and three wood screws 1 in. No. 12.....	1 80

OBSOLETE PARTS

NO.	PLATE	NAME	EACH
286D	5875	Arm Side Cover Thumb Screw.....	\$ 10
732D	5875	Face Plate Thumb Screw.....	10
145E	5875	Feed Lifting Rock Shaft Connecting Rod Cap Screw for 12430.....	04
20059	5897	Presser Bar Guide Bracket with 453c....	35
52076	5869	Rotating Hook with 40274, 40398, two 1253c and three each 1053D and 1367F, use 52089.....	2 50
40398	5869	Rotating Hook Thread Guard.....	25
20060	5872	Slack Thread Regulator.....	35
225F	5872	“ “ “ Set Screw.....	03
1274C	5872	Tension Screw Stud.....	10
2103	5899	“ Spring.....	03
29642	5872	Thread Eyelet (side of arm).....	15
52348	5899	“ Take-up Spring.....	03
43946	5872	“ “ “	03
7336	5872	“ “ “ Regulator.....	25

NUMERICAL LIST OF PARTS
FOR
MACHINE No. 95-11

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
76D	5875	Lifting Lever Connecting Rod Joint Hinge Screw for 52029 and 52030.....\$	06
116E	5875	Arm Screw (back).....	08
121E	5899	" Shaft (horizontal) Gear Case Screw for 52071.....	06
121E	5899	Rotating Hook Shaft Gear Case Screw for 52072.....	06
144D	5875	Arm Shaft (horizontal) Screw.....	08
145E	5875	Feed Lifting Rock Shaft Connecting Rod Cap Screw for 12430, obsolete.....	04
152F	2834	Bobbin Winder Stop Latch Finger Screw for 41347.....	03
155C	5875	Thread Unwinder Spool Pin Set Screw for 41531.....	03
157E	5897	Feed Lifting Rock Shaft Crank Clamping Screw for 12376.....	04
157E	5897	Feed Rock Shaft Crank Clamping Screw for 29633.....	04
158E	5899	Bed Frame Cushion Screw for 24108.....	03
171D	5899	Bobbin Winder Pulley Set Screw for 41585	03
178C	5875	Bell Crank Bracket Screw for 52029 and 52030.....	03
180D	5875	Arm Top Cover Screw.....	03
180D	5875	Bobbin Winder Arm Top Cover Screw...	03
180D	5875	" " Tension Bracket Screw for 41592.....	03
185H	5899	Bobbin Winder Stop Latch Tripping Arm Clamping Screw for 41588.....	02
190D	5875	Face Plate Screw.....	03
190D	5875	Presser Foot Screw.....	03
196J	5945	Finger Guard Holder Clamping Screw for 36820.....	02
200F	2834	Bobbin Winder Pulley Set Screw for 41342	03
207D	2834	" " Frame Spring Screw for 41347.....	02
207E	5861	Needle Bar Connecting Stud Clamping Screw for 24041.....	02
208E	5899	Thread Unwinder Thread Guard Screw for 41631.....	02
210D	5875	Balance Wheel Oil Cover Screw.....	04
219D	5875	Arm Side Cap Screw.....	02
219F	5875	Spool Holder Bracket Screw for 26763...	02

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
223c	5936	Slack Thread Regulator Set Screw for 52338.....	\$ 02
225f	5872	Slack Thread Regulator Set Screw, obsolete.....	03
226d	5900	Face Plate Thread Guard (lower) Screw for 52052.....	02
226d	5900	Face Plate Thread Guard (upper) Screw for 52052.....	02
228d	5875	Presser Foot Extension Screw for 12435 and 20157.....	02
228d	5875	Presser Foot Strip Gauge Screw for 12435 and 20157.....	02
284d	6138	Guide Thumb Screw.....	10
286d	5875	Arm Side Cover Thumb Screw, obsolete.	10
287d	5875	Spool Holder Bracket Thumb Screw for 26763.....	10
313c	5875	Feed Bar Screw Centre.....	04
356c	5875	Rock Shaft Knee Arm Hub Set Screw for 2766.....	06
356c	5875	Rock Shaft Knee Plate Set Screw for 2767.....	06
356c	5875	Rock Shaft Lifting Bracket Hook Set Screw for 6337.....	06
356c	5875	Rock Shaft Lifting Bracket Set Screw for 6337.....	06
356c	5875	Rock Shaft Stop Dog Set Screw for 2770.	06
375c	5897	Feed Connecting Link Hinge Screw.....	12
375c	5897	" Forked Connection Hinge Screw...	12
375c	5897	" Lifting Rock Shaft Connecting Rod Hinge Screw.....	12
418E	2834	Bobbin Winder Tension Screw Stud for 27308.....	08
432c	5898	Arm Shaft (upright) Bushing (lower) Set Screw.....	04
435c	5899	Arm Shaft (horizontal) Flanged Bushing (front) Set Screw.....	04
435c	5899	Thread Take-up Lever Link Hinge Pin Set Screw.....	04
446c	5899	Arm Shaft (horizontal) Flanged Bushing (back) Set Screw.....	03
447c	5898	Rotating Hook Shaft Bushing (back) Set Screw.....	03
448c	5875	Balance Wheel Set Screw for 52005 and 52081.....	03
448c	5875	Feed and Feed Lifting Eccentric Set Screw for 24035.....	03
448c	5875	Lifting Lever Pin Set Screw for 16510....	03

NUMERICAL LIST OF PARTS

25

NO.	PLATE	NAME	EACH
448c	5872	Thread Take-up Spring Regulator Set Screw.....	\$ 03
453c	5936	Presser Bar Guide Bracket Set Screw for 20059 and 52338.....	02
453c	5936	Thread Unwinder Thread Guard Rod Set Screw for 27940.....	02
456c	5899	Thread Unwinder Thread Guard Rod Coupling Set Screw for 41639.....	02
457c	5899	Bobbin Winder Frame Hinge Pin Set Screw for 41583.....	02
457c	5899	Bobbin Winder Stop Latch Hinge Stud Set Screw for 41913.....	02
460c	5872	Bobbin Winder Tension Stud Set Screw for 41591.....	02
460c	5872	Thread Retaining Stud Set Screw.....	02
591f	5869	Rotating Hook Bobbin Case Tension Regulating Screw for 40395.....	02
592e	5869	Rotating Hook Bobbin Case Latch Stop Screw for 40395.....	02
688e	5875	Pressure Regulating Thumb Screw.....	25
689c	5936	Presser Bar Lifter Screw.....	10
691f	5875	Spool Holder Spindle Thread Guiding Disc Screw for 26764.....	04
691f	5875	Throat Plate Screw.....	04
725e	5875	Bed Slide Spring Screw for 12432.....	02
732d	5875	Face Plate Thumb Screw, obsolete.....	10
766d	5875	Lifting Lever Link Hinge Screw for 52029 and 52030.....	05
775e	5861	Needle Bar Connecting Link Cap Screw..	06
794e	5861	" " " " Adjusting Screw for 24040.....	05
802d	5875	Lifting Lever Hinge Screw for 52029 and 52030.....	10
818d	5897	Feed Regulator Thumb Screw.....	10
857h	5861	Needle Set Screw for 52012.....	02
858c	5875	" Bar Crank Set Screw for 52015...	03
868e	5875	Arm Screw (front).....	10
880d	5899	Bobbin Winder Screw for 41915.....	06
914d	5869	Rotating Hook Bobbin Case Holder Position Bracket Screw.....	04
966e	5899	Feed Lifting Rock Shaft Connecting Rod Cap Screw for 12430.....	04
970d	5874	Bed Frame Thumb Screw for 24108.....	20
1036c	5861	Arm Shaft (horizontal) Gear Set Screw for 52060.....	03
1036c	5861	Thread Take-up Crank Position Screw for 52015.....	03

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
1037c	5861	Thread Take-up Crank Set Screw for 52015.....	\$ 04
1053d	5869	Rotating Hook Thread Guard Screw for 52076 and 52089.....	02
1065c	5875	Needle Bar Crank Position Screw for 52015.....	10
1128E	5897	Feed Regulator Hinge Screw.....	12
1133E	5861	Needle Bar Bushing (lower) Set Screw...	02
1133E	5861	“ “ “ (upper) Set Screw...	02
1148c	5898	Rotating Hook Shaft Bushing (front) Set Screw.....	05
1149c	5875	Arm Shaft (upright) Bushing (upper) Set Screw.....	04
1149c	5875	Thread Unwinder Spool Rest Set Screw for 41531.....	04
1253c	5869	Arm Shaft (upright) Gear (lower) Set Screw for 56013.....	03
1253c	5869	Arm Shaft (upright) Gear (upper) Set Screw for 56101.....	03
1253c	5869	Rotating Hook Set Screw for 52076 and 52089.....	03
1253c	5869	Rotating Hook Shaft Gear Set Screw for 56013.....	03
1274c	5872	Tension Screw Stud, obsolete.....	10
1367F	5869	Rotating Hook Section Screw for 52076 and 52089.....	02
1380d	5869	Rotating Hook Bobbin Case Tension Spring Screw for 40395.....	02
1429d	2834	Bobbin Winder Frame Hinge Screw for 41347.....	05
1430d	2834	Bobbin Winder Stop Latch Hinge Screw for 41347.....	05
1430d	2834	Bobbin Winder Stop Latch Lever Hinge Screw for 41347.....	05
1513E	5872	Feed Lifting Rock Shaft Screw Centre Nut.....	05
1513E	5872	Feed Rock Shaft Screw Centre Nut.....	05
1518E	5897	“ Connecting Link Hinge Screw Nut.	04
1518E	5897	“ Forked Connection Hinge Screw Nut	04
1518E	5897	“ Lifting Rock Shaft Connecting Rod Hinge Screw Nut.....	04
1519E	5872	Feed Bar Screw Centre Nut.....	03
1520E	5936	Presser Bar Lifter Screw Nut.....	03
1521E	5872	Lifting Lever Connecting Rod Lock Nut for 52029 and 52030.....	03
1550H	2834	Bobbin Winder Stop Latch Hinge Screw Nut for 41347.....	03

NUMERICAL LIST OF PARTS

27

NO.	PLATE	NAME	EACH
1560c	5872	Tension Regulating Thumb Nut.....	\$ 04
1562J	2834	Bobbin Winder Tension Regulating Thumb Nut for 27308.....	04
1813	5897	Feed Lifting Rock Shaft Crank Roller and Stud for 12376.....	20
2102	5872	Tension Disc.....	05
2103	5899	" Spring, obsolete.....	03
2106	2834	Bobbin Winder Tension Thread Guide for 27308 and 41592.....	01
2455	2834	Bobbin Winder Tension Disc for 27308..	02
2532	5900	Presser Foot Hinge Pin for 20157, per 100	10
2763	5876	Rock Shaft for 2777 and 4880.....	10
Nos. 2765 TO 2767 FOR 2768.			
2765	5877	Rock Shaft Knee Arm.....	10
2766	5877	" " " " Hub with 356c....	15
2767	5877	" " " Plate with 356c.....	18
2768	—	Rock Shaft Knee Arm complete for 2777, Nos. 2765 to 2767.....	40
2770	5876	Rock Shaft Stop Dog with 356c, for 2777 and 4880.....	12
2777	5877	Rock Shaft complete for 52030, Nos. 2763, 2768, 2770, 2778, 6337 and two 12242.....	1 00
2778	5877	Rock Shaft Lifting Bracket Hook for 2777.....	05
2974	5869	Rotating Hook Bobbin Case Latch Lever Fulcrum Pin for 40393.....per 100	10
2975	5869	Rotating Hook Bobbin Case Latch Spring for 40395.....	02
3033	5897	Feed Connecting Link.....	20
3146	6138	Guide Thumb Screw Washer.....	01
4307	5894	Bed Slide Spring for 12432.....	05
4879	5878	Chain Connecting Link for 4885.....	03
4880	5876	Rock Shaft complete for 52029, Nos. 2763, 2770, 7125, 12243 and two each 6337 and 12242.....	1 00
Nos. 4881 TO 4884 FOR 4885.			
4881	5876	Treadle.....	30
4882	5878	" Shaft.....	05
4883	5878	" Spring.....	10
4884	5876	" Stand.....	25
4885	5876	Treadle complete for 52029, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16.....	75
5596	5878	Bell Crank for 5598.....	05

NO.	PLATE	NAME	EACH
5598	5878	Bell Crank complete for 52029 and 52030, Nos. 5596, 5599, 5601 and 5735.....\$	20
5599	5878	Bell Crank Bracket for 5598.....	08
5601	5874	" " Hinge Pin for 5598.....	01
5670	—	Chain, length 26 in. to 35 in., for 52029..	15
5735	5874	Bell Crank Spring for 5598.....	02
6337	5876	Rock Shaft Lifting Bracket with two 356c, for 2777 and 4880.....	20
7125	5876	Rock Shaft Lifting Bracket Hook for 4880	15
7336	5872	Thread Take-up Spring Regulator, obsolete.....	25
8879	5936	Arm Spool Pin Washer (cloth).....	01
8879	5936	Bobbin Winder Arm Top Cover Spool Pin Washer (cloth) for 52043.....	01
8879	5936	Bobbin Winder Tension Bracket Spool Pin Washer (cloth) for 41592.....	01
8908	5879	Wrench for 1519 and 1520 (Accessories)..	08
8909	5879	" " 1513 and 1518 (Accessories)..	10
9261	5874	Bed Frame Hinge Connection Pin for 24108.....	02
9331	2834	Bobbin Winder Washer for 41347.....	01
10141	2834	" " Tension Spring for 27308.	01
11167	5896	Presser Bar Spring.....	05
11170	5936	" " " Washer.....	01
11204	5861	Thread Take-up Lever Link Hinge Pin..	15
11241	2833	Bobbin Winder Spool Washer (cloth) for 27308.....per 100	25
12193	5894	Arm Side Cover.....	10
*12204	—	Feed Lifting Rock Shaft Connecting Rod Cap for 12430.....	—
12240	5936	Lifting Lever Pin for 52029 and 52030...	05
12241	5936	" " Link for 52029 and 52030..	10
12242	5876	Rock Shaft Hanger with two wood screws 1 in. No. 10, for 2777 and 4880.....	08
12243	5876	Rock Shaft Lifting Bracket Hook for 4880	15
12327	5936	Presser Bar Lifting and Releasing Lever Bracket.....	50
12329	5872	Tension Releasing Lever Spring.....	02
12335	5865	Presser Foot (narrow).....	40
12361	5874	Machine Hinge Connection for 12363....	15
12362	5874	" " Plate for 12363.....	15
12363	—	Machine Hinge complete, Nos. 12361, 12362 and two wood screws 1¼ in. No. 14 (Accessories).....	30
12376	5897	Feed Lifting Rock Shaft Crank with 157E and 1813, for 52066.....	40

NUMERICAL LIST OF PARTS

29

NO.	PLATE	NAME	EACH
12391	5896	Presser Bar (hollow).....	\$ 80
12398	5872	Tension Releasing Lever Hinge Pin.....	01
12403	5900	Arm Spool Pin and Thread Eyelet for 52043.....	05
12403	5900	Bobbin Winder Arm Top Cover Spool Pin and Thread Eyelet for 52043.....	05
12403	5900	Bobbin Winder Tension Bracket Spool Pin and Thread Eyelet for 41592.....	05
12405	5874	Machine Rest, felt (Accessories).....	02
12416	5874	Lifting Lever Connecting Rod Joint for 52029 and 52030.....	08
12430	5896	Feed Lifting Rock Shaft Connecting Rod (steel) with 12204 and two 966E.....	80
12431	—	Bed Slide for 12432.....	25
12432	5894	Bed Slide complete, Nos. 4307, 12431 and two 725E.....	30
12435	5865	Presser Foot with 228D.....	60
12454	5900	Arm Oil Tube with 29599, for oiling 52024.....	06
12462	5866	Presser Foot, for $\frac{3}{16}$ in. to $\frac{1}{4}$ in. gauge...	50
12463	5866	" " with Strip Guide.....	75
12480	5894	Arm Side Cap.....	05
13710	5872	Tension Spring.....	03
16510	5878	Lifting Lever with 448c, for 52029 and 52030.....	20
16532	5900	Arm Dowel Pin.....	02
18130	5900	" Oil Tube with 29599, for oiling 52022.....	06
19066	5879	Spool Holder Spindle for 26764.....	25
19067	5879	" " " Thread Guiding Disc for 26764.....	15
19223	—	Presser Foot Shank for 20134.....	60
19335	—	" " " " 20361.....	60
20059	5897	" Bar Guide Bracket with 453C, obsolete.....	35
20060	5872	Slack Thread Regulator, obsolete.....	35
20123	5857	Throat Plate for 20163 and 20164.....	70
20133	—	Presser Foot Plate for 20134.....	65
20134	5866	Presser Foot (hinged) complete, for $\frac{3}{16}$ in. to $\frac{1}{4}$ in. gauge, Nos. 19223, 20133 and 26276.....	1 25
20155	—	Presser Foot Plate for 20157.....	60
20156	—	" " Shank for 20157.....	75
20157	5865	Presser Foot (hinged) complete, Nos. 228D, 2532, 20155 and 20156.....	1 35
20163	5857	Feed Dog, $\frac{1}{16}$ in. stitch.....	40
20164	5857	" " $\frac{1}{8}$ in. stitch.....	40

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
20343	5865	Presser Foot with Guide on bottom to the right of needle hole.....	\$ 60
20360	—	Presser Foot Plate for 20361.....	65
20361	5866	Presser Foot (hinged) plain bottom, complete, Nos. 19335, 20360 and 26276....	1 25
21351	5874	Feed Regulator Thumb Screw Stop.....	20
24035	5895	" and Feed Lifting Eccentric with 448c	50
24036	5896	" " " Sleeve...	75
24037	5895	" Forked Connection.....	75
24040	5861	Needle Bar Connecting Link with 794E..	50
24041	5861	" " " Stud with 207E..	35
24079	5877	Drip Pan with four 1 in. wire nails.....	25
24106	5874	Bed Frame Cushion (felt) for 24108.....	02
24107	5874	" " Hinge Connection for 24108..	15
24108	5876	Bed Frame complete, Nos. 970D, two each 9261, 24107, four each 158E, 24106 and six wood screws 1¼ in. No. 12.....	1 75
24131	5900	Arm Oil Tube with 29599, for oiling 24036.....	06
24131	5900	Arm Oil Tube with 29599, for oiling 12430, for 52043.....	06
24131	5900	Bobbin Winder Arm Top Cover Oil Tube with 29599, for 52043.....	06
24131	5900	Bobbin Winder Tension Bracket Oil Tube with 29599, for 41592.....	06
25446	5900	Bobbin Winder Screw Washer for 41915..	02
25873	6138	Guide (combination).....	15
25967	5089	Presser Foot Strip Gauge.....	15
26026	5879	Screw Driver, large (Accessories).....	10
26276	5900	Presser Foot Hinge Pin for 20134 and 20361.....	01
26279	5089	Presser Foot Extension, 1/16 in.....	15
26280	5089	" " " 1/8 in.....	15
26281	5089	" " " 1/4 in.....	15
26282	5089	" " " 3/8 in.....	15
26283	5089	" " " 1/2 in.....	15
26485	5879	Screw Driver, small (Accessories).....	05
26763	5879	Spool Holder Bracket with 219F and 287D, for 26764.....	15
26764	5879	Spool Holder (disc) complete, Nos. 691F, 19066, 19067 and 26763.....	60
27306	2834	Bobbin Winder Spool Pin for 27308.....	05
27307	2833	" " " Stand for 27308....	10
27308	2833	Bobbin Winder Spool Stand complete for 41348, Nos. 418E, 1562J, 2106, 10141, 11241, 27306, 27307 and two each 2455 and wood screws 1 in. No. 10.....	35

NUMERICAL LIST OF PARTS

31

NO.	PLATE	NAME	EACH
27623	2837	Thread Unwinder Spool Pin for 41531...\$	08
27739	2837	“ “ Thread Cone (wood) for 41533.....	05
27940	2837	Thread Unwinder Spool Stand with 453c, for 41533.....	20
29532	5861	Needle Bar Oil Cup for 52013.....	03
29599	5900	Arm Oil Tube Packing (felt) for 12454, 18130, 24131 and 52084.....per 100	25
29599	5900	Bobbin Winder Arm Top Cover Oil Tube Packing (felt) for 24131.....per 100	25
29599	5900	Bobbin Winder Tension Bracket Oil Tube Packing (felt) for 24131.....per 100	25
29633	5897	Feed Rock Shaft Crank with 157E, for 52069.....	25
29642	5872	Thread Eyelet (side of arm) obsolete....	15
32572	5872	Tension Releasing Disc.....	05
32574	5872	“ “ Pin.....	03
34105	5902	Bobbin Winder Frame Hinge Pin for 41915	05
36569	5879	Oiler with 36571, for 36570.....	05
36570	—	“ 36569, filled with oil (Accessories)..	08
36571	5879	“ Spout, 1¾ in. long, with 36807, for 36569.....	01
36574	5945	Presser Foot for 36575.....	50
36575	5945	“ “ 36574 with 36576 and two 50202b.....	60
36576	5945	Presser Foot Finger Guard for 36575....	06
36807	5900	Oiler Spout Washer (leather) for 36571..	01
Nos. 36818 TO 36820 FOR 36821.			
36818	5945	Finger Guard.....	06
36819	5945	“ “ Friction Washer.....	01
36820	5945	“ “ Holder with 196J.....	10
36821	5945	Finger Guard complete, Nos. 36818 to 36820 and 50316J.....	20
40264	5869	Rotating Hook Bobbin.....	05
40274	5869	“ “ Section for 52076 and 52089.....	75
40392	5869	Rotating Hook Bobbin Case Latch for 40393.....	10
40393	—	Rotating Hook Bobbin Case Hinge, Nos. 2974, 40392 and 55625, for 40395.....	25
40394	5869	Rotating Hook Bobbin Case Tension Spring for 40395.....	10
40395	5869	Rotating Hook Bobbin Case complete for 40408, Nos. 591F, 592E, 1380D, 2975, 40393 and 40394.....	75

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
40396	5869	Rotating Hook Bobbin Case Holder for 40408.....	\$ 1 75
40398	5869	Rotating Hook Thread Guard for 52076, obsolete.....	25
40408	—	Rotating Hook Bobbin Case 40395 with 40396.....	2 50

Nos. 41339 TO 41346 FOR 41347

41339	2833	Bobbin Winder Base.....	15
41340	2833	“ “ Frame.....	15
41341	2833	“ “ “ Spring.....	05
41342	2833	“ “ Pulley with 200F.....	20
41343	2834	“ “ Spindle.....	15
41344	2834	“ “ Stop Latch.....	10
41345	2834	“ “ “ “ Finger.....	10
41346	2834	“ “ “ “ Lever.....	15
41347	2833	Bobbin Winder for 41348, Nos. 152F, 207D, 1429D, 1550H, 41339 to 41346, two each 9331, wood screws 1 in. No. 10, R. H. B. and three 1430D.....	1 35
41348	—	Bobbin Winder (swinging automatic, right hand) complete, Nos. 27308 and 41347.....	1 60
41514	2837	Thread Unwinder Spool Weight, 4 in. diam., with 41515, for 41533.....	15
41515	5900	Thread Unwinder Spool Weight Centre Pin for 41514.....	05
41530	2837	Thread Unwinder Spool Rest for 41531..	30
41531	—	“ “ “ “ 41530 with 1149c and two each 155c and 27623, for 41533.....	50
41533	2837	Thread Unwinder complete, for two large spools or two large cones of thread, Nos. 27940, 41531, 41631, 41640, two each 27739, 41514 and three wood screws 1 in. No. 12.....	1 80
41569	5899	Thread Unwinder Thread Guard Eyelet for 41631.....	02
41583	5902	Bobbin Winder Frame with 457c, for 41915	60

Nos. 41585 TO 41588 FOR 41915.

41585	5902	Bobbin Winder Pulley with 171D.....	20
41586	5902	“ “ Spindle.....	20
41587	5902	“ “ Stop Latch.....	10
41588	5902	“ “ “ “ Tripping Arm with 185H.....	10

NUMERICAL LIST OF PARTS

33

NO.	PLATE	NAME	EACH
41591	5902	Bobbin Winder Tension Bracket with 460c, for 41592.....	\$ 25
41592	5902	Bobbin Winder Tension Bracket complete for 41916, Nos. 12403, 24131, 41591, 41593 to 41595 and two 2455...	55
Nos. 41593 TO 41595 FOR 41592.			
41593	5936	Bobbin Winder Tension Spring.....	02
41594	5936	" " " Stud.....	10
41595	5936	" " " Thread Guide...	03
41631	2837	Thread Unwinder Thread Guard with 208E and two 41569, for 41533.....	35
Nos. 41637 TO 41639 FOR 41640.			
41637	2837	Thread Unwinder Thread Guard Rod (lower).....	10
41638	2837	Thread Unwinder Thread Guard Rod (upper).....	15
41639	2837	Thread Unwinder Thread Guard Rod Coupling with two 456c.....	20
41640	—	Thread Unwinder Thread Guard Rod complete, 30 in. long, for 41533, Nos. 41637 to 41639.....	45
41913	5902	Bobbin Winder Bracket with 457c, for 41915.....	35
41914	5902	Bobbin Winder Frame Spring for 41915..	05
41915	5902	Bobbin Winder for 41916, Nos. 880b, 25446, 34105, 41583, 41585 to 41588, 41913, 41914 and 42614.....	1 90
41916	—	Bobbin Winder (swinging automatic, left hand) complete, Nos. 41592 and 41915.	2 45
42614	5902	Bobbin Winder Stop Latch Hinge Stud for 41915.....	15
43944	5872	Tension Releasing Lever.....	20
43946	5872	Thread Take-up Spring, obsolete.....	03
50053D	5899	Arm Side Cover Thumb Screw.....	10
50083C	5897	Feed Connecting Link Hinge Stud Set Screw for 52074.....	05
50117E	5875	Feed Dog Screw.....	02
50190D	5899	Face Plate Thumb Screw.....	10
50191C	5899	Feed Lifting Rock Shaft Screw Centre...	06
50191C	5899	" Rock Shaft Screw Centre.....	06
50202D	5945	Presser Foot Finger Guard Screw for 36575.....	02
50234D	5899	Arm Shaft (horizontal) Gear Case Plug Screw for 52071.....	06

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
50234D	5899	Rotating Hook Shaft Gear Case Plug Screw for 52072.....	\$ 06
50304C	5899	Tension Stud.....	12
50305C	5899	" " Set Screw for 52083.....	02
50316J	5945	Finger Guard Hinge Screw for 36821.....	04
52005	5893	Balance Wheel (power) light rim, 2½ in. pulley, with two 448c.....	80
52011	5896	Feed Bar.....	40
52012	5861	Needle Bar (hollow) with 857H.....	75
52013	5861	" " Bushing (lower) with 29532..	80
52014	5861	" " " (upper).....	80
52015	5895	" " Crank with 858c, 1036c, 1037c and 1065c.....	80
52016	5936	Presser Bar Lifter.....	20
52018	5869	Rotating Hook Bobbin Case Holder Position Bracket.....	60
52021	5861	Thread Take-up Crank.....	80
Nos. 52022 TO 52024 FOR 52025.			
52022	5861	Thread Take-up Lever.....	40
52023	5861	" " " Hinge Pin.....	05
52024	5861	" " " Link.....	25
52025	—	Thread Take-up Lever complete, Nos. 52022 to 52024.....	75
52026	5861	Thread Eyelet for 52013.....	05
52027	5872	" Guard (side of arm).....	01
52028	5878	Lifting Lever Connecting Rod for 52029 and 52030.....	10
52029	—	Foot Lifter complete, Nos. 76D, 766D, 802D, 1521E, 4880, 4885, 5598, 5670, 12240, 12241, 12416, 16510, 52028 and two 178c.....	2 95
52030	—	Knee Lifter complete (power table) Nos. 76D, 766D, 802D, 1521E, 2777, 5598, 12240, 12241, 12416, 16510, 52028 and two 178c.....	2 00
52042	5896	Arm Top Cover for 52043.....	15
52042	5896	Bobbin Winder Arm Top Cover for 52043	15
52043	5896	Arm Top Cover 52042 with 12403 and 24131.....	25
52043	5896	Bobbin Winder Arm Top Cover 52042 with 12403 and 24131, for 41348.....	25
52045	5898	Rotating Hook Shaft Bushing (back) Packing (cotton).....	01
52045	5898	Rotating Hook Shaft Bushing (front) Packing (cotton).....	01
52051	—	Face Plate for 52052.....	50

NUMERICAL LIST OF PARTS

35


NO.	PLATE	NAME	EACH
52052	5894	Face Plate complete, Nos. 52051, 52053, 56086 and two 226D.....	\$ 60
52053	5900	Face Plate Thread Guard (lower) for 52052.....	02
52058	5895	Arm Shaft (horizontal).....	1 00
52059	5894	“ “ “ Flanged Bushing (back).....	50
52060	5898	Arm Shaft (horizontal) Gear with two 1036c.....	1 35
52062	5898	Arm Shaft (upright).....	50
52063	5894	Balance Wheel Oil Cover.....	10
*52064	—	Bed.....	4 50
52065	5895	Feed Lifting Rock Shaft for 52066.....	40
52066	—	Feed Lifting Rock Shaft complete, Nos. 12376 and 52065.....	80
52068	5895	Feed Rock Shaft for 52069.....	40
52069	—	Feed Rock Shaft complete, Nos. 29633 and 52068.....	65
52070	5895	Rotating Hook Shaft.....	60
52071	5894	Arm Shaft (horizontal) Gear Case (two pieces) with 121E and 50234D.....	75
52072	5894	Rotating Hook Shaft Gear Case (two pieces) with 121E and 50234D.....	40
52073	5897	Feed Connecting Link Hinge Stud.....	12
52074	5897	“ Regulator with 50083c.....	50
52076	5869	Rotating Hook with 40274, 40398, two 1253c and three each 1053D and 1367F, obsolete, use 52089.....	2 50
*52077	—	Arm with two 56015.....	4 25
52078	5894	“ Shaft (horizontal) Flanged Bushing (front).....	50
52081	5893	Balance Wheel (stand) heavy rim, 3 in. pulley, with two 448c.....	80
52082	5899	Thread Take-up Spring.....	03
52083	5899	“ “ “ Regulator with 50305c.....	30
52084	5900	Arm Oil Tube with 29599, for oiling 24040	06
52089	5898	Rotating Hook with 40274, 52090, two 1253c, three 1367F and four 1053D.....	2 50
52090	5898	Rotating Hook Thread Guard for 52089.	25
52337	5936	Slack Thread Regulator.....	10
52338	5936	Presser Bar Guide Bracket with 223c and 453c.....	60
52348	5899	Thread Take-up Spring, obsolete.....	03
52378	5900	“ Retaining Stud for 52379.....	07

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
52379	—	Thread Retainer complete, Nos. 52378, 52398, 210958 and 210993.....\$	20
52398	5900	Thread Retaining Spring for 52379.....	01
54897	5900	Arm Shaft Front Bearing Oil Cup.....	10
55625	5869	Rotating Hook Bobbin Case Latch Lever for 40393.....	10
56006	5900	Arm Shaft (horizontal) Flanged Bushing (back) Oil Pad (braided cotton).....	01
56006	5900	Arm Shaft (horizontal) Flanged Bushing (front) Oil Pad (braided cotton).....	01
56013	5898	Arm Shaft (upright) Gear (lower) with two 1253c.....	75
56013	5898	Rotating Hook Shaft Gear with two 1253c	75
56015	5900	Arm Shaft (upright) Oil Tube (lower) for 52077.....	05
56015	5900	Arm Shaft (upright) Oil Tube (upper) for 52077.....	05
56086	5900	Face Plate Thread Guard (upper) for 52052.....	02
56099	5898	Arm Shaft (upright) Bushing (lower)....	35
56100	5898	" " " " (upper)....	50
56101	5898	" " " Gear (upper) with two 1253c.....	75
56106	5898	Rotating Hook Shaft Bushing (back)....	50
56107	5898	" " " " (front)....	50
210958	5900	Thread Retaining Collar for 52379.....	08
210993	5900	" " Sleeve for 52379.....	05

ILLUSTRATIONS OF PARTS
FOR
MACHINE No. 95-11

 PLATE 2833—ONE-HALF SIZE

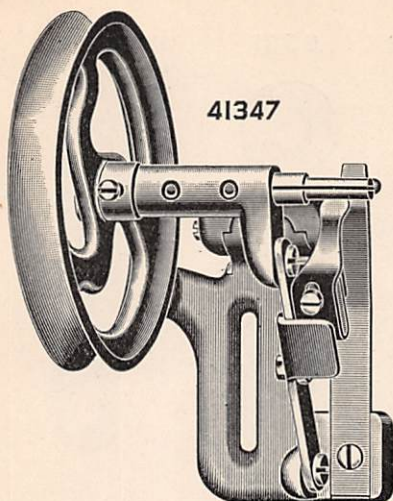


41347


41341



 41342

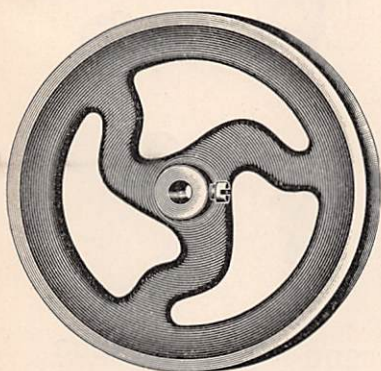



41340

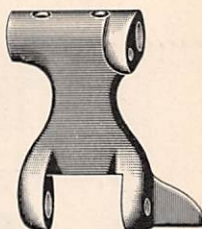 

41339

11241

  27308

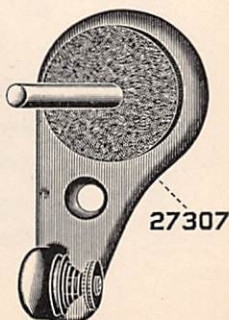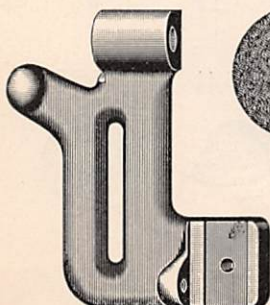

27307

PLATE 2834—FULL SIZE

27306



 
41343



9331



41346

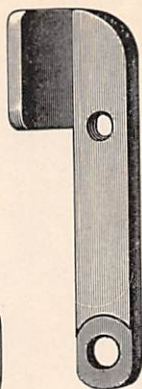

41344



41345



1429



207



1430



152



200



1550



2106



418



2455



10141



1562



PLATE 2837—ONE-FOURTH SIZE

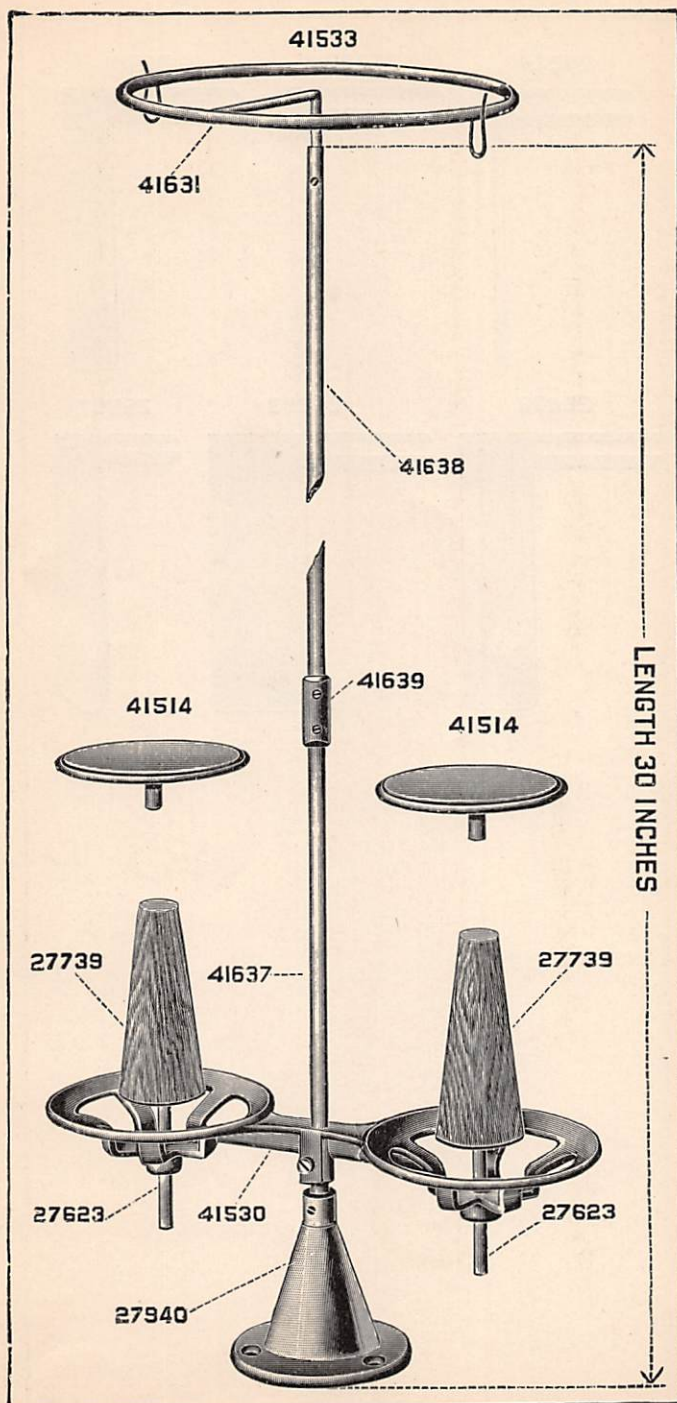 


PLATE 5089—FULL SIZE

 
26279



26280




26281

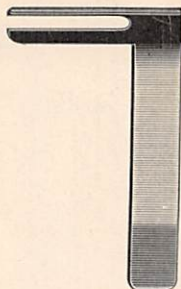

26282



 26283

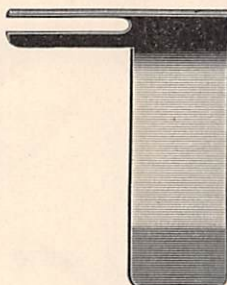

25967



PLATE 5857—FULL SIZE


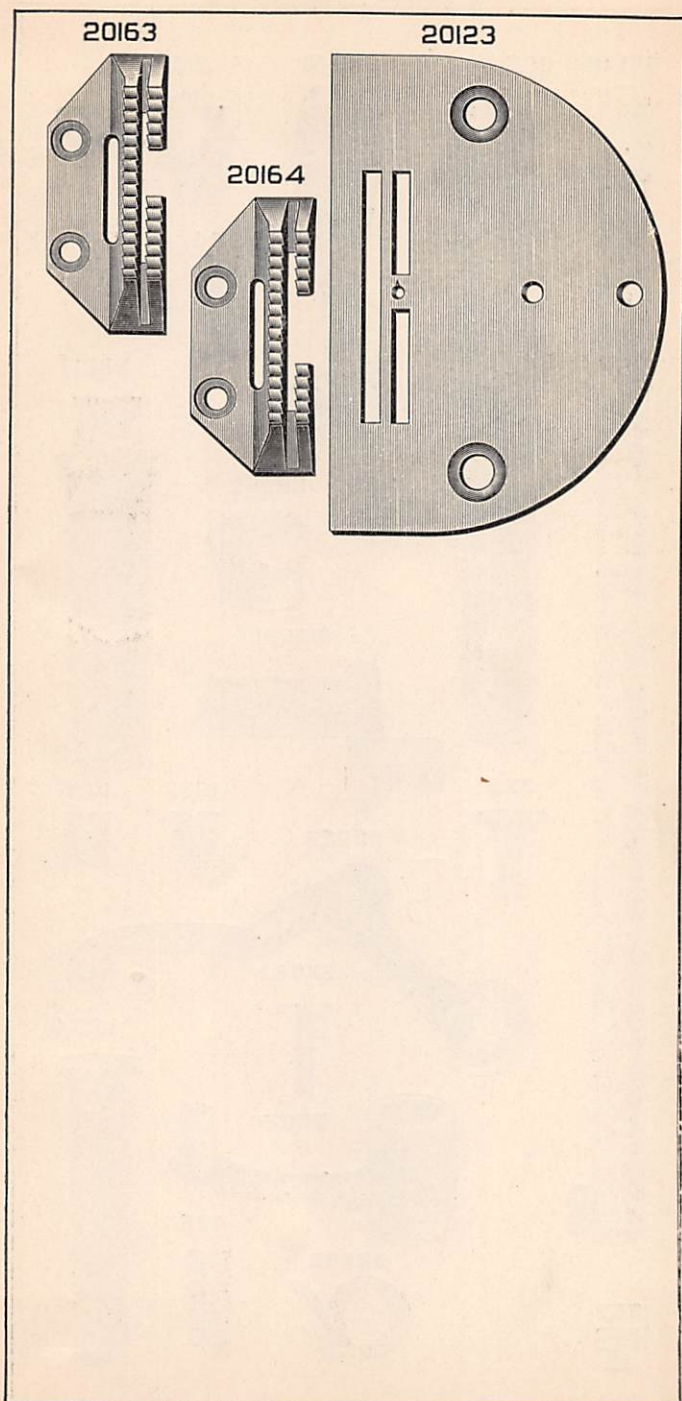 


PLATE 5861—FULL SIZE

 52012



52014



 
24040



29532



52021

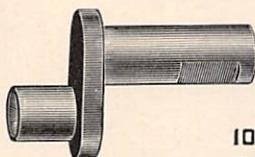

52022

24041



52013



1037



 
1036



52023



52024

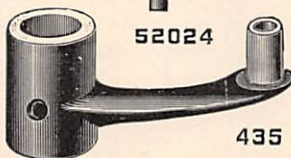

52026



435



11204



PLATE 5865—FULL SIZE

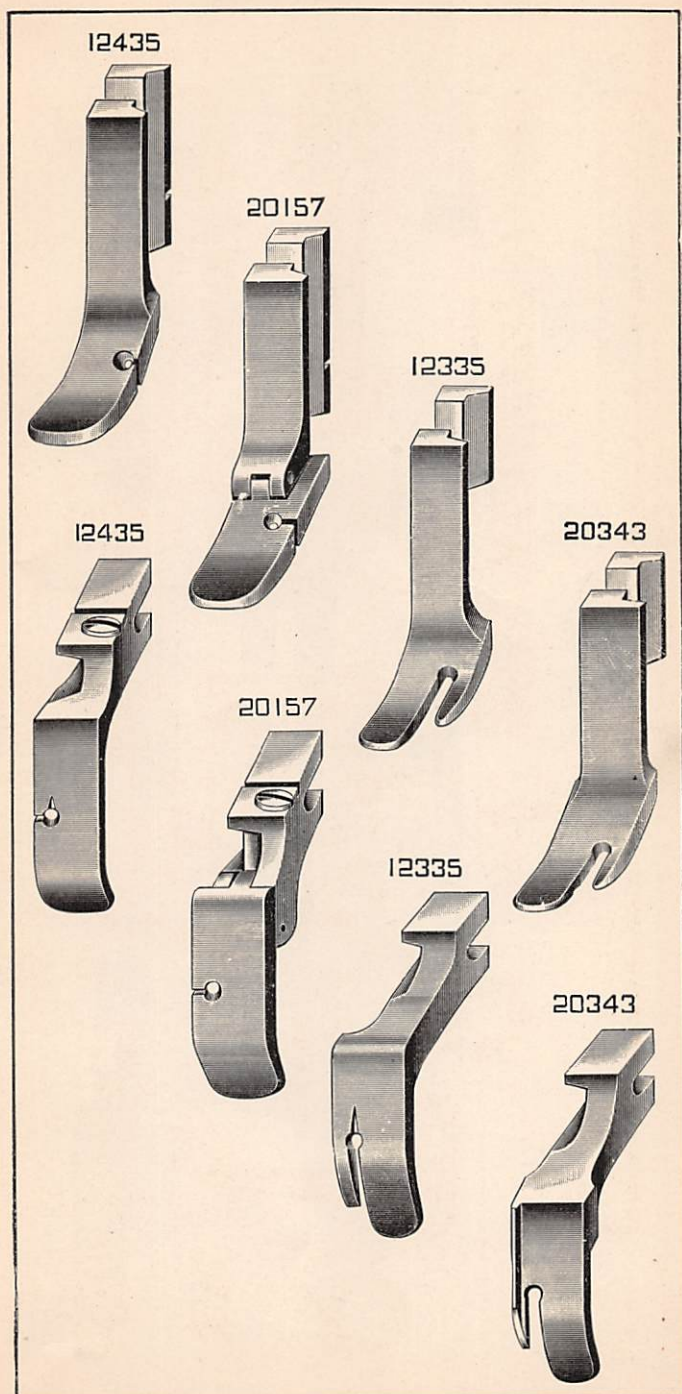 


PLATE 5866—FULL SIZE

 
12462




12463



20134



20361

 

12462



12463



20134

 


20361

 


PLATE 5869—FULL SIZE

 
52076

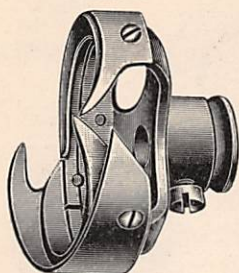


40396

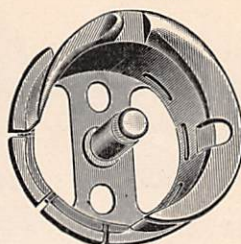

40395

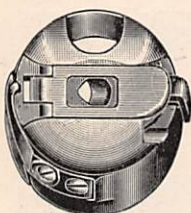

40264

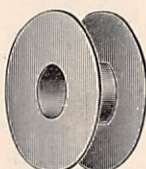 

40274



40392



55625



2974



2975



592



1367



40398



1053



40394



591



 
1380



1253



52018

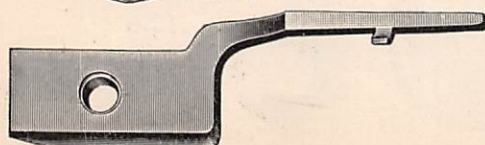

914



PLATE 5872—FULL SIZE


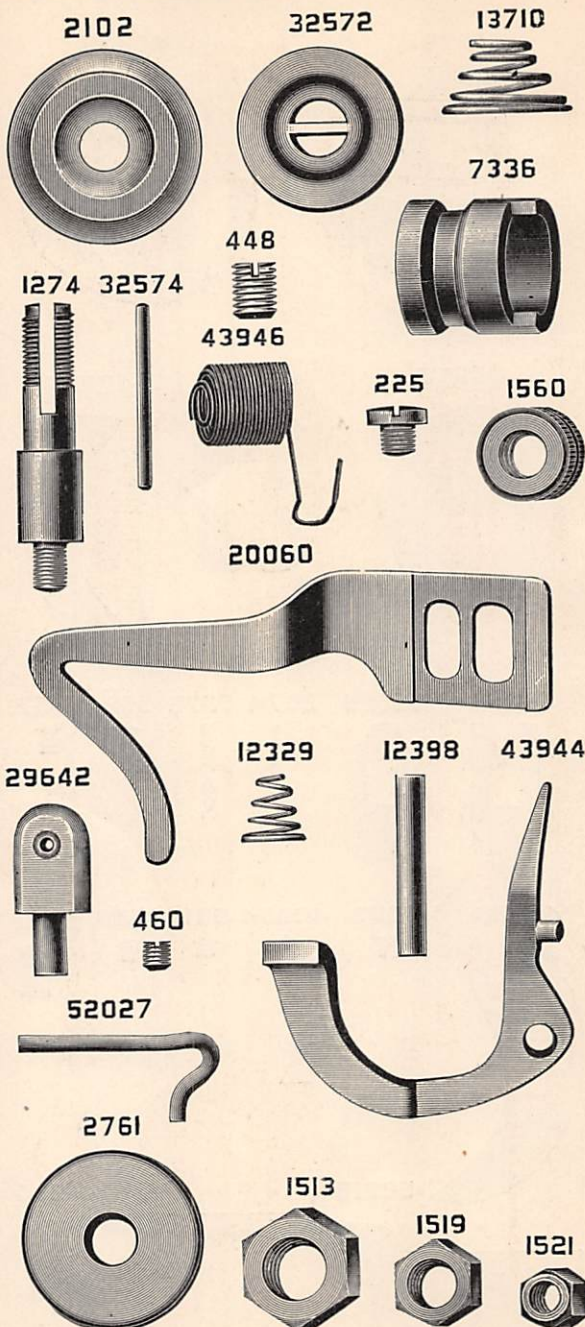 


PLATE 5874—FULL SIZE

 12362



12361

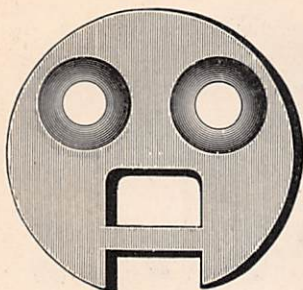

12405



9261



24107



24106



970



5601



5735



12416



12240



12241



41515



8879



21351



PLATE 5875—FULL SIZE


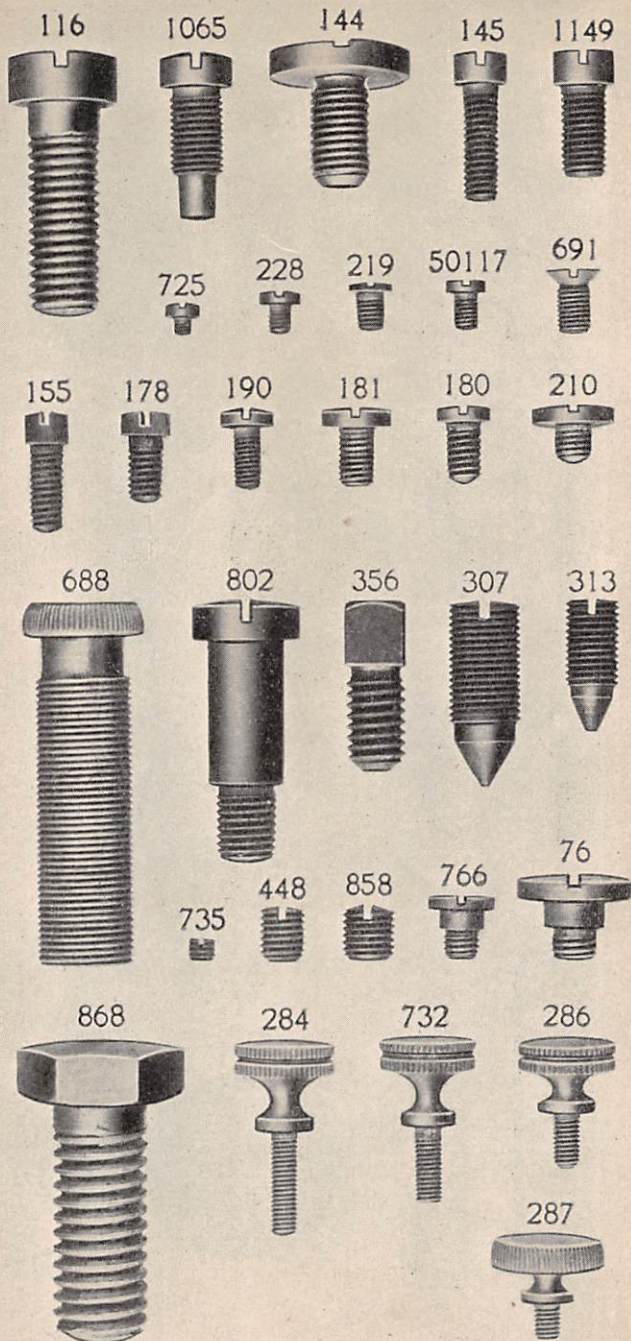 


PLATE 5876—ONE-FOURTH SIZE

 24108



12242

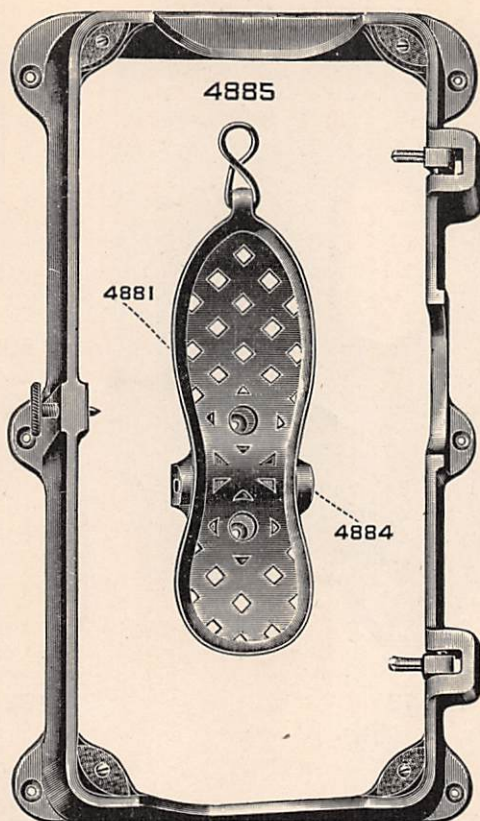

12242



4880

12243

7125

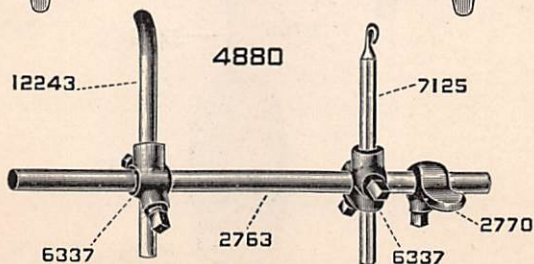 


PLATE 5877—ONE-FOURTH SIZE

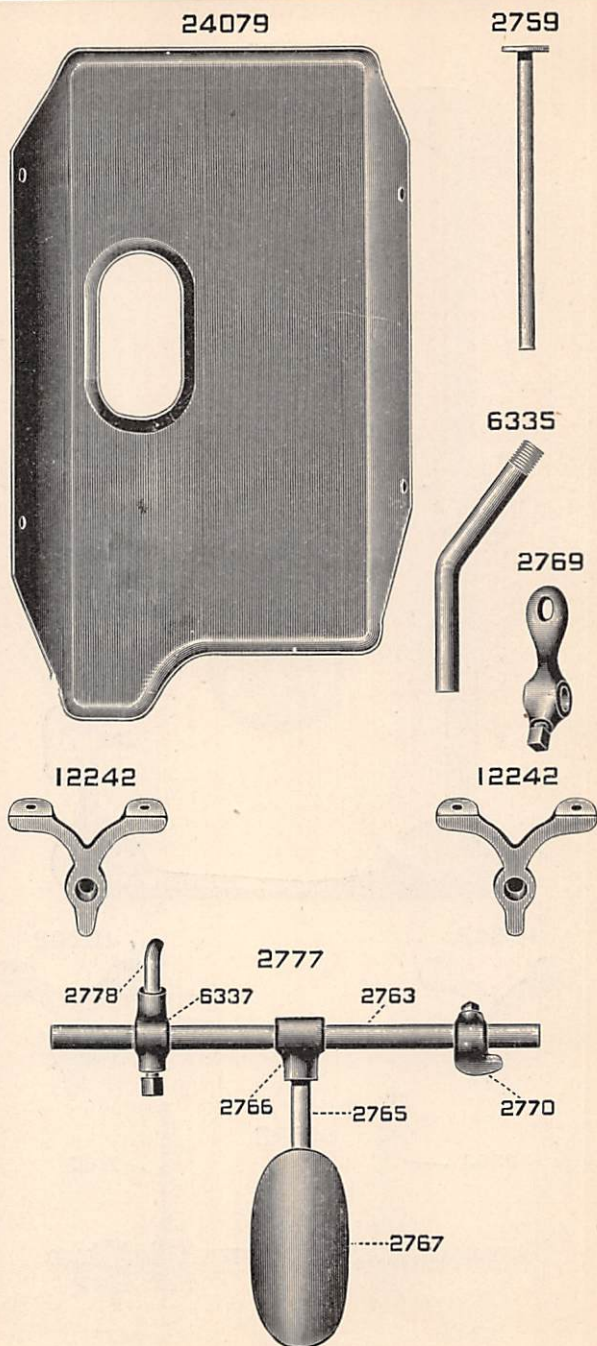 


PLATE 5878—ONE-HALF SIZE

16510



 
52028




4882




4883

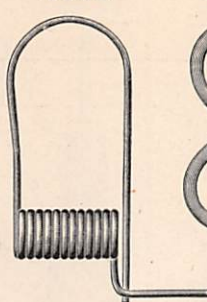

4879

 

5598

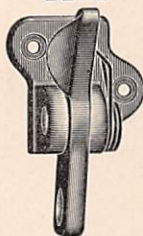 

5596



5599



PLATE 5879—ONE-HALF SIZE

 
25026




26485




8909

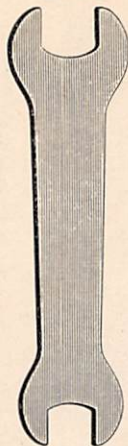

8908

 

36569

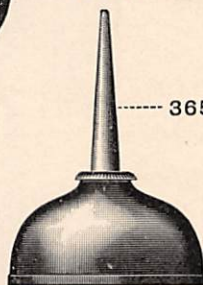 


36571

26763


19066

 19067

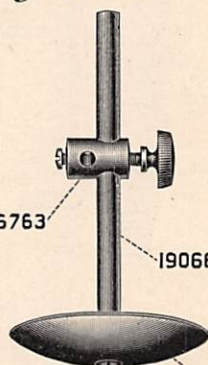

26764

 52005

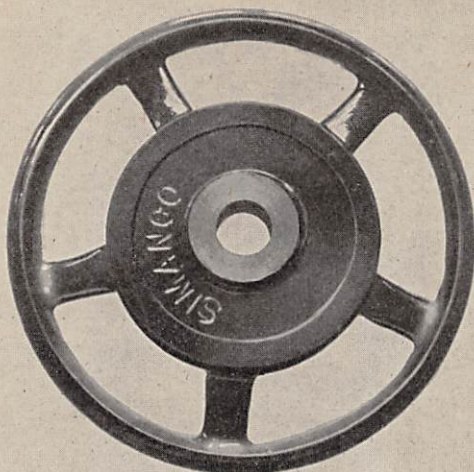

52081



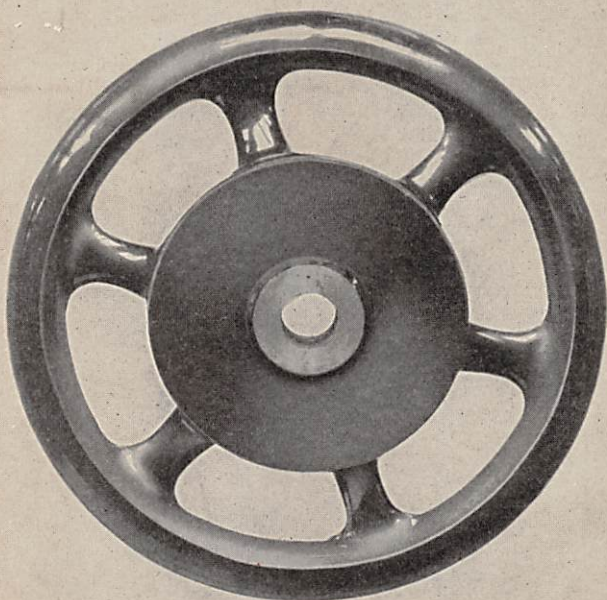 


PLATE 5894—ONE-HALF SIZE

 52052

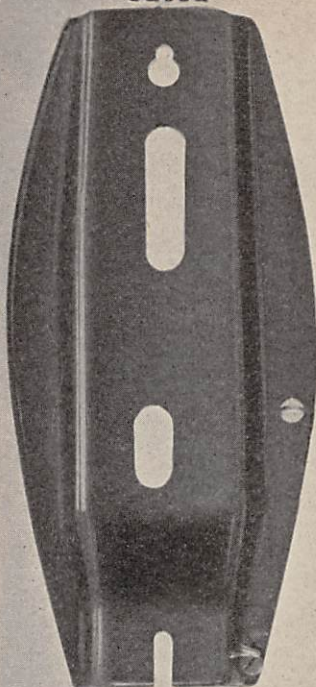

12193

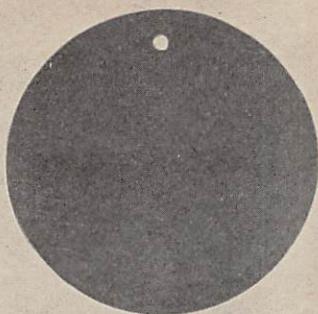 

4307



12432



52059



52063



 
52078



12480



52072

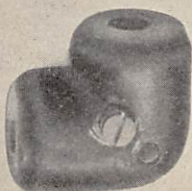

52071

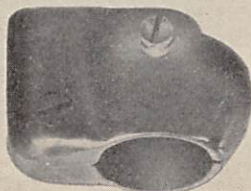 


PLATE 5895—ONE-HALF SIZE

 
52058

52068

52065

52070

24037

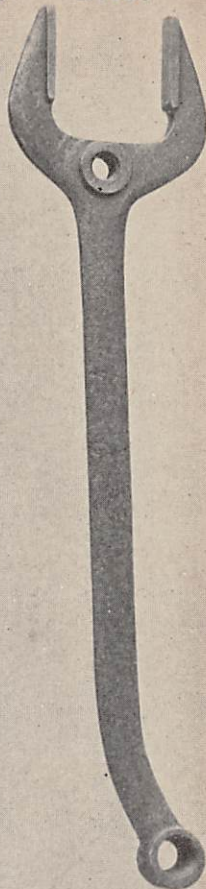

24035




52015



PLATE 5896—ONE-HALF SIZE

 12430

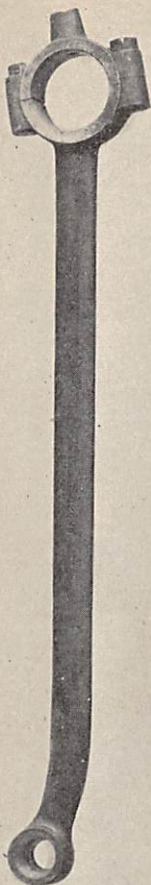

12391



11167



52011



24036



52043



52042

PLATE 5897—FULL SIZE



50083



52073



3033



375



818



1518



1128



20059



12376



157



29633



1813



PLATE 5898—FULL SIZE

52062



 
56101



561Q0



52060

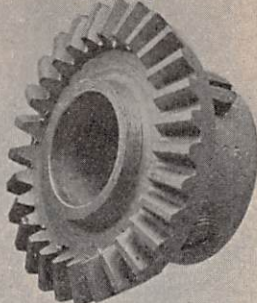

56106



56107



447



1148



52045



432



52089



56099



52090



56013



PLATE 5899—FULL SIZE

 
50304



52083



52082

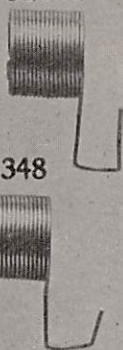

2103



41569



52348



50305



50190



50053



50234



1443



590



121



880



127



966



158



456



457



435



446



171



185



208



50191



PLATE 5900—FULL SIZE

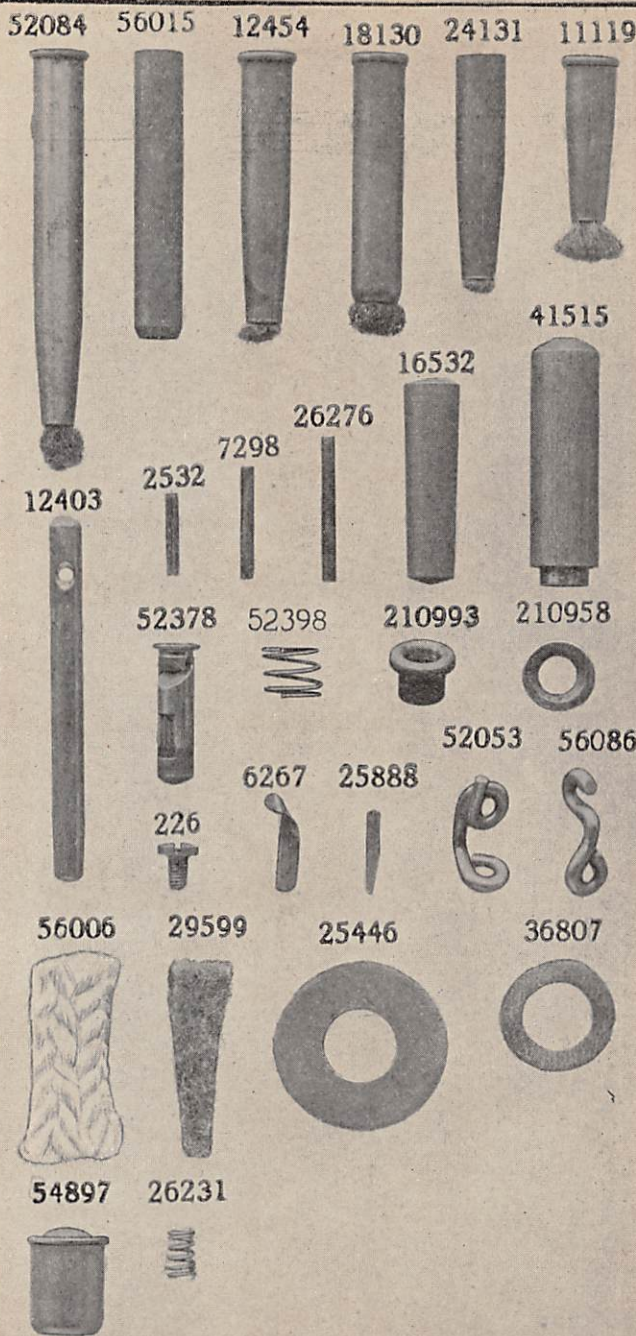 


PLATE 5902—ONE-HALF SIZE


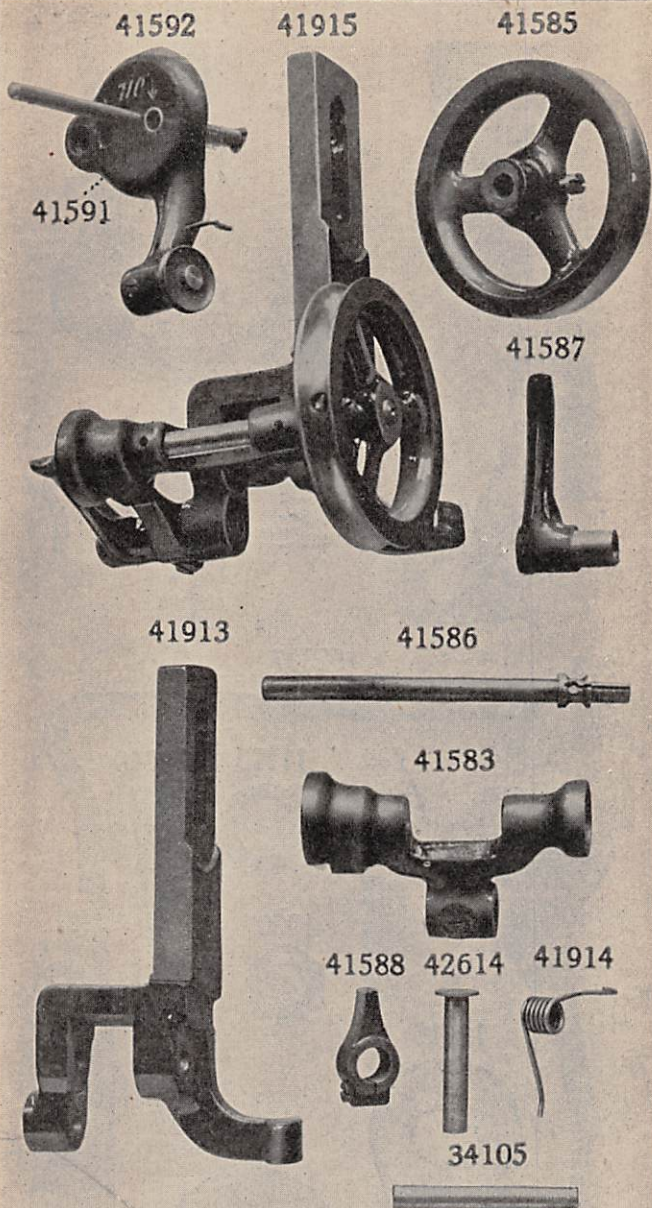 


PLATE 5936—FULL SIZE

 52338




12329

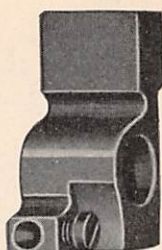


12398



 43944

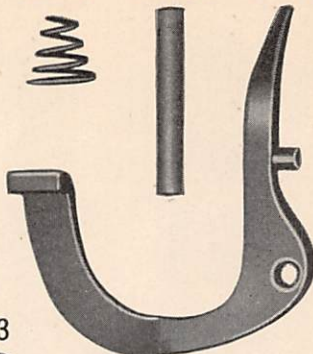

12327

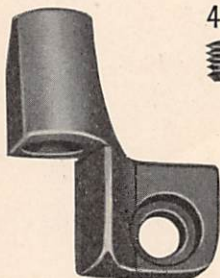 

453



41593



41594



 
41595



223



52337

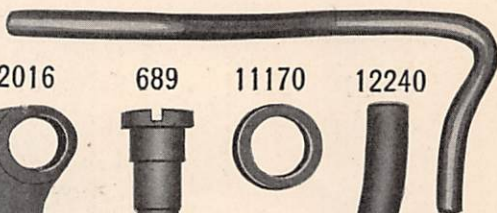

52016



689



11170



12240



12241



1520



12416



8879



PLATE 5945—FULL SIZE

36575



36574



36576



50202



36821



36820



196



36818



50316



36819



PLATE 6138—FULL SIZE

25873

