

PRICE LIST

OF

PARTS



MACHINE No. 98-2

THE SINGER MANUFACTURING COMPANY

PRICE LIST
OF
PARTS

COPYRIGHT, U. S. A., 1916, BY THE SINGER MANUFACTURING CO.

INSTRUCTIONS FOR ORDERING

INDEX

	PAGE
ACCESSORIES.....	14
BOBBIN WINDER.....	14
COLUMN STAND.....	15
DRIVING ATTACHMENT.....	15
MACHINE No. 98-2.....	7
NUMERICAL LIST OF PARTS.....	19
OBSOLETE PARTS.....	17
TIRE ROLLER PARTS.....	16
TRIMMINGS FOR COLUMN STAND.....	17

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the part **NUMBER** in the **FIRST** column.

The number stamped on a Sewing Machine part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not Polished.
- F. Hardened and Polished.
- G.
- H. Blued.
- J. Plated only.
- K. Hardened and Plated.
- L. Brass or Gilt.
- M. Oxidized.
- P. Japanned.

These letters **MUST BE USED** *when* they appear in the list. and **AFTER** the number *as* in the list.

In this series

1 to 1500 and 50001 to 51500 are Screw Numbers.

1501 to 1800 are Nut Numbers.

1801 to 2000 are Roller Numbers.

2001 to 50000 and 52001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are **NOT TO BE USED** in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

LIST OF PARTS COMPLETE **FOR** **MACHINE NO. 98-2**

**FOR STITCHING TREADS ON USED AUTOMOBILE TIRES. HAS 3 INCH
CYLINDER SHUTTLE, REVERSE FEED MECHANISM, S. D. A., AND
COLUMN STAND. THERE ARE BRACKETS ATTACHED TO THE
RIGHT HAND SIDE OF THE COLUMN STAND WHICH ARE
FITTED WITH ROLLERS TO FACILITATE THE TURN-
ING OF THE TIRE WHILE BEING STITCHED.
LENGTH OF STITCH UP TO $\frac{1}{2}$ INCH.**

NO.	PLATE	NAME	EACH
*61501	—	Arm.....	\$40 00
8582	6775	" Dowel Pin.....	02
338E	6777	" Screw.....	10
61502	6763	" Shaft.....	8 50
61503	6762	" " Bushing.....	1 25
434C	6776	" " " Set Screw.....	04
61504	6760	Balance Wheel with two 344c.....	6 00
344C	6777	" " Set Screw.....	08
61632	6761	Crank Connecting Rod with 61633 and two 840E.....	7 00
*61633	—	Crank Connecting Rod Cap.....	—
840E	6776	" " " " Screw.....	06
61507	6775	" " " Hinge Pin.....	50
448C	6776	" " " " " S e t Screw.....	03
*61508	—	Cylinder.....	40 00
61509	6761	" Side Cover.....	25
701D	6778	" " " Hinge Screw.....	06
61510	6761	" Top Cover.....	50
335D	6776	" " " Screw.....	02
61511	6761	Face Plate.....	1 00
61512	6762	" " Lock Spring.....	20
181D	6776	" " " " Screw.....	04
29627	6775	" " " " Steady Pin.....	02
563C	6776	" " Screw Centre.....	04
1547J	6779	" " " " Nut.....	03
61513	6761	Feed Bar.....	1 50
61514	6762	" " Bell Crank.....	2 00
61515	6762	" " " " Bracket with t w o 145E.....	2 00
50040D	6776	Feed Bar Bell Crank Bracket Cap Screw.	07

NO.	PLATE	NAME	EACH
145E	6776	Feed Bar Bell Crank Bracket Clamping Screw.....\$	04
50040D	6776	Feed Bar Bell Crank Cap Screw.....	07
61516	6762	" " " " Connecting Link	75
50040D	6776	" " " " " "	
		Cap Screw.....	07
61517	6762	Feed Bar Guide Bracket (lower).....	3 50
61518	—	" " " " " Cap....	3 00
61519	6762	" " " " " " 61518 with 11424 and 61598.....	3 40
164D	6771	Feed Bar Guide Bracket (lower) Cap Screw.....	04
61520	6762	Feed Bar Guide Bracket (lower) Collar with two 448c.....	25
448c	6776	Feed Bar Guide Bracket (lower) Collar Set Screw.....	03
61521	6762	Feed Bar Guide Bracket (upper) with two 454c.....	1 50
454c	6776	Feed Bar Guide Bracket (upper) Set Screw	02
61522	6762	" " Socket Joint.....	3 00
61523	6762	" " " " Cap.....	1 25
164D	6771	" " " " " Screw.....	04
61524	6763	" Cam.....	7 00
61525	6775	" " Brake (leather).....	05
803c	6776	" " " Adjusting Screw.....	10
1650c	6779	" " " " " Nut...	03
2883	6775	" " " Rivet.....	05
61526	—	" " " Spring.....	30
61527	6764	" " " " 61526 with 61525 and two 2883.....	45
190D	6771	Feed Cam Brake Spring Screw.....	03
61528	6764	" " Collar with two 445c.....	40
445c	6776	" " " Set Screw.....	03
61529	6765	" Regulator with 446c and 14024....	3 00
50317c	6773	" " Adjusting Stud.....	20
1506E	6773	" " " " Nut....	05
38268	6773	" " " " " Washer	10
61530	6773	" " " " Sleeve...	50
61531	6765	" " Connection.....	1 00
369c	6777	" " " Hinge Screw	20
1509c	6779	" " " " "	
		Nut.....	06
8937	6775	Feed Regulator Pin.....	02
446c	6776	" " Set Screw.....	03
61532	6765	" " Shaft.....	75
61533	6765	" " " Collar with two 448c.....	30

PARTS FOR MACHINE NO. 98-2

NO.	PLATE	NAME	EACH
448c	6776	Feed Regulator Shaft Collar Set Screw...	\$ 03
61534	6765	" " " Crank with 346d,	
		1513E and 1965.....	1 75
346D	6777	Feed Regulator Shaft Crank Clamping	
		Screw.....	08
8937	6775	Feed Regulator Shaft Crank Pin.....	02
1965	6778	" " " " Roller and	
		Screw Stud.....	45
1513E	6779	Feed Regulator Shaft Crank Roller and	
		Screw Stud Nut.....	05
14024	6775	Feed Regulator Stop Pin.....	01
61535	6764	" Reverse Cam.....	5 00
3012	6775	" " " Pin.....	01
119c	6776	" " " Screw.....	05
61536	6764	" " Latch.....	1 25
802D	6778	" " " Hinge Screw.....	10
61537	6763	" " " Hub with two 363c..	5 00
363c	6777	" " " " Set Screw.....	05
61538	6764	" " " Spring.....	10
335D	6776	" " " " Screw.....	02
61539	6764	" " Lever.....	50
61540	6764	" " " Bracket with 449c..	60
1177D	6776	" " " " Screw.....	04
61541	6764	" " " Hinge Pin.....	10
449c	6776	" " " " " Set Screw.	02
61542	6775	" " " Stop Pin.....	02
61543	6764	" " " Tripping Stud.....	2 00
61544	—	" " " " " 61543	
		with 2049 and 61545.....	2 75
61545	6764	Feed Reverse Lever Tripping Stud Head	75
2049	6775	" " " " " "	
		Pin.....	01
61546	6764	Feed Reverse Lever Tripping Stud Spring	05
61547	6765	" Rock Shaft.....	75
61548	6765	" " " Crank (left) with 445c..	1 50
8937	6775	" " " " " Pin.....	02
445c	6776	" " " " " Set Screw..	03
61549	6765	" " " " (right) with 445c	1 25
8937	6775	" " " " " Pin.....	02
445c	6776	" " " " " Set Screw	03
61550	6767	Feeding Foot with 1149F.....	3 00
1149F	6776	" " Clamping Screw.....	04
61551	6761	Lifting Presser Bar.....	1 25
61552	6765	" " " Connecting Link....	60
50040D	6776	" " " " " Cap	
		Screw.....	07

NO.	PLATE	NAME	EACH
61553	6765	Lifting Presser Bar Guide Bracket with two 141E.....	\$ 3 00
50040d	6776	Lifting Presser Bar Guide Bracket Cap Screw.....	07
141E	6776	Lifting Presser Bar Guide Bracket Clamping Screw.....	04
61554	6765	Lifting Presser Bar Guide Bracket Guide	75
129E	6776	" " " " " " " " Screw.....	04
61555	6766	Lifting Presser Bar Lifter with 8761 and 8763.....	2 00
8760	6768	Lifting Presser Bar Lifter Friction Washer	03
16c	6778	" " " " Hinge Screw...	20
8761	6768	" " " " Stop Pin.....	05
61556	6773	" " " Lifting Bracket with 50319c.....	75
50319c	6773	Lifting Presser Bar Lifting Bracket Set Screw.....	10
61557	6766	Lifting Presser Bar Lifting Link.....	50
8763	6768	" " " " " Hinge Stud.....	25
8973	6768	Lifting Presser Bar Lifting Link Hinge Stud Pin.....	05
8765	6768	Lifting Presser Bar Lifting Link Hinge Stud Washer.....	04
61558	6766	Lifting Presser Bar Rock Shaft.....	75
61559	6774	" " " " " Bracket	2 00
338E	6777	" " " " " " " " Screw.....	10
61560	6766	Lifting Presser Bar Rock Shaft Connection with two each 141E and 1521E.....	1 50
141E	6776	Lifting Presser Bar Rock Shaft Connection Adjusting Screw.....	04
1521E	6779	Lifting Presser Bar Rock Shaft Connection Adjusting Screw Nut.....	03
824c	6773	Lifting Presser Bar Rock Shaft Connection Hinge Screw.....	20
1608c	6773	Lifting Presser Bar Rock Shaft Connection Hinge Screw Nut.....	05
61561	6773	Lifting Presser Bar Rock Shaft Connection Hinge Screw Sleeve.....	50
14129	6775	Lifting Presser Bar Rock Shaft Connection Hinge Screw Sleeve Washer.....	10
61562	6766	Lifting Presser Bar Rock Shaft Crank (left) with 448c.....	60
8937	6775	Lifting Presser Bar Rock Shaft Crank (left) Pin.....	02

PARTS FOR MACHINE NO. 98-2

11

NO.	PLATE	NAME	EACH
448c	6776	Lifting Presser Bar Rock Shaft Crank (left) Set Screw.....	\$ 03
61563	6766	Lifting Presser Bar Rock Shaft Crank (right) with 448c.....	1 25
8937	6775	Lifting Presser Bar Rock Shaft Crank (right) Pin.....	02
448c	6776	Lifting Presser Bar Rock Shaft Crank (right) Set Screw.....	03
61564	6761	Lifting Presser Bar Spring (flat) lower...	1 25
61565	6761	" " " " " upper...	1 25
61566	6766	" " " " Bracket.....	50
575E	6776	" " " " " Screw.	05
11661	6775	" " " " Guide Pin....	02
609D	6777	" " " " Regulating Thumb Screw.....	45
1606c	6779	Lifting Presser Bar Spring Regulating Thumb Screw Lock Nut.....	05
61567	6767	Lifting Presser Foot with two 129D.....	3 00
129D	6776	" " " Clamping Screw....	04
61635	6774	Lubricating Cup.....	1 00
61636	6774	" " Cover.....	75
9084	6775	" " " Hinge Pin.....	02
50325E	6778	" " " Lock Stud.....	10
8285	6775	" " " " " Hinge Pin.....	01
1538D	6779	Lubricating Cup Cover Lock Stud Thumb Nut.....	06
42785	6775	Lubricating Cup Cover Thread Stripper (rubber).....	03
1397L	6776	Lubricating Cup Cover Thread Stripper Regulating Screw Stud.....	06
61637	6774	Lubricating Cup complete, Nos. 1538D, 8285, 9084, 50325E, 61635, 61636 and two each 1397L and 42785.....	2 10
134D	6776	Lubricating Cup Screw.....	05
61574	6761	Needle Bar.....	1 25
61575	6766	" " Connecting Link.....	1 25
50320c	6777	" " " " Hinge Screw	20
1509c	6779	" " " " " " "	
		Nut.....	06
61576	6766	Needle Bar Connecting Stud with two 129E.....	2 00
129E	6776	Needle Bar Connecting Stud Clamping Screw.....	04
61577	6768	Needle Clamp with 149F and 8749.....	1 25
8749	6768	" " Gib.....	25
149F	6768	" " Set Screw.....	06

NO.	PLATE	NAME	EACH
61578	6768	Needle Plate with 61580 and two 185H, for flat work.....	\$ 2 00
61579	6768	Needle Plate with 61580 and two 185H, for tire work.....	2 00
164F	6771	Needle Plate Screw.....	04
61580	6768	" " Thread Guard.....	50
185H	6768	" " " " Screw.....	02
61581	6774	Oscillating Rock Shaft with 448c.....	10 00
61582	—	Oscillating Rock Shaft complete, Nos. 61581 and 61583.....	11 25
61583	6774	Oscillating Rock Shaft Hinge Pin.....	1 25
435c	6776	" " " " " Set Screw.....	04
61584	6770	Oscillating Shaft.....	1 50
61585	—	" " Crank.....	1 50
61586	6770	Oscillating Shaft Crank complete, Nos. 445c, 1508E, 61585 and 61589.....	2 80
61587	6775	Oscillating Shaft Crank Pin.....	03
445c	6776	" " " Set Screw.....	03
61588	6771	" " " Slide Block.....	75
61589	6771	Oscillating Shaft Crank Slide Block com- plete, Nos. 164D, 1156c, 19772 and 61588.....	1 20
164D	6771	Oscillating Shaft Crank Slide Block Cap Screw.....	04
19772	6771	Oscillating Shaft Crank Slide Block Cap Screw Washer.....	15
1156c	6771	Oscillating Shaft Crank Slide Block Screw Stud.....	25
1508E	6771	Oscillating Shaft Crank Slide Block Screw Stud Nut.....	06
1235F	6776	Oscillating Shaft Oil Hole Screw.....	04
11910	6769	Shuttle Bobbin.....	25
61590	6769	" Cylinder.....	1 50
8961	6769	" " Hinge Pin.....	02
11853	6769	" " Latch.....	15
2027	6769	" " " Pin.....	01
19869	6769	" " " Spring.....	01
19978	6769	" Frame.....	1 75
773H	6769	" Tension Regulating Screw.....	05
19979	6769	" " Spring.....	40
61591	6769	Shuttle (cylinder) complete, Nos. 773H, 2027, 8961, 11853, 11910, 19869, 19978, 19979 and 61590.....	4 00
61592	6770	Shuttle Driver with 445c.....	3 00
61587	6775	" " Pin.....	03
445c	6776	" " Set Screw.....	03

PARTS FOR MACHINE NO. 98-2

13

NO.	PLATE	NAME	EACH
61593	—	Shuttle Race Body.....	\$ 5 00
61594	6770	“ “ Ring.....	1 00
164D	6771	“ “ Screw.....	04
61595	6770	Shuttle Race complete, Nos. 61593, 61594 and two 164D.....	6 00
130D	6776	Shuttle Race Screw.....	06
8786	6772	Tension Disc.....	15
61596	6780	“ Drip Cup.....	25
61597	6780	“ “ Arm.....	15
164D	6771	“ “ “ Screw.....	04
164D	6771	“ “ “ Screw.....	04
1535E	6772	“ Regulating Thumb Nut.....	10
50321E	6772	“ Screw Stud.....	25
1517E	6779	“ “ “ Nut.....	04
9842	6775	“ “ “ “ Washer.....	02
8788	6772	“ Spring.....	25
8787	6772	“ “ Washer.....	01
61598	6772	“ Thread Guide.....	35
11424	6772	Thread Eyelet (front of arm).....	03
11425	6772	“ “ (side of arm).....	05
61599	6774	“ Guiding Roller (wood).....	25
61600	6774	“ “ “ Pin.....	10
61601	6774	“ “ “ “ Bracket.....	15
61602	6774	“ “ “ “ “ 61601 with 61600.....	25
164D	6771	Thread Guiding Roller Pin Bracket Screw	04
21506	6773	“ “ “ “ Collar with 457C.....	10
457C	6776	Thread Guiding Roller Pin Collar Set Screw	02
61603	6774	“ Take-up Cam with two 432C....	12 00
8714	6775	“ “ “ Pin.....	15
432C	6776	“ “ “ Set Screw.....	04
61604	6770	“ “ Lever with 1513E and 1865	4 00
819C	6778	“ “ “ Hinge Screw.....	30
1865	6778	“ “ “ Roller and Screw Stud.....	45
1513E	6779	Thread Take-up Lever Roller and Screw Stud Nut.....	05
19690	6771	Thread Take-up Spring.....	05
11446	6771	“ “ “ Hook (lower)....	04
1549J	6771	“ “ “ “ “ Nut	03
61605	6771	“ “ “ “ (upper)....	01
61606	6771	“ “ “ Lever with 61605.	1 00
194E	6771	“ “ “ “ Stop Screw.	02
61607	6771	“ “ “ Regulator Plate	10
190D	6771	“ “ “ “ “ Adjusting Screw.....	03

ACCESSORIES

NO.	PLATE	NAME	EACH
779E	6777	Machine Screw.....	\$ 10
36565	6783	Oiler (copper plated) with 36566.....	15
36566	6783	" Spout, 9 in. long.....	08
11831	6783	Screw Driver (large).....	20
26026	6783	" " (small).....	10
61638	6784	Threading Wire for 61637.....	10
4822	6783	Wrench for 1521, 1547 and 1549.....	05
8909	6783	" " 1513, 1517, 1608 and 50319..	10
9347	6784	" (socket) for 346 and 363.....	10
21874	6783	" for 344 and 779.....	25
25086	6783	" " 1506 and 1606.....	10
43184	6783	" " 1508, 1509 and 1650.....	50

BOBBIN WINDER

(SWINGING AUTOMATIC, LEFT HAND)

NO.	PLATE	NAME	EACH
41894	6781	Base with 449c.....	\$ 50
894D	6776	" Screw.....	05
41895	6775	Bobbin Carrier Key.....	01
41896	6782	Frame.....	35
41441	6782	" Hinge Pin.....	10
449C	6776	" " " Set Screw.....	02
4784	6775	" Oil Pad.....	01
41897	6782	" Spring.....	05
43176	6782	Pulley (leather).....	75
43177	6782	" Flange with two 448c.....	35
448C	6776	" " Set Screw.....	03
131D	6776	" Screw.....	04
43178	6782	" Washer.....	50
41898	6781	Spindle with 41895.....	25
41557	6781	Stop Latch.....	15
41446	6781	" " Hinge Pin.....	10
2269	6775	" " Pin.....	01
41899	6782	Tripping Arm with 176D.....	20
176D	6776	" " Clamping Screw.....	03
41900	6781	Bobbin Winder, Nos. 2269, 41441, 41446, 41557, 41894, 41896 to 41899, 43176 to 43178, two 4784 and three 131D.....	3 45

BOBBIN WINDER

15

NO.	PLATE	NAME	EACH
60218	6774	Bracket.....	\$ 75
523D	6777	“ Screw.....	15
2102	6772	Tension Disc.....	05
1560C	6772	“ Regulating Thumb Nut.....	04
637C	6772	“ Screw Stud.....	08
2103	6772	“ Spring.....	03
5769	6772	“ Thread Eyelet.....	03
41452	6780	Thread Guard.....	40
60221	6780	“ “ Rod.....	30
1513E	6779	“ “ “ Nut.....	05
330D	6776	“ “ Set Screw.....	02
41453	—	Thread Guard complete, Nos. 330D, 637C, 1560C, 2103, 5769, 41452 and two 2102.	70
60222	—	Thread Guard Rod complete, Nos. 1513E, 41453 and 60221.....	1 05
60223	—	Bobbin Winder (swinging automatic, left hand) complete, Nos. 523D, 41900, 60218, 60222 and three 894D.....	5 55
60224	6774	Drip Cup.....	25
60225	6761	“ “ Tray.....	20
60226	6780	“ “ “ Bracket.....	10
138E	6776	“ “ “ Screw.....	05
2018	6775	“ “ “ “ Washer.....	01

COLUMN STAND

NO.	PLATE	NAME	EACH
61608	—	Column Stand.....	\$27 50
785E	6777	“ “ Screw.....	05

DRIVING ATTACHMENT

NO.	PLATE	NAME	EACH
8984	6780	Brake Block (wood).....	\$ 05
9D	6778	“ “ Screw.....	20
61609	6760	“ Lever.....	1 50
61610	6774	“ “ Bracket with 563C.....	1 50
787E	6776	“ “ “ Screw.....	15
61611	6780	“ “ Hinge Pin.....	15
563C	6776	“ “ “ “ Set Screw.....	04

DRIVING ATTACHMENT

NO.	PLATE	NAME	EACH
61612	6760	Driving Pulley with 448c and 61613.....	\$ 3 50
61613	6775	“ “ Oil Tube (brass).....	15
448c	6776	“ “ Stop Screw.....	03
8985	6760	Friction Pulley with 8986.....	2 75
8986	6780	“ “ Centre Bearing.....	25
61614	6774	“ “ Stud with 61616.....	1 50
1739c	6779	“ “ Nut.....	15
61615	6780	“ “ “ Washer.....	05
61616	6780	“ “ “ Washer.....	30
8987	6760	“ Washer (paper).....	10
401E	6776	“ “ Screw.....	02
61617	6760	Starting Lever.....	2 00
61639	6774	“ “ Bracket with 563c.....	1 50
787E	6776	“ “ “ Screw.....	15
61611	6780	“ “ Hinge Pin.....	15
563c	6776	“ “ “ Set Screw.....	04
8992	6780	“ “ Spring.....	20
61618	6780	“ “ “ Hook.....	10
61619	6760	Treadle.....	30
61620	6760	“ Bracket.....	60
129E	6776	“ “ Screw.....	04
61621	6780	“ Hinge Pin.....	10
61622	6784	“ Pitman Rod (lower).....	05
61622	6784	“ “ “ (upper).....	05
9079	6784	“ “ “ Clamp with 354c... ..	12
354c	6777	“ “ “ “ Screw.....	06
61623	—	Treadle Pitman complete, two each Nos. 9079 and 61622.....	35
61624	6760	Treadle complete, Nos. 61619 to 61621... ..	1 00
61625	—	Treadle and Pitman complete, Nos. 61623 and 61624.....	1 35
—	—	Six feet, 2 $\frac{3}{8}$ inches of 1 $\frac{1}{2}$ inch flat belting	—

TIRE ROLLER PARTS

NO.	PLATE	NAME	EACH
61626	6785	Roller.....	\$ 25
61627	6787	“ Bracket.....	2 00
1062E	6777	“ “ Screw.....	08
308c	6776	“ Screw Centre.....	05
1517E	6779	“ “ “ Nut.....	04
61628	—	Tire Roller complete, Nos. 61627, two 61626 and four each 308c and 1517E... ..	2 85

OBSOLETE PARTS

NO.	PLATE	NAME		EACH
1524E	6779	Tire Table Bolt Nut.....	\$	02
61631	6785	“ “ Bracket (left).....		50
61634	6785	“ “ “ (right).....		50
1062E	6777	“ “ “ Screw.....		08

NUMERICAL LIST OF PARTS
FOR
MACHINE No. 98-2

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
9D	6778	Driving Attachment Brake Block Screw.	\$ 20
16C	6778	Lifting Presser Bar Lifter Hinge Screw...	20
119C	6776	Feed Reverse Cam Screw.....	05
129E	6776	Driving Attachment Treadle Bracket Screw.....	04
129E	6776	Lifting Presser Bar Guide Bracket Guide Screw.....	04
129D	6776	Lifting Presser Foot Clamping Screw for 61567.....	04
129E	6776	Needle Bar Connecting Stud Clamping Screw for 61576.....	04
130D	6776	Shuttle Race Screw.....	06
131D	6776	Bobbin Winder Pulley Screw for 41900..	04
134D	6776	Lubricating Cup Screw.....	05
138E	6776	Bobbin Winder Drip Cup Tray Screw....	05
141E	6776	Lifting Presser Bar Guide Bracket Clamp- ing Screw for 61553.....	04
141E	6776	Lifting Presser Bar Rock Shaft Connection Adjusting Screw for 61560.....	04
145E	6776	Feed Bar Bell Crank Bracket Clamping Screw for 61515.....	04
149F	6768	Needle Clamp Set Screw for 61577.....	06
164D	6771	Feed Bar Guide Bracket (lower) Cap Screw.....	04
164D	6771	Feed Bar Socket Joint Cap Screw.....	04
164F	6771	Needle Plate Screw.....	04
164D	6771	Shuttle Race Ring Screw for 61595.....	04
164D	6771	Tension Drip Cup Arm Screw.....	04
164D	6771	“ “ “ Screw.....	04
164D	6771	Thread Guiding Roller Pin Bracket Screw	04
164D	6771	Oscillating Shaft Crank Slide Block Cap Screw for 61589.....	04
176D	6776	Bobbin Winder Tripping Arm Clamping Screw for 41899.....	03
181D	6776	Face Plate Lock Spring Screw.....	04
185H	6768	Needle Plate Thread Guard Screw for 61578 and 61579.....	02
190D	6771	Feed Cam Brake Spring Screw.....	03
190D	6771	Thread Take-up Spring Regulator Plate Adjusting Screw.....	03
194E	6771	Thread Take-up Spring Lever Stop Screw	02

NO.	PLATE	NAME	EACH
207D	6776	Lubricating Cup Cover Latch Spring Screw for 61573, obsolete.....\$	02
308C	6776	Tire Roller Screw Centre for 61628.....	05
330D	6776	Bobbin Winder Thread Guard Set Screw for 41453.....	02
335D	6776	Cylinder Top Cover Screw.....	02
335D	6776	Feed Reverse Latch Spring Screw.....	02
335D	6776	Lubricating Cup Wax Stripper Holder Screw for 61573, obsolete.....	02
338E	6777	Arm Screw.....	10
338E	6777	Lifting Presser Bar Rock Shaft Bracket Screw.....	10
344C	6777	Balance Wheel Set Screw for 61504.....	08
346D	6777	Feed Regulator Shaft Crank Clamping Screw for 61534.....	08
354C	6777	Driving Attachment Treadle Pitman Rod Clamp Screw for 9079.....	06
363C	6777	Feed Reverse Latch Hub Set Screw for 61537.....	05
369C	6777	Feed Regulator Connection Hinge Screw.	20
371E	6777	Spool Base Bolt with 1526E (Trimming for Column Stand).....	02
401E	6776	Driving Attachment Friction Washer Screw.....	02
432C	6776	Thread Take-up Cam Set Screw for 61603	04
434C	6776	Arm Shaft Bushing Set Screw.....	04
435C	6776	Oscillating Rock Shaft Hinge Pin Set Screw.....	04
445C	6776	Feed Cam Collar Set Screw for 61528....	03
445C	6776	" Rock Shaft Crank (left) Set Screw for 61548.....	03
445C	6776	Feed Rock Shaft Crank (right) Set Screw for 61549.....	03
445C	6776	Oscillating Shaft Crank Set Screw for 61586.....	03
445C	6776	Shuttle Driver Set Screw for 61592.....	03
446C	6776	Feed Regulator Set Screw for 61529.....	03
448C	6776	Bobbin Winder Pulley Flange Set Screw for 43177.....	03
448C	6776	Crank Connecting Rod Hinge Pin Set Screw for 61581.....	03
448C	6776	Driving Attachment Driving Pulley Oil Stop Screw for 61612.....	03
448C	6776	Feed Bar Guide Bracket (lower) Collar Set Screw for 61520.....	03
448C	6776	Feed Regulator Shaft Collar Set Screw for 61533.....	03

NUMERICAL LIST OF PARTS

21

NO.	PLATE	NAME	EACH
448C	6776	Lifting Presser Bar Rock Shaft Crank (left) Set Screw for 61562.....\$	03
448C	6776	Lifting Presser Bar Rock Shaft Crank (right) Set Screw for 61563.....	03
449C	6776	Bobbin Winder Frame Hinge Pin Set Screw for 41894.....	02
449C	6776	Feed Reverse Lever Hinge Pin Set Screw for 61540.....	02
454C	6776	Feed Bar Guide Bracket (upper) Set Screw for 61521.....	02
457C	6776	Thread Guiding Roller Pin Collar Set Screw for 21506.....	02
523D	6777	Bobbin Winder Bracket Screw for 60223.	15
563C	6776	Driving Attachment Brake Lever Hinge Pin Set Screw for 61610.....	04
563C	6776	Driving Attachment Starting Lever Hinge Pin Set Screw for 61639.....	04
563C	6776	Face Plate Screw Centre.....	04
575E	6776	Crank Connecting Rod Cap Screw for 61505, obsolete.....	05
575E	6776	Lifting Presser Bar Spring Bracket Screw	05
50323D 609D	6777	“ “ “ “ Regulating Thumb Screw.....	45
637C	6772	Bobbin Winder Tension Screw Stud for 41453.....	08
687E	6777	Tire Table Bolt with 1524E, obsolete (Trimnings for Column Stand).....	02
701D	6778	Cylinder Side Cover Hinge Screw.....	06
773H	6769	Shuttle Tension Regulating Screw for 61591.....	05
779E	6777	Machine Screw (Accessories).....	10
785E	6777	Column Stand Screw.....	05
787E	6776	Driving Attachment Brake Lever Bracket Screw.....	15
787E	6776	Driving Attachment Starting Lever Bracket Screw.....	15
802D	6778	Feed Reverse Latch Hinge Screw.....	10
803C	6776	“ Cam Brake Adjusting Screw.....	10
819C	6778	Thread Take-up Lever Hinge Screw.....	30
824C	6773	Lifting Presser Bar Rock Shaft Connection Hinge Screw.....	20
840E	6776	Crank Connecting Rod Cap Screw for 61632.....	06
894D	6776	Bobbin Winder Base Screw for 60223....	05
1062E	6777	Tire Roller Bracket Screw.....	08
1062E	6777	“ Table Bracket Screw, obsolete (Trimnings for Column Stand).....	08

NO.	PLATE	NAME	EACH
1062E	6777	Tire Table Screw (Trimnings for Column Stand).....\$	08
1149F	6776	Feeding Foot Clamping Screw for 61550.	04
1156C	6771	Oscillating Shaft Crank Slide Block Screw Stud for 61589.....	25
1177D	6776	Feed Reverse Lever Bracket Screw.....	04
1235F	6776	Oscillating Shaft Oil Hole Screw.....	04
1364C	6776	Lubricating Cup Wax Stripper Spring Screw for 61573, obsolete.....	05
1397L	6776	Lubricating Cup Cover Thread Stripper Regulating Screw Stud for 61637.....	06
1506E	6773	Feed Regulator Adjusting Stud Nut....	05
1508E	6771	Oscillating Shaft Crank Slide Block Screw Stud Nut for 61586.....	06
1509C	6779	Feed Regulator Connection Hinge Screw Nut.....	06
1509C	6779	Needle Bar Connecting Link Hinge Screw Nut.....	06
1513E	6779	Feed Regulator Shaft Crank Roller and Screw Stud Nut for 61534.....	05
1513E	6779	Thread Take-up Lever Roller and Screw Stud Nut for 61604.....	05
1513E	6779	Bobbin Winder Thread Guard Rod Nut for 60222.....	05
1517E	6779	Tension Screw Stud Nut.....	04
1517E	6779	Tire Roller Screw Centre Nut for 61628..	04
1521E	6779	Lifting Presser Bar Rock Shaft Connection Adjusting Screw Nut for 61560.....	03
1524E	6779	Tire Table Bolt Nut for 687, obsolete....	02
1526E	6779	Spool Base Bolt Nut for 371.....	02
1535E	6772	Tension Regulating Thumb Nut.....	10
1538D	6779	Lubricating Cup Cover Lock Stud Thumb Nut for 61637.....	06
1547J	6779	Face Plate Screw Centre Nut.....	03
1549J	6771	Thread Take-up Spring Hook (lower) Nut	03
1560C	6772	Bobbin Winder Tension Regulating Thumb Nut for 41453.....	04
1606C	6779	Lifting Presser Bar Spring Regulating Thumb Screw Lock Nut.....	05
1608C	6773	Lifting Presser Bar Rock Shaft Connection Hinge Screw Nut.....	05
1650C	6779	Feed Cam Brake Adjusting Screw Nut...	03
1739C	6779	Driving Attachment Friction Pulley Stud Nut.....	15
1865	6778	Thread Take-up Lever Roller and Screw Stud for 61604.....	45

NUMERICAL LIST OF PARTS

23

NO.	PLATE	NAME	EACH
1965	6778	Feed Regulator Shaft Crank Roller and Screw Stud for 61534.....	\$ 45
2018	6775	Bobbin Winder Drip Cup Tray Screw Washer.....	01
2027	6769	Shuttle Cylinder Latch Pin for 61591....	01
2049	6775	Feed Reverse Lever Tripping Stud Head Pin for 61544.....	01
2102	6772	Bobbin Winder Tension Disc for 41453..	05
2103	6772	“ “ “ Spring for 41453.	03
2205	6786	Lubricating Cup Cover Latch Spring for 61573, obsolete.....	04
2269	6775	Bobbin Winder Stop Latch Pin for 41900.	01
2883	6775	Feed Cam Brake Rivet for 61527.....	05
3012	6775	“ Reverse Cam Pin.....	01
4784	6775	Bobbin Winder Frame Oil Pad for 41900.	01
4822	6783	Wrench for 1521, 1547 and 1549 (Ac- cessories).....	05
5769	6772	Bobbin Winder Tension Thread Eyelet for 41453.....	03
8285	6775	Lubricating Cup Cover Lock Stud Hinge Pin for 61637.....	01
8582	6775	Arm Dowel Pin.....	02
8714	6775	Thread Take-up Cam Pin.....	15
8749	6768	Needle Clamp Gib for 61577.....	25
8760	6768	Lifting Presser Bar Lifter Friction Washer.....	03
8761	6768	Lifting Presser Bar Lifter Stop Pin for 61555.....	05
8763	6768	Lifting Presser Bar Lifting Link Hinge Stud for 61555.....	25
8765	6768	Lifting Presser Bar Lifting Link Hinge Stud Washer.....	04
8786	6772	Tension Disc.....	15
8787	6772	“ Spring Washer.....	01
8788	6772	“ Spring.....	25
8909	6783	Wrench for 1513, 1517, 1608 and 50319 (Accessories).....	10
8937	6775	Feed Regulator Pin.....	02
8937	6775	“ “ Shaft Crank Pin.....	02
8937	6775	“ Rock Shaft Crank (left) Pin.....	02
8937	6775	“ “ “ “ (right) Pin.....	02
8937	6775	Lifting Presser Bar Rock Shaft Crank (left) Pin.....	02
8937	6775	Lifting Presser Bar Rock Shaft Crank (right) Pin.....	02
8961	6769	Shuttle Cylinder Hinge Pin for 61591....	02

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
8973	6768	Lifting Presser Bar Lifting Link Hinge Stud Pin.....	\$ 05
8984	6780	Driving Attachment Brake Block (wood).	05
8985	6760	" " Friction Pulley with 8986.....	2 75
8986	6780	Driving Attachment Friction Pulley Centre Bearing for 8985.....	25
8987	6760	Driving Attachment Friction Washer (paper).....	10
8992	6780	Driving Attachment Starting Lever Spring	20
9079	6784	" " Treadle Pitman Rod Clamp with 354c, for 61623.....	12
9084	6775	Lubricating Cup Cover Hinge Pin for 61573 and 61637.....	02
9347	6784	Wrench (socket) for 346 and 363 (Accessories).....	10
9842	6775	Tension Screw Stud Nut Washer.....	02
11424	6772	Thread Eyelet (front of arm) for 61519..	03
11425	6772	" " (side of arm).....	05
11446	6771	" Take-up Spring Hook (lower)....	04
11661	6775	Lifting Presser Bar Spring Guide Pin....	02
11831	6783	Screw Driver, large (Accessories).....	20
11853	6769	Shuttle Cylinder Latch for 61591.....	15
11910	6769	" Bobbin for 61591.....	25
14024	6775	Feed Regulator Stop Pin for 61529.....	01
14129	6775	Lifting Presser Bar Rock Shaft Connection Hinge Screw Sleeve Washer.....	10
19690	6771	Thread Take-up Spring.....	05
19772	6771	Oscillating Shaft Crank Slide Block Cap Screw Washer for 61589.....	15
19869	6769	Shuttle Cylinder Latch Spring for 61591..	01
19978	6769	" Frame for 61591.....	1 75
19979	6769	" Tension Spring for 61591.....	40
21506	6773	Thread Guiding Roller Pin Collar with 457c.....	10
21874	6783	Wrench for 344 and 779 (Accessories)....	25
25086	6783	" " 1506 and 1606 (Accessories)....	10
26026	6783	Screw Driver, small (Accessories).....	10
29627	6775	Face Plate Lock Spring Steady Pin.....	02
36565	6783	Oiler (copper plated) with 36566 (Accessories).....	15
36566	6783	Oiler Spout, 9 in. long, for 36565.....	08
38268	6773	Feed Regulator Adjusting Stud Nut Washer.....	10
38553	6786	Lubricating Cup Wax Stripper Spring for 61573, obsolete.....	05

NUMERICAL LIST OF PARTS

25

NO.	PLATE	NAME	EACH
41441	6782	Bobbin Winder Frame Hinge Pin for 41900.....	\$ 10
41446	6781	Bobbin Winder Stop Latch Hinge Pin for 41900.....	10
41452	6780	Bobbin Winder Thread Guard for 41453.	40
41453	—	Bobbin Winder Thread Guard complete for 60222, Nos. 330b, 637c, 1560c, 2103, 5769, 41452 and two 2102.....	70
41557	6781	Bobbin Winder Stop Latch for 41900....	15
41894	6781	" " Base with 449c, for 41900	50
41895	6775	" " Bobbin Carrier Key for 41898.....	01

Nos. 41896 TO 41899 FOR 41900.

41896	6782	Bobbin Winder Frame.....	35
41897	6782	" " " Spring.....	05
41898	6781	" " Spindle with 41895.....	25
41899	6782	" " Tripping Arm with 176d..	20
41900	6781	Bobbin Winder for 60223, Nos. 2269, 41441, 41446, 41557, 41894, 41896 to 41899, 43176 to 43178, two 4784 and three 131d.....	3 45
42785	6775	Lubricating Cup Cover Thread Stripper (rubber) for 61637.....	03

Nos. 43176 TO 43178 FOR 41900.

43176	6782	Bobbin Winder Pulley (leather).....	75
43177	6782	" " " Flange with two 448c.....	35
43178	6782	Bobbin Winder Pulley Washer.....	50
43184	6783	Wrench for 1508, 1509 and 1650 (Accessories).....	50
50040D	6776	Feed Bar Bell Crank Bracket Cap Screw.	07
50040D	6776	" " " " Cap Screw.....	07
50040D	6776	" " " " Connecting Link Cap Screw.....	07
50040D	6776	Lifting Presser Bar Connecting Link Cap Screw.....	07
50040D	6776	Lifting Presser Bar Guide Bracket Cap Screw.....	07
50317C	6773	Feed Regulator Adjusting Stud.....	20
50319C	6773	Lifting Presser Bar Lifting Bracket Set Screw for 61556.....	10
50320C	6777	Needle Bar Connecting Link Hinge Screw	20
50321E	6772	Tension Screw Stud.....	25
50325E	6778	Lubricating Cup Cover Lock Stud for 61637.....	10

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
60218	6774	Bobbin Winder Bracket for 60223.....	\$ 75
60221	6780	“ “ Thread Guard Rod for 60222.....	30
60222	—	Bobbin Winder Thread Guard Rod complete for 60223, Nos. 1513E, 41453 and 60221.....	1 05
60223	—	Bobbin Winder (swinging automatic, left hand) complete, Nos. 523D, 41900, 60218, 60222 and three 894D.....	5 55
60224	6774	Bobbin Winder Drip Cup.....	25
60225	6761	“ “ “ “ Tray.....	20
60226	6780	“ “ “ “ “ Bracket..	10
*61501	—	Arm.....	40 00
61502	6763	“ Shaft.....	8 50
61503	6762	“ “ Bushing.....	1 25
61504	6760	Balance Wheel with two 344C.....	6 00
61505	6785	Crank Connecting Rod with 61506 and two 575E, obsolete, use 61632.....	7 00
*61506	—	Crank Connecting Rod Cap for 61505, obsolete.....	—
61507	6775	Crank Connecting Rod Hinge Pin.....	50
*61508	—	Cylinder.....	40 00
61509	6761	“ Side Cover.....	25
61510	6761	“ Top Cover.....	50
61511	6761	Face Plate.....	1 00
61512	6762	“ “ Lock Spring.....	20
61513	6761	Feed Bar.....	1 50
61514	6762	“ “ Bell Crank.....	2 00
61515	6762	“ “ “ “ Bracket with two 145E.....	2 00
61516	6762	Feed Bar Bell Crank Connecting Link...	75
61517	6762	“ “ Guide Bracket (lower).....	3 50
61518	—	“ “ “ “ “ Cap for 61519.....	3 00
61519	6762	Feed Bar Guide Bracket (lower) Cap 61518 with 11424 and 61598.....	3 40
61520	6762	Feed Bar Guide Bracket (lower) Collar with two 448C.....	25
61521	6762	Feed Bar Guide Bracket (upper) with two 454C.....	1 50
61522	6762	Feed Bar Socket Joint.....	3 00
61523	6762	“ “ “ “ Cap.....	1 25
61524	6763	“ Cam.....	7 00
61525	6775	“ “ Brake (leather) for 61527.....	05
61526	—	“ “ “ Spring for 61527.....	30
61527	6764	“ “ “ “ 61526 with 61525 and two 2883.....	45

NUMERICAL LIST OF PARTS

27

NO.	PLATE	NAME	EACH
61528	6764	Feed Cam Collar with two 445c.....	\$ 40
61529	6765	" Regulator with 446c and 14024....	3 00
61530	6773	" " Adjusting Stud Sleeve...	50
61531	6765	" " Connection.....	1 00
61532	6765	" " Shaft.....	75
61533	6765	" " " Collar with two 448c.....	30
61534	6765	Feed Regulator Shaft Crank with 346d, 1513E and 1965.....	1 75
61535	6764	Feed Reverse Cam.....	5 00
61536	6764	" " Latch.....	1 25
61537	6763	" " " Hub with two 363c..	5 00
61538	6764	" " " Spring.....	10
61539	6764	" " Lever.....	50
61540	6764	" " " Bracket with 449c..	60
61541	6764	" " " Hinge Pin.....	10
61542	6775	" " " Stop Pin.....	02
61543	6764	" " " Tripping Stud for 61544.....	2 00
61544	—	Feed Reverse Lever Tripping Stud 61543 with 2049 and 61545.....	2 75
61545	6764	Feed Reverse Lever Tripping Stud Head for 61544.....	75
61546	6764	Feed Reverse Lever Tripping Stud Spring	05
61547	6765	" Rock Shaft.....	75
61548	6765	" " " Crank (left) with 445c..	1 50
61549	6765	" " " " (right) with 445c	1 25
61550	6767	Feeding Foot with 1149F.....	3 00
61551	6761	Lifting Presser Bar.....	1 25
61552	6765	" " " Connecting Link.....	60
61553	6765	" " " Guide Bracket with two 141E.....	3 00
61554	6765	Lifting Presser Bar Guide Bracket Guide.	75
61555	6766	" " " Lifter with 8761 and 8763.....	2 00
61556	6773	Lifting Presser Bar Lifting Bracket with 50319c.....	75
61557	6766	Lifting Presser Bar Lifting Link.....	50
61558	6766	" " " Rock Shaft.....	75
61559	6774	" " " " " Bracket..	2 00
61560	6766	" " " " " Connection with two each 141E and 1521E.....	1 50
61561	6773	Lifting Presser Bar Rock Shaft Connection Hinge Screw Sleeve.....	50
61562	6766	Lifting Presser Bar Rock Shaft Crank (left) with 448c.....	60

NO.	PLATE	NAME	EACH
61563	6766	Lifting Presser Bar Rock Shaft Crank (right) with 448c.....	\$ 1 25
61564	6761	Lifting Presser Bar Spring (flat) lower...	1 25
61565	6761	" " " " " upper...	1 25
61566	6766	" " " " Bracket.....	50
61567	6767	" " Foot with two 129d.....	3 00

Nos. 61568 TO 61572 FOR 61573, OBSOLETE.

61568	6785	Lubricating Cup.....	80
61569	6785	" " Cover.....	25
61570	6786	" " Wax Stripper (long)....	03
61571	6786	" " " " (short)...	03
61572	6786	" " " " Holder...	15
61573	6785	Lubricating Cup complete, Nos. 207D, 2205, 9084, 61568, 61569, two each 335D, 1364C, 38553 and 61570 to 61572, obsolete, use 61637.....	1 80
61574	6761	Needle Bar.....	1 25
61575	6766	" " Connecting Link.....	1 25
61576	6766	" " Stud with two 129E.....	2 00
61577	6768	Needle Clamp with 149F and 8749.....	1 25
61578	6768	" Plate with 61580 and two 185H, for flat work.....	2 00
61579	6768	Needle Plate with 61580 and two 185H, for tire work.....	2 00
61580	6768	Needle Plate Thread Guard for 61578 and 61579.....	50
61581	6774	Oscillating Rock Shaft with 448c, for 61582.....	10 00
61582	—	Oscillating Rock Shaft complete, Nos. 61581 and 61583.....	11 25
61583	6774	Oscillating Rock Shaft Hinge Pin for 61582.....	1 25
61584	6770	Oscillating Shaft.....	1 50
61585	—	" " Crank for 61586.....	1 50
61586	6770	Oscillating Shaft Crank complete, Nos. 445c, 1508E, 61585 and 61589.....	2 80
61587	6775	Oscillating Shaft Crank Pin.....	03
61587	6775	Shuttle Driver Pin.....	03
61588	6771	Oscillating Shaft Crank Slide Block for 61589.....	75
61589	6771	Oscillating Shaft Crank Slide Block com- plete for 61586, Nos. 164D, 1156c, 19772 and 61588.....	1 20
61590	6769	Shuttle Cylinder for 61591.....	1 50

NUMERICAL LIST OF PARTS

29

NO.	PLATE	NAME	EACH
61591	6769	Shuttle (cylinder) complete, Nos. 773H, 2027, 8961, 11853, 11910, 19869, 19978, 19979 and 61590.....	\$ 4 00
61592	6770	Shuttle Driver with 445c.....	3 00
61593	—	" Race Body for 61595.....	5 00
61594	6770	" " Ring for 61595.....	1 00
61595	6770	Shuttle Race complete, Nos. 61593, 61594 and two 164b.....	6 00
61596	6780	Tension Drip Cup.....	25
61597	6780	" " " Arm.....	15
61598	6772	" Thread Guide for 61519.....	35
61599	6774	Thread Guiding Roller (wood).....	25
61600	6774	" " " Pin for 61602....	10
61601	6774	" " " " Bracket for 61602.....	15
61602	6774	Thread Guiding Roller Pin Bracket 61601 with 61600.....	25
61603	6774	Thread Take-up Cam with two 432c....	12 00
61604	6770	" " Lever with 1513E and 1865.....	4 00
61605	6771	Thread Take-up Spring Hook (upper) for 61606.....	01
61606	6771	Thread Take-up Spring Lever with 61605	1 00
61607	6771	" " " Regulator Plate..	10
61608	—	Column Stand.....	27 50
61609	6760	Driving Attachment Brake Lever.....	1 50
61610	6774	" " " " Bracket with 563c.....	1 50
61611	6780	Driving Attachment Brake Lever Hinge Pin.....	15
61611	6780	Driving Attachment Starting Lever Hinge Pin.....	15
61612	6760	Driving Attachment Driving Pulley with 448c and 61613.....	3 50
61613	6775	Driving Attachment Driving Pulley Oil Tube (brass) for 61612.....	15
61614	6774	Driving Attachment Friction Pulley Stud with 61616.....	1 50
61615	6780	Driving Attachment Friction Pulley Stud Nut Washer.....	05
61616	6780	Driving Attachment Friction Pulley Stud Washer for 61614.....	30
61617	6760	Driving Attachment Starting Lever.....	2 00
61618	6780	" " " " Spring Hook.....	10

NUMERICAL LIST OF PARTS

Nos. 61619 TO 61621 FOR 61624.

NO.	PLATE	NAME	EACH
61619	6760	Driving Attachment Treadle.....	\$ 30
61620	6760	“ “ “ Bracket....	60
61621	6780	“ “ “ Hinge Pin..	10
61622	6784	“ “ “ Pitman Rod	
		(lower) for 61623.....	05
61622	6784	Driving Attachment Treadle Pitman Rod	
		(upper) for 61623.....	05
61623	—	Driving Attachment Treadle Pitman complete for 61625, two each Nos. 9079 and 61622.....	35
61624	6760	Driving Attachment Treadle complete for 61625, Nos. 61619 to 61621.....	1 00
61625	—	Driving Attachment Treadle and Pitman complete, Nos. 61623 and 61624.....	1 35
61626	6785	Tire Roller for 61628.....	25
61627	6787	“ “ Bracket for 61628.....	2 00
61628	—	Tire Roller complete, Nos. 61627, two 61626 and four each 308c and 1517E...	2 85

Nos. 61629 TO 61631 (TRIMMINGS FOR COLUMN STAND)

61629	6784	Spool Base Stop with three wood screws ½ in. No. 6.....	15
61630	6784	Thread Guard Support with three wood screws ½ in. No. 6.....	25
61631	6785	Tire Table Bracket (left) obsolete.....	50
61632	6761	Crank Connecting Rod with 61633 and two 840E.....	7 00
*61633	—	Crank Connecting Rod Cap for 61632....	—
61634	6785	Tire Table Bracket (right), obsolete (Trimmings for Column Stand).....	50
61635	6774	Lubricating Cup for 61637.....	1 00
61636	6774	“ “ Cover for 61637.....	75
61637	6774	Lubricating Cup complete, Nos. 1538D, 8285, 9084, 50325E, 61635, 61636 and two each 1397L and 42785.....	2 10
61638	6784	Threading Wire for 61637 (Accessories)..	10
61639	6774	Driving Attachment Starting Lever Bracket with 563c.....	1 50
61641	6760	Tire Table (Trimmings for Column Stand)	1 50
79714	6760	Spool Base (wood) with two 79716, for 79715.....	25
79715	6760	Spool Base 79714 with 79717 (Trimmings for Column Stand).....	35
79716	6760	Spool Pin (wood) for 79714.....	02
79717	6760	Thread Guard (wood) for 79715.....	10
79718	6785	Tire Table (wood), obsolete (Trimmings for Column Stand).....	50

**ILLUSTRATIONS OF PARTS
FOR
MACHINE No. 98-2**

ILLUSTRATIONS OF PARTS
FOR
MACHINE No. 28-2

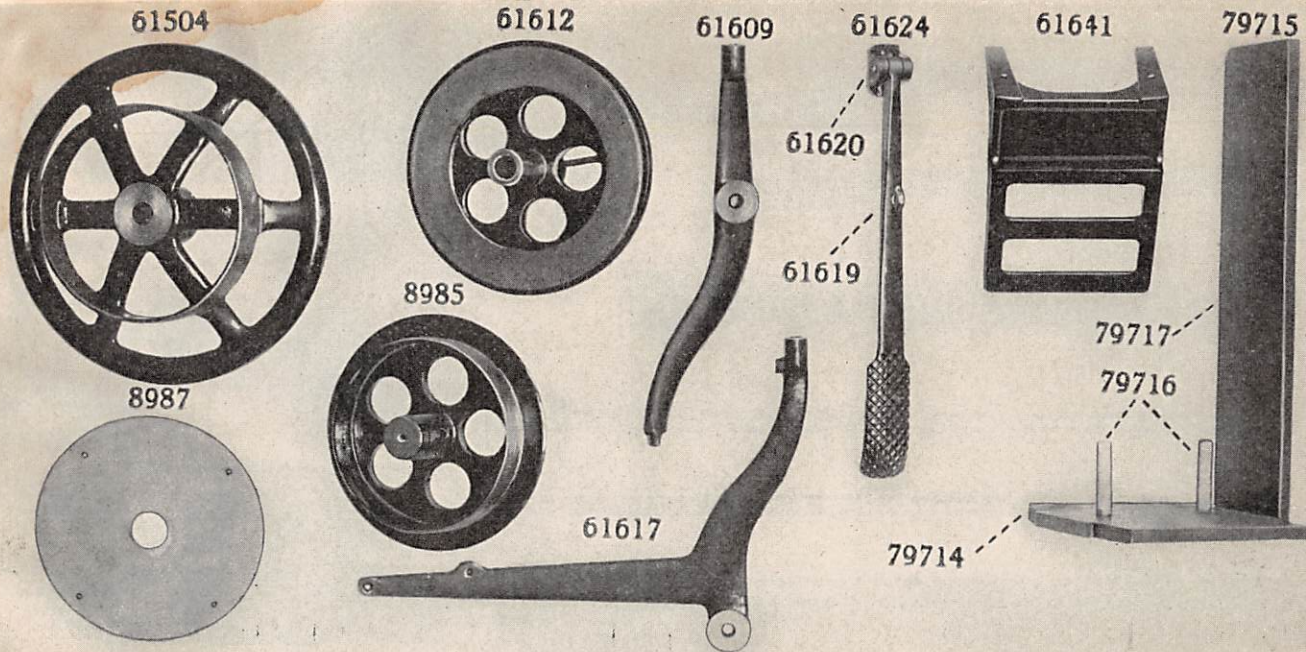 


PLATE 6760—ONE-EIGHTH SIZE

PLATE 6761—ONE-FOURTH SIZE

61513 61574 61551 61632 61565 61564



61511



61510



61509

 


60225

 


PLATE 6762—ONE-HALF SIZE

61503

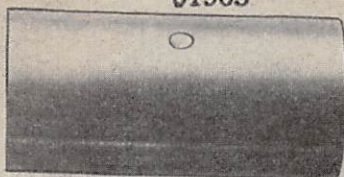

 
61514

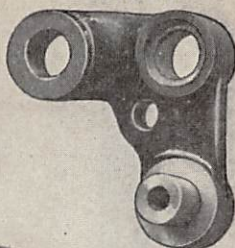

61512




61515

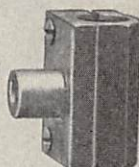

61523



 
61522

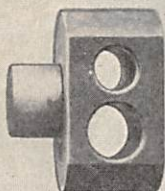

61516



 61517

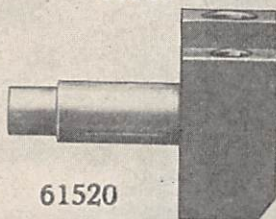

61521



61520



61519



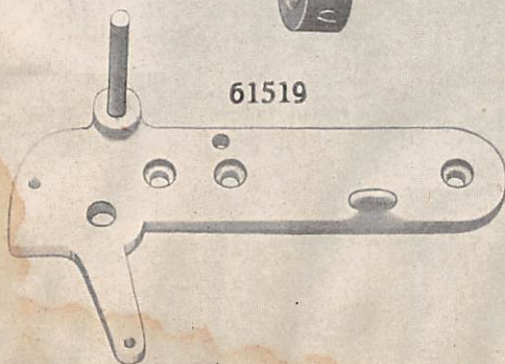 


PLATE 6763—ONE-FOURTH SIZE

 61502



61524

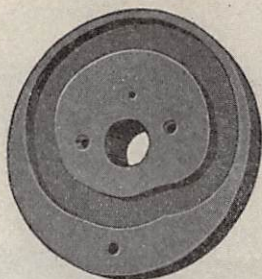 

61537

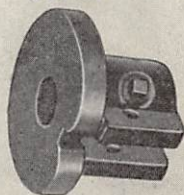 


PLATE 6764—ONE-HALF SIZE

61527



61528



61535



 
61541



61538




61540

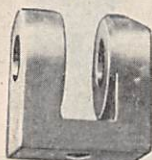

61546



 61536



61539



61545



61543


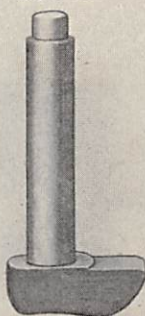 


PLATE 6765—ONE-HALF SIZE

 61529



61531

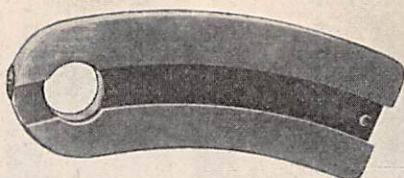

 
61532



61547



61534

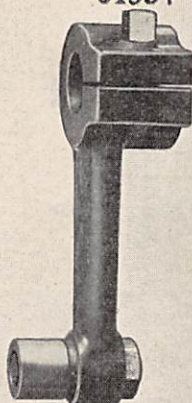


61533




61552



 61548

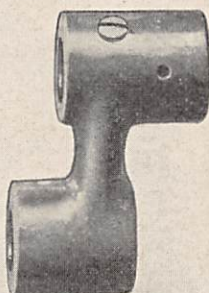

61553

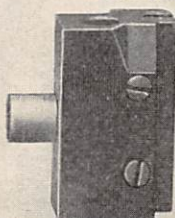 

61554



61549



PLATE 6766—ONE-HALF SIZE

61562



61563



 
61558




61557



61555

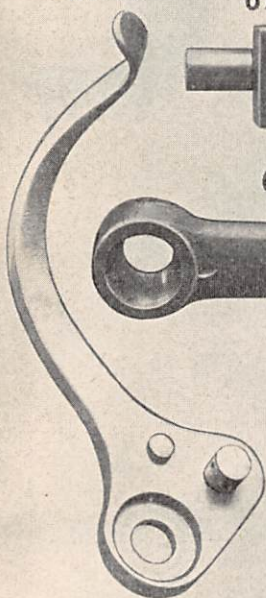

61576

 

61575



61566




61560



PLATE 6767—FULL SIZE

 61567

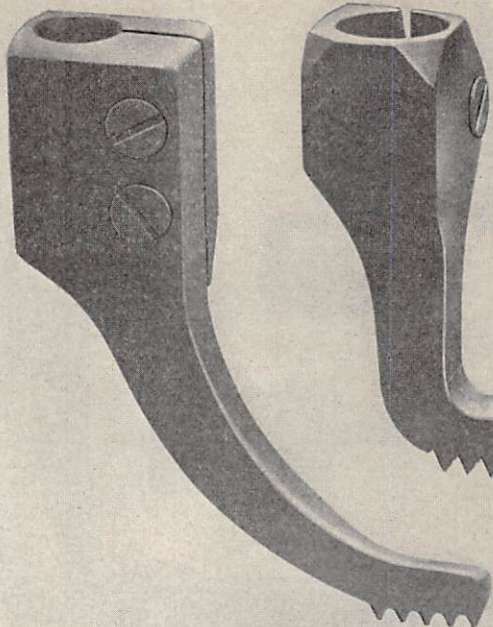 


61550

 


PLATE 6768—FULL SIZE

61578

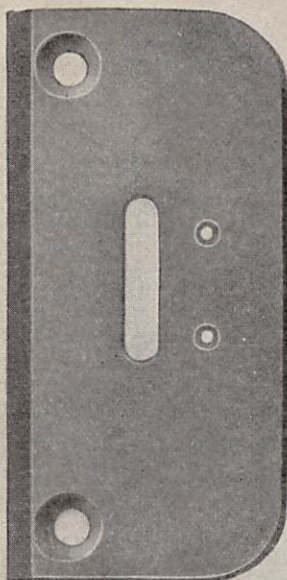

61579

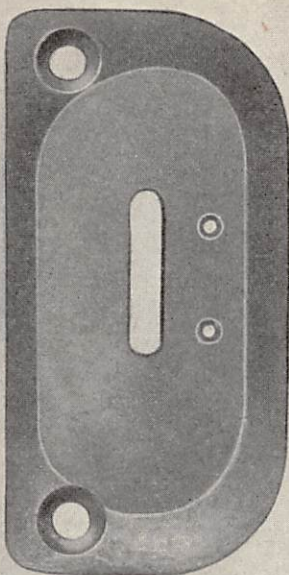

61580



 
185



61577



8760

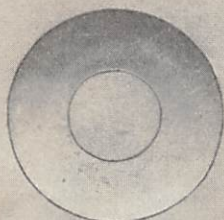

8973



8749



149



8765



8761

 


8763

 


PLATE 6769--FULL SIZE

 
61591

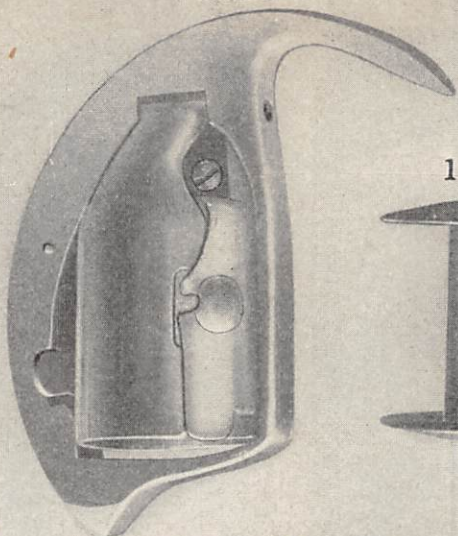

11910

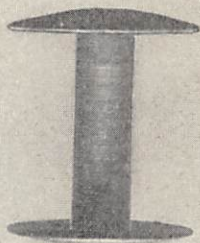

11853



2027



19869



8961



773



19979



19978



61590


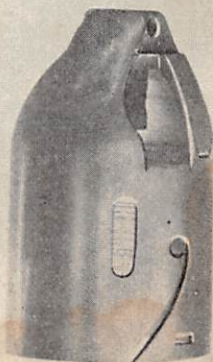 


PLATE 6770—ONE-HALF SIZE

 
61584




61586

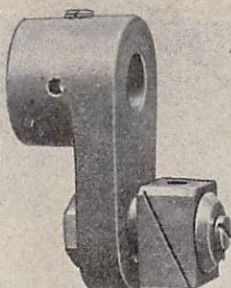

 
61592

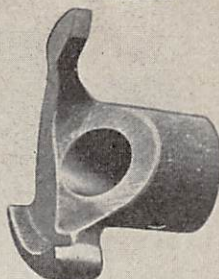

61595

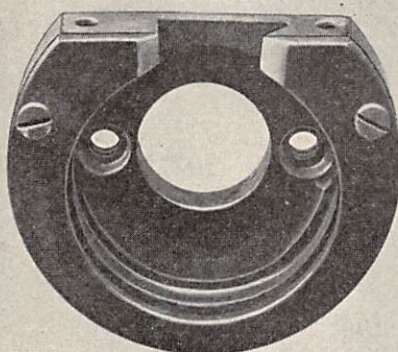 

61594

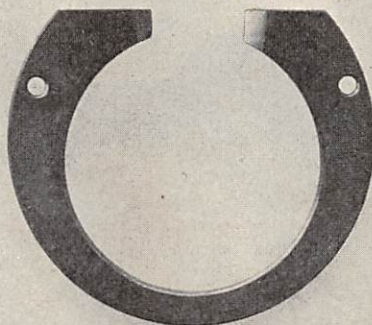  


61604

 


PLATE 6771—FULL SIZE

61589

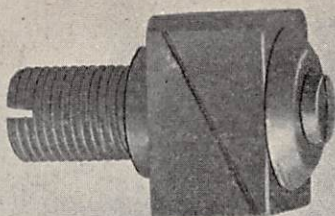

61588

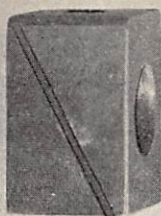

1156



1508



164



19772



61605



 
19690



194




61606

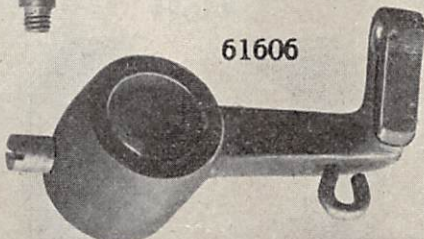

11446



 61607

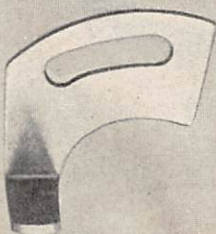

190



1549

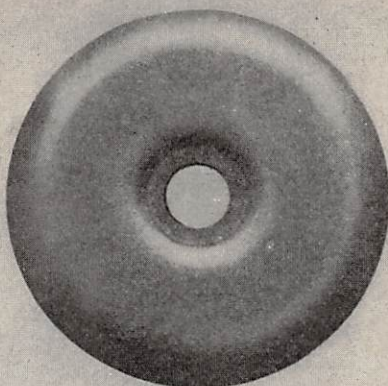 


PLATE 6772—FULL SIZE

1535



8786



8787



 
50321



11424



8788

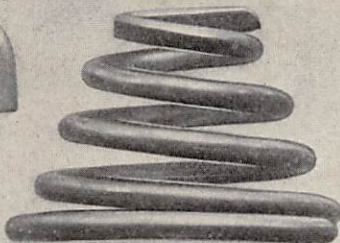

637



5769



11425



61598



2102



1560




2103



PLATE 6773—FULL SIZE

 
50317

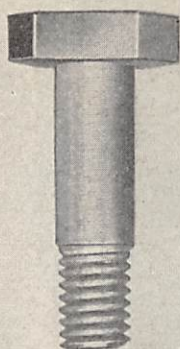


61530



 824

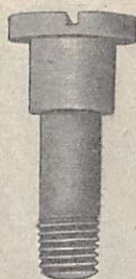

38268

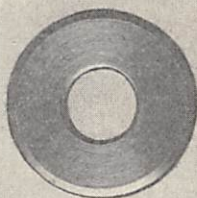 


1506



61561



 50319

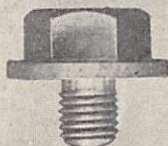

21506



1608



61556



PLATE 6774—ONE-FOURTH SIZE

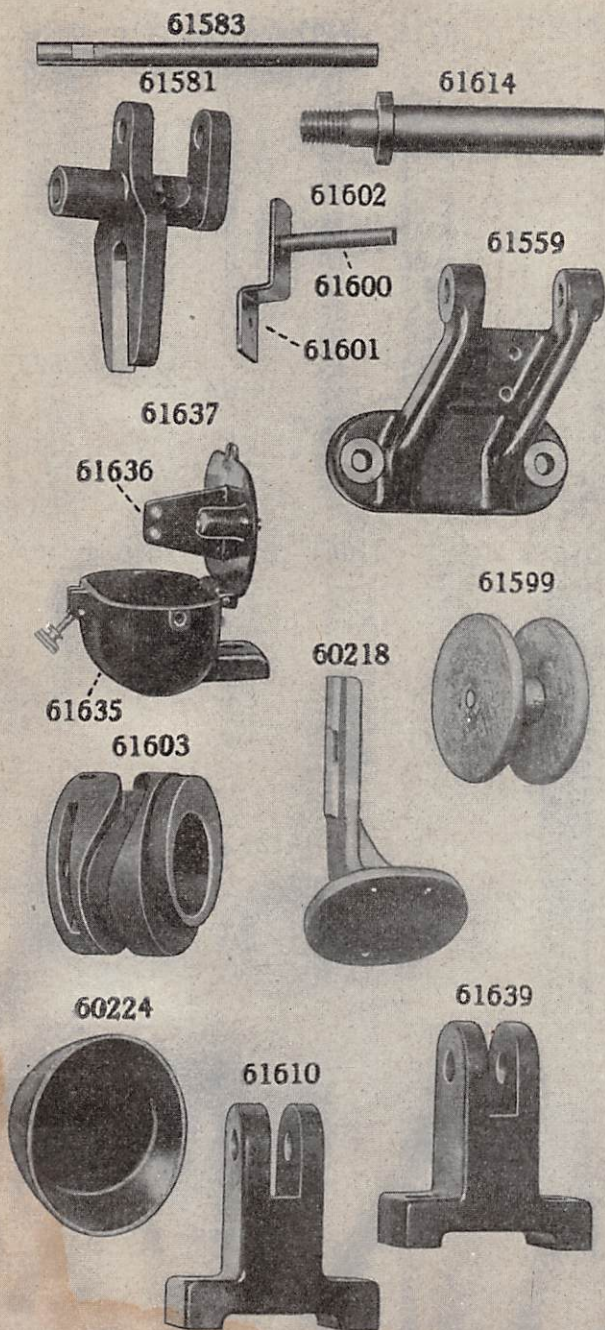 


PLATE 6775—FULL SIZE

61507



8714



9084



61587



 
8937



8582



14024



2269



29627



61613



 
3012



11661



61542



2049



8285



2018



14129



9842



4784



61525



2883



42785



41895



PLATE 6776—FULL SIZE

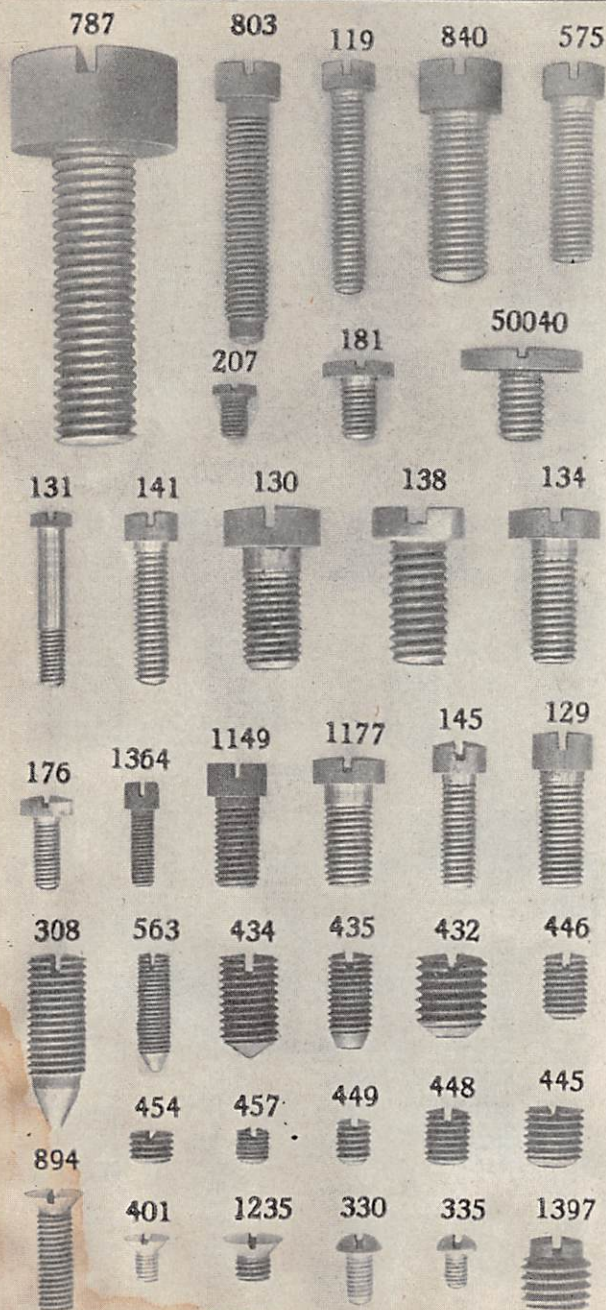 


PLATE 6777—FULL SIZE

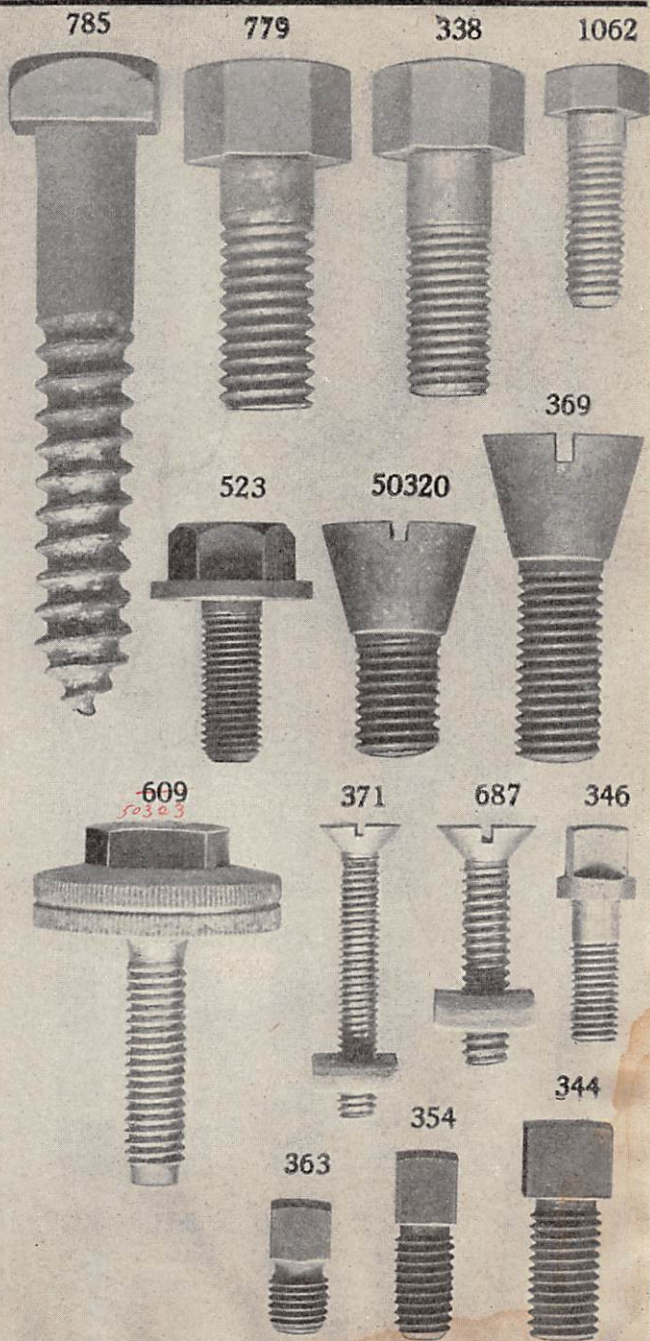 


PLATE 6778—FULL SIZE

819



9



802



 
701




50325



1865

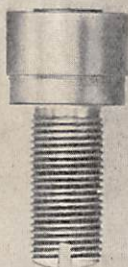

1965

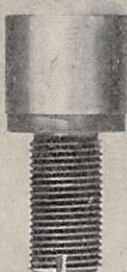 

16


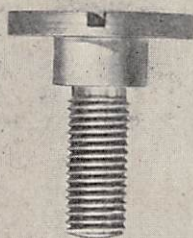 


PLATE 6779--FULL SIZE

 1739



1509

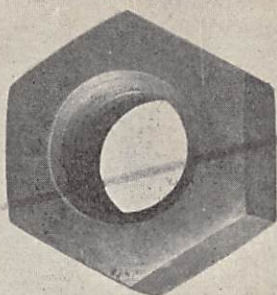

1606



1513



1517



1650



1521



1538



1524



1526



1547



PLATE 6780—ONE-HALF SIZE



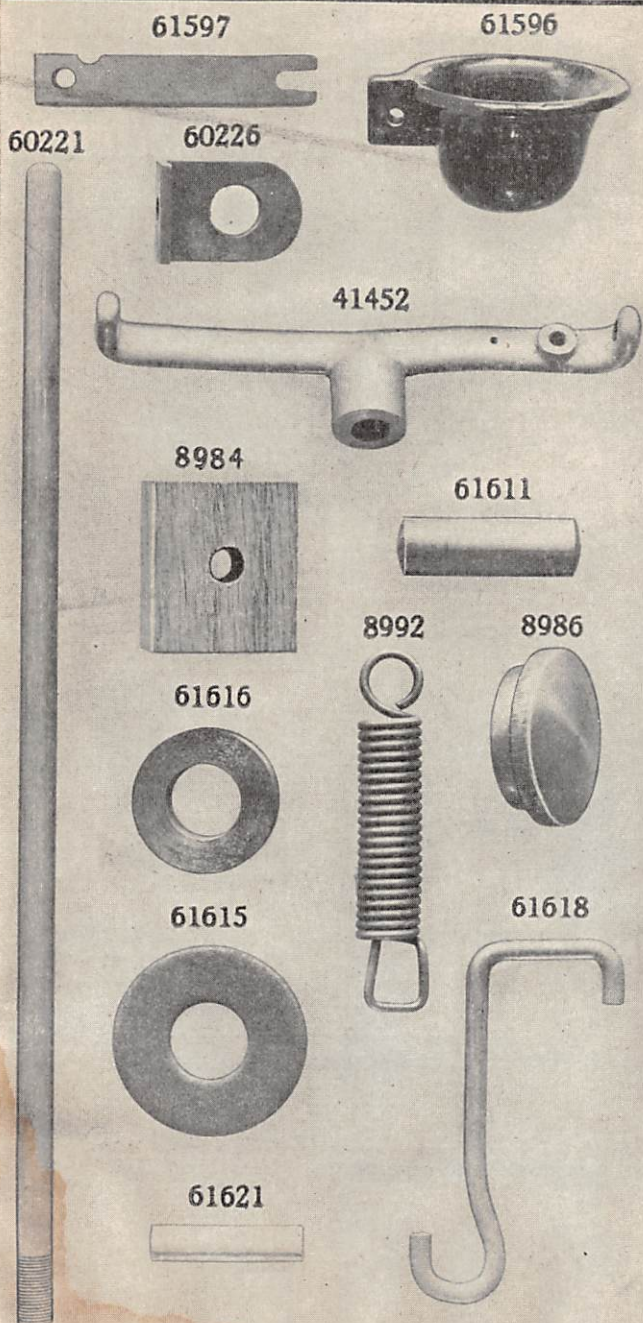 


PLATE 6782—ONE-HALF SIZE

 
43176

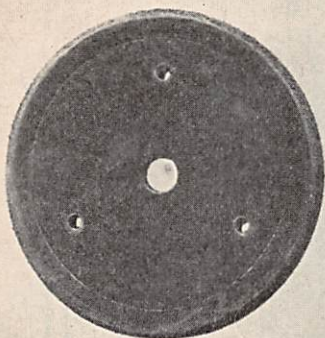


43178

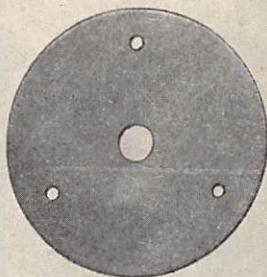 


43177

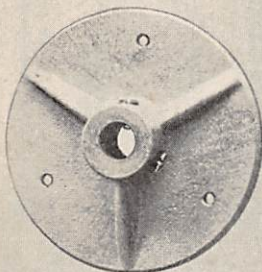 


41896

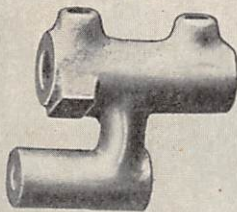 

41441

 

41897

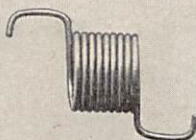 

41899



PLATE 6783—ONE-HALF SIZE

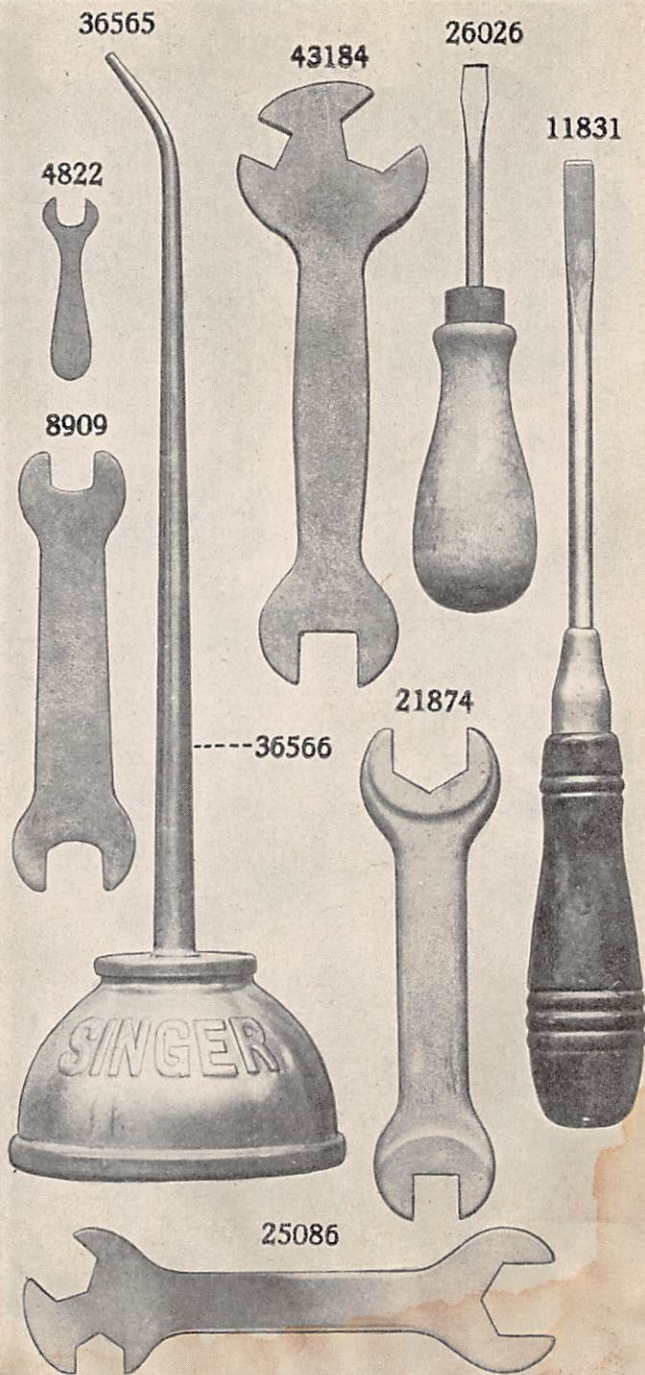 


PLATE 6784—ONE-HALF SIZE

61622



61629



 
61630



61638



9347

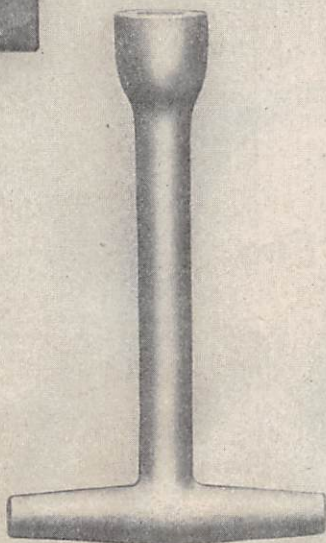

9079



PLATE 6785—ONE-FOURTH SIZE

61505



 
61626




61573



79718

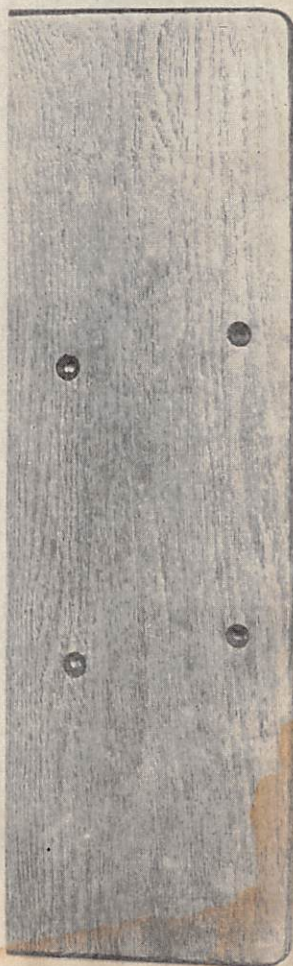

61634

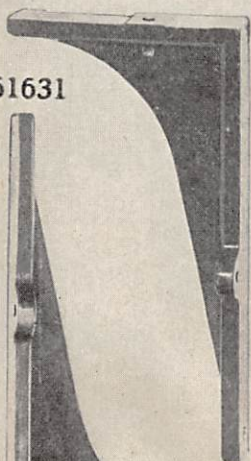 

61631

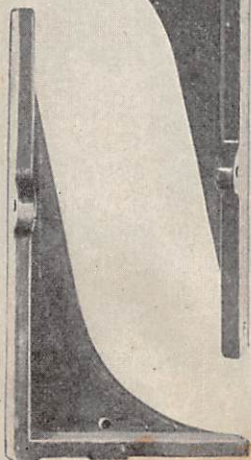 


PLATE 6786—FULL SIZE

61570



61571



61572




2205



38553



 PLATE 6787—ONE-EIGHTH SIZE

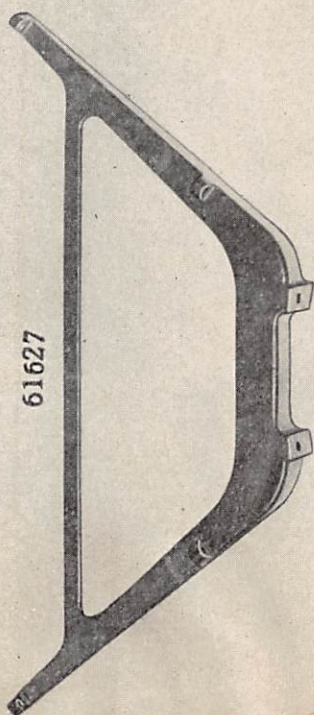

61627

