

ROOM 17 COPY
MACHINE APPLICATION
HISTORICAL COPY
SECTION
RESEARCH DIVISION
REMOVE

LIST OF PARTS COMPLETE



No. 99-1 Machine

THE SINGER MANUFACTURING COMPANY

HISTORICAL COPY
NUMBERING DEPARTMENT
DECEMBER 15, 1909
DO NOT REMOVE

LIST OF PARTS COMPLETE

FOR

NO. 99-1 MACHINE

This machine is for family use with hand attachment

*33601	Arm.....
2002	" Dowel Pin.....
33602	" Rock Shaft with 905E.....
905E	" " " Adjusting Screw.....
50046A	" " " Screw Centre (lower).....
1512E	" " " " " Nut.....
50047c	" " " " " (upper).....
138E	" Screw.....
33603	" Shaft.....
32503	" " Bushing.....
448A	" " " Set Screw.....
2007	" Spool Pin.....
8879	" " " Washer (cloth).....
33604	Balance Wheel, 2 1/2 in. pulley.....
*33605	Bed.....
32505	" Leg.....
1129E	" " Screw.....
256B	Clamp Stop Motion Clamp Screw.....
248A	" " " " " Stop Screw.....
2020	" " " " " Washer.....
33606	" " " Flanged Bushing.....
1148c	" " " " " Set Screw.....
33607	Clamp Stop Motion complete, Nos. 248A, 256B, 1148c, 2020 and 33606.....
33608	Face Plate with 2827.....
190B	" " " Screw.....
2827	" " " Thread Guard with 8505.....
8505	" " " " " Rivet.....
32507	Feed Bar with 1944.....
1944	" " " Roller and Stud.....
315C	" " " Screw Centre.....
1519E	" " " " " Nut.....
32600	" Dog.....
191C	" " " Screw.....

33609	Feed Forked Connection with 175B.....
175B	" " " Adjusting Screw.....
1381C	" " " Hinge Screw (eccentric).....
1520E	" " " " " Nut.....
1832	" " " Roller with 1085E.....
1085E	" " " " " Screw Stud.....
32510	" Raising Bar with 1944.....
1301A	" " " Hinge Screw.....
1944	" " " Roller and Stud.....
50049B	" Regulating Thumb Screw.....
33610	" Regulator.....
8217	" " Friction Washer.....
42D	" " Hinge Screw.....
33611	" Rock Shaft.....
307C	" " " Screw Centre.....
1513C	" " " " " Nut.....
33612	Needle Bar with 33617.....
33613	" " Connecting Link.....
33614	" " " Stud with 1353C.....
1353C	" " " " " Set Screw.....
33615	" " Crank with 1036C, 1037C and 1134C.....
1134C	" " " Position Screw.....
1037C	" " " Set Screw.....
33616	" Clamp with 50050C.....
50050C	" " Thumb Screw.....
33617	" Stop Pin.....
32520	Oscillating Hook.....
32521	" " Bell Crank.....
50051D	" " " " Hinge Screw.....
32522	" " Bobbin.....
32590	" " " Case with 1172F, 1173F and 32567.....
32593	Oscillating Hook Bobbin Case Cushion Spring.....
662D	" " " " " " Screw.....
32591	" " " " " Position Bracket.....
32592	Oscillating Hook Bobbin Case Position Bracket complete, Nos. 662D, 1137E, 32527, 32528, 32591, 32593, 32598 and 32599.....
32598	Oscillating Hook Bobbin Case Position Bracket Oil Pad (felt).....
32599	Oscillating Hook Bobbin Case Position Bracket Oil Pad Holder.....
142D	Oscillating Hook Bobbin Case Position Bracket Screw.....
1172F	Oscillating Hook Bobbin Case Tension Regulating Screw.....
32567	Oscillating Hook Bobbin Case Tension Spring.....
1173F	" " " " " " Screw.....
32527	" " " Ejector.....
1137E	" " " " " Hinge Screw.....

32528	Oscillating Hook Bobbin Ejector Spring.....
32529	" " Connecting Link.....
1132A	" " " " Hinge Screw.....
32594	" " Crank with 1485B.....
1485B	" " " Clamping Screw.....
33618	" " Pitman with two 211B.....
211B	" " " Adjusting Screw.....
44A	" " " Hinge Screw.....
1216C	" " " " " Screw Stud.....
1520E	" " " " " Nut.....
216A	" " " " " Screw.....
32569	" " Slide.....
32570	" " " Friction Spring.....
226D	" " " " " Screw.....
33619	Presser Bar (hollow).....
33620	" " Lifter.....
33621	" " " Hinge Pin.....
33622	" " Lifting Bracket with 50052D.....
50052D	" " " " " Clamping Screw.....
33623	" " Spring.....
15281	" Foot.....
50053B	" " Thumb Screw.....
50054B	Pressure Regulating Thumb Screw.....
33624	" " " " " Extension Pin.....
33625	Slack Thread Regulator.....
207F	" " " " " Screw.....
33626	Tension Disc.....
1703B	" Regulating Thumb Nut.....
33627	" Releasing Lever.....
33628	" " " Hinge Pin.....
33629	" " " Pin.....
33630	" " Washer (cupped).....
50055D	" Screw Stud.....
33631	" Spring.....
33632	Thread Guard (front of arm).....
237A	" " " " " Set Screw.....
33633	" " (head of arm).....
33634	" Take-up Crank.....
1036C	" " " " " Set Screw.....
33635	" " Lever.....
33636	Thread Take-up Lever complete, Nos. 33635, 33637 and 33638.....
50056E	Thread Take-up Lever Cap Screw.....
33637	" " " Hinge Stud.....
33638	" " " Link.....
50057D	" " " " " Hinge Screw.....
33639	" " Spring.....
32602	Throat Plate for 32600.....
691A	" " " " " Screw.....

BOBBIN WINDER (AUTOMATIC)

15283	Adjusting Arm.....
50058B	" " Screw.....
15072	Bobbin Position Pin.....
33640	Bracket (belt cover).....
193B	" " Screw.....
15285	Frame.....
50059B	" " Hinge Screw.....
15286	" " Spring.....
15287	Friction Ring (rubber).....
15288	Pulley.....
32550	Spindle with 15072.....
571C	" " Worm.....
32606	Stop Latch.....
50060B	" " Hinge Screw.....
15291	" " Spring.....
32607	Thread Guide.....
2746	" " Cam.....
233B	" " " Screw.....
50061B	" " Hinge Screw.....
15293	" " Spring.....
2748	Worm Wheel.....
2749	" " Friction Washer.....
50B	" " Screw Stud.....
1528H	" " " " Nut.....
33641	Bobbin Winder complete, Nos. 50B, 233B, 571C, 1528H, 2746, 2748, 2749, 15283, 15285 to 15288, 15291, 15293, 32550, 32606, 32607, 33640, 50058B, 50059B, 50060B and 50061B.

HAND ATTACHMENT

8377	Body.....
8378	" Bracket.....
183D	" " Screw.....
8380	Crank Handle (wood).....
8433	" " Spindle.....
8434	" " " 8433 with 8382.....
8382	" " " Washer.....
8280	" Hinge Pin.....
8435	" Lever.....
8281	" Lock Pin.....
8282	" " " Spring.....
8436	Crank complete, Nos. 8380, 8434 and 8435.....

33642	Driver.....
33643	" " Finger.....
33644	" " 33643 with 8390, 8391 and 33645.....
8386	" " Hinge Pin.....
8387	" " Lock Pin.....
8388	" " " " Spring.....
33645	" " Sheath (leather).....
8390	" " " Plate.....
8391	" " " Staple.....
8392	Gear with 8281 and 8282.....
8393	" Cover.....
399A	" " Screw.....
659D	" Screw Stud.....
8394	Pinion.....
2532	" Dowel Pin.....
660D	" Screw Stud.....
33646	Hand Attachment complete, Nos. 659D, 660D, 2532, 8280, 8377, 8378, 8386 to 8388, 8392 to 8394, 8436, 33642, 33644 and two each 183D and 399A.....
137E	Hand Attachment Screw.....