

LIST OF PARTS



SINGER^{**}

MACHINE No. IIIw151

THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling and when in continuous use, "TYPE B" or "TYPE D" OIL, sold by Singer Sewing Machine Company, should be applied at least twice each day to all oil holes marked "OIL", as instructed in Form 2661w.

"TYPE D" OIL should be used when an oil is desired which will produce a minimum of stain on fabrics, even after a long period of storage.

Apply a few drops of oil to the bobbin case bearings each time a bobbin is replaced.

Copyright, U. S. A., 1938 and 1940
by The Singer Manufacturing Co.
All Rights Reserved for all Countries

INDEX

Accessories	14
Bobbin Winder	14
Feed Dogs	15
Foot Lifter	16
Knee Lifter	15
Machine No.111w151	5
Miscellaneous Parts	17
Numerical List of Parts	19
Thread Unwinder	16
Throat Plates	16

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the PART number in the FIRST column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above case), must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A Hardened, Polished, Nickel Plated and Buffed.
- AL Heat Treated for Toughness.
- B Polished, Nickel Plated and Buffed.
- C Hardened only.
- D Polished only.
- E Soft, Not polished.
- F Hardened and Polished.
- H Blued.
- J Nickel Plated only.
- R Merlized.
- X Black Oxide, for Iron and Steel.
- XC Hardened and Black Oxide, for Iron and Steel.
- Y Black Nickel Plated only.
- Z Chromium Plated.

These letters MUST BE USED when they appear in the list and AFTER the number, as in the list.

In this series


1 to 1500, 200001 to 201500 and 350001 to 351500 are Screw Numbers.
1501 to 1800, 201501 to 201800 and 351501 to 351800 are Nut Numbers.
1801 to 2000, 201801 to 202000 and 351801 to 352000 are Roller Numbers.
2001 to 50000 and 202001 to 350000 are Numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are NOT TO BE USED in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE FOR

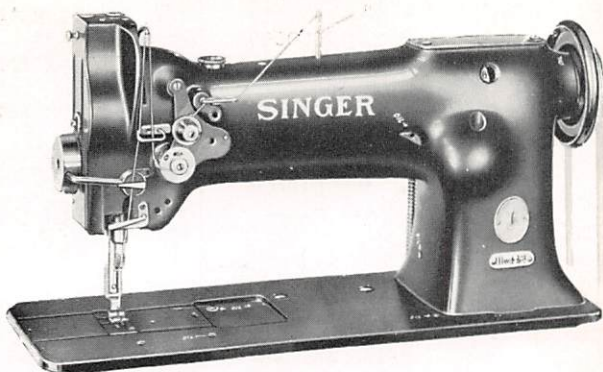

MACHINE No. 111w151

HIGH SPEED COMPOUND FEED

BALL BEARING SAFETY CLUTCH KNEE LIFTER

POSITIVE STITCH REGULATION

For Stitching Automobile Door Pockets, Ribbing Cushions,
Joining Tire Covers and Other Heavy Work

No.	Plate	Name
*248401	-----	Arm with 202135
224002	16603	" Cap
200278H	16603	" " Screw
202248	13603	" " " Washer
204235	16621	" Position Pin (2)
200004E	16621	" Screw (3)
202005	16621	" " Washer (3)
248440	16603	" Shaft with 224392 and 350431E
249440	16603	" " Ball Bearing
*240054	16603	" " " " Collar with two 200378C
240055	16603	Arm Shaft Ball Bearing Collar 240054 with 249440
200378C	16603	Arm Shaft Ball Bearing Collar Set Screw
*240056	16603	Arm Shaft Ball Bearing Retaining Washer
*240053	16603	Arm Shaft Bushing (back)
200335C	16603	" " " " Set Screw
240057	16603	Arm Shaft Bushing (back) (ball bearing) complete, Nos. 240053, 240055 and 240056
263096	16603	Arm Shaft Bushing (front) with 223847
223847	16603	" " " " Oil Packing (wick)
200502H	16603	Arm Shaft Bushing (front) Oil Packing Thumb Screw

PARTS FOR MACHINE NO. IIIwI5I

No.	Plate	Name
204329	16603	Arm Shaft Bushing (front) Oil Pad
200341C	16603	" " " " Set Screw
224103	16604	" " Connection Belt
224104	16604	" " " " Pulley with 200327C, 200602C and two 202253
200602C	16604	Arm Shaft Connection Belt Pulley Position Screw
200327C	16604	Arm Shaft Connection Belt Pulley Set Screw
202253	16604	Arm Shaft Connection Belt Pulley Spring Flange
224139	16616	Arm Shaft Connection Belt Timing Plate
200164B	16616	" " " " " "
		Screw (2)
224392	16603	Arm Shaft Oil Packing (wick)
350431E	16603	" " " " Stop Screw
248402	16603	Balance Wheel (disc) (belt groove 2-1/8 in. diam.) with 200328C and 200335C
Note: Balance Wheel 248402 is furnished with this machine unless otherwise specified on order.		
248456	16603	Balance Wheel (disc) "V" belt groove (outside diam. of belt groove 2.9 in.) with 201346C and 350107C
350419H	16603	Balance Wheel Adjusting Screw
200328C	16603	" " " " Position Screw
350107C	16603	" " " " "
201346C	16603	" " Set Screw
200335C	16603	" " " "
*240511	-----	Bed
255168	16616	" Oil Cup (4)
240003	16621	" Slide (back)
223811	16621	" " " Stop
223812	16621	" " " Spring
240004	16621	" " (front)
203470	16617	Bobbin
*235099	-----	" Case
203648	16617	" " Latch
*202056	-----	" " " Pin
203473	16617	" " " Plunger
203474	16617	" " " Spring
241674	16617	" " Oiling Felt
241675	16617	" " " Retainer
350405C	16617	" " " Screw
248404	16618	" " Opener
224005	16618	" " " Lever with 201349C, 201542C and 203101
201349C	16618	Bobbin Case Opener Lever Driving Screw Stud
201542C	16618	Bobbin Case Opener Lever Driving Screw Stud Nut
203101	16618	Bobbin Case Opener Lever Driving Screw Stud Oil Packing (wick)
265088	16618	Bobbin Case Opener Lever Hinge Stud with 202277

PARTS FOR MACHINE NO. 111w151

7

No.	Plate	Name
202277	16618	Bobbin Case Opener Lever Hinge Stud Oil Packing (wick)
201246C	16618	Bobbin Case Opener Lever Hinge Stud Set Screw
248405	16618	Bobbin Case Opener Lever Link
200118D	16618	" " " Screw
203214	16617	" " Tension Spring
200984C	16617	" " " " Regulating Screw
200594C	16617	Bobbin Case Tension Spring Screw
203216	16617	" " Washer (cloth)
235100	16617	Bobbin Case complete, Nos. 200594C, 200984C, 202056, 203214, 203216, 203473 203474, 203648, 235099, 241674, 241675 and two 350405C
237777	16621	Face Plate with 201650H and 350432XC
202135	16621	" " Position Pin
200473B	16621	" " Thumb Screw
240223	16622	Feed Bar
240224	16622	" " 240223 with 224052, 225837 and 350197E
350393C	16622	Feed Bar Hinge Screw (driving)
201518E	16622	" " " " Nut
240078	16622	" Dog, 40 needle hole, for needle size 20
200106E	16622	Feed Dog Screw (2)
240225	16616	" Driving Connection with 240226 and 240227
201181C	16616	Feed Driving Connection Hinge Screw
201518E	16616	" " " " " Nut
240226	16616	" " " Oiling Felt
240227	16616	" " " " " Re- taining Wire
240228	16622	Feed Driving Crank with 200019E
200019E	16622	" " " Pinch Screw
240229	16616	" " Eccentric
240230	16616	" " " Adjusting Disc
248415	16616	" " " " " Spring
248416	16616	" " " " " "
		Collar with two 200382C
200382C	16616	Feed Driving Eccentric Adjusting Disc Spring Collar Set Screw
240231	16616	Feed Driving Eccentric Friction Gib
200369C	16616	" " " " "
		Adjusting Screw
350101C	16616	Feed Driving Eccentric Friction Gib Adjusting Screw Set Screw
240232	16616	Feed Driving Flange with 200333C, 200346C, two each 200369C and 350101C
200333C	16616	Feed Driving Flange Position Screw
200346C	16616	" " " Set Screw
223650	16622	" " Rock Shaft
240233	16622	" " " 223650 with 201518E, 240224 and 350393C

PARTS FOR MACHINE NO. IIIw151

No.	Plate	Name
248420	16622	Feed Driving Rock Shaft Bushing (left) (split)
200347C	16622	Feed Driving Rock Shaft Bushing (left) Pinch Screw
201007C	16622	Feed Driving Rock Shaft Bushing (left) Pinch Screw Set Screw
202355	16622	Feed Driving Rock Shaft Bushing (left) Pinch Screw Set Screw Packing (brass)
248421	16622	Feed Driving Rock Shaft Bushing (right) split
200327C	16622	Feed Driving Rock Shaft Bushing (right) Pinch Screw
200347C	16622	Feed Driving Rock Shaft Bushing (right) Pinch Screw Set Screw
202355	16622	Feed Driving Rock Shaft Bushing (right) Pinch Screw Set Screw Packing (brass)
224141	16622	Feed Driving Rock Shaft Crank with 200019E
200019E	16622	Feed Driving Rock Shaft Crank Pinch Screw
202625	16622	Feed Driving Rock Shaft Stop Collar with two 200383C (2)
200383C	16622	Feed Driving Rock Shaft Stop Collar Set Screw
248449	16604	Feed Indicating Disc with 200958C
200958C	16604	" " " Set Screw
224154	16616	" Lifting Cam with 201220C
224052	16622	" " " Fork with 200173D and 223655
350197E	16622	Feed Lifting Cam Fork Screw
225837	16622	" " " " Washer
223655	16622	" " " Oiling Felt
200173D	16622	" " " " Screw
201220C	16616	" " " Set Screw
240235	16616	" Regulating Stud
240245	16616	" " " Retaining Spring
248425	16616	" " " Spring
*240238	-----	Hook (sewing)
240239	16617	" 240238 with 203525, 224025, two each 200590H and 201253F
240240	16617	Hook and Bobbin Case complete, Nos. 235100 and 240239
249365	16618	Hook Ball Bearing
350394E	16618	" " " Adjusting Screw
200403C	16618	" " " " Set Screw
204479	16618	Hook Ball Bearing Adjusting Screw Set Screw Packing (brass)
248430	16618	Hook Ball Bearing Washer (felt)
248429	16618	" " " (steel)
223867	16616	" Driving Gear (spiral) with 200362C and 201222C
201222C	16616	Hook Driving Gear Position Screw
200362C	16616	" " " Set Screw

No.	Plate	Name
240246	16618	Hook Driving Pinion (spiral) with 200382C and 201220C
201220C	16618	Hook Driving Pinion Position Screw
200382C	16618	" " " Set Screw
240241	16616	" " Shaft
249440	16616	" " " Ball Bearing
*240060	16616	" " " " Collar with 200378C and 201220C
240061	16616	Hook Driving Shaft Ball Bearing Collar 240060 with 249440
201220C	16616	Hook Driving Shaft Ball Bearing Collar Position Screw
200378C	16616	Hook Driving Shaft Ball Bearing Collar Set Screw
*240056	16616	Hook Driving Shaft Ball Bearing Re- taining Washer
*240058	16616	Hook Driving Shaft Bushing (back)
240063	16616	Hook Driving Shaft Bushing (back) (ball bearing) complete, Nos. 240056, 240058 and 240061
237529	16616	Hook Driving Shaft Bushing (front)
200327C	16616	" " " " Set Screw (2)
265314	16616	" " " Lock Ratchet with 200354C and 200362C
200354C	16616	Hook Driving Shaft Lock Ratchet Posi- tion Screw
200362C	16616	Hook Driving Shaft Lock Ratchet Set Screw
240244	16616	Hook Driving Shaft Lock Stud
240245	16616	" " " " " Retaining Spring
248425	16616	Hook Driving Shaft Lock Stud Spring
203525	16617	" Gib
201253F	16617	" " Screw
248434	16618	" Saddle with 200009E and 201246C
240243	16616	" " Bearing
200335C	16616	" " " Set Screw
248435	16618	" " Oil Pad (felt)
200009E	16618	" " Pinch Screw
200006E	16618	" " Screw
225585	16618	" " " Washer
240242	16618	Hook Saddle complete, Nos. 200118D, 200403C, 204479, 224005, 240240, 240246 248404, 248405, 248430, 248434, 265088, 350394E, two each 248429, 249365 and four 248435
224025	16617	Hook Washer
200590H	16617	" " Screw
240067	16621	Knee Lifter Connection Lever
200262H	16621	" " " " Hinge Screw
223684	16621	Knee Lifter Connection Lever Lifting Rod with 202302
202302	16621	Knee Lifter Connection Lever Lifting Rod Cotter Pin
206628	16621	Knee Lifter Connection Lever Lifting Rod Spring

No.	Plate	Name
227227	16621	Knee Lifter Connection Lever Lifting Rod Spring Collar with 200113F
200113F	16621	Knee Lifter Connection Lever Lifting Rod Spring Collar Set Screw
240068	16621	knee Lifter Lifting Lever
200262H	16621	" " " " Hinge Screw
240020	16619	Needle Bar with 200125F, 200175D and 240039
238251	16619	Needle Bar Connecting Link
264718	16619	" " " " Oil Guard
200161D	16619	" " " " " "
		Screw
202333	16619	Needle Bar Connecting Link Stud with 202254
202254	16619	Needle Bar Connecting Link Stud Oil Packing (wick)
200374C	16619	Needle Bar Connecting Link Stud Set Screw
200383C	16619	Needle Bar Connecting Link Stud Set Screw
264714	16619	Needle Bar Connecting Stud with 200072C and 202277
202277	16619	Needle Bar Connecting Stud Oil Packing (wick)
200072C	16619	Needle Bar Connecting Stud Pinch Screw
202692	16619	" " Crank with 200335C, 200374C, 200383C, 200428C and 202333
240051	16619	Needle Bar Crank 202692 with 202399, 202400, 238251, 241518 and 264714
203172	16619	Needle Bar Crank Friction Washer
200428C	16619	" " " Position Screw
200335C	16619	" " " Set Screw
248436	16619	" " Rock Frame
248437	16619	" " " Hinge Stud
200347C	16619	" " " " " " Set
		Screw
202666	16619	Needle Bar Rock Frame Position Bracket
200098F	16619	" " " " " "
		Screw
223690	16609	Needle Bar Rock Frame Rock Shaft
223691	16609	" " " " " " 223690
		with 200387C and 210920
223692	16609	Needle Bar Rock Frame Rock Shaft Crank with 200029E
223693	16604	Needle Bar Rock Frame Rock Shaft Crank Connection with 202277
201407C	16604	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw (lower)
206758	16604	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw (lower) Oil Packing (wick)
201517E	16604	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw (lower) Nut
200833C	16604	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw (upper)
201522E	16604	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw (upper) Nut

No.	Plate	Name
202277	16604	Needle Bar Rock Frame Rock Shaft Crank Connection Oil Packing (wick)
200029E	16609	Needle Bar Rock Frame Rock Shaft Crank Pinch Screw
202668	16609	Needle Bar Rock Frame Slide Block
210920	16609	" " " " " " 202668 with 201141C
201141C	16609	Needle Bar Rock Frame Slide Block Stud
200387C	16609	" " " " " " " " Set Screw
240039	16619	Needle Bar Thread Guide
200175D	16619	" " " " " Screw
200125F	16619	" Set Screw
208566	16611	Presser Bar with 200074F
207072	16611	" " Bushing (2)
200352C	16611	" " " Set Screw (2)
202671	16611	" " Lifter
200653C	16611	" " " Hinge Screw
207963	16611	" " Lifting Releasing Lever Bracket
200975F	16611	Presser Bar Lifting Releasing Lever Bracket Guide Screw
206608	16611	Presser Bar Lifting Releasing Lever Bracket Spring
202337	16611	Presser Bar Position Guide
202338	16611	" " " " Lever with 200086F
200086F	16611	Presser Bar Position Guide Lever Pinch Screw
200352C	16611	Presser Bar Position Guide Set Screw
207965	16621	" " Spring (flat)
210949	16611	" " " Bracket with 200086C
200086C	16611	" " " Pinch Screw
200538C	16621	" " " Regulating Screw
200948F	16621	" " " Support Screw
202090	16611	" Foot Hinge Pin
203013	16611	" " Plate
200074F	16611	" " Screw
215911	16611	" " Shank
229882	16611	Presser Foot (hinged) complete, Nos. 202090, 203013 and 215911
265032	16616	Safety Clutch Hook Driving Shaft Posi- tion Collar with two 201254C
201254C	16616	Safety Clutch Hook Driving Shaft Posi- tion Collar Set Screw
265101	16616	Safety Clutch Locking Lever
265050	16616	" " " " Connecting Link
350433C	16616	Safety Clutch Locking Lever Hinge Screw
265102	16616	Safety Clutch Locking Lever Spring
350436C	16616	" " " " " Screw
265103	16616	" " Pulley with 202253
202253	16616	" " " Spring Flange
265057	16616	" " Throw-in Latch
265052	16616	" " " " Pin
265051	16616	" " " " Spring

No.	Plate	Name
265104	16616	Safety Clutch complete, Nos. 265032, 265050 to 265052, 265057, 265101 to 265103, 350433C and 350436C
241518	16619	Take-up Lever
202399	16619	" " Driving Stud with 202277
202277	16619	" " " " Oil Packing (wick)
202400	16619	Take-up Lever Hinge Stud with 202423
202423	16619	" " " " Oil Packing (wick)
200363C	16619	Take-up Lever Hinge Stud Set Screw
202401	16611	" " Oiling Felt
200132E	16611	" " " " Screw
240023	16620	Tension Bracket with 201224B and 236060
200159F	16620	Tension Bracket Screw
240446	16620	Tension Bracket complete, Nos. 200978H, 201199F, 204271, 223438, 223703, 223704, 223706, 237174, 240023, two each 200309E, 201572H and 244048
244048	16620	Tension Disc
236060	16620	" " Position Pin
223703	16620	" Release Lever
235072	16611	" " " Rod
200309E	16620	" " " Screw
223704	16620	" " Plunger
204271	16620	" " Washer
223438	16620	" Spring
201224B	16620	" Stud
201572H	16620	" Thumb Nut
223706	16620	Thread Controller Disc
200978H	16620	" " " Screw
237174	16620	" " Spring
241360	16620	" " " Stop
200132E	16620	" " " " Screw
201199F	16620	" " Stud with 204925
200061C	16620	" " " Set Screw
201572H	16620	" " " Thumb Nut
204925	16620	" " " Washer
202412	16603	" Guide
224040	16620	" " " "
210955	16620	" " (upper)
200582H	16620	" " Screw (3)
241755	16621	" Lubricator Oil Pad (felt)
237779	16621	" " " " Holder
240439	16621	" " " " Retainer
241758	16621	" " " Reservoir
241759	16621	" " " Wick
350432XC	16621	" " Screw
201650H	16621	" " " Nut
214838	16621	" " " Washer
237780	16621	Thread Lubricator complete, Nos. 214838, 237779, 240439, 241755, 241758 and 241759
240034	16620	Thread Retainer
200355H	16620	" " Set Screw

No.	Plate	Name
240027	16621	Throat Plate
691F	16621	" " Screw (2)

SINGER Needles should be used
in **SINGER** Machines
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO.**" ₁

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. ₂

ACCESSORIES

No.	Plate	Name
200157B	16621	Attachment Screw
200861D	16621	Bed Slide (back) Locking Thumb Screw
203470	16617	Bobbin (5)
225497	17620	" Case Screw Driver
231337	16621	Cloth Guide
200861D	16621	" " Thumb Screw
135 x 17	-----	Needles, six, sizes 20 and 22
224121	16644	Drip Pan, 20 in. long, with four 3/4 in. wire nails
12361	16621	Machine Hinge Connection (2)
41400	17620	" Rest Pin (wood)
120342	17620	Oiler (copper plated) with 120343
120343	17620	" Spout, 3-1/2 in. long
225498	17620	Screw Driver complete, (7-1/4 in. long)
225554	17620	Wrench (steel)

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

259428	16615	Brake (leather)
259429	16615	" Clamp
200113F	16615	" " Screw
225453	16615	Frame with 202277 and 259660
225454	16615	" Hinge Pin
202277	16615	" Oil Packing (wick)
259660	16615	" " Well Washer
225455	16615	" Spring
225456	16615	" " Plunger
225368	16615	Pulley with 200380C
200380C	16615	" Set Screw
225381	16615	Spindle
225444	16615	Stop Latch
200056E	16615	" " Screw
225458	16615	" " Thumb Lever
225459	16615	" " " " Hinge Stud
225459	16615	" " " " Joint Stud
202478	16615	" " Trip Lever
200299H	16615	" " " " Hinge Screw
225461	16615	Tension Bracket with 201499H
200082D	16615	" " Screw
228026	16615	" " " Washer
2102	16615	" Disc
13710	16615	" Spring
201499H	16615	" Stud
201572H	16615	" " Thumb Nut

No.	Plate	Name
225462	16615	Bobbin Winder Tension Bracket complete Nos.13710,201572H,225461 and two 2102
259430	16615	Bobbin Winder and Tension Bracket Base
259431	16615	Universal Bobbin Winder complete,Nos. 200056E,200082D,200113F,200299H, 202478,225368,225381,225444,225453 to 225456,225458,225462,228026, 259428 to 259430,two each 225459 and wood screws 3/4 in.No.12,R.H.B.

KNEE LIFTER

228359	16643	Rock Lever with two 350231C
228360	16643	" " Bracket with 200347C and three wood screws 7/8 in.No.12
228361	16643	Rock Lever Bracket 228360 with 228359 228363,228367 and 228386
228362	16643	Rock Lever Extension with 200529C
350231C	16643	" " " Set Screw
228363	16643	" " Hinge Pin
228364	16643	" " Knee Plate with 350231C
228388	16643	" " " Arm
350231C	16643	" " " " Set Screw
350231C	16643	" " " " Set Screw
228365	16643	" " Rod
200529C	16643	" " " Set Screw
228386	16643	" " Spring
228367	16643	" " Stop Stud
200347C	16643	" " " " Set Screw
228368	16643	Knee Lifter complete,Nos.228361,228362 228364,228365 and 228388

(Other Knee Lifter Parts are listed with parts
of machine head.)

FEED DOGS

240073	16623	Feed Dog,50 needle hole,for needle sizes 14 and 15,for 240025
240074	16623	Feed Dog,46 needle hole,for needle sizes 16 and 18,for 240025
240075	16623	Feed Dog,40 needle hole,for needle size 20,for 240025
240076	16623	Feed Dog,50 needle hole,for needle sizes 14 and 15,for 240027
240077	16623	Feed Dog,46 needle hole,for needle sizes 16 and 18,for 240027
240078	16623	Feed Dog,40 needle hole,for needle size 20,for 240027

THROAT PLATES

No.	Plate	Name
240025	16623	Throat Plate, for 240073 to 240075
240027	16623	" " " 240076 to 240078

FOOT LIFTER

PARTS REQUIRED FOR CHANGING FROM
KNEE LIFTER TO FOOT LIFTER

223733	16621	Lifting Lever Extension
200082D	16621	" " " Screw (2)
227561	16621	" " Spring
200835D	16621	" " " Stop Screw

FOOT LIFTER

227952	17620	Lever (left or right) with 227954
227678	17620	" Chain, 48 in. long, with 202784
227954	17620	" " Hook (lower)
202784	17620	" " " (upper)
225016	17620	" Hinge Pin
227953	17620	" Stand with two wood screws 1 in., No. 12
227955	17620	Foot Lifter Lever (left or right) complete, Nos. 225016, 227678, 227952 and 227953

THREAD UNWINDER

FOR TWO SPOOLS

225257	17900	Spool Rest (for two spools) (flat) with 201018C
150203	17900	Spool Rest Cushion (felt)
225388	17900	" " Rod
200383C	17900	" " " Set Screw
201018C	17900	" " " Set Screw
259658	17900	" Stand with 200383C
225391	17900	Thread Guide
201696H	17900	" " Lock Nut
225326	17900	" " Position Cup
225324	17900	" " Rod with 208AL and 225322

No.	Plate	Name
208AL	17900	Thread Guide Rod Screw
225322	17900	" " " Washer
225258	17900	Thread Unwinder (for two spools) (flat) complete, Nos. 201696H, 225257 225324, 225326, 225388, 259658, two each 150203, 225391 and three wood screws 7/8 in., No. 12

MISCELLANEOUS PARTS

USED IN CONJUNCTION WITH THREAD UNWINDER

60913	17900	Spool Weight with 60914
60914	17900	" " Center Pin
225377	17900	" Wire, for small spools
27739	17900	Thread Cone, (wood)
225390	17900	" " Holder

SINGER Needles should be used
in **SINGER** Machines
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO.**" ₁

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. ₂

NUMERICAL LIST OF PARTS

No.	Plate	Name
208AL	17900	Thread Unwinder Thread Guide Rod Screw for 225324
691F	16621	Throat Plate Screw
2102	16615	Bobbin Winder Tension Disc, for 225462
12361	16621	Machine Hinge Connection
13710	16615	Bobbin Winder Tension Spring, for 225462
27739	17900	Thread Cone (wood)
41400	17620	Machine Rest Pin (wood)
60913	17900	Spool Weight with 60914
60914	17900	" " Center Pin, for 60913
120342	17620	Oiler (copper plated) with 120343
120343	17620	" Spout, 3-1/2 in. long, for 120342
150203	17900	Thread Unwinder Spool Rest Cushion (felt), for 225258
200004E	16621	Arm Screw
200006E	16618	Hook Saddle Screw
200009E	16618	" " Pinch Screw, for 248434
200019E	16622	Feed Driving Crank Pinch Screw, for 240228
200019E	16622	Feed Driving Rock Shaft Crank Pinch Screw, for 224141
200029E	16609	Needle Bar Rock Frame Rock Shaft Crank Pinch Screw, for 223692
200056E	16615	Bobbin Winder Stop Latch Screw, for 259431
200061C	16620	Thread Controller Stud Set Screw
200072C	16619	Needle Bar Connecting Stud Pinch Screw for 264714
200074F	16611	Presser Foot Screw, for 208566
200082D	16615	Bobbin Winder Tension Bracket Screw, for 259431
200082D	16621	Foot Lifter Lifting Lever Extension Screw
200086F	16611	Presser Bar Position Guide Lever Pinch Screw, for 202338
200086C	16611	Presser Bar Spring Bracket Pinch Screw for 210949
200098F	16619	Needle Bar Rock Frame Position Bracket Screw
200106E	16622	Feed Dog Screw
200113F	16615	Bobbin Winder Brake Clamp Screw, for 259431
200113F	16621	Knee Lifter Connection Lever Lifting Rod Spring Collar Set Screw, for 227227
200118D	16618	Bobbin Case Opener Screw, for 240242
200125F	16619	Needle Set Screw, for 240020
200132E	16611	Take-up Lever Oiling Felt Screw
200132E	16620	Thread Controller Spring Stop Screw

NUMERICAL LIST OF PARTS

No.	Plate	Name
200157B	16621	Attachment Screw
200159F	16620	Tension Bracket Screw
200161D	16619	Needle Bar Connecting Link Oil Guard Screw
200164B	16616	Arm Shaft Connection Belt Timing Plate Screw
200173D	16622	Feed Lifting Cam Oiling Felt Screw, for 224052
200175D	16619	Needle Bar Thread Guide Screw, for 240020
200262H	16621	Knee Lifter Connection Lever Hinge Screw
200262H	16621	Knee Lifter Lifting Lever Hinge Screw
200278H	16603	Arm Cap Screw
200299H	16615	Bobbin Winder Stop Latch Trip Lever Hinge Screw, for 259431
200309E	16620	Tension Release Lever Screw, for 240446
200327C	16604	Arm Shaft Connection Belt Pulley Set Screw, for 224104
200327C	16622	Feed Driving Rock Shaft Bushing (right) Pinch Screw
200327C	16616	Hook Driving Shaft Bushing Set Screw
200328C	16603	Balance Wheel Position Screw, for 248402
200333C	16616	Feed Driving Flange Position Screw, for 240232
200335C	16603	Arm Shaft Bushing (back) Set Screw
200335C	16603	Balance Wheel Set Screw, for 248402
200335C	16616	Hook Saddle Bearing Set Screw
200335C	16619	Needle Bar Crank Set Screw, for 202692
200341C	16603	Arm Shaft Bushing (front) Set Screw
200346C	16616	Feed Driving Flange Set Screw, for 240232
200347C	16622	Feed Driving Rock Shaft Bushing (left) Pinch Screw
200347C	16622	Feed Driving Rock Shaft Bushing (right) Pinch Screw Set Screw
200347C	16643	Knee Lifter Rock Lever Stop Stud Set Screw, for 228360
200347C	16619	Needle Bar Rock Frame Hinge Stud Set Screw
200352C	16611	Presser Bar Bushing Set Screw
200352C	16611	" " Position Guide Set Screw
200354C	16616	Hook Driving Shaft Lock Ratchet Posi- tion Screw, for 265314
200355H	16620	Thread Retainer Set Screw
200362C	16616	Hook Driving Gear Set Screw, for 223867
200362C	16616	" " Shaft Lock Ratchet Set Screw, for 265314
200363C	16619	Take-up Lever Hinge Stud Set Screw
200369C	16616	Feed Driving Eccentric Friction Gib Adjusting Screw, for 240232
200374C	16619	Needle Bar Connecting Link Stud Set Screw, for 202692
200378C	16603	Arm Shaft Ball Bearing Collar Set Screw, for 240054

NUMERICAL LIST OF PARTS

21

No.	Plate	Name
200378C	16616	Hook Driving Shaft Ball Bearing Collar Set Screw, for 240060
200380C	16615	Bobbin Winder Pulley Set Screw, for 225368
200382C	16616	Feed Driving Eccentric Adjusting Disc Spring Collar Set Screw, for 248416
200382C	16618	Hook Driving Pinion Set Screw, for 240246
200383C	16622	Feed Driving Rock Shaft Stop Collar Set Screw, for 202625
200383C	16619	Needle Bar Connecting Link Stud Set Screw, for 202692
200383C	17900	Thread Unwinder Spool Rest Rod Set Screw, for 259658
200387C	16609	Needle Bar Rock Frame Slide Block Stud Set Screw, for 223691
200403C	16618	Hook Ball Bearing Adjusting Screw Set Screw, for 240242
200428C	16619	Needle Bar Crank Position Screw, for 202692
200473B	16621	Face Plate Thumb Screw
200502H	16603	Arm Shaft Bushing (front) Oil Packing Thumb Screw
200529C	16643	Knee Lifter Rock Lever Rod Set Screw, for 228362
200538C	16621	Presser Bar Spring Regulating Screw
200582H	16620	Thread Guide Screw
200590H	16617	Hook Washer Screw, for 240239
200594C	16617	Bobbin Case Tension Spring Screw, for 235100
200602C	16604	Arm Shaft Connection Belt Pulley Position Screw, for 224104
200653C	16611	Presser Bar Lifter Hinge Screw
200833C	16604	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw (upper)
200835D	16621	Foot Lifter Lifting Lever Spring Stop Screw
200861D	16621	Bed Slide (back) Locking Thumb Screw
200861D	16621	Cloth Guide Thumb Screw
200948F	16621	Presser Bar Spring Support Screw
200958C	16604	Feed Indicating Disc Set Screw, for 248449
200975F	16611	Presser Bar Lifting Releasing Lever Bracket Guide Screw
200978H	16620	Thread Controller Disc Screw, for 240446
200984C	16617	Bobbin Case Tension Spring Regulating Screw, for 235100
201007C	16622	Feed Driving Rock Shaft Bushing (left) Pinch Screw Set Screw
201018C	17900	Thread Unwinder Spool Rest Set Screw, for 225257
201141C	16609	Needle Bar Rock Frame Slide Block Stud, for 210920
201181C	16616	Feed Driving Connection Hinge Screw

NUMERICAL LIST OF PARTS

No.	Plate	Name
201199F	16620	Thread Controller Stud with 204925, for 240446
201220C	16616	Feed Lifting Cam Set Screw, for 224154
201220C	16618	Hook Driving Pinion Position Screw, for 240246
201220C	16616	Hook Driving Shaft Ball Bearing Collar Position Screw, for 240060
201222C	16616	Hook Driving Gear Position Screw, for 223867
201224B	16620	Tension Stud, for 240023
201246C	16618	Bobbin Case Opener Lever Hinge Stud Set Screw, for 248434
201253F	16617	Hook Gib Screw, for 240239
201254C	16616	Safety Clutch Hook Driving Shaft Posi- tion Collar Set Screw, for 265032
201346C	16603	Balance Wheel Set Screw, for 248456
201349C	16618	Bobbin Case Opener Lever Driving Screw Stud, for 224005
201407C	16604	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw (lower)
201499H	16615	Bobbin Winder Tension Stud, for 225461
201517E	16604	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw (lower) Nut
201518E	16622	Feed Bar Hinge Screw Nut, for 240233
201518E	16616	" Driving Connection Hinge Screw Nut
201522E	16604	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw (upper) Nut
201542C	16618	Bobbin Case Opener Lever Driving Screw Stud Nut, for 224005
201572H	16620	Tension Thumb Nut, for 240446
201572H	16615	Bobbin Winder Tension Stud Thumb Nut, for 225462
201572H	16620	Thread Controller Stud Thumb Nut, for 240446
201650H	16621	Thread Lubricator Screw Nut, for 237777
201696H	17900	" Unwinder Thread Guide Lock Nut, for 225258
202005	16621	Arm Screw Washer
*202056	-----	Bobbin Case Latch Pin, for 235100
202090	16611	Presser Foot Hinge Pin, for 229882
202135	16621	Face Plate Position Pin, for 248401
202248	16603	Arm Cap Screw Washer
202253	16604	Arm Shaft Connection Belt Pulley Spring Flange, for 224104
202253	16616	Safety Clutch Pulley Spring Flange, for 265103
202254	16619	Needle Bar Connecting Link Stud Oil Packing (wick), for 202333
202277	16618	Bobbin Case Opener Lever Hinge Stud Oil Packing (wick), for 265088
202277	16615	Bobbin Winder Frame Oil Packing (wick) for 225453
202277	16619	Needle Bar Connecting Stud Oil Packing (wick), for 264714

NUMERICAL LIST OF PARTS

23

No.	Plate	Name
202277	16604	Needle Bar Rock Frame Rock Shaft Crank Connection Oil Packing (wick), for 223693
202277	16619	Take-up Lever Driving Stud Oil Packing (wick), for 202399
202302	16621	Knee Lifter Connection Lever Lifting Rod Cotter Pin, for 223684
202333	16619	Needle Bar Connecting Link Stud with 202254, for 202692
202337	16611	Presser Bar Position Guide
202338	16611	" " " " Lever with 200086F
202355	16622	Feed Driving Rock Shaft Bushing (left) Pinch Screw Set Screw Packing (brass)
202355	16622	Feed Driving Rock Shaft Bushing (right) Pinch Screw Set Screw Pack- ing (brass)
202399	16619	Take-up Lever Driving Stud with 202277 for 240051
202400	16619	Take-up Lever Hinge Stud with 202423, for 240051
202401	16611	Take-up Lever Oiling Felt
202412	16603	Thread Guide
202423	16619	Take-up Lever Hinge Stud Oil Packing (wick), for 202400
202478	16615	Bobbin Winder Stop Latch Trip Lever, for 259431
202625	16622	Feed Driving Rock Shaft Stop Collar with two 200383C
202666	16619	Needle Bar Rock Frame Position Bracket
202668	16609	" " " " Slide Block, for 210920
202671	16611	Presser Bar Lifter
202692	16619	Needle Bar Crank with 200335C, 200374C, 200383C, 200428C and 202333, for 240051
202784	17620	Foot Lifter Lever Chain Hook (upper), for 227678
203013	16611	Presser Foot Plate, for 229882
203101	16618	Bobbin Case Opener Lever Driving Screw Stud Oil Packing (wick), for 224005
203172	16619	Needle Bar Crank Friction Washer
203214	16617	Bobbin Case Tension Spring, for 235100
203216	16617	" " Washer (cloth), for 235100
203470	16617	"
203473	16617	" Case Latch Plunger, for 235100
203474	16617	" " " Spring, for 235100
203525	16617	Hook Gib, for 240239
203648	16617	Bobbin Case Latch, for 235100
204235	16621	Arm Position Pin
204281	16620	Tension Release Washer, for 240446
204329	16603	Arm Shaft Bushing (front) Oil Pad
204479	16618	Hook Ball Bearing Adjusting Screw Set Screw Packing (brass), for 240242
204925	16620	Thread Controller Stud Washer, for 201199

NUMERICAL LIST OF PARTS

No.	Plate	Name
206608	16611	Presser Bar Lifting Releasing Lever Bracket Spring
206628	16621	Knee Lifter Connection Lever Lifting Rod Spring
206758	16604	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw (lower) Oil Packing (wick)
207072	16611	Presser Bar Bushing
207963	16611	" " Lifting Releasing Lever Bracket
207965	16621	Presser Bar Spring (flat)
208566	16611	" " with 200074F
210920	16609	Needle Bar Rock Frame Slide Block 202668 with 201141C, for 223691
210949	16611	Presser Bar Spring Bracket with 200086C
210955	16620	Thread Guide (upper)
214838	16621	" Lubricator Screw Washer, for 237780
215911	16611	Presser Foot Shank, for 229882
223438	16620	Tension Spring, for 240446
223650	16622	Feed Driving Rock Shaft, for 240233
223655	16622	" Lifting Cam Oiling Felt, for 224052
223684	16621	Knee Lifter Connection Lever Lifting Rod with 202302
223690	16609	Needle Bar Rock Frame Rock Shaft, for 223691
223691	16609	Needle Bar Rock Frame Rock Shaft 223690 with 200387C and 210920
223692	16609	Needle Bar Rock Frame Rock Shaft Crank with 200029E
223693	16604	Needle Bar Rock Frame Rock Shaft Crank Connection with 202277
223703	16620	Tension Release Lever, for 240446
223704	16620	" " Plunger, for 240446
223706	16620	Thread Controller Disc, for 240446
223733	16621	Foot Lifter Lifting Lever Extension
223811	16621	Bed Slide (back) Stop
223812	16621	" " " " Spring
223847	16603	Arm Shaft Bushing (front) Oil Packing (wick), for 263096
223867	16616	Hook Driving Gear (spiral) with 200362C and 201222C
224002	16603	Arm Cap
224005	16618	Bobbin Case Opener Lever with 201349C, 201542C and 203101, for 240242
224025	16617	Hook Washer, for 240239
224040	16620	Thread Guide
224052	16622	Feed Lifting Cam Fork with 200173D and 223655, for 240224
224103	16604	Arm Shaft Connection Belt
224104	16604	Arm Shaft Connection Belt Pulley with 200327C, 200602C and two 202253
224121	16644	Drip Pan, 20 in. long, with four 3/4 in. wire nails

NUMERICAL LIST OF PARTS

25

No.	Plate	Name
224139	16616	Arm Shaft Connection Belt Timing Plate
224141	16622	Feed Driving Rock Shaft Crank with 200019E
224154	16616	Feed Lifting Cam with 201220C
224392	16603	Arm Shaft Oil Packing (wick), for 248440
225016	17620	Foot Lifter Lever Hinge Pin, for 227955
225257	17900	Thread Unwinder Spool Rest (for two spools) (flat) with 201018C, for 225258
225258	17900	Thread Unwinder (for two spools) (flat) complete, Nos. 201696H, 225257, 225324, 225326, 225388, 259658, two each 150203, 225391 and three wood screws 7/8 in., No. 12
225322	17900	Thread Unwinder Thread Guide Rod Washer, for 225324
225324	17900	Thread Unwinder Thread Guide Rod with 208AL and 225322, for 225258
225326	17900	Thread Unwinder Thread Guide Position Cup, for 225258
225368	16615	Bobbin Winder Pulley with 200380C, for 259431
225377	17900	Spool Wire, for small spools
225381	16615	Bobbin Winder Spindle, for 259431
225388	17900	Thread Unwinder Spool Rest Rod, for 225258
225390	17900	Thread Cone Holder
225391	17900	" Unwinder Thread Guide, for 225258
225444	16615	Bobbin Winder Stop Latch, for 259431 Nos. 225453 to 225456, for 259431
225453	16615	Bobbin Winder Frame with 202277 and 259660
225454	16615	Bobbin Winder Frame Hinge Pin
225455	16615	" " " Spring
225456	16615	" " " Plunger
225458	16615	" " Stop Latch Thumb Lever, for 259431
225459	16615	Bobbin Winder Stop Latch Thumb Lever Hinge Stud, for 259431
225459	16615	Bobbin Winder Stop Latch Thumb Lever Joint Stud, for 259431
225461	16615	Bobbin Winder Tension Bracket with 201499H, for 225462
225462	16615	Bobbin Winder Tension Bracket complete Nos. 13710, 201572H, 225461 and two 2102, for 259431
225497	17620	Bobbin Case Screw Driver
225498	17620	Screw Driver (7-1/4 in. long)
225554	17620	Wrench (steel)
225585	16618	Hook Saddle Screw Washer
225837	16622	Feed Lifting Cam Fork Screw Washer, for 240224
227227	16621	Knee Lifter Connection Lever Lifting Rod Spring Collar with 200113F

NUMERICAL LIST OF PARTS

No.	Plate	Name
227561	16621	Foot Lifter Lifting Lever Spring
227678	17620	" " Lever Chain, 48 in. long, with 202784, for 227955
227952	17620	Foot Lifter Lever (left or right), with 227954, for 227955
227953	17620	Foot Lifter Lever Stand with two wood screws 1 in., No. 12, for 227955
227954	17620	Foot Lifter Lever Chain Hook (lower), for 227952
227955	17620	Foot Lifter Lever (left or right), complete, Nos. 225016, 227678, 227952 and 227953
228026	16615	Bobbin Winder Tension Bracket Screw Washer, for 259431
228359	16643	Knee Lifter Rock Lever with two 350231C, for 228361
228360	16643	Knee Lifter Rock Lever Bracket with 200347C and three wood screws 7/8 in. Nos. 12, for 228361
228361	16643	Knee Lifter Rock Lever Bracket 228360 with 228359, 228363, 228367 and 228386, for 228368
228362	16643	Knee Lifter Rock Lever Extension with 200529G, for 228368
228363	16643	Knee Lifter Rock Lever Hinge Pin, for 228361
228364	16643	Knee Lifter Rock Lever Knee Plate with 350231C, for 228368
228365	16643	Knee Lifter Rock Lever Rod, for 228368
228367	16643	" " " " Stop Stud, for 228361
228368	16643	Knee Lifter complete, Nos. 228361, 228362 228364, 228365 and 228388
228386	16643	Knee Lifter Rock Lever Spring, for 228361
228388	16643	Knee Lifter Rock Lever Knee Plate Arm for 228368
229882	16611	Presser Foot (hinged) complete, Nos. 202090, 203013 and 215911
231337	16621	Cloth Guide
235072	16611	Tension Release Lever Rod
*235099	-----	Bobbin Case, for 235100
235100	16617	Bobbin Case complete, Nos. 200594C, 200984C, 202056, 203214, 203216, 203473 203474, 203648, 235099, 241674, 241675 and two 350405C, for 240240
236060	16620	Tension Disc Position Pin, for 240023
237174	16620	Thread Controller Spring, for 240446
237529	16616	Hook Driving Shaft Bushing (front)
237777	16621	Face Plate with 201650H and 350432XC
237779	16621	Thread Lubricator Oil Pad Holder, for 237780
237780	16621	Thread Lubricator complete, Nos. 214838, 237779, 240439, 241755, 241758 and 241759
238251	16619	Needle Bar Connecting Link, for 240051

NUMERICAL LIST OF PARTS

27

No.	Plate	Name
240003	16621	Bed Slide (back)
240004	16621	" " (front)
240020	16619	Needle Bar with 200125F, 200175D and 240039
240023	16620	Tension Bracket with 201224B and 236060, for 240446
240025	16623	Throat Plate, for 240073 to 240075
240027	16621	" " " 240076 to 240078
240034	16620	Thread Retainer
240039	16619	Needle Bar Thread Guide, for 240020
240051	16619	" " Crank 202692 with 202399, 202400, 238251, 241518 and 264714
*240053	16603	Arm Shaft Bushing (back), for 240057
*240054	16603	" " Ball Bearing Collar with 200378C, for 240055
240055	16603	Arm Shaft Ball Bearing Collar 240054 with 249440, for 240057
*240056	16603	Arm Shaft Ball Bearing Retaining Washer, for 240057
*240056	16616	Hook Driving Shaft Ball Bearing Retaining Washer, for 240063
240057	16603	Arm Shaft Bushing (back) (ball bearing) complete, Nos. 240053, 240055 and 240056
*240058	16616	Hook Driving Shaft Bushing (back), for 240063
*240060	16616	Hook Driving Shaft Ball Bearing Collar with 200378C and 201220C, for 240061
240061	16616	Hook Driving Shaft Ball Bearing Collar 240060 with 249440, for 240063
240063	16616	Hook Driving Shaft Bushing (back) (ball bearing) complete, Nos. 240056, 240058 and 240061
240067	16621	Knee Lifter Connection Lever
240068	16621	" " Lifting Lever
		Nos. 240073 to 240075, for 240025
240073	16623	Feed Dog, 50 needle hole, for needle sizes 14 and 15
240074	16623	Feed Dog, 46 needle hole, for needle sizes 16 and 18
240075	16623	Feed Dog, 40 needle hole, for needle size 20
		Nos. 240076 to 240078, for 240027
240076	16623	Feed Dog, 50 needle hole, for needle sizes 14 and 15
240077	16623	Feed Dog, 46 needle hole, for needle sizes 16 and 18
240078	16622	Feed Dog, 40 needle hole, for needle size 20
240223	16622	Feed Bar, for 240224
240224	16622	" " 240223 with 224052, 225837 and 350197E, for 240233
240225	16616	Feed Driving Connection with 240226 and 240227
240226	16616	Feed Driving Connection Oiling Felt, for 240225

NUMERICAL LIST OF PARTS

No.	Plate	Name
240227	16616	Feed Driving Connection Oiling Felt Retaining Wire, for 240225
240228	16622	Feed Driving Crank with 200019E
240229	16616	" " Eccentric
240230	16616	" " Adjusting Disc
240231	16616	" " Friction Gib
240232	16616	" " Flange with 200333C, 200346C two each 200369C and 350101C
240233	16622	Feed Driving Rock Shaft 223650 with 201518E, 240224 and 350393C
240235	16616	Feed Regulating Stud
*240238	-----	Hook (sewing), for 240239
240239	16617	" 240238 with 203525, 224025, two each 200590H and 201253F, for 240240
240240	16617	Hook and Bobbin Case complete, Nos. 235100 and 240239, for 240242
240241	16616	Hook Driving Shaft
240242	16618	Hook Saddle complete, Nos. 200118D, 200403C, 204479, 224005, 240240, 240246 248404, 248405, 248430, 248434, 265088, 350394E, two each 248429, 249365 and four 248435
240243	16616	Hook Saddle Bearing
240244	16616	" Driving Shaft Lock Stud
240245	16616	Feed Regulating Stud Retaining Spring
240245	16616	Hook Driving Shaft Lock Stud Retaining Spring
240246	16618	Hook Driving Pinion (spiral) with 200382C and 201220C, for 240242
240439	16621	Thread Lubricator Oil Pad Retainer, for 237780
240446	16620	Tension Bracket complete, Nos. 200978H, 201199F, 204271, 223438, 223703, 223704 223706, 237174, 240023, two each 200309E, 201572H and 244048
*240511	-----	Bed
241360	16620	Thread Controller Spring Stop
241518	16619	Take-up Lever, for 240051
241674	16617	Bobbin Case Oiling Felt, for 235100
241675	16617	" " " " Retainer, for 235100
241755	16621	Thread Lubricator Oil Pad (felt), for 237780
241758	16621	Thread Lubricator Oil Reservoir, for 237780
241759	16621	Thread Lubricator Oil Wick, for 237780
244048	16620	Tension Disc, for 240446
*248401	-----	Arm with 202135
248402	16603	Balance Wheel (disc) (belt groove 2-1/8 in. diam.) with 200328C and 200335C
248404	16618	Bobbin Case Opener, for 240242
248405	16618	" " " Lever Link, for 240242
248415	16616	Feed Driving Eccentric Adjusting Disc Spring


NUMERICAL LIST OF PARTS

29

No.	Plate	Name
248416	16616	Feed Driving Eccentric Adjusting Disc Spring Collar with two 200382C
248420	16622	Feed Driving Rock Shaft Bushing (left) (split)
248421	16622	Feed Driving Rock Shaft Bushing (right) (split)
248425	16616	Feed Regulating Stud Spring
248425	16616	Hook Driving Shaft Lock Stud Spring
248429	16618	" Ball Bearing Washer (steel), for 240242
248430	16618	Hook Ball Bearing Washer (felt), for 240242
248434	16618	Hook Saddle with 200009E and 201246C, for 240242
248435	16618	Hook Saddle Oil Pad (felt), for 240242
248436	16619	Needle Bar Rock Frame
248437	16619	" " " " Hinge Stud
248440	16603	Arm Shaft with 224392 and 350431E
248449	16604	Feed Indicating Disc with 200958C
248456	16603	Balance Wheel (disc) "V" belt groove (outside diam. of felt groove, 2.9 in.) with 201346C and 350107C
249365	16618	Hook Ball Bearing, for 240242
249440	16603	Arm Shaft Ball Bearing, for 240055
249440	16616	Hook Driving Shaft Ball Bearing, for 240061
255168	16616	Bed Oil Cup
		Nos. 259428 to 259430, for 259431
259428	16615	Bobbin Winder Brake (leather)
259429	16615	" " " Clamp
259430	16615	" " and Tension Bracket Base
259431	16615	Universal Bobbin Winder complete, Nos. 200056C, 200082D, 200113F, 200299H, 202478, 225368, 225381, 225444, 225453 to 225456, 225458, 225462, 228026, 259428 to 259430, two each 225459 and wood screws 3/4 in., No. 12, R.H.B.
259658	17900	Thread Unwinder Spool Stand with 200383C, for 225258
259660	16615	Bobbin Winder Frame Oil Well Washer, for 225453
263096	16603	Arm Shaft Bushing (front) with 223847
264714	16619	Needle Bar Connecting Stud with 200072C and 202277, for 240051
264718	16619	Needle Bar Connecting Link Oil Guard
265032	16616	Safety Clutch Hook Driving Shaft Position Collar with two 201254C, for 265104
		Nos. 265050 to 265052, for 265104
265050	16616	Safety Clutch Locking Lever Connecting Link
265051	16616	Safety Clutch Throw-in Latch Spring
265052	16616	" " " " Pin
265057	16616	" " " " for 265104
265088	16618	Bobbin Case Opener Lever Hinge Stud with 202277, for 240242


NUMERICAL LIST OF PARTS


No.	Plate	Name
		Nos. 265101 to 265103, for 265104
265101	16616	Safety Clutch Locking Lever
265102	16616	" " " " Spring
265103	16616	" " Pulley with 202253
265104	16616	Safety Clutch complete, Nos. 265032, 265050 to 265052, 265057, 265101 to 265103, 350433C and 350436C
265314	16616	Hook Driving Shaft Lock Ratchet with 200354C and 200362C
350101C	16616	Feed Driving Eccentric Friction Gib Adjusting Screw Set Screw, for 240232
350107C	16603	Balance Wheel Position Screw, for 248456
350197E	16622	Feed Lifting Cam Fork Screw, for 240224
350231C	16643	Knee Lifter Rock Lever Extension Set Screw, for 228359
350231C	16643	Knee Lifter Rock Lever Knee Plate Arm Set Screw, for 228359
350231C	16643	Knee Lifter Rock Lever Knee Plate Set Screw, for 228364
350393C	16622	Feed Bar Hinge Screw (driving), for 240233
350394E	16618	Hook Ball Bearing Adjusting Screw, for 240242
350405C	16617	Bobbin Case Oiling Felt Retainer Screw for 235100
350419H	16603	Balance Wheel Adjusting Screw
350431E	16603	Arm Shaft Oil Packing Stop Screw, for 248440
350432XC	16621	Thread Lubricator Screw, for 237777
350433C	16616	Safety Clutch Locking Lever Hinge Screw, for 265104
350436C	16616	Safety Clutch Locking Lever Spring Screw, for 265104

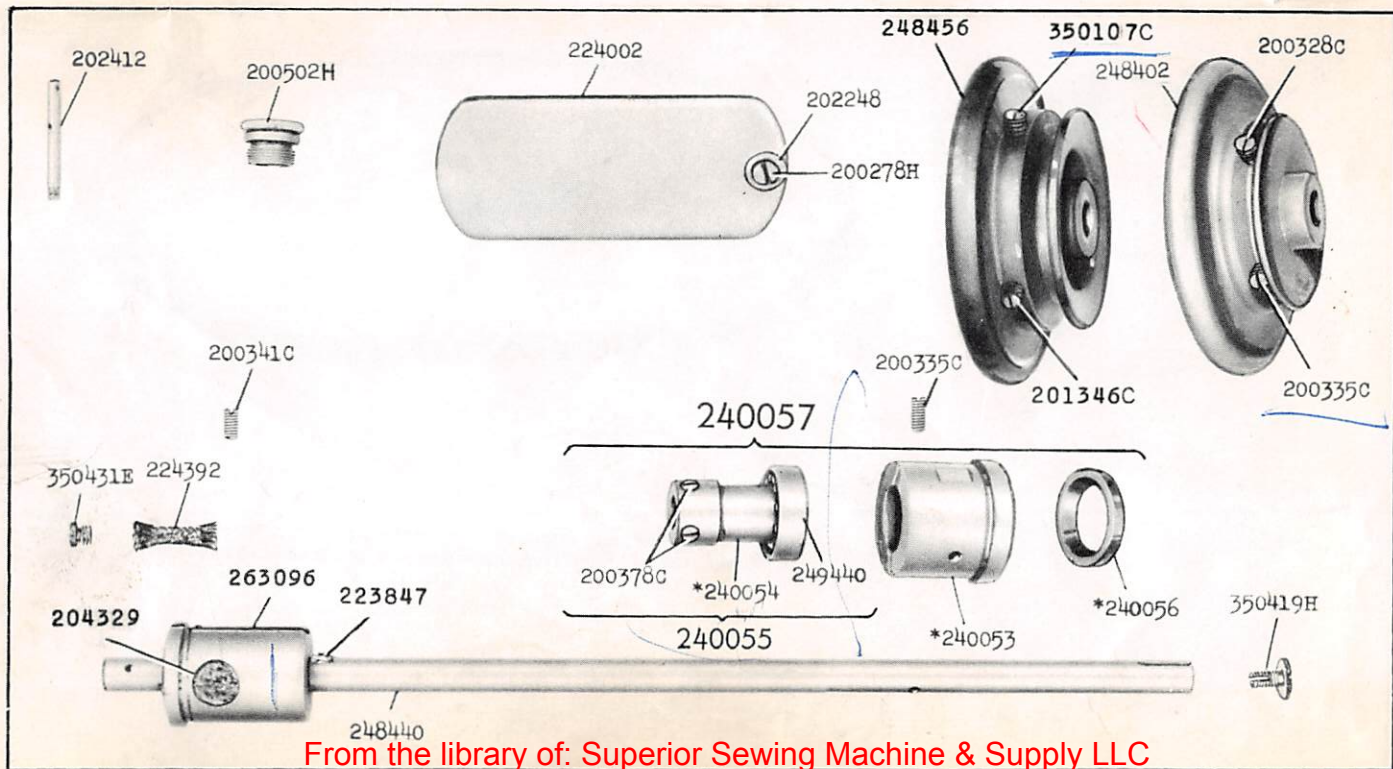

16603 - 3/8


16604 - 3/8

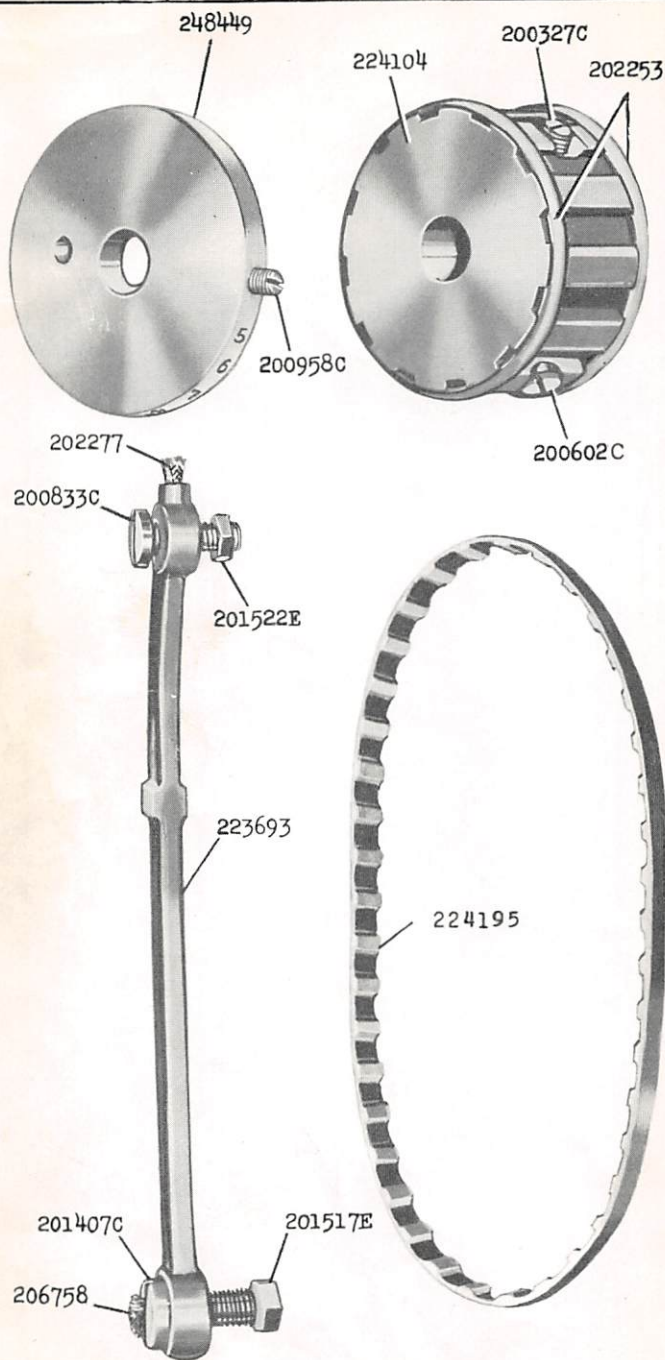

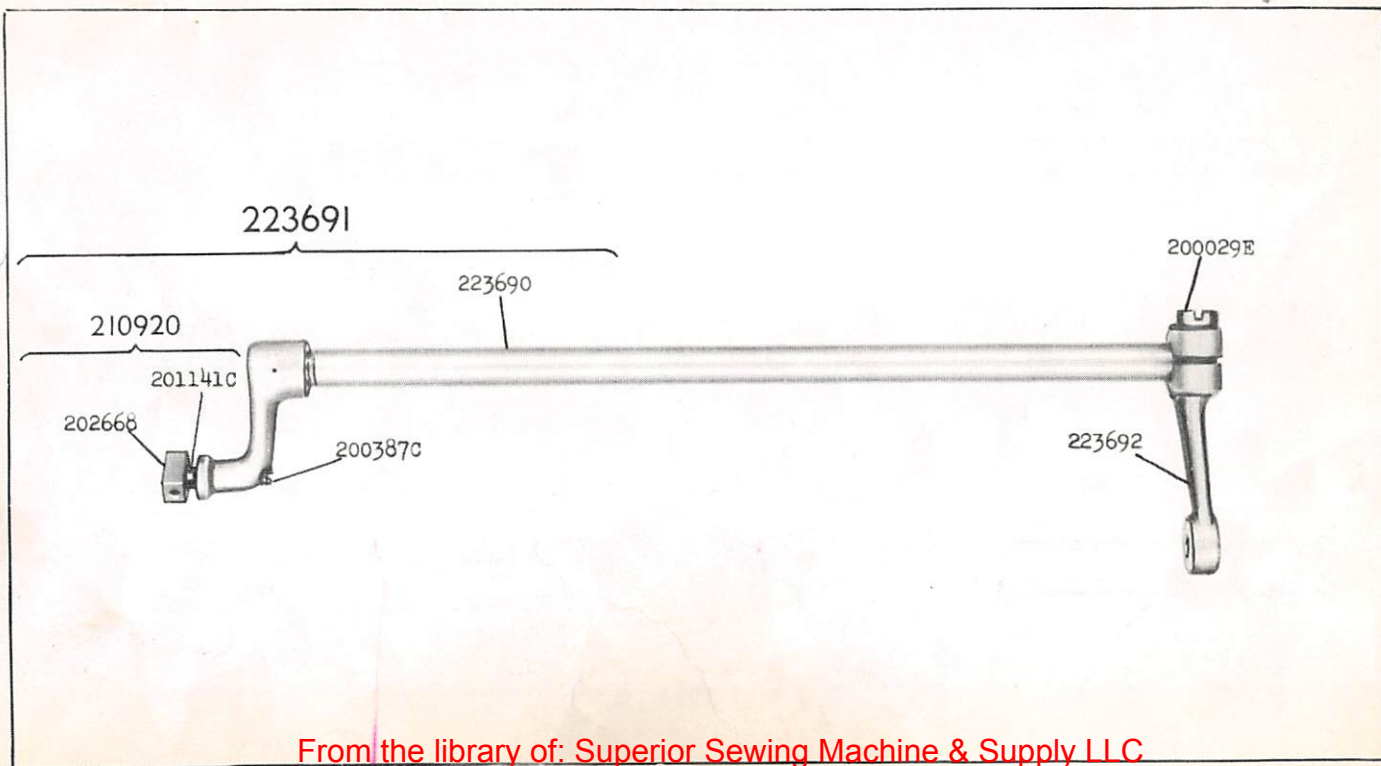



16609 - 1/2

16611 - 5/8

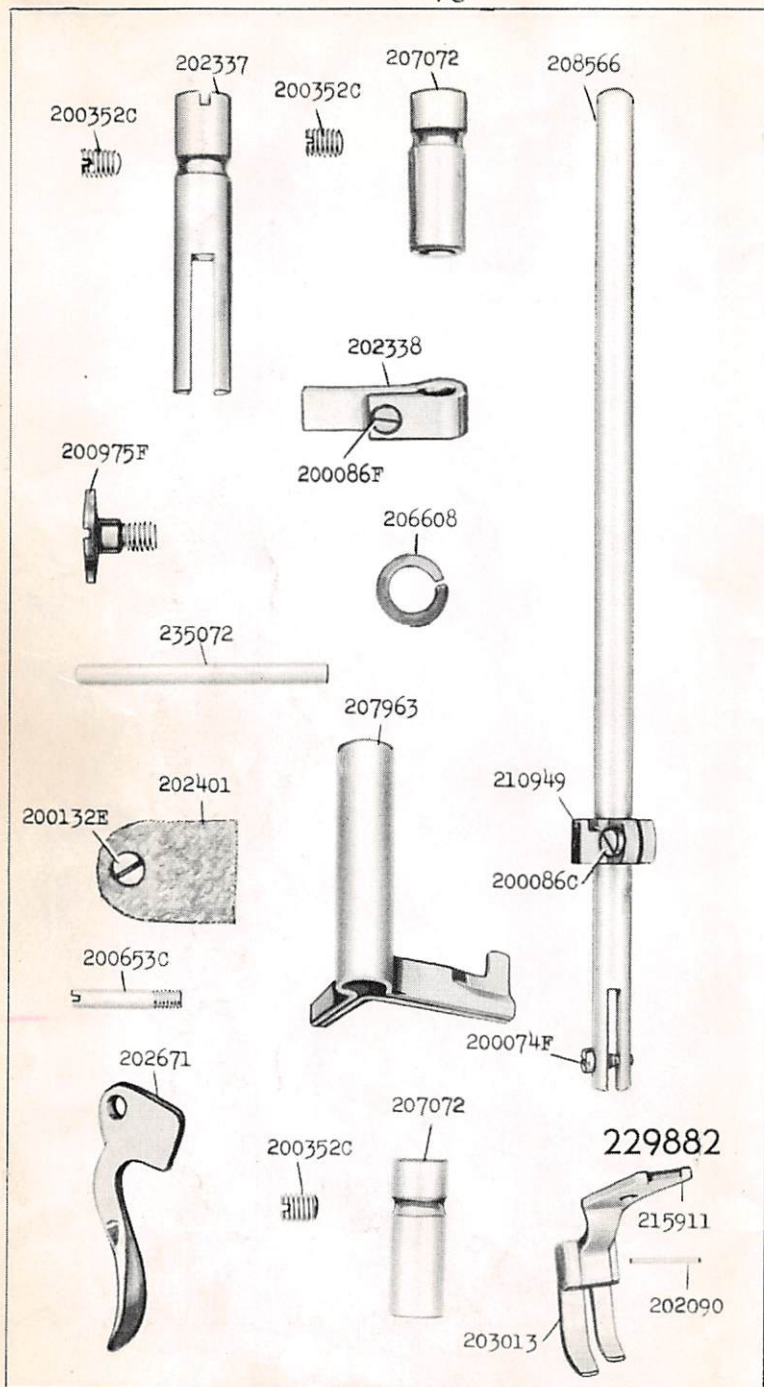





259431

 

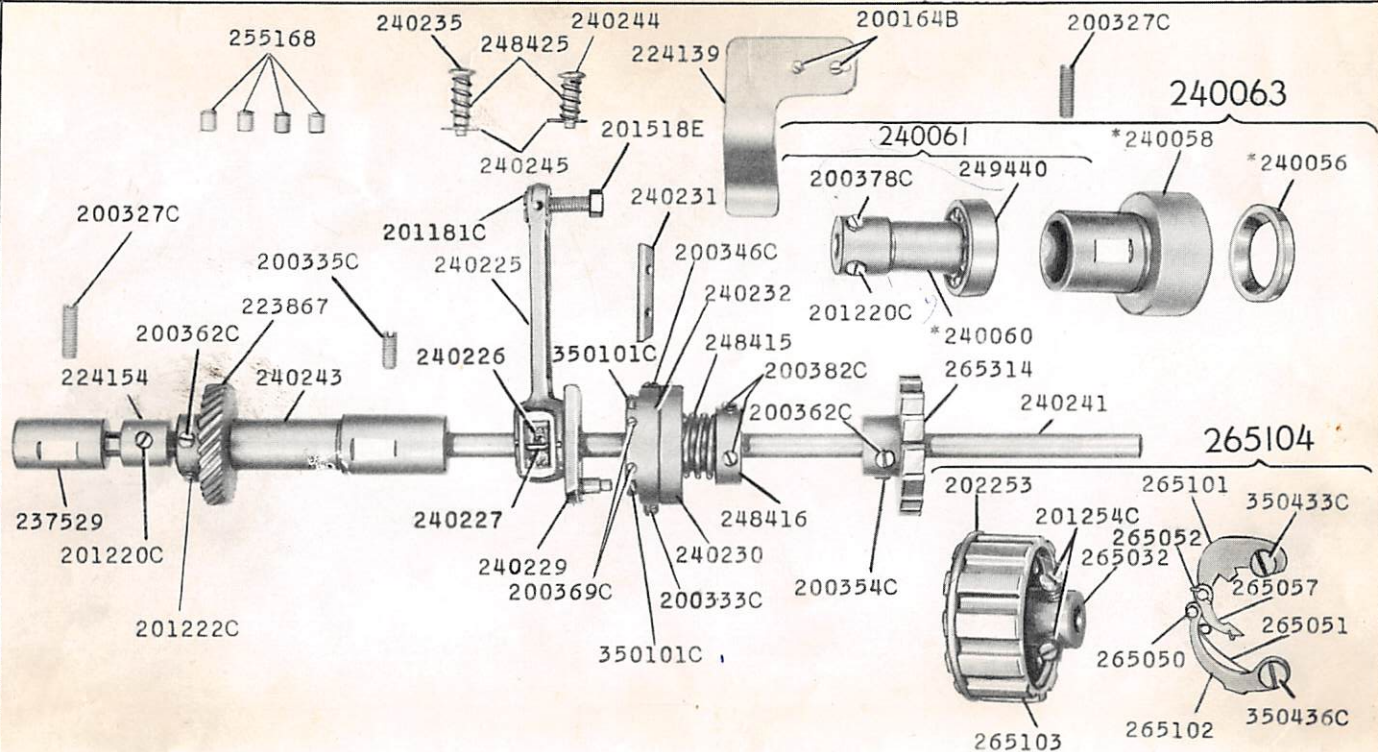

16616 3/8



240240

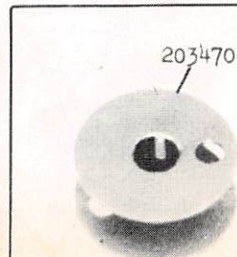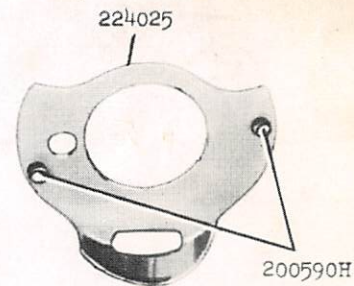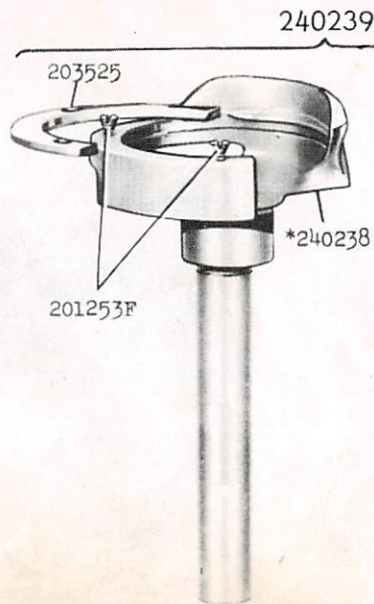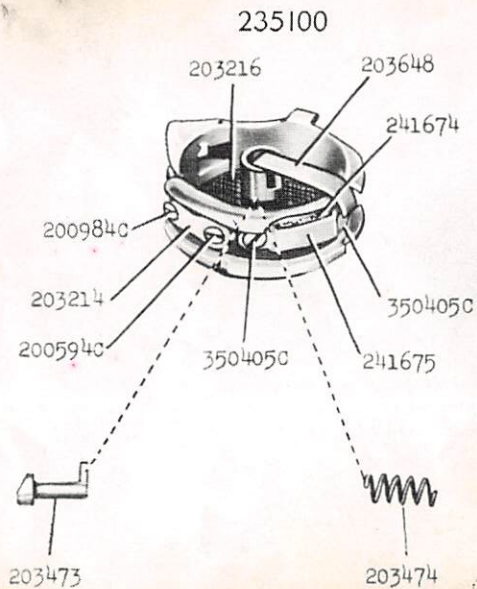



16617

From the library of: Superior Sewing Machine & Supply LLC

 
240242

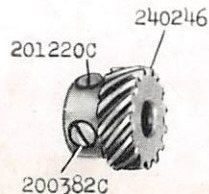

200382C

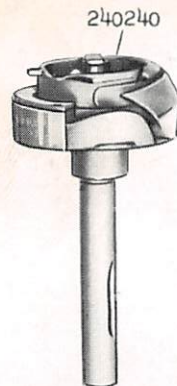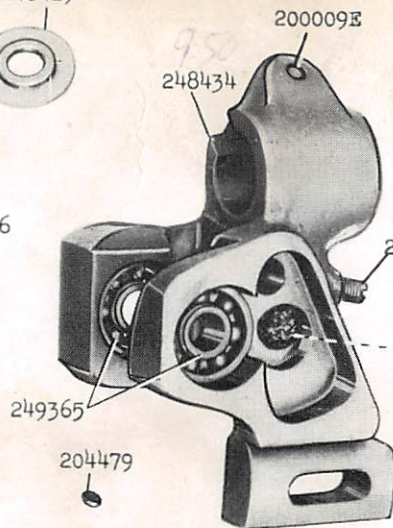

204479


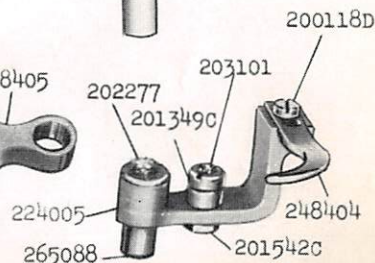









200006E

16618 - 5/8

From the library of: Superior Sewing Machine & Supply LLC

    16619 - 1/2

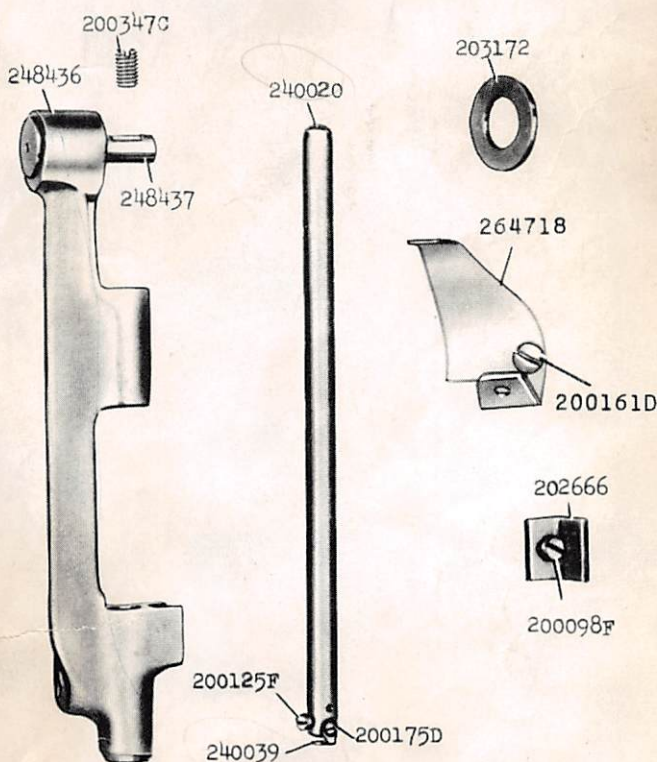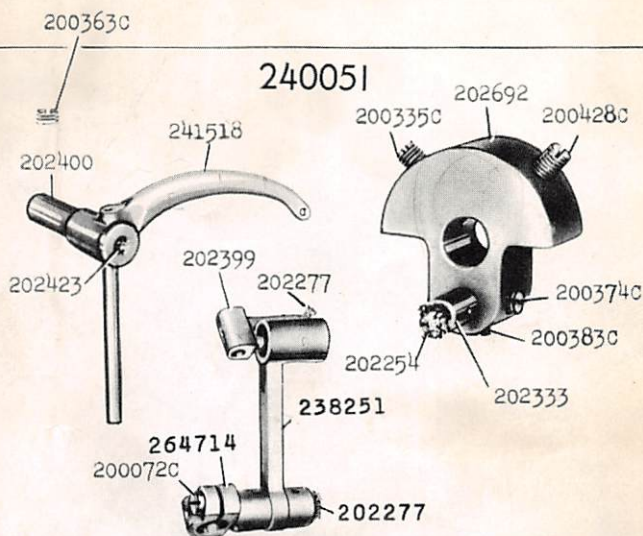

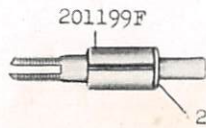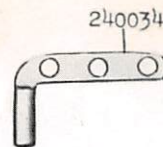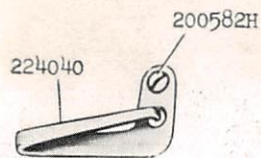

240446

200159F

240023

223703

200309E

236060


223706

241360


200061C

200132E





16620 - 2/3

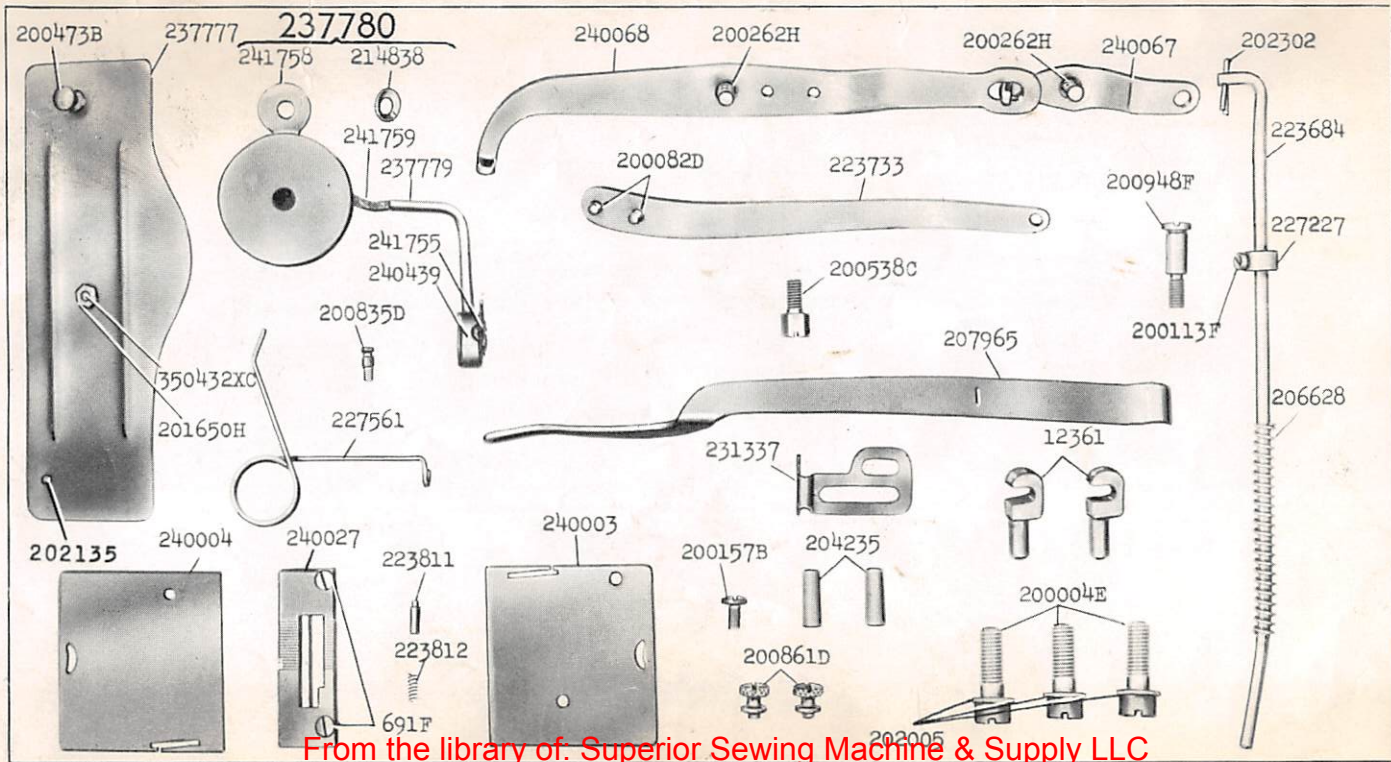

From the library of: Superior Sewing Machine & Supply LLC

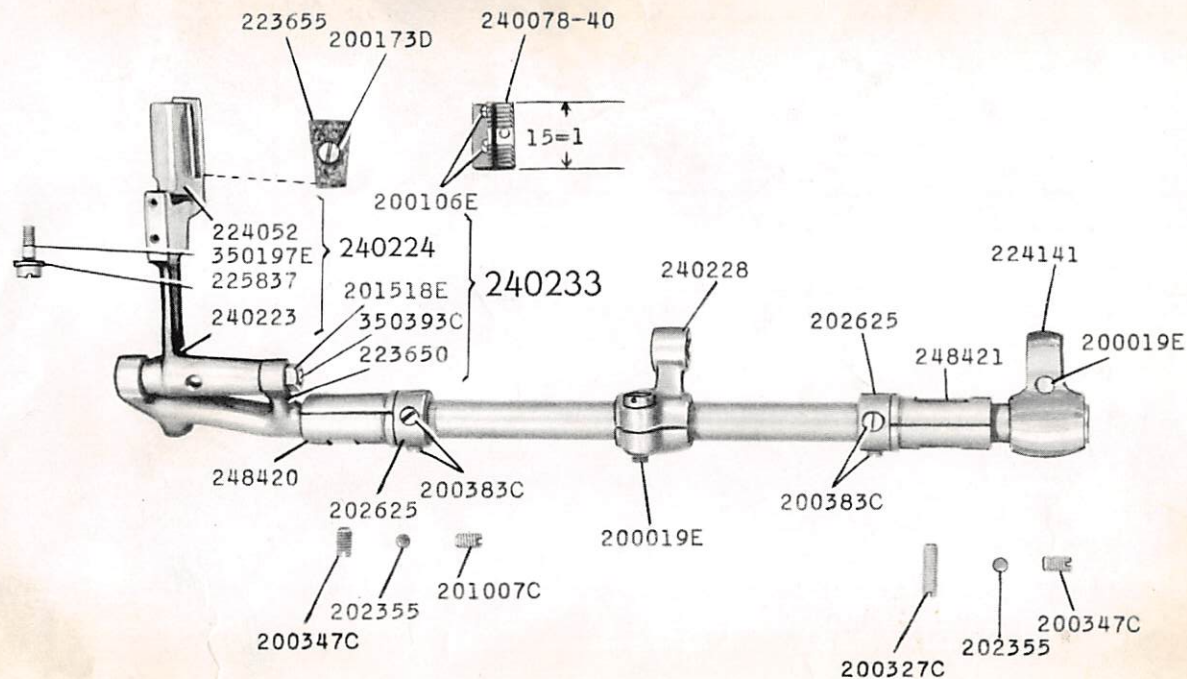


16622 3/8

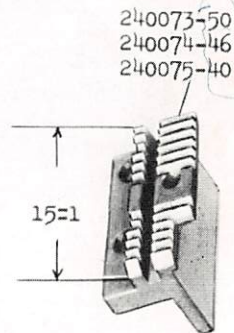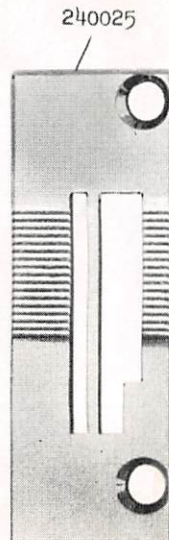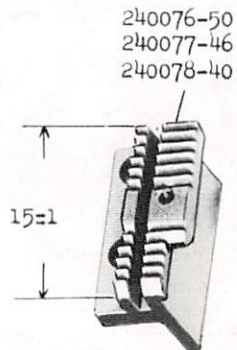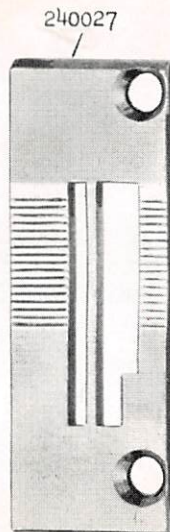

16623

16643 - 3/8

228368

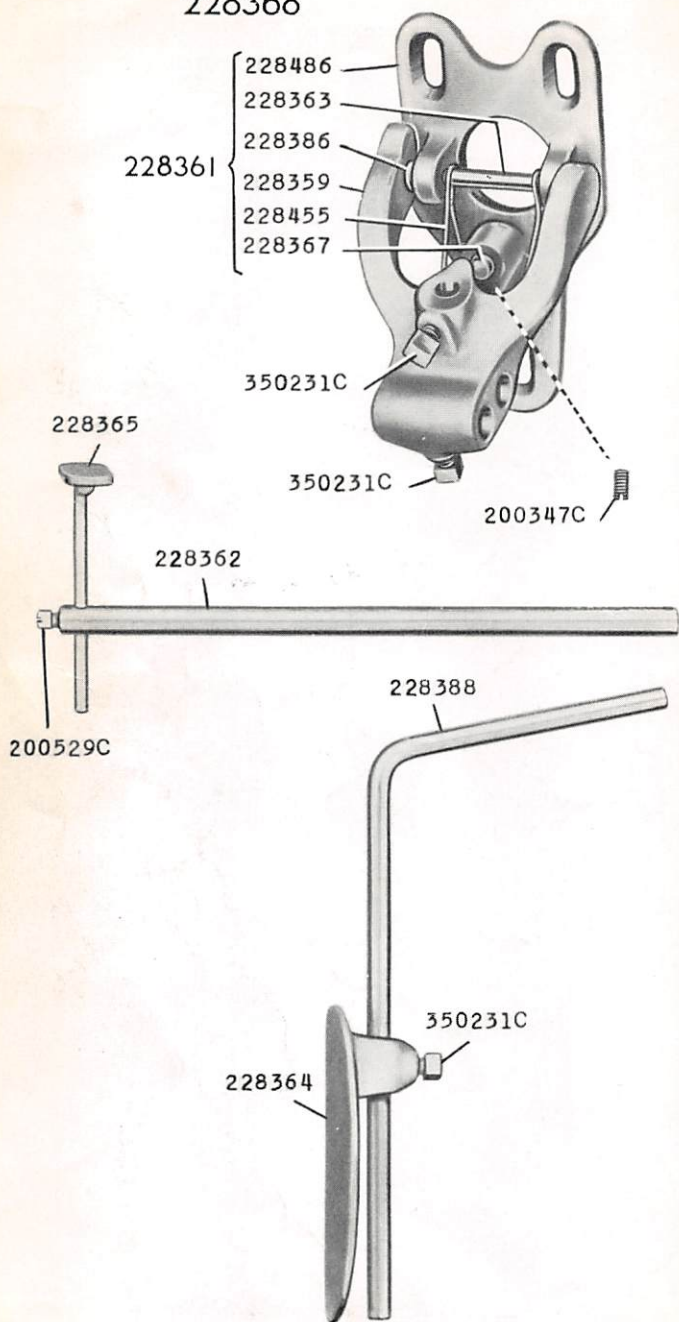



16644 - 1/3

224121



17620 - 1/3

227955

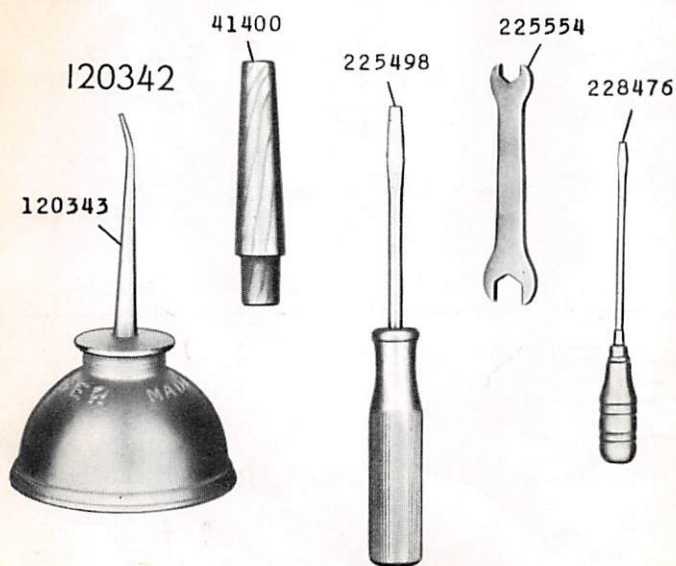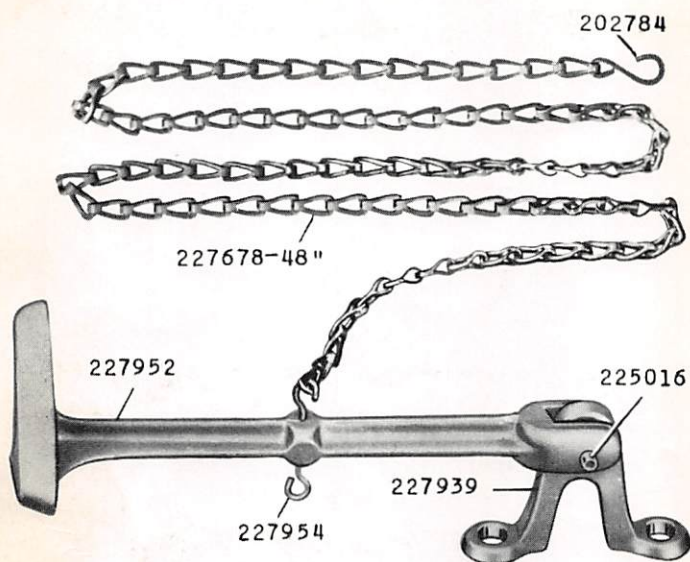

17900 - 1/6

