
## UPPER THREADING-SINGLE-NEEDLE

Machines 253-11 and 253-12

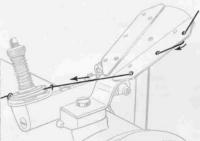

Turn machine pulley over toward operator until needle is at its highest point.

Pass needle thread from unwinder through threading points in the order shown in Figs. 7 to 10.


NOTE: Thread is passed from front to back through needle eye, as shown in Fig. 9.


Draw about two inches of thread through needle eye, with which to start sewing.

Fig. 7. Threading Needle Thread Tension Assembly



 Fig. 8. Threading Needle



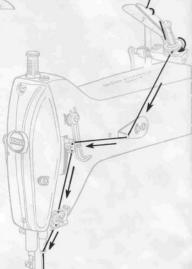

Fram. the library of: Superior Sewing Wathine & Supply LLC