


1. Attach needle to machine.
2. Thread the needle thread.
3. Thread the looper thread and gimp.
4. Adjust the needle thread tension
5. Adjust the looper thread tension.

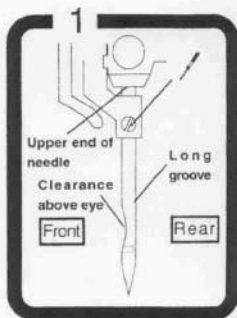

Switch off the machine. (See page 5)
Do not run machine without eye guard, finger
guard and needle bar guard !
Danger of injury!



.....Be sure to tighten screws firmly after making adjustments

2

