CN8 INSTRUCTIONS

To change the replaceable blade in a CN8

- 1. Stand the unit upright on a firm table.
- 2. While holding the lower half of the unit, rotate the Top Knob counter clockwise until the top half unscrews.
- 3. Remove the top half and spring inside revealing the threaded Knife Shaft.
- 4. Place the lower half with exposed Knife Shaft off the end of the table.
- 5. Firmly tap the top of the Knife Shaft so the blade goes completely through the bottom plate of the unit.
- 6. Unscrew the 2 screws holding the blade and replace.
- 7. Reassemble in the reverse order stated above.

From the library of: Superior Sewing Machine & Supply LLC