


VS-5000 PARTS

PARTS LIST & DIAGRAM

- | | |
|----------------------------------|----------------------------|
| 617. Terminal block | 725. Bent nozzle extension |
| 625. Cord U.S. type | 726. Swirl piece |
| 650. VARIA nozzle with basket | 727. Valve safety device |
| 712. Motor Housing | 728. Valve ball |
| 713. Armature spring | 729. Pump housing |
| 714. Coil 120V 60Hz | 730. Piston spring |
| 715. Oscilating armature | 731. Piston |
| 716. Screw 4 x 35 mm | 734. Handle |
| 717. Rubber buffer | 735. Rubber bolster |
| 718. Adjustment knob 100V / 120V | 809. Hook |
| 719. Hood | 824. Switch |
| 720. Screw 3, 9 x 16 mm | 825. Flexible wire |
| 723. Container | 828. Wing screw |
| 724. Suction tube | |

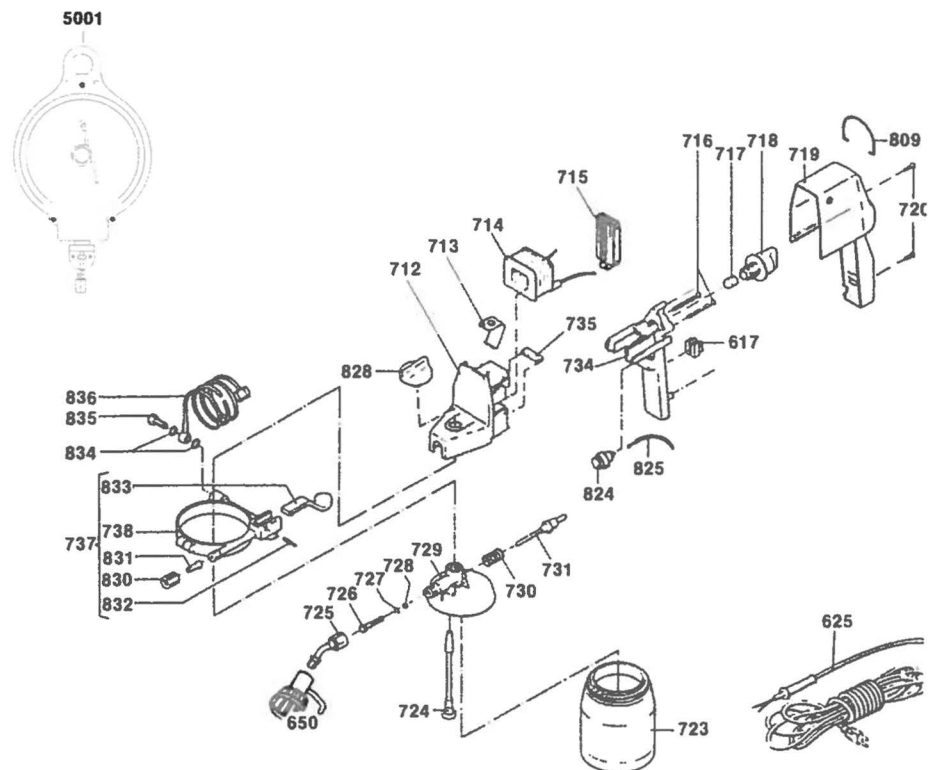

SG-5000 SPECIAL ACCESSORIES

- | | |
|--|----------------------|
| 737. Air nozzle/trigger piece | 833. Lever |
| 738. Air nozzle/trigger piece with valve | 834. Bushing |
| 739. Straight jet nozzle | 835. Hollow screw |
| 830. Sleeve nut | 836. Spiral air hose |
| 831. Swivel nozzle | 837. Fork spanner |
| 832. Set screw | |

ADJUSTABLE NOZZLE

- | | |
|-------------------|--------------------------------|
| 838. Set screw | 844. Screw body |
| 840. Nozzle head | 845. Nozzle spinner |
| 841. ring | 846. washer |
| 842. Brass washer | 847. Spanner (for dismantling) |
| 843. C-Ring | 848. Nozzle sleeve with Guard |

OPTIONAL ACCESSORIES

- | | |
|------------------------------|--------------------------|
| 2003. Suction Tube Extension | 5001. Albatross Gun Reel |
| 2004. Air Dryer Attachment | |

