



WBT-1

Portable Electric Scissors

INSTRUCTION MANUAL



- It is widely used for cutting cloth, leather, paper products, rubber, thin plastics, and other industries;
- Featured with chargeable and electric plugged, it can continuously work for eight hours, and it can be used in both households and industries;
- By adopting tungsten steel blade, it is in durable service, and the cutter head is easily to be changed;

Specifications

| | |
|--|------------------|
| Rated voltage of charger and transformer | 100~240V 50/60HZ |
| Battery voltage | 3.6V |
| Rated power | 35W |
| Battery capacity | 2200mAh |
| Rated no-load speed | 4500r/ minute |
| Charging time/using | 120/60minutes |
| Battery life time | 500times |
| Charging current | 1000milliampere |
| Machine Weight | 370g |
| General cutting capacity | 0~8mm |

Noise/ vibration value

| | |
|----------------------|---------|
| Sound pressure value | 70db(A) |
| Sound energy value | 80db(A) |

Random accessories/ quantity

| | |
|-----------------------------|---|
| Fuselage | 1 |
| Cutter head A (sharp blade) | 1 |
| Cutter head B (blunt blade) | 1 |
| Battery | 1 |
| Plug battery | 1 |
| Power adapter(transformer) | 1 |
| Charging stand | 1 |
| Instructions | 1 |
| Charger | 1 |

We suggest that you purchase corresponding spare parts from shops of electric power tools.

Warnings for WBT-1 Electric Scissors

1. Please read the instructions carefully before using it.
2. The power adapter and charger can only be connected with appropriate AC supply.
3. The things to be cut should not be too thick, to avoid reducing the service life of the scissors head, or even burning out the machine.
4. Check whether there is abnormal sound or spark for all the spare parts being operated before using.
5. WBT-1 Electric Scissors must be moisture protection, can only be used indoor, and avoid to be placed in rain or water.
6. Avoid short circuit of the power adapter and charging stand and charger, and also avoid short to the battery.
7. Only the original equipment manufacturing parts can be used, otherwise it may lead to fire disasters, electric shock, or personal injury.
8. If the flexible wire of power adapter is damaged, manufacturer, the

maintenance center or other qualified professional personnel should be specially agreed to change it, so as to avoid dangers.

9. Burning battery or throwing it to the fire is prohibited, because it may lead to explosion. Avoid charging the battery with leakage, and avoid charging the non-rechargeable batteries.
10. In over high temperature or over use circumstances, the battery leakage may appear. If the fluid that leaked from the battery stains your skin, you should first clean it with soap, and then rinse with lemon juice or vinegar. If it accidentally flows into the eyes, you should immediately rinse with clean water, and go to the hospital for examination and treatment.

 
Charging Description

Charging Method (as shown in Picture 1)

First, plug the DC plug of charger into the DC hole of charging stand, and connect to the power. Then, the charging stand is flickering with green light.

When plug the battery in the charging stand, the flickering green light will be red. During the process of charging, the red light of charging stand illuminates under normal conditions. When the red light is turning to green light, the battery is fully charged. Meanwhile, press the lock blocks on both sides of the battery and pull upward, then you can take out the battery. After taking out the battery, you should remember to take out the power adapter from the plug, to save energy.

Important: when it is being charged, it is normal that the surface of the charger and battery touches hot. This charging stand and charger should be utilized together. Avoid using other charger or charging stand. In the environment with higher temperature or after being used for a long time, the machine may be hot. At this moment, please do not charge immediately, it must be charged after cooling the battery. Otherwise, it may shorten the service life of the battery, or make the battery cannot be recharged for overheating of the battery.

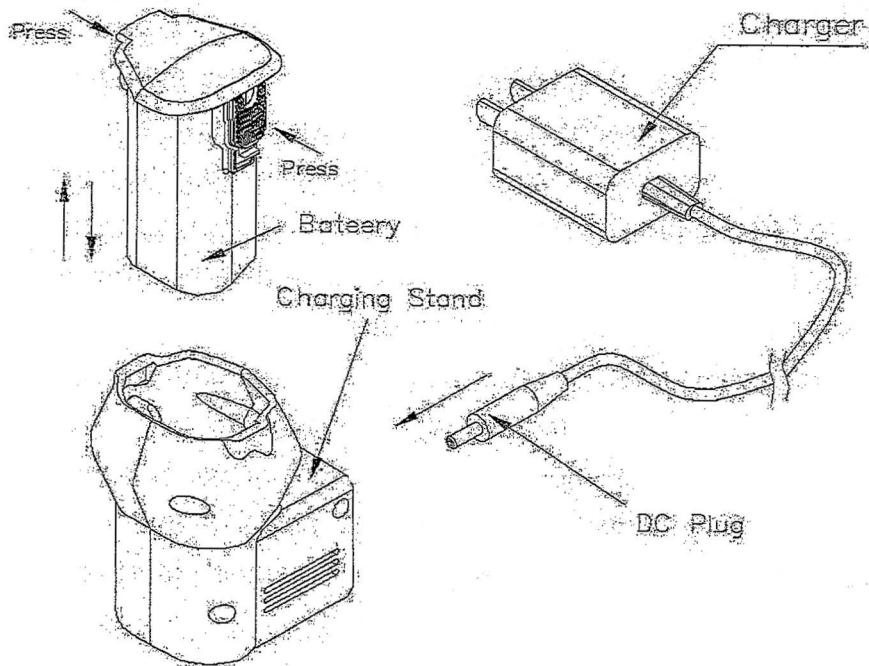

Picture 1

Instructions for Installing or Removing Cutter Head

1. Installation of Cutter Head: (as shown in Picture 2)

Take the fuselage by one hand, and hold the skid-resistant part of the cutter head with thumb and forefinger by the other hand (the hand should not touch the blade as far as possible). Point the cutter head to the fuselage, and then plug in (no matter the upper slide insert is right point to the neck of the oscillating object). When it is inserted to the half way, the stop piece of the cutter head may be lifted up by the cutter head. When it is fully inserted, you may hear the sound of “click”. It means the stop piece of the cutter head is reset and inserted in the neck of the cutter head with the help of spring. By this time, the connection is completed (see Picture 3).

Remarks: a. Please extract the battery or plug battery when installing or removing the cutter head!

 
b. Any height or angle of the insert for upper slide, or

oscillating objects can be accurately inserted in the neck.


c. Cutter head A is sharp, so it is suitable for cutting thick materials; cutter head B is blunt, so it is suitable for thin and soft materials.

2. Removal of Cutter Head:

Pull up the stop piece of the cutter head with one hand (direction as shown in the picture), and hold the skid-resistant part of the cutter head with thumb and forefinger with the other hand (the hand should not touch the cutter head as far as possible), and then pull the cutter head outward.

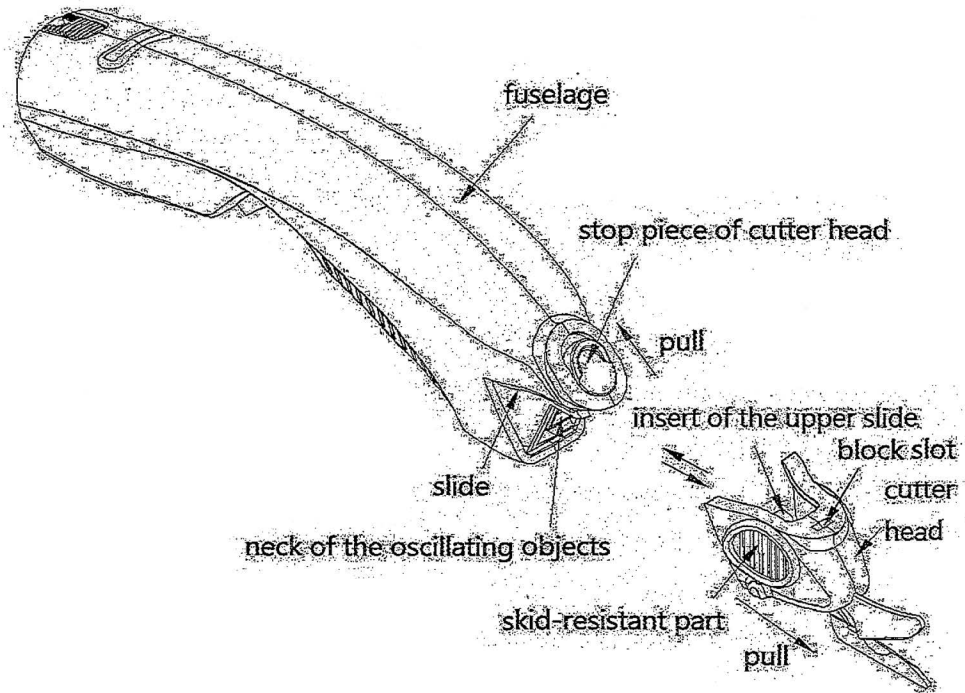

Picture 2

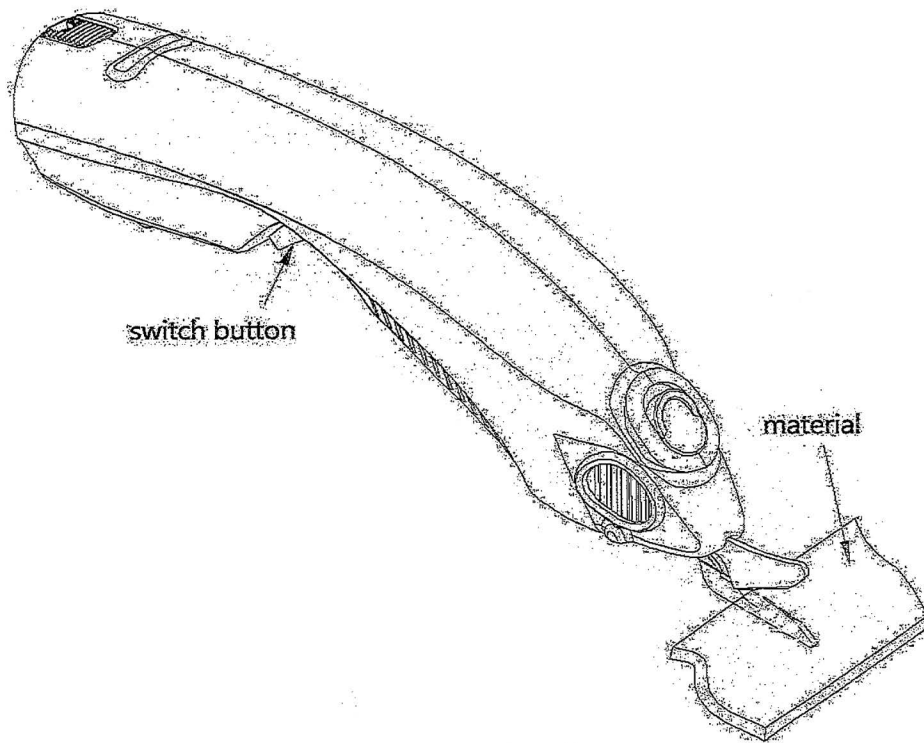 


Picture 3

Installation and Removal of Battery (as shown in Picture 4)


1. **Installation:** point the battery to the fuselage and insert it with force. If it is upside down, it may not be installed.
2. **Removal:** press the upper and lower lock blocks with thumb and forefinger respectively, hold downward with force, and then pull outside the battery.

Installation and Removal of Plug battery (as shown in Picture 5)

 1. **Installation:** point the plug battery to the fuselage and insert it. If it is upside down, it may not be inserted. And then, pull the DC plug into the adapter, Tighten the nut.
2. **Removal:** press the upper and lower lock blocks with thumb and forefinger respectively, hold downward with force, and then pull outside the plug battery.

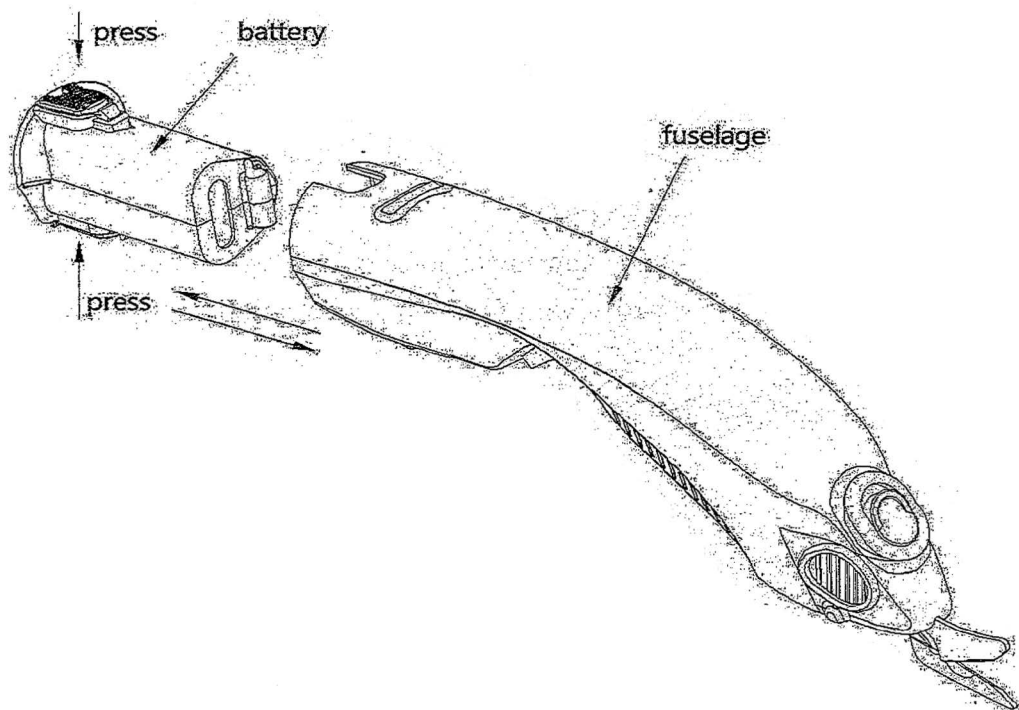

Picture 4

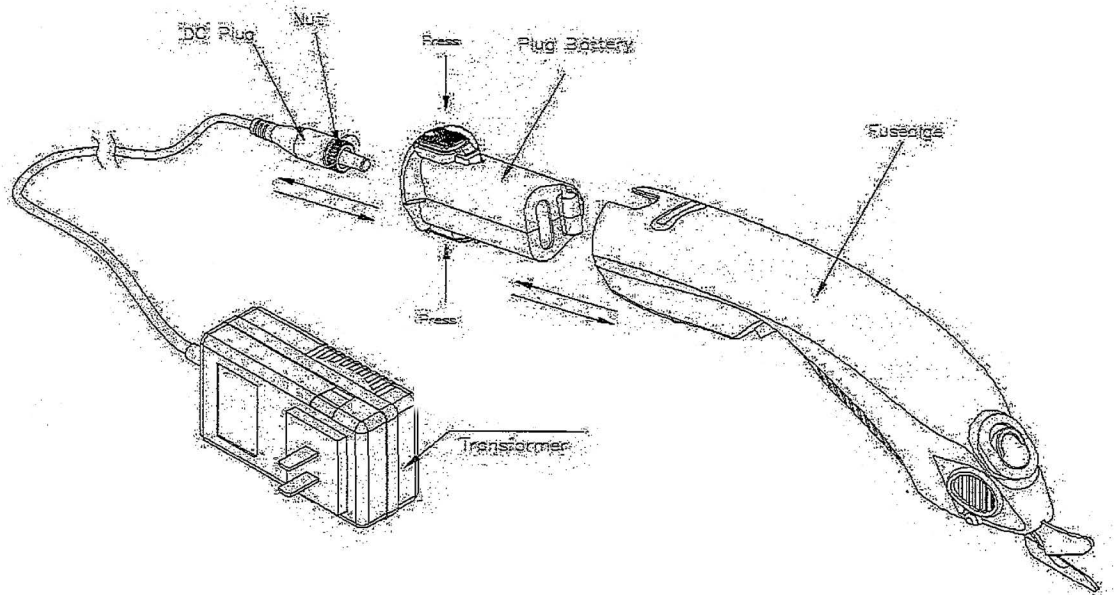 

Picture 5

Use Instructions

1. Press the switch button when it is electrified, and then point the scissors mouth to the place to be cut. Push the electric scissors and cut in straight line or curve in accordance with the lines in the picture. (Picture 3)
2. When the battery is full, if it is strenuous to cut, please stop operating, to avoid damaging the machine.
3. Please place the electric scissors far away from children, to avoid placing the finger into the cutter mouth.

Warranty Clauses

1. This company only repairs the product with defective quality for free, and the warranty period is for one year.
2. The cutter head and the battery is not within the warranty scope, because it belongs to consumable.
3. The following conditions may not be repaired for free:
 - a) any natural wear, or overloading work;
 - b) artificial damage such as misuse;
 - c) damage that caused by improper transportation after being sold;
 - d) damage that caused by not using the original equipment or spare parts;
 - e) any products of self alteration or overhauling