



Fig. 7

## TO THREAD THE NEEDLE

Lead the thread from the spool through the various guides, the tension, take-up lever and down through the eye of the needle straight from you toward the presser bar.

As the thread is passed around between the tension discs draw it up and to the right until it passes into the fork above the thread controller.

## FEED REGULATOR

The figures on the feed regulating spindle head at the right of the balance wheel, showing through the notch in the balance wheel, indicate the number of stitches to the inch which the machine should make. Turn the spindle head until the figures representing the desired number of stitches to the inch appear in the notch.