

Fig. 13. Upper Threading

Pass the thread from the unwinder through one of the holes (1) in the thread lubricator, and under the wire guide (2), (which may be raised by prying the end (X) out of its position and turning it to the right), then under the oil pad (3) and cut through one of the notches (4) in the thread lubricator, downward through the hole (5) up through the hole (6) and down through the hole (7) in the thread guide on the front of the machine, over from right to left between the tension discs (8), down,

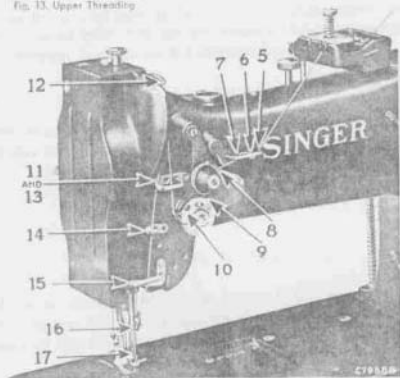


Fig. 14. Upper Threading

under from right to left around the thread controller (9), up into the fork (10) in the thread controller disc against the pressure of the wire controller spring, up through the thread guide (11), from right to left through the hole (12) in the thread take-up lever, down through the thread guides (13, 14 and 15), through the thread guide (16) at the bottom of the needle bar and from left to right through the eye of the needle (17).