

FILL  
MAIN  
RESERVOIR  
HERE

KEEP OIL  
LEVEL  
BETWEEN  
LINES

CLASSES  
51200  
51300

CAUTION!

FILL ALL OIL RESERVOIRS  
BEFORE STARTING.  
MACHINE HAS BEEN DRAINED  
BEFORE SHIPPING.

CLASS 51500

CLASS 51900

CLASSES 51400 51700