



Unterklassen-Ausstattung
Subclass parts
Composition des sous-classes
Composición de las subclases

Unterklassen-Ausstattung

Subclass organization


Equipement des sous-classes

Dotación de las subclases


Unterklasse Subclass Sous-classe Subclase	Ausführung Model Version	Modellname Needle bar Barra de aguja Barra de aguja	Stoffschieber Feed dog Transportador inferior	Sickplatte Needle plate Placa de aguja	Sickplatte, Unterseite Needle plate base Support de plaque à aiguille Soporte de la placa de aguja	Nähfuß Presser foot Pie presseur	Stoffschieber Vibrating presser Transportador superior	Apparat Accessories Aparato	Absteckplatte Edge guide Placa de recuadro Placa cubrepa	Hebel Position finger Doigt d'arrêt Dedo de retén	Fremdauge Cylinder-head cap Cabeza del cilindro Cabeza del cilindro	Unfal Edge guide Guía-borde Guía recta	Träger Bracket Support Soporte
-2/27	B; BN	91-712 488-02	91-059 229-04	91-158 206-04	91-048 303-35	91-049 534-04							
-2/27-900/52	BN	91-712 488-02	91-059 229-04	91-158 206-04	91-014 048-25	91-049 534-04							
-6/01	B; BN	91-710 650-02	91-046 008-04	91-046 009-04	91-014 636-35	91-043 889-04							
-6/01-900/52	BN	91-710 650-02	91-046 008-04	91-046 009-04	91-014 047-25	91-043 889-04							
-17/01	B; BN	91-710 650-02	91-046 497-04	91-046 498-05	91-014 636-35	91-040 432-04 12							
-17/02	B	91-712 488-02	91-046 537-04	91-046 538-05	91-014 636-35	91-049 501-05							
-17/03	B	91-710 650-02	91-047 174-04	91-048 491-05	91-014 636-35	91-040 432-04 12							
-17/03	BN	91-710 650-02	91-047 174-04	91-493 375-05	91-014 636-35	91-040 432-04 12							
-17/04	B	91-710 650-02	91-047 299-04	91-048 751-05	91-014 636-35	91-049 603-05							
-17/05	B; BN	91-710 650-02	91-046 051-04	91-048 052-05	91-014 636-35	91-044 227-04 12							
-17/06	B	91-710 650-02	91-047 145-04	91-048 378-05	91-014 636-35	91-049 584-04							
-17/07	B	91-710 650-02	91-047 145-04	91-048 378-05	91-014 636-35	91-049 584-04							
-39/21	B; BN	91-710 650-02	91-048 051-04	91-048 052-05	91-014 636-35	91-044 227-04 12							
-39/23	B	91-710 650-02	91-047 183-04	91-048 545-01	91-014 715-35	91-482 073-04							
-40/03	B	91-710 650-02	91-046 008-04	91-046 997-05	91-014 636-35	91-044 102-04 5							
-40/07	B	91-710 650-02	91-048 008-04	91-046 997-05	91-014 636-35	91-044 102-04 5							
-40/64	BN 2,5; B	91-710 650-02	91-059 232-04	91-158 208-04	91-492 783-35	91-049 786-04							
-155/01	B; BN	91-710 650-02	91-046 497-04	91-046 498-05	91-014 636-35	91-040 432-04 12							

- 14) = Ausführung angeben
 = Indicate model
 = Préciser la version
 = Indicar el tipo de máquina
- 5) = Nähmuster einbinden
 = Submit sewing sample
 = Joindre échantillons de couture
 = Enviar muestra de costura
- 12) = Absteckbreite angeben
 = Indicate stitching margin
 = Indiquer le relarg de couture
 = Indicar el margen de costura


Unterklassen-Übersicht/Table of subclasses/Table des sous-classes/Tabla de subclases

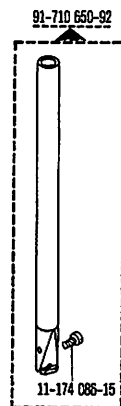


-6/01
 -6/01-900/52
 -17/01
 -17/03
 -17/04
 -17/05
 -17/06
 -17/07
 -39/21
 -39/23
 -40/03
 -40/07
 -40/64
 -155/01

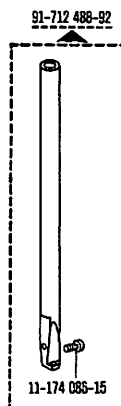

-2/27
 -2/27-900/52
 -17/02




-6/01
 -6/01-900/52
 -40/03
 -40/07




-17/05
 -39/21

2


Unterklassen-Übersicht/Table of subclasses/Table des sous-classes/Tabla de subclases

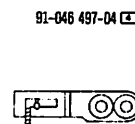


-17/01
 -155/01

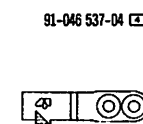


-17/02

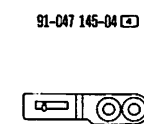


-17/06
 -17/07

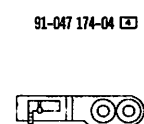


-17/03

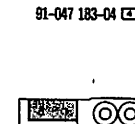


-39/23

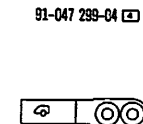

-17/04

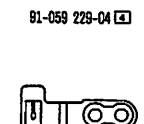

-2/27
 -2/27-900/52

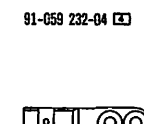

-40/64 N2,5

3


Unterklas

Unterklass Subclass Sous-classe Subclase	Hilfsmittel Bracket Supporte angulaire	Bandrollen Tape disc Pateau dérouleur Patio Portarollos	Bandführung Tape guide Guide-ribbon Guías cintas	Bandnachzieher Tape puller Distributeur de ruban Distribuidor de cinta	Messer Knife Couteau Cuchilla	Schub- und Schneiderrichtung Push and cut Direction Dispositif avance et de coupe Dispositivo de avance y de corte	Fingerschutz Finger guard Protecte-doigts Sujetadores
-2/27	91-025 559-25						91-055 203
-2/27-900/52	91-025 559-25						91-055 203
-6/01							91-055 203
-6/01-900/52							91-055 203
-17/01		91-043 943-91					91-055 203
-17/02		91-043 943-91					91-055 203
-17/03		91-043 943-91	91-053 445-93	91-053 450-25			91-055 203
-17/03		91-043 943-91	91-053 445-93	91-053 450-25			91-055 203
-17/04		91-043 943-91			91-050 878-05	91-050 880-91	91-055 203
-17/05		91-043 943-91					91-055 203
-17/06		91-043 943-91	91-053 354-24 (5)				91-055 203
-17/07		91-043 943-91					91-055 203
-39/21		91-043 943-91					91-055 203
-39/23		91-043 943-91					91-055 203
-40/03							91-055 203
-40/07							91-055 203
-40/64			91-042 036-91				91-055 203
-155/01		91-043 943-91					91-055 203

(4) = Ausführung angibt
= Indicate model
= Préciser la version
= Indíquese el tipo









Unterkl

Unterklassen-Übersicht/Table of subclasses/Table des sous-classes/Tabla de subclas












91-045 997-05  -40/03 -40/07	91-046 009-04 (4)  -6/01 -6/01-900/52	91-046 052-05  -17/05 -39/21	91-046 498-05  -
91-046 538-05  -17/02	91-048 378-05  -17/06 -17/07	91-048 491-05  -17/03	91-048 545-01  -

4

Unterklassen-Übersicht/Table of subclasses/Table des sous-classes/Tabla de subclasses


91-048 751-05  -17/04	91-158 206-04  -2/27 -2/27-900/52	91-158 209-04 4  -40/64 N2,5	91-493 375-05  -17/03
91-014 047-25  -6/01-900/52	91-014 048-25  -2/27-900/52	91-014 636-35 	-6/01 -17/06 -17/01 -17/07 -17/02 -39/21 -17/03 -40/03 -17/04 -40/07 -17/05 -155/01
91-014 715-35  -39/23	91-048 303-35  -2/27	91-492 783-35  -40/64 N2,5	
91-040 432-04 4 12  -17/01 -17/03 -155/01	91-043 989-04 4  -6/01 -6/01-900/52	91-044 102-04 4 5  -40/03 -40/07	91-044 227-04 4 12  -17/05 -39/21
91-049 501-05  -17/02	91-049 534-04 4  -2/27 -2/27-900/52	91-049 584-04 4  -17/06 -17/07	91-049 603-05  -17/04
91-049 786-04 4  -40/64 N2,5	91-482 073-04 4  -39/23		91-040 629-93 4 12  -17/01 -17/03 -155/01

Unterklassen-Übersicht/Table of subclasses/Table des sous-classes/Tabla de subclasses

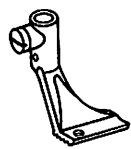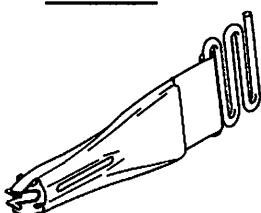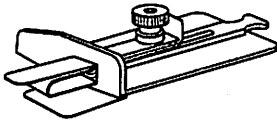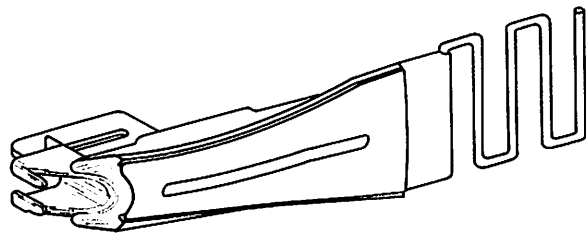91-042 819-93    -17/05 -39/21	91-043 847-93   -6/01 -6/01-800/52	91-044 101-93    -40/03 -40/07	91-049 001-93   -17/02 -17/04
91-049 042-93   -2/27 -2/27-900/52	91-049 063-93   -39/23	91-049 075-93   -17/06 -17/07	91-049 327-93   -40/64 N2,5
	91-040 244-23   -17/05	91-040 414-23   -155/01	91-040 415-23   -39/21
91-040 452-23   -17/01 -17/02	91-044 015-23   -40/03	91-050 886-13   -17/04	91-053 444-23   -17/03
91-053 572-23   -39/23			91-053 628-23   -17/06 -17/07


Unterklassen-Übersicht/Table of subclasses/Table des sous-classes/Tabla de subclasses

91-056 616-23 

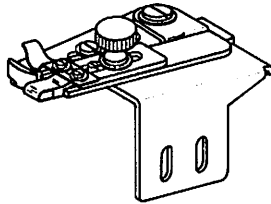


-40/64

91-490 515-93 

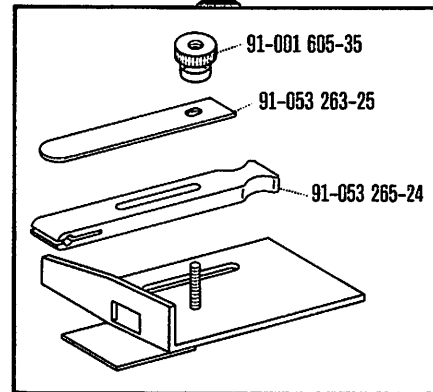


-40/07

91-014 643-31

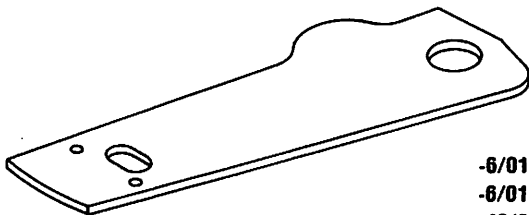


-6/01
-6/01-900/52
-40/64

91-040 476-35

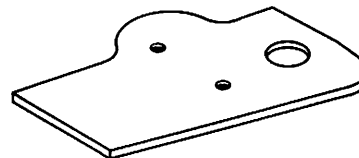


-2/27
-2/27-900/52
-40/03
-40/07

91-040 895-91

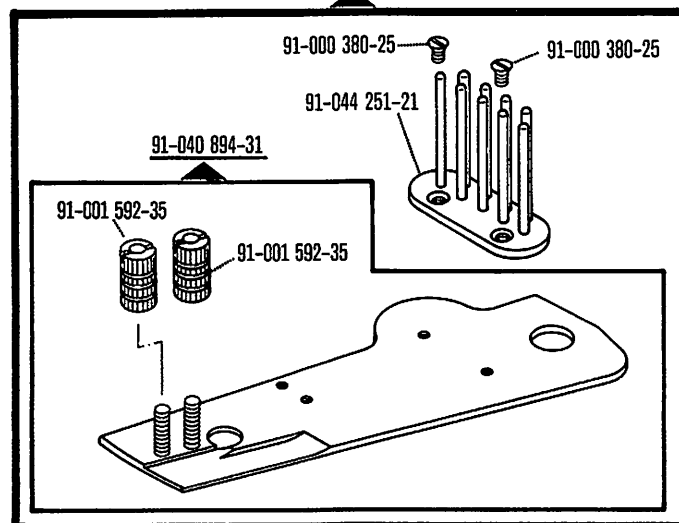

-17/01
-17/02
-17/03
-17/05
-17/06
-17/07
-39/21
-155/01

91-053 573-35

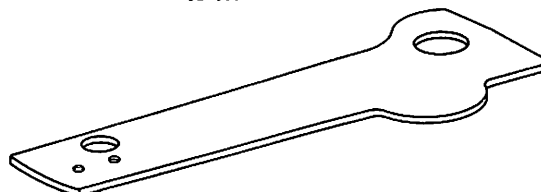

-39/23


Unterklassen-Übersicht/Table of subclasses/Table des sous-classes/Tabla de subclasses

91-014 637-34



-6/01 -17/07
-17/01 -39/21
-17/02 -39/23
-17/03 -40/03
-17/04 -40/07
-17/05 -40/64
-17/06 -155/01

91-014 844-35

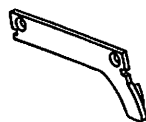


-2/27-900/52
-8/01-900/52

91-048 304-35




-2/27

91-014 638-35

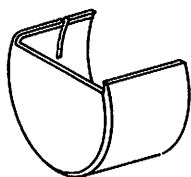


-6/01 -17/06
-17/01 -17/07
-17/02 -39/21
-17/03 -39/23
-17/04 -40/64
-17/05 -155/01

91-014 639-35

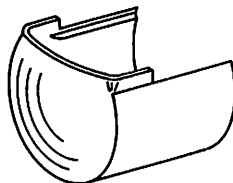


-40/03
-40/07

91-014 704-35

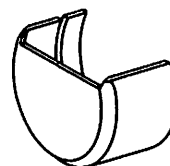


-2/27

91-014 891-35

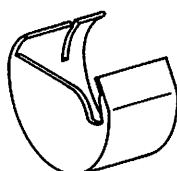


-2/27-900/52

91-014 892-35

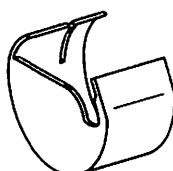

-6/01-900/52

91-040 477-25

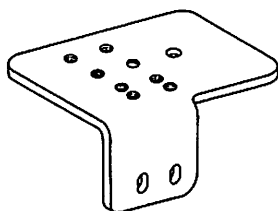

-2/27
-2/27-900/52


91-000 262-25



91-025 559-25


-2/27
-2/27-900/52

91-044 043-91

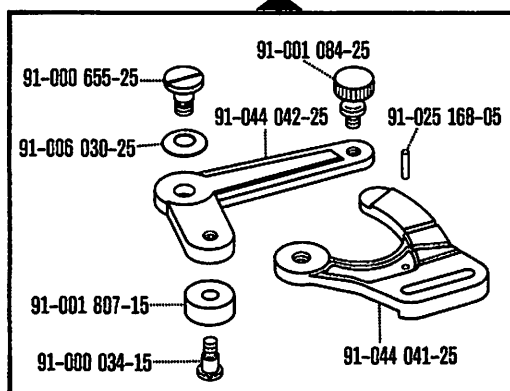

-2/27
-2/27-900/52

91-042 036-91

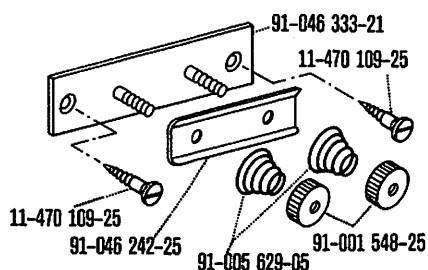


-40/64

91-053 354-24




-17/06

Unterklassen-Übersicht/Table of subclasses/Table des sous-classes/Tabla de subclases

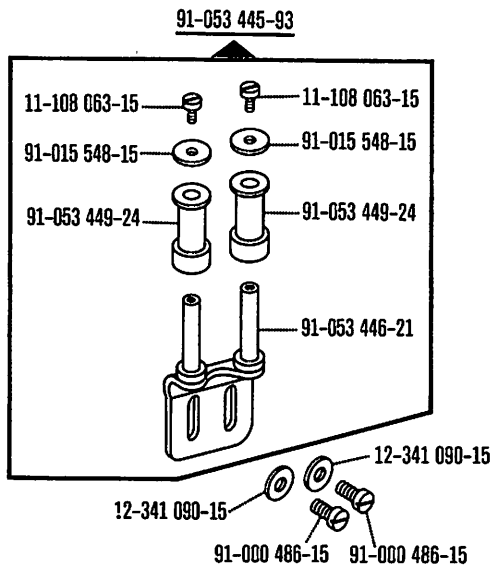

-17/03

91-053 450-25

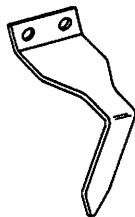


-17/03

91-050 878-05




-17/04

91-043 943-91

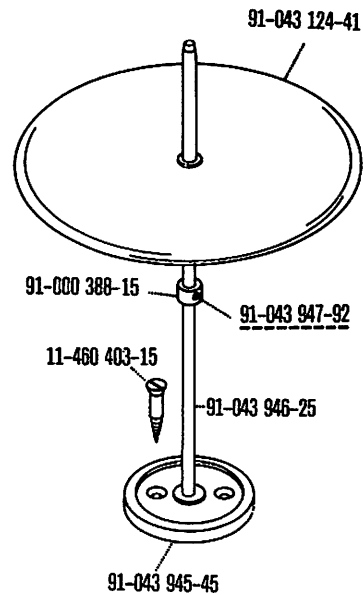


-17/01
-17/02
-17/03
-17/04
-17/05
-17/06
-17/07
-39/21
-39/23
-155/01

91-055 203-91

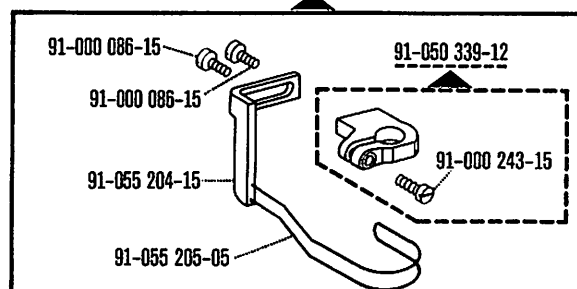

-17/05
-2/27 -17/06
-2/27-900/52 -17/07
-6/01 -39/21
-6/01-900/52 -39/23
-17/01 -40/03
-17/02 -40/07
-17/03 -40/64
-17/04 -155/01

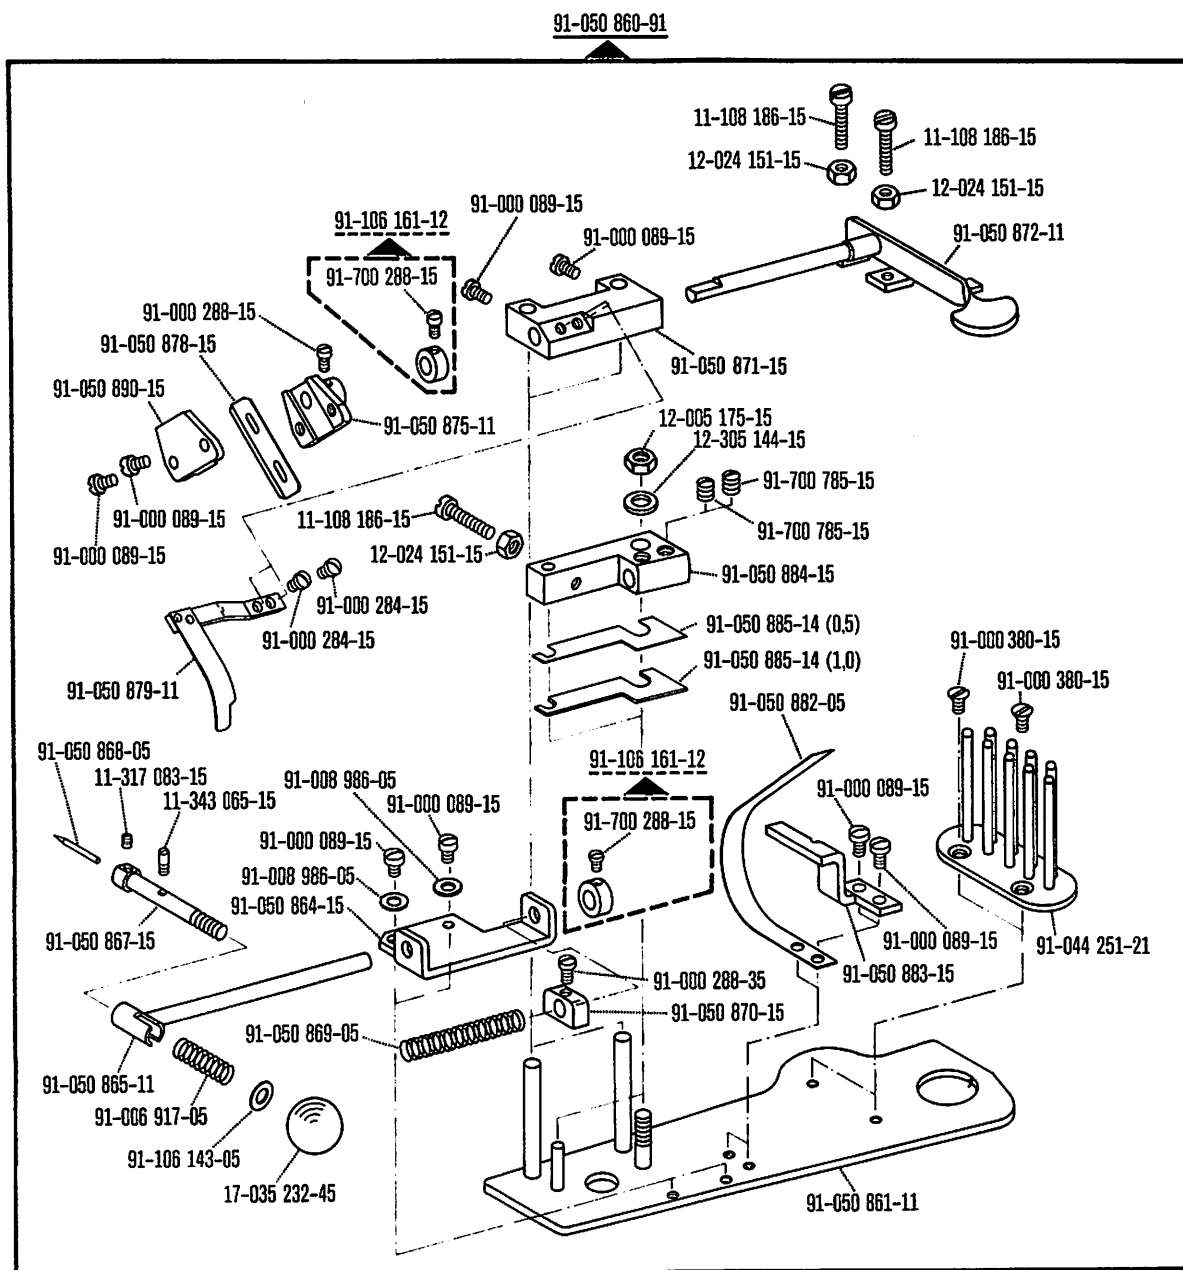

-17/04

Pfaff, D 6750 Kaiserslautern, Postfach 3020/3040, Telex: 45753