

UNITY SEWING SUPPLY CO.
824 E. 8th St.

Los Angeles, CA 90021



Spare Parts Catalogue

PFAFF 469

PFAFF 467/469

G. M. PFAFF AG KAISERSLAUTERN BRANCH

Foreword

This parts catalogue contains the front parts, arm parts, bedplate parts and accessory parts of the Pfaff 469-6 as well as the supplementary parts of the Pfaff 467/469-6.

All component parts are grouped together as they are arranged in the machine.

All underlined part numbers signify assemblies which are made up of component parts.

It is absolutely necessary that the ten-digit part number be stated on all orders for spare parts. The central portion of this number, as a rule, is identical with the old part number. In exceptional cases, the old part number is listed in parenthesis below the new ten-digit part number.


Assemblies incorporating extremely tight-fitting component parts will be exchanged for replacement assemblies. They are marked "Replacement Assembly" in the list and their components are provided with a foot note. For particulars regarding the exchange of these assemblies, please refer to Circulars Nos. 41/49 and 41/61.

Part number changes will be published on correction sheets.

Subject to alterations in design.

October 1965

G. M. PFAFF AG
Kaiserslautern Branch

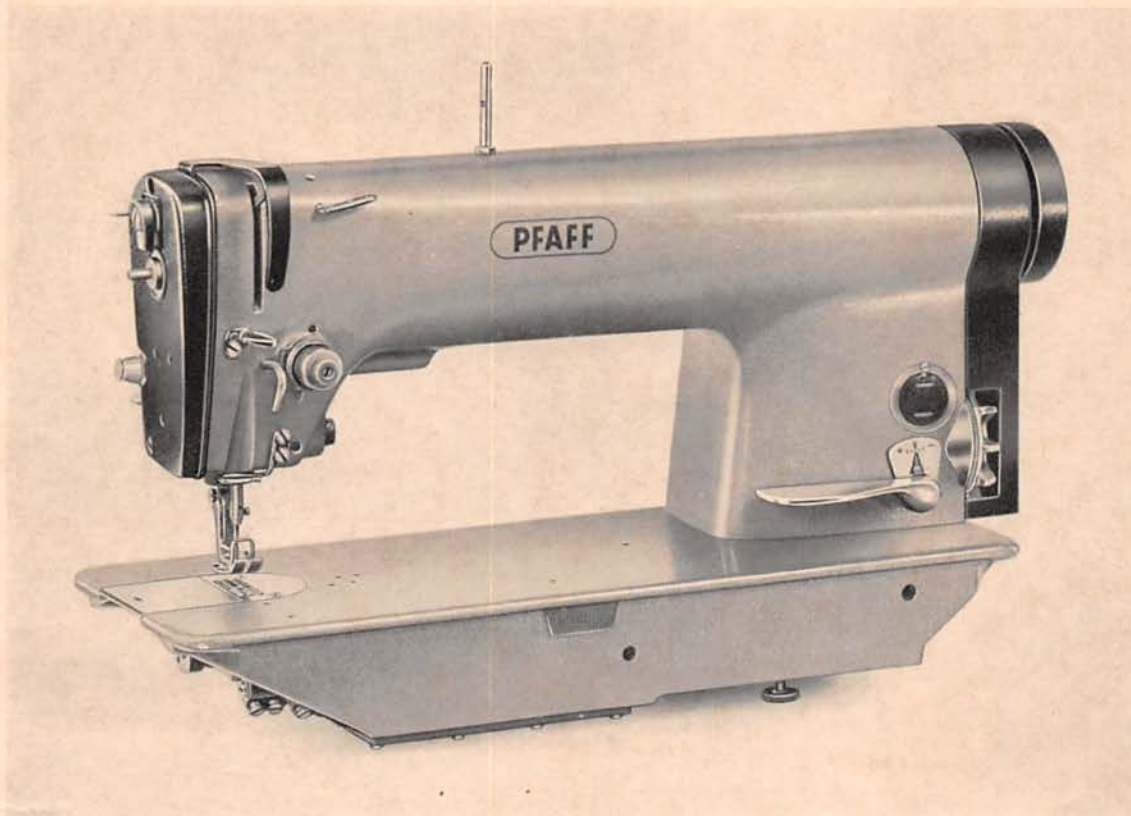

Lockstitch High-Speed Sewing Machines


PFAFF 469-6

Lockstitch high-speed sewing machine organized with differential feed, double-revolution horizontal rotary hook (moving counter-clockwise), positive mechanical opener, link take-up, face cover bobbin winder, feed regulator and forward-reverse feed control.

PFAFF 467/469-6

Same as Pfaff 469-6, but in addition, fitted with variable top feed.

Front Parts

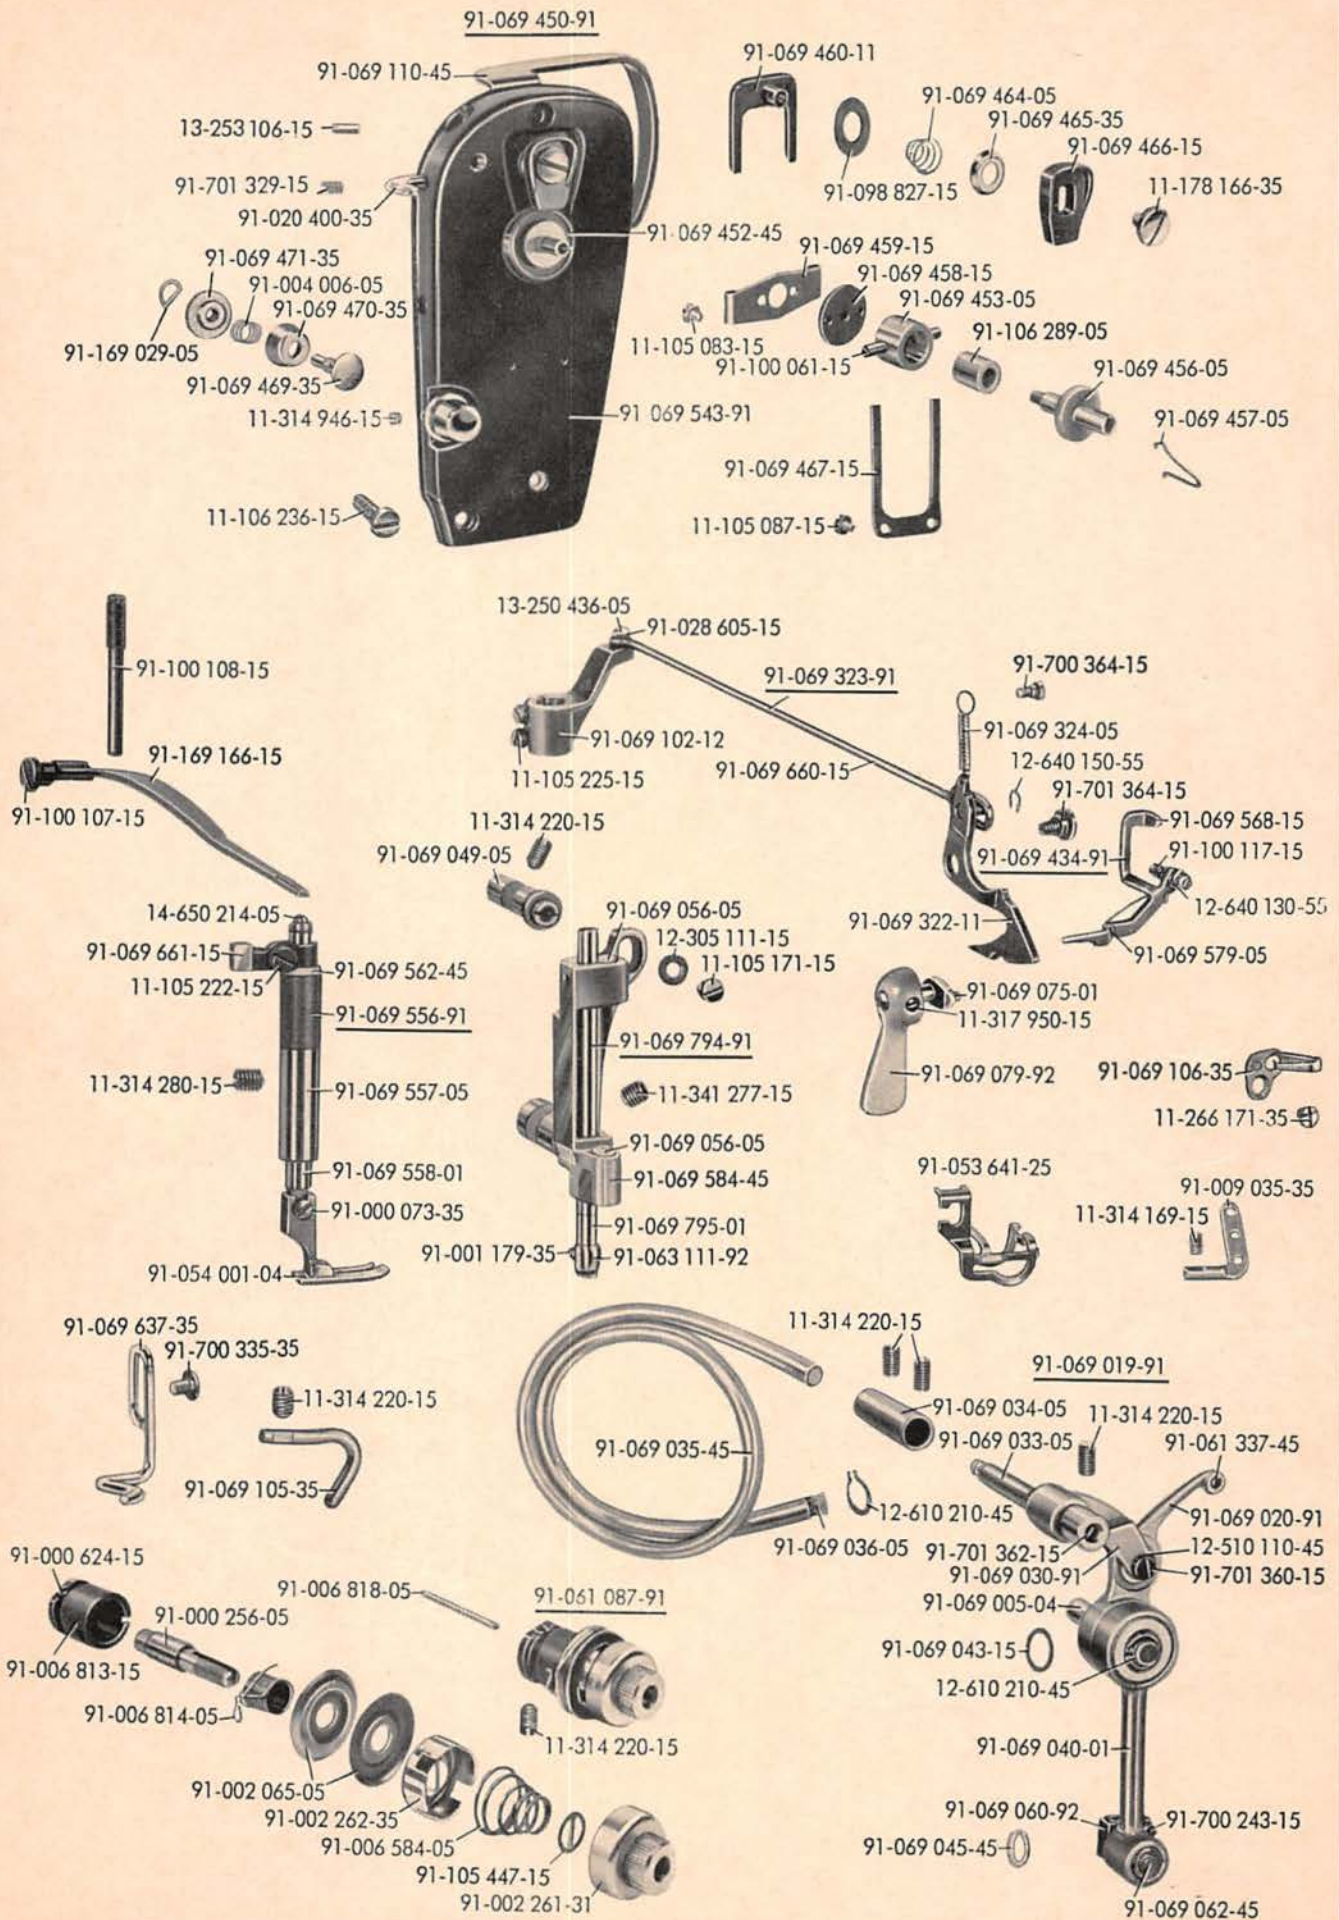


11-105 083-15 (100 058)	Fastening screw for No. 91-069 459-15	91-006 818-05	Tension release plunger
11-105 087-15 (701 395)	Fastening screw for No. 91-069 467-15	91-009 035-35	Thread retainer
11-105 171-15 (100 002)	Fastening screw for Nos. 91-069 049-05; 91-069 584-45	91-020 400-35	Thread retainer
11-105 222-15 (701 385)	Binding screw for No. 91-069 661-15	91-028 605-15	Washer for No. 13-250 436-05
11-105 225-15 (701 365)	Binding screw for No. 91-069 102-12	91-053 641-25	Finger guard
11-106 236-15 (100 056)	Fastening screw for No. 91-069 450-91	91-054 001-04	Presser foot
11-178 166-35 (100 060)	Fastening screw for No. 91-069 466-15	91-061 087-91	Thread tension, complete, consisting of Nos. 91-000 256-05; 91-000 624-15; 91-002 065-05; 91-002 261-31; 91-002 262-35; 91-006 584-05; 91-006 813-15; 91-006 814-05; 91-006 818-05; 91-105 447-15
11-266 171-35 (701 367)	Fastening screw for No. 91-069 106-35	91-061 337-45	Take-up lever bushing (cemented)
11-314 169-15 (701 316)	Fastening screw for No. 91-009 035-35	91-063 111-92	Needle holder, w/ needle set screw No. 91-001 179-35
11-314 220-15 (701 359)	Fastening screw for Nos. 91-061 087-91; 91-069 033-05; 91-069 034-05; 91-069 049-05; 91-069 105-35	91-069 005-04¹⁾	Take-up crank stud for Nos. 91-069 020-91; 91-069 040-01
11-314 280-15 (700 150)	Fastening screw for No. 91-069 557-05	91-069 019-91	Take-up lever, complete, consisting of Nos. 12-510 110-45; 12-610 210-45; 91-069 005-04; 91-069 020-91; 91-069 030-91; 91-069 033-05; 91-069 040-01; 91-069 043-15; 91-069 060-92; 91-701 360-15 (Will be replaced under our Replace- ment Parts Delivery Service)
11-314 946-15 (701 314)	Fastening screw for No. 91-069 469-35	91-069 020-91¹⁾	Take-up lever, w/ take up lever bushing No. 91-061 337-45
11-317 950-15 (701 361)	Fastening screw for No. 91-069 079-92	91-069 030-91¹⁾	Take-up lever link
11-341 277-15 (100 138)	Fastening screw for No. 91-069 584-45	91-069 033-05¹⁾	Take-up lever link stud for No. 91-069 030-91
12-305 111-15 (69 047)	Washer for No. 11-105 171-15	91-069 034-05	Bearing bushing for No. 91-069 033-05
12-510 110-45 (80 145)	Slip washer for No. 91-701 360-15	91-069 035-45	Oil tube (460 mm long) for No. 91-069 033-05
12-610 210-45 (28 626)	Circlip for Nos. 91-069 005-04; 91-069 035-45	91-069 036-05	Oil wick (600 mm long) for No. 91-069 035-45
12-640 130-55 (23 033)	Slip washer for No. 91-100 117-15	91-069 040-01¹⁾	Needle bar connecting link
12-640 150-55 (20 565)	Slip washer for No. 91-069 322-11	91-069 043-15	Washer for Nos. 91-069 020-91; 91-069 040-01
13-250 436-05 (101 827)	Hinge pin for No. 91-069 660-15	91-069 045-45	Washer (plastic) for Nos. 91-069 040-01; 91-069 060-92
13-253 106-15 (101 801)	Positioning pin for No. 91-069 110-45	91-069 049-05	Eccentric stud for No. 91-069 584-45
14-650 214-05 (69 082)	Ball for No. 91-069 558-01	91-069 056-05	Oil pad (foam-plastic) for No. 91-069 584-45
91-000 073-35	Fastening screw for Nos. 91-053 641-25; 91-054 001-04	91-069 060-92¹⁾	Needle bar connecting stud, w/ binding screws No. 91-700 243-15
91-000 256-05	Tension stud	91-069 062-45	Plug (plastic) for No. 91-069 060-92
91-000 624-15	Fastening screw for No. 91-000 256-05	91-069 075-01	Presser bar lifting crank for No. 91-069 079-92
91-001 179-35	Needle set screw	91-069 079-92	Presser bar lifter, w/ set screw No. 11-317 950-15
91-002 065-05	Tension disc	91-069 102-12	Lifting lever crank, w/ binding screws No. 11-105 225-15
91-002 261-31	Tension dial	91-069 105-35	Thread guide
91-002 262-35	Tension release washer	91-069 106-35	Thread guide, upper
91-004 006-05	Pressure spring for No. 91-069 470-35	91-069 110-45	Take-up lever guard
91-006 584-05	Tension spring	91-069 322-11	Lifting lever
91-006 813-15	Thread check spring regulator		
91-006 814-05	Thread check spring		

¹⁾ If old part is returned for replacement, repair costs will be charged only.


91-069 323-91	Lifting lever, complete, consisting of Nos. 12-640 150-55; 13-250 436-05; 91-028 605-15; 91-069 102-12; 91-069 322-11; 91-069 324-05; 91-069 660-15	91-069 556-91	Presser bar, complete, consisting of Nos. 11-105 222-15; 91-000 073-35; 91-069 557-05; 91-069 558-01; 91-069 562-45; 91-069 661-15
91-069 324-05	Tension spring for No. 91-069 322-11	91-069 557-05	Bearing bushing for No. 91-069 558-01
91-069 434-91	Tension release lever, complete, consisting of Nos. 12-640 130-55; 91-069 568-15; 91-069 579-05; 91-100 117-15	91-069 558-01	Presser bar
91-069 450-91	Face cover bobbin winder, complete, consisting of Nos. 11-105 083-15; 11-105 087-15; 11-178 166-35; 11-314 946-15; 91-004 006-05; 91-020 400-35; 91-069 452-45; 91-069 453-05; 91-069 456-05; 91-069 457-05; 91-069 458-15; 91-069 459-15; 91-069 460-11; 91-069 464-05; 91-069 465-35; 91-069 466-15; 91-069 467-15; 91-069 469-35; 91-069 470-35; 91-069 471-35; 91-069 543-91; 91-098 827-15; 91-100 061-15; 91-106 289-05; 91-169 029-05; 91-701 329-15	91-069 562-45	Washer (felt) for No. 91-069 661-15
91-069 452-45	Guide bushing for No. 91-069 453-05	91-069 568-15	Tension release lever
91-069 453-05	Slide bushing for No. 91-069 542-45	91-069 579-05	Torsion spring for No. 91-069 568-15
91-069 456-05	Bobbin winder spindle (left-hand thread)	91-069 584-45	Needle bar frame
91-069 457-05	Driving pin for No. 91-069 456-05	91-069 637-35	Thread guide, lower
91-069 458-15	Friction washer (left-hand thread) for No. 91-069 456-05	91-069 660-15	Lifting lever connecting rod
91-069 459-15	Bobbin winder spindle driver	91-069 661-15	Presser bar lifting bracket
91-069 460-11	Bobbin winder engaging fork for No. 91-069 453-05	91-069 794-91	Needle bar, complete, consisting of Nos. 91-063 111-92; 91-069 795-01
91-069 464-05	Pressure spring for No. 91-069 465-35	91-069 795-01	Needle bar
91-069 465-35	Thread retainer stud collar	91-098 827-15	Washer for No. 91-069 464-05
91-069 466-15	Bobbin winder disengaging finger	91-100 061-15	Guide screw for No. 91-069 453-05
91-069 467-15	Leaf spring for No. 91-069 453-05	91-100 107-15	Spring rest screw for No. 91-169 166-15
91-069 469-35	Thread retainer stud	91-100 108-15	Regulating screw for No. 91-169 166-15
91-069 470-35	Thread retainer sleeve	91-100 117-15	Hinge screw for No. 91-069 568-15
91-069 471-35	Regulating nut for No. 91-069 469-35	91-105 447-15	Washer for No. 91-006 584-05
91-069 543-91	Face cover, w/ No. 13-253 106-15 Positioning pin No. 91-069 110-45 Take-up lever guard	91-106 289-05	Bearing bushing for Nos. 91-069 453-05; 91-069 456-05
		91-169 029-05	Lock spring for No. 91-069 471-35
		91-169 166-15	Presser bar leaf spring
		91-700 243-15	Binding screw for No. 91-069 060-92
		91-700 335-35	Fastening screw for No. 91-069 637-35
		91-700 364-15	Spring suspension screw for No. 91-069 324-05
		91-701 329-15	Fastening screw for No. 91-020 400-35
		91-701 360-15	Hinge screw for Nos. 91-069 020-91; 91-069 030-91
		91-701 362-15	End screw for No. 91-069 033-05
		91-701 364-15	Hinge screw for No. 91-069 322-11




Arm Parts

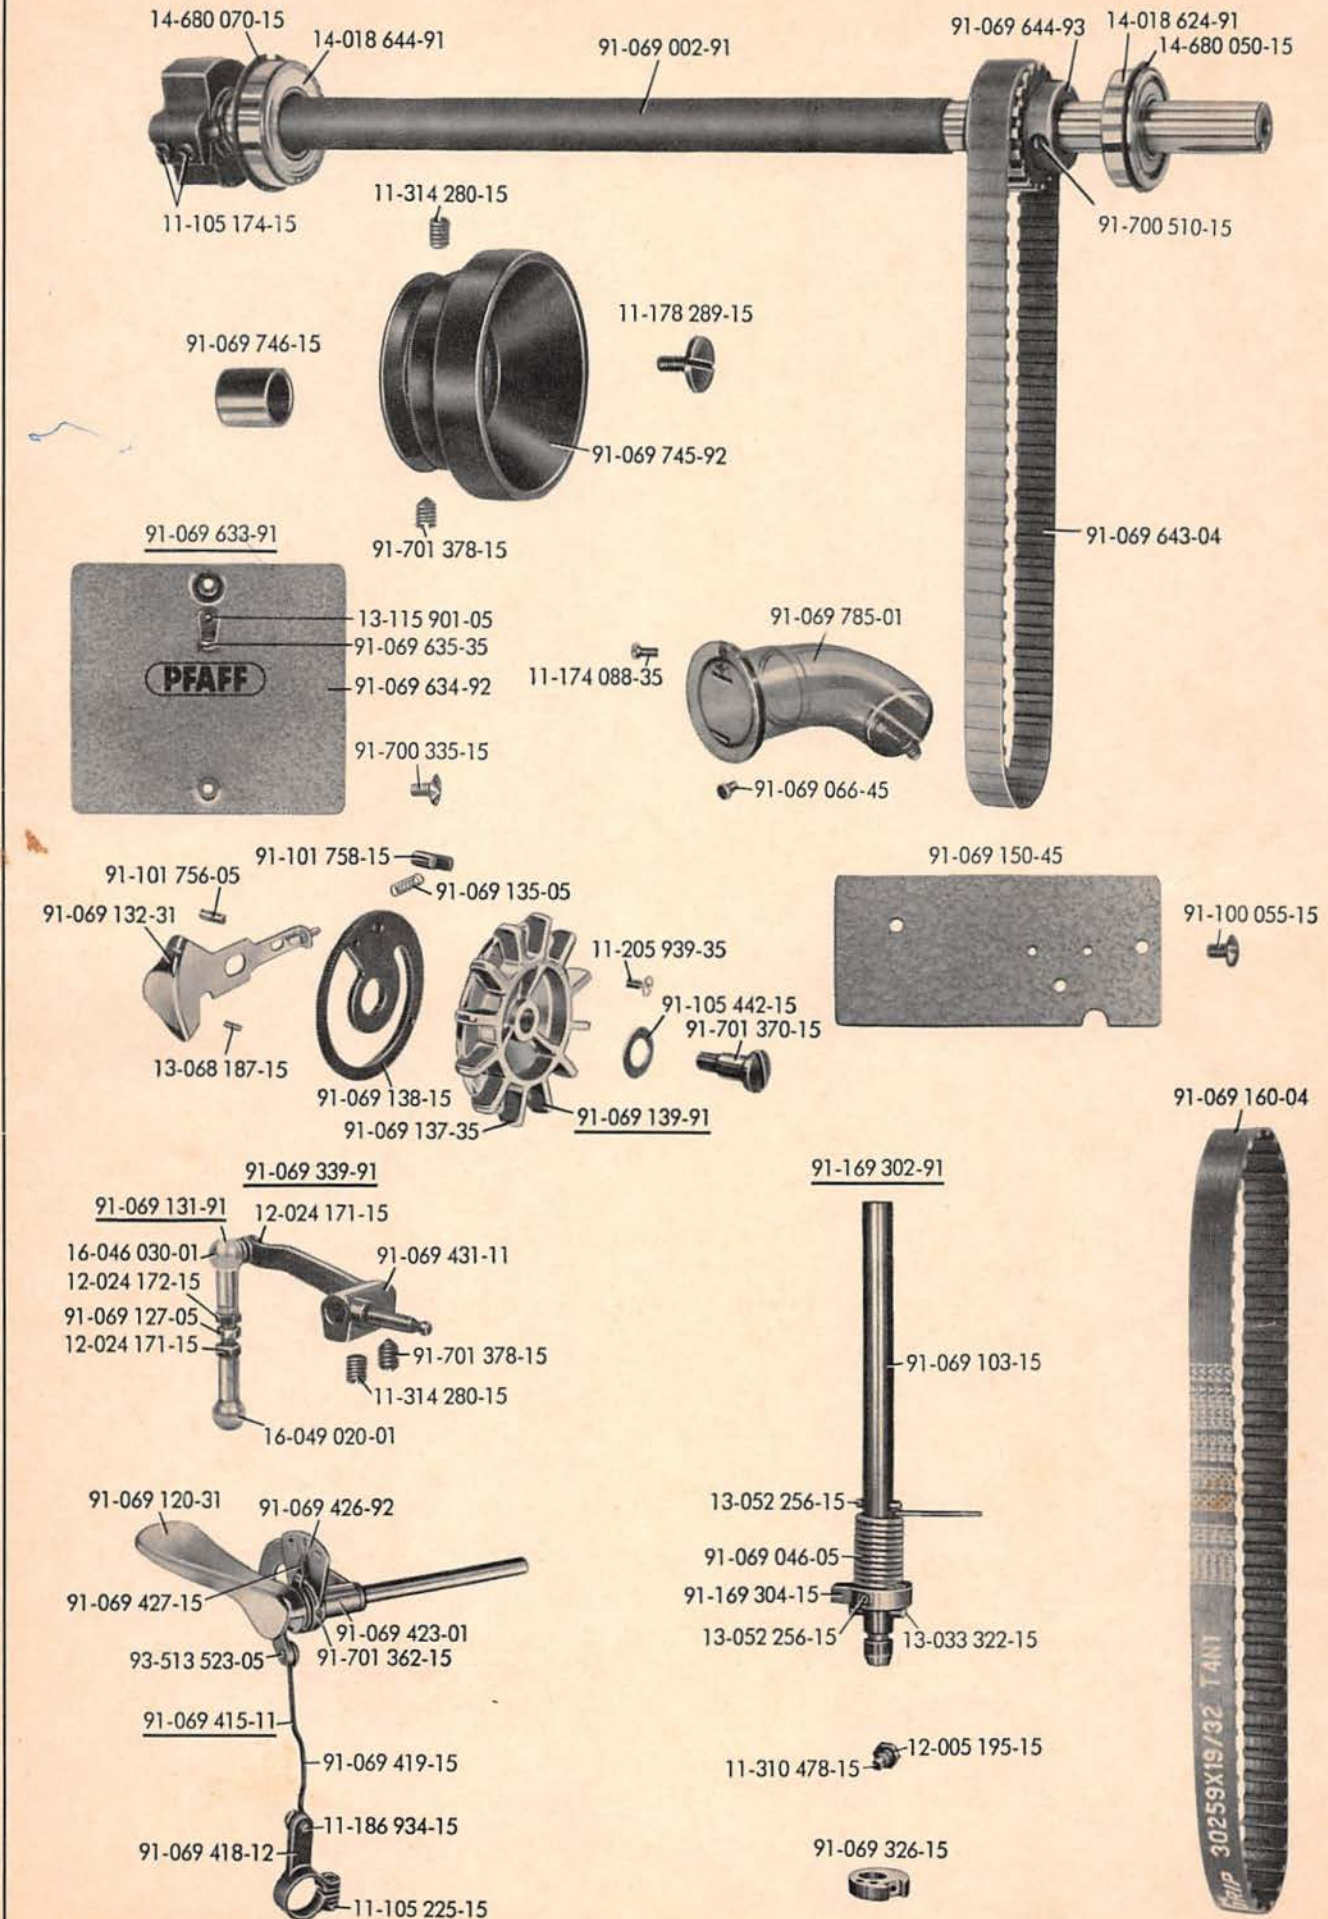

11-105 174-15 (701 099)	Binding screw for No. 91-069 005-04 (see p. I)	91-069 160-04	Driving belt, for U.S., Canada, Great Britain and Belgium only (Orders should specify number of dots: 1, 2 or 3)
11-105 225-15 (701 365)	Binding screw for No. 91-069 418-12	91-069 326-15	Collar for No. 91-069 103-15 (1st version) (Cannot be replaced by collar No. 91-169 304-15)
11-174 088-35 (100 188)	Fastening screw for No. 91-069 785-01	91-069 339-91	Feed regulator, complete, consisting of Nos. 11-314 280-15; 91-069 131-91, complete; 91-069 431-11; 91-701 378-15
11-178 289-15 (100 035)	End screw for No. 91-069 002-91	91-069 415-11	Differential feed indicator, complete, consisting of Nos. 11-186 934-15; 91-069 418-12; 91-069 419-15; 91-069 423-01; 93-513 523-05
11-186 934-15 (701 393)	Hinge screw for No. 91-069 419-15	91-069 418-12	Crank for No. 91-069 415-11, w/ set screw No. 11-105 225-15
11-205 939-35 (100 005)	Fastening screw for No. 91-069 138-15	91-069 419-15	Connection for No. 91-069 415-11
11-310 478-15 (100 141)	Stop screw for Nos. 91-069 326-15; 91-169 304-15	91-069 423-01	Pointer actuating lever
11-314 280-15 (700 150)	Fastening screw for Nos. 91-069 431-11; 91-069 745-92	91-069 426-92	Differential feed scale, w/ set screw No. 91-701 362-15
12-005 195-15 (701 713)	Nut for No. 11-310 478-15	91-069 427-15	Pointer for No. 91-069 426-92
12-024 171-15 (101 501)	Nut for Nos. 16-046 030-01; 91-069 127-05	91-069 431-11	Feed regulator
12-024 172-15 (101 500)	Nut (left-hand thread) for No. 91-069 127-05	91-069 633-91	Top cover, complete, consisting of Nos. 13-115 901-05; 91-069 634-92; 91-069 635-35
13-033 322-15 (1 975)	Driving pin for No. 91-169 302-91	91-069 634-92	Top cover
13-052 256-15 (101 784)	Stop pin for No. 91-069 103-15 and positioning pin for Nos. 91-069 326-15; 91-169 304-15	91-069 635-35	Thread guide for No. 91-069 633-91
13-068 187-15 (630 212)	Stop pin for No. 91-069 138-15 (Model A only)	91-069 643-04	Driving belt, for all countries except the U.S., Canada, Great Britain and Belgium (Orders should specify number of dots: 1, 2 or 3)
13-115 901-05 (69 636)	Rivet for No. 91-069 635-35	91-069 644-93	Driving belt sprocket, upper, w/ set screws No. 91-700 510-15 (Orders should specify number of dots: 1, 2 or 3)
14-018 624-91 (69 011)	Ball bearing, rear, for No. 91-069 002-91, w/ circlip No. 14-680 050-15	91-069 745-92	Balance wheel, w/ No. 11-314 280-15 Set screw No. 91-701 378-15 Set screw
14-018 644-91 (69 006)	Ball bearing, front, for No. 91-069 002-91, w/ circlip No. 14-680 070-15	91-069 746-15	Spacer for No. 91-069 745-92
14-680 050-15 (69 039)	Circlip for No. 14-018 624-91	91-069 785-01	Oil reservoir
14-680 070-15 (69 038)	Circlip for No. 14-018 644-91	91-100 055-15	Fastening screw for No. 91-069 150-45
16-046 030-01 (69 126)	Connecting rod joint, w/ nut No. 12-024 171-15	91-101 756-05	Guide pin for No. 91-069 132-31
16-049 020-01 (69 281)	Connecting rod joint	91-101 758-15	Stop pin for No. 91-069 135-05
91-069 002-91	Arm shaft, w/ crank and binding screw No. 11-105 174-15 for No. 91-069 005-04 (see p. I)	91-105 442-15	Friction washer for No. 91-069 139-91
91-069 046-05	Torsion spring for No. 91-169 302-91	91-169 302-91	Knee lifter vertical shaft, complete, consisting of Nos. 13-033 322-15; 13-052 256-15; 91-069 046-05; 91-069 103-15; 91-169 304-15
91-069 066-45	Plug for No. 91-069 785-01	91-169 304-15	Collar (2nd version) for No. 91-069 103-15 (Cannot be replaced by collar No. 91-069 326-15)
91-069 103-15	Knee lifter vertical shaft	91-700 335-15	Fastening screw for No. 91-069 633-91
91-069 120-31	Feed reversing lever	91-700 510-15	Fastening screw (M6 x 0.75; 7 mm long) Obsolete version = No. 11-317 278-15 Fastening screw (M6; 6 mm long)
91-069 127-05	Ball joint connection for No. 91-069 131-91	91-701 362-15	Fastening screw for No. 91-069 423-01
91-069 131-91	Ball joint connection, complete, consisting of Nos. 12-024 171-15; 12-024 172-15; 16-046 030-01; 16-049 020-01; 91-069 127-05	91-701 370-15	Hinge screw for No. 91-069 139-91
91-069 132-31	Stitch length locking slide	91-701 378-15	Fastening screw for Nos. 91-069 431-11; 91-069 745-92
91-069 135-05	Pressure spring for No. 91-069 132-31	93-513 523-05	Rivet for No. 91-069 419-15
91-069 137-35	Feed regulator dial	91-069 001-45	Arm (not ill.)
91-069 138-15	Stitch length cam		
91-069 139-91	Feed regulator dial, complete, consisting of Nos. 11-205 939-35; 91-069 137-35; 91-069 138-15		
91-069 150-45	Arm cover, rear		

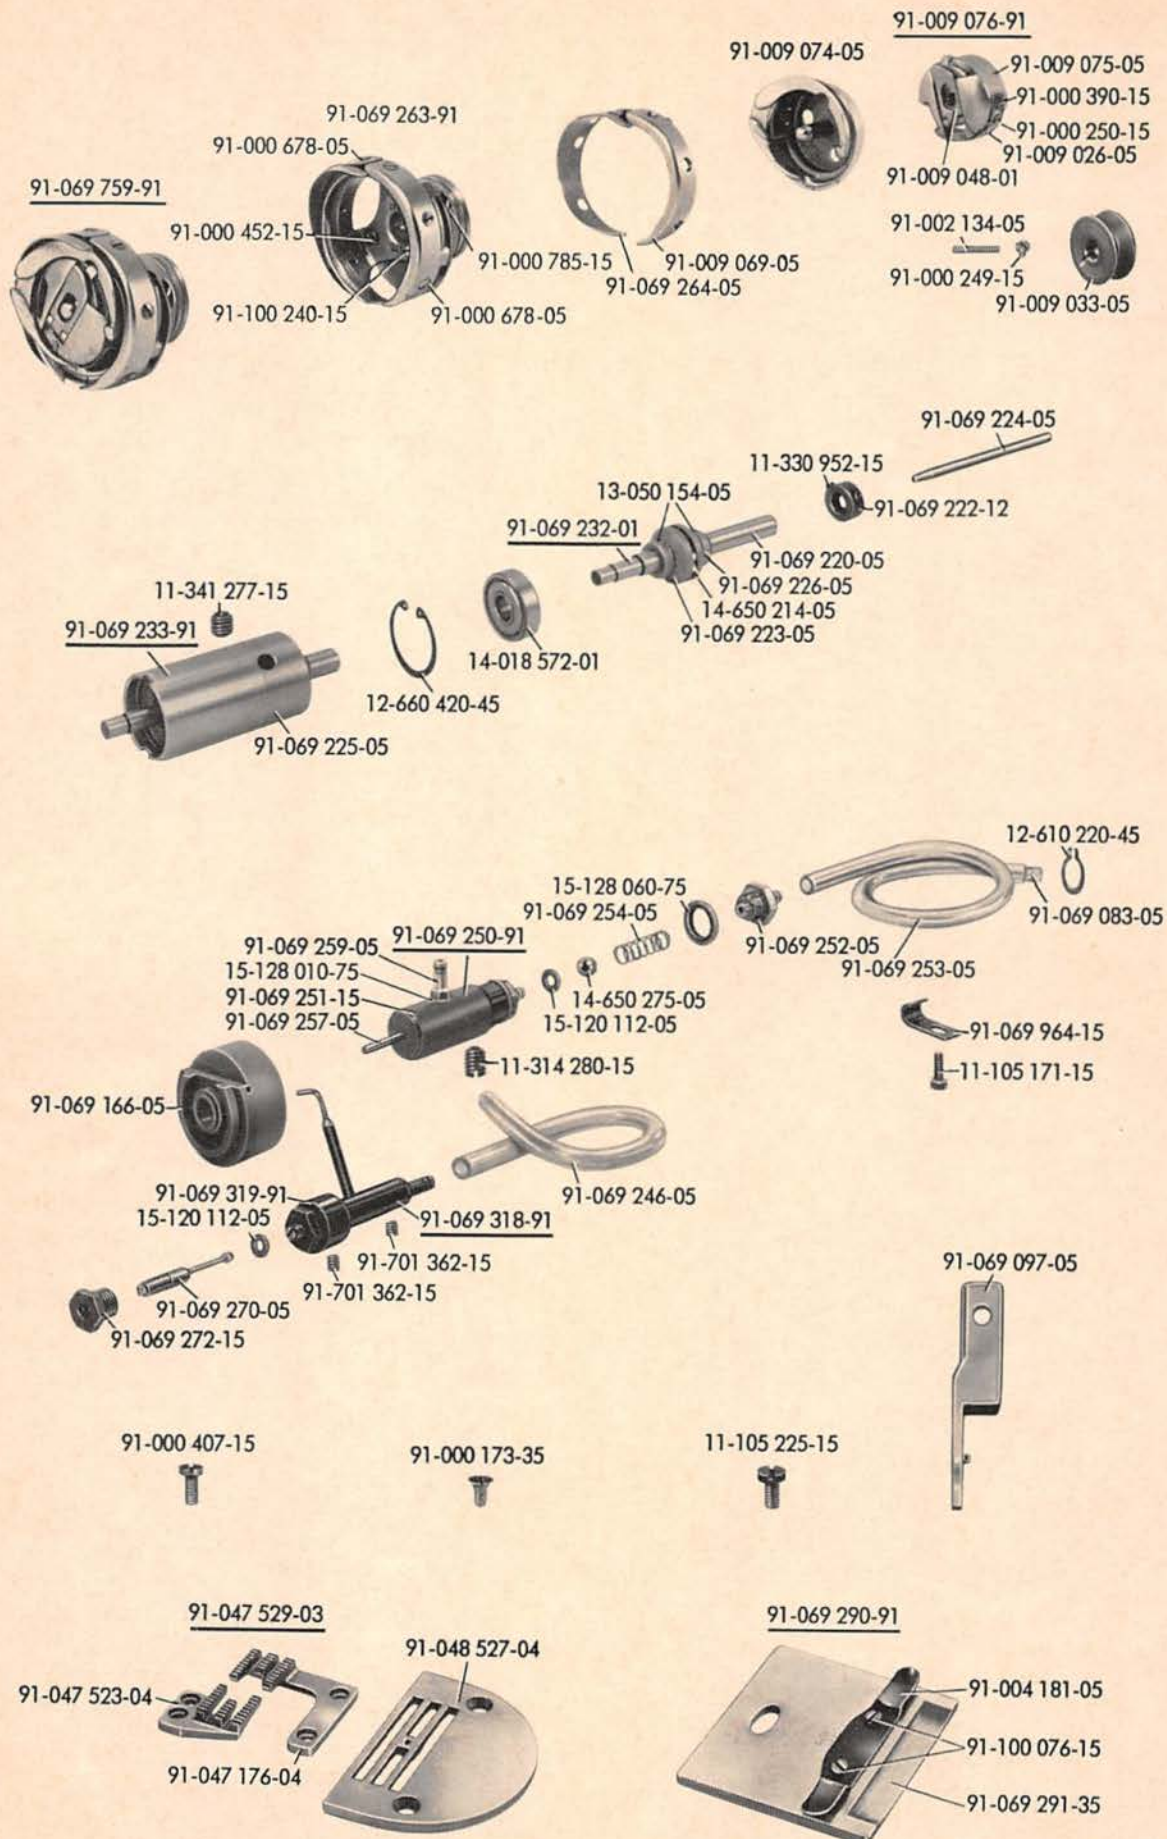

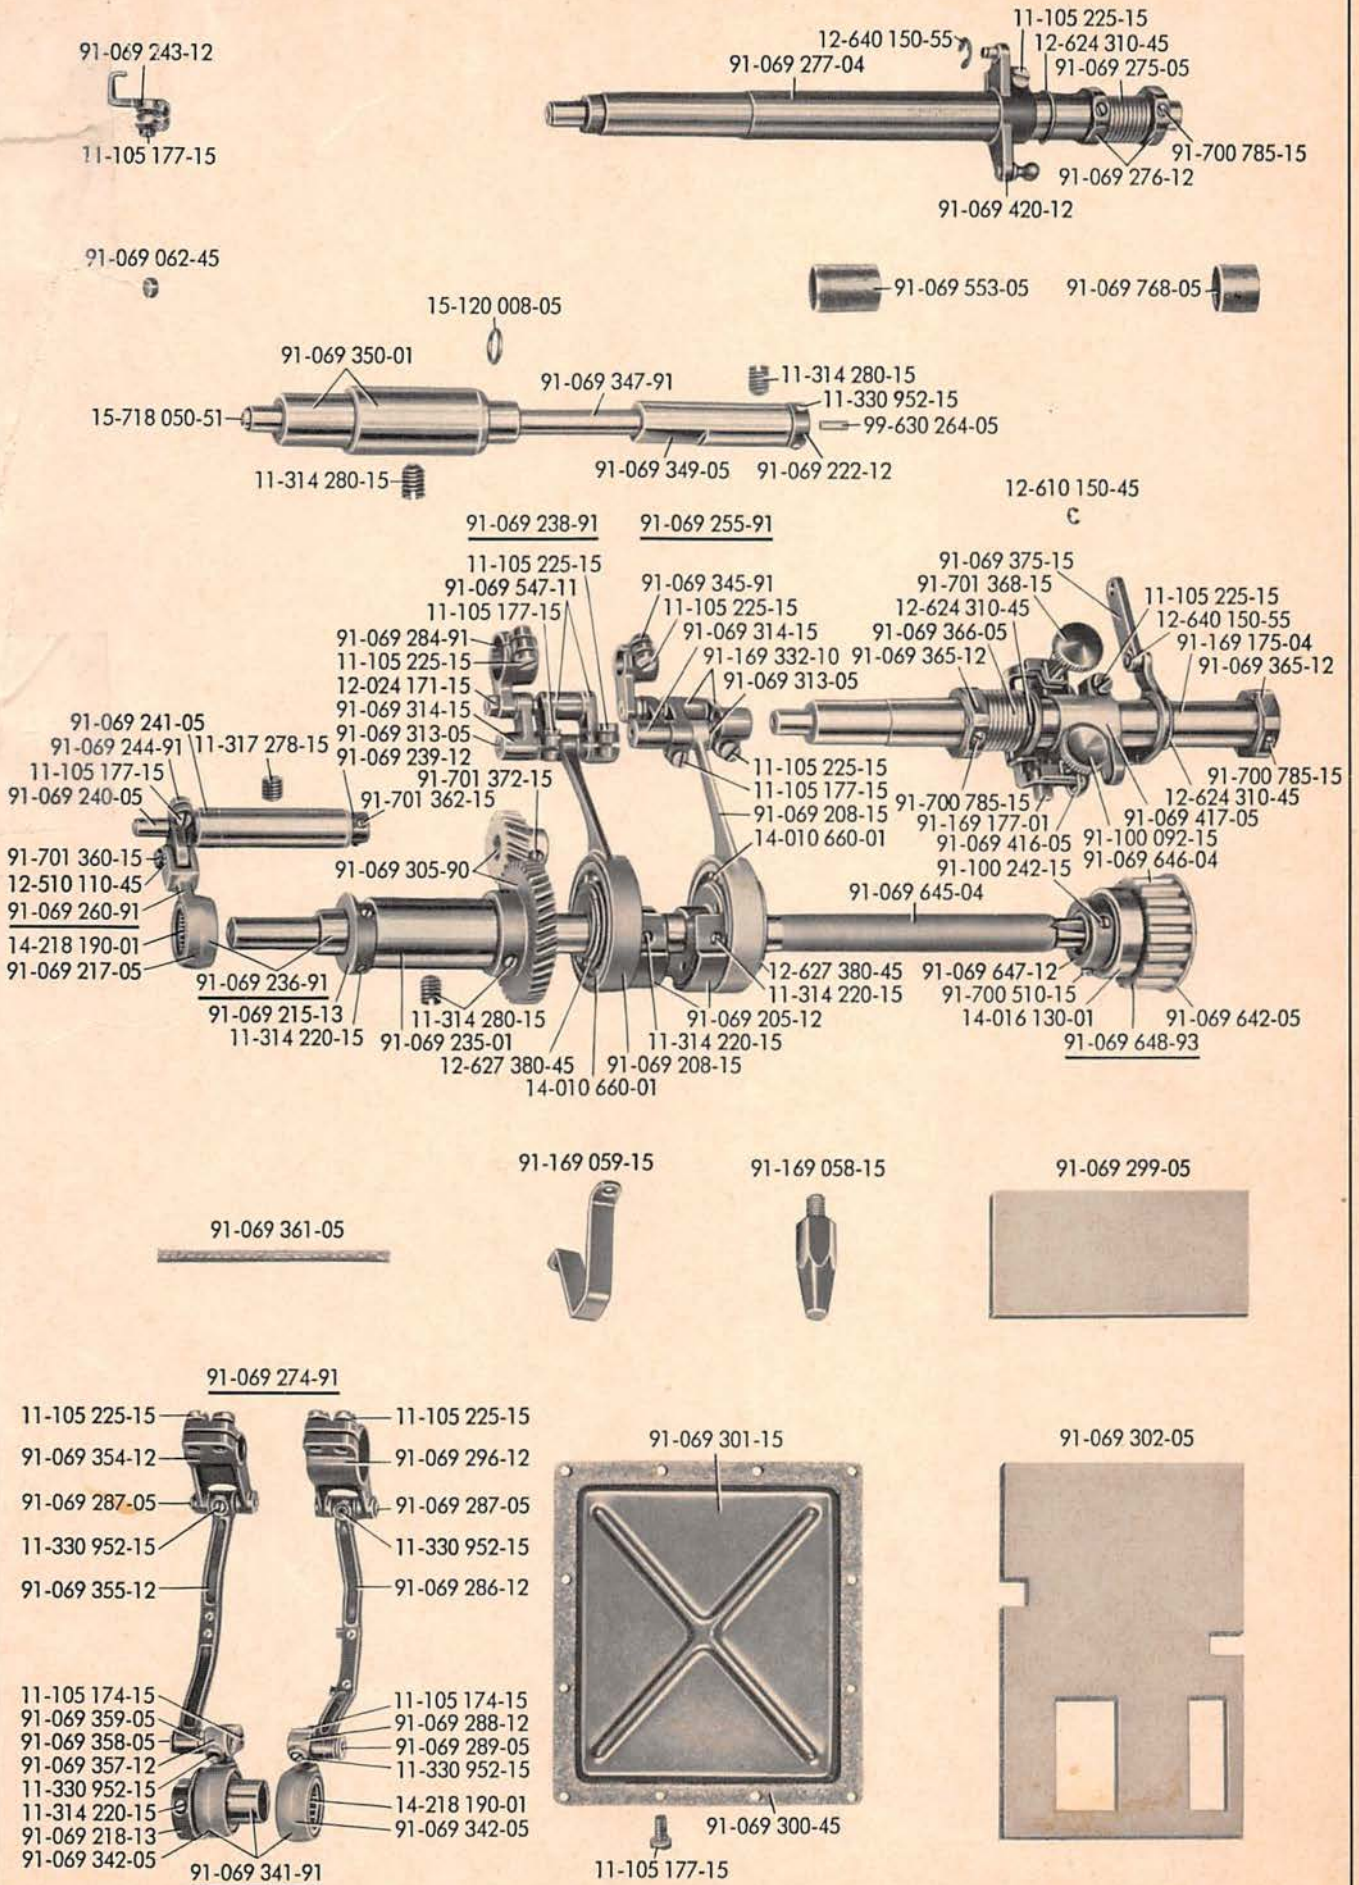



Bedplate Parts

11-105 171-15 (100 002)	Fastening screw for No. 91-069 964-15	15-718 050-51 (69 360)	Ball bearing sealer for No. 91-069 347-91
11-105 174-15 (701 099)	Binding screw for Nos. 91-069 288-12; 91-069 357-12	91-000 173-35	Fastening screw for No. 91-048 527-04
11-105 177-15 (701 363)	Binding screw for Nos. 91-069 243-12; 91-069 244-91; 91-069 547-11; 91-169 332-10 and Fastening screw for Nos. 91-069 301-15; 91-169 059-15	91-000 249-15	Stop screw for No. 91-009 048-01
11-105 225-15 (701 365)	Binding screw for Nos. 91-069 284-91; 91-069 296-12; 91-069 345-91; 91-069 354-12; 91-069 417-05; 91-069 420-12; 91-069 547-11; 91-169 332-10 and Fastening screw for No. 91-069 097-05	91-000 250-15	Regulating screw for No. 91-009 026-05
11-314 220-15 (701 359)	Fastening screw for Nos. 91-069 205-12; 91-069 215-13; 91-069 218-13	91-000 390-15	Fastening screw for No. 91-009 026-05
11-314 280-15 (700 150)	Fastening screw for Nos. 91-069 235-01; 91-069 251-15; 91-069 305-90; 91-069 349-05; 91-069 350-01	91-000 407-15	Fastening screw for Nos. 91-047 176-04; 91-047 523-04
11-317 278-15 (701 371)	Fastening screw for No. 91-069 241-05	91-000 452-15	Fastening screw (5.7 mm long) for No. 91-069 263-91
11-330 952-15 (100 091)	Fastening screw for Nos. 91-069 222-12; 91-069 286-12; 91-069 288-12; 91-069 355-12; 91-069 357-12	91-000 678-05	Fastening screw for Nos. 91-009 069-05; 91-069 264-15
11-341 277-15 (100 138)	Fastening screw for No. 91-069 233-91	91-000 785-15	Fastening screw for No. 91-069 263-91
12-024 171-15 (101 501)	Nut for No. 91-069 284-91	91-002 134-05	Pressure spring for No. 91-009 048-01
12-510 110-45 (80 145)	External-teeth lock washer for No. 91-701 360-15	91-004 181-05	Bed slide spring for No. 91-069 290-91
12-610 150-45 (69 433)	Circlip for Nos. 91-100 092-15; 91-701 368-15	91-009 026-05	Tension spring for No. 91-009 076-91
12-610 220-45 (28 620)	Circlip for No. 91-069 253-05	91-009 033-05	Bobbin
12-624 310-45 (69 376)	Circlip for Nos. 91-069 277-04; 91-169 177-01; 91-169 252-91 (see p. V)	91-009 048-01	Bobbin case latch slide for No. 91-009 076-91
12-627 380-45 (69 207)	Circlip for No. 91-069 205-12	91-009 069-05	Hook gib
12-640 150-55 (20 565)	Slip washer for Nos. 91-069 420-12; 91-169 177-01	91-009 074-05	Bobbin case base
12-660 420-45 (69 230)	Circlip for No. 91-069 225-05	91-009 075-05	Bobbin case cap
13-050 154-05 (101 752)	Positioning pin for Nos. 91-069 223-05; 91-069 226-05	91-009 076-91	Bobbin case cap, complete, consisting of Nos. 91-000 249-15; 91-000 250-15; 91-000 390-15; 91-002 134-05; 91-009 026-05; 91-009 048-01; 91-009 075-05
14-010 660-01 (69 209)	Ball bearing for Nos. 91-069 205-12; 91-069 208-15	91-047 176-04	Feed dog, sawtooth cut, right (Orders should specify type desired)
14-016 130-01 (69 649)	Ball bearing for No. 91-069 646-04	91-047 523-04	Feed dog, sawtooth cut, left (Orders should specify type desired)
14-018 572-01 (69 229)	Ball bearing for No. 91-069 233-91	91-047 529-03	Feed dog assembly, complete, consisting of Nos. 91-047 176-04; 91-047 523-04 (Orders should specify type desired)
14-218 190-01 (69 216)	Needle bearing for No. 91-069 217-05 (For replacement purposes, order No. 91-069 236-91, complete) Needle bearing for No. 91-069 342-05 (For replacement purposes, order No. 91-069 341-91, complete)	91-048 527-04	Needle plate for Nos. 91-047 176-04; 91-047 523-04
14-650 214-05 (69 082)	Ball for No. 91-069 232-01	91-069 062-45	Plug (plastic), 4 mm dia. for No. 91-069 240-05
14-650 275-05 (69 844)	Ball for No. 91-069 254-05	91-069 083-05	Oil wick (30 mm long) for No. 91-069 253-05
15-120 008-05 (69 353)	Sealer ring (rubber) for No. 91-069 350-01	91-069 097-05	Bobbin case position finger
15-120 112-05 (69 803)	Sealer ring for Nos. 14-650 275-05; 91-069 272-15	91-069 166-05	Oil retainer ring for Nos. 91-069 233-91; 91-069 759-91
15-128 010-75 (69 248)	Gasket for No. 91-069 259-05	91-069 205-12	Feed driving eccentric, w/ set screws No. 11-314 220-15
15-128 060-75 (69 249)	Gasket for No. 91-069 252-05	91-069 208-15¹⁾	Feed driving eccentric crank for No. 91-069 238-91
		91-069 208-15²⁾	Feed driving eccentric crank for No. 91-069 255-91
		91-069 215-13	Bobbin case lever eccentric for No. 91-069 236-91, w/ set screws No. 11-314 220-15 (For replacement purposes, order No. 91-069 236-91, complete)
		91-069 217-05	Bobbin case lever eccentric crank for No. 91-069 236-91 (For replacement purposes, order No. 91-069 236-91, complete)

¹⁾ If old part is returned for replacement, repair costs will be charged only.

For repair, return feed driving mechanism No. 91-069 238-91, complete.

For repair, return differential feed assembly No. 91-069 255-91, complete.

91-069 218-13	Feed lifting eccentric for No. 91-069 341-91, w/ set screws No. 11-314 220-15 (For replacement purposes, order No. 91-069 341-91, complete)	91-069 255-91	Differential feed assembly, complete, consisting of Nos. 12-627 380-45; 14-010 660-01; 91-069 205-12; 91-069 208-15; 91-069 313-05; 91-069 314-15; 91-069 345-91; 91-169 332-10 (Will be replaced under our Replacement Parts Delivery Service)
91-069 220-05	Hook shaft for No. 91-069 232-01 (For replacement purposes, order No. 91-069 232-01, complete)	91-069 257-05	Valve stem for No. 14-650 275-05
91-059 222-12	Set collar for Nos. 91-069 220-05; 91-069 347-91, w/ set screws No. 11-330 952-15	91-069 259-05	Nipple for Nos. 91-069 246-05; 91-069 251-15
91-069 223-05	Centrifugal governor, fixed section, for No. 91-069 220-05	91-069 260-91	Bobbin case opener driving mechanism, complete, consisting of Nos. 12-510 110-45; 91-069 236-91, complete; 91-069 244-91; 91-701 360-15
91-069 224-05	Thrust pin for Nos. 91-069 232-01; 91-069 257-05	91-069 263-91	Hook, w/ No. 91-000 452-15 Set screw No. 91-000 678-05 Set screw for Nos. 91-009 069-05; 91-069 264-05
91-069 225-05	Hook shaft bushing for No. 91-069 233-91		No. 91-000 785-15 Set screw No. 91-009 069-05 Hook gib No. 91-069 264-05 Thread pull-off flange No. 91-100 240-15 Set screw
91-069 226-05	Centrifugal governor, sliding section, for No. 91-069 220-05	91-069 264-05	Thread pull-off flange
91-069 232-01	Hook shaft, w/ centrifugal governor, complete, consisting of Nos. 13-050 154-05; 14-650 214-05; 91-069 220-05; 91-069 223-05; 91-069 226-05	91-069 270-05	Oil flow regulating spindle for No. 91-069 318-91
91-069 233-91	Hook shaft bearing, complete, consisting of Nos. 12-660 420-45; 14-018 572-01; 91-069 222-12; 91-069 225-05; 91-069 232-01, complete	91-069 272-15	Thrust screw for Nos. 91-069 270-05; 91-069 319-91
91-069 235-01	Bearing bushing, w/ needle bearing (Orders should specify number of dots on driving shaft No. 91-069 645-04)	91-069 274-91	Feed lifting and driving assembly, complete, consisting of Nos. 91-069 286-12; 91-069 287-05; 91-069 288-12; 91-069 289-05; 91-069 296-12; 91-069 341-91 complete; 91-069 354-12; 91-069 355-12; 91-069 357-12; 91-069 358-05; 91-069 359-05
91-069 236-91	Bobbin case lever driving connection, complete, consisting of Nos. 14-218 190-01; 91-069 215-13; 91-069 217-05	91-069 275-05	Torsion spring for No. 91-069 277-04
91-069 238-91	Feed driving mechanism, complete, consisting of Nos. 12-627 380-45; 14-010 660-01; 91-069 205-12; 91-069 208-15; 91-069 284-91; 91-069 313-05; 91-069 314-15; 91-069 547-11 (Will be replaced under our Replacement Parts Delivery Service)	91-069 276-12	Set collar for Nos. 91-069 275-05; 91-069 277-04, w/ set screws No. 91-700 785-15
91-069 239-12	Set collar for No. 91-069 240-05, w/ set screws No. 91-701 362-15	91-059 277-04¹⁾	Feed regulating shaft
91-069 240-05	Bobbin case lever shaft	91-069 284-91¹⁾	Feed rock shaft crank, rear, w/ No. 11-105 225-15 Binding screw No. 12-024 171-15 Nut
91-069 241-05	Bobbin case lever shaft bushing	91-069 286-12	Feed bar, right, w/ set screw No. 11-330 952-15
91-069 243-12	Bobbin case lever, w/ binding screw No. 11-105 177-15	91-069 287-05	Hinge stud for Nos. 91-069 296-12; 91-069 354-12
91-069 244-91	Bobbin case lever shaft crank, w/ ball bearing and binding screw No. 11-105 177-15	91-069 288-12	Feed lifting joint for No. 91-069 289-05, w/ No. 11-105 174-15 Binding screw No. 11-330 952-15 Set screw
91-069 246-05	Oil tube (180 mm long) for Nos. 91-069 250-91; 91-069 318-91	91-069 289-05	Hinge stud (20 mm long) for Nos. 91-069 286-12; 91-069 288-12
91-069 250-91	Oil shut-off valve, complete, consisting of Nos. 14-650 275-05; 15-120 112-05; 15-128 010-75; 15-128 060-75; 91-069 251-15; 91-069 252-05; 91-069 254-05; 91-069 257-05; 91-069 259-05	91-069 290-91	Bed slide, complete, consisting of Nos. 91-004 181-05; 91-069 291-35; 91-100 076-15
91-069 251-15	Valve housing for No. 91-069 250-91	91-069 291-35	Bed slide
91-069 252-05	Nipple for Nos. 91-069 251-15; 91-069 253-05	91-069 296-12	Feed rock shaft crank, front, w/ binding screws No. 11-105 225-15
91-069 253-05	Oil tube (265 mm long) for Nos. 91-069 250-91; 91-069 785-01 (see p. II)	91-069 299-05	Oil pad (foam-plastic)
91-069 254-05	Pressure spring for No. 14-650 275-05	91-069 300-45	Gasket (cork) for No. 91-069 301-15
		91-069 301-15	Oil reservoir cover
		91-069 302-05	Oil pad (foam-plastic)

¹⁾ If old part is returned for replacement, repair costs will be charged only.
For repair, return feed driving mechanism No. 91-069 238-91, complete.


- 91-069 305-90** Spur gear assembly, w/
No. 11-314 280-15 Set screws for large
spur gear
No. 91-701 372-15 Set screws for small
spur gear
- 91-069 313-05¹⁾** Hinge stud for No. 91-069 238-91
- 91-069 313-05²⁾** Hinge stud for No. 91-069 255-91
- 91-069 314-15¹⁾** Connecting crank for No. 91-069 284-91
- 91-069 314-15²⁾** Connecting crank for No. 91-069 345-91
- 91-069 318-91** Oil flow regulator bushing, complete,
consisting of Nos. 15-120 112-05;
91-069 270-05; 91-069 272-15;
91-069 319-91
- 91-069 319-91** Oil flow regulator block for
No. 91-069 318-91,
w/ set screw No. 91-701 362-15
- 91-069 341-91** Feed lifting eccentric crank, complete,
consisting of Nos. 14-218 190-01;
91-069 218-13; 91-069 342-05
- 91-069 342-05** Feed lifting eccentric crank
for No. 91-069 341-91
(For replacement purposes, order
No. 91-069 341-91, complete)
- 91-069 345-91²⁾** Differential feed rock shaft crank, rear,
w/ binding screw No. 11-105 225-15
- 91-069 347-91** Differential feed rock shaft, w/
No. 15-718 050-51 Ball bearing sealer
No. 99-630 264-05 Plug
- 91-069 349-05** Differential feed rock shaft bushing
for No. 91-069 347-91
- 91-069 350-01** Feed rock shaft, w/ bushing and gasket
No. 15-120 008-05
- 91-069 354-12** Differential feed rock shaft crank, front,
w/ binding screws No. 11-105 225-15
- 91-069 355-12** Feed bar, left, w/ set screw
No. 11-330 952-15
- 91-069 357-12** Feed lifting joint, for No. 91-069 358-05,
w/
No. 11-105 174-15 Binding screw
No. 11-330 952-15 Set screw
- 91-069 358-05** Hinge stud (23 mm long) for Nos.
91-069 355-12; 91-069 357-12
- 91-069 359-05** Bearing bushing for Nos. 91-069 357-12;
91-069 358-05
- 91-069 361-05** Oil wick (90 mm long) for Nos.
91-069 287-05; 91-069 289-05;
91-069 358-05
- 91-069 365-12** Set collar for Nos. 91-069 366-05;
91-169 175-04, w/
set screws No. 91-700 785-15
- 91-069 366-05** Torsion spring for Nos. 91-069 365-12;
91-169 177-01
- 91-069 375-15** Connecting link for Nos. 91-069 420-12;
91-169 177-01
- 91-069 416-05** Retaining spring for Nos. 91-100 092-15;
91-701 368-15
- 91-069 417-05** Differential feed regulating crank
- 91-069 420-12** Feed regulating shaft crank, rear, w/
binding screw No. 11-105 225-15
- 91-069 547-11** Feed regulating shaft crank assembly,
w/
No. 11-105 177-15 Binding screw
No. 11-105 225-15 Binding screw
- 91-069 553-05** Bearing bushing, front
for Nos. 91-069 277-04; 91-169 175-04
- 91-069 642-05** Friction washer for No. 91-069 646-04
- 91-069 645-04²⁾** Driving shaft
- 91-069 646-04** Driving belt sprocket, lower,
for No. 91-069 648-93
(Orders should specify number of dots:
1, 2, or 3)
- 91-069 647-12** Set collar for No. 91-069 646-04, w/
No. 91-100 242-15 Set screw, pointed
No. 91-700 510-15 Set screw, blunt
- 91-069 648-93** Driving belt sprocket, lower, complete,
consisting of Nos. 14-016 130-01;
91-069 642-05; 91-069 646-04;
91-069 647-12
(Orders should specify number of dots:
1, 2 or 3)
- 91-069 759-91** Hook, w/ bobbin case, complete,
consisting of Nos. 91-009 074-05;
91-009 076-91, complete; 91-069 263-91
- 91-069 768-05** Bearing bushing, rear,
for Nos. 91-069 277-04; 91-169 175-04
- 91-069 964-15** Clip for No. 91-069 253-05
- 91-100 076-15** Fastening screw for No. 91-004 181-05
- 91-100 092-15** Differential feed regulating screw
(concave surface)
- 91-100 240-15** Fastening screw (4 mm long)
for No. 91-069 263-91
- 91-100 242-15** Fastening screw, pointed
(M6 x 0.75; 8 mm long)
for No. 91-069 647-12
Obsolete version =
No. 91-701 378-15 Fastening screw
(M6; 8 mm long)
- 91-169 058-15** Bedplate leg
- 91-169 059-15** Bedplate rest
- 91-169 175-04²⁾** Differential feed regulating shaft
(Distance between grooves receiving
circlips No. 12-624 310-45 amounts
to 58.5 mm) Obsolete version =
No. 91-069 410-04 Differential feed
regulating shaft (Distance between
grooves receiving circlips
No. 12-624 310-45 amounts to
50.0 mm)
Old shaft cannot be replaced by
new one.
Differential feed regulating shaft
for Pfaff 467/469 see No. 91-069 410-04
(p. 25)
- 91-169 177-01** Regulating screw bracket
(58.5 mm long)
Obsolete version =
No. 91-069 413-01 Regulating screw
bracket (50.0 mm long)
Old bracket cannot be replaced by
new one.
- 91-169 332-10** Differential feed regulating shaft
crank assembly, w/
No. 11-105 177-15 Binding screw
No. 11-105 225-15 Binding screw
- 91-700 510-15** Fastening screw, blunt
(M6 x 0.75; 7 mm long)
for No. 91-069 647-12
Obsolete version =
No. 11-317 281-15 Fastening screw
(M6; 8 mm long)
- 91-700 785-15** Fastening screw for Nos. 91-069 276-12;
91-069 365-12
- 91-701 360-15** Hinge screw for No. 91-069 244-91
- 91-701 362-15** Fastening screw
for Nos. 91-069 239-12; 91-069 318-91;
91-069 319-91
- 91-701 368-15** Differential feed limiting screw
(convex surface)
- 91-701 372-15** Fastening screw for No. 91-069 305-90
- 99-630 264-05** Plug (plastic) 4.5 mm dia.,
for No. 91-069 347-91
- 91-069 201-45** Bedplate (not ill.)
- 11-130 566-15** Fastening screw (77 mm long)
(701 380)
for No. 91-069 201-45 (not ill.)
- 11-133 538-15** Fastening screw (33 mm long)
(100 081)
for No. 91-069 201-45 (not ill.)
- 11-133 544-15** Fastening screw (38 mm long)
(100 179)
for No. 91-069 201-45 (not ill.)
- 13-060 400-05** Positioning pin for No. 91-069 201-45
(not ill.)
(101 824)

¹⁾ If old part is returned for replacement, repair costs will be charged only.
For repair, return feed driving mechanism No. 91-069 238-91, complete.


²⁾ Orders should specify number of dots on part.
For repair, return differential feed assembly No. 91-069 255-91, complete.





IV

Accessory Parts

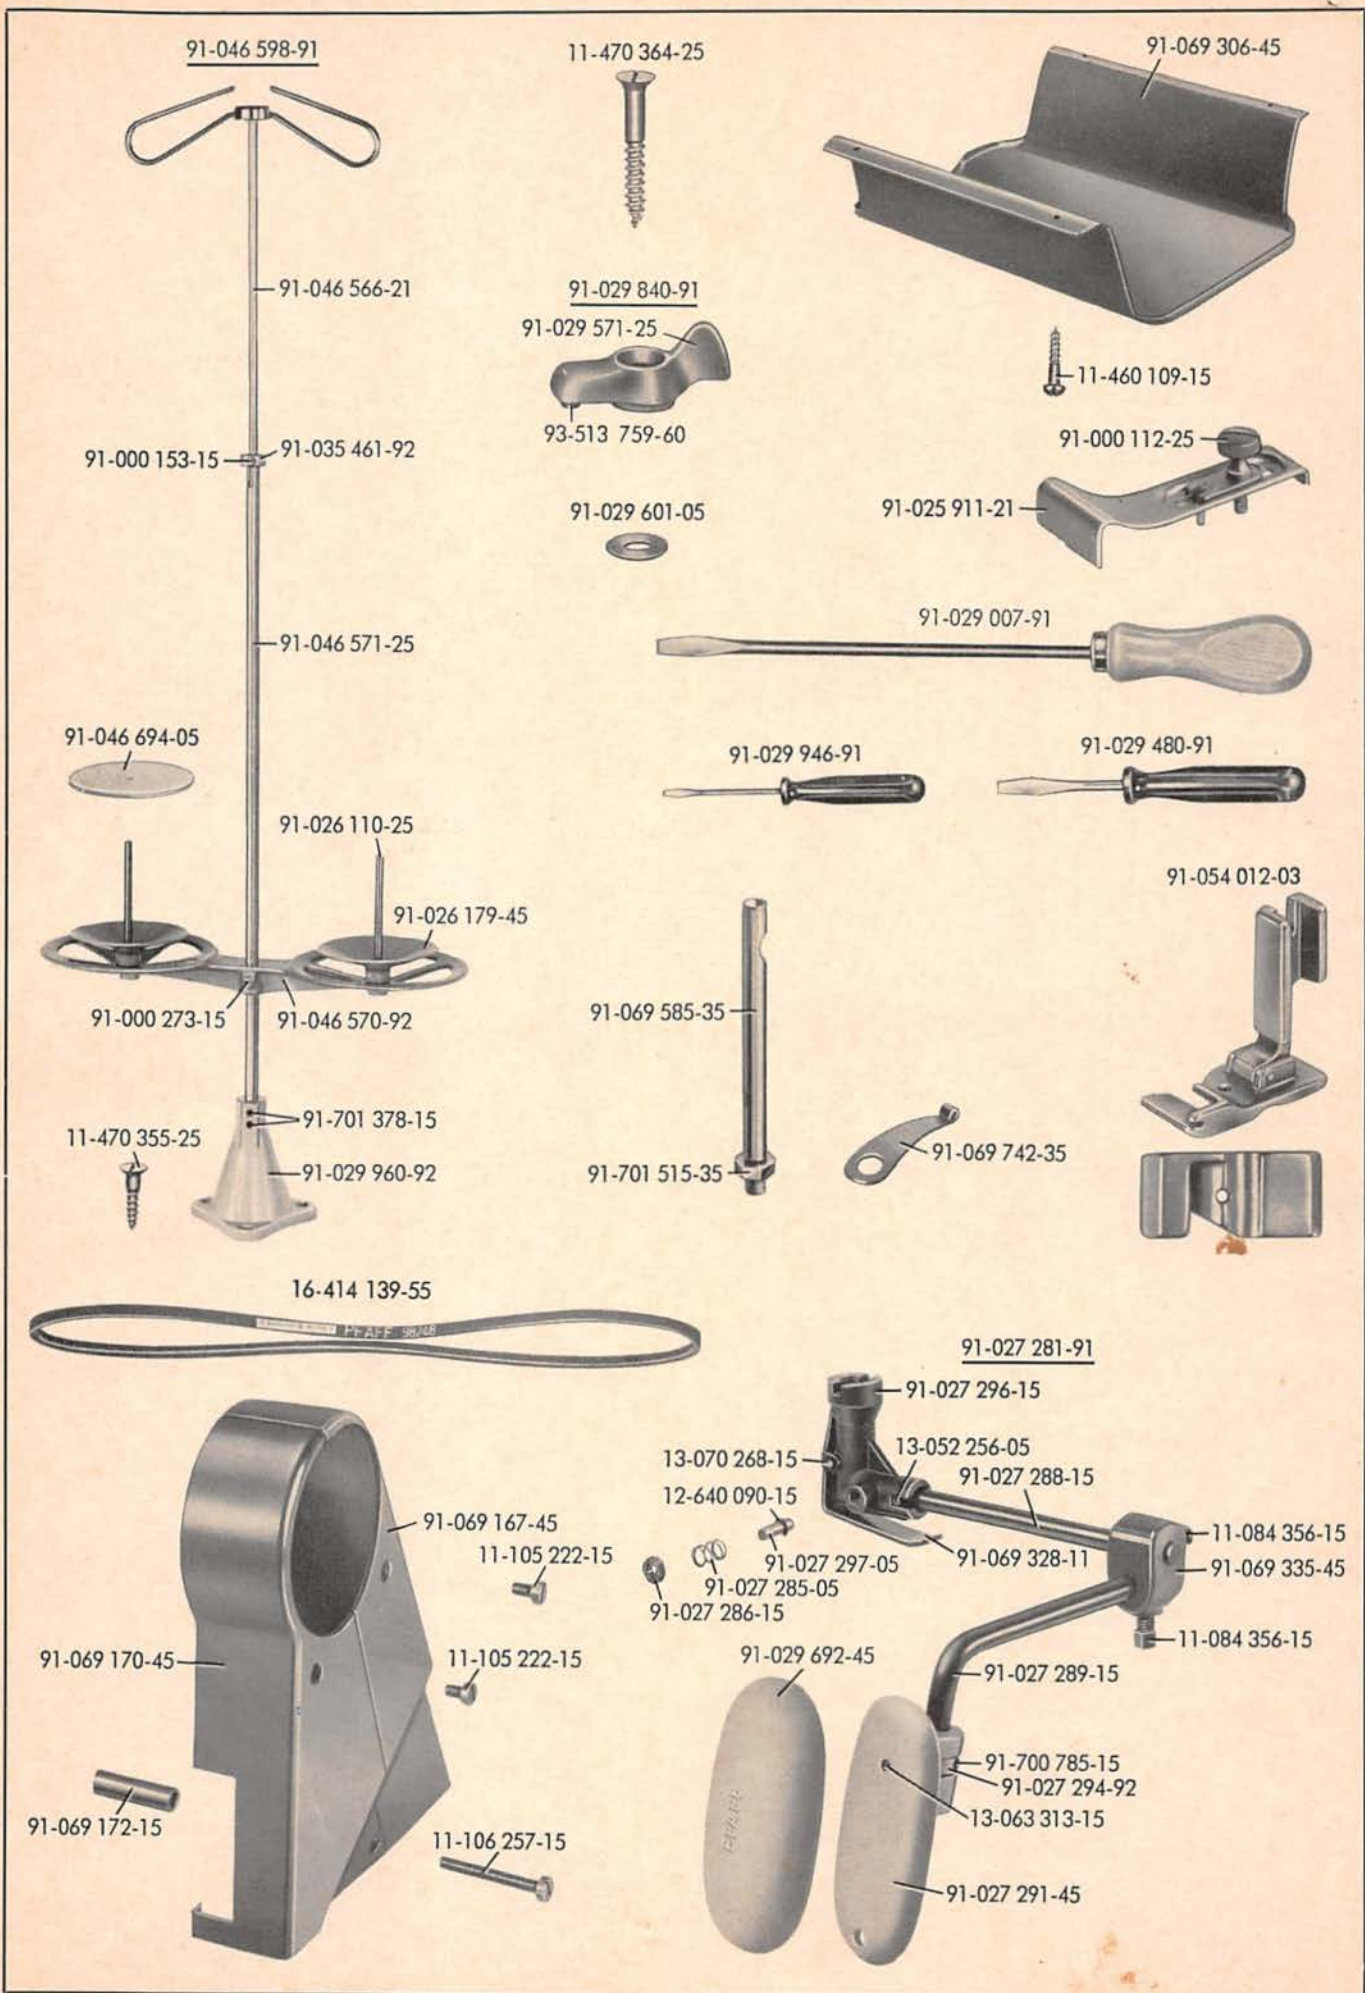

11-084 356-15 (100 014)	Fastening screw for Nos. 91-027 288-15; 91-027 289-15; 91-069 335-45	91-027 297-05	Pin, spring-loaded, for No. 91-027 288-15
11-105 222-15 (701 385)	Fastening screw for No. 91-069 167-45; 91-069 170-45	91-029 007-91	Screwdriver
11-106 257-15	Fastening screw for Nos. 91-069 167-45; 91-069 170-45	91-029 480-91	Screwdriver
11-460 109-15 (1 435)	Wood screw for No. 91-069 306-45	91-029 571-25	Catch
11-470 355-25 (1 417)	Wood screw for No. 91-046 598-91	91-029 601-05	Washer for No. 91-029 840-91
11-470 364-25 (1 426)	Wood screw for No. 91-029 840-91	91-029 692-45	Rubber pad cover for No. 91-027 291-45
12-640 090-15 (53 155)	Slip washer for No. 91-027 297-05	91-029 840-91	Catch, complete, consisting of Nos. 91-029 571-25; 93-513 759-60
13-052 256-05 (101 784)	Guide pin for No. 91-027 296-15	91-029 946-91	Screwdriver
13-063 313-15 (101 753)	Stop pin for No. 91-027 291-45	91-029 960-92	Thread unwinder base, w/ set screws No. 91-701 378-15
13-070 268-15 (101 759)	Hinge pin for No. 91-069 328-11	91-035 461-92	Set collar, w/ set screw No. 91-000 153-15
16-414 139-55 (98 248)	V-belt	91-046 566-21	Thread guide for No. 91-046 598-91
91-000 112-25	Fastening screw for No. 91-025 911-21	91-046 570-92	Spool holder base, w/ set screw No. 91-000 273-15
91-000 153-15	Fastening screw for No. 91-035 461-92	91-046 571-25	Spool rest rod
91-000 273-15	Fastening screw for No. 91-046 570-92	91-046 598-91	Thread unwinder, complete, consisting of Nos. 91-026 110-25; 91-026 179-45; 91-029 960-92; 91-035 461-92; 91-046 566-21; 91-046 570-92; 91-046 571-25; 91-046 694-05
91-025 911-21	Edge guide	91-046 694-05	Spool pin washer (foam rubber)
91-026 110-25	Spool pin	91-054 012-03 x a	Gathering foot (a = Stitching margin)
91-026 179-45	Spool disc	91-069 167-45	Belt guard, rear section
91-027 281-91	Knee lifter, complete, consisting of Nos. 11-084 356-15; 12-640 090-15; 13-052 256-05; 13-063 313-15; 13-070 268-15; 91-027 285-05; 91-027 286-15; 91-027 288-15; 91-027 289-15; 91-027 291-45; 91-027 294-92; 91-027 296-15; 91-027 297-05; 91-069 328-11; 91-069 335-45	91-069 170-45	Belt guard, front section
91-027 285-05	Pressure spring for No. 91-027 297-05	91-069 172-15	Bearing bushing for Nos. 11-106 257-15; 91-069 167-45; 91-069 170-45
91-027 286-15	Set screw for No. 91-027 297-05	91-069 306-45	Oil drip pan
91-027 288-15	Knee lifter rock shaft	91-069 328-11	Locking bracket
91-027 289-15	Knee plate arm	91-069 335-45	Knee plate arm bracket
91-027 291-45	Knee plate	91-069 585-35	Thread guide
91-027 294-92	Set collar, w/ set screw No. 91-700 785-15	91-069 742-35	Thread guide for No. 91-069 585-35
91-027 296-15	Knee lever vertical shaft socket	91-700 785-15	Fastening screw for No. 91-027 294-92
		91-701 378-15	Fastening screw for No. 91-029 960-92
		91-701 515-35	Nut for No. 91-069 585-35
		93-513 759-60	Leather for No. 91-029 840-91

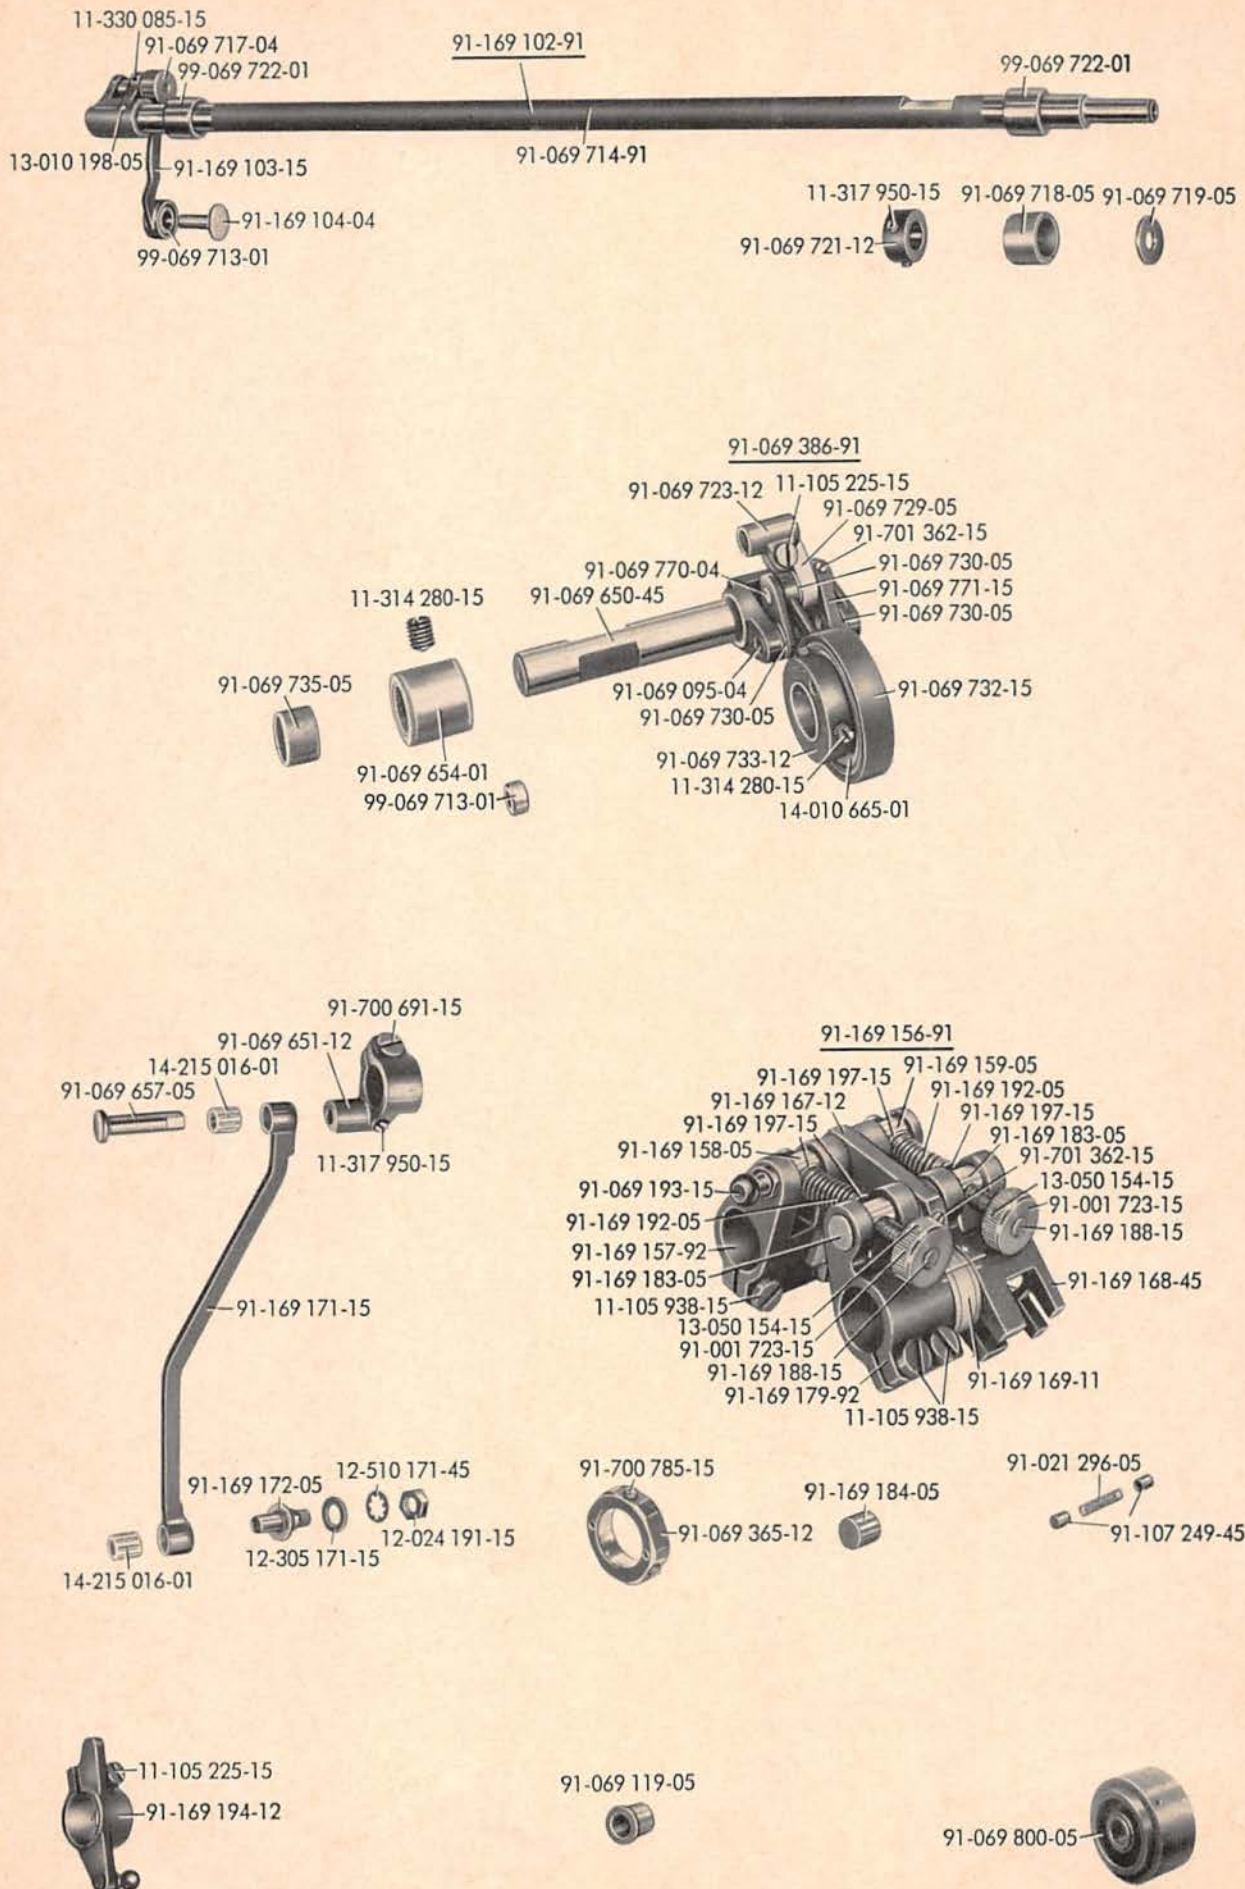

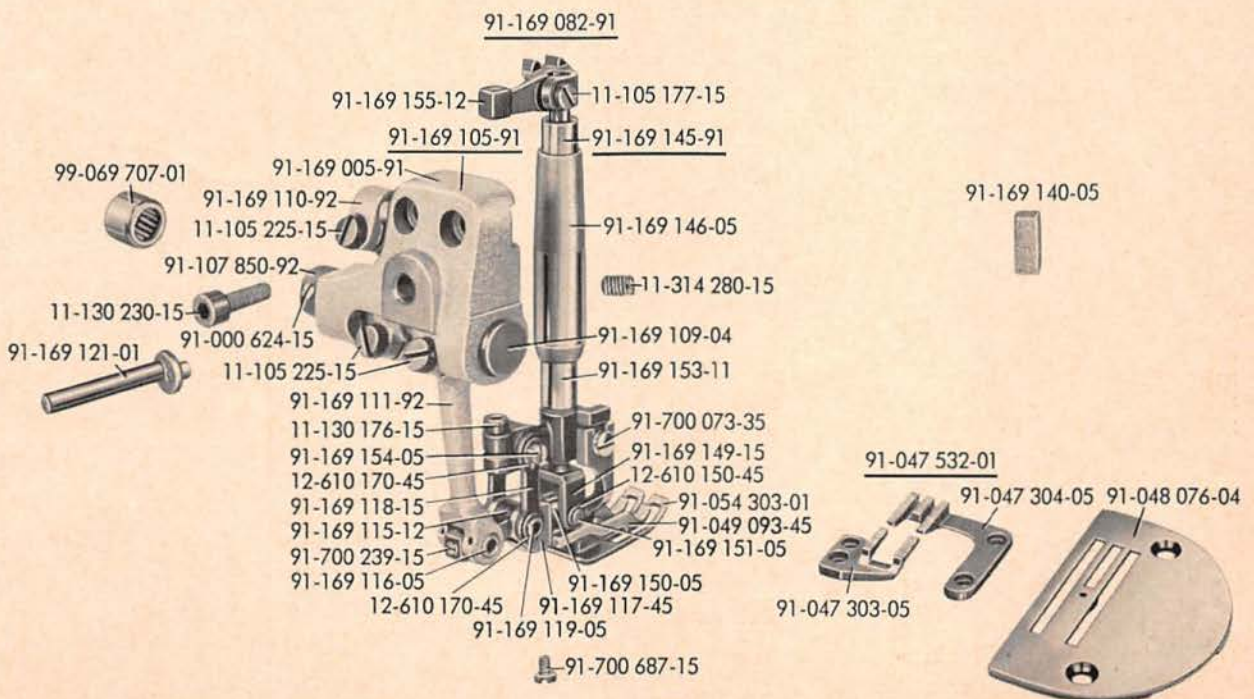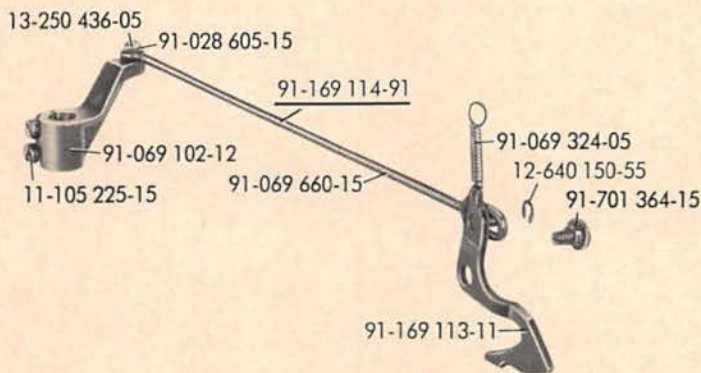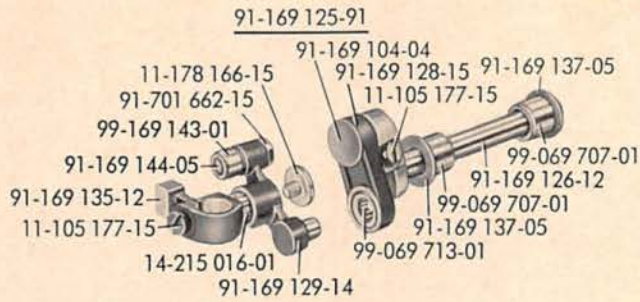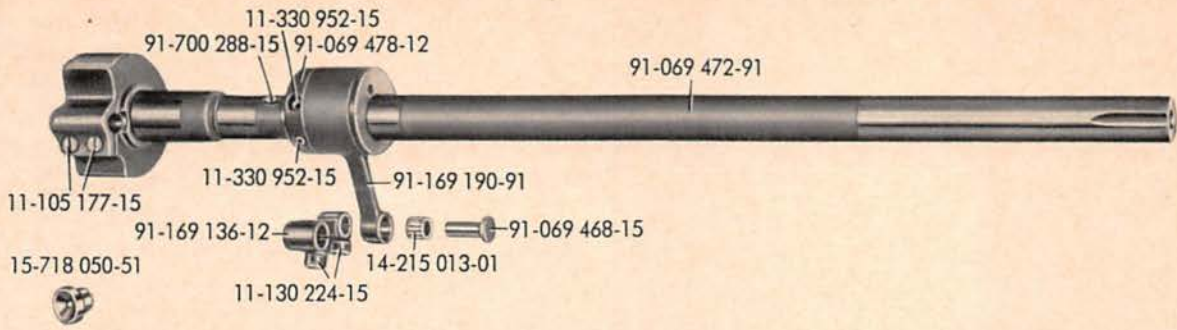

V

**Complementary Parts
PFAFF 467 / 469-6**

11-105 177-15 (701 363)	Binding screw for Nos. 91-069 472-91; 91-169 126-12; 91-169 135-12; 91-169 155-12	91-048 076-04	Needle plate (Orders should specify type desired)
11-105 225-15 (701 365)	Binding screw for Nos. 91-069 102-12; 91-069 723-12; 91-169 110-92; 91-169 111-92; 91-169 194-12	91-049 093-45	Vibrating presser foot
11-105 938-15	Binding screw for Nos. 91-169 157-92; 91-169 179-92	91-054 303-01	Lifting presser foot
11-130 176-15 (100 018)	Binding screw for No. 91-169 153-11	91-069 095-04¹⁾	Fulcrum stud for No. 91-069 771-15
11-130 224-15 (100 127)	Binding screw for No. 91-169 136-12	91-069 102-12	Lifting lever crank, w/ binding screws No. 11-105 225-15
11-130 230-15 (100 220)	Fastening screw for No. 91-169 005-91	91-069 119-05	Bearing bushing for No. 91-069 120-31 (see p. II)
11-178 166-15 (100 060)	End screw for No. 91-169 135-12	91-069 193-15	Ball stud for reverse feed control
11-314 280-15 (700 150)	Fastening screw for Nos. 91-069 654-01; 91-069 733-12; 91-169 146-05	91-069 324-05	Tension spring for No. 91-169 113-11
11-317 950-15 (701 361)	Fastening screw for Nos. 91-069 657-05; 91-069 721-12	91-069 365-12	Set collar for No. 91-169 175-04 (see p. III), w/ set screw No. 91-700 785-15
11-330 085-15 (100 185)	Fastening screw for No. 91-069 717-04	91-069 386-91	Top feed driving mechanism, complete, consisting of Nos. 14-010 665-01; 91-069 095-04; 91-069 650-45; 91-069 723-12; 91-069 729-05; 91-069 730-05; 91-069 732-15; 91-069 733-12; 91-069 770-04; 91-069 771-15; 91-701 362-15; 99-069 713-01 (Will be replaced under our Replace- ment Parts Delivery Service)
11-330 952-15 (100 091)	Fastening screw for No. 91-069 478-12 and for vibrating presser lifting eccentric	91-069 410-04	Differential feed regulating shaft
12-024 191-15 (701 635)	Nut for No. 91-169 172-05	91-069 468-15	Fulcrum stud for No. 91-169 136-12
12-305 171-15 (50 740)	Washer for No. 12-024 191-15	91-069 472-91	Arm shaft, w/ crank and binding screw No. 11-105 177-15
12-510 171-45 (69 402)	External-teeth lock washer for No. 12-024 191-15	91-069 478-12	Set collar, w/ set screws No. 11-330 952-15
12-610 150-45 (69 433)	Slip washer for No. 91-169 151-05	91-069 650-45¹⁾	Vibrating presser vibrating crank for No. 91-069 386-91
12-610 170-45 (66 043)	Slip washer for Nos. 91-169 119-05; 91-169 154-05	91-069 651-12	Vibrating presser regulating crank, w/ No. 11-317 950-15 Set screw No. 91-700 691-15 Binding screw
12-640 150-55 (20 565)	Slip washer for No. 91-169 113-11	91-069 654-01	Bearing bushing for No. 91-069 650-45
13-010 198-05 (101 800)	Positioning pin for No. 91-069 714-91	91-069 657-05	Fulcrum stud for No. 91-069 651-12
13-050 154-15 (101 752)	Positioning pin for No. 91-001 723-15	91-069 660-15	Lifting lever connecting rod
13-250 436-05 (101 827)	Hinge pin for No. 91-069 660-15	91-069 714-91	Vibrating presser vibrating shaft, w/ No. 13-010 198-05 Positioning pin No. 91-069 716-15 Vibrating presser vibrating shaft crank
14-010 665-01 (69 752)	Ball bearing for Nos. 91-069 732-15; 91-069 733-12	91-069 717-04	Fulcrum stud for No. 91-169 103-15 (Orders should specify number of dots: 1, 2 or 3)
14-215 013-01 (69 479)	Needle bearing for No. 91-169 190-91	91-069 718-05	Bearing bushing for No. 91-069 714-91
14-215 016-01 (69 545)	Needle bearing for No. 91-169 171-15	91-069 719-05	Washer for No. 91-069 718-05
14-215 016-01²⁾ (69 545)	Needle bearing for No. 91-169 129-14	91-069 721-12	Set collar for No. 91-069 714-91, w/ set screws No. 11-317 950-15
15-718 050-51 (69 360)	Ball bearing sealer for No. 91-069 472-91	91-069 723-12¹⁾	Vibrating presser vibrating shaft crank, w/ binding screw No. 11-105 225-15
91-000 624-15	Fastening screw for No. 91-107 850-92	91-069 729-05¹⁾	Connecting link for Nos. 91-069 723-12; 91-069 771-15
91-001 723-15	Differential feed regulating nut	91-069 730-05	Washer for Nos. 91-069 732-15; 91-069 771-15
91-021 296-05	Pressure spring for No. 91-107 249-45	91-069 732-15¹⁾	Driving eccentric connection
91-028 605-15	Washer for No. 13-250 436-05	91-069 733-12	Vibrating presser vibrating eccentric, w/ set screw No. 11-314 280-15
91-047 303-05	Feed dog, sawtooth cut, left	91-069 735-05	Bearing bushing for No. 91-069 650-45
91-047 304-05	Feed dog, sawtooth cut, right	91-069 770-04¹⁾	Fulcrum stud for Nos. 91-069 729-05; 91-069 732-15
91-047 532-01	Feed dog assembly, complete, consisting of Nos. 91-047 303-05; 91-047 304-05	91-069 771-15¹⁾	Vibrating presser rocker arm

¹⁾ If old part is returned for replacement, repair costs will be charged only.
For repair, return top feed driving mechanism No. 91-069 386-91, complete.

²⁾ If old part is returned for replacement, repair costs will be charged only.
For repair, return top feed driving mechanism No. 91-069 386-91, complete.

91-069 800-05	Oil retainer for Nos. 91-069 233-91 (see p. III); 91-069 759-91 (see p. III)	91-169 125-91	Vibrating presser lifting assembly, complete, consisting of Nos. 11-178 166-15; 14-215 016-01; 91-169 104-04; 91-169 126-12; 91-169 128-15; 91-169 129-14; 91-169 135-12; 91-169 144-05; 91-701 662-15; 99-069 713-01; 99-169 143-01 (Will be replaced under our Replacement Parts Delivery Service)
91-107 249-45	Plunger for Nos. 91-169 158-05; 91-169 159-05	91-169 126-12	Vibrating presser lifting shaft, w/ binding screw No. 11-105 177-15
91-107 850-92	Set collar for No. 91-169 109-04, w/ set screws No. 91-000 624-15	91-169 128-15²⁾	Connecting link for Nos. 91-169 126-12; 91-169 129-14
91-169 005-91	Bearing bracket for Nos. 91-169 110-92; 91-169 111-92, w/ No. 99-069 707-01 Needle bearing No. 91-169 109-04 Fulcrum stud	91-169 129-14²⁾	Two-armed lever
91-169 082-91	Vibrating presser vibrating mechanism, w/ presser bar assembly, complete, consisting of Nos. 91-049 093-45; 91-054 303-01; 91-169 105-91, complete; 91-169 145-91, complete; 91-700 687-15	91-169 135-12²⁾	Presser bar lifting bracket, w/ binding screw No. 11-105 177-15
91-169 102-91	Vibrating presser vibrating shaft, w/ connection, complete, consisting of Nos. 11-330 085-15; 91-069 714-91; 91-069 717-04; 91-169 103-15; 91-169 104-04; 99-069 713-01	91-169 136-12	Vibrating presser lifting shaft crank, w/ binding screw No. 11-130 224-15
91-169 103-15	Vibrating presser vibrating shaft connection (Supplied pre-assembled only; consisting of needle bearing No. 99-069 713-01, fulcrum stud No. 91-069 717-04 and fulcrum stud No. 91-169 104-04)	91-169 137-05	Washer for No. 91-169 126-12
91-169 104-04	Fulcrum stud for Nos. 91-169 103-15; 91-169 128-15 (Orders should specify number of dots: 1, 2 or 3)	91-169 140-05	Oil pad (foam-plastic) for No. 99-169 143-01
91-169 105-91	Vibrating presser vibrating mechanism, complete, consisting of Nos. 12-610 170-45; 91-107 850-92; 91-169 005-91; 91-169 110-92; 91-169 111-92; 91-169 115-12; 91-169 116-05; 91-169 117-45; 91-169 118-15; 91-169 119-05; 91-169 154-05	91-169 144-05	Fulcrum stud for No. 99-169 143-01
91-169 109-04	Fulcrum stud for Nos. 91-169 110-92; 91-169 111-92 (Orders should specify number of dots: 1, 2, 3 or 4)	91-169 145-91	Presser bar assembly, complete, consisting of Nos. 11-130 176-15; 12-610 150-45; 91-169 146-05; 91-169 149-15; 91-169 150-05; 91-169 151-05; 91-169 153-11; 91-169 155-12; 91-700 073-35
91-169 110-92	Vibrating presser driving crank, w/ binding screws No. 11-105 225-15	91-169 146-05	Bearing bushing for No. 91-169 153-11
91-169 111-92	Vibrating presser driving lever, w/ binding screw No. 11-105 225-15	91-169 149-15	Vibrating presser lifting bar
91-169 113-11	Lifting lever	91-169 150-05	Roller for No. 91-169 117-45
91-169 114-91	Lifting lever, complete, consisting of Nos. 12-640 150-55; 13-250 436-05; 91-028 605-15; 91-069 102-12; 91-069 324-05; 91-069 660-15; 91-169 113-11	91-169 151-05	Fulcrum stud for No. 91-169 150-05
91-169 115-12	Connecting link for Nos. 91-169 111-92; 91-169 117-45, w/ set screw No. 91-700 239-15	91-169 153-11	Presser bar
91-169 116-05	Fulcrum stud for No. 91-169 115-12	91-169 154-05	Eccentric stud for No. 91-169 118-15
91-169 117-45	Vibrating presser bracket	91-169 155-12	Vibrating presser lifting member, w/ binding screw No. 11-105 177-15
91-169 118-15	Connecting link for Nos. 91-169 117-45; 91-169 153-11	91-169 156-91	Differential top and bottom feed regulating mechanism, complete, consisting of Nos. 13-050 154-15; 91-001 723-15; 91-021 296-05; 91-069 193-15; 91-107 249-45; 91-169 157-92; 91-169 158-05; 91-169 159-05; 91-169 167-12; 91-169 168-45; 91-169 169-11; 91-169 179-92; 91-169 183-05; 91-169 184-05; 91-169 188-15; 91-169 192-05; 91-169 197-15
91-169 119-05	Fulcrum stud for Nos. 91-169 115-12; 91-169 117-45	91-169 157-92	Feed regulating shaft crank, center, w/ binding screws No. 11-105 938-15
91-169 121-01	Lifting crank for No. 91-169 113-11	91-169 158-05	Fulcrum stud for No. 91-169 157-92
		91-169 159-05	Fulcrum stud for Nos. 91-169 157-92; 91-169 167-12
		91-169 167-12	Connecting link for No. 91-169 169-11, w/ set screw No. 91-701 362-15
		91-169 168-45	Differential top feed regulating crank
		91-169 169-11	Differential feed indicator lever
		91-169 171-15	Connection for Nos. 91-069 651-12; 91-169 252-45

²⁾ If old part is returned for replacement, repair costs will be charged only.
For repair, return vibrating presser lifting assembly No. 91-169 125-91, complete.

91-169 172-05	Fulcrum stud for No. 91-169 171-15	91-700 687-15	Fastening screw for No. 91-049 093-45
91-169 179-92	Differential bottom feed regulating crank, w/ binding screw No. 11-105 938-15	91-700 691-15	Binding screw for No. 91-069 651-12
91-169 183-05	Fulcrum stud for Nos. 91-169 179-92; 91-169 252-45	91-700 785-15	Fastening screw for No. 91-069 365-12
91-169 184-05	Fulcrum stud for No. 91-169 169-11	91-701 362-15	Fastening screw for Nos. 91-069 770-04; 91-169 184-05 :
91-169 188-15	Differential feed regulating screw	91-701 364-15	Hinge screw for No. 91-169 113-11
91-169 190-91	Vibrating presser lifting eccentric assembly, w/ No. 11-330 952-15 Lifting eccentric set screw No. 14-215 013-01 Needle bearing No. 91-069 468-15 Fulcrum stud No. 91-069 478-12 Set collar No. 91-169 136-12 Feed lifting shaft crank	91-701 662-15	Nut for No. 91-169 144-05
91-169 192-05	Pressure spring for No. 91-169 188-15	99-069 707-01	Needle bearing for No. 91-169 126-12
91-169 194-12	Feed regulating shaft crank, rear, w/ binding screw No. 11-105 225-15	99-069 707-01	Needle bearing for No. 91-169 005-91 (For replacement purposes, order No. 91-169 005-91)
91-169 197-15	Washer for No. 91-169 192-05	99-069 713-01¹⁾	Needle bearing for Nos. 91-069 729-05; 91-069 732-15; 91-069 771-15
91-700 073-35	Fastening screw for No. 91-054 303-01	99-069 713-01²⁾	Needle bearing for No. 91-169 128-15
91-700 239-15	Fastening screw for No. 91-169 116-05	99-069 713-01	Needle bearing for No. 91-169 103-15 (Supplied pre-assembled only; consisting of connection No. 91-169 103-15 Fulcrum stud No. 91-169 104-04 and Fulcrum stud No. 91-069 717-04)
91-700 288-15	End screw for No. 91-069 472-91	99-069 722-01	Needle bearing for No. 91-069 714-91
		99-169 143-01	Roller for No. 91-169 144-05
		91-169 120-45	Arm (not ill.)

¹⁾ If old part is returned for replacement, repair costs will be charged only.
For repair, return top feed driving mechanism No. 91-069 386-91, complete.

²⁾ If old part is returned for replacement, repair costs will be charged only.
For repair, return vibrating presser lifting assembly No. 91-169 005-91, complete.



Nummern-Verzeichnis / Tableau des numéros / Numerical Index / Lista de números

Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.
91-026 179-45	IV	91-061 087-91	I	91-069 135-05	II	91-069 257-05	III	91-069 345-91	III
91-027 281-91	IV	91-061 337-45	I	91-069 137-35	II	91-069 259-05	III	91-069 347-91	III
91-027 285-05	IV	91-063 111-92	I	91-069 138-15	II	91-069 260-91	III	91-069 349-05	III
91-027 286-15	IV	91-069 001-45	II	91-069 139-91	II	91-069 263-91	III	91-069 350-01	III
91-027 288-15	IV	91-069 002-91	II	91-069 150-45	II	91-069 264-05	III	91-069 354-12	III
91-027 289-15	IV	91-069 005-04	I	91-069 160-04	II	91-069 270-05	III	91-069 355-12	III
91-027 291-45	IV	91-069 019-91	I	91-069 166-05	III	91-069 272-15	III	91-069 357-12	III
91-027 294-92	IV	91-069 020-91	I	91-069 167-45	IV	91-069 274-91	III	91-069 358-05	III
91-027 296-15	IV	91-069 030-91	I	91-069 170-45	IV	91-069 275-05	III	91-069 359-05	III
91-027 297-05	IV	91-069 033-05	I	91-069 172-15	IV	91-069 276-12	III	91-069 361-05	III
91-028 605-15	I	91-069 034-05	I	91-069 201-45	III	91-069 277-04	III	91-069 365-12	III
91-028 605-15	V	91-069 035-45	I	91-069 205-12	III	91-069 284-91	III	91-069 365-12	V
91-029 007-91	IV	91-069 036-05	I	91-069 208-15	III	91-069 286-12	III	91-069 366-05	III
91-029 480-91	IV	91-069 040-01	I	91-069 215-13	III	91-069 287-05	III	91-069 375-15	III
91-029 571-25	IV	91-069 043-15	I	91-069 217-05	III	91-069 288-12	III	91-069 386-91	V
91-029 601-05	IV	91-069 045-45	I	91-069 218-13	III	91-069 289-05	III	91-069 415-11	II
91-029 692-45	IV	91-069 046-05	II	91-069 220-05	III	91-069 290-91	III	91-069 416-05	III
91-029 840-91	IV	91-069 049-05	I	91-069 222-12	III	91-069 291-35	III	91-069 417-05	III
91-029 946-91	IV	91-069 056-05	I	91-069 223-05	III	91-069 296-12	III	91-069 418-12	II
91-029 960-92	IV	91-069 060-92	I	91-069 224-05	III	91-069 299-05	III	91-069 419-15	II
91-035 461-92	IV	91-069 062-45	I	91-069 225-05	III	91-069 300-45	III	91-069 420-12	III
91-046 566-21	IV	91-069 062-45	III	91-069 226-05	III	91-069 301-15	III	91-069 423-01	II
91-046 570-92	IV	91-069 066-45	II	91-069 232-01	III	91-069 302-05	III	91-069 426-92	II
91-046 571-25	IV	91-069 075-01	I	91-069 233-91	III	91-069 305-90	III	91-069 427-15	II
91-046 598-91	IV	91-069 079-92	I	91-069 235-01	III	91-069 306-45	IV	91-069 431-11	II
91-046 694-05	IV	91-069 083-05	III	91-069 236-91	III	91-069 313-05	III	91-069 434-91	I
91-047 176-04	III	91-069 095-04	V	91-069 238-91	III	91-069 314-15	III	91-069 450-91	I
91-047 303-05	V	91-069 097-05	III	91-069 239-12	III	91-069 318-91	III	91-069 452-45	I
91-047 304-05	V	91-069 102-12	I	91-069 240-05	III	91-069 319-91	III	91-069 453-05	I
91-047 523-04	III	91-169 102-12	V	91-069 241-05	III	91-069 322-11	I	91-069 456-05	I
91-047 529-03	III	91-069 103-15	II	91-069 243-12	III	91-069 323-91	I	91-069 457-05	I
91-047 532-01	V	91-069 105-35	I	91-069 244-91	III	91-069 324-05	I	91-069 458-15	I
91-048 076-04	V	91-069 106-35	I	91-069 246-05	III	91-069 324-05	V	91-069 459-15	I
91-048 527-04	III	91-069 110-45	I	91-069 250-91	III	91-069 326-15	II	91-069 460-11	I
91-049 093-45	V	91-069 119-05	V	91-069 251-15	III	91-069 328-11	IV	91-069 464-05	I
91-053 641-25	I	91-069 120-31	II	91-069 252-05	III	91-069 335-45	IV	91-069 465-35	I
91-054 001-04	I	91-069 127-05	II	91-069 253-05	III	91-069 339-91	II	91-069 466-15	I
91-054 012-03	IV	91-069 131-91	II	91-069 254-05	III	91-069 341-91	III	91-069 467-15	I
91-054 303-01	V	91-069 132-31	II	91-069 255-91	III	91-069 342-05	III	91-069 468-15	V

Nummern-Verzeichnis / Tableau des numéros / Numerical Index / Lista de números

Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.
11-084 356-15 (100 014)	IV	11-186 934-15 (701 393)	II	12-305 111-15 (69 047)	I	13-115 901-05 (69 636)	II	91-000 112-25	IV
11-105 083-15 (100 058)	I	11-205 939-35 (100 005)	II	12-305 171-15 (50 740)	V	13-250 436-05 (101 827)	I	91-000 153-15	IV
11-105 087-15 (701 395)	I	11-266 171-35 (701 367)	I	12-510 110-45 (80 145)	I	13-250 436-05 (101 827)	V	91-000 173-35	III
11-105 171-15 (100 002)	I	11-310 478-15 (100 141)	II	12-510 110-45 (80 145)	III	13-253 106-15 (101 801)	I	91-000 249-15	III
11-105 171-15 (100 002)	III	11-314 169-15 (701 316)	I	12-510 171-45 (69 402)	V	14-010 660-01 (69 209)	III	91-000 250-15	III
11-105 174-15 (701 099)	II	11-314 220-15 (701 359)	I	12-610 150-45 (69 433)	III	14-010 665-01 (69 752)	V	91-000 256-05	I
11-105 174-15 (701 099)	III	11-314 220-15 (701 359)	III	12-610 150-45 (69 433)	V	14-016 130-01 (69 649)	III	91-000 273-15	IV
11-105 177-15 (701 363)	III	11-314 280-15 (700 150)	I	12-610 170-45 (66 043)	V	14-018 572-01 (69 229)	III	91-000 390-15	III
11-105 177-15 (701 363)	V	11-314 280-15 (700 150)	II	12-610 210-45 (28 626)	I	14-018 624-91 (69 011)	II	91-000 407-15	III
11-105 222-15 (701 385)	I	11-314 280-15 (700 150)	III	12-610 220-45 (28 620)	III	14-018 644-91 (69 006)	II	91-000 452-15	III
11-105 222-15 (701 385)	IV	11-314 280-15 (700 150)	V	12-624 310-45 (69 376)	III	14-018 644-91 (69 006)	II	91-000 624-15	I
11-105 225-15 (701 365)	I	11-314 946-15 (701 314)	I	12-627 380-45 (69 207)	III	14-215 013-01 (69 479)	V	91-000 624-15	V
11-105 225-15 (701 365)	II	11-317 278-15 (701 371)	III	12-640 090-15 (53 155)	IV	14-215 016-01 (69 545)	V	91-000 678-05	III
11-105 225-15 (701 365)	III	11-317 950-15 (701 361)	I	12-640 130-55 (23 033)	I	14-218 190-01 (69 216)	III	91-000 785-15	III
11-105 225-15 (701 365)	V	11-317 950-15 (701 361)	V	12-640 150-55 (20 565)	I	14-650 214-05 (69 082)	I	91-001 179-35	I
11-105 938-15	V	11-330 085-15 (100 185)	V	12-640 150-55 (20 565)	III	14-650 214-05 (69 082)	III	91-001 723-15	V
11-106 236-15 (100 056)	I	11-330 952-15 (100 091)	III	12-640 150-55 (20 565)	V	14-680 050-15 (69 039)	II	91-002 065-05	I
11-106 257-15	IV	11-330 952-15 (100 091)	V	12-660 420-45 (69 230)	III	14-680 070-15 (69 038)	II	91-002 134-05	III
11-130 176-15 (100 018)	V	11-341 277-15 (100 138)	I	13-010 198-05 (101 800)	V	15-120 008-05 (69 353)	III	91-002 261-31	I
11-130 224-15 (100 127)	V	11-341 277-15 (100 138)	III	13-033 322-15 (1 975)	II	15-120 112-05 (69 803)	III	91-002 262-35	I
11-130 230-15 (100 220)	V	11-460 109-15 (1 435)	IV	13-050 154-05 (101 752)	III	15-128 010-75 (69 248)	III	91-004 006-05	I
11-130 566-15 (701 380)	III	11-470 355-25 (1 417)	IV	13-050 154-15 (101 752)	V	15-128 060-75 (69 249)	III	91-004 181-05	III
11-133 538-15 (100 081)	III	11-470 364-25 (1 426)	IV	13-052 256-05 (101 784)	IV	15-718 050-51 (69 360)	III	91-006 584-05	I
11-133 544-15 (100 179)	III	12-005 195-15 (701 713)	II	13-052 256-15 (101 784)	II	15-718 050-51 (69 360)	V	91-006 813-15	I
11-174 088-35 (100 188)	II	12-024 171-15 (101 501)	II	13-060 400-05 (101 824)	III	16-046 030-01 (69 126)	II	91-006 814-05	I
11-178 166-15 (100 060)	V	12-024 171-15 (101 501)	III	13-063 313-15 (101 753)	IV	16-049 020-01 (69 281)	II	91-006 818-05	I
11-178 166-35 (100 060)	I	12-024 172-15 (101 500)	II	13-068 187-15 (630 212)	II	16-414 139-55 (98 248)	IV	91-009 026-05	III
11-178 289-15 (100 035)	II	12-024 191-15 (701 635)	V	13-070 268-15 (101 759)	IV	91-000 073-35	I	91-009 033-05	III
								91-009 035-35	I
								91-009 048-01	III
								91-009 069-05	III
								91-009 074-05	III
								91-009 075-05	III
								91-009 076-91	III
								91-020 400-35	I
								91-021 296-05	V
								91-025 911-21	IV
								91-026 110-25	IV

Nummern-Verzeichnis / Tableau des numéros / Numerical Index / Lista de números

Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.
91-069 469-35	I	91-069 723-12	V	91-169 102-91	V	91-169 171-15	V	91-701 364-15	V
91-069 470-35	I	91-069 729-05	V	91-169 103-15	V	91-169 172-05	V	91-701 368-15	III
91-069 471-35	I	91-069 730-05	V	91-169 104-04	V	91-169 175-04	III	91-701 370-15	II
91-069 472-91	V	91-069 732-15	V	91-169 105-91	V	91-169 177-01	III	91-701 372-15	III
91-069 478-12	V	91-069 733-12	V	91-169 109-04	V	91-169 179-92	V	91-701 378-15	II
91-069 543-91	I	91-069 735-05	V	91-169 110-92	V	91-169 183-05	V	91-701 378-15	IV
91-069 547-11	III	91-069 742-35	IV	91-169 111-92	V	91-169 184-05	V	91-701 515-35	IV
91-069 553-05	III	91-069 745-92	II	91-169 113-11	V	91-169 188-15	V	91-701 662-15	V
91-069 556-91	I	91-069 746-15	II	91-169 114-91	V	91-169 190-91	V	93-513 523-05	II
91-069 557-05	I	91-069 759-91	III	91-169 115-12	V	91-169 192-05	V	93-513 759-60	IV
91-069 558-01	I	91-069 768-05	III	91-169 116-05	V	91-169 194-12	V	99-069 707-01	V
91-069 562-45	I	91-069 770-04	V	91-169 117-45	V	91-169 197-15	V	99-069 713-01	V
91-069 568-15	I	91-069 771-15	V	91-169 118-15	V	91-169 252-45	V	99-069 722-01	V
91-069 579-05	I	91-069 785-01	II	91-169 119-05	V	91-169 254-91	V	99-169 143-01	V
91-069 584-45	I	91-069 794-91	I	91-169 120-45	V	91-169 302-91	II	99-630 264-05	III
91-069 585-35	IV	91-069 795-05	I	91-169 121-01	V	91-169 304-15	II		
91-069 633-91	II	91-069 800-05	V	91-169 125-91	V	91-169 332-10	III		
91-069 634-92	II	91-069 964-15	III	91-169 126-12	V	91-700 073-35	V		
91-069 635-35	II	91-098 827-15	I	91-169 128-15	V	91-700 239-15	V		
91-069 637-35	I	91-100 055-15	II	91-169 129-14	V	91-700 243-15	I		
91-069 642-05	III	91-100 061-15	I	91-169 135-12	V	91-700 288-15	V		
91-069 643-04	II	91-100 076-15	III	91-169 136-12	V	91-700 335-15	II		
91-069 644-93	II	91-100 092-15	III	91-169 137-05	V	91-700 335-35	I		
91-069 645-04	III	91-100 107-15	I	91-169 140-05	V	91-700 364-15	I		
91-069 646-04	III	91-100 108-15	I	91-169 144-05	V	91-700 510-15	II		
91-069 647-12	III	91-100 117-15	I	91-169 145-91	V	91-700 510-15	III		
91-069 648-93	III	91-100 240-15	III	91-169 146-05	V	91-700 687-15	V		
91-069 650-45	V	91-100 242-15	III	91-169 149-15	V	91-700 691-15	V		
91-069 651-12	V	91-101 756-05	II	91-169 150-05	V	91-700 785-15	III		
91-069 654-01	V	91-101 758-15	II	91-169 151-05	V	91-700 785-15	IV		
91-069 657-05	V	91-105 442-15	II	91-169 153-11	V	91-700 785-15	V		
91-069 660-15	I	91-105 447-15	I	91-169 154-05	V	91-701 329-15	I		
91-069 660-15	V	91-106 289-05	I	91-169 155-12	V	91-701 360-15	I		
91-069 661-15	I	91-107 249-45	V	91-169 157-92	V	91-701 360-15	III		
91-069 714-91	V	91-107 850-92	V	91-169 158-05	V	91-701 362-15	I		
91-069 717-04	V	91-169 005-91	V	91-169 159-05	V	91-701 362-15	II		
91-069 718-05	V	91-169 058-15	III	91-169 166-15	I	91-701 362-15	III		
91-069 719-05	V	91-169 059-15	III	91-169 167-12	V	91-701 362-15	V		
91-069 721-12	V	91-169 082-91	V	91-169 169-11	V	91-701 364-15	I		

Nummern-Verzeichnis / Tableau des numéros / Numerical Index / Lista de números

Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.	Nr./no/No.	Fig.
11-105 083-15 (100 058)	4	12-640 070-55 (61 815)	4	91-069 397-15 (50-1909-4010)	4	91-169 204-15	4	91-169 265-12	4
11-105 174-15 (701 099)	8	12-640 130-55 (23 033)	2	91-069 670-04	4	91-169 206-05	2	91-169 268-15	4
11-105 222-15 (701 385)	2	12-640 130-55 (23 033)	4	91-069 672-91	4	91-169 207-05	4	91-169 269-15	4
11-105 222-15 (701 385)	4	12-640 150-55 (20 565)	2	91-069 679-05	2	91-169 208-92	2	91-169 270-91	4
11-105 225-15 (701 365)	2	12-640 150-55 (20 565)	4	91-069 683-12	2	91-169 210-91	2	91-169 271-11	4
11-105 225-15 (701 365)	4	12-640 170-55 (50 077)	8	91-069 686-05	2	91-169 212-05	2	91-169 273-15	4
11-105 290-15 (100 101)	4	12-640 210-55 (16 328)	2	91-069 687-12	2	91-169 213-15	2	91-169 285-91	8
11-105 935-15 (100 219)	2	12-660 420-45 (69 230)	4	91-069 689-05	2	91-169 214-91	2	91-169 286-15	8
11-106 317-15 (100 201)	2	13-030 095-15 (4 068)	8	91-069 697-05	2	91-169 217-15	2	91-169 287-15	8
11-130 224-15 (100 127)	2	13-033 190-05 (101 809)	4	91-069 870-91	2	91-169 218-05	2	91-169 288-15	8
11-174 088-15 (100 188)	4	13-033 244-05 (101 772)	8	91-069 871-11	2	91-169 219-05	2	91-169 289-05	8
11-186 934-15 (701 393)	4	13-050 154-05 (101 752)	4	91-069 875-05	2	91-169 220-01	2	91-169 303-91	4
11-205 038-15 (701 293)	4	13-052 097-15 (101 781)	4	91-069 886-15	4	91-169 225-15	2	91-169 305-11	8
11-314 286-15 (700 230)	8	13-052 256-15 (101 784)	2	91-069 887-05	4	91-169 227-92	2	91-169 309-91	8
11-317 278-15 (701 371)	2	14-018 572-01 (69 229)	4	91-069 888-91	4	91-169 229-05	2	91-169 312-15	8
11-317 950-15 (701 361)	8	14-218 020-05 (169 238)	2	91-069 890-15	4	91-169 231-15	2	91-169 313-91	8
11-330 280-15 (701 305)	4	14-650 214-05 (69 082)	4	91-069 900-92	4	91-169 232-05	2	91-169 314-15	8
11-330 952-15 (100 091)	2	91-000 249-15	4	91-069 932-12	4	91-169 233-11	2	91-169 315-05	8
11-330 952-15 (100 091)	4	91-000 250-15	4	91-069 947-11	2	91-169 234-15	2	91-169 316-05	8
11-341 283-15 (100 137)	2	91-000 390-15	4	91-069 948-15	4	91-169 236-12	2	91-700 510-15	4
12-005 151-15 (701 663)	4	91-002 134-05	4	91-069 954-15	4	91-169 236-15	2	91-700 689-15	4
12-005 195-15 (701 713)	2	91-009 026-05	4	91-069 955-05	4	91-169 239-14	4	91-700 689-15	8
12-005 195-15 (701 713)	8	91-009 048-01	4	91-069 960-91	4	91-169 240-91	4	91-701 362-15	2
12-024 171-15 (101 501)	2	91-012 526-05	8	91-069 961-05	4	91-169 241-91	4		
12-305 171-15 (50 740)	8	91-027 285-05	4	91-069 962-15	4	91-169 242-05	4		
12-501 190-45	2	91-032 087-45	4	91-069 963-15	4	91-169 243-05	8		
12-610 230-45 (11 176)	2	91-069 220-05	4	91-069 965-15	2	91-169 244-91	4		
12-618 240-45 (169 253)	4	91-069 222-12	4	91-069 966-15	2	91-169 245-91	4		
		91-069 223-05	4	91-097 851-91	8	91-169 248-05	4		
		91-069 226-05	4	91-100 143-15	4	91-169 249-05	4		
		91-069 231-05	4	91-100 208-15	4	91-169 250-15	4		
		91-069 232-01	4	91-100 239-15	2	91-169 251-15	4		
				91-100 247-15	8	91-169 255-91	4		
				91-100 259-15	4	91-169 256-12	4		
				91-101 808-05	2	91-169 258-05	4		
				91-106 182-05	4	91-169 259-92	4		
				91-169 201-91	2	91-169 260-05	4		
				91-169 202-91	2	91-160 262-05	4		
				91-169 203-45	2	91-169 264-91	4		




Spare Parts Catalogue

Subcl. -431

**Trimming Mechanism
for Pfaff 461; 463; 469**

PFAFF INDUSTRIEMASCHINEN GMBH KAISERSLAUTERN

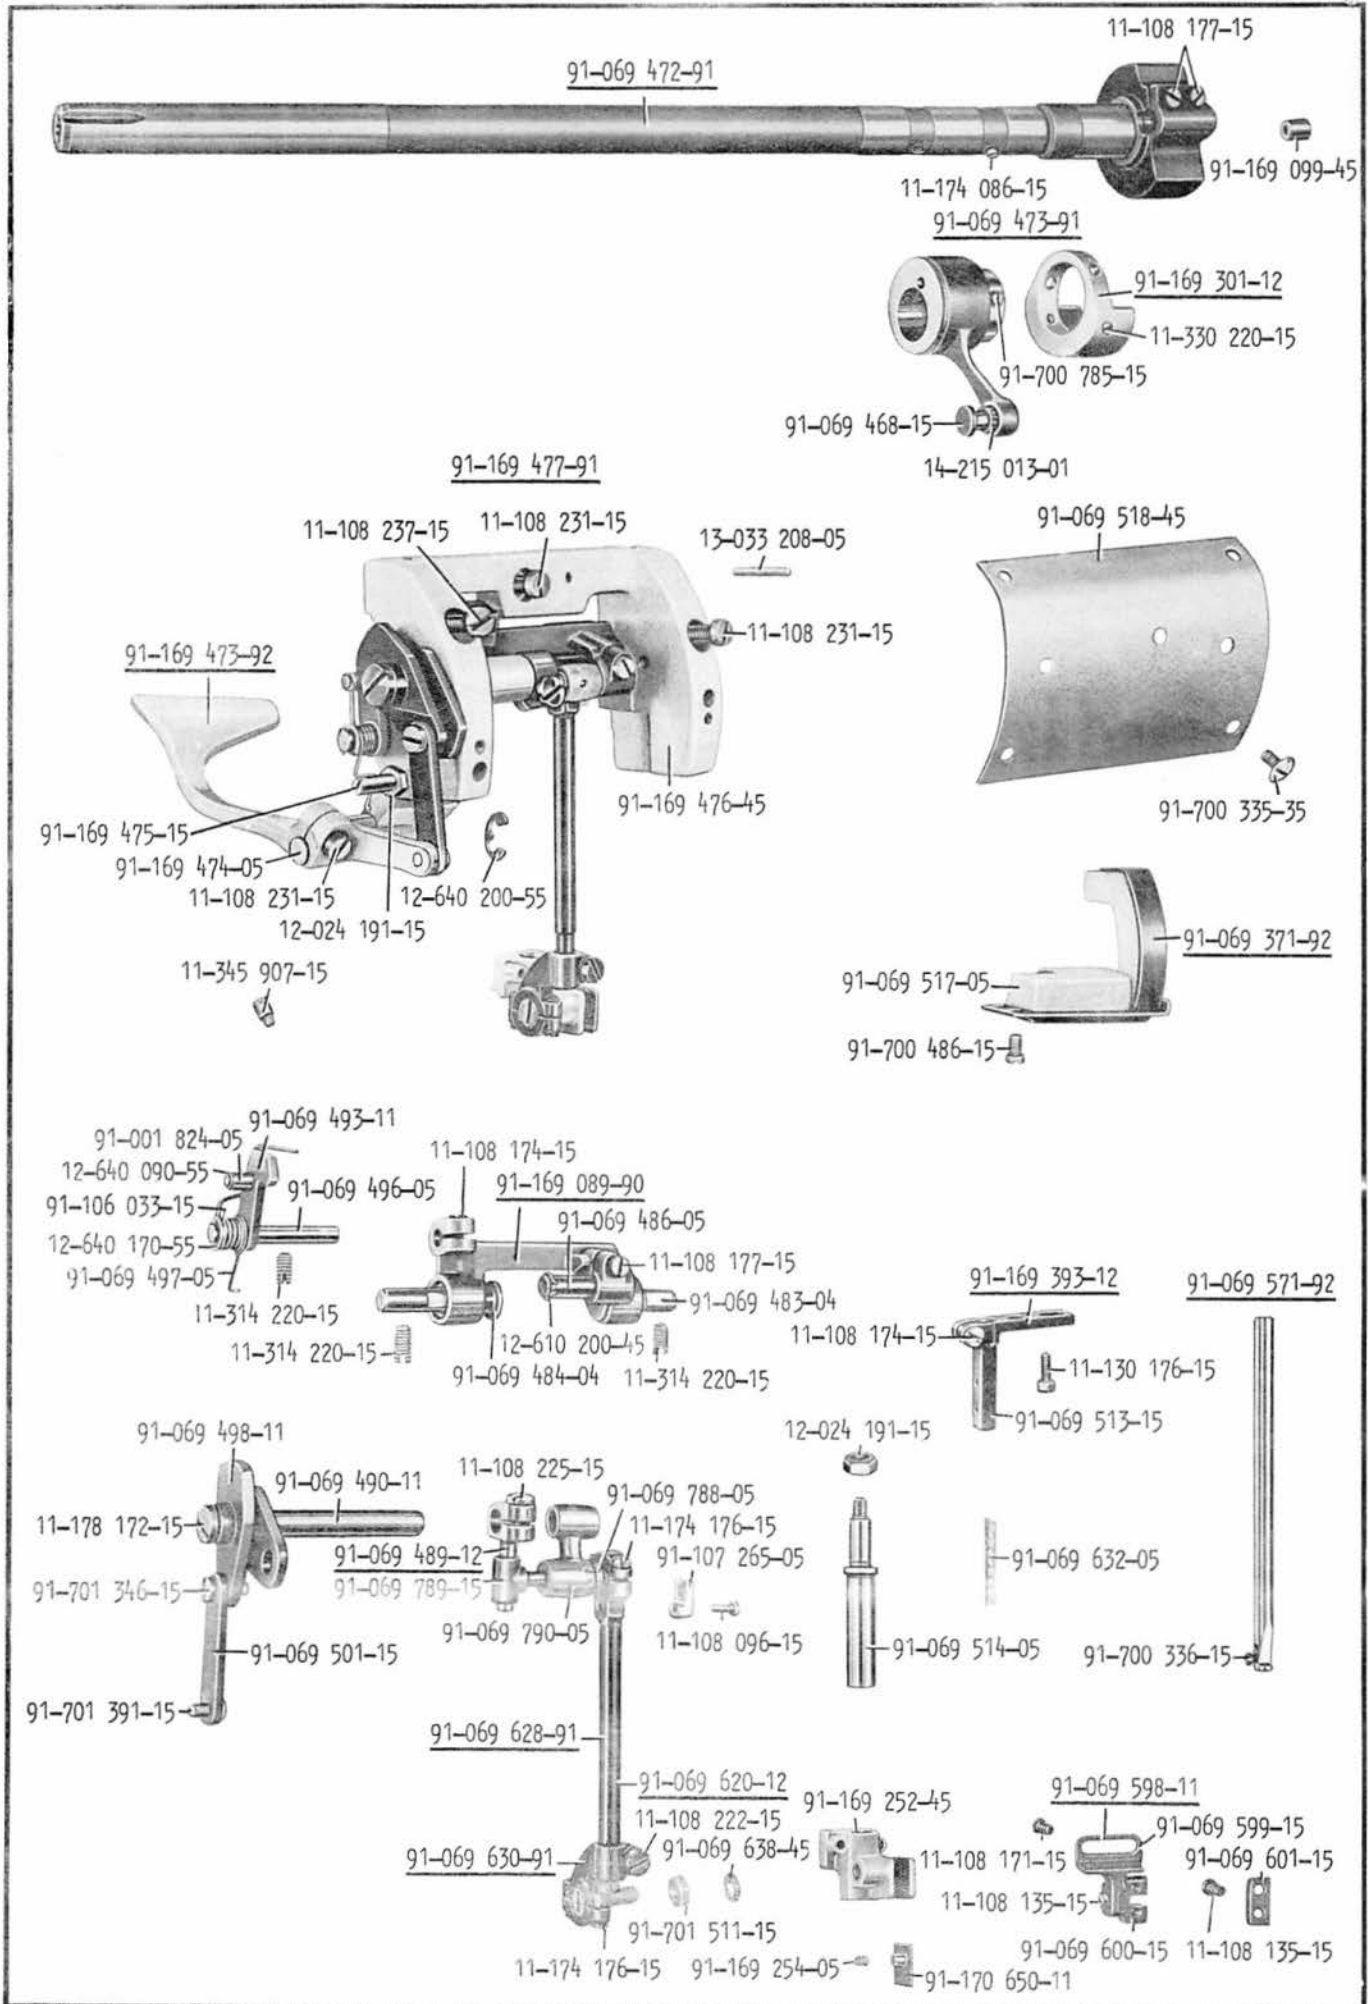

Subcl. -431 Trimming Mechanism for Pfaff 461

11-108 096-15	Fastening screw (A M 3x8 DIN 84-8.8) for No.91-107 265-05
11-108 135-15	Fastening screw (A M 3.5x8 DIN 84-8.8) for Nos.91-069 600-15; 91-069 601-15
11-108 171-15	Fastening screw (A M 4x6 DIN 84-8.8) for No.91-069 599-15
11-108 174-15	Binding screw (A M 4x8 DIN 84-8.8) for Nos.91-169 089-90; 91-169 393-12
11-108 177-15	Binding screw (A M 4x10 DIN 84-8.8) for Nos.91-069 472-91; 91-169 089-90
11-108 222-15	Binding screw (A M 5x8 DIN 84-8.8) for No.91-069 630-91
11-108 225-15	Binding screw (A M 5x10 DIN 84-8.8) for No.91-069 489-12
11-108 231-15	Binding screw (A M 5x15 DIN 84-8.8) for No.91-169 473-92 and set screw for No.91-169 476-45
11-108 237-15	Fastening screw (A M 5x18 DIN 84-8.8) for No.91-169 476-45
11-130 176-15	Fastening screw (M 4x10 DIN 912-8.8) for No.91-169 393-12
11-174 086-15	End screw (M 3x4 DIN 920-5.8) for No.91-069 472-91
11-174 176-15	Fastening screw (M 4x10 DIN 920-8.8) for Nos.91-069 620-12; 91-069 630-91
11-178 172-15	End screw (M 4x8 DIN 921-5.8) for No.91-069 498-11
11-314 220-15	Fastening screw (M 5x8 DIN 438-5.8) for Nos.91-069 483-04; 91-069 484-04; 91-069 496-05
11-330 220-15	Fastening screw (A M 5x8 DIN 913-10.9) for No.91-169 301-12
11-345 907-15	Stop screw (M 4x6x4 DIN 927-5.8) for No.91-069 503-05 (see No.91-169 474-05)
12-024 191-15	Nut (M 6 DIN 934-8) for Nos.91-069 514-05; 91-169 475-15
12-610 200-45	Circlip (7x0.8 DIN 471) for No.91-069 486-05
12-640 090-55	Slip washer (2.3 DIN 6799) for No.91-001 824-05
12-640 170-55	Slip washer (5 DIN 6799) for Nos.91-069 496-05; 91-069 497-05
12-640 200-55	Slip washer (7 DIN 6799) for No.91-169 474-05
13-033 208-05	Positioning pin (3 m 6x24 DIN 6325) for No.91-169 476-45
14-215 013-01	Needle bearing for No.91-069 468-15
91-001 824-05	Roller for No.91-069 493-11
<u>91-069 371-92</u>	Oil guard, w/ oil pad No.91-069 517-05
91-069 468-15	Fulcrum stud for No.91-069 473-91
<u>91-069 472-91</u>	Arm shaft, w/ crank and No.11-108 177-15 Binding screw No.91-169 099-45 Oil cup

Subcl. -431 Trimming Mechanism for Pfaff 461

- 91-069 473-91 Knife driving eccentric connection, compl., consisting of:
 No.14-215 013-01 Needle bearing
 No.14-215 304-01¹⁾Knife driving eccentric needle bearing
 No.91-069 444-92¹⁾Knife driving eccentric, w/
 set screw No.91-700 785-15
 No.91-069 468-15 Fulcrum stud
 No.91-069 475-15¹⁾Knife driving eccentric connection
 No.91-069 476-05 Gasket for No.14-215 304-01
 No.91-169 301-12 Set collar
¹⁾Cannot be replaced.
 For replacement purposes, order No.91-069 473-91
- 91-069 483-04 Fulcrum stud, right, for No.91-169 089-90
 (Orders should specify number of dots;
 1; 2; 3 or 4)
- 91-069 484-04 Fulcrum stud, left, for No.91-169 089-90
 (Orders should specify number of dots;
 1; 2; 3 or 4)
- 91-069 486-05 Hinge stud for No.91-069 790-05
 (For replacement purposes, order No.91-069 628-91)
- 91-069 489-12 Guide stud, w/ binding screw No.11-108 225-15,
 for No.91-069 789-15
- 91-069 490-11 Knife engaging and disengaging shaft
 for Nos.91-069 489-12; 91-069 498-11
- 91-069 493-11 Interlocking latch for No.91-069 490-11
- 91-069 496-05 Fulcrum stud for Nos.91-069 493-11; 91-069 497-05
- 91-069 497-05 Torsion spring for No.91-069 493-11
- 91-069 498-11 Interlocking latch cam for Nos.91-069 490-11;
 91-069 501-15
- 91-069 501-15 Connecting link for Nos.91-069 498-11; 91-169 473-92
- 91-069 513-15 Guide stud for No.91-169 252-45
- 91-069 514-05 Guide stud for No.91-169 252-45
- 91-069 517-05 Oil pad for No.91-069 371-92
- 91-069 518-45 Arm cover
- 91-069 571-92 Needle bar, w/
 needle set screw No.91-700 336-15
- 91-069 598-11 Knife holder, compl.,
 consisting of Nos.11-108 135-15; 91-069 599-15;
 91-069 600-15; 91-069 601-15
- 91-069 599-15 Knife holder, adjustable
- 91-069 600-15 Knife jaw, adjustable
- 91-069 601-15 Knife jaw
- 91-069 620-12 Ball joint connection, w/
 set screw No.11-174 176-15
 (For replacement purposes, order No.91-069 628-91)
- 91-069 628-91 Ball joint connection, w/ connecting link, compl.,
 consisting of Nos.11-108 096-15; 91-069 486-05;
 91-069 620-12; 91-069 788-05; 91-069 789-15;
 91-069 790-05; 91-107 265-05
- 91-069 630-91 Ball joint, w/ ball screw stud and
 No.11-108 222-15 Binding screw
 No.11-174 176-15 Set screw
- 91-069 632-05 Oil wick, 2 mm dia., 65 mm long, for No.91-069 513-15
- 91-069 638-45 Slip washer for No.91-701 511-15
- 91-069 788-05 Ball stud for No.91-069 620-12
 (For replacement purposes, order No.91-069 628-91)

Subcl. -431 Trimming Mechanism for Pfaff 461

- 91-069 789-15 Guide stud for No.91-069 489-12
(For replacement purposes, order No.91-069 628-91)
- 91-069 790-05 Connecting link for Nos.91-069 486-05;
91-069 788-05
(For replacement purposes, order No.91-069 628-91)
- 91-106 033-15 Washer for No.91-069 497-05
- 91-107 265-05 Guide fork for No.91-069 620-12
- 91-169 089-90 Connection, w/ needle bearing and
No.11-108 174-15 Binding screw
No.11-108 177-15 Binding screw
No.91-069 483-04 Fulcrum stud, right
No.91-069 484-04 Fulcrum stud, left
- 91-169 099-45 Oil cup for No.91-069 472-91
- 91-169 252-45 Knife holder bracket
(previous version, w/o thrust washer No.91-170 650-11,
has been replaced by Nos.91-169 252-45; 91-169 254-05;
91-169 393-12; 91-170 650-11)
- 91-169 254-05 Pressure spring for No.91-170 650-11
- 91-169 301-12 Set collar, w/ set screw
No.11-330 220-15, for No.91-069 473-91
- 91-169 393-12 Guide stud bracket, w/ binding screw No.11-108 174-15
(previous version, w/o thrust washer No.91-170 650-11,
has been replaced by Nos.91-169 252-45; 91-169 254-05;
91-169 393-12; 91-170 650-11)
- 91-169 473-92 Shift lever, w/ binding screw No.11-108 231-15
(previous version No.91-169 359-92, w/o stop pin
No.91-169 475-15, not ill.)
- 91-169 474-05 Shift lever hinge stud
(previous version No.91-069 503-05, w/
stop screw No.11-345 907-15, not ill.)
- 91-169 475-15 Stop pin for No.91-169 473-92
- 91-169 476-45 Knife driving shaft bracket
(previous version No.91-069 481-45, w/o
stop pin No.91-169 475-15, not ill.)
- 91-169 477-91 Knife drive assembly, compl.,
consisting of Nos.11-178 172-15; 11-314 220-15;
12-024 191-15; 12-610 200-45; 12-640 090-55;
12-640 170-55; 12-640 200-55; 91-001 824-05;
91-069 489-12; 91-069 490-11; 91-069 493-11;
91-069 496-05; 91-069 497-05; 91-069 498-11;
91-069 501-15; 91-069 628-91; 91-069 630-91;
91-069 638-45; 91-106 033-15; 91-169 089-90;
91-169 252-45; 91-169 473-92; 91-169 474-05;
91-169 475-15; 91-169 476-45; 91-701 346-15;
91-701 391-15; 91-701 511-15
- 91-170 650-11 Thrust washer for No.91-169 252-45
- 91-700 335-35 Fastening screw for No.91-069 518-45
- 91-700 336-15 Needle set screw
- 91-700 486-15 Fastening screw for No.91-069 371-92
- 91-700 785-15 Fastening screw for knife driving eccentric
- 91-701 346-15 Driving screw for Nos.91-069 490-11; 91-069 498-11
- 91-701 391-15 Hinge screw for Nos.91-069 501-15; 91-169 473-92
- 91-701 511-15 Nut for No.91-069 630-91

91-169 395-04



91-069 595-04



91-069 596-03



91-054 408-03




91-055 192-25



91-047 467-04




91-048 708-93

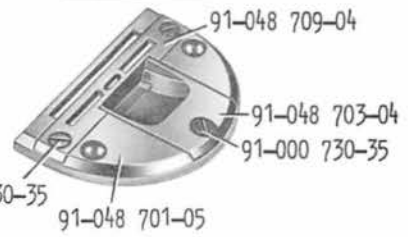

91-047 467-04




91-048 710-93

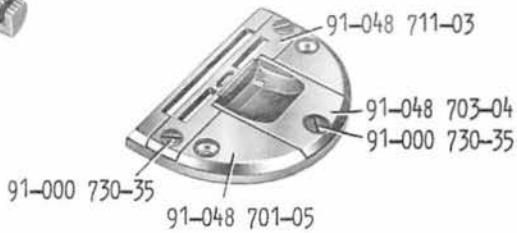

91-047 468-04




91-048 713-93

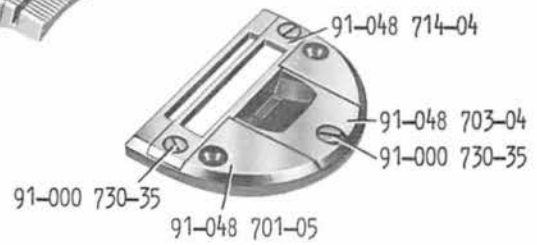

91-047 468-04




91-048 715-93

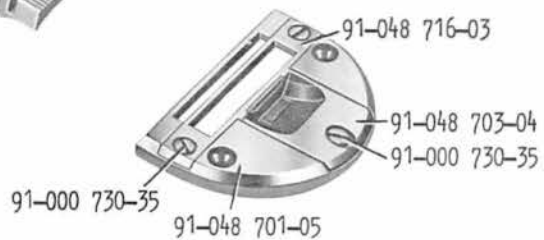

91-047 292-04





91-048 774-93

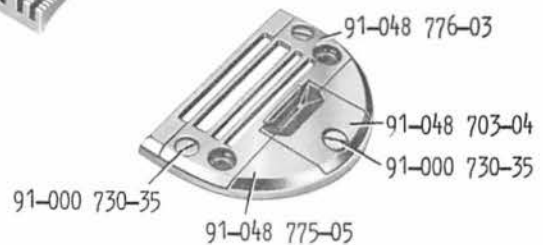

Subcl. -431 Trimming Mechanism for Pfaff 461

S = Trimming Margin

- 91-000 730-35 Fastening screw for Nos.91-048 703-04;
91-048 709-04; 91-048 711-03; 91-048 714-04;
91-048 716-03; 91-048 776-03
- 91-047 292-04 x S x Model
Feed dog for No.91-048 774-93
- 91-047 467-04 x S x Model
Feed dog for Nos.91-048 708-93; 91-048 710-93
- 91-047 468-04 x S x Model
Feed dog for Nos.91-048 713-93; 91-048 715-93
- 91-048 701-05 Needle plate for Nos.91-048 708-93; 91-048 710-93;
91-048 713-93; 91-048 715-93
- 91-048 703-04 x S Cover plate for Nos.91-048 708-93;
91-048 710-93; 91-048 713-93; 91-048 715-93;
91-048 774-93
- 91-048 708-93 x S x Model
Needle plate, compl., (S = 2.5 - 3.5 mm, -431/01; -431/03)
consisting of Nos.91-000 730-35; 91-048 701-05;
91-048 703-04; 91-048 709-04
- 91-048 709-04 x S x Model
Needle plate insert for No.91-048 708-93
- 91-048 710-93 x S x Model
Needle plate, compl., (S = 2.5 - 3.5 mm, -431/02; -431/07)
consisting of Nos.91-000 730-35; 91-048 701-05;
91-048 703-04; 91-048 711-03
- 91-048 711-03 x S x Model
Needle plate insert for No.91-048 710-93
- 91-048 713-93 x S Needle plate, compl.,
(S = 4.0 - 7.0 mm, -431/04; -431/06)
consisting of Nos.91-000 730-35; 91-048 701-05;
91-048 703-04; 91-048 714-04
- 91-048 714-04 x S Needle plate insert for No.91-048 713-93
- 91-048 715-93 x S Needle plate, compl.,
(S = 4.0 - 7.0 mm, -431/05; -431/08)
consisting of Nos.91-000 730-35; 91-048 701-05;
91-048 703-04; 91-048 716-03
- 91-048 716-03 x S Needle plate insert for No.91-048 715-93
- 91-048 774-93 x S Needle plate compl.,
(S = 8.0 - 12.0 mm, -431/05; -431/08)
consisting of Nos.91-000 730-35; 91-048 703-04;
91-048 775-05; 91-048 776-03
- 91-048 775-05 Needle plate for No.91-048 774-93
- 91-048 776-03 x S Needle plate insert for No.91-048 774-93
- 91-054 408-03 x S x Model
Presser foot (-431/01; -431/03; -431/04; -431/06)
No.91-054 426-03 x S x Model
Presser foot (-431/02; -431/05;
-431/07; -431/08), not ill.
- 91-055 192-25 Finger guard (up to 5 mm S)
No.91-055 189-25 Finger guard (over 5 mm S), not ill.
- 91-069 595-04 x Trimming width: 5, 7 and 9 mm,
Knife (S = 3.0 - 12.0 mm, -431/01; -431/02; -431/04; -431/05)
- 91-069 596-03 x Trimming width: 5, 7 and 9 mm,
Knife (-431/03; -431/06; -431/07; -431/08)
- 91-169 395-04 x Trimming width: 5, 7 and 9 mm,
Knife (S = 2.5 mm, -431/01; -431/02)
- 99-029 728-05 Knife grinder

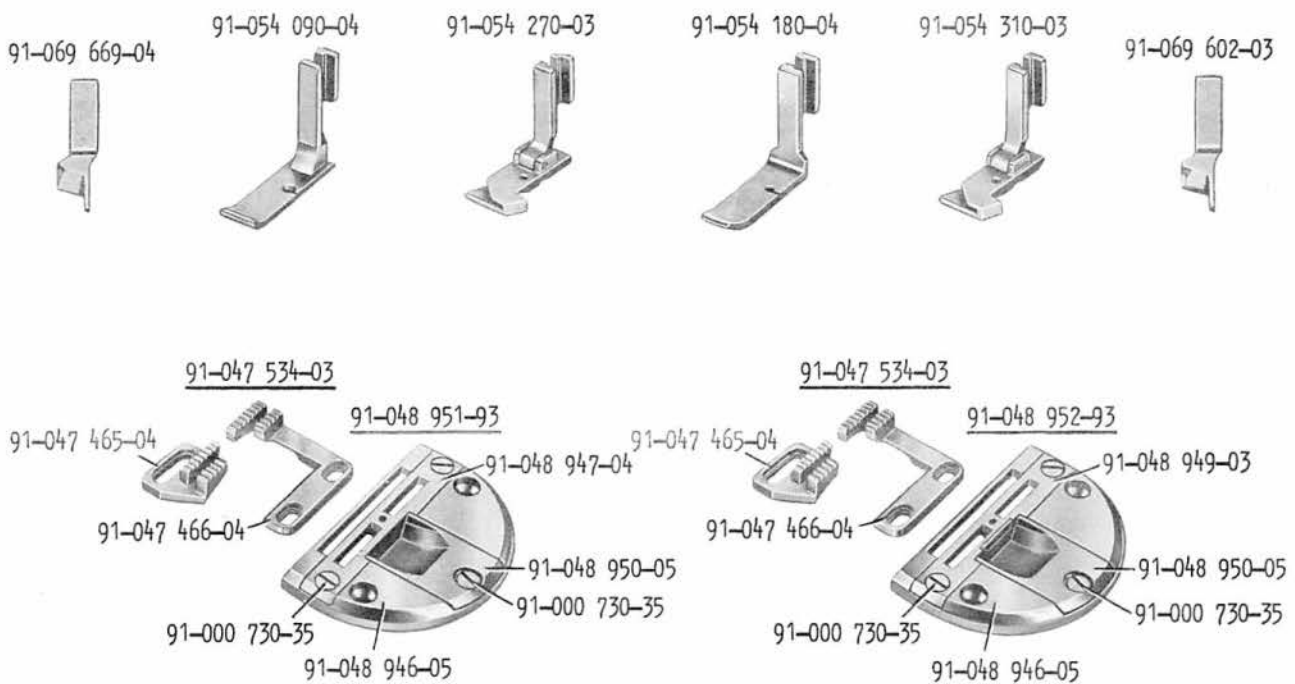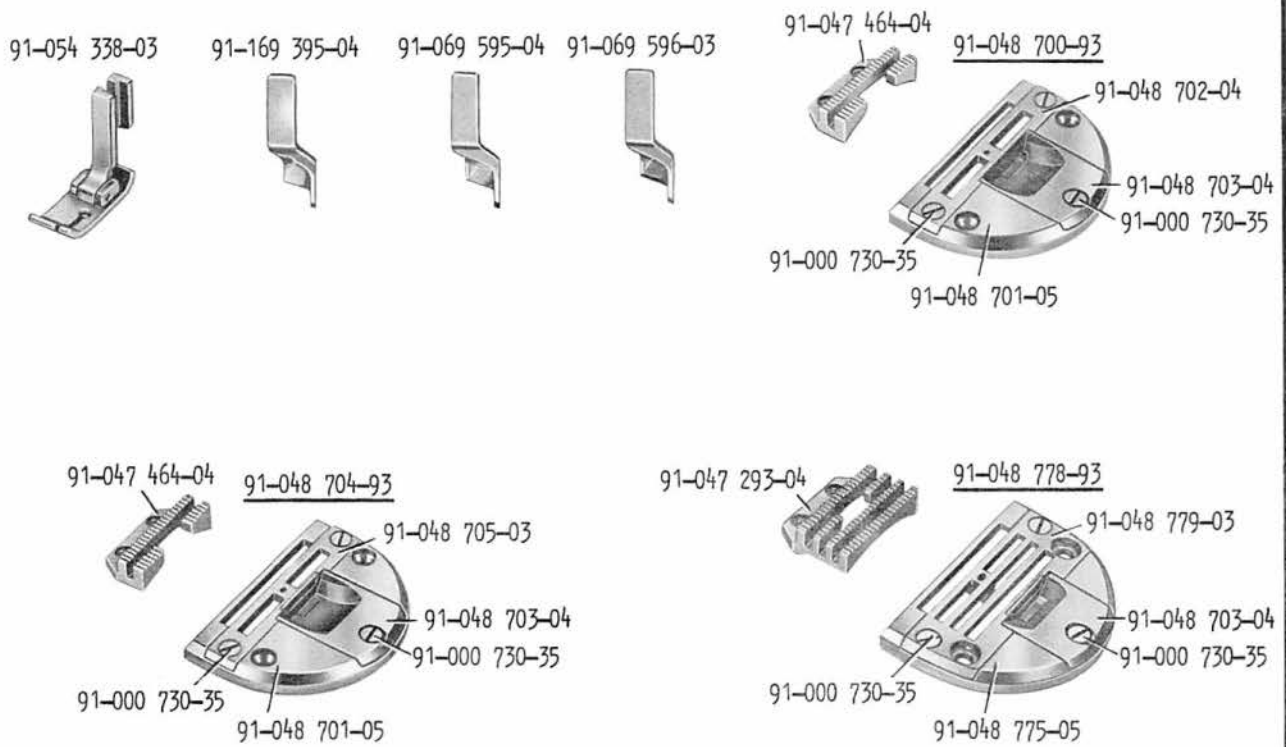

Complementary Parts of Subcl. -431 Trimming Mechanism for the Pfaff 463
(For standard parts, please refer to the Subcl. -431 trimming mechanism for the Pfaff 461)

S = Trimming Margin

91-000 730-35 Fastening screw for Nos.91-048 702-04; 91-048 703-04; 91-048 705-03; 91-048 779-03	91-048 705-03 x S x Model Needle plate insert for No.91-048 704-93
91-047 293-04 x S x Model Feed dog (S = 10.0 - 12.0 mm) for No.91-048 778-93	91-048 775-05 Needle plate for No.91-048 778-93
91-047 464-04 x S x Model Feed dog (S = 2.5 - 8.0 mm) for Nos.91-048 700-93; 91-048 704-93; 91-048 778-93	<u>91-048 778-93</u> x S x Model Needle plate, compl., (S = 8.0 - 12.0 mm, -431/02; -431/04) consisting of Nos.91-000 730-35; 91-048 703-04; 91-048 775-05; 91-048 779-03
<u>91-048 700-93</u> x S x Model Needle plate, compl., (S = 2.5 - 7.0 mm, -431/01; -431/03) consisting of Nos.91-000 730-35; 91-048 701-05; 91-048 702-04; 91-048 703-04	91-048 779-03 x S x Model Needle plate insert for No.91-048 778-93
91-048 701-05 Needle plate for Nos.91-048 700-93; 91-048 704-93	91-054 338-03 x S x Model Presser foot (-431/02; -431/04) No.91-054 336-03 x S x Model Presser foot (-431/01; -431/03), not ill.
91-048 702-04 x S x Model Needle plate insert for No.91-048 700-93	91-069 595-04 x Trimming width: 5, 7, 9 mm, Knife (S = 3.0 - 12.0 mm, -431/01; -431/02)
91-048 703-04 x S Cover plate for Nos.91-048 700-93; 91-048 704-93; 91-048 778-93	91-069 596-03 x Trimming width: 5, 7, 9 mm Knife (-431/03; -431/04)
<u>91-048 704-93</u> x S x Model Needle plate, compl., (S = 2.5 - 7.0 mm, -431/02; -431/04) consisting of Nos.91-000 730-35; 91-048 701-05; 91-048 703-04; 91-048 705-03	91-169 395-04 x Trimming width: 5, 7, 9 mm Knife (S = 2.5 mm, -431/01; -431/02)

Complementary Parts of Subcl. -431 Trimming Mechanism for the Pfaff 469
(For standard parts, please refer to the Subcl. -431 trimming mechanism for the Pfaff 461)

S = Trimming Margin

91-000 730-35 Fastening screw for Nos.91-048 947-04; 91-048 949-03; 91-048 950-05	<u>91-048 952-93</u> x S x Model Needle plate, compl., (S = 2.5 - 7.0 mm, -431/02; -431/04) consisting of Nos.91-000 730-35; 91-048 946-05; 91-048 949-03; 91-048 950-05
91-047 465-04 x S x Model Feed dog, left	91-054 090-04 x S x Model Presser foot (-431/01; -431/03)
91-047 466-04 x S x Model Feed dog, right	91-054 180-04 x S x Model Presser foot (-431/02; -431/04)
<u>91-047 534-03</u> x S x Model Feed dog assembly, compl., for Nos.91-048 951-93; 91-048 952-93 consisting of Nos.91-047 465-04; 91-047 466-04	91-054 270-03 x S x Model Gathering foot (-431/01; -431/03)
91-048 946-05 Needle plate for Nos.91-048 951-93; 91-048 952-93	91-054 310-03 x S x Model Gathering foot (-431/02; -431/04)
91-048 947-04 x S x Model Needle plate insert for No.91-048 951-93	91-069 602-03 x Trimming width: 5, 7, 9 mm, Knife (S = 2.5 - 7.0 mm, -431/02; -431/04)
91-048 949-03 x S x Model Needle plate insert for No.91-048 952-93	91-069 669-04 x Trimming width: 5, 7, 9 mm Knife (S = 2.5 - 7.0 mm, -431/01; -431/02)
91-048 950-05 Cover plate for Nos.91-048 951-93; 91-048 952-93	
<u>91-048 951-93</u> x S x Model Needle plate, compl., (S = 2.5 - 7.0 mm, -431/01; -431/03) consisting of Nos.91-000 730-35; 91-048 946-05; 91-048 947-04; 91-048 950-05	

Nummern-Verzeichnis / Tableau des numéros / Numerical Index / Lista de números

Nr./nº/No.	Fig.	Nr./nº/No.	Fig.	Nr./nº/No.	Fig.	Nr./nº/No.	Fig.	Nr./nº/No.	Fig.
11-108 096-15	3	91-047 468-04	7	91-054 270-03	9	91-069 599-15	4	91-700 785-15	5
11-108 135-15	3	91-047 534-03	9	91-054 310-03	9	91-069 600-15	4	91-701 346-15	5
11-108 171-15	3	91-048 700-93	9	91-054 336-03	9	91-069 601-15	4	91-701 391-15	5
11-108 174-15	3	91-048 701-05	7	91-054 338-03	9	91-069 602-03	9	91-701 511-15	5
11-108 177-15	3	91-048 701-05	9	91-054 408-03	7	91-069 620-12	4	99-029 728-05	7
11-108 222-15	3	91-048 702-04	9	91-054 426-03	7	91-069 628-91	4		
11-108 225-15	3	91-048 703-04	7	91-055 189-25	7	91-069 630-91	4		
11-108 231-15	3	91-048 703-04	9	91-055 192-25	7	91-069 632-05	4		
11-108 237-15	3	91-048 704-93	9	91-069 371-92	3	91-069 638-45	4		
11-130 176-15	3	91-048 705-03	9	91-069 468-15	3	91-069 669-04	9		
11-174 086-15	3	91-048 708-93	7	91-069 472-91	3	91-069 788-05	4		
11-174 176-15	3	91-048 709-04	7	91-069 473-91	4	91-069 789-15	5		
11-178 172-15	3	91-048 710-93	7	91-069 483-04	4	91-069 790-05	5		
11-314 220-15	3	91-048 711-03	7	91-069 484-04	4	91-106 033-15	5		
11-330 220-15	3	91-048 713-93	7	91-069 486-05	4	91-107 265-05	5		
11-345 907-15	3	91-048 714-04	7	91-069 489-12	4	91-169 089-90	5		
12-024 191-15	3	91-048 715-93	7	91-069 490-11	4	91-169 099-45	5		
12-610 200-45	3	91-048 716-03	7	91-069 493-11	4	91-169 252-45	5		
12-640 090-55	3	91-048 774-93	7	91-069 496-05	4	91-169 254-05	5		
12-640 170-55	3	91-048 775-05	7	91-069 497-05	4	91-169 301-12	5		
12-640 200-55	3	91-048 775-05	9	91-069 498-11	4	91-169 393-12	5		
13-033 208-05	3	91-048 776-03	7	91-069 501-15	4	91-169 395-04	7		
14-215 013-01	3	91-048 778-93	9	91-069 513-15	4	91-169 395-04	9		
91-000 730-35	7	91-048 779-03	9	91-069 514-05	4	91-169 473-92	5		
91-000 730-35	9	91-048 946-05	9	91-069 517-05	4	91-169 474-05	5		
91-001 824-05	3	91-048 947-04	9	91-069 518-45	4	91-169 475-15	5		
91-047 292-04	7	91-048 949-03	9	91-069 571-92	4	91-169 476-45	5		
91-047 293-04	9	91-048 950-05	9	91-069 595-04	7	91-169 477-91	5		
91-047 464-04	9	91-048 951-93	9	91-069 595-04	9	91-170 650-11	5		
91-047 465-04	9	91-048 952-93	9	91-069 596-03	7	91-700 335-35	5		
91-047 466-04	9	91-054 090-04	9	91-069 596-03	9	91-700 336-15	5		
91-047 467-04	7	91-054 180-04	9	91-069 598-11	4	91-700 486-15	5		

