

Form 2180w Rev.

(1149)

Printed in U. S. A.

LIST OF PARTS



MACHINE No. 107w13

*** A TRADE MARK OF

THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling and when in continuous use, "TYPE B" or "TYPE D" OIL, sold only by Singer Sewing Machine Company, should be applied at least twice each day to all oil holes marked "OIL", as instructed in Form 2210w.

"TYPE D" OIL is stainless.

Copyright, U. S. A., 1939, 1940, 1941 and 1950

by The Singer Manufacturing Co.

All Rights Reserved for all Countries

INDEX

	PAGE
ACCESSORIES - - - - -	13
BOBBIN WINDERS - - - - -	13 & 15
KNEE LIFTER - - - - -	14
MACHINE No. 107w13 - - - - -	5
MISCELLANEOUS PARTS - - - - -	16
NUMERICAL LIST OF PARTS - - - - -	17
PARTS FOR AIR TUCKING ON RAYON - - - - -	16
THREAD UNWINDER - - - - -	14

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the **PART** number in the **FIRST** column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above case), must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished, Nickel Plated and Buffed.
- B. Polished, Nickel Plated and Buffed.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.
- J. Nickel Plated only.
- R. Merlized.
- X. Black Oxide, for Iron and Steel.
- XC. Hardened and Black Oxide, for Iron or Steel.
- Y. Black Nickel Plated only.

These letters **MUST BE USED** when they appear in the list and **AFTER** the number, as in the list.

In this series


1 to 1500, 200001 to 201500 and 350001 to 351500 are Screw Numbers.
1501 to 1800, 201501 to 201800 and 351501 to 351800 are Nut Numbers.
1801 to 2000, 201801 to 202000 and 351801 to 352000 are Roller Numbers.
2001 to 50000 and 202001 to 350000 are Numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are **NOT TO BE USED** in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE FOR

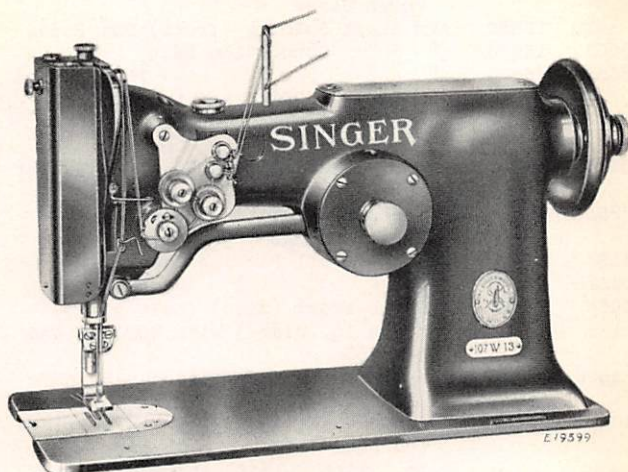

MACHINE No. 107w13

HIGH SPEED. TWO NEEDLE ZIGZAG.

FOR STRAIGHT AND ZIGZAG AIR

TUCKING AND CORDING.

NEEDLE HOLDER ADJUSTABLE FROM $\frac{1}{32}$ TO $\frac{7}{32}$ INCH.

MAXIMUM STITCH 7 TO THE INCH.

No.	Plate	Name
*242101	-----	Arm with 202135
242141	16890	" Cap with two 244071
244071	16890	" " Oil Wick
200278H	16890	" " Screw
202248	16890	" " " Washer
204235	16826	" Position Pin (2)
200004E	16826	" Screw
200010E	16826	" " (2)
202005	16826	" " Washer (3)
202249	16890	" Shaft with 224392 and 350431E
240802	16890	" " Bushing (back) with 202244
202244	16890	" " " Oil Packing
		(wick)

PARTS FOR MACHINE No. 107w13

No.	Plate	Name
200338C	16890	Arm Shaft Bushing (back) Set Screw
207080	16890	" " " (front) with 202244
202244	16890	" " " " Oil Packing (wick)
200502H	16890	Arm Shaft Bushing (front) Oil Packing Thumb Screw
200341C	16890	Arm Shaft Bushing (front) Set Screw
210503	16826	" " Connection Belt
202635	16826	" " " " Pulley with 200327C, 200602C and two 202253
200602C	16826	Arm Shaft Connection Belt Pulley Position Screw
200327C	16826	Arm Shaft Connection Belt Pulley Set Screw
202253	16826	Arm Shaft Connection Belt Pulley Spring Flange
224392	16890	Arm Shaft Oil Packing (wick)
350431E	16890	" " " " Stop Screw
244063	16890	Balance Wheel (disc) (belt groove 2-1/8 in. diam.) with 200328C and 200335C
Note: Balance Wheel 244063 is furnished with this machine unless otherwise specified on order		
244074	16890	Balance Wheel (disc) "v" belt groove (outside diam. of belt groove 2.9 in.) with 201346C and 350107C
200328C	16890	Balance Wheel Position Screw
350107C	16890	" " " "
200335C	16890	" " Set Screw
201346C	16890	" " " "
*210504	-----	Bed
210844	16826	" Hinge Connection (2)
200060E	16826	" " " Screw (4)
210505	16887	" Plate (back)
200577AL	16887	" " Screw (2)
210616	16887	" Slide (front)
210530	16891	Bobbin
210846	16891	" Case Base
242103	16891	" " Cap with 200592C, 201016F and 242105
242104	16891	Bobbin Case Cap complete, Nos. 200964C, 210736, 210914 and 242103
210913	16891	Bobbin Case Latch
210914	16891	" " " 210913 with 210734 and 210735
210735	16891	Bobbin Case Latch Fulcrum Pin
210734	16891	" " " Lever
210736	16891	" " " Spring
200964C	17891	" " " Stop Screw
210764	16827	" " Stop
200076D	16827	" " " Screw
242105	16891	" " Tension Spring
201016F	16891	" " " Regulating Screw
200592C	16891	Bobbin Case Tension Spring Screw
242106	16891	Bobbin Case complete, Nos. 210846 and 242104

PARTS FOR MACHINE No. 107w13

7

No.	Plate	Name
242139	16887	Face Plate
202135	18887	" " Position Pin
200462H	16887	" " Thumb Screw
210512	16827	Feed Bar
210513	16827	" " 210512 with 200641C, 201522E and 202623
200641C	16827	Feed Bar Hinge Screw (driving)
201522E	16827	" " " " Nut
202276	16827	" " Slide Block
210514	16827	Feed Bar Slide Block Crank with 200035E
210515	16827	Feed Bar Slide Block Crank 210514 with 200253C, 201531E and 202276
200035E	16827	Feed Bar Slide Block Crank Pinch Screw
200253C	16827	" " " " Hinge Screw
201531E	16827	" " " " " " Nut
210518	16892	" Dog, for 242118
200106E	16892	" " Screw (2)
202297	16826	" Driving Connection with 200054E and 202277
202624	16827	Feed Driving Connection Crank with 200038C
200038C	16827	Feed Driving Connection Crank Pinch Screw
200545C	16826	Feed Driving Connection Hinge Screw
201518E	16826	" " " " " " Nut
202277	16826	" " " " Oil Packing (wick)
200054E	16826	Feed Driving Connection Pinch Screw
202300	16826	" " Eccentric Regulating Bracket
203098	16826	Feed Driving Eccentric Regulating Bracket 202300 with 202635, two each 201014C and 201525E
201014C	16826	Feed Driving Eccentric Regulating Bracket Hinge Screw
201525E	16826	Feed Driving Eccentric Regulating Bracket Hinge Screw Nut
202301	16826	Feed Driving Eccentric Regulating Bracket Plunger
202595	16826	Feed Driving Eccentric Regulating Bracket Plunger Spring
200607C	16826	Feed Driving Eccentric Regulating Bracket Plunger Spring Stop Screw
201014C	16826	Feed Driving Eccentric Regulating Bracket Stop Screw
201525E	16826	Feed Driving Eccentric Regulating Bracket Stop Screw Nut
200429F	16826	Feed Driving Eccentric Regulating Screw
200383C	16826	Feed Driving Eccentric Regulating Screw Check Screw
202623	16827	Feed Driving Rock Shaft
202625	16827	" " " " Stop Collar with two 200383C (2)

PARTS FOR MACHINE No. 107w13

No.	Plate	Name
200383C	16827	Feed Driving Rock Shaft Stop Collar Set Screw
202306	16826	Feed Lifting Connection with 200054E and 202277
*210645	-----	Feed Lifting Connection Crank
210589	16827	" " " " 210645 with 200050C and 200378C
200050C	16827	Feed Lifting Connection Crank Pinch Screw
200378C	16827	Feed Lifting Connection Crank Set Screw
202307	16890	Feed Lifting Connection Eccentric with 200382C and 200437C
200437C	16890	Feed Lifting Connection Eccentric Position Screw
200382C	16890	Feed Lifting Connection Eccentric Set Screw
200545C	16826	Feed Lifting Connection Hinge Screw
201518E	16826	" " " " " Nut
202277	16826	Feed Lifting Connection Oil Packing (wick)
200054E	16826	Feed Lifting Connection Pinch Screw
210531	16827	" " Rock Shaft (hollow) and Hook Drivigg Shaft Bearing
202625	16827	Feed Lifting Rock Shaft Stop Collar with two 200383C
200383C	16827	Feed Lifting Rock Shaft Stop Collar Set Screw
202310	16890	Feed Regulating Spindle with 202311, 202443 and 202619
*202311	-----	Feed Regulating Spindle Head
202443	16890	" " " " Pin
202619	16890	" " " " Position Pin
210532	16891	Hook (sewing)
210533	16891	" 210532 with 200145C, 203101, 210536, 210541 and three 200596F
242107	16891	Hook and Bobbin Case complete, Nos. 210533 and 242106
210614	16827	Hook Driving Bevel Pinion (steel), 24 teeth, with two 200378C
200378C	16827	Hook Driving Bevel Pinion Set Screw
210535	16827	" " " " Shaft
202661	16827	" " " " " Belt Pulley with 202324 and two 200378C
200378C	16827	Hook Driving Bevel Pinion Shaft Belt Pulley Set Screw
202324	16827	Hook Driving Bevel Pinion Shaft Belt Pulley Spring Flange
210536	16891	Hook Gib
200596F	16891	" " Screw
203101	16891	" Oil Wick
200915F	16827	" Position Screw
210537	16827	" Shaft (hollow)
210615	16827	" " Bevel Gear (steel), 24 teeth, with two 200382C

PARTS FOR MACHINE No. 107w13

9

No.	Plate	Name
200382C	16827	Hook Shaft Bevel Gear Set Screw
210539	16827	" " Bushing
210621	16827	" " " 210539 with 210537 and 350314F
200335C	16827	Hook Shaft Bushing Set Screw
200363AL	16827	" " " " "
202355	16827	" " " " " Packing (brass)
350314F	16827	Hook Shaft Position Screw
210541	16891	" Washer Needle Guard
200145C	16891	Hook Washer Needle Guard Screw
237837	16887	Knee Lifter Connection Lever
210876	16887	" " " " 237837 with 202447, 210875 and two 200262H
200262H	16887	Knee Lifter Connection Lever Hinge Screw
202447	16887	Knee Lifter Connection Lever Lifting Rod with 202302
202302	16887	Knee Lifter Connection Lever Lifting Rod Cotter Pin
210875	16887	Knee Lifter Lifting Lever
200262H	16887	" " " " Hinge Screw
242108	16893	Needle Bar
210543	16893	" " Connecting Link
202333	16893	" " " " Stud with 202254
202254	16893	Needle Bar Connecting Link Stud Oil Packing (wick)
200383C	16893	Needle Bar Connecting Link Stud Set Screw
200374C	16893	Needle Bar Connecting Link Stud Set Screw
210544	16893	Needle Bar Connecting Stud with 202277
210585	16893	" " " " 210544 with 210882
202277	16893	Needle Bar Connecting Stud Oil Packing (wick)
210882	16893	Needle Bar Connecting Stud Swivel with 200387C
210725	16893	Needle Bar Crank with 200335C, 200374C, 200383C, 200428C and 202333
203172	16893	Needle Bar Crank Friction Washer
200428C	16893	" " " Position Screw
200335C	16893	" " " Set Screw
242109	16893	" " Frame with 200070C
210547	16893	" " " Guide Stud
200334C	16893	" " " " Set Screw
210548	16893	" " " Hinge Stud
200334C	16893	" " " " Set Screw
210556	16828	" " " Pitman with 200054E and 202277
210557	16828	Needle Bar Frame Pitman Eccentric Stud
200070C	16893	Needle Bar Frame Pitman Eccentric Stud Set Screw
202277	16828	Needle Bar Frame Pitman Oil Packing (wick)

No.	Plate	Name
200054E	16828	Needle Bar Frame Pitman Pinch Screw
200387C	16893	" " Set Screw
242122	16893	" Holder Body with 201030F
201030F	16893	" Holder Screw
242123	16893	" " Slide (left)with 200130F
242124	16893	Needle Holder Slide (right) with 200130F
200130F	16893	Needle Holder Slide Screw
200130F	16893	" Set Screw
242125	16893	" Holder complete (adjustable from 1/32 to 7/32 in.), Nos. 242122 to 242124 and two 200130F
202300	16828	Needle Vibrator Eccentric Regulating (throw) Bracket
210550	16828	Needle Vibrator Eccentric Regulating Bracket 202300 with 210552, two each 200256C and 201525E
210551	16828	Needle Vibrator Eccentric Regulating Bracket Cover (plate)
200566D	16828	Needle Vibrator Eccentric Regulating Bracket Cover Screw (4)
210552	16828	Needle Vibrator Eccentric Regulating Bracket Flange with two 200383C
200383C	16828	Needle Vibrator Eccentric Regulating Bracket Flange Screw
200256C	16828	Needle Vibrator Eccentric Regulating Bracket Hinge Screw
201525E	16828	Needle Vibrator Eccentric Regulating Bracket Hinge Screw Nut
202301	16828	Needle Vibrator Eccentric Regulating Bracket Plunger
202595	16828	Needle Vibrator Eccentric Regulating Bracket Plunger Spring
200607C	16828	Needle Vibrator Eccentric Regulating Bracket Plunger Spring Stop Screw
200256C	16828	Needle Vibrator Eccentric Regulating Bracket Stop Screw
201525E	16828	Needle Vibrator Eccentric Regulating Bracket Stop Screw Nut
210699	16828	Needle Vibrator Gear (spiral) with two 200382C
203172	16828	Needle Vibrator Gear Friction Washer
200382C	16828	" " " Set Screw
210558	16828	" " " Shaft
210559	16828	" " " " Collar with two 200378C
200378C	16828	Needle Vibrator Gear Shaft Collar Set Screw
210700	16890	Needle Vibrator Pinion (spiral) with two 200382C
200382C	16890	Needle Vibrator Pinion Set Screw
200429C	16828	" " Regulating Screw
200383C	16828	" " " " Check Screw
210553	16828	Needle Vibrator Regulating Spindle with 202583, 202619 and 210554

No.	Plate	Name
*202583	-----	Needle Vibrator Regulating Spindle Head
202619	16828	Needle Vibrator Regulating Spindle Head Position Pin
210554	16828	Needle Vibrator Regulating Spindle Spring (flat)
244033	16889	Presser Bar (hollow)
202335	16889	" " 244033 with 200074F
207072	16889	" " Bushing
200352C	16889	" " " Set Screw
202554	16889	" " Lifter
200653C	16889	" " " Hinge Screw
210789	16889	" " Lifting Releasing Lever Bracket
200260D	16889	Presser Bar Lifting Releasing Lever Bracket Guide Screw
206608	16889	Presser Bar Lifting Releasing Lever Bracket Spring (spiral)
202337	16889	Presser Bar Position Guide
202338	16889	" " " " Lever with 200086F
200086F	16889	Presser Bar Position Guide Lever Pinch Screw
200352C	16889	Presser Bar Position Guide Set Screw
202343	16889	" " Spring
202346	16889	" " " Stop Rod
200492H	16889	" " Thumb Screw (pressure regulating)
200475H	16889	Presser Bar Thumb Screw Thumb Set Screw
202355	16889	Presser Bar Thumb Screw Thumb Set Screw Packing (brass)
242114	16892	Presser Foot, for fine work
200074F	16889	" " Screw
242140	16893	Take-up (auxiliary)
200132E	16893	" " " Screw
234144	16893	" Lever
202399	16893	" " Driving Stud with 202277
202277	16893	" " " " Oil Packing (wick)
202400	16893	Take-up Lever Hinge Stud with 202423
202423	16893	" " " " Oil Packing (wick)
200383C	16893	Take-up Lever Hinge Stud Set Screw
202401	16889	" " Oiling Felt
200132E	16889	" " " " Screw
234086	16886	Tension Bracket with two each 200397H, 201224B and 236060
200159F	16886	Tension Bracket Screw
234047	16886	" " " Socket
200368H	16886	" " " " Set Screw
236098	16886	" " Thread Guide
200174H	16886	" " " " Screw
234087	16886	Tension Bracket complete, Nos. 200174H, 200978H, 201199F, 223703, 223706, 234086, 236098, 237174, two each 13710, 200309E, 204059, 204271, 223704, three 201572H and four 244048

No.	Plate	Name
244048	16886	Tension Disc
236060	16886	" " Position Pin
223703	16886	" Release Lever
235072	16889	" " Rod
200309E	16886	" " Screw
223704	16886	" Plunger
204271	16886	" Washer
13710	16886	" Spring
201224B	16886	" Stud
201572H	16886	" Thumb Nut
223706	16886	Thread Controller Disc
200978H	16886	" " " Screw
237174	16886	" " Spring
241360	16886	" " " Stop
200132E	16886	" " " Screw
201199F	16886	" " Stud with 204925
200061C	16886	" " Set Screw
201572H	16886	" " Thumb Nut
204925	16886	" " Washer
242127	16893	" Guide (on Needle Bar Frame)
200174D	16893	" " " " " "
		Screw
224028	16886	Thread Guide (on top of Arm)
242126	16886	" " (lower)
210592	16866	" " (upper)
200582H	16886	" " Screw (2)
202091	16886	" Retainer Sleeve
202092	16886	" " Spring
204058	16886	" " Stud
200397H	16886	" " " Set Screw
204059	16886	Thread Retainer complete, Nos. 202091, 202092 and 204058
242118	16892	Throat Plate, 53 needle hole, for needle sizes 12 and 13, for fine work, for 210518
200577AL	16892	Throat Plate Screw (2)

ACCESSORIES

No.	Plate	Name
200157B	16887	Attachment Screw
210530	16891	Bobbin (5)
231337	16836	Cloth Guide
228476	16836	Screw Driver (Bobbin Case)
131x1	-----	Needles, six, size 12
131x3	-----	" " " 12
228212	15998	Drip Pan with four 3/4 in. wire nails
41400	16836	Machine Rest Pin (wood)
120342	16836	Oiler (copper plated) with 120343
120343	16836	" Spout, 3-1/2 in. long
225498	16836	Screw Driver (7-1/4 in. long)
225554	16836	Wrench (steel)

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

FOR 5/16 INCH ROUND BELT DRIVE

Note: 259431 Bobbin Winder is furnished with this machine unless otherwise specified on order

259428	18312	Brake (leather)
259429	18312	" Clamp
200113F	18312	" " Screw
225453	18312	Frame with 202277 and 259660
225454	18312	" Hinge Pin
202277	18312	" Oil Packing (wick)
259660	18312	" " Well Washer
225455	18312	" Spring
225456	18312	" " Plunger
225368	18312	Pulley with 200380C
200380C	18312	" Set Screw
225381	18312	Spindle
225444	18312	Stop Latch
200056E	18312	" " Screw
225458	18312	" " Thumb Lever
225459	18312	" " " " Hinge Stud
225459	18312	" " " " Joint Stud
202478	18312	" " Trip Lever
200299H	18312	" " " " Hinge Screw
225461	18312	Tension Bracket with 201499H
200082D	18312	" " Screw
228026	18312	" " Washer
2102	18312	" Disc
13710	18312	" Spring
201499H	18312	" Stud
201572H	18312	" " Thumb Nut
225462	18312	Bobbin Winder Tension Bracket complete, Nos. 13710, 201572H, 225461 and two 2102.

ACCESSORIES

No.	Plate	Name
259430	18312	Bobbin Winder and Tension Bracket Base
259431	18312	Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200113F, 200299H, 202478, 225368, 225381, 225444, 225453 to 225456, 225458, 225462, 228026, 259428 to 259430, two each 225459 and wood screws 3/4 in., No. 12, R.H.B.

KNEE LIFTER

228359	16643	Rock Lever with two 350231C
228486	16643	" " Bracket with 200347C and three wood screws 7/8 in., No. 12
228361	16643	Rock Lever Bracket 228486 with 228359, 228363, 228367, 228386 and 228455
228362	16643	Rock Lever Extension with 200529C
350231C	16643	" " " Set Screw
228363	16643	" " Hinge Pin
228364	16643	" " Knee Plate with 350231C
228388	16643	" " " " Arm
350231C	16643	" " " " " Set Screw
350231C	16643	" " " " " Set Screw
228455	16643	" " Position Spring
228365	16643	" " Rod
200529C	16643	" " " Set Screw
228386	16643	" " Spring
228367	16643	" " Stop Stud
200347C	16643	" " " " " Set Screw
228368	16643	Knee Lifter complete, Nos. 228361, 228362, 228364, 228365 and 228388

THREAD UNWINDER

FOR THREE SPOOLS

225259	16257	Spool Rest (for one spool) with 201018C
225257	16257	Spool Rest (for two spools) with 201018C
150203	16257	Spool Rest Cushion (felt)
225388	16257	" " Rod
200383C	16257	" " " Set Screw
201018C	16257	" " " Set Screw
259658	16257	" Stand with 200383C
225391	16257	Thread Guide
201696H	16257	" " Lock Nut
225326	16257	" " Position Cup
225324	16257	" " Rod with 208AL and 225322

No.	Plate	Name
208AL	16257	Thread Guide Rod Screw
225322	16257	" " " Washer
259143	16257	Thread Unwinder (for three spools) complete, Nos. 201696H, 225257, 225259, 225324, 225326, 225388, 259658, three each 150203, 225391 and wood screws 7/8 in., No. 12

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

FOR "V" BELT DRIVES

259428	18312	Brake (leather)
259429	18312	" Clamp
200113F	18312	" " Screw
225453	18312	Frame with 202277 and 259660
225454	18312	" Hinge Pin
202277	18312	" Oil Packing (wick)
259660	18312	" " Well Washer
225455	18312	" Spring
225456	18312	" Plunger
259461	18312	Pulley with 200380C
200380C	18312	" Set Screw
225381	18312	Spindle
225444	18312	Stop Latch
200056E	18312	" " Screw
225458	18312	" " Thumb Lever
225459	18312	" " " Hinge Stud
225459	18312	" " " Joint Stud
202478	18312	" " Trip Lever
200299H	18312	" " " Hinge Screw
225461	18312	Tension Bracket with 201499H
200082D	18312	" " Screw
228026	18312	" " Washer
2102	18312	" Disc
13710	18312	" Spring
201499H	18312	" Stud
201572H	18312	" " Thumb Nut
225462	18312	Bobbin Winder Tension Bracket complete, Nos. 13710, 201572H, 225461 and two 2102
259662	18312	Bobbin Winder and Tension Bracket Base
259462	18312	Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200113F, 200299H, 202478, 225381, 225444, 225453 to 225456, 225458, 225462, 228026, 259428, 259429, 259461, 259662, two each 225459 and wood screws 3/4 in., No. 12, R.H.B.

PARTS FOR AIR TUCKING ON RAYON

No.	Plate	Name
210527	16888	Feed Dog
202090	16888	Presser Foot Hinge Pin
242131	16888	" " Plate
210620	16888	" " Shank
242132	16888	Presser Foot (hinged) complete, Nos. 202090, 210620 and 242131
242129	16888	Throat Plate, 60 needle hole, for needle sizes 8 and 9

MISCELLANEOUS PARTS

USED IN CONJUNCTION WITH THREAD UNWINDER

60913	16257	Spool Weight with 60914
60914	16257	" " Center Pin
225377	16257	" Wire, for small spools
27739	16257	Thread Cone (wood)
225390	16257	" " Holder

SINGER Needles should be used
in SINGER Machines.
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO.***" 1

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. 2

**NUMERICAL
LIST
OF PARTS**

NUMERICAL

LIST

OF PARTS

NUMERICAL LIST OF PARTS

No.	Plate	Name
208AL	16257	Thread Unwinder Thread Guide Rod Screw, for 225324
2102	18312	Bobbin Winder Tension Disc, for 225462
13710	18312	" " " Spring, for 225462
13710	16886	Tension Spring, for 234087
27739	16257	Thread Unwinder Thread Cone (wood)
41400	16836	Machine Rest Pin (wood)
60913	16257	Thread Unwinder Spool Weight with 60914
60914	16257	Thread Unwinder Spool Weight Center Pin, for 60913
120342	16836	Oiler (copper plated) with 120343
120343	16836	" Spout, 3-1/2 in. long, for 120342
150203	16257	Thread Unwinder Spool Rest Cushion (felt), for 259143
200004E	16826	Arm Screw
200010E	16826	" "
200035E	16827	Feed Bar Slide Block Crank Pinch Screw, for 210514
200038C	16827	Feed Driving Connection Crank Pinch Screw, for 202624
200050C	16827	Feed Lifting Connection Crank Pinch Screw, for 210589
200054E	16826	Feed Driving Connection Pinch Screw, for 202297
200054E	16826	Feed Lifting Connection Pinch Screw, for 202306
200054E	16828	Needle Bar Frame Pitman Pinch Screw, for 210556
200056E	18312	Bobbin Winder Stop Latch Screw, for 259431 and 259462
200060E	16826	Bed Hinge Connection Screw
200061C	16886	Thread Controller Stud Set Screw
200070C	16893	Needle Bar Frame Pitman Eccentric Stud Set Screw, for 242109
200074F	16889	Presser Foot Screw, for 202335
200076D	16827	Bobbin Case Stop Screw
200082D	18312	" Winder Tension Bracket Screw, for 259431 and 259462
200086F	16889	Presser Bar Position Guide Lever Pinch Screw, for 202338
200106E	16892	Feed Dog Screw
200113F	18312	Bobbin Winder Brake Clamp Screw, for 259431 and 259462
200130F	16893	Needle Holder Slide Screw, for 242125
200130F	16893	" Set Screw, for 242123 and 242124
200132E	16893	Take-up (auxiliary) Screw

NUMERICAL LIST OF PARTS

No.	Plate	Name
200132E	16889	Take-up Lever Oiling Felt Screw
200132E	16886	Thread Controller Spring Stop Screw
200145C	16891	Hook Washer Needle Guard Screw, for 210533
200157B	16887	Attachment Screw
200159F	16886	Tension Bracket Screw
200174H	16886	" " Thread Guide Screw, for 234087
200174D	16893	Thread Guide (on Needle Bar Frame) Screw
200253C	16827	Feed Bar Slide Block Hinge Screw, for 210515
200256C	16828	Needle Vibrator Eccentric Regulating Bracket Hinge Screw, for 210550
200256C	16828	Needle Vibrator Eccentric Regulating Bracket Stop Screw, for 210550
200260D	16889	Presser Bar Lifting Releasing Lever Bracket Guide Screw
200262H	16887	Knee Lifter Connection Lever Hinge Screw, for 210876
200262H	16887	Knee Lifter Lifting Lever Hinge Screw, for 210876
200278H	16890	Arm Cap Screw
200299H	18312	Bobbin Winder Stop Latch Trip Lever Hinge Screw, for 259431 and 259462
200309E	16886	Tension Release Lever Screw, for 234087
200327C	16826	Arm Shaft Connection Belt Pulley Set Screw, for 202635
200328C	16890	Balance Wheel Position Screw, for 244063
200334C	16893	Needle Bar Frame Guide Stud Set Screw
200334C	16893	" " " Hinge Stud Set Screw
200335C	16890	Balance Wheel Set Screw, for 244063
200335C	16827	Hook Shaft Bushing Set Screw
200335C	16893	Needle Bar Crank Set Screw, for 210725
200338C	16890	Arm Shaft Bushing (back) Set Screw
200341C	16890	" " " (front) Set Screw
200347C	16643	Knee Lifter Rock Lever Stop Stud Set Screw, for 228486
200352C	16889	Presser Bar Bushing Set Screw
200352C	16889	" " Position Guide Set Screw
200363AL	16827	Hook Shaft Bushing Set Screw
200368H	16886	Tension Bracket Screw Socket Set Screw
200374C	16893	Needle Bar Connecting Link Stud Set Screw, for 210725
200378C	16827	Feed Lifting Connection Crank Set Screw, for 210589
200378C	16827	Hook Driving Bevel Pinion Set Screw, for 210614
200378C	16827	Hook Driving Bevel Pinion Shaft Belt Pulley Set Screw, for 202661
200378C	16828	Needle Vibrator Gear Shaft Collar Set Screw, for 210559
200380C	18312	Bobbin Winder Pulley Set Screw, for 225368 and 259461
200382C	16890	Feed Lifting Connection Eccentric Set Screw, for 202307

NUMERICAL LIST OF PARTS

19

No.	Plate	Name
200382C	16827	Hook Shaft Bevel Gear Set Screw, for 210615
200382C	16828	Needle Vibrator Gear Set Screw, for 210699
200382C	16890	Needle Vibrator Pinion Set Screw, for 210700
200383C	16826	Feed Driving Eccentric Regulating Screw Check Screw
200383C	16827	Feed Driving Rock Shaft Stop Collar Set Screw, for 202625
200383C	16827	Feed Lifting Rock Shaft Stop Collar Set Screw, for 202625
200383C	16893	Needle Bar Connecting Link Stud Set Screw, for 210725
200383C	16828	Needle Vibrator Eccentric Regulating Bracket Flange Screw, for 210552
200383C	16828	Needle Vibrator Regulating Screw Check Screw
200383C	16893	Take-up Lever Hinge Stud Set Screw
200383C	16257	Thread Unwinder Spool Rest Rod Set Screw, for 259658
200387C	16893	Needle Bar Set Screw, for 210882
200397H	16886	Thread Retainer Stud Set Screw, for 234086
200428C	16893	Needle Bar Crank Position Screw, for 210725
200429F	16826	Feed Driving Eccentric Regulating Screw
200429C	16828	Needle Vibrator Regulating Screw
200437C	16890	Feed Lifting Connection Eccentric Position Screw, for 202307
200462H	16887	Face Plate Thumb Screw
200475H	16889	Presser Bar Thumb Screw Thumb Set Screw
200492H	16889	Presser Bar Thumb Screw (pressure regulating)
200502H	16890	Arm Shaft Bushing (front) Oil Packing Thumb Screw
200529C	16643	Knee Lifter Rock Lever Rod Set Screw, for 228362
200545C	16826	Feed Driving Connection Hinge Screw
200545C	16826	" Lifting " " "
200566D	16828	Needle Vibrator Eccentric Regulating Bracket Cover Screw
200577AL	16887	Bed Plate (back) Screw
200577AL	16892	Throat Plate Screw
200582H	16886	Thread Guide Screw
200592C	16891	Bobbin Case Tension Spring Screw, for 242103
200596F	16891	Hook Gib Screw, for 210533
200602C	16826	Arm Shaft Connection Belt Pulley Position Screw, for 202635
200607C	16826	Feed Driving Eccentric Regulating Bracket Plunger Spring Stop Screw
200607C	16828	Needle Vibrator Eccentric Regulating Bracket Plunger Spring Stop Screw

NUMERICAL LIST OF PARTS

No.	Plate	Name
200641C	16827	Feed Bar Hinge Screw (driving), for 210513
200653C	16889	Presser Bar Lifter Hinge Screw
200915F	16827	Hook Position Screw
200964C	16891	Bobbin Case Latch Stop Screw, for 242104
200978H	16886	Thread Controller Disc Screw, for 234087
201014C	16826	Feed Driving Eccentric Regulating Bracket Hinge Screw, for 203098
201014C	16826	Feed Driving Eccentric Regulating Bracket Stop Screw, for 203098
201016F	16891	Bobbin Case Tension Spring Regulating Screw, for 242103
201018C	16257	Thread Unwinder Spool Rest Set Screw, for 225257 and 225259
201030F	16893	Needle Holder Screw, for 242122
201199F	16886	Thread Controller Stud with 204925, for 234087
201224B	16886	Tension Stud, for 234086
201346C	16890	Balance Wheel Set Screw, for 244074
201499H	18312	Bobbin Winder Tension Stud, for 225461
201518E	16826	Feed Driving Connection Hinge Screw Nut
201518E	16826	Feed Lifting Connection Hinge Screw Nut
201522E	16827	Feed Bar Hinge Screw Nut, for 210513
201525E	16826	" Driving Eccentric Regulating Bracket Hinge Screw Nut, for 203098
201525E	16826	Feed Driving Eccentric Regulating Bracket Stop Screw Nut, for 203098
201525E	16828	Needle Vibrator Eccentric Regulating Bracket Hinge Screw Nut, for 210550
201525E	16828	Needle Vibrator Eccentric Regulating Bracket Stop Screw Nut, for 210550
201531E	16827	Feed Bar Slide Block Hinge Screw Nut, for 210515
201572H	18312	Bobbin Winder Tension Stud Thumb Nut, for 225462
201572H	16886	Tension Thumb Nut, for 234087
201572H	16886	Thread Controller Stud Thumb Nut, for 234087
201696H	16257	Thread Unwinder Thread Guide Lock Nut, for 259143
202005	16826	Arm Screw Washer
202090	16888	Presser Foot Hinge Pin, for 242132
202091	16886	Thread Retainer Sleeve, for 204059
202092	16886	" " Spring, for 204059
202135	16887	Face Plate Position Pin, for 242101
202244	16890	Arm Shaft Bushing (back) Oil Packing (wick), for 240802
202244	16890	Arm Shaft Bushing (front) Oil Packing (wick), for 207080
202248	16890	Arm Cap Screw Washer
202249	16890	" Shaft with 224392 and 350431E
202253	16826	" " Connection Belt Pulley Spring Flange, for 202635

NUMERICAL LIST OF PARTS

21

No.	Plate	Name
202254	16893	Needle Bar Connecting Link Stud Oil Packing (wick), for 202333
202276	16827	Feed Bar Slide Block, for 210515
202277	18312	Bobbin Winder Frame Oil Packing (wick), for 225453
202277	16826	Feed Driving Connection Oil Packing (wick), for 202297
202277	16826	Feed Lifting Connection Oil Packing (wick), for 202306
202277	16893	Needle Bar Connecting Stud Oil Packing (wick), for 210544
202277	16828	Needle Bar Frame Pitman Oil Packing (wick), for 210556
202277	16893	Take-up Lever Driving Stud Oil Packing (wick), for 202399
202297	16826	Feed Driving Connection with 200054E and 202277
202300	16826	Feed Driving Eccentric Regulating Bracket, for 203098
202300	16828	Needle Vibrator Eccentric Regulating (throw) Bracket, for 210550
202301	16826	Feed Driving Eccentric Regulating Bracket Plunger
202301	16828	Needle Vibrator Eccentric Regulating Bracket Plunger
202302	16887	Knee Lifter Connection Lever Lifting Rod Cotter Pin, for 202447
202306	16826	Feed Lifting Connection with 200054E and 202277
202307	16890	Feed Lifting Connection Eccentric with 200382C and 200437C
202310	16890	Feed Regulating Spindle with 202311, 202443 and 202619
*202311	-----	Feed Regulating Spindle Head, for 202310
202324	16827	Hook Driving Bevel Pinion Shaft Belt Pulley Spring Flange, for 202661
202333	16893	Needle Bar Connecting Link Stud with 202254, for 210725
202335	16889	Presser Bar 244033 with 200074F
202337	16889	" " Position Guide
202338	16889	" " " " Lever with 200086F
202343	16889	Presser Bar Spring
202346	16889	" " " Stop Rod
202355	16827	Hook Shaft Bushing Set Screw Packing (brass)
202355	16889	Presser Bar Thumb Screw Thumb Set Screw Packing (brass)
202399	16893	Take-up Lever Driving Stud with 202277
202400	16893	Take-up Lever Hinge Stud with 202423
202401	16889	" " Oiling Felt
202423	16893	" " Hinge Stud Oil Packing (wick), for 202400

NUMERICAL LIST OF PARTS

No.	Plate	Name
202443	16890	Feed Regulating Spindle Head Pin, for 202310
202447	16887	Knee Lifter Connection Lever Lifting Rod with 202302, for 210876
202478	18312	Bobbin Winder Stop Latch Trip Lever, for 259431 and 259462
202554	16889	Presser Bar Lifter
*202583	-----	Needle Vibrator Regulating Spindle Head, for 210553
202595	16826	Feed Driving Eccentric Regulating Bracket Plunger Spring
202595	16828	Needle Vibrator Eccentric Regulating Bracket Plunger Spring
202619	16890	Feed Regulating Spindle Head Position Pin, for 202310
202619	16828	Needle Vibrator Regulating Spindle Head Position Pin, for 210553
202623	16827	Feed Driving Rock Shaft, for 210513
202624	16827	" " Connection Crank with 200038C
202625	16827	Feed Driving Rock Shaft Stop Collar with two 200383C
202625	16827	Feed Lifting Rock Shaft Stop Collar with two 200383C
202635	16826	Arm Shaft Connection Belt Pulley with 200327C, 200602C and two 202253, for 203098
202661	16827	Hook Driving Bevel Pinion Shaft Belt Pulley with 202324 and two 200378C
203098	16826	Feed Driving Eccentric Regulating Bracket 202300 with 202635, two each 201014C and 201525E
203101	16891	Hook Oil Wick, for 210533
203172	16893	Needle Bar Crank Friction Washer
203172	16828	" Vibrator Gear Friction Washer
204058	16886	Thread Retainer Stud, for 204059
204059	16886	Thread Retainer complete, Nos. 202091, 202092 and 204058, for 234087
204235	16826	Arm Position Pin
204271	16886	Tension Release Washer, for 234087
204925	16886	Thread Controller Stud Washer, for 201199F
206608	16889	Presser Bar Lifting Releasing Lever Bracket Spring (spiral)
207072	16889	Presser Bar Bushing
207080	16890	Arm Shaft Bushing (front) with 202244
210503	16826	" " Connection Belt
*210504	-----	Bed
210505	16887	" Plate (back)
210512	16827	Feed Bar, for 210513
210513	16827	" " 210512 with 200641C, 201522E and 202623
210514	16827	Feed Bar Slide Block Crank with 200035E, for 210515
210515	16827	Feed Bar Slide Block Crank 210514 with 200253C, 201531E and 202276

NUMERICAL LIST OF PARTS

23

No.	Plate	Name
210518	16892	Feed Dog, for 242118
210527	16888	" " " 242129
210530	16891	Bobbin
210531	16827	Feed Lifting Rock Shaft (hollow) and Hook Driving Shaft Bearing
210532	16891	Hook (sewing), for 210533
210533	16891	" 210532 with 200145C, 203101, 210536, 210541 and three 200596F, for 242107
210535	16827	Hook Driving Bevel Pinion Shaft
210536	16891	" Gib, for 210533
210537	16827	" Shaft (hollow), for 210621
210539	16827	" " Bushing, for 210621
210541	16891	" Washer Needle Guard, for 210533
210543	16893	Needle Bar Connecting Link
210544	16893	" " " Stud with 202277, for 210585
210547	16893	Needle Bar Frame Guide Stud
210548	16893	" " " Hinge Stud
210550	16828	" Vibrator Eccentric Regulating Bracket 202300 with 210552, two each 200256C and 201525E
210551	16828	Needle Vibrator Eccentric Regulating Bracket Cover (plate)
210552	16828	Needle Vibrator Eccentric Regulating Bracket Flange with two 200383C, for 210550
210553	16828	Needle Vibrator Regulating Spindle with 202583, 202619 and 210554
210554	16828	Needle Vibrator Regulating Spindle Spring (flat), for 210553
210556	16828	Needle Bar Frame Pitman with 200054E and 202277
210557	16828	Needle Bar Frame Pitman Eccentric Stud
210558	16828	Needle Vibrator Gear Shaft
210559	16828	" " " " Collar with two 200378C
210585	16893	Needle Bar Connecting Stud 210544 with 210882
210589	16827	Feed Lifting Connection Crank 210645 with 200050C and 200378C
210592	16886	Thread Guide (upper)
210614	16827	Hook Driving Bevel Pinion (steel), 24 teeth, with two 200378C
210615	16827	Hook Shaft Bevel Gear (steel), 24 teeth, with two 200382C
210616	16887	Bed Slide (front)
210620	16888	Presser Foot Shank, for 242132
210621	16827	Hook Shaft Bushing 210539 with 210537 and 350314F
*210645	-----	Feed Lifting Connection Crank, for 210589
210699	16828	Needle Vibrator Gear (spiral) with two 200382C
210700	16890	Needle Vibrator Pinion (spiral) with two 200382C

NUMERICAL LIST OF PARTS

No.	Plate	Name
210725	16893	Needle Bar Crank with 200335C, 200374C, 200383C, 200428C and 202333
210734	16891	Bobbin Case Latch Lever, for 210914
210735	16891	" " Fulcrum Pin, for 210914
210736	16891	Bobbin Case Latch Spring, for 242104
210764	16827	" " Stop
210789	16889	Presser Bar Lifting Releasing Lever Bracket
210844	16826	Bed Hinge Connection
210846	16891	Bobbin Case Base, for 242106
210875	16887	Knee Lifter Lifting Lever, for 210876
210876	16887	" " Connection Lever 237837 with 202447, 210875 and two 200262H
210882	16893	Needle Bar Connecting Stud Swivel with 200387C, for 210585
210913	16891	Bobbin Case Latch, for 210914
210914	16891	" " " 210913 with 210734 and 210735, for 242104
223703	16886	Tension Release Lever, for 234087
223704	16886	" " Plunger, for 234087
223706	16886	Thread Controller Disc, for 234087
224028	16886	" Guide (on top of Arm)
224392	16890	Arm Shaft Oil Packing (wick), for 202249
225257	16257	Thread Unwinder Spool Rest (for two spools) with 201018C, for 259143
225259	16257	Thread Unwinder Spool Rest (for one spool) with 201018C, for 259143
225322	16257	Thread Unwinder Thread Guide Rod Washer, for 225324
225324	16257	Thread Unwinder Thread Guide Rod with 208AL and 225322, for 259143
225326	16257	Thread Unwinder Thread Guide Position Cup, for 259143
225368	18312	Bobbin Winder Pulley with 200380C, for 259431
225377	16257	Thread Unwinder Spool Wire, for small spools
225381	18312	Bobbin Winder Spindle, for 259431 and 259462
225388	16257	Thread Unwinder Spool Rest Rod, for 259143
225390	16257	Thread Unwinder Thread Cone Holder
225391	16257	" " " Guide, for 259143
225444	18312	Bobbin Winder Stop Latch, for 259431 and 259462
		Nos. 225453 to 225456, for 259431 and 259462
225453	18312	Bobbin Winder Frame with 202277 and 259660
225454	18312	Bobbin Winder Frame Hinge Pin
225455	18312	" " " Spring
225456	18312	" " " Plunger
225458	18312	" " Stop Latch Thumb Lever, for 259431 and 259462

NUMERICAL LIST OF PARTS

25

No.	Plate	Name
225459	18312	Bobbin Winder Stop Latch Thumb Lever Hinge Stud, for 259431 and 259462
225459	18312	Bobbin Winder Stop Latch Thumb Lever Joint Stud, for 259431 and 259462
225461	18312	Bobbin Winder Tension Bracket with 201499H, for 225462
225462	18312	Bobbin Winder Tension Bracket complete, Nos. 13710, 201572H, 225461 and two 2102, for 259431 and 259462
225498	16836	Screw Driver (7-1/4 in. long)
225554	16836	Wrench (steel)
228026	18312	Bobbin Winder Tension Bracket Screw Washer, for 259431 and 259462
228212	15998	Drip Pan with four 3/4 in. wire nails
228359	16643	Knee Lifter Rock Lever with two 350231C, for 228361
228361	16643	Knee Lifter Rock Lever Bracket 228486 with 228359, 228363, 228367, 228386 and 228455, for 228368
228362	16643	Knee Lifter Rock Lever Extension with 200529C, for 228368
228363	16643	Knee Lifter Rock Lever Hinge Pin, for 228361
228364	16643	Knee Lifter Rock Lever Knee Plate with 350231C, for 228368
228365	16643	Knee Lifter Rock Lever Rod, for 228368
228367	16643	" " " " Stop Stud, for 228361
228368	16643	Knee Lifter complete, Nos. 228361, 228362, 228364, 228365 and 228388
228386	16643	Knee Lifter Rock Lever Spring, for 228361
228388	16643	Knee Lifter Rock Lever Knee Plate Arm, for 228368
228455	16643	Knee Lifter Rock Lever Position Spring, for 228361
228476	16836	Screw Driver (Bobbin Case)
228486	16643	Knee Lifter Rock Lever Bracket with 200347C and three wood screws 7/8 in., No. 12, for 228361
231337	16836	Cloth Guide
234047	16886	Tension Bracket Screw Socket
234086	16886	" " with two each 200397H, 201224B and 236060, for 234087
234087	16886	Tension Bracket complete, Nos. 200174H, 200978H, 201199F, 223703, 223706, 234086, 236098, 237174, two each 13710, 200309E, 204059, 204271, 223704, three 201572H and four 244048
234144	16893	Take-up Lever
235072	16889	Tension Release Lever Rod
236060	16886	" Disc Position Pin, for 234086
236098	16886	" Bracket Thread Guide, for 234087
237174	16886	Thread Controller Spring, for 234087
237837	16887	Knee Lifter Connection Lever, for 210876

NUMERICAL LIST OF PARTS

No.	Plate	Name
240802	16890	Arm Shaft Bushing (back) with 202244
241360	16886	Thread Controller Spring Stop
*242101	-----	Arm with 202135
242103	16891	Bobbin Case Cap with 200592C, 201016F and 242105, for 242104
242104	16891	Bobbin Case Cap complete, Nos. 200964C, 210736, 210914 and 242103, for 242106
242105	16891	Bobbin Case Tension Spring, for 242103
242106	16891	Bobbin Case complete, Nos. 210846 and 242104, for 242107
242107	16891	Hook and Bobbin Case complete, Nos. 210533 and 242106
242108	16893	Needle Bar
242109	16893	" " Frame with 200070C
242114	16892	Presser Foot, for fine work
242118	16892	Throat Plate, 53 needle hole, for needle sizes 12 and 13, for fine work, for 210518
		Nos. 242122 to 242124, for 242125
242122	16893	Needle Holder Body with 201030F
242123	16893	" " Slide (left) with 200130F
242124	16893	Needle Holder Slide (right) with 200130F
242125	16893	Needle Holder complete (adjustable from 1/32 to 7/32 in.), Nos. 242122 to 242124 and two 200130F
242126	16886	Thread Guide (lower)
242127	16893	" " (on Needle Bar Frame)
242129	16888	Throat Plate, 60 needle hole, for needle sizes 8 and 9, for 210527
242131	16888	Presser Foot Plate, for 242132
242132	16888	" " (hinged) complete, Nos. 202090, 210620 and 242131
242139	16887	Face Plate
242140	16893	Take-up (auxiliary)
242141	16890	Arm Cap with two 244071
244033	16889	Presser Bar (hollow), for 202335
244048	16886	Tension Disc, for 234087
244063	16890	Balance Wheel (disc) (belt groove 2-1/8 in. diam.) with 200328C and 200335C
244071	16890	Arm Cap Oil Wick, for 242141
244074	16890	Balance Wheel (disc) "V" belt groove (outside diam. of belt groove 2.9 in.) with 201346C and 350107C
259143	16257	Thread Unwinder (for three spools) complete, Nos. 201696H, 225257, 225259, 225324, 225326, 225388, 259658, three each 150203, 225391 and wood screws 7/8 in., No. 12

NUMERICAL LIST OF PARTS

27

No.	Plate	Name
		Nos. 259428 to 259430, for 259431
259428	18312	Bobbin Winder Brake (leather), also for 259462
259429	18312	Bobbin Winder Brake Clamp, also for 259462
259430	18312	Bobbin Winder and Tension Bracket Base
259431	18312	Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200113F, 200299H, 202478, 225368, 225381, 225444, 225453 to 225456, 225458, 225462, 228026, 259428 to 259430, two each 225459 and wood screws 3/4 in., No. 12, R.H.B.
259461	18312	Bobbin Winder Pulley with 200380C, for 259462
259462	18312	Universal Bobbin Winder, for "V" belt drives complete, Nos. 200056E, 200082D, 200113F, 200299H, 202478, 225381, 225444, 225453 to 225456, 225458, 225462, 228026, 259428, 259429, 259461, 259662, two each 225459 and wood screws 3/4 in., No. 12, R.H.B.
259658	16257	Thread Unwinder Spool Stand with 200383C, for 259143
259660	18312	Bobbin Winder Frame Oil Well Washer, for 225453
259662	18312	Bobbin Winder and Tension Bracket Base, for 259462
350107C	16890	Balance Wheel Position Screw, for 244074
350231C	16643	Knee Lifter Rock Lever Extension Set Screw, for 228359
350231C	16643	Knee Lifter Rock Lever Knee Plate Arm Set Screw, for 228359
350231C	16643	Knee Lifter Rock Lever Knee Plate Set Screw, for 228364
350314F	16827	Hook Shaft Position Screw, for 210621
350431E	16890	Arm Shaft Oil Packing Stop Screw, for 202249

SINGER Needles should be used
in SINGER Machines.
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO.**" 1


Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. 2

**ILLUSTRATIONS
OF
PARTS**

ILLUSTRATIONS
OF
PARTS



15998 - 3/8

228212

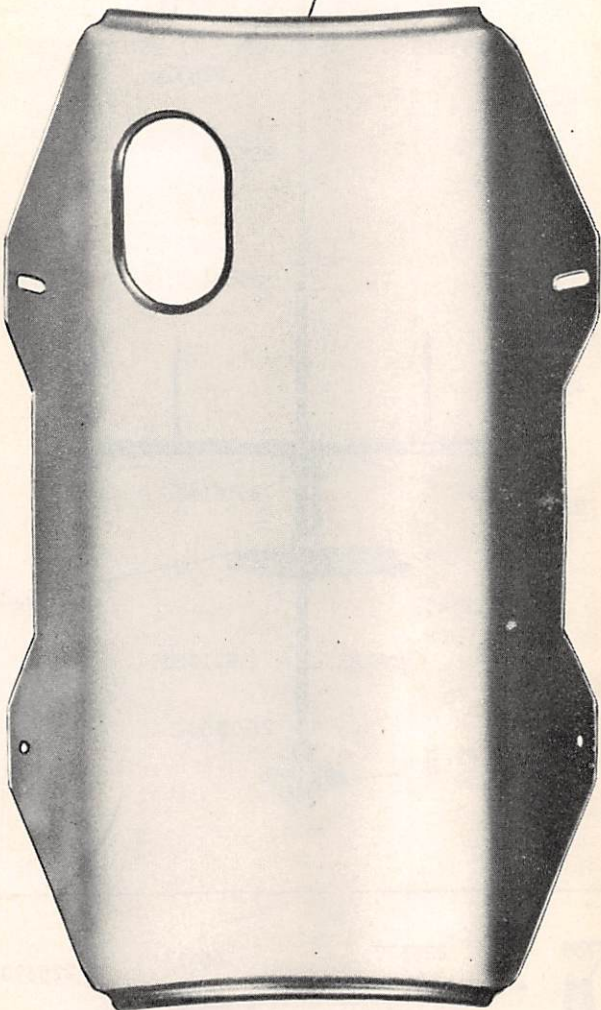


16257 - 1/6


259143





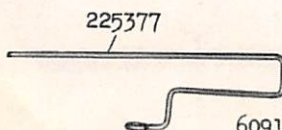
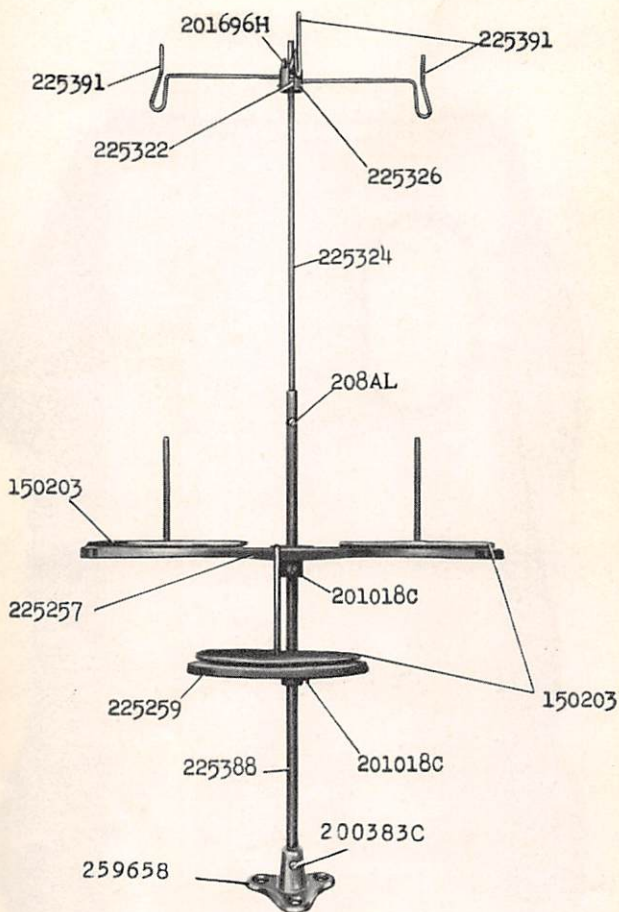


16643 - 3/8

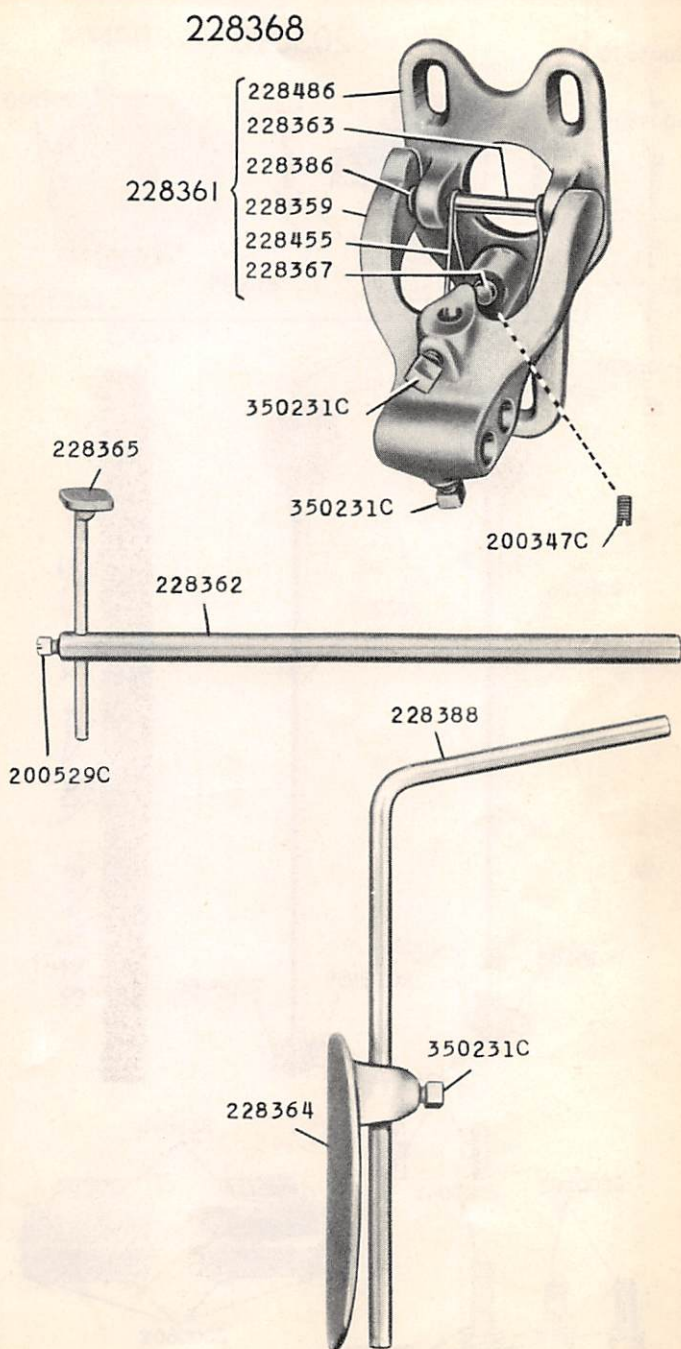

16826 - 3/8

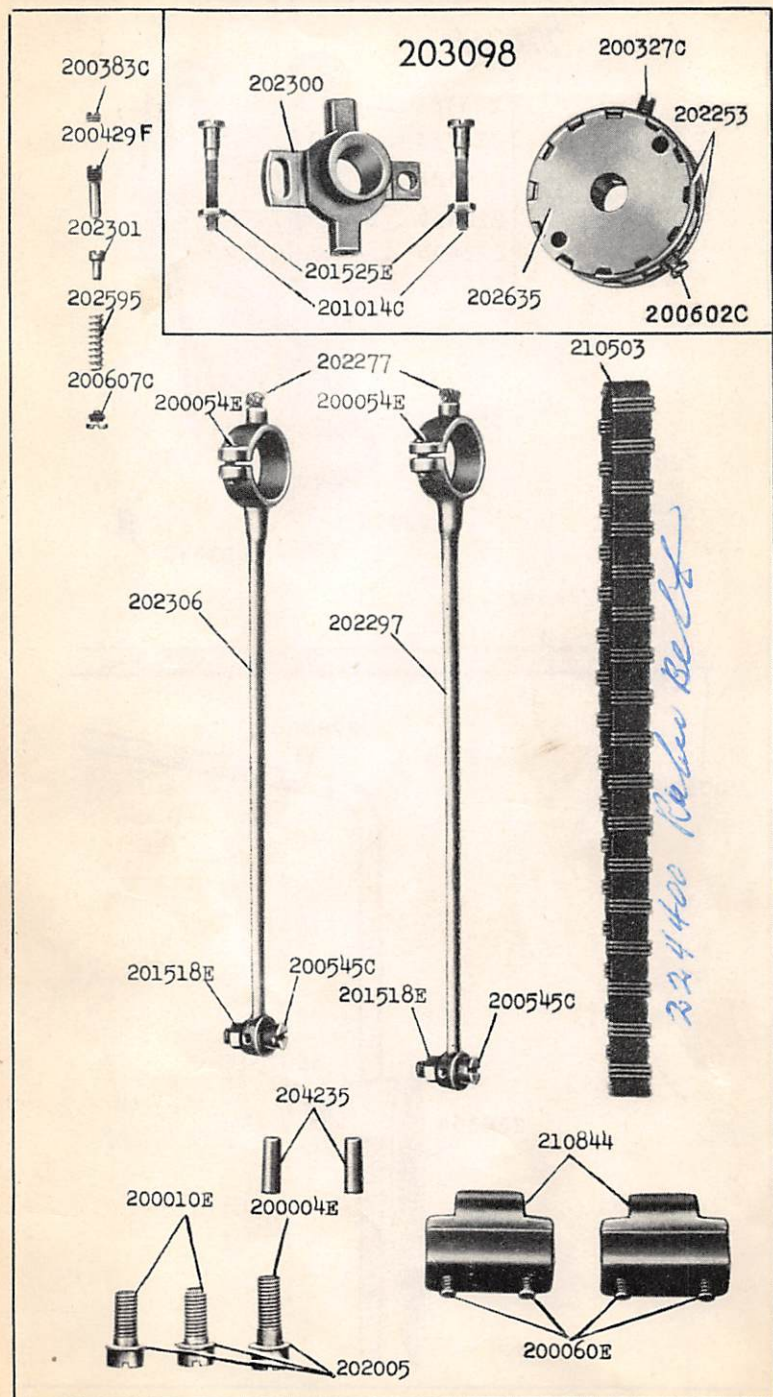


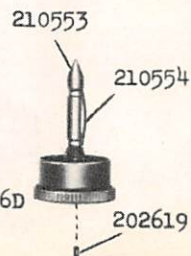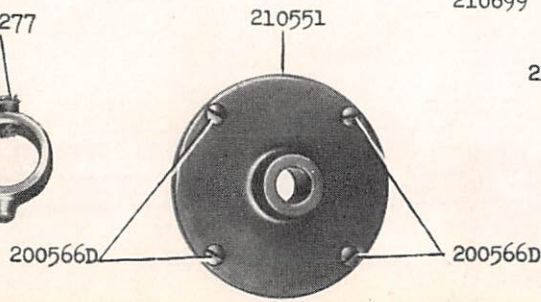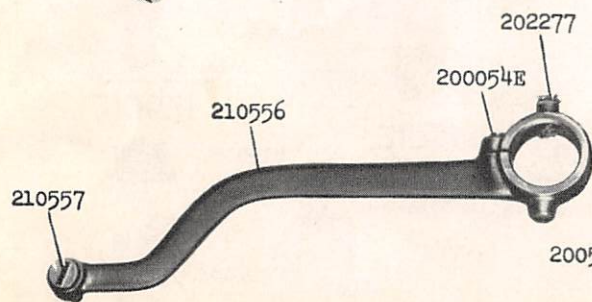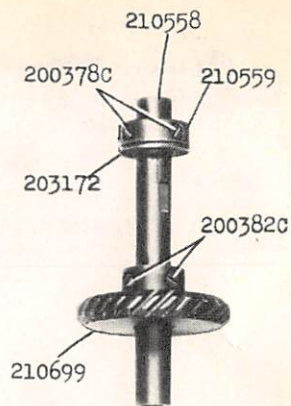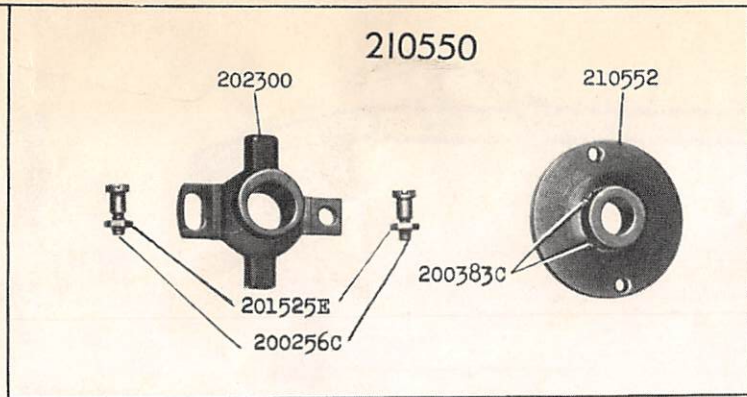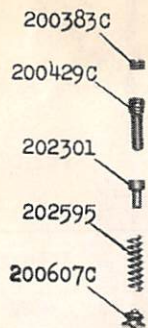


16828 - 3/8

16836 - 1/2

225498




228476



120342

120343

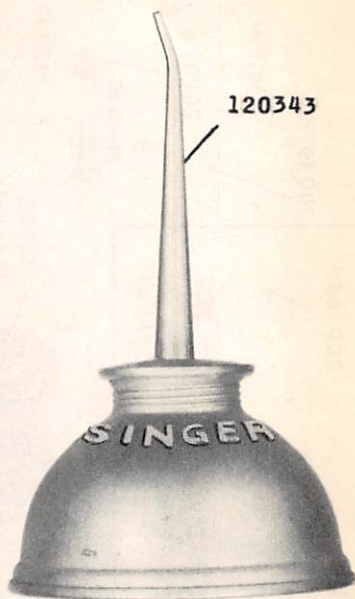


41400




225554




231337



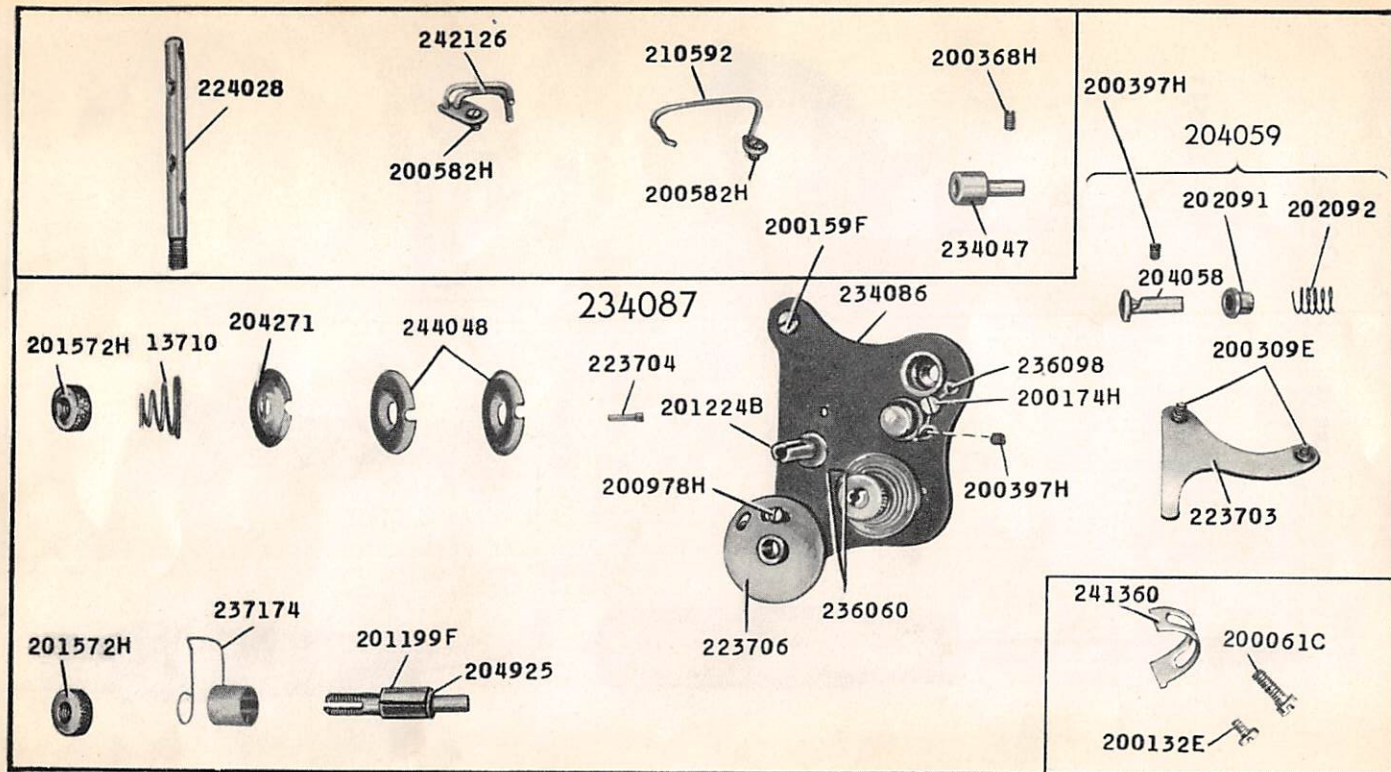


16886 - 1/2

16887 - 1/2

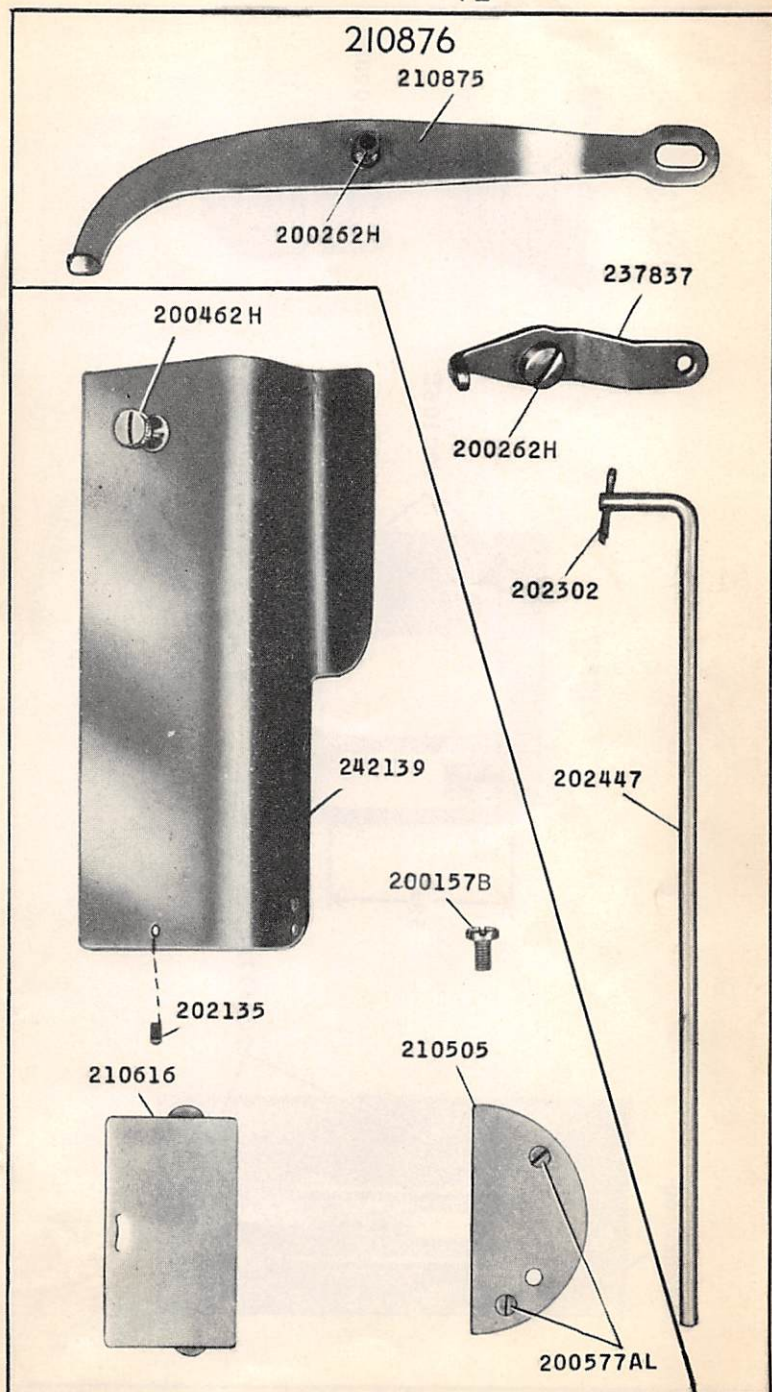


242129-60

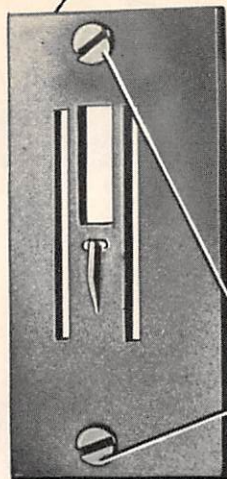

200577AL


210527

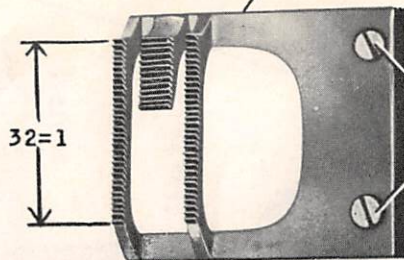

32=1

200106E

242132

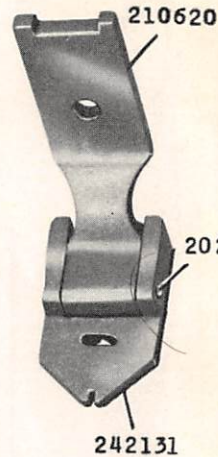


210620




202090

242131


16888

16889 - 1/2

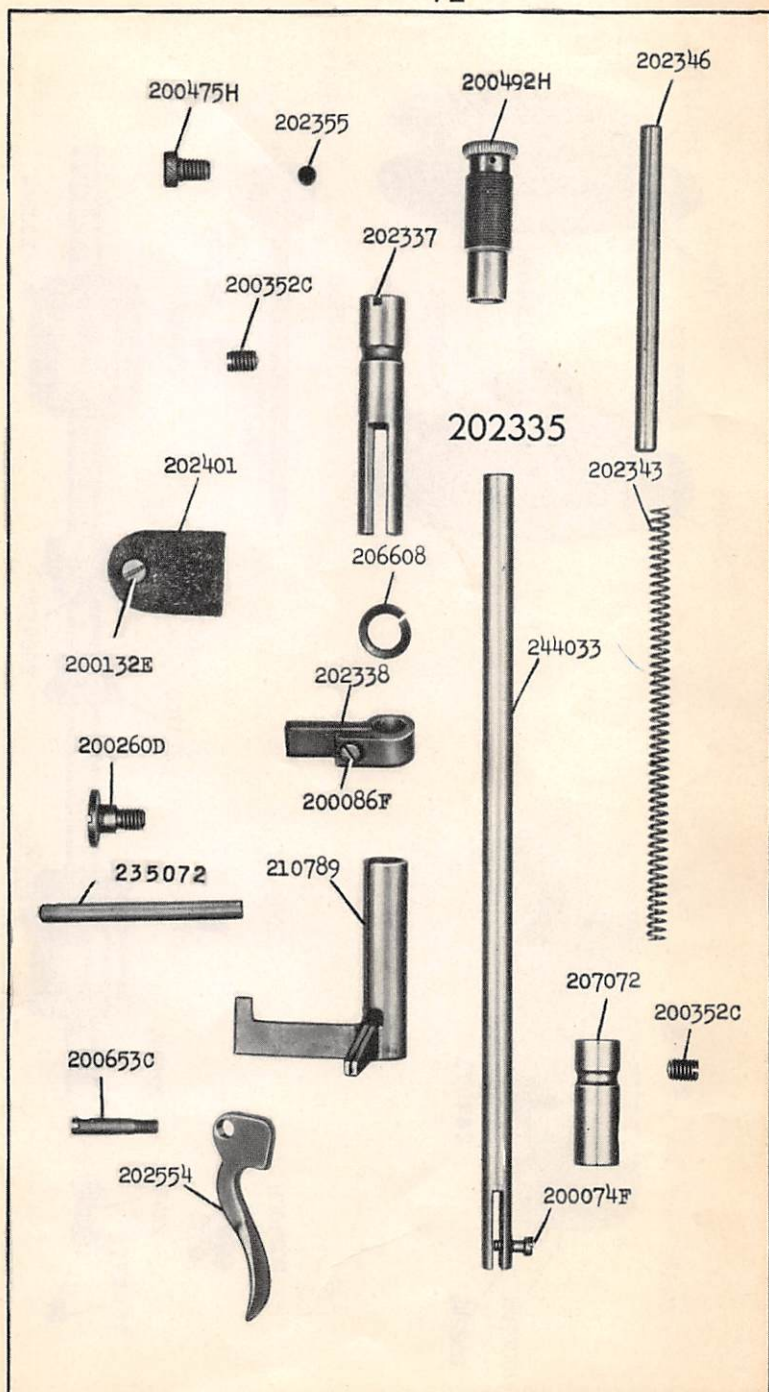


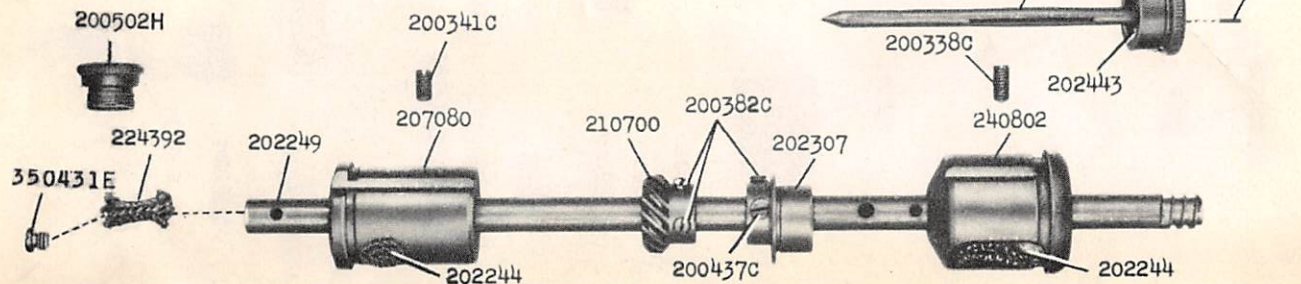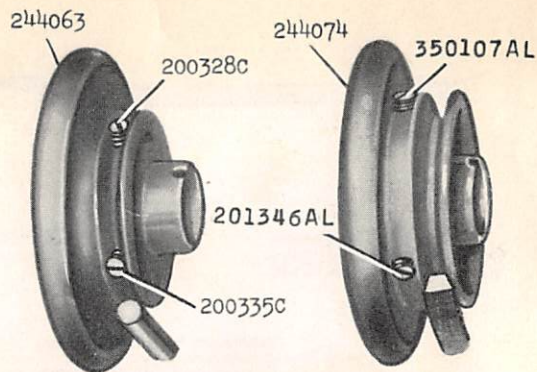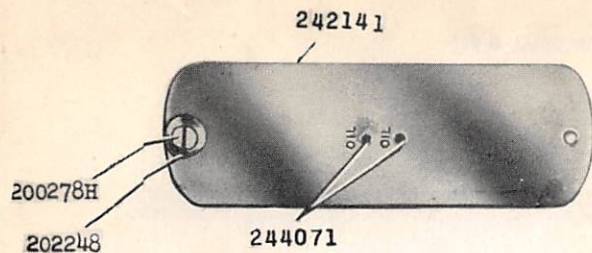




16890 - 3/8

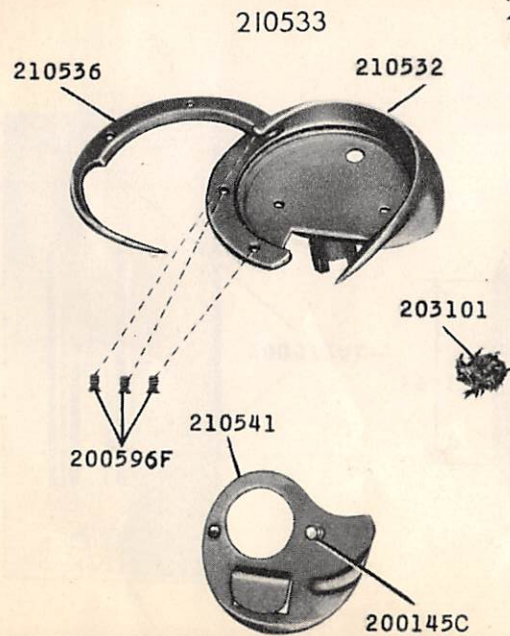

242107

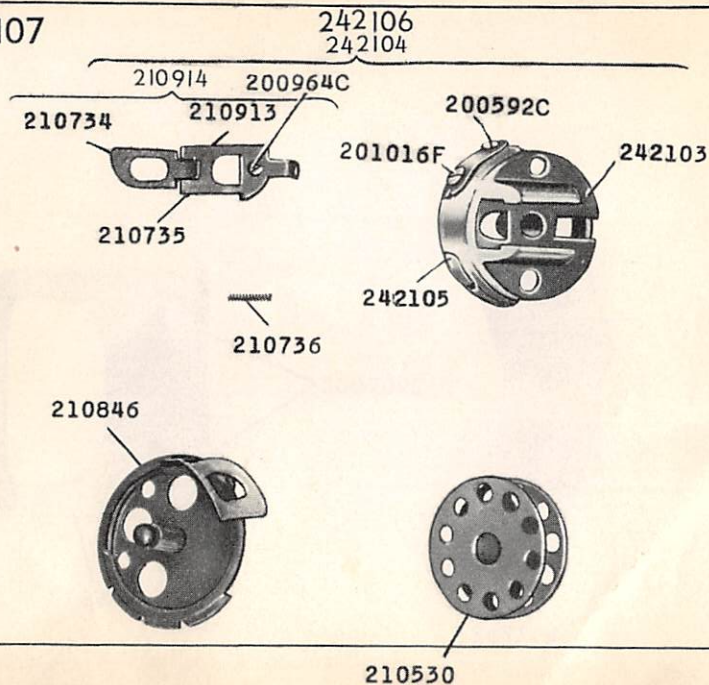


16891 - 3/4

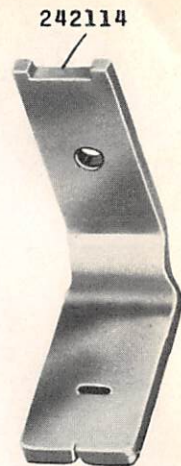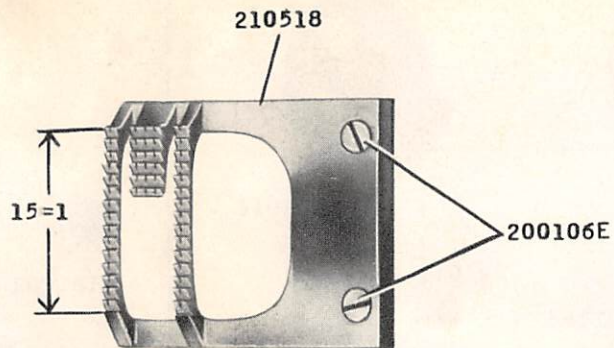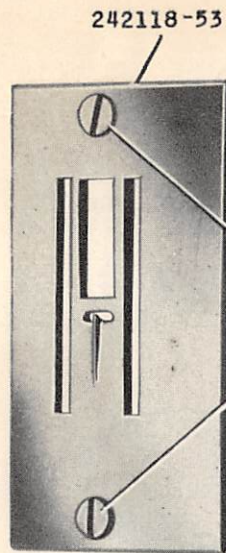

16892

16893 - 1/2

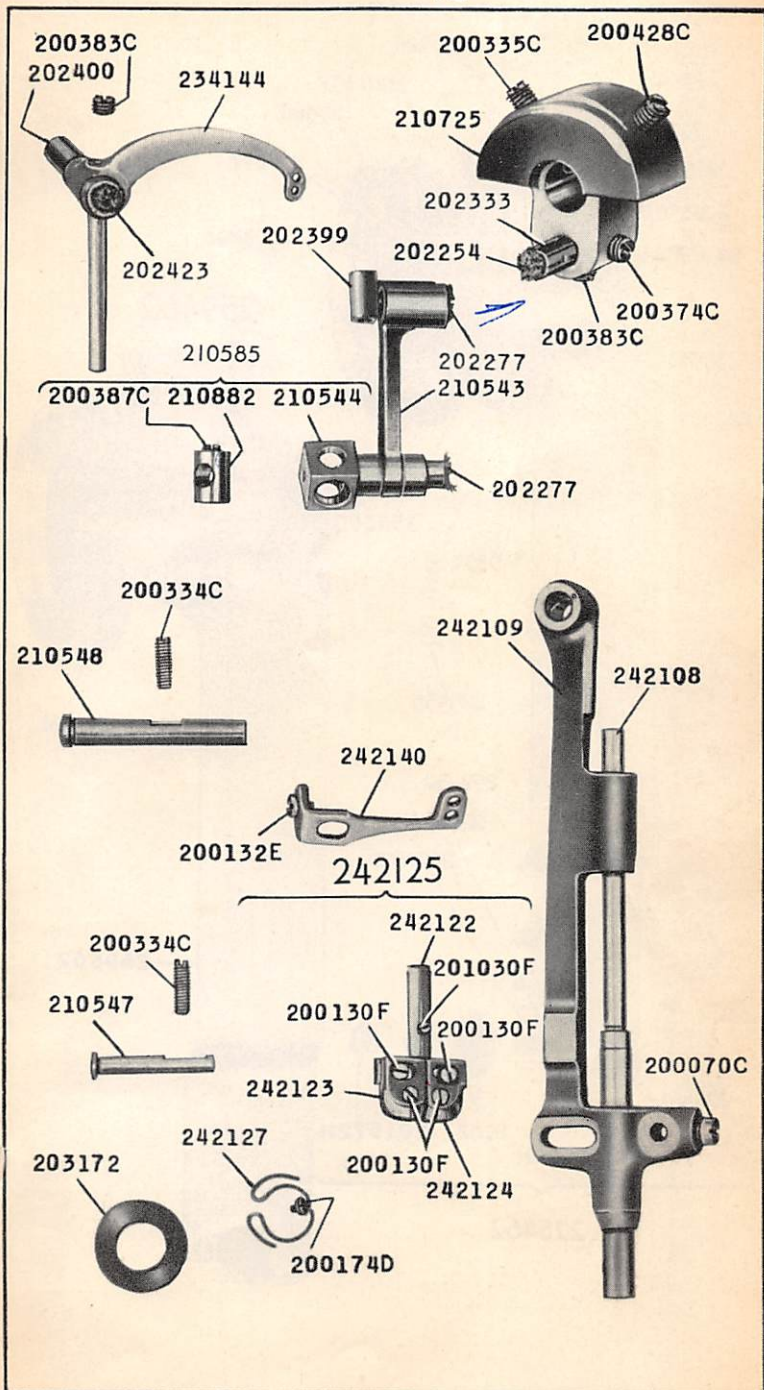

18312 - 3/8

