

Form 2696w

(141)

Printed in U. S. A.

LIST OF PARTS

SINGER^{}**
MACHINES
Nos. 111w116 and 111w117

THE SINGER COMPANY

From the library of: Superior Sewing Machine & Supply LLC

**A Trade Mark of THE SINGER COMPANY

Copyright, U. S. A., 1938, 1940 and 1941
by The Singer Company
All Rights Reserved for All Countries

INDEX

	Page
Accessories	17
Bobbin Winder	17
Foot Lifter	20
Grinder	19
Knee Lifter	18
Machine No.111w116	5
Machine No.111w117	16
Miscellaneous Parts	21
Numerical List of Parts	23
Thread Unwinder	20

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the PART number in the FIRST column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above case), must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished, Nickel Plated and Buffed.
- B. Polished, Nickel Plated and Buffed.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.
- J. Nickel Plated only.
- R. Merlized.
- X. Black Oxide.
- XC. Hardened and Black Oxide.
- Y. Blade Nickel only.

These letters MUST BE USED when they appear in the list and AFTER the number, as in the list.

In this series:


200001 to 201500 and 350001 to 351500 are Screw Numbers.
201501 to 201800 and 351501 to 351800 are Nut Numbers.
201801 to 202000 and 351801 to 352000 are Roller Numbers.
202001 to 350000 are Numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are NOT TO BE USED in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished when repairs are made at the factory.

LIST OF PARTS COMPLETE FOR

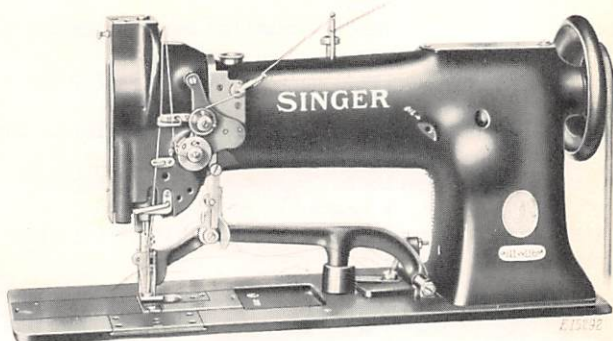

MACHINE No. 111w116

ALTERNATING PRESSERS. VERTICAL TRIMMER.
COMPOUND FEED. SAFETY CLUTCH. KNEE LIFTER.
FOR LEATHER COATS, LEATHER GLOVES AND COMBINATION
LEATHER AND CANVAS GLOVES.

No.	Plate	Name
*240451	-----	Arm with 202135 and two 240174
224002	16661	" Cap
200278H	16661	" " Screw
202248	16661	" " " Washer
204235	16671	" Position Pin (2)
200004E	16671	" Screw (3)
202005	16671	" " Washer (3)
237177	16661	" Shaft with 200357E and 224392
240802	16661	" " Bushing (back) with 202244
202244	16661	" " " " Oil Packing (wick)
200338C	16661	" " " " Set Screw
207080	16661	" " " (front) with 202244
202244	16661	" " " " Oil Packing (wick)
200502B	16661	" " " " " " Thumb
		Screw

No.	Plate	Name
200338C	16661	Arm Shaft Bushing (front) Set Screw
224103	16662	" " Connection Belt
224104	16662	" " " " Pulley with 200327C, 200602E and two 202253
200602E	16662	Arm Shaft Connection Belt Pulley Position Screw
200327C	16662	Arm Shaft Connection Belt Pulley Set Screw
202253	16662	Arm Shaft Connection Belt Pulley Spring Flange
224113	16665	Arm Shaft Connection Belt Timing Collar with 200113F
200113F	16665	Arm Shaft Connection Belt Timing Collar Set Screw
224139	16665	Arm Shaft Connection Belt Timing Plate
200164B	16665	" " " " " " " Screw (2)
224392	16661	Arm Shaft Oil Packing (wick)
200357E	16661	" " " " Stop Screw
224144	16671	Attachment Slide Plate with 213479 and 236061
236061	16671	Attachment Slide Plate Friction Slide
213479	16671	" " " " " Spring
240452	16661	Balance Wheel (disc) "v" belt groove (outside diam. of belt groove 3.268 in.) with 201346C and 350107C
237202	16661	Balance Wheel (disc) 5-1/4 in.diam. (belt groove 2-3/4 in.diam.) with 200328C and 200335C
350419H	16661	Balance Wheel Adjusting Screw
200328C	16661	" " Position Screw
350107C	16661	" " " "
200335C	16661	" " Set Screw
201346C	16661	" " " "
*240453	-----	Bed
202258	16662	" Hinge Connection (2)
200570E	16662	" " " Screw (4)
54897	16665	" Oil Cup
240254	16671	" Slide (front)
203470	16663	Bobbin
*233764	-----	" Case
203648	16663	" " Latch
*202056	-----	" " " Pin
203473	16663	" " " Plunger
203474	16663	" " " Spring
241674	16663	" " Oiling Felt
241675	16663	" " " " Retainer
350405C	16663	" " " " " Screw

No.	Plate	Name
224004	16664	Bobbin Case Opener
224005	16664	" " " Lever with 201349C, 201542C and 203101
201349C	16664	Bobbin Case Opener Lever Driving Screw Stud
201542C	16664	Bobbin Case Opener Lever Driving Screw Stud Nut
203101	16664	Bobbin Case Opener Lever Driving Screw Stud Oil Packing (wick)
265088	16664	Bobbin Case Opener Lever Hinge Stud with 202277
202277	16664	Bobbin Case Opener Lever Hinge Stud Oil Packing (wick)
200364C	16664	Bobbin Case Opener Lever Hinge Stud Set Screw
223623	16664	Bobbin Case Opener Lever Link
200118D	16664	" " " Screw
203214	16663	" " Tension Spring
200984C	16663	" " " " Regulating Screw
200594C	16663	" " " " Screw
203216	16663	" " Washer (cloth)
233765	16663	Bobbin Case complete, Nos. 200594C, 200984C, 202056, 203214, 203216, 203473, 203474, 203648, 233764, 241674, 241675 and two 350405C
240104	16671	Face Plate
202135	16671	" " Position Pin
200473B	16671	" " Thumb Screw
240454	16666	Feed Bar with 200336E and 201535E
240455	16666	" " 240454 with 200040C, 224052 and 225837
350393C	16666	Feed Bar Hinge Screw (driving)
201518E	16666	" " " " Nut
240456	16672	" Dog, 46 needle hole, for needle sizes 16 and 18, for 240480
240457	16672	Feed Dog, 46 needle hole, for needle sizes 16 and 18, for 240482, 240484, 240487, 240489 and 240495
200106E	16672	Feed Dog Screw (2)
200336E	16666	" " Support Screw
201535E	16666	" " " " Nut
237565	16662	" Driving Connection with 200049D and 202330
201171C	16662	Feed Driving Connection Hinge Screw
201517E	16662	" " " " " Nut
202277	16662	" " " " " Oil
		Packing (wick)
202330	16662	Feed Driving Connection Oil Packing (wick)
200049D	16662	" " " Pinch Screw

No.	Plate	Name
*237195	-----	Feed Driving Eccentric
*237749	-----	" " " Body
350107C	16661	" " " " Position Screw
443C	16661	" " " " Set Screw
1103C	16661	" " " " Regulating Screw
217D	16661	" " " " Set Screw
7071	16661	" " " " Washer
237196	16661	Feed Driving Eccentric complete, Nos. 217D, 443C, 1103C, 7071, 237195, 237749 and 350107C
223650	16666	Feed Driving Rock Shaft
240458	16666	" " " " 223650 with 201518E 240455 and 350393C
223652	16666	Feed Driving Rock Shaft Crank with 200019E
200019E	16666	" " " " " Pinch Screw
202625	16666	" " " " Stop Collar with two 200383C (2)
200383C	16666	Feed Driving Rock Shaft Stop Collar Set Screw
224154	16665	Feed Lifting Eccentric with 201220C
224052	16666	" " " " Fork with 200173D and 223655
200040C	16666	Feed Lifting Eccentric Fork Screw
225837	16666	" " " " " Washer
223655	16666	" " " " Oiling Felt
200173D	16666	" " " " " Screw
201220C	16665	" " " " Set Screw
*224016	-----	Hook (sewing)
224017	16663	" 224016 with 203525, 224025, two each 200590H and 201253F
240357	16663	Hook and Bobbin Case complete, Nos. 224017 and 233765
224019	16664	Hook Bushing (lower) (bronze)
200364C	16664	" " " " Set Screw
224020	16664	" " (upper) (bronze)
200446C	16664	" " " " Position Screw
223867	16665	" Driving Gear (spiral) with 200362C and 201222C
201222C	16665	Hook Driving Gear Position Screw
200362C	16665	" " " " Set Screw
224021	16664	" " " " Pinion (spiral) with two 200382C
200382C	16664	Hook Driving Pinion Set Screw
224022	16664	" " " " Thrust Washer
240459	16665	" " " " Shaft
224111	16665	" " " " Bushing (back) with 202244
200327C	16665	Hook Driving Shaft Bushing (back) Set Screw

No.	Plate	Name
202244	16665	Hook Driving Shaft Bushing Oil Packing (wick)
223681	16665	Hook Driving Shaft Bushing (center)
200335C	16665	" " " " " Set Screw
265314	16665	Hook Driving Shaft Lock Ratchet with 200354C and 200362C
200354C	16665	Hook Driving Shaft Lock Ratchet Position Screw
200362C	16665	Hook Driving Shaft Lock Ratchet Set Screw
240213	16665	" " " " Stud
248423	16665	" " " " " Cotter Pin
240214	16665	" " " " " Socket
248425	16665	" " " " " Spring
240215	16665	Hook Driving Shaft Lock Stud complete, Nos. 240213, 240214, 248423 and 248425
203525	16663	Hook Gib
201253F	16663	" " Screw
248151	16664	" Saddle with 200009E, 200446C, 224019, 224020 and two 200364C
223680	16665	Hook Saddle Bearing
200327C	16665	" " " Set Screw
223682	16665	" " Oil Guard
223814	16665	" " " Felt
200096D	16665	" " " Screw (2)
200009E	16664	" " Pinch Screw
200006E	16664	" " Screw
225585	16664	" " Washer
240315	16664	Hook Saddle complete, Nos. 200118D, 223623, 224004, 224005, 224021, 224022, 240357, 248151 and 265088
224025	16663	Hook Washer
200590H	16663	" " Screw
208490	16671	Knee Lifter Connection Lever
200262H	16671	" " " " Hinge Screw
223684	16671	" " " " Lifting Rod with 202302
202302	16671	Knee Lifter Connection Lever Lifting Rod Cotter Pin
206628	16671	Knee Lifter Connection Lever Lifting Rod Spring
227227	16671	Knee Lifter Connection Lever Lifting Rod Spring Collar with 200113F
200113F	16671	Knee Lifter Connection Lever Lifting Rod Spring Collar Set Screw
240124	16671	Knee Lifter Lifting Lever
200262H	16671	" " " " Hinge Screw
240460	16667	Knife

No.	Plate	Name
240461	16667	Knife Arm with 201034F, 201525E, 350036C and two 200126F
248202	16667	Knife Arm Base Plate with two each 200410C and 201617C
240462	16667	Knife Arm Base Plate 248202 with 240461
207011	16667	" " " " Position Plate
200574E	16667	" " " " " " Screw
		(2)
200540E	16667	Knife Arm Base Plate Screw
240423	16667	" " Guard
200410C	16667	" " Screw Center
201617C	16667	" " " " Nut
249249	16667	" " Spring
240463	16667	" " " Plunger
201034F	16667	" " Stop Screw
201525E	16667	" " " " Nut
240464	16667	" Driving Bar
240466	16667	" " " Slide Block
240467	16667	" " " " Plate with 200397H
200577XC	16667	" " " " " Screw (3)
240465	16667	Knife Driving Bar complete, Nos. 240464, 240468 to 240471, two each 200140H, 200577XC and 350444C
240468	16667	Knife Driving Link (lower)
240469	16667	" " " (upper)
350444C	16667	" " " Hinge Screw
240470	16667	" " " Latch Spring
200140H	16667	" " " " " Screw
350036C	16667	" " " " Screw Stud
200126F	16667	" Screw
240471	16667	" Throw-out Handle
200577XC	16667	" " " " Screw
208545	16669	Lifting Bell Crank
200996C	16669	" " " Cap Screw
240125	16640	" " " Link
350172C	16640	" " " " " Screw Stud
201524E	16640	" " " " " " Nut
240203	16640	" Eccentric with 200382C and 200398C
240126	16640	" " " Connection
240171	16640	" " " " Crank with 200029E and 248821
248821	16640	Lifting Eccentric Connection Crank Oil Packing (wick)
200029E	16640	Lifting Eccentric Connection Crank Pinch Screw
200398C	16640	Lifting Eccentric Position Screw
200382C	16640	" " " Set Screw

No.	Plate	Name
240472	16672	Lifting Presser Foot, for 1/8 and 5/32 in. trimming margin, for 240496
240473	16672	Lifting Presser Foot, for 3/16 in. trimming margin, for 240497
240474	16672	Lifting Presser Foot, for 7/32 and 1/4 in., trimming margin, for 240497
240475	16672	Lifting Presser Foot, for 9/32 and 5/16 in. trimming margin, for 240497
240476	16672	Lifting Presser Foot, for 11/32 and 3/8 in. trimming margin, for 240497
200074F	16669	Lifting Presser Foot Screw
240136	16640	" Rock Shaft with 201524E and 350172C
240174	16640	" " " Bushing
240498	16670	Needle Bar with 200175D, 201350F and 240499
238251	16670	" " Connecting Link
264718	16670	" " " " Oil Guard
200161D	16670	" " " " " Screw
240327	16670	" " " " Stud with 202254
202254	16670	" " " " Oil Packing
		(wick)
200374C	16670	Needle Bar Connecting Link Stud Set Screw
200383C	16670	" " " " " " "
208552	16670	" " " Stud with 200086C
		and 202330
202330	16670	Needle Bar Connecting Stud Oil Packing
		(wick)
200086C	16670	Needle Bar Connecting Stud Pinch Screw
240477	16670	" " Crank with 200335C, 200374C, 200383C, 200428C and 240327
203172	16670	Needle Bar Crank Friction Washer
200428C	16670	" " " Position Screw
200335C	16670	" " " Set Screw
240478	16670	" " Rock Frame
210910	16670	" " " " Hinge Stud with 202277
202277	16670	" " " " Oil Packing
		(wick)
200347C	16670	Needle Bar Rock Frame Hinge Stud Set Screw
202666	16670	Needle Bar Rock Frame Position Bracket
200098F	16670	" " " " " "
		Screw
223690	16640	Needle Bar Rock Frame Rock Shaft
223691	16640	" " " " " " 223690
		with 200387C and 210920
223692	16640	Needle Bar Rock Frame Rock Shaft Crank
		with 200029E
223693	16662	Needle Bar Rock Frame Rock Shaft Crank
		Connection with 202277

No.	Plate	Name
200833C	16662	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw
201522E	16662	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw Nut
202277	16662	Needle Bar Rock Frame Rock Shaft Crank Connection Oil Packing (wick)
200029E	16640	Needle Bar Rock Frame Rock Shaft Crank Pinch Screw
202668	16640	Needle Bar Rock Frame Slide Block
210920	16640	" " " " " " 202668 with 201141C
201141C	16640	Needle Bar Rock Frame Slide Block Screw Stud
200387C	16640	Needle Bar Rock Frame Slide Block Screw Stud Set Screw
240499	16670	Needle Bar Thread Guide
200175D	16670	" " " " Screw
201350F	16670	" Set Screw
208566	16669	Presser Bar with 200074F
241352	16669	" " Bushing (lower)
207072	16669	" " " (upper)
200352C	16669	" " " Set Screw (2)
264525	16669	" " Lifter
200653C	16669	" " " Hinge Screw
264526	16669	" " Lifting Bracket with 200054E
200975F	16669	" " " " Guide Screw
200054E	16669	" " " " Pinch Screw
202337	16669	" " Position Guide
202338	16669	" " " " Lever with 200086F
200086F	16669	Presser Bar Position Guide Lever Pinch Screw
200352C	16669	Presser Bar Position Guide Set Screw
237836	16671	" " Spring (flat)
210949	16669	" " " Bracket with 200086C
200086C	16669	" " " " Pinch Screw
201410F	16671	" " " Regulating Screw
200948F	16671	" " " Support Screw
265032	16665	Safety Clutch Hook Driving Shaft Position Collar with two 201254C
201254C	16665	Safety Clutch Hook Driving Shaft Position Collar Set Screw
265101	16665	Safety Clutch Locking Lever
265050	16665	" " " " Connecting Link
350433C	16665	Safety Clutch Locking Lever Hinge Screw
265102	16665	" " " " Spring
350436C	16665	" " " " " Screw

No.	Plate	Name
265103	16665	Safety Clutch Pulley with 202253
202253	16665	" " " Spring Flange
265057	16665	" " " Throw-in Latch
265052	16665	" " " " Pin
265051	16665	" " " " Spring
265104	16665	Safety Clutch complete, Nos. 265032, 265050 to 265052, 265057, 265101, to 265103, 350433C and 350436C
241518	16670	Take-up Lever
202399	16670	" " " Driving Stud with 202277
202277	16670	" " " " Oil Packing (wick)
202400	16670	" " " Hinge Stud with 202423
202423	16670	" " " " Oil Packing (wick)
200383C	16670	" " " " Set Screw
240023	16668	Tension Bracket with 201224B and 236060
200159F	16668	" " " Screw
240446	16668	Tension Bracket complete, Nos. 200978H, 201199F, 204271, 223438, 223703, 223704, 223706, 237174, 240023, two each 200309E 201572B and 244048
244048	16668	Tension Disc
236060	16668	" " " Position Pin
223703	16668	" " " Release Lever
235576	16669	" " " " Rod
200309E	16668	" " " " Screw
223704	16668	" " " Plunger
264527	16669	" " " Slide
240142	16669	" " " " Spring
204271	16668	" " " Washer
223438	16668	" " " Spring
201224B	16668	" " " Stud
201572B	16668	" " " Thumb Nut
223706	16668	Thread Controller Disc
200978H	16668	" " " " Screw
237174	16668	" " " Spring
241360	16668	" " " " Stop
200132E	16668	" " " " " Screw
201199F	16668	" " " Stud with 204925
200032E	16668	" " " " Set Screw
201572B	16668	" " " " Thumb Nut
204925	16668	" " " " Washer
202412	16661	" " " Guide
224040	16668	" " " "
210954	16668	" " " (lower)
210955	16668	" " " (upper)
200582H	16668	" " " Screw (4)
240034	16668	" " " Retainer
200397H	16667	" " " Set Screw

No.	Plate	Name
240277	16672	Throat Plate Block
200586H	16672	" " " Screw
240401	16672	" " Body
240384	16672	" " Knife Cutting Bar, trims 1/8 inch
240481	16672	Throat Plate Knife Cutting Bar, trims 5/32 inch
240483	16672	Throat Plate Knife Cutting Bar, trims 3/16 inch
240421	16672	Throat Plate Knife Cutting Bar, trims 1/4 inch
240488	16672	Throat Plate Knife Cutting Bar, trims 9/32 inch
240494	16672	Throat Plate Knife Cutting Bar, trims 3/8 inch
200583H	16672	Throat Plate Knife Cutting Bar Screw
240479	16672	" " Slide Bowl, for trimming margins from 1/8 to 3/8 in., in steps of 1/32 in. State margin required.
200586H	16672	Throat Plate Slide Bowl Screw
240480	16672	Throat Plate complete, trims opposite the needle and 1/8 in. to right of seam, Nos. 240277, 240384, 240401, 240479, two each 200583H and 200586H, for 240456
240482	16672	Throat Plate complete, trims opposite the needle and 5/32 in. to right of seam, Nos. 240277, 240401, 240479, 240481, two each 200583H and 200586H, for 240457
240484	16672	Throat Plate complete, trims opposite the needle and 3/16 in. to right of seam, Nos. 240277, 240401, 240479, 240483, two each 200583H and 200586H, for 240457
240487	16672	Throat Plate complete, trims opposite the needle and 1/4 in. to right of seam, Nos. 240277, 240401, 240421, 240479, two each 200583H and 200586H, for 240457
240489	16672	Throat Plate complete, trims opposite the needle and 9/32 in. to right of seam, Nos. 240277, 240401, 240479, 240488, two each 200583H and 200586H, for 240457
240495	16672	Throat Plate complete, trims opposite the needle and 3/8 in. to right of seam, Nos. 240277, 240401, 240479, 240494, two each 200583H and 200586H, for 240457
691F	16672	Throat Plate Screw (2)
240183	16669	Vibrating Presser Bar
240415	16669	" " " Connecting Link
202277	16669	" " " Oil Packing (wick)

No.	Plate	Name
240496	16672	Vibrating Presser Foot, 46 needle hole, with 201015F, for 240472
240497	16672	Vibrating Presser Foot, 46 needle hole, with 201015F, for 240473 to 240476
201015F	16672	Vibrating Presser Foot Pinch Screw

MACHINE No. IIIwII7

ALTERNATING PRESSERS. VERTICAL TRIMMER.
 COMPOUND FEED. SAFETY CLUTCH. KNEE LIFTER.
 AUTOMATIC TENSION ADJUSTER.
 FOR TRIMMING AND STITCHING SLEEVES IN COATS.

Same as Machine No. IIIwII6 with the
 following exceptions:

No.	Plate	Name
264690	16674	Presser Bar with 200074F, in place of 208566
240527	16676	Presser Bar Spring (auxiliary)
240526	16676	" " " (flat), in place of 237836
350448F	16676	Presser Bar Spring Regulating Screw, in place of 201410F
240528	16674	Tension Adjusting Arm
240529	16674	" " " Bracket with 200027E
200027E	16674	" " " " Pinch Screw
200077D	16674	" " " Screw
240530	16675	" " Thimble
240531	16675	" Bracket with 236060 and 240535, in place of 240023
240532	16675	Tension Bracket complete, Nos. 200978H, 201199F, 201572B, 223706, 237174, 240530, 240531, 240533, 240534 and two 244048, in place of 240446
235576	16669	Tension Release Lever Rod, not used
264527	16669	" " Slide, not used
240142	16669	" " " Spring, not used
240533	16675	" Spring, in place of 223438
240534	16675	" " Washer
240535	16675	" Stud, in place of 201224B

ACCESSORIES

No.	Plate	Name
203470	16663	Bobbin (5)
225497	17620	" Case Screw Driver
126 x 11	16670	Needles, six, size 22
240460	16667	Knife (3)
224121	16644	Drip Pan
41400	17620	Machine Rest Pin (wood)
120342	17620	Oiler (copper plated) with 120343
120343	17620	" Spout (3-1/2 in. long)
225498	17620	Screw Driver (7-1/4 in. long)
225554	17620	Wrench (steel)

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

259428	16615	Brake (leather)
259429	16615	" Clamp
200113F	16615	" " Screw
225453	16615	Frame with 202277 and 225438
225454	16615	" Hinge Pin
202277	16615	" Oil Packing (wick)
225438	16615	" " Well Cap
225455	16615	" Spring
225456	16615	" " Plunger
225368	16615	Pulley with 200380C
200380C	16615	" Set Screw
225381	16615	Spindle
225444	16615	Stop Latch
200056E	16615	" " Screw
225458	16615	" " Thumb Lever
225459	16615	" " " " Hinge Stud
225459	16615	" " " " Joint Stud
202478	16615	" " Trip Lever
200299H	16615	" " " " Hinge Screw
225461	16615	Tension Bracket with 201499B
200082D	16615	" " Screw
228026	16615	" " " Washer
2102	16615	" Disc
13710	16615	" Spring
201499B	16615	" Stud
201572B	16615	" " Thumb Nut

ACCESSORIES

No.	Plate	Name
225462	16615	Bobbin Winder Tension Bracket complete, Nos.13710,201572B,225461 and two 2102
259430	16615	Bobbin Winder and Tension Bracket Base
259431	16615	Universal Bobbin Winder complete,Nos. 200056E,200082D,200113F,200299H,202478, 225368,225381,225444,225453 to 225456, 225458,225462,228026,259428 to 259430, two each 225459 and wood screws 3/4 in., No.12,R.H.B.

KNEE LIFTER

228359	16643	Rock Lever with two 350231C
228360	16643	" " Bracket with 200347C and three wood screws 7/8 in.,No.12
228361	16643	Rock Lever Bracket 228360 with 228359, 228363,228367 and 228386
228362	16643	Rock Lever Extension with 200529C
350231C	16643	" " " Set Screw
228363	16643	" " Hinge Pin
228364	16643	" " Knee Plate with 350231C
228388	16643	" " " " Arm
350231C	16643	" " " " " Set Screw
350231C	16643	" " " " " Set Screw
228365	16643	" " Rod
200529C	16643	" " " Set Screw
228386	16643	" " Spring
228367	16643	" " Stop Stud
200347C	16643	" " " " " Set Screw
228368	16643	Knee Lifter complete,Nos.228361,228362, 228364,228365 and 228388

(Other Knee Lifter parts are listed with parts of
machine head.)

GRINDER

No.	Plate	Name
206977	16673	Emery Wheel, 2 in. diameter
206962	16673	" " Driving Shaft
201510D	16673	" " " " Nut
204101	16673	" " " " Washer
206963	16673	" " " " Pulley with two
200403C		
200403C	16673	Emery Wheel Driving Shaft Pulley Set Screw
259285	16673	" " Guard
200054E	16673	" " " Screw
206969	16673	" " Washer (paper)
206964	16673	Frame with two 54897
54897	16673	" Oil Cup
201070D	16673	Knife Thumb Screw
259487	16673	Slide Bracket with 200394C, 200457D, 202064 and two 210983
200457D	16673	Slide Bracket Adjusting Screw
244073	16673	" " " " Slide Plate
200161H	16673	" " " " " "
Screw		
200394C	16673	Slide Bracket Set Screw
206967	16673	" " Shaft
202510	16673	" " " Collar with 200141F
200141F	16673	" " " Set Screw
259287	16673	Throat Plate Knife Cutting Bar Clamp
202064	16673	" " " " " " Pin
259289	16673	" " " " " " Spring
201070D	16673	" " " " " " Thumb
Screw		
210983	16673	Throat Plate Knife Cutting Bar Pin
259488	16673	Grinder complete, Nos. 200161H, 201510D, 204101, 206962 to 206964, 206967, 206977, 244073, 259285, 259287, 259289, 259487, two each 200054E, 201070D, 202510 and 206969.

FOOT LIFTER

Parts Required for Changing from
Knee Lifter to Foot Lifter

No.	Plate	Name
223733	16671	Lifting Lever Extension
200082D	16671	" " " Screw (2)
227561	16671	" " Spring

FOOT LIFTER

227952	17620	Foot Lifter Lever with 227954
227678	17620	" " " Chain, 48 in. long, with 202784
227954	17620	Foot Lifter Lever Chain Hook (lower)
202784	17620	" " " " " (upper)
225016	17620	" " " Hinge Pin
227953	17620	" " " Stand with two wood screws 1 in., No. 12
227955	17620	Foot Lifter Lever complete, Nos. 225016, 227678, 227952 and 227953

THREAD UNWINDER

225257	17900	Spool Rest (for two spools) (flat) with 201018C
150203	17900	Spool Rest Cushion (felt)
225388	17900	" " Rod
200383C	17900	" " " Set Screw
201018C	17900	" " Set Screw
202490	17900	" Stand with 200383C
225391	17900	Thread Guide
201696J	17900	" " Lock Nut
225326	17900	" " Position Cup
225324	17900	" " Rod with 208E and 225322
208E	17900	" " " Screw
225322	17900	" " " Washer
225258	17900	Thread Unwinder (for two spools) complete, Nos. 201696J, 202490, 225257, 225324, 225326, 225388 two each 150203, 225391 and three wood screws 7/8 in., No. 12

MISCELLANEOUS PARTS

No.	Plate	Name
60913	17900	Spool Weight with 60914
60914	17900	" " Center Pin
225377	17900	" Wire, for small spools
27739	17900	Thread Cone (wood)
225390	17900	" " Holder

NUMERICAL LIST OF PARTS

No.	Plate	Name
208E	17900	Thread Unwinder Thread Guide Rod Screw, for 225324
217D	16661	Feed Driving Eccentric Set Screw, for 237196
443C	16661	Feed Driving Eccentric Body Set Screw, for 237196
691F	16672	Throat Plate Screw
1103C	16661	Feed Driving Eccentric Regulating Screw, for 237196
2102	16615	Bobbin Winder Tension Disc, for 225462
7071	16661	Feed Driving Eccentric Set Screw Washer for 237196
13710	16615	Bobbin Winder Tension Spring, for 225462
27739	17900	Thread Cone (wood)
41400	17620	Machine Rest Pin (wood)
54897	16665	Bed Oil Cup
54897	16673	Grinder Frame Oil Cup, for 206964
60913	17900	Spool Weight with 60914
60914	17900	" " Center Pin, for 60913
120342	17620	Oiler (copper plated) with 120343
120343	17620	" Spout 3-1/2 in. long, for 120342
150203	17900	Thread Unwinder Spool Rest Cushion (felt), for 225258
200004E	16671	Arm Screw
200006E	16664	Hook Saddle Screw
200009E	16664	" " Pinch Screw, for 248151
200019E	16666	Feed Driving Rock Shaft Crank Pinch Screw, for 223652
200027E	16674	Tension Adjusting Arm Bracket Pinch Screw, for 240529
200029E	16640	Lifting Eccentric Connection Crank Pinch Screw, for 240171
200029E	16640	Needle Bar Rock Frame Rock Shaft Crank Pinch Screw, for 223692
200032E	16668	Thread Controller Stud Set Screw
200040C	16666	Feed Lifting Eccentric Fork Screw, for 240455
200049D	16662	Feed Driving Connection Pinch Screw, for 237565
200054E	16673	Grinder Emery Wheel Guard Screw, for 259488
200054E	16669	Presser Bar Lifting Bracket Pinch Screw, for 264526

NUMERICAL LIST OF PARTS

No.	Plate	Name
200056E	16615	Bobbin Winder Stop Latch Screw, for 259431
200074F	16669	Lifting Presser Foot Screw, for 208566
200077D	16674	Tension Adjusting Arm Screw, for Machine No. 111w117
200082D	16615	Bobbin Winder Tension Bracket Screw, for 259431
200082D	16671	Foot Lifter Lifting Lever Extension Screw
200086C	16670	Needle Bar Connecting Stud Pinch Screw, for 208552
200086F	16669	Presser Bar Position Guide Lever Pinch Screw, for 202338
200086C	16669	Presser Bar Spring Bracket Pinch Screw, for 210949
200096D	16665	Hook Saddle Oil Guard Screw
200098F	16670	Needle Bar Rock Frame Position Bracket Screw
200106E	16672	Feed Dog Screw
200113F	16665	Arm Shaft Connection Belt Timing Collar Set Screw, for 224113
200113F	16615	Bobbin Winder Brake Clamp Screw, for 259431
200113F	16671	Knee Lifter Connection Lever Lifting Rod Spring Collar Set Screw, for 227227
200118D	16664	Bobbin Case Opener Screw, for 240315
200126F	16667	Knife Screw, for 240461
200132E	16668	Thread Controller Spring Stop Screw
200140H	16667	Knife Driving Link Latch Spring Screw, for 240465
200141F	16673	Grinder Slide Bracket Shaft Collar Set Screw, for 202510
200159F	16668	Tension Bracket Screw
200161H	16673	Grinder Slide Bracket Adjusting Screw Slide Plate Screw, for 259488
200161D	16670	Needle Bar Connecting Link Oil Guard Screw
200164B	16665	Arm Shaft Connection Belt Timing Plate Screw
200173D	16666	Feed Lifting Eccentric Oiling Felt Screw, for 224052
200175D	16670	Needle Bar Thread Guide Screw, for 240498
200262H	16671	Knee Lifter Connection Lever Hinge Screw
200262H	16671	" " Lifting Lever Hinge Screw
200278H	16661	Arm Cap Screw
200299H	16615	Bobbin Winder Stop Latch Trip Lever Hinge Screw, for 259431
200309E	16668	Tension Release Lever Screw, for 240446
200327C	16662	Arm Shaft Connection Belt Pulley Set Screw for 224104
200327C	16665	Hook Driving Shaft Bushing (back) Set Screw

NUMERICAL LIST OF PARTS

25

No.	Plate	Name
200327C	16665	Hook Saddle Bearing Set Screw
200328C	16661	Balance Wheel Position Screw,for 237202
200335C	16661	" " Set Screw,for 237202
200335C	16665	Hook Driving Shaft Bushing (center) Set Screw
200335C	16670	Needle Bar Crank Set Screw,for 240477
200336E	16666	Feed Dog Support Screw,for 240454
200338C	16661	Arm Shaft Bushing (back) Set Screw
200338C	16661	" " (front) Set Screw
200347C	16643	Knee Lifter Rock Lever Stop Stud Set Screw,for 228360
200347C	16670	Needle Bar Rock Frame Hinge Stud Set Screw
200352C	16669	Presser Bar Bushing Set Screw
200352C	16669	" " Position Guide Set Screw
200354C	16665	Hook Driving Shaft Lock Ratchet Position Screw,for 265314
200357E	16661	Arm Shaft Oil Packing Stop Screw,for 237177
200362C	16665	Hook Driving Gear Set Screw,for 223867
200362C	16665	" " Shaft Lock Ratchet Set Screw, for 265314
200364C	16664	Bobbin Case Opener Lever Hinge Stud Set Screw,for 248151
200364C	16664	Hook Bushing (lower) Set Screw,for 248151
200374C	16670	Needle Bar Connecting Link Stud Set Screw, for 240477
200380C	16615	Bobbin Winder Pulley Set Screw,for 225368
200382C	16664	Hook Driving Pinion Set Screw,for 224021
200382C	16640	Lifting Eccentric Set Screw,for 240203
200383C	16666	Feed Driving Rock Shaft Stop Collar Set Screw,for 202625
200383C	16670	Needle Bar Connecting Link Stud Set Screw, for 240477
200383C	16670	Take-up Lever Hinge Stud Set Screw
200383C	17900	Thread Unwinder Spool Rest Rod Set Screw, for 202490
200387C	16640	Needle Bar Rock Frame Slide Block Screw Stud Set Screw,for 223691
200394C	16673	Grinder Slide Bracket Set Screw,for 259487
200397H	16667	Thread Retainer Set Screw,for 240467
200398C	16640	Lifting Eccentric Position Screw,for 240203
200403C	16673	Grinder Emery Wheel Driving Shaft Pulley Set Screw,for 206963
200410C	16667	Knife Arm Screw Center,for 248202
200428C	16670	Needle Bar Crank Position Screw,for 240477

NUMERICAL LIST OF PARTS

No.	Plate	Name
200446C	16664	Hook Bushing (upper) Position Screw, for 248151
200457D	16673	Grinder Slide Bracket Adjusting Screw, for 259487
200473B	16671	Face Plate Thumb Screw
200502B	16661	Arm Shaft Bushing (front) Oil Packing Thumb Screw
200529C	16643	Knee Lifter Rock Lever Rod Set Screw, for 228362
200540E	16667	Knife Arm Base Plate Screw
200570E	16662	Bed Hinge Connection Screw
200574E	16667	Knife Arm Base Plate Position Plate Screw
200577XC	16667	" Driving Bar Slide Plate Screw
200577XC	16667	" Throw-out Handle Screw, for 240465
200582H	16668	Thread Guide Screw
200583H	16672	Throat Plate Knife Cutting Bar Screw, for 240480, 240482, 240484, 240487, 240489 and 240495
200586H	16672	Throat Plate Block Screw, for 240480, 240482, 240484, 240487, 240489 and 240495
200586H	16672	Throat Plate Slide Bowl Screw, for 240480, 240482, 240484, 240487, 240489 and 240495
200590H	16663	Hook Washer Screw, for 224017
200594C	16663	Bobbin Case Tension Spring Screw, for 233765
200602E	16662	Arm Shaft Connection Belt Pulley Position Screw, for 224104
200653C	16669	Presser Bar Lifter Hinge Screw
200833C	16662	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw
200948F	16671	Presser Bar Spring Support Screw
200975F	16669	" " Lifting Bracket Guide Screw
200978H	16668	Thread Controller Disc Screw, for 240446 and 240532
200984C	16663	Bobbin Case Tension Spring Regulating Screw, for 233765
200996C	16669	Lifting Bell Crank Cap Screw
201015F	16672	Vibrating Presser Foot Pinch Screw, for 240496 and 240497
201018C	17900	Thread Unwinder Spool Rest Set Screw, for 225257
201034F	16667	Knife Arm Stop Screw, for 240461
201070D	16673	Grinder Knife Thumb Screw, for 259488
201070D	16673	" Throat Plate Knife Cutting Bar Clamp Thumb Screw, for 259488
201141C	16640	Needle Bar Rock Frame Slide Block Screw Stud, for 210920

NUMERICAL LIST OF PARTS

27

No.	Plate	Name
201171C	16662	Feed Driving Connection Hinge Screw
201199F	16668	Thread Controller Stud with 204925, for 240446 and 240532
201220C	16665	Feed Lifting Eccentric Set Screw, for 224154
201222C	16665	Hook Driving Gear Position Screw, for 223867
201224B	16668	Tension Stud, for 240023
201253F	16663	Hook Gib Screw, for 224017
201254C	16665	Safety Clutch Hook Driving Shaft Position Collar Set Screw, for 265032
201346C	16661	Balance Wheel Set Screw, for 240452
201349C	16664	Bobbin Case Opener Lever Driving Screw Stud, for 224005
201350F	16670	Needle Set Screw, for 240498
201410F	16671	Presser Bar Spring Regulating Screw, for Machine No. 111w116
201499B	16615	Bobbin Winder Tension Stud, for 225461
201510D	16673	Grinder Emery Wheel Driving Shaft Nut, for 259488
201517E	16662	Feed Driving Connection Hinge Screw Nut
201518E	16666	" Bar Hinge Screw Nut, for 240458
201522E	16662	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw Nut
201524E	16640	Lifting Bell Crank Link Screw Stud Nut, for 240136
201525E	16667	Knife Arm Stop Screw Nut, for 240461
201535E	16666	Feed Dog Support Screw Nut, for 240454
201542C	16664	Bobbin Case Opener Lever Driving Screw Stud Nut, for 224005
201572B	16615	Bobbin Winder Tension Stud Thumb Nut, for 225462
201572B	16668	Tension Thumb Nut, for 240446
201572B	16668	Thread Controller Stud Thumb Nut, for 240446 and 240532
201617C	16667	Knife Arm Screw Center Nut, for 248202
201696J	17900	Thread Unwinder Thread Guide Lock Nut, for 225258
202005	16671	Arm Screw Washer
*202056	-----	Bobbin Case Latch Pin, for 233765
202064	16673	Grinder Throat Plate Knife Cutting Bar Clamp Pin, for 259487
202135	16671	Face Plate Position Pin, for 240451
202244	16661	Arm Shaft Bushing (back) Oil Packing (wick), for 240802
202244	16661	Arm Shaft Bushing (front) Oil Packing (wick), for 207080

NUMERICAL LIST OF PARTS

No.	Plate	Name
202244	16665	Hook Driving Shaft Bushing Oil Packing (wick),for 224111
202248	16661	Arm Cap Screw Washer
202253	16662	" Shaft Connection Belt Pulley Spring Flange,for 224104
202253	16665	Safety Clutch Pulley Spring Flange,for 265103
202254	16670	Needle Bar Connecting Link Stud Oil Packing (wick),for 240327
202258	16662	Bed Hinge Connection
202277	16664	Bobbin Case Opener Lever Hinge Stud Oil Packing (wick),for 265088
202277	16615	Bobbin Winder Frame Oil Packing (wick),for 225453
202277	16662	Feed Driving Connection Hinge Screw Oil Packing (wick)
202277	16670	Needle Bar Rock Frame Hinge Stud Oil Packing (wick),for 210910
202277	16662	Needle Bar Rock Frame Rock Shaft Crank Connection Oil Packing (wick),for 223693
202277	16670	Take-up Lever Driving Stud Oil Packing (wick),for 202399
202277	16669	Vibrating Presser Bar Oil Packing (wick)
202302	16671	Knee Lifter Connection Lever Lifting Rod Cotter Pin,for 223684
202330	16662	Feed Driving Connection Oil Packing (wick) for 237565
202330	16670	Needle Bar Connecting Stud Oil Packing (wick),for 208552
202337	16669	Presser Bar Position Guide
202338	16669	" " " " Lever with 200086F
202399	16670	Take-up Lever Driving Stud with 202277
202400	16670	" " Hinge Stud with 202423
202412	16661	Thread Guide
202423	16670	Take-up Lever Hinge Stud Oil Packing (wick) for 202400
202478	16615	Bobbin Winder Stop Latch Trip Lever,for 259431
202490	17900	Thread Unwinder Spool Stand with 200383C, for 225258
202510	16673	Grinder Slide Bracket Shaft Collar with 200141F,for 259488
238251	16670	Needle Bar Connecting Link
202625	16666	Feed Driving Rock Shaft Stop Collar with two 200383C
202666	16670	Needle Bar Rock Frame Position Bracket
202668	16640	" " " " Slide Block,for 210920

NUMERICAL LIST OF PARTS

29

No.	Plate	Name
202784	17620	Foot Lifter Lever Chain Hook (upper),for 227678
203101	16664	Bobbin Case Opener Lever Driving Screw Stud Oil Packing (wick),for 224005
203172	16670	Needle Bar Crank Friction Washer
203214	16663	Bobbin Case Tension Spring,for 233765
203216	16663	" " Washer, (cloth),for 233675
203470	16663	Bobbin
203473	16663	" Case Latch Plunger,for 233765
203474	16663	" " " Spring,for 233765
203525	16663	Hook Gib,for 224017
203648	16663	Bobbin Case Latch,for 233765
204101	16673	Grinder Emery Wheel Driving Shaft Nut Washer,for 259488
204235	16671	Arm Position Pin
204271	16668	Tension Release Washer,for 240446
204925	16668	Thread Controller Stud Washer,for 201199F
206628	16671	Knee Lifter Connection Lever Lifting Rod Spring Nos.206962 to 206964,for 259488
206962	16673	Grinder Emery Wheel Driving Shaft
206963	16673	" " " " " Pulley with two 200403C
206964	16673	Grinder Frame with two 54897
206967	16673	" Slide Bracket Shaft,for 259488
206969	16673	" Emery Wheel Washer (paper),for 259488
206977	16673	Grinder Emery Wheel 2 in.diam.,for 259488
207011	16667	Knife Arm Base Plate Position Plate
207072	16669	Presser Bar Bushing (upper)
207080	16661	Arm Shaft Bushing (front) with 202244
208490	16671	Knee Lifter Connection Lever
208545	16669	Lifting Bell Crank
208552	16670	Needle Bar Connecting Stud with 200086C and 202330
208566	16669	Presser Bar with 200074F,for Machine No. 111w116
210910	16670	Needle Bar Rock Frame Hinge Stud with 202277
210920	16640	Needle Bar Rock Frame Slide Block 202668 with 201141C,for 223691
210949	16669	Presser Bar Spring Bracket with 200086C
210954	16668	Thread Guide (lower)
210955	16668	" " (upper)
210983	16673	Grinder Throat Plate Knife Cutting Bar Pin for 259487
213479	16671	Attachment Slide Plate Friction Slide Spring,for 224144

NUMERICAL LIST OF PARTS

No.	Plate	Name
223438	16668	Tension Spring, for 240446
223623	16664	Bobbin Case Opener Lever Link, for 240315
223650	16666	Feed Driving Rock Shaft, for 240458
223652	16666	" " " " Crank with 200019E
223655	16666	" Lifting Eccentric Oiling Felt, for 224052
223680	16665	Hook Saddle Bearing
223681	16665	" Driving Shaft Bushing (center)
223682	16665	" Saddle Oil Guard
223684	16671	Knee Lifter Connection Lever Lifting Rod with 202302
223690	16640	Needle Bar Rock Frame Rock Shaft, for 223691
223691	16640	" " " " " " 223690 with 200387C and 210920
223692	16640	Needle Bar Rock Frame Rock Shaft Crank with 200029E
223693	16662	Needle Bar Rock Frame Rock Shaft Crank Connection with 202277
223703	16668	Tension Release Lever, for 240446
223704	16668	" " Plunger, for 240446
223706	16668	Thread Controller Disc, for 240446 and 240532
223733	16671	Foot Lifter Lifting Lever Extension
223814	16665	Hook Saddle Oil Guard Felt
223867	16665	" Driving Gear (spiral) with 200362C and 201222C
224002	16661	Arm Cap
224004	16664	Bobbin Case Opener, for 240315
224005	16664	" " " Lever with 201349C, 201542C and 203101, for 240315
*224016	-----	Hook (sewing), for 224017
224017	16663	" 224016 with 203525, 224025, two each 200590H and 201253F, for 240357
224019	16664	Hook Bushing (lower) (bronze), for 248151
224020	16664	" " (upper) (bronze), for 248151
224021	16664	" Driving Pinion (spiral) with two 200382C, for 240315
224022	16664	Hook Driving Pinion Thrust Washer, for 240315
224025	16663	Hook Washer, for 224017
224040	16668	Thread Guide
224052	16666	Feed Lifting Eccentric Fork with 200173D and 223655, for 240455
224103	16662	Arm Shaft Connection Belt
224104	16662	" " " " Pulley with 200327C, 200602E and two 202253
224111	16665	Hook Driving Shaft Bushing (back) with 202244

NUMERICAL LIST OF PARTS

31

No.	Plate	Name
224113	16665	Arm Shaft Connection Belt Timing Collar with 200113F
224121	16644	Drip Pan
224139	16665	Arm Shaft Connection Belt Timing Plate
224144	16671	Attachment Slide Plate with 213479 and 236061
224154	16665	Feed Lifting Eccentric with 201220C
224392	16661	Arm Shaft Oil Packing (wick), for 237177
225016	17620	Foot Lifter Lever Hinge Pin, for 227955
225257	17900	Thread Unwinder Spool Rest (for two spools) (flat) with 201018C, for 225258
225258	17900	Thread Unwinder (for two spools) complete Nos., 201696J, 202490, 225257, 225324, 225326, 225388, two each 150203, 225391 and three wood screws 7/8 in., No. 12
225322	17900	Thread Unwinder Thread Guide Rod Washer, for 225324
225324	17900	Thread Unwinder Thread Guide Rod with 208E and 225322, for 225258
225326	17900	Thread Unwinder Thread Guide Position Cup, for 225258
225368	16615	Bobbin Winder Pulley with 200380C, for 259431
225377	17900	Spool Wire, for small spools
225381	16615	Bobbin Winder Spindle, for 259431
225388	17900	Thread Unwinder Spool Rest Rod, for 225258
225390	17900	" Cone Holder
225391	17900	" Unwinder Thread Guide, for 225258
225438	16615	Bobbin Winder Frame Oil Well Cap, for 225453
225444	16615	Bobbin Winder Stop Latch, for 259431 Nos. 225453 to 225456, for 259431
225453	16615	Bobbin Winder Frame with 202277 and 225438
225454	16615	" " " Hinge Pin
225455	16615	" " " Spring
225456	16615	" " " Plunger
225458	16615	" " Stop Latch Thumb Lever, for 259431
225459	16615	Bobbin Winder Stop Latch Thumb Lever Hinge Stud, for 259431
225459	16615	Bobbin Winder Stop Latch Thumb Lever Joint Stud, for 259431
225461	16615	Bobbin Winder Tension Bracket with 201499B, for 225462
225462	16615	Bobbin Winder Tension Bracket complete, Nos. 13710, 201572B, 225461 and two 2102, for 259431
225497	17620	Bobbin Case Screw Driver

NUMERICAL LIST OF PARTS

No.	Plate	Name
225498	17620	Screw Driver (7-1/4 in.long)
225554	17620	Wrench (steel)
225585	16664	Hook Saddle Screw Washer
225837	16666	Feed Lifting Eccentric Fork Screw Washer, for 240455
227227	16671	Knee Lifter Connection Lever Lifting Rod Spring Collar with 200113F
227561	16671	Foot Lifter Lifting Lever Spring
227678	17620	" " Lever Chain,48 in.long with 202784,for 227955
227952	17620	Foot Lifter Lever with 227954,for 227955
227953	17620	" " " Stand with two wood screws 1 in.,No.12,for 227955
227954	17620	Foot Lifter Lever Chain Hook (lower),for 227952
227955	17620	Foot Lifter Lever complete,Nos.225016, 227678,227952 and 227953
228026	16615	Bobbin Winder Tension Bracket Screw Washer for 259431
228359	16643	Knee Lifter Rock Lever with two 350231C, for 228361
228360	16643	Knee Lifter Rock Lever Bracket with 200347C and three wood screws 7/8 in.,No.12,for 228361
228361	16643	Knee Lifter Rock Lever Bracket 228360 with 228359,228363,228367 and 228386,for 228368
228362	16643	Knee Lifter Rock Lever Extension with 200529C,for 228368
228363	16643	Knee Lifter Rock Lever Hinge Pin,for 228361
228364	16643	Knee Lifter Rock Lever Knee Plate with 350231C,for 228368
228365	16643	Knee Lifter Rock Lever Rod,for 228368
228367	16643	" " " " Stop Stud,for 228361
228368	16643	Knee Lifter complete,Nos.228361,228362, 228364,228365 and 228388
228386	16643	Knee Lifter Rock Lever Spring,for 228361
228388	16643	" " " " Knee Plate Arm,for 228368
*233764	-----	Bobbin Case,for 233765
233765	16663	Bobbin Case complete,Nos.200594C,200984C, 202056,203214,203216,203473,203474, 203648,233764,241674,241675 and two 350405C,for 240357
235576	16669	Tension Release Lever Rod,for Machine No. 111w116

NUMERICAL LIST OF PARTS

33

No.	Plate	Name
236060	16668	Tension Disc Position Pin, for 240023 and 240531
236061	16671	Attachment Slide Plate Friction Slide, for 224144
237174	16668	Thread Controller Spring, for 240446 and 240532
237177	16661	Arm Shaft with 200357E and 224392
*237195	-----	Feed Driving Eccentric, for 237196
237196	16661	Feed Driving Eccentric complete, Nos. 217D, 443C, 1103C, 7071, 237195, 237749 and 350107C
237202	16661	Balance Wheel (disc) 5-1/4 in. diam. (belt groove 2-3/4 in., diam.) with 200328C and 200335C
237565	16662	Feed Driving Connection with 200049D and 202330
*237749	-----	Feed Driving Eccentric Body, for 237196
237836	16671	Presser Bar Spring (flat), for Machine No. 111w116
240023	16668	Tension Bracket with 201224B and 236060, for 240446
240034	16668	Thread Retainer
240104	16671	Face Plate
240124	16671	Knee Lifter Lifting Lever
240125	16640	Lifting Bell Crank Link
240126	16640	" Eccentric Connection
240136	16640	" Rock Shaft with 201524E and 350172C
240142	16669	Tension Release Slide Spring, for Machine No. 111w116
240171	16640	Lifting Eccentric Connection Crank with 200029E and 248821
240174	16640	Lifting Rock Shaft Bushing, for 240451
240183	16669	Vibrating Presser Bar
240203	16640	Lifting Eccentric with 200382C and 200398C
240213	16665	Hook Driving Shaft Lock Stud, for 240215
240214	16665	" " " " " Socket, for 240215
240215	16665	Hook Driving Shaft Lock Stud complete, Nos. 240213, 240214, 248423 and 248425
240254	16671	Bed Slide (front)
240277	16672	Throat Plate Block, for 240480, 240482, 240484, 240487, 240489 and 240495
240315	16664	Hook Saddle complete, Nos. 200118D, 223623, 224004, 224005, 224021, 224022, 240357, 248151 and 265088
240327	16670	Needle Bar Connecting Link Stud with 202254, for 240477

NUMERICAL LIST OF PARTS

No.	Plate	Name
240357	16663	Hook and Bobbin Case complete, Nos. 224017 and 233765, for 240315
240384	16672	Throat Plate Knife Cutting Bar, trims 1/8 in., for 240480
240401	16672	Throat Plate Body, for 240480, 240482, 240484, 240487, 240489 and 240495
240415	16669	Vibrating Presser Bar Connecting Link
240421	16672	Throat Plate Knife Cutting Bar, trims 1/4 in., for 240487
240423	16667	Knife Arm Guard
240446	16668	Tension Bracket complete, Nos. 200978H, 201199F, 204271, 223438, 223703, 223704, 223706, 237174, 240023, two each 200309E, 201572B and 244048, for Machine No. 111w116
*240451	-----	Arm with 202135 and two 240174
240452	16661	Balance Wheel (disc) "V" belt groove (outside diam. of belt groove 3.268 in.) with 201346C and 350107C
*240453	-----	Bed
240454	16666	Feed Bar with 200336E and 201535E, for 240455
240455	16666	Feed Bar 240454 with 200040C, 224052 and 225837, for 240458
240456	16672	Feed Dog, 46 needle hole, for needle sizes 16 and 18, for 240480
240457	16672	Feed Dog, 46 needle hole, for needle sizes 16 and 18, for 240482, 240484, 240487, 240489 and 240495
240458	16666	Feed Driving Rock Shaft 223650 with 201519E, 240455, and 350393C
240459	16665	Hook Driving Shaft
240460	16667	Knife
240461	16667	" Arm with 201034F, 201525E, 350036C and two 200126F, for 240462
240462	16667	Knife Arm Base Plate 248202 with 240461
240463	16667	" " Spring Plunger
240464	16667	" Driving Bar, for 240465
240465	16667	Knife Driving Bar complete, Nos. 240464, 240468, to 240471, two each 200140H, 200577XC and 350444C
240466	16667	Knife Driving Bar Slide Block
240467	16667	" " " " Plate with 200397H Nos. 240468 to 240471, for 240465
240468	16667	Knife Driving Link (lower)
240469	16667	" " " (upper)
240470	16667	" " " Latch Spring
240471	16667	" Throw-out Handle

NUMERICAL LIST OF PARTS

35

No.	Plate	Name
240472	16672	Lifting Presser Foot, for 1/8 and 5/32 in. trimming margin, for 240496 Nos. 240473 to 240476, for 240497
240473	16672	Lifting Presser Foot, for 3/16 in. trimming margin
240474	16672	Lifting Presser Foot, for 7/32 and 1/4 in. trimming margin
240475	16672	Lifting Presser Foot, for 9/32 and 5/16 in. trimming margin
240476	16672	Lifting Presser Foot, for 11/32 and 3/8 in. trimming margin
240477	16670	Needle Bar Crank with 200335C, 200374C, 200383C, 200428C and 240327
240478	16670	Needle Bar Rock Frame
240479	16672	Throat Plate Slide Bowl, for trimming margins from 1/8 to 3/8 in., in steps of 1/32 inch. State margin required, for 240480, 240482, 240484, 240487, 240489 and 240495
240480	16672	Throat Plate complete, trims opposite the needle and 1/8 in. to right of seam, Nos. 240277, 240384, 240401, 240479, two each 200583H and 200586H, for 240456
240481	16672	Throat Plate Knife Cutting Bar, trims 5/32 inch, for 240482
240482	16672	Throat Plate complete, trims opposite the needle and 5/32 in. to right of seam, Nos. 240277, 240401, 240479, 240481, two each 200583H and 200586H, for 240457
240483	16672	Throat Plate Knife Cutting Bar, trims 3/16 inch, for 240484
240484	16672	Throat Plate complete, trims opposite the needle and 3/16 in. to right of seam, Nos. 240277, 240401, 240479, 240483, two each 200583H and 200586H, for 240457
240487	16672	Throat Plate complete, trims opposite the needle and 1/4 in. to right of seam, Nos. 240277, 240401, 240421, 240479, two each 200583H and 200586H, for 240457
240488	16672	Throat Plate Knife Cutting Bar, trims 9/32 inch, for 240489
240489	16672	Throat Plate complete, trims opposite the needle and 9/32 in. to right of seam, Nos. 240277, 240401, 240479, 240488, two each, 200583H and 200586H, for 240457
240494	16672	Throat Plate Knife Cutting Bar, trims 3/8 in., for 240495

NUMERICAL LIST OF PARTS

No.	Plate	Name
240495	16672	Throat Plate complete, trims opposite the needle and 3/8 in. to right of seam, Nos. 240277, 240401, 240479, 240494, two each 200583H and 200586H, for 240457
240496	16672	Vibrating Presser Foot, 46 needle hole, with 201015F, for 240472
240497	16672	Vibrating Presser Foot, 46 needle hole, with 201015F, for 240473 to 240476
240498	16670	Needle Bar with 200175D, 201350F and 240499
240499	16670	" " Thread Guide, for 240498
		Nos. 240526 to 240529, for Machine No. 111w117
240526	16676	Presser Bar Spring (flat)
240527	16676	" " " (auxiliary)
240528	16674	Tension Adjusting Arm
240529	16674	" " " Bracket with 200027E
240530	16675	" " Thimble, for 240532
240531	16675	" Bracket with 236060 and 240535, for 240532
240532	16675	Tension Bracket complete, Nos. 200978H, 201199F, 201572B, 223706, 237174, 240530, 240531, 240533, 240534 and two 244048, for Machine No. 111w117
240533	16675	Tension Spring, for 240532
240534	16675	" " Washer, for 240532
240535	16675	" Stud, for 240531
240802	16661	Arm Shaft Bushing (back) with 202244
241352	16669	Presser Bar Bushing (lower)
241360	16668	Thread Controller Spring Stop
241518	16670	Take-up Lever
241674	16663	Bobbin Case Oiling Felt, for 233765
241675	16663	" " " " Retainer, for 233765
244048	16668	Tension Disc, for 244046 and 240532
244073	16673	Grinder Slide Bracket Adjusting Screw Slide Plate, for 259488
248151	16664	Hook Saddle with 200009E, 200446C, 224019, 224020 and two 200364C, for 240315
248202	16667	Knife Arm Base Plate with two each 200410C and 201617C, for 240462
248423	16665	Hook Driving Shaft Lock Stud Cotter Pin, for 240215
248425	16665	Hook Driving Shaft Lock Stud Spring, for 240215
248821	16640	Lifting Eccentric Connection Crank Oil Packing (wick), for 240171
249249	16667	Knife Arm Spring
259285	16673	Grinder Emery Wheel Guard, for 259488

NUMERICAL LIST OF PARTS

37


No.	Plate	Name
259287	16673	Grinder Throat Plate Knife Cutting Bar Clamp, for 259488
259289	16673	Grinder Throat Plate Knife Cutting Bar Clamp Spring, for 259488
		Nos. 259428 to 259430, for 259431
259428	16615	Bobbin Winder Brake (leather)
259429	16615	" " " Clamp
259430	16615	" " and Tension Bracket Base
259431	16615	Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200113F, 200299H, 202478, 225368, 225381, 225444, 225453 to 225456, 225458, 225462, 228026, 259428 to 259430, two each 225459 and wood screws 3/4 in., No. 12, R.H.B.
259487	16673	Grinder Slide Bracket with 200394C, 200457D 202064 and two 210983, for 259488
259488	16673	Grinder complete, Nos. 200161H, 201510D, 204101, 206962 to 206964, 206967, 206977, 244073, 259285, 259287, 259289, 259487, two each 200054E, 201070D, 202510 and 206969
264525	16669	Presser Bar Lifter
264526	16669	" " Lifting Bracket with 200054E
264527	16669	Tension Release Slide, for Machine No. 111w116
264690	16674	Presser Bar with 200074F, for Machine No. 111w117
264718	16670	Needle Bar Connecting Link Oil Guard
265032	16665	Safety Clutch Hook Driving Shaft Position Collar with two 201254C, for 265104
		Nos. 265050 to 265052, for 265104
265050	16665	Safety Clutch Locking Lever Connecting Link
265051	16665	Safety Clutch Throw-in Latch Spring
265052	16665	" " " " Pin
265057	16665	" " " " for 265104
265088	16664	Bobbin Case Opener Lever Hinge Stud with 202277, for 240315
		Nos. 265101 to 265103, for 264104
265101	16665	Safety Clutch Locking Lever
265102	16665	" " " " Spring
265103	16665	" " Pulley with 202253
265104	16665	Safety Clutch complete, Nos. 265032, 265050 to 265052, 265057, 265101 to 265103, 350433C and 350436C
265314	16665	Hook Driving Shaft Lock Ratchet with 200354C and 200362C
350036C	16667	Knife Driving Link Screw Stud, for 240461
350107C	16661	Balance Wheel Position Screw, for 240452


NUMERICAL LIST OF PARTS

No.	Plate	Name
350107C	16661	Feed Driving Eccentric Body Position Screw, for 237196
350172C	16640	Lifting Bell Crank Link Screw Stud, for 240136
350231C	16643	Knee Lifter Rock Lever Extension Set Screw, for 228359
350231C	16643	Knee Lifter Rock Lever Knee Plate Arm Set Screw, for 228359
350231C	16643	Knee Lifter Rock Lever Knee Plate Set Screw, for 228364
350393C	16666	Feed Bar Hinge Screw (driving), for 240458
350405C	16663	Bobbin Case Oiling Felt Retainer Screw, for 233765
350419H	16661	Balance Wheel Adjusting Screw
350433C	16665	Safety Clutch Locking Lever Hinge Screw, for 265104
350436C	16665	Safety Clutch Locking Lever Spring Screw, for 265104
350444C	16667	Knife Driving Link Hinge Screw, for 240465
350448F	16676	Presser Bar Spring Regulating Screw, for Machine No. 111w117

16615 - 1/2

259431

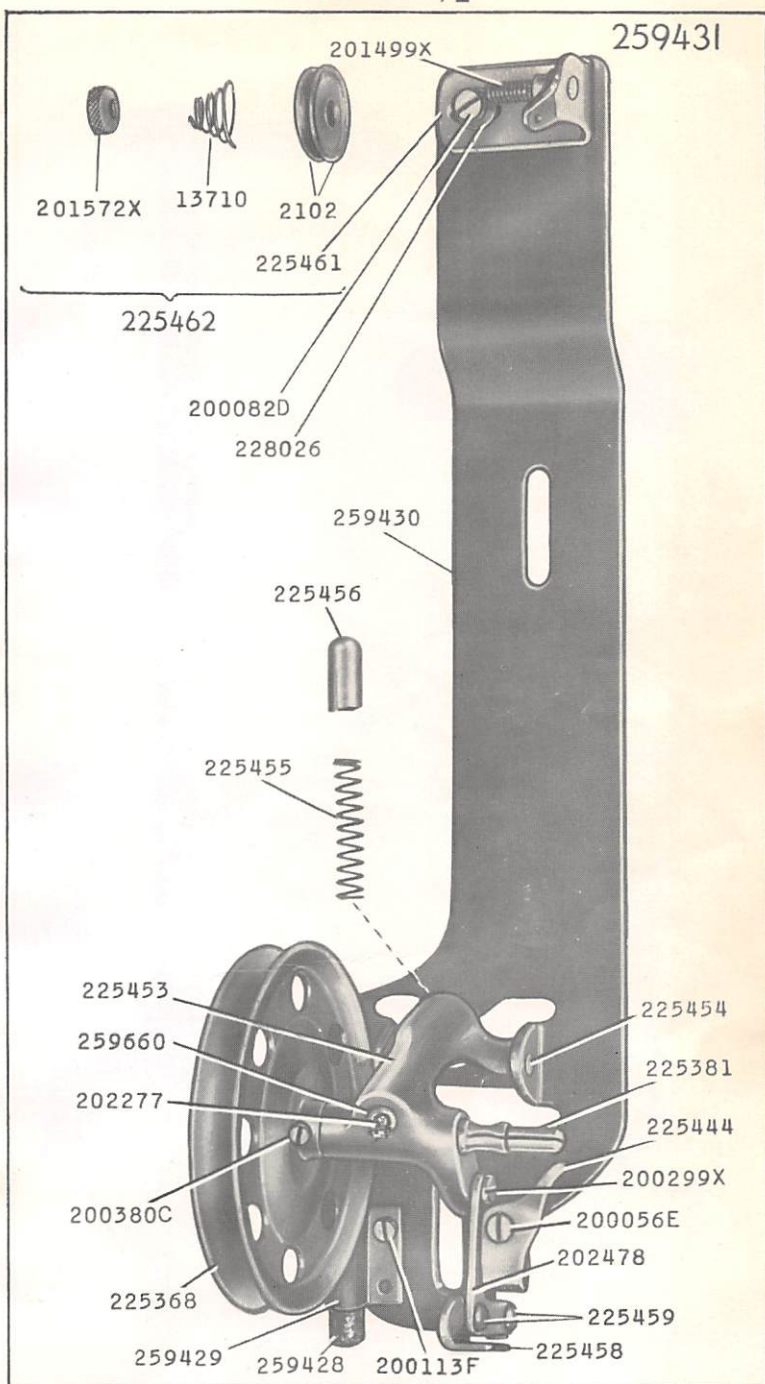

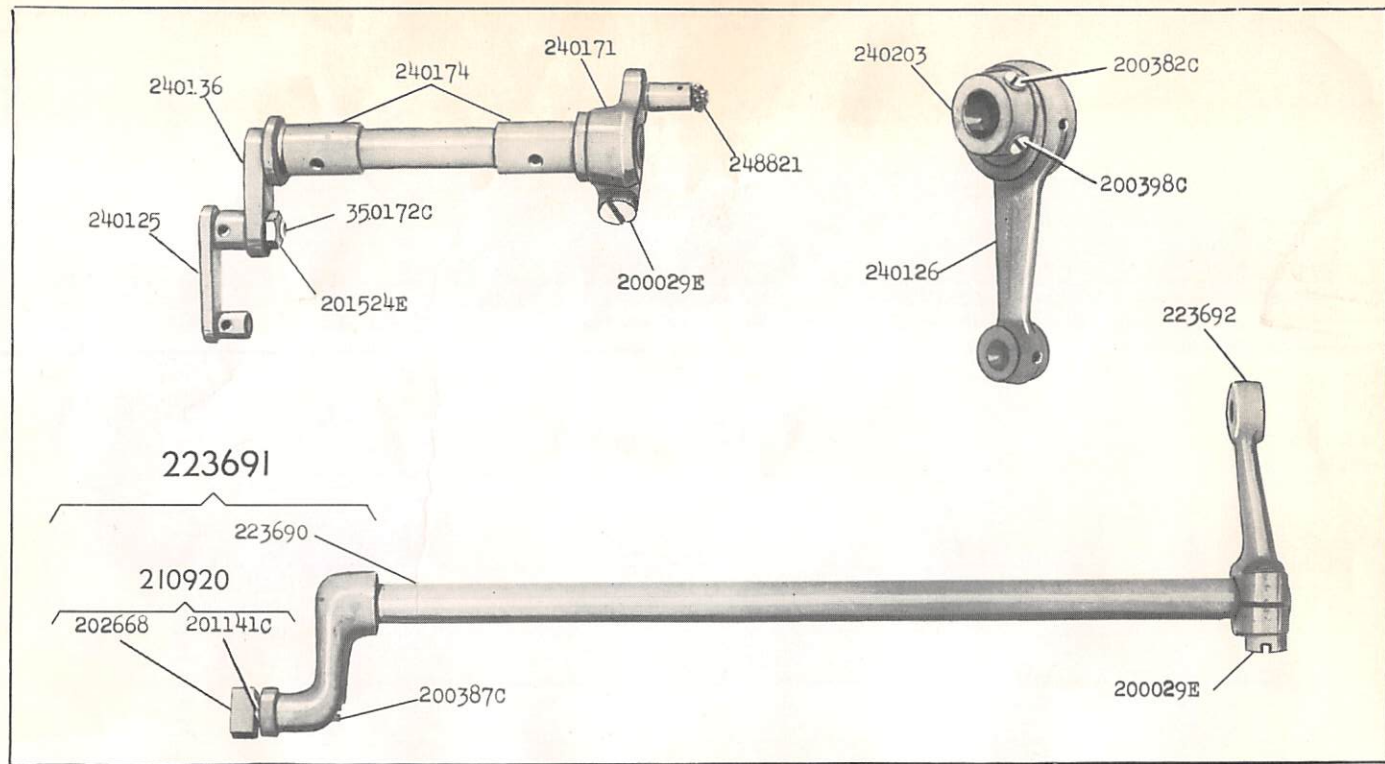


16640 - 1/2

From the library of: Superior Sewing Machine & Supply LLC


16643 - 3/8


228368

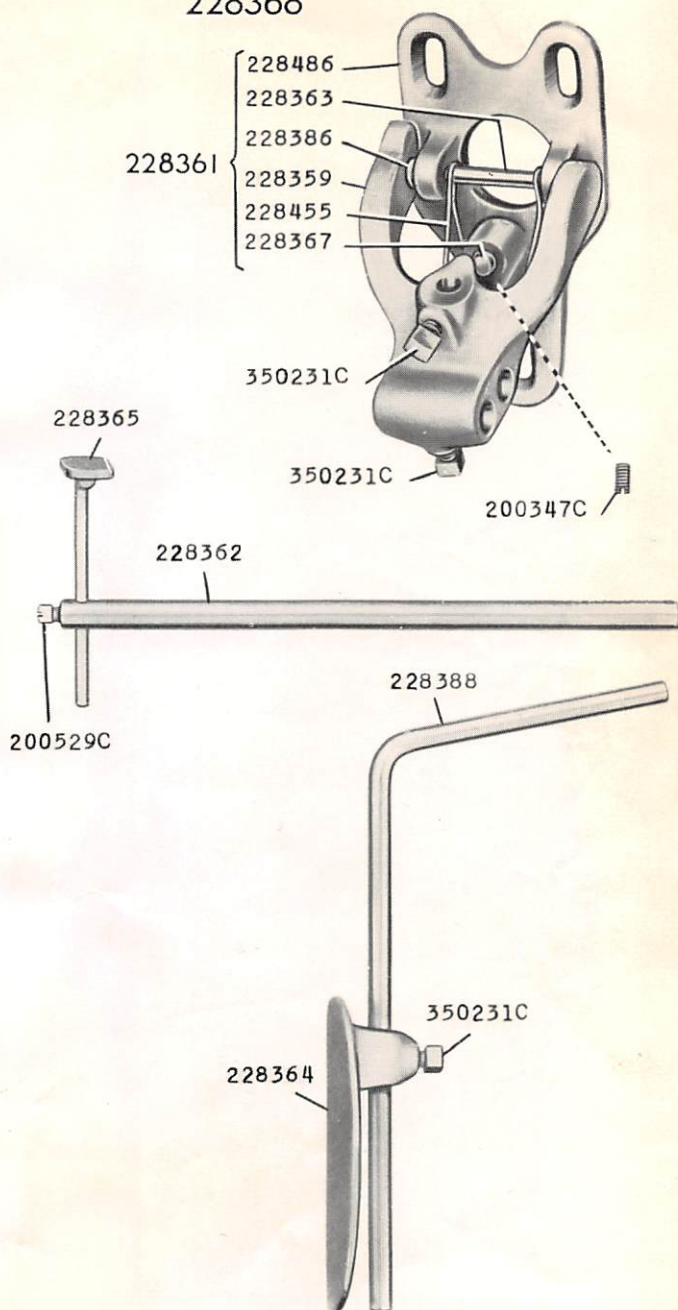

16644 - 1/3

224121

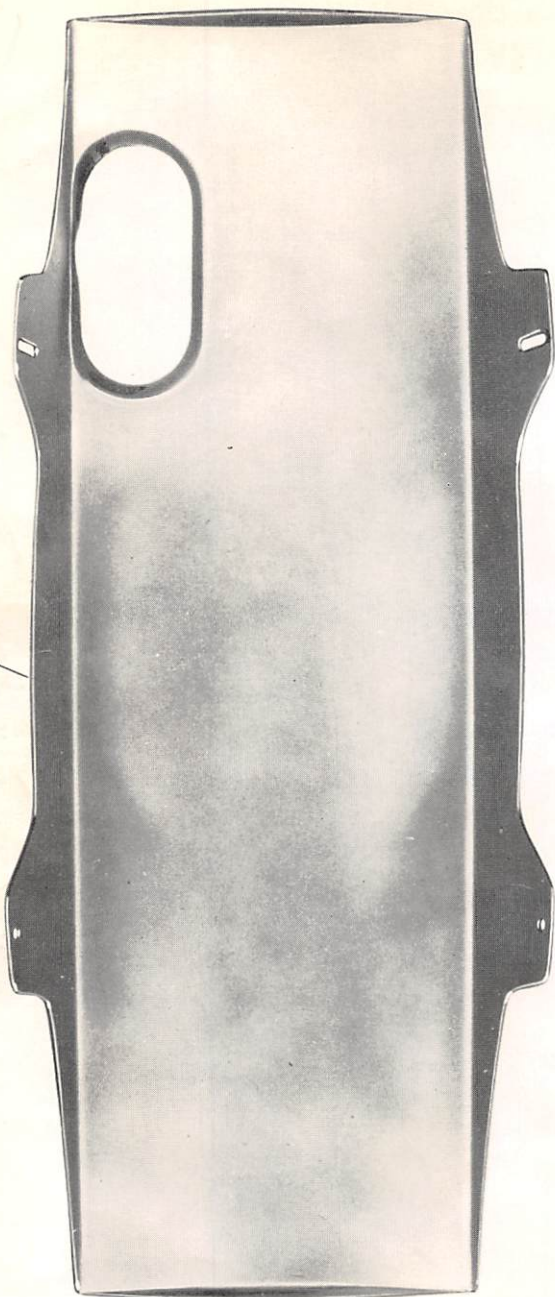


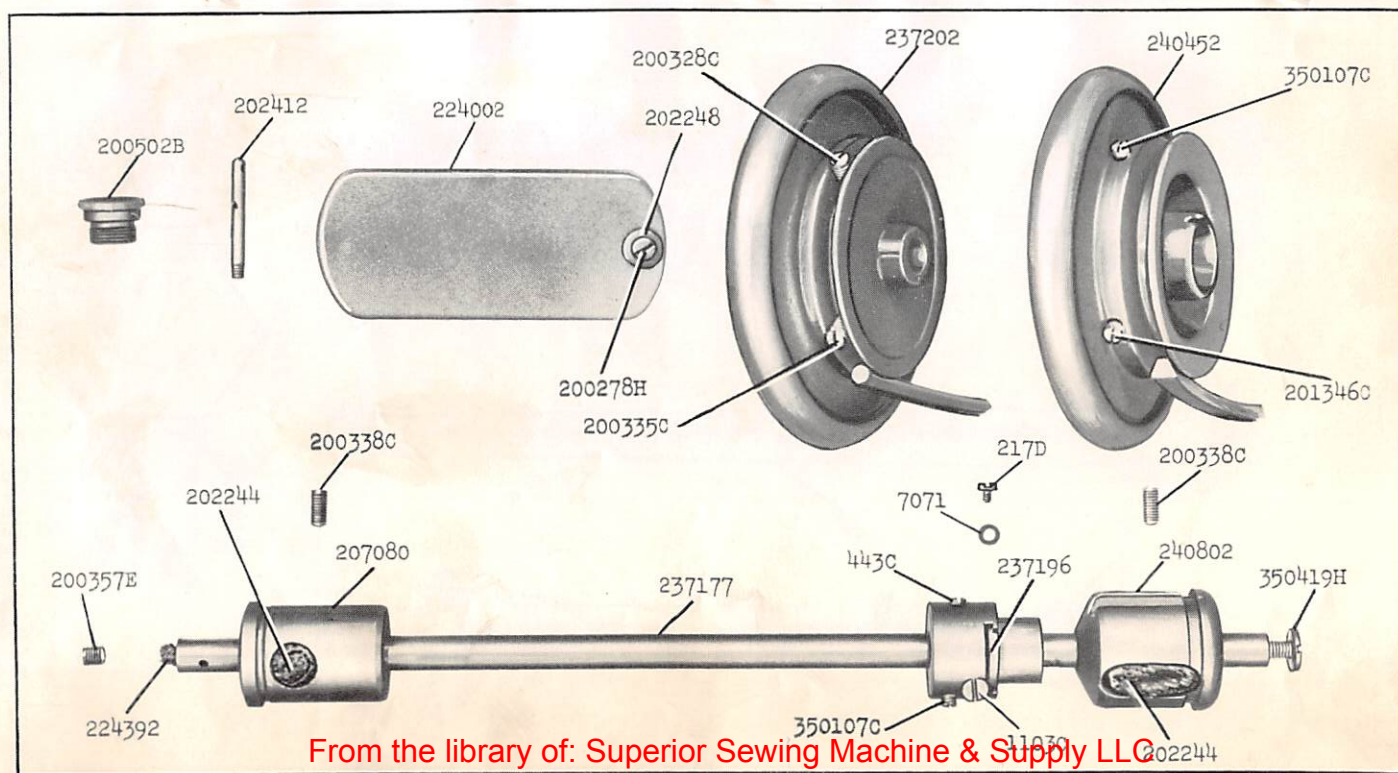



From the library of: Superior Sewing Machine & Supply LLC

16661 - 3/8

16662 - 1/2

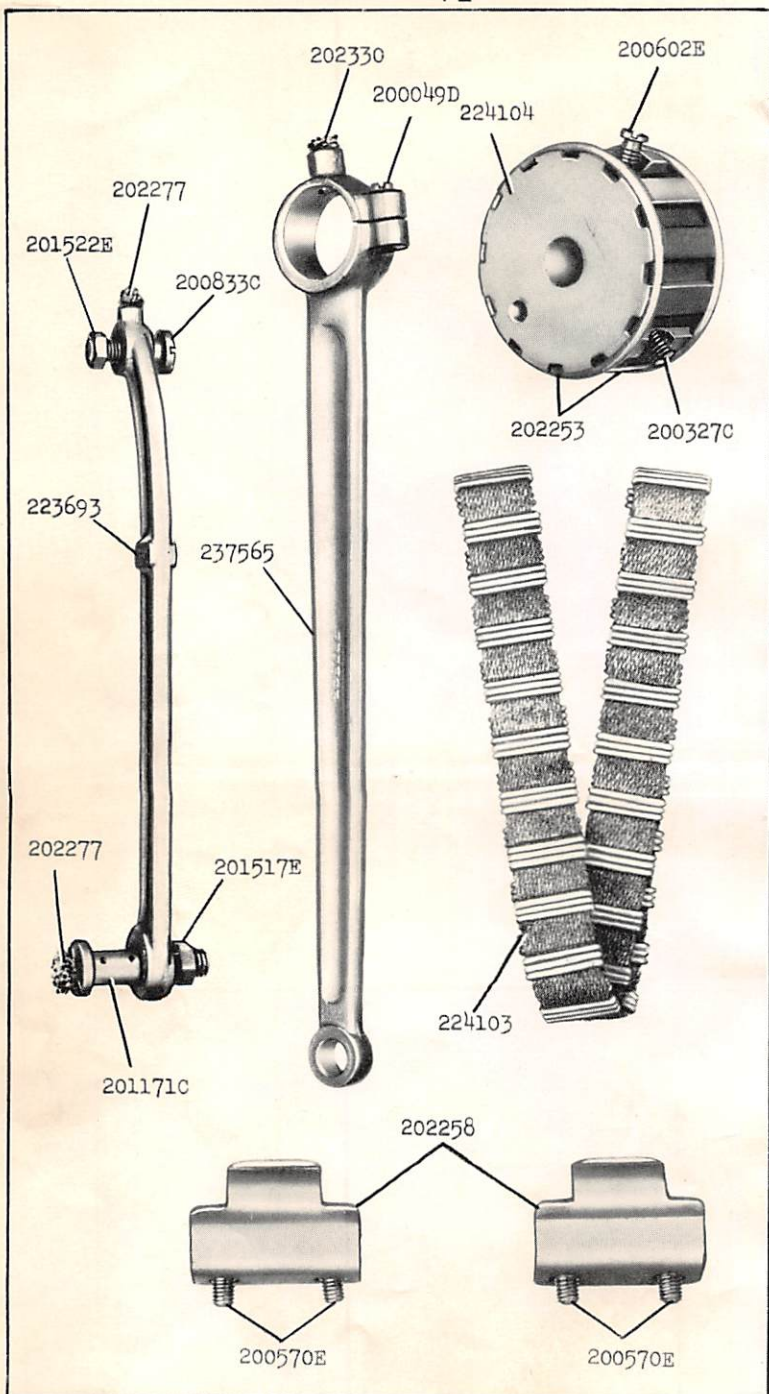

240357

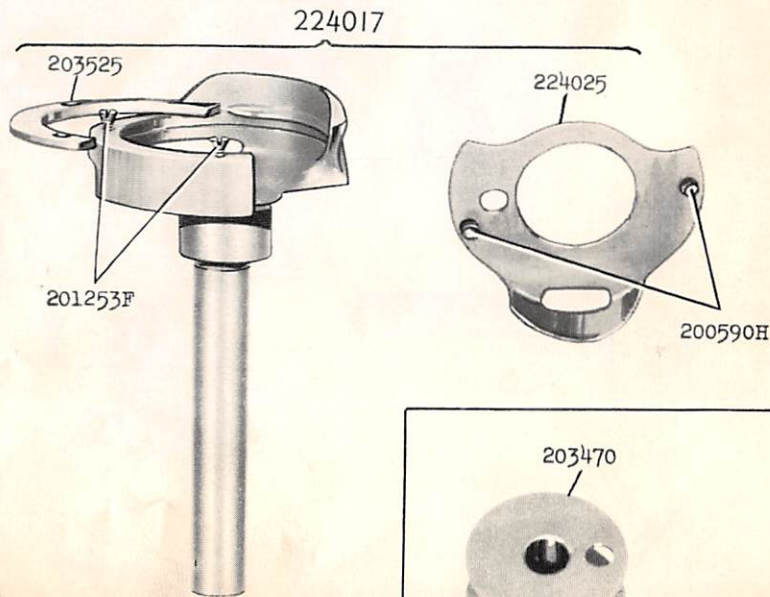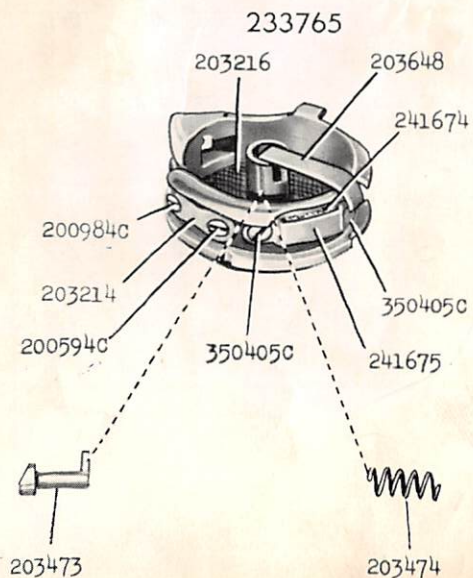

From the library of: Superior Sewing Machine & Supply LLC

16663

16664 - 5/8

240315

240357

224004

200118D

223623

224021

224005

202277

203101

200382C

200364C

224022

201349C

201542C

265088

248151

224020

200446C


200009E

224019

200364C


225585

200006E

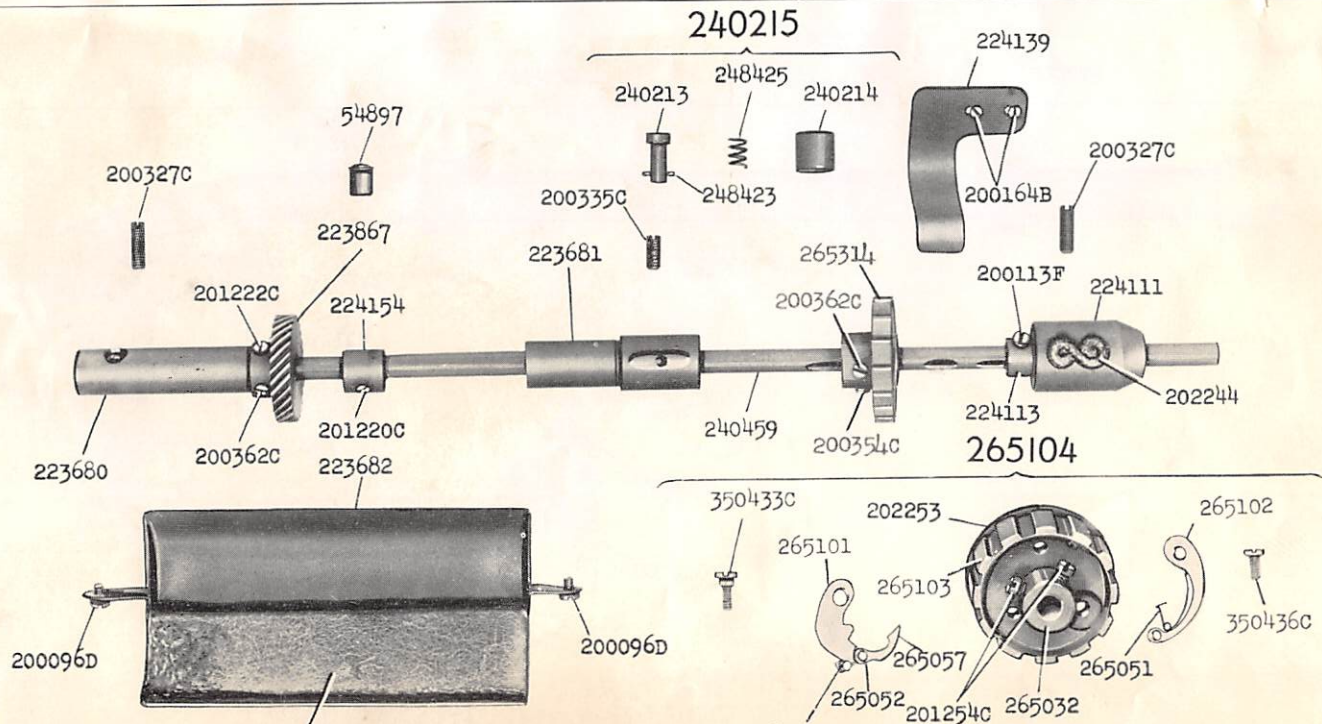


16665 - 3/8

240458

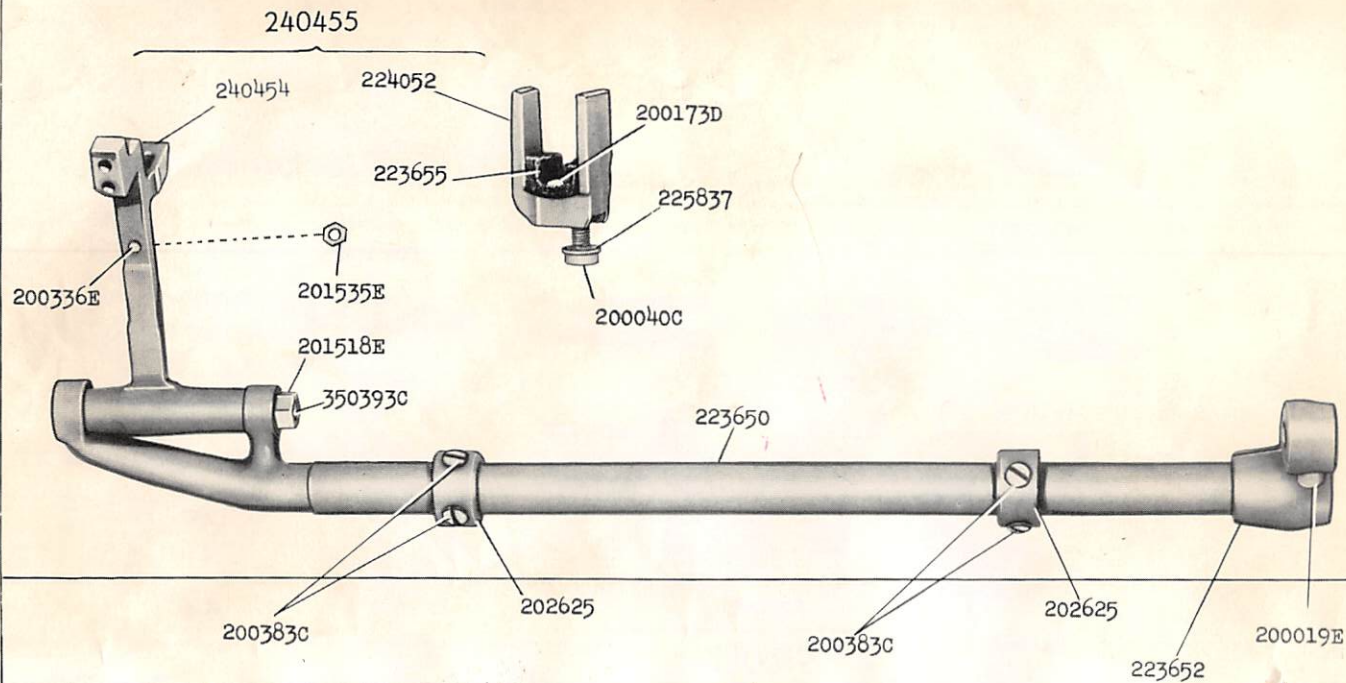


16666 - 1/2

240465

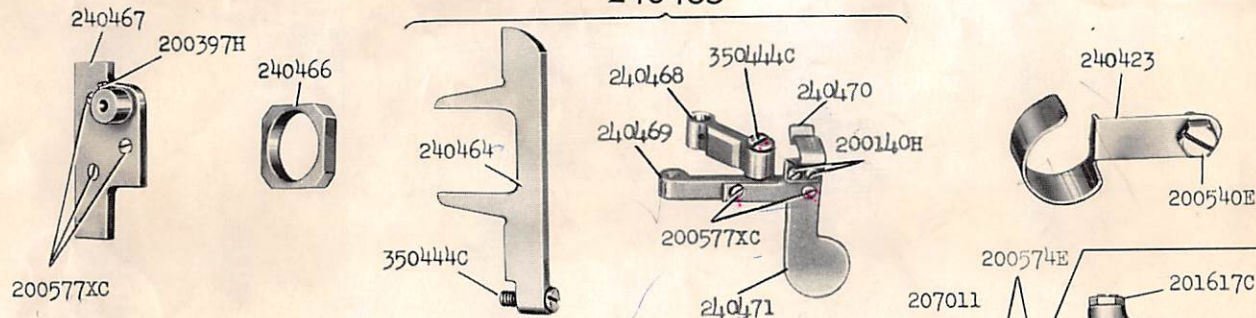

240462

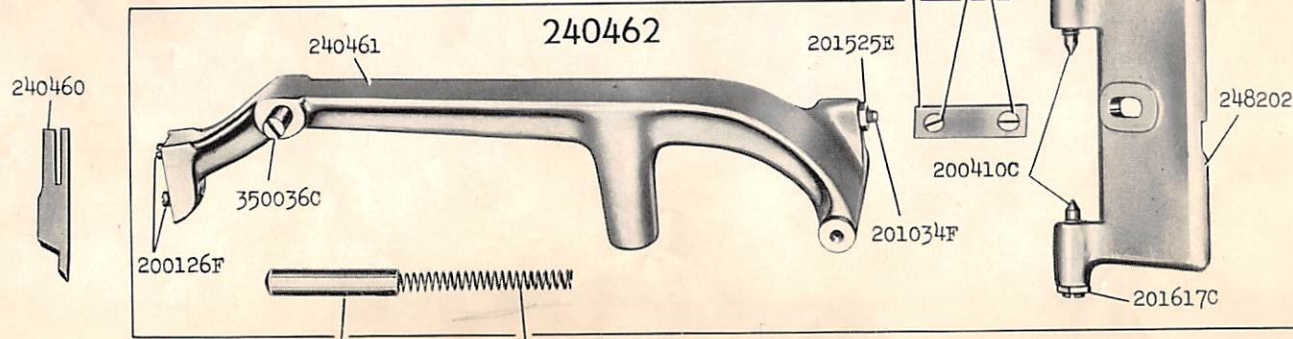


From the library of: Superior Sewing Machine & Supply LLC


16667 - 3/8

Exploded view diagram of a mechanical assembly, showing various components and their assembly relationships. The components are labeled with part numbers:

- 200352C
- 202337
- 207072
- 200352C
- 208545
- 200086F
- 240415
- 200975F
- 202338
- 235576
- 264526
- 200996C
- 208562
- 200653C
- 200054E
- 202277
- 240142
- 264525
- 264527
- 210949
- 200086C
- 241352
- 200074F
- 200352C

16670 - 1/2

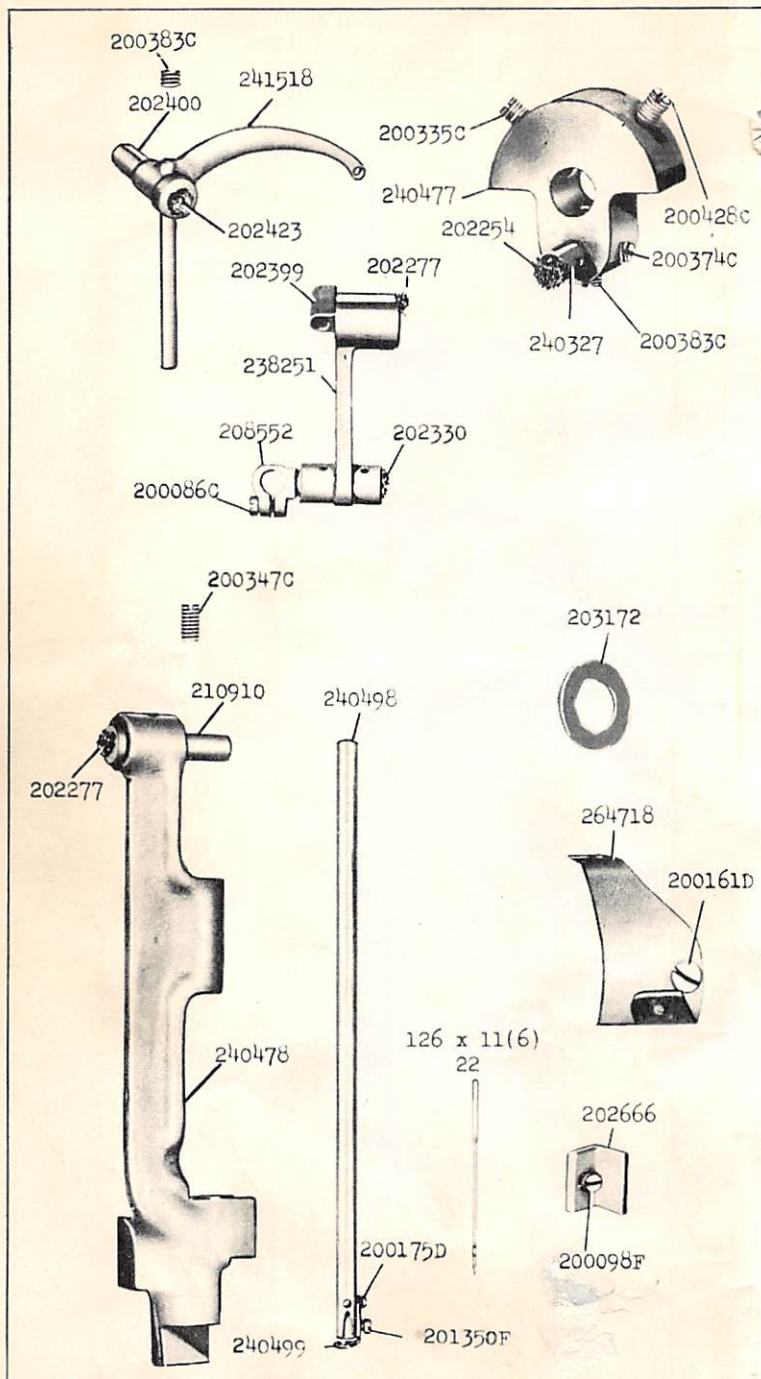

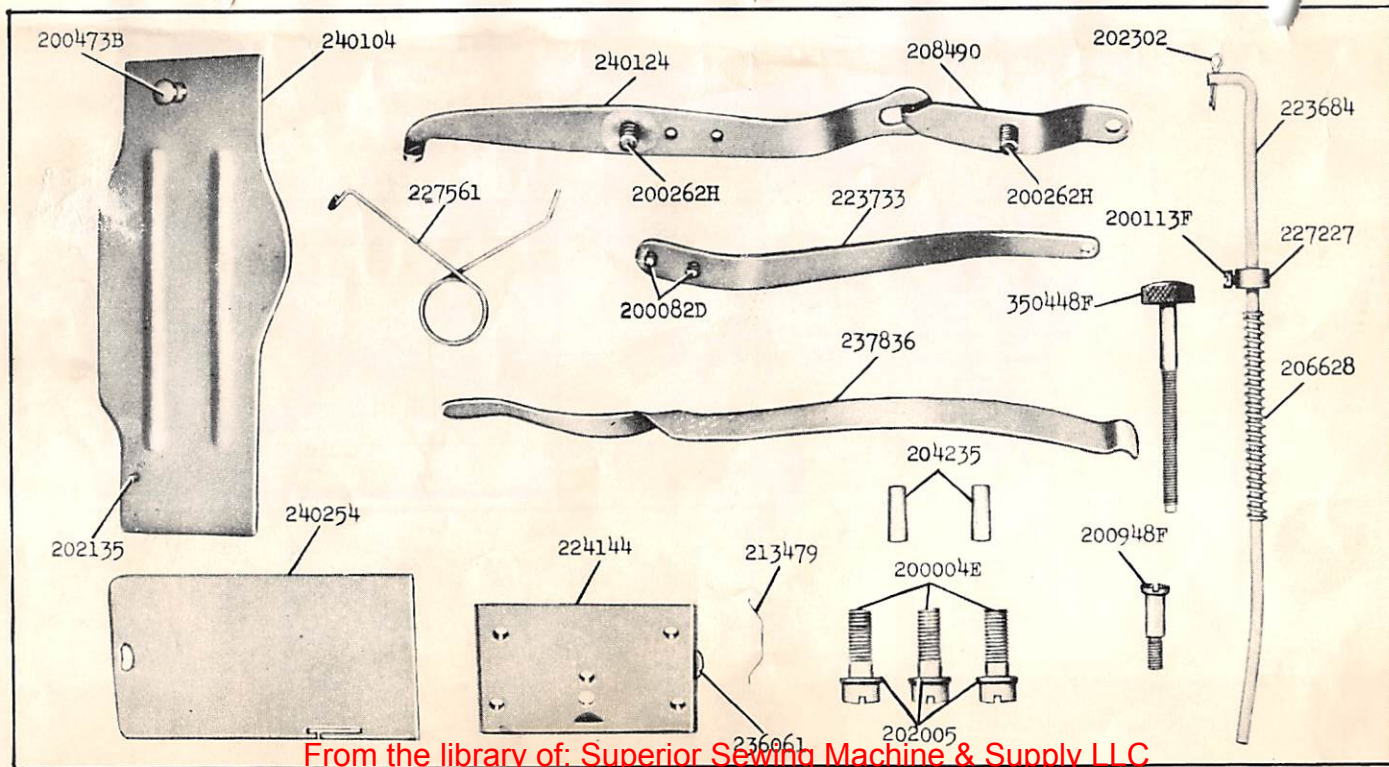

16671 - 3/8

240480 - $\frac{1}{8}$
240482 - $\frac{5}{32}$
240484 - $\frac{3}{16}$
240487 - $\frac{1}{4}$
240489 - $\frac{9}{32}$
240491 - $\frac{5}{16}$
240495 - $\frac{3}{8}$

691F

691F

240456-46

200106E

$$240472 - \frac{1}{8} \cdot \frac{5}{32}$$

240496

201015F4

$$\frac{1}{15} = 1$$

-240277

200586H

$$-240479 - \frac{1}{8} \cdot 5/32 \cdot 3/16 \cdot 7/32$$

$$\frac{1}{4} - 9/32 - 5/16 - 11/32 - 3/8$$

240457-46

200583H

$$15=1$$

240473- 3/16
240474- 7/32-1/4
240475- 9/32-5/16
240476- 11/32-3/8

240497

201015F


240401

240384- 1/8
240481- 5/32
240483- 3/16
240421- 1/4
240488- 9/32
240490- 5/16
240494- 3/8

16672 - 5/8

From the library of: Superior Sewing Machine & Supply LLC


259488







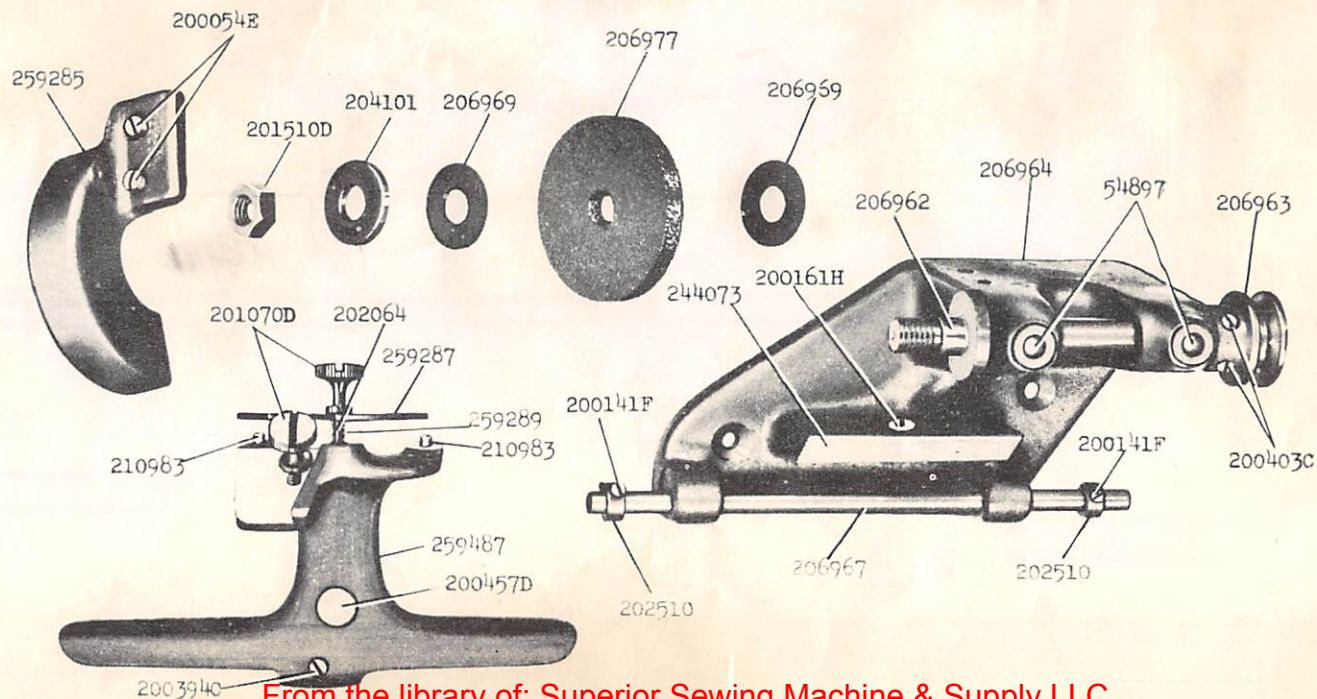


16673 - 1/2


From the library of: Superior Sewing Machine & Supply LLC

16674 - 1/2

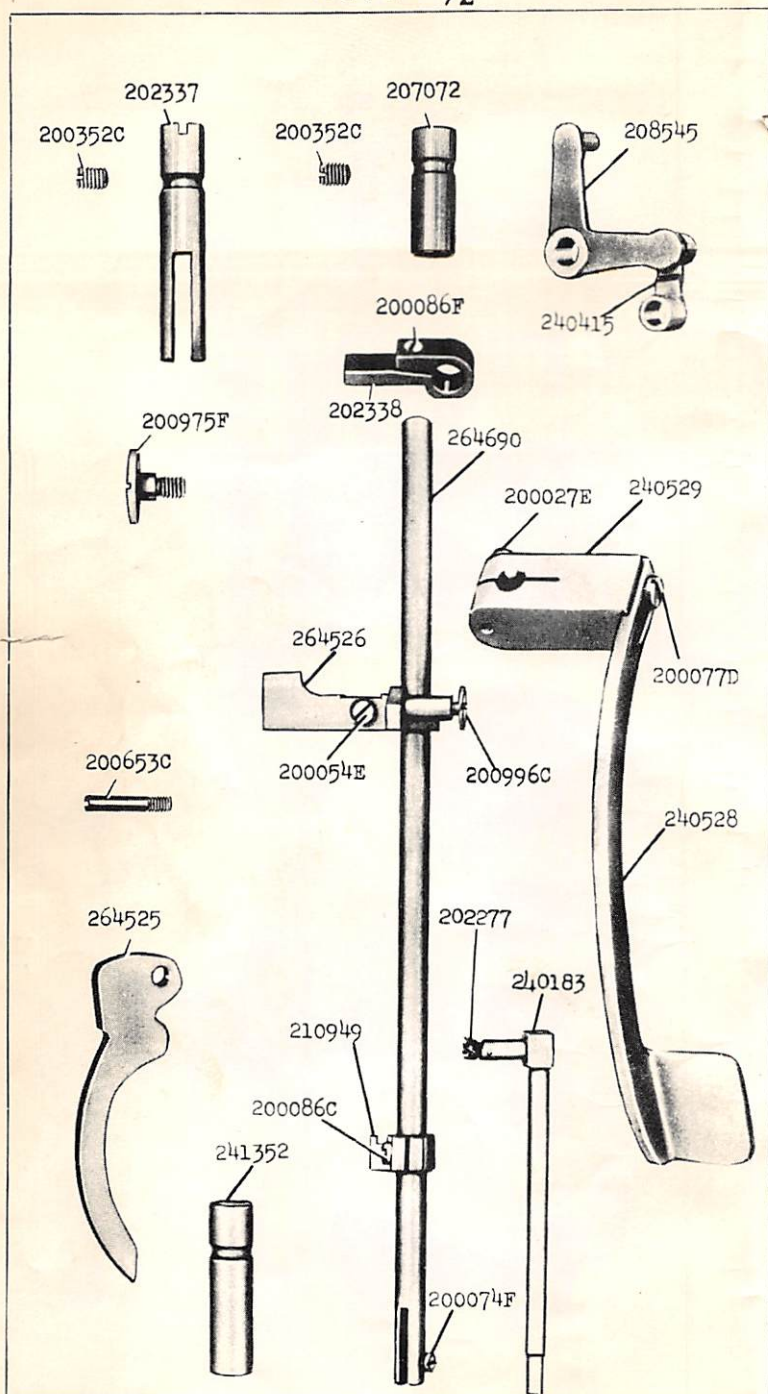

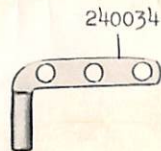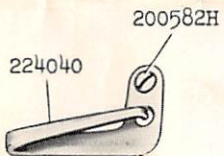

From the library of: Superior Sewing Machine & Supply LLC


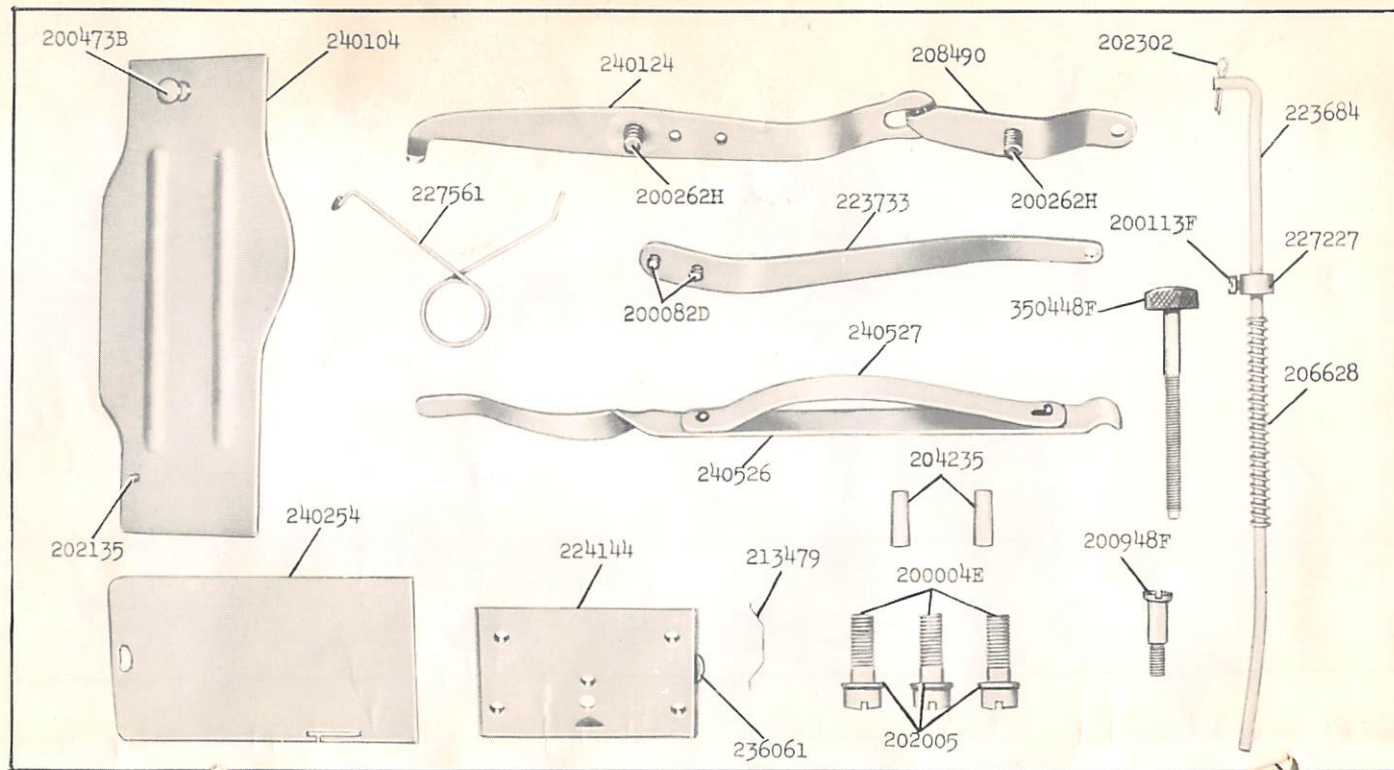


16676 - 3/8

From the library of: Superior Sewing Machine & Supply LLC

17620 - 1/3

227955

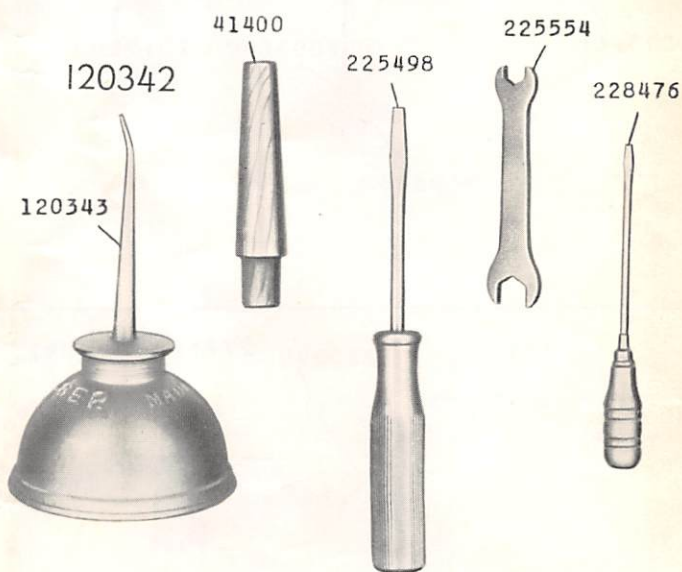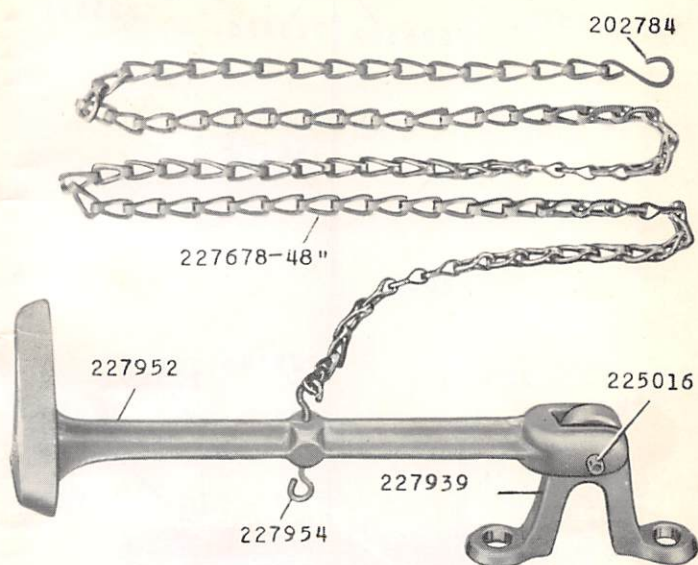

17900 - 1/6

