

Form 2397w

(438)

Printed in U. S. A.

LIST OF PARTS



MACHINE No. 111w141

THE SINGER MANUFACTURING COMPANY

Copyright, U. S. A., 1922, 1925, 1935, 1936,
1937 and 1938

by The Singer Manufacturing Co.

All Rights Reserved for all Countries

INDEX

	Page
Accessories	14
Bobbin Winder	14
Foot Lifter	16
Knee Lifter	15
Knife Hone	16
Machine No.111w141	5
Numerical List of Parts	19

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the PART number in the FIRST column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above case), must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished, Nickel Plated and Buffed.
- B. Polished, Nickel Plated and Buffed.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.
- J. Nickel Plated only.
- R. Merlized.
- X. Black Oxide.
- XC. Hardened and Black Oxide.
- Y. Blade Nickel only.

These letters MUST BE USED when they appear in the list and AFTER the number, as in the list.

In this series


200001 to 201500 and 350001 to 351500 are Screw Numbers.
201501 to 201800 and 351501 to 351800 are Nut Numbers.
201801 to 202000 and 351801 to 352000 are Roller Numbers.
202001 to 350000 are Numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are NOT TO BE USED in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE FOR

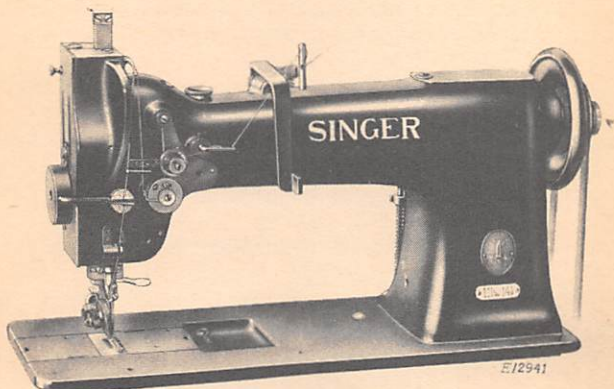

MACHINE No. 111w141

HIGH SPEED. DROP FEED. VERTICAL TRIMMER.
BALL BEARING (no back) ROLLER PRESSER.
KNEE LIFTER. SAFETY CLUTCH.
For Heavy Leather Work.

No.	Plate	Name
*240426	-----	Arm with 202135
224196	16594	" Cap
244071	-----	" " Oil Wick
200278H	11321	" " Screw
202248	11321	" " " Washer
204235	11321	" Position Pin (2)
200004E	11321	" Screw (3)
202005	11321	" " Washer (3)
240427	16595	" Shaft with 200357E and 224392
240802	16594	" " Bushing (back) with 202244
202244	-----	" " " " Oil Packing (wick)
200341C	11321	" " " " Set Screw
207090	16594	" " " (front) with 202244
202244	-----	" " " " Oil Packing (wick)

PARTS FOR MACHINE No. 111w141

No.	Plate	Name
200502B	11321	Arm Shaft Bushing (front) Oil Packing Thumb Screw
200338C	11321	Arm Shaft Bushing (front) Set Screw
224103	16594	" " Connection Belt
224200	16594	" " " " Pulley with 200327C 200602E and two 202253
200602E	11321	Arm Shaft Connection Belt Pulley Position Screw
200327C	11321	Arm Shaft Connection Belt Pulley Set Screw
202253	11321	Arm Shaft Connection Belt Pulley Spring Flange
224138	16592	Arm Shaft Connection Belt Timing Collar with 200113F
200113F	16592	Arm Shaft Connection Belt Timing Collar Set Screw
224139	16592	Arm Shaft Connection Belt Timing Plate
200164B	16592	" " " " " " " Screw (2)
224392	-----	Arm Shaft Oil Packing (wick)
200357E	11321	" " " " Stop Screw
235096	16595	Balance Wheel (disc) (belt groove 2-1/2 in.diam.) with 200328C and 200335C
200328C	11321	Balance Wheel Position Screw
200335C	11321	" " Set Screw
*240218	-----	Bed
54897	16592	" Oil Cup
240003	16594	" Slide (back)
223811	16592	" " " Stop
223812	16592	" " " Spring
240004	16594	" " (front)
203208	16592	Bobbin
235769	16592	" Case Base with 202056, 203211 to 203213 and 203216
203211	16592	Bobbin Case Base Latch
*202056	-----	" " " " Pin
203212	16592	" " " " Plunger
203213	16592	" " " " Spring
235571	16592	" " Cap with 200594C, 200984C and 235771
224004	16592	Bobbin Case Opener
224005	16592	" " " Lever with 201349C, 201542C and 203101
201349C	16592	Bobbin Case Opener Lever Driving Screw Stud
201542C	16592	Bobbin Case Opener Lever Driving Screw Stud Nut
203101	-----	Bobbin Case Opener Lever Driving Screw Stud Oil Packing (wick)
223622	16592	Bobbin Case Opener Lever Hinge Stud with 202277

PARTS FOR MACHINE No. IIIwI4I

7

No.	Plate	Name
202277	-----	Bobbin Case Opener Lever Hinge Stud Oil Packing (wick)
200364C	16593	Bobbin Case Opener Lever Hinge Stud Set Screw
248251	16592	Bobbin Case Opener Lever Link
200118D	16593	" " " Screw
235771	16592	" " Tension Spring
200984C	16593	" " " " Regulating Screw
200594C	16593	" " " " Screw
203216	-----	" " Washer (cloth)
235772	-----	Bobbin Case complete, Nos. 235769 and 235770
237844	16595	Face Plate
202135	16593	" " Position Pin
200473B	16593	" " Thumb Screw
240037	16594	Feed Bar
240038	-----	" " 240037 with 224052, 225837 and 350197E
350393C	16593	Feed Bar Hinge Screw (driving)
201518E	16593	" " " " Nut
240428	16593	" Dog
200106E	16593	" " Screw (2)
224106	16599	" Driving Connection with 200049D and 202277
201407C	16593	Feed Driving Connection Hinge Screw
201517E	16218	" " " " " Nut
206758	-----	" " " " " O11 Packing (wick)
202277	-----	Feed Driving Connection Oil Packing (wick)
200049D	16593	Feed Driving Connection Pinch Screw
202300	16594	" " Eccentric Regulating Bracket
224140	-----	" " " " " 202300 with 224200, two each 201408C and 201525E
201408C	16593	Feed Driving Eccentric Regulating Bracket Hinge Screw
201525E	16585	Feed Driving Eccentric Regulating Bracket Hinge Screw Nut
202301	16585	Feed Driving Eccentric Regulating Bracket Plunger
202595	16585	Feed Driving Eccentric Regulating Bracket Plunger Spring
200607C	16585	Feed Driving Eccentric Regulating Bracket Plunger Spring Stop Screw
201408C	16593	Feed Driving Eccentric Regulating Bracket Stop Screw
201525E	16585	Feed Driving Eccentric Regulating Bracket Stop Screw Nut
200429C	16585	Feed Driving Eccentric Regulating Screw

PARTS FOR MACHINE No. 111w141

No.	Plate	Name
200383C	16585	Feed Driving Eccentric Regulating Screw Check Screw
223650	16595	Feed Driving Rock Shaft
240031	-----	" " " " 223650 with 201518E, 240038 and 350393C
224141	16593	Feed Driving Rock Shaft Crank with 200019E
200019E	16585	Feed Driving Rock Shaft Crank Pinch Screw
202625	16585	" " " " Stop Collar with two 200383C (2)
200383C	16585	Feed Driving Rock Shaft Stop Collar Set Screw
224154	16585	Feed Lifting Cam with 201220C
224052	16585	" " " Fork with 200173D and 223655
350197E	16585	Feed Lifting Cam Fork Screw
225837	16585	" " " " Washer
223655	-----	" " " Oiling Felt
200173D	16585	" " " " Screw
201220C	16585	" " " Set Screw
224142	16594	" Regulating Spindle with 202311, 202443 and 202619
*202311	-----	Feed Regulating Spindle Head
202443	16585	" " " " Pin
202619	16585	" " " " Position Pin
*240429	-----	Hook (sewing)
240430	16593	" 240429 with 202153F, 201376F, 203251, 248257 and two 200590H
240431	-----	Hook and Bobbin Case complete, Nos. 235772 and 240430
224019	16585	Hook Bushing (lower) (bronze)
200364C	16593	" " " Set Screw
224020	16585	" " (upper) (bronze)
200446C	16585	" " " Position Screw
223867	16594	" Driving Gear (spiral) with 200362C and 201222C
201222C	16593	Hook Driving Gear Position Screw
200362C	16593	" " " Set Screw
240167	16593	" " Pinion (spiral) with 200382C and 201220C
201220C	16585	Hook Driving Pinion Position Screw
200382C	16593	" " " Set Screw
224022	16593	" " " Thrust Washer
240448	16595	" " Shaft
224111	16599	" " " Bushing (back) with 202244
202244	-----	Hook Driving Shaft Bushing Oil Packing (wick)
237529	16599	Hook Driving Shaft Bushing (front)
200327C	11321	" " " " Set Screw (2)

No.	Plate	Name
265314	16599	Hook Driving Shaft Lock Ratchet with 200354C and 200362C
200354C	16593	Hook Driving Shaft Lock Ratchet Position Screw
200362C	16593	Hook Driving Shaft Lock Ratchet Set Screw
240213	16596	" " " " Stud
248423	16596	" " " " Cotter Pin
240214	16596	" " " " Socket
248425	16596	" " " " Spring
240215	-----	Hook Driving Shaft Lock Stud complete, Nos. 240213, 240214, 248423 and 248425
203251	16596	Hook Gib
201376F	16596	" " Hinge Screw
201253F	16596	" " Screw
223850	-----	" Saddle with 200009E
224024	16599	" " 223850 with 200364C, 200446C, 224019 and 224020
223681	16599	Hook Saddle Bearing
200335C	11321	" " " Set Screw
240018	16595	" " Oil Guard
240019	-----	" " " " Felt
200160D	16596	" " " " Screw (2)
200009E	16596	" " Pinch Screw
200006E	16596	" " Screw
225585	16596	" " " Washer
240433	-----	Hook Saddle complete, Nos. 200118D, 200364C, 223622, 224004, 224005, 224022 224024, 240167, 240431 and 248251
248257	16596	Hook Washer
200590H	16596	" " Screw
237837	16595	Knee Lifter Connection Lever
200262H	11623	" " " " Hinge Screw
223684	16602	" " " " Lifting Rod
		with 202302
202302	16585	Knee Lifter Connection Lever Lifting Rod Cotter Pin
206628	16596	Knee Lifter Connection Lever Lifting Rod Spring
227227	16596	Knee Lifter Connection Lever Lifting Rod Spring Collar with 200113F
200113F	16592	Knee Lifter Connection Lever Lifting Rod Spring Collar Set Screw
248293	16595	Knee Lifter Lifting Lever
200262H	11623	" " " " Hinge Screw
207805	16596	Knife
240434	16599	" Bar
248295	16596	" " Angle Extension
200126D	16596	" " " " Screw (2)
240435	16599	" " Driving Eccentric with 200382C and 200437C

No.	Plate	Name
248279	16599	Knife Bar Driving Eccentric Fork with 200382C and 201464C
201464C	16597	Knife Bar Driving Eccentric Fork Position Screw
200382C	16593	Knife Bar Driving Eccentric Fork Set Screw
200437C	16597	Knife Bar Driving Eccentric Fork Position Screw
200382C	16593	Knife Bar Driving Eccentric Set Screw
202891	16599	" " " Shaft Crank with 200694F and 201525E
200694F	16596	Knife Bar Driving Shaft Crank Screw Stud
201525E	16585	" " " " " " " "
Nut		
237808	16596	Knife Bar Guide Block (2)
200011D	16596	" " " " Screw (4)
237829	16596	" " Lifting Spring
234044	16597	" " " Plunger
202895	16597	" Holder
200898D	16596	" " Screw (2)
202897	16597	" " Switch-in Handle
200076D	16597	" Screw (2)
240436	16595	" Switch-out Handle
200973H	16597	" " " Hinge Screw
202900	16597	" " " Spring
240437	16602	Needle Bar with 200175H, 200420F and 240438
235871	16597	Needle Bar Bushing (lower)
235872	16597	" " " (upper)
200341C	11321	" " " Set Screw
202552	16597	" " Connecting Link
264718	16597	" " " " Oil Guard
200161D	16597	" " " " " Screw
202333	16597	" " " " Stud with 202254
202254	-----	Needle Bar Connecting Link Stud Oil Packing (wick)
200374C	16596	Needle Bar Connecting Link Stud Set Screw
200383C	16585	" " " " " " " "
223688	16598	" " " Stud with 200072C and 202330
202330	-----	Needle Bar Connecting Stud Oil Packing (wick)
200072C	16598	Needle Bar Connecting Stud Pinch Screw
202692	16602	" " Crank with 200335C, 200374C, 200383C, 200428C and 202333
203172	16597	Needle Bar Crank Friction Washer
200428C	16597	" " " Position Screw
200335C	11321	" " " Set Screw
240438	16598	" " Thread Guide

No.	Plate	Name
200175H	16598	Needle Bar Thread Guide Screw
200420F	16598	" Set Screw
207072	16598	Presser Bar Bushing (2)
200352C	16598	" " " Set Screw (2)
202671	11623	" " Lifter
200653C	11623	" " " Hinge Screw
207963	11623	" " Lifting Releasing Lever Bracket
200975F	11623	Presser Bar Lifting Releasing Lever Bracket Guide Screw
206608	11623	Presser Bar Lifting Releasing Lever Bracket Spring
237820	16598	Presser Bar Position Guide
202338	16598	" " " " Lever with 200086F
200086F	16218	Presser Bar Position Guide Lever Pinch Screw
200352C	16598	Presser Bar Position Guide Set Screw
237836	16595	" " Spring (flat)
210949	16218	" " " Bracket with 200086C
200086C	16218	" " " " Pinch Screw
200538C	11623	" " " Regulating Screw
200948F	11623	" " " Support Screw
351839	16598	Roller Presser 1-1/4 in.diam., 3/16 in. face (fine) with 1528J, 1766C, 50553C and twenty-four 16232
241916	16598	Roller Presser Arm
233807	16598	" " " Bracket
235088	16598	" " " " Position Collar with 200362C
200117F	16598	Roller Presser Arm Bracket Position Collar Position Screw
200362C	16593	Roller Presser Arm Bracket Position Collar Set Screw
202558	16598	Roller Presser Arm Bracket Spring
202559	16598	" " " " " Stop
200141F	16218	" " " " " Screw
200096D	16598	" " " Screw
16232	16598	" " Ball, 3/32 in.diameter
1766C	16598	" " " Cone
202557	16602	" " Bar
50553C	16598	" " Hinge Screw
1528J	16598	" " " " Nut
241917	16598	" " Pawl
241918	16598	" " " Spring
241922	16598	Roller Presser (no back) complete, Nos. 241916 to 241918 and 351839
241942	-----	Roller Presser and Bar complete, Nos. 200096D, 200117F, 202557 to 202559, 233807, 235088, 241922 and two 200141F

No.	Plate	Name
265032	16218	Safety Clutch Hook Driving Shaft Position Collar with two 201254C
201254C	16218	Safety Clutch Hook Driving Shaft Position Collar Set Screw
265056	16218	Safety Clutch Locking Lever
265050	16218	" " " " Connecting Link
201483C	16600	Safety Clutch Locking Lever Hinge Screw
265035	16218	" " " " Spring
200962C	16218	" " " " Adjusting Screw
200059E	16600	Safety Clutch Locking Lever Spring Screw
265036	16602	" " Pulley with 200962C and 202253
202253	11321	Safety Clutch Pulley Spring Flange
265057	16218	" " Throw-in Latch
265052	16218	" " " " Pin
265051	16218	" " " " Spring
265040	-----	Safety Clutch complete, Nos. 200059E, 201483C, 265032, 265035, 265036, 265050 to 265052, 265056 and 265057
237762	16600	Take-up Lever
202399	16600	" " Driving Stud with 202277
202277	-----	" " " " Oil Packing (wick)
202400	16600	Take-up Lever Hinge Stud with 202423
202423	-----	" " " " Oil Packing (wick)
200363C	11623	" " " " Set Screw
240023	16600	Tension Bracket with 201224B and 236060
200159F	16578	" " Screw
240446	-----	Tension Bracket complete, Nos. 200978H, 201199F, 204271, 223438, 223703, 223704, 223706, 237174, 240023, two each 200309E, 201572B and 244048
244048	16600	Tension Disc
236060	16578	" " Position Pin
223703	16578	" Release Lever
236005	16600	" " " Rod
200309E	16578	" " " Screw
223704	16578	" " Plunger
204271	16578	" " Washer
223438	16578	" Spring
201224B	16578	" Stud
201572B	10886	" Thumb Nut
223706	16578	Thread Controller Disc
200978H	16218	" " " Screw
237174	16578	" " Spring
242117	16600	" " " Stop
200132E	16218	" " " Screw
201199F	16578	" " Stud with 204925

No.	Plate	Name
200061C	11623	Thread Controller Stud Set Screw
201572B	10886	" " " Thumb Nut
204925	16578	" " " Washer
202412	16578	" Guide
210955	16578	" " (upper)
200582H	16578	" " Screw (2)
241755	-----	" Lubricator Oil Pad (felt)
237845	16602	" " " " Holder
240439	16602	" " " " Retainer
241758	16602	" " " Reservoir
241759	-----	" " " Wick
350280F	16600	" " Screw
214838	16600	" " " Washer
237846	-----	Thread Lubricator complete, Nos. 214838, 237845, 240439, 241755, 241758, 241759 and 350280F
240034	16600	Thread Retainer
210956	16600	" " Bracket with 200397H
200582H	16578	" " " Screw (2)
200368H	16600	" " Set Screw
210993	16600	" " Sleeve
223844	16600	" " Spring
210957	16600	" " Stud
210958	16600	" " " Collar
200397H	16600	" " " Set Screw
210959	-----	Thread Retainer (lower) complete, Nos. 210956 to 210958, 210993 and 223844
240441	16601	Thread Plate, 50 needle hole, for needle sizes 14 and 15, with 200178D, 200587D, 211416 and 211424, trims opposite the needle and .060 and .085 in. to right of seam
211424	16601	Throat Plate Knife Follower
200587D	16601	" " " " Screw
211416	16601	" " " " Spring
200178D	16601	" " " " " Screw
691F	16601	" " Screw (2)

ACCESSORIES

No.	Plate	Name
200861D	16601	Bed Slide (back) Locking Thumb Screw
203208	16592	Bobbin (5)
*225482	-----	" Case Screw Driver Blade
*225483	-----	" " " " Handle
225497	14334	Bobbin Case Screws Driver complete, Nos. 225482 and 225483
207805	16596	Knife (3)
128 x 22	-----	Needles, six, size 20 (Narrow Reverse Twist)
4822	16601	Roller Presser Hinge Screw Nut Wrench
224121	-----	Drip Pan, 20 in. long, with four 1 in. wire nails
12361	14334	Machine Hinge Connection (2)
41400	14334	" Rest Pin (wood)
120342	14334	Oiler (copper plated) with 120343
120343	14334	" Spout, 3-1/2 in. long
*225484	-----	Screw Driver Blade
*225485	-----	" " Handle
225498	14334	Screw Driver complete, (7-1/4 in. long), Nos. 225484 and 225485
225554	14334	Wrench (steel)

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

225453	10886	Frame with 202277 and 225438
225454	10886	" Hinge Pin
202277	-----	" Oil Packing (wick)
225438	10886	" " Well Cap
225455	10886	" Spring
225456	10886	" " Plunger
202473	10885	Pulley with 200380C
200380C	10886	" Set Screw
225381	10886	Spindle
225444	10886	Stop Latch
200056E	10886	" " Screw
225458	10886	" " Thumb Lever
225459	10886	" " " " Hinge Stud
225459	10886	" " " " Joint Stud
202478	10886	" " Trip Lever
200299H	10886	" " " " Hinge Screw
225461	10886	Tension Bracket with 201499B
200082D	10886	" " Screw

No.	Plate	Name
228026	10886	Tension Bracket Screw Washer
2102	10886	" Disc
202407	10886	" Spring
201499B	10886	" Stud
201572B	10886	" " Thumb Nut
225462	-----	Bobbin Winder Tension Bracket complete, Nos. 201572B, 202407, 225461 and two 2102
225433	10885	Bobbin Winder and Tension Bracket Base
225382	10885	Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200299H, 202473, 202478, 225381, 225433, 225444, 225453 to 225456, 225458, 225462, 228026, two each 225459 and wood screws 3/4 in., Nos. 12, R. H. B.

KNEE LIFTER

228294	15911	Rock Lever with two 356C
228295	15911	" " Bracket with 356C and four wood screws 7/8 in., No. 12
228299	-----	Rock Lever Bracket 228295 with 228294 and 228297
228296	15911	Rock Lever Extension with 200529C
356C	15911	" " " Set Screw
228297	15911	" " Hinge Pin
356C	15911	" " " Set Screw
228284	15911	" " Knee Plate with 356C
202455	15911	" " " Arm
356C	15911	" " " Set Screw
356C	15911	" " " Set Screw
227728	15911	" " Rod with 227729
*227729	-----	" " " Cap
200529C	15911	" " " Set Screw
228298	15911	Knee Lifter complete, Nos. 202455, 227728, 228284, 228296 and 228299 (Other Knee Lifter parts are listed with parts of machine head)

FOOT LIFTER

PARTS REQUIRED TO CHANGE MACHINE FROM KNEE LIFTER TO FOOT LIFTER.

No.	Plate	Name
223733	16602	Foot Lifter Lifting Lever Extension
200082D	10886	" " " " " Screw
227561	16578	" " " " Spring
200835D	16601	" " " " Stop Screw

FOOT LIFTER

227952	15352	Foot Lifter Lever with 227954
227678	15352	" " " Chain, 48 in. long, with 202784
227954	16601	Foot Lifter Lever Chain Hook (lower)
202784	16578	" " " " " (upper)
225016	16601	" " " Hinge Pin
227953	15352	" " " Stand with two wood screws 1 in., No. 12
227955	15352	Foot Lifter Lever complete, Nos. 225016, 227678, 227952 and 227953

KNIFE HONE

259366	16595	Base with two 260772
259369	-----	" 259366 with 674D, 721D, 259274 to 259277, 350373J, 350412C and 350413C
259270	16602	Knife Hone
259271	16601	" " Clamp
215057	16601	" " " Position Pin
350412C	16601	" " " Screw
200466B	16601	" " " Thumb Screw
259272	16595	" " Holder with two 215057
259273	-----	" " " 259272 with 259270, two each 200466B and 259271
259274	16601	Knife Hone Holder Guide
259275	16602	" " " " Collar
721D	16601	" " " " Set Screw
259276	16602	" " " " Yoke
674D	16601	" " " " Hinge Screw
259277	16601	Knife Hone Holder Guide Collar Yoke Hinge Screw Bushing

No.	Plate	Name
350413C	16601	Knife Hone Holder Guide Collar Yoke Hinge Screw Bushing Set Screw
350373J	16601	Knife Hone Holder Guide Thumb Set Screw
260772	16601	" Position Pin
259367	-----	Honing Device (for trimming knives with pilot) complete, Nos. 259273 and 259369

Genuine Singer Needles should be used
in Singer Machines.
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO." 1

Needles in Containers marked
"For Singer Machines"
are not Singer made needles. 2

Genuine Singer Needles should be used
in Singer Machines.
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO." 1

Needles in Containers marked
"For Singer Machines"
are not Singer made needles. 2

NUMERICAL
LIST
OF PARTS

NUMERICAL LIST OF PARTS

No.	Plate	Name
356C	15911	Knee Lifter Rock Lever Extension Set Screw, for 228294
356C	15911	Knee Lifter Rock Lever Hinge Pin Set Screw, for 228295
356C	15911	Knee Lifter Rock Lever Knee Plate Arm Set Screw, for 228294
356C	15911	Knee Lifter Rock Lever Knee Plate Set Screw, for 228284
674D	16601	Honing Device Knife Hone Holder Guide Collar Yoke Hinge Screw, for 259369
691F	16601	Throat Plate Screw
721D	16601	Honing Device Knife Hone Holder Guide Collar Set Screw, for 259369
1528J	16598	Roller Presser Hinge Screw Nut, for 351839
1766C	16598	Roller Presser Ball Cone, for 351839
2102	10886	Bobbin Winder Tension Disc, for 225462
4822	16601	Roller Presser Hinge Screw Nut Wrench
12361	14334	Machine Hinge Connecting
16232	16598	Roller Presser Ball 3/32 in. diameter, for 351839
41400	14334	Machine Rest Pin (wood)
50553C	16598	Roller Presser Hinge Screw, for 351839
54897	16592	Bed Oil Cup
120342	14334	Oiler (copper plated) with 120343
120343	14334	" Spout, 3-1/2 in. long, for 120342
200004E	11321	Arm Screw
200006E	16596	Hook Saddle Screw
200009E	16596	" " Pinch Screw, for 223850
200011D	16596	Knife Bar Guide Block Screw
200019E	16585	Feed Driving Rock Shaft Crank Pinch Screw, for 224141
200049D	16593	Feed Driving Connection Pinch Screw, for 224106
200056E	10886	Bobbin Winder Stop Latch Screw, for 225382
200059E	16600	Safety Clutch Locking Lever Spring Screw, for 265040
200061C	11623	Thread Controller Stud Set Screw
200072C	16598	Needle Bar Connecting Stud Pinch Screw, for 223688
200076D	16597	Knife Screw
200082D	10886	Bobbin Winder Tension Bracket Screw, for 225382
200082D	10886	Foot Lifter Lifting Lever Extension Screw

NUMERICAL LIST OF PARTS

No.	Plate	Name
200086F	16218	Presser Bar Position Guide Lever Pinch Screw, for 202338
200086C	16218	Presser Bar Spring Bracket Pinch Screw, for 210949
200096D	16598	Roller Presser Arm Screw, for 241942
200106E	16593	Feed Dog Screw
200113F	16592	Arm Shaft Connection Belt Timing Collar Set Screw, for 224138
200113F	16592	Knee Lifter Connection Lever Lifting Rod Spring Collar Set Screw, for 227227
200117F	16598	Roller Presser Arm Bracket Position Collar Position Screw, for 241942
200118D	16593	Bobbin Case Opener Screw, for 240433
200126D	16596	Knife Bar Angle Extension Screw
200132E	16218	Thread Controller Spring Stop Screw
200141F	16218	Roller Presser Arm Bracket Spring Stop Screw, for 241942
200159F	16578	Tension Bracket Screw
200160D	16596	Hook Saddle Oil Guard Screw
200161D	16597	Needle Bar Connecting Link Oil Guard Screw
200164B	16592	Arm Shaft Connection Belt Timing Plate Screw
200173D	16585	Feed Lifting Cam Oiling Felt Screw, for 224052
200175H	16598	Needle Bar Thread Guide Screw, for 240437
200178D	16601	Throat Plate Knife Follower Spring Screw, for 240441
200262H	11623	Knee Lifter Connection Lever Hinge Screw
200262H	11623	" " Lifting Lever Hinge Screw
200278H	11321	Arm Cap Screw
200299H	10886	Bobbin Winder Stop Latch Trip Lever Hinge Screw, for 225382
200309E	16578	Tension Release Lever Screw, for 240446
200327C	11321	Arm Shaft Connection Belt Pulley Set Screw, for 224200
200327C	11321	Hook Driving Shaft Bushing Set Screw
200328C	11321	Balance Wheel Position Screw, for 235096
200335C	11321	" " Set Screw, for 235096
200335C	11321	Hook Saddle Bearing Set Screw
200335C	11321	Needle Bar Crank Set Screw, for 202692
200338C	11321	Arm Shaft Bushing (front) Set Screw
200341C	11321	" " " (back) Set Screw
200341C	11321	Needle Bar Bushing Set Screw
200352C	16598	Presser Bar Bushing Set Screw
200352C	16598	" " Position Guide Set Screw
200354C	16593	Hook Driving Shaft Lock Ratchet Position Screw, for 265314
200357E	11321	Arm Shaft Oil Packing Stop Screw , for 240427

NUMERICAL LIST OF PARTS

21

No.	Plate	Name
200362C	16593	Feed Driving Gear Set Screw, for 223867
200362C	16593	Hook Driving Shaft Lock Ratchet Set Ratchet Set Screw, for 265314
200362C	16593	Roller Presser Arm Bracket Position Collar Set Screw, for 235088
200363C	11623	Take-up Lever Hinge Stud Set Screw
200364C	16593	Bobbin Case Opener Lever Hinge Stud Set Screw, for 240433
200364C	16593	Hook Bushing (lower) Set Screw, for 224024
200368H	16600	Thread Retainer Set Screw
200374C	16596	Needle Bar Connecting Link Stud Set Screw, for 202692
200380C	10886	Bobbin Winder Pulley Set Screw, for 202473
200382C	16593	Hook Driving Pinion Set Screw, for 240167
200382C	16593	Knife Bar Driving Eccentric Fork Set Screw, for 240435 and 248279
200382C	16593	Knife Bar Driving Eccentric Set Screw
200383C	16585	Feed Driving Eccentric Regulating Screw Check Screw
200383C	16585	Feed Driving Rock Shaft Stop Collar Set Screw, for 202625
200383C	16585	Needle Bar Connecting Link Stud Set Screw, for 202692
200397H	16600	Thread Retainer Stud Set Screw, for 210956
200420F	16598	Needle Set Screw, for 240437
200428C	16597	" Bar Crank Position Screw, for 202692
200429C	16585	Feed Driving Eccentric Regulating Screw
200437C	16597	Knife Bar Driving Eccentric Fork Posi- tion Screw, for 240435
200446C	16585	Hook Bushing (upper) Position Screw, for 224024
200466B	16601	Honing Device Knife Hone Clamp Thumb Screw, for 259273
200473B	16593	Face Plate Thumb Screw
200502B	11321	Arm Shaft Bushing (front) Oil Packing Thumb Screw
200529C	15911	Knee Lifter Rock Lever Rod Set Screw, for 228296
200538C	11623	Presser Bar Spring Regulating Screw
200582H	16578	Thread Guide Screw
200582H	16578	" Retainer Bracket Screw
200587D	16601	Throat Plate Knife Follower Screw, for 240441
200590H	16596	Hook Washer, Screw, for 240430
200594C	16593	Bobbin Case Tension Spring Screw, for 235770
200602E	11321	Arm Shaft Connection Belt Pulley Posi- tion Screw, for 224200

NUMERICAL LIST OF PARTS

No.	Plate	Name
200607C	16585	Feed Driving Eccentric Regulating Bracket Plunger Spring Stop Screw
200653C	11623	Presser Bar Lifter Hinge Screw
200694F	16596	Knife Bar Driving Shaft Crank Screw Stud, for 202891
200835D	16601	Foot Lifter Lifting Lever Spring Stop Screw
200861D	16601	Bed Slide (back) Locking Thumb Screw
200898D	16596	Knife Holder Screw
200948F	11623	Presser Bar Spring Support Screw
200962C	16218	Safety Clutch Locking Lever Spring Adjusting Screw, for 265036
200973H	16597	Knife Switch-out Handle Hinge Screw
200975F	11623	Presser Bar Lifting Releasing Lever Bracket Guide Screw
200978H	16218	Thread Controller Disc Screw, for 240446
200984C	16593	Bobbin Case Tension Spring Regulating Screw, for 235770
201199F	16578	Thread Controller Stud with 204925, for 240446
201220C	16585	Feed Lifting Cam Set Screw, for 224154
201220C	16585	Hook Driving Pinion Position Screw, for 240167
201222C	16593	Feed Driving Gear Position Screw, for 223867
201224B	16578	Tension Stud, for 240023
201253F	16596	Hook Gib Screw, for 240430
201254C	16218	Safety Clutch Hook Driving Shaft Position Collar Set Screw, for 265032
201349C	16592	Bobbin Case Opener Lever Driving Screw Stud, for 224005
201376F	16596	Hook Gib Hinge Screw, for 240430
201407	16593	Feed Driving Connection Hinge Screw
201408	16593	" " Eccentric Regulating Bracket Hinge Screw, for 224140
201408C	16593	Feed Driving Eccentric Regulating Bracket Stop Screw, for 224140
201464C	16597	Knife Bar Driving Eccentric Fork Position Screw, for 248279
201483C	16600	Safety Clutch Locking Lever Hinge Screw, for 265040
201499B	10886	Bobbin Winder Tension Stud, for 225461
201517E	16218	Feed Driving Connection Hinge Screw Nut
201518E	16593	" Bar Hinge Screw Nut, for 240031
201525E	16585	" Driving Eccentric Regulating Bracket Hinge Screw Nut, for 224140
201525E	16585	Feed Driving Eccentric Regulating Bracket Stop Screw Nut, for 224140
201525E	16585	Knife Bar Driving Shaft Crank Screw Stud Nut for 202891

NUMERICAL LIST OF PARTS

23

No.	Plate	Name
201542C	16592	Bobbin Case Opener Lever Driving Screw Stud Nut, for 224005
201572B	10886	Bobbin Winder Tension Stud Thumb Nut, for 225462
201572B	10886	Thread Controller Stud Thumb Nut
201572B	10886	Tension Thumb Nut, for 240446
202005	11321	Arm Screw Washer
*202056	-----	Bobbin Case Base Latch Pin, for 235769
202135	16593	Face Plate Position Pin, for 240426
202244	-----	Arm Shaft Bushing (back) Oil Packing (wick), for 240802
202244	-----	Arm Shaft Bushing (front) Oil Packing (wick), for 207080
202244	-----	Hook Driving Shaft Bushing Oil Packing (wick), for 224111
202248	11321	Arm Cap Screw Washer
202253	11321	" Shaft Connection Belt Pulley Spring Flange, for 224200
202253	11321	Safety Clutch Pulley Spring Flange, for 265036
202254	-----	Needle Bar Connecting Link Stud Oil Packing (wick), for 202333
202277	-----	Bobbin Case Opener Lever Hinge Stud Oil Packing (wick), for 223622
202277	-----	Bobbin Winder Frame Oil Packing (wick), for 225453
202277	-----	Feed Driving Connection Oil Packing (wick), for 224106
202277	-----	Take-up Lever Driving Stud Oil Packing (wick), for 202399
202300	16594	Feed Driving Eccentric Regulating Bracket, for 224140
202301	16585	Feed Driving Eccentric Regulating Bracket Plunger
202302	16585	Knee Lifter Connection Lever Lifting Rod Cotter Pin, for 223684
*202311	-----	Feed Regulating Spindle Head, for 224142
202330	-----	Needle Bar Connecting Stud Oil Packing (wick), for 223688
202333	16597	Needle Bar Connecting Link Stud with 202254, for 202692
202338	16598	Presser Bar Position Guide Lever with 200086F
202399	16600	Take-up Lever Driving Stud with 202277
202400	16600	" " Hinge Stud with 202423
202407	10886	Bobbin Winder Tension Spring, for 225462
202412	16578	Thread Guide
202423	-----	Take-up Lever Hinge Stud Oil Packing (wick), for 202400
202443	16585	Feed Regulating Spindle Head Pin, for 224142

NUMERICAL LIST OF PARTS

No.	Plate	Name
202455	15911	Knee Lifter Rock Lever Knee Plate Arm, for 228298
202473	10885	Bobbin Winder Pulley with 200380C,for 225382
202478	10886	Bobbin Winder Stop Latch Trip Lever,for 225382
202552	16597	Needle Bar Connecting Link Nos.202557 to 202559,for 241942
202557	16602	Roller Presser Bar
202558	16598	" " Arm Bracket Spring
202559	16598	" " " " " Stop
202595	16585	Feed Driving Eccentric Regulating Bracket Plunger Spring
202619	16585	Feed Regulating Spindle Head Position Pin,for 224142
202625	16585	Feed Driving Rock Shaft Stop Collar with two 200383C
202671	11623	Presser Bar Lifter
202692	16602	Needle Bar Crank with 200335C,200374C, 200383C,200428C and 202333
202784	16578	Foot Lifter Lever Chain Hook (upper),for 227678
202891	16599	Knife Bar Driving Shaft Crank with 200694F and 201525E
202895	16597	Knife Holder
202897	16597	" " Switch-in Handle
202900	16597	" Switch-out Handle Spring
203101	-----	Bobbin Case Opener Lever Driving Screw Stud Oil Packing (wick),for 224005
203172	16597	Needle Bar Crank Friction Washer
203208	16592	Bobbin Nos.203211 to 203213,for 235769
203211	16592	Bobbin Case Base Latch
203212	16592	" " " " Plunger
203213	16592	" " " " Spring
203216	-----	" " Washer (cloth),for 235769
203251	16956	Hook Gib,for 240430
204235	11321	Arm Position Pin
204271	16578	Tension Release Washer,for 240446
204925	16578	Thread Controller Stud Washer,for 201199F
206608	11623	Presser Bar Lifting Releasing Lever Bracket Spring
206628	16596	Knee Lifter Connection Lever Lifting Rod Spring
206758	-----	Feed Driving Connection Hinge Screw Oil Packing (wick)
207072	16598	Presser Bar Bushing
207080	16594	Arm Shaft Bushing (front) with 202244
207805	16596	Knife
207963	11623	Presser Bar Lifting Releasing Lever Bracket

No.	Plate	Name
210949	16218	Presser Bar Spring Bracket with 200086C
210955	16578	Thread Guide (upper)
		Nos. 210956 to 210958, for 210959
210956	16600	Thread Retainer Bracket with 200397H
210957	16600	" " Stud
210958	16600	" " " Collar
210959	-----	Thread Retainer (lower) complete, Nos. 210956 to 210958, 210993 and 223844
210993	16600	Thread Retainer Sleeve, for 210959
211416	16601	Throat Plate Knife Follower Spring, for 240441
211424	16601	Throat Plate Knife Follower, for 240441
214838	16600	Thread Lubricator Screw Washer, for 237846
215057	16601	Honing Device Knife Hone Clamp Position Pin, for 259272
223438	16578	Tension Spring, for 240446
223622	16592	Bobbin Case Opener Lever Hinge Stud with 202277, for 240433
223650	16595	Feed Driving Rock Shaft, for 240031
223655	-----	" Lifting Cam Oiling Felt, for 224052
223681	16599	Hook Saddle Bearing
223684	16602	Knee Lifter Connection Lever Lifting Rod with 202302
223688	16598	Needle Bar Connecting Stud with 200072C and 202330
223703	16578	Tension Release Lever, for 240446
223704	16578	" " Plunger, for 240446
223706	16578	Thread Controller Disc, for 240446
223733	16602	Foot Lifter Lifting Lever Extension
223811	16592	Bed Slide (back) Stop
223812	16592	" " " " Spring
223844	16600	Thread Retianer Spring, for 210959
223850	-----	Hook Saddle with 200009E, for 224024
223867	16594	Feed Driving Gear (spiral) with 200362C and 201222C
224004	16592	Bobbin Case Opener, for 240433
224005	16592	" " " Lever with 201349C, 201542C and 203101, for 240433
224019	16585	Hook Bushing (lower) (bronze), for 224024
224020	16585	" " (upper) (bronze), for 224024
224022	16593	" Driving Pinion Thrust Washer, for 240433
224024	16599	Hook Saddle 223850 with 200364C, 200446C, 224019 and 224020, for 240433
224052	16585	Feed Lifting Cam Fork with 200173D and 223655, for 240038
224103	16594	Arm Shaft Connection Belt
224106	16599	Feed Driving Connection with 200049D and 202277

NUMERICAL LIST OF PARTS

No.	Plate	Name
224111	16599	Hook Driving Shaft Bushing (back) with 202244
224121	-----	Drip Pan, 20 in. long, with four 1 in. wire nails
224138	16592	Arm Shaft Connection Belt Timing Collar with 200113F
224139	16592	Arm Shaft Connection Belt Timing Plate
224140	-----	Feed Driving Eccentric Regulating Bracket 202300 with 224200, two each 201408C and 201525E
224141	16593	Feed Driving Rock Shaft Crank with 200019E
224142	16594	Feed Regulating Spindle with 202311, 202443 and 202619
224154	16585	Feed Lifting Cam with 201220C
224196	16594	Arm Cap with 244071
224200	16594	" Shaft Connection Belt Pulley with 200327C, 200602E and two 202253, for 224140
224392	-----	Arm Shaft Oil Packing (wick), for 240427
225016	16601	Foot Lifter Lever Hinge Pin, for 227955
225381	10886	Bobbin Winder Spindle, for 225382
225382	10885	Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200299H, 202473, 202478, 225381, 225433, 225444, 225453 to 225456, 225458, 225462, 228026, two each 225459 and wood screws 3/4 in., No. 12, R.H.B.
225433	10885	Bobbin Winder and Tension Bracket Base, for 225382
225438	10886	Bobbin Winder Frame Oil Well Cap, for 225453
225444	10886	Bobbin Winder Stop Latch, for 225382 Nos. 225453 to 225456, for 225382
225453	10886	Bobbin Winder Frame with 202277 and 225438
225454	10886	Bobbin Winder Frame Hinge Pin
225455	10886	" " " Spring
225456	10886	" " " Plunger
225458	10886	" " Stop Latch Thumb Lever, for 225382
225459	10886	Bobbin Winder Stop Latch Thumb Lever Hinge Stud, for 225382
225459	10886	Bobbin Winder Stop Latch Thumb Lever Joint Stud, for 225382
225461	10886	Bobbin Winder Tension Bracket with 201499B, for 225462
225462	-----	Bobbin Winder Tension Bracket complete, Nos. 201572B, 202407, 225461 and two 2102, for 225382
*225482	-----	Bobbin Case Screw Driver Blade, for 225497

NUMERICAL LIST OF PARTS

27

No.	Plate	Name
*225483	-----	Bobbin Case Screw Driver Handle, for 225497
*225484	-----	Screw Driver Blade, for 225498
*225485	-----	" " Handle, for 225498
225497	14334	Bobbin Case Screw Driver complete, Nos. 225482 and 225483
225498	14334	Screw Driving complete, (7-1/4 in. long), Nos. 225484 and 225485
225554	14334	Wrench (steel)
225585	16596	Hook Saddle Screw Washer
225837	16585	Feed Lifting Cam Fork Screw Washer, for 240038
227227	16596	Knee Lifter Connection Lever Lifting Rod Spring Collar with 200113F
227561	16578	Foot Lifter Lifting Lever Spring
227678	15352	" " Lever Chain, 48 in. long, with 202784, for 227955
227728	15911	Knee Lifter Rock Lever Rod with 227729, for 228298
*227729	-----	Knee Lifter Rock Lever Rod Cap, for 227728
227952	15352	Foot Lifter Lever with 227954, for 227955
227953	15352	" " " Stand with two wood screws 1 in., No. 12, for 227955
227954	16601	Foot Lifter Lever Chain Hook (lower), for 227952
227955	15352	Foot Lifter Lever complete, Nos. 225016, 227678, 227952 and 227953
228026	10886	Bobbin Winder Tension Bracket Screw Washer, for 225382
228284	15911	Knee Lifter Rock Lever Knee Plate with 356C, for 228298
228294	15911	Knee Lifter Rock Lever with two 356C, for 228299
228295	15911	Knee Lifter Rock Lever Bracket with 356C and four wood screws 7/8 in., No. 12, for 228299
228296	15911	Knee Lifter Rock Lever Extension with 200529C, for 228298
228297	15911	Knee Lifter Rock Lever Hinge Pin, for 228299
228298	15911	Knee Lifter complete, Nos. 202455, 227728, 228284, 228296 and 228299
228299	-----	Knee Lifter Rock Lever Bracket 228295 with 228294 and 228297, for 228298
233807	16598	Roller Presser Arm Bracket, for 241942
234044	16597	Knife Bar Lifting Spring Plunger
235088	16598	Roller Presser Arm Bracket Position Collar with 200362C, for 241942

NUMERICAL LIST OF PARTS

No.	Plate	Name
235096	16595	Balance Wheel (disc) (belt groove 2-1/2 in.diam.) with 200328C and 200335C
235769	16592	Bobbin Case Base with 202056, 203211 to 203213 and 203216, for 235772
235770	16592	Bobbin Case Cap with 200594C, 200984C and 235771, for 235772
235771	16592	Bobbin Case Tension Spring, for 235770
235772	-----	Bobbin Case complete, Nos. 235769 and 235770, for 240431
235871	16597	Needle Bar Bushing (lower)
235872	16597	" " " (upper)
236005	16600	Tension Release Lever Rod
236060	16578	" Disc Position Pin, for 240023
237174	16578	Thread Controller Spring, for 240446
237529	16599	Hook Driving Shaft Bushing (front)
237762	16600	Take-up Lever
237808	16596	Knife Bar Guide Block
237820	16598	Presser Bar Position Guide
237829	16596	Knife Bar Lifting Spring
237836	16595	Presser Bar Spring (flat)
237837	16595	Knee Lifter Connection Lever
237844	16595	Face Plate
237845	16602	Thread Lubricator Oil Pad Holder, for 237846
237846	-----	Thread Lubricator complete, Nos. 214838, 237845, 240439, 241755, 241758, 241759 and 350380F
240003	16594	Bed Slide (back)
240004	16594	" " (front)
240018	16595	Hook Saddle Oil Guard
240019	-----	" " " " Felt
240023	16600	Tension Bracket with 201224B and 236060, for 240446
240031	-----	Feed Driving Rock Shaft 223650 with 201518E, 240038 and 350393C
240034	16600	Thread Retainer
240037	16594	Feed Bar, for 240038
240038	-----	" " 240037 with 224052, 225837 and 350197E, for 240031
240167	16593	Feed Driving Pinion (spiral) with 200382C and 201220C, for 240433
240213	16596	Hook Driving Shaft Lock Stud, for 240215
240214	16596	" " " " Socket, for 240215
240215	-----	Hook Driving Shaft Lock Stud complete, Nos. 240213, 240214, 248423 and 248425
*240218	-----	Bed
*240426	-----	Arm with 202135
240427	16595	" Shaft with 200357E and 224392
240428	16593	Feed Dog

NUMERICAL LIST OF PARTS

29

No.	Plate	Name
*240429	-----	Hook (sewing), for 240430
240430	16593	" 240429 with 201253F, 201376F, 203251, 248257 and two 200590H, for 240431
240431	-----	Hook and Bobbin Case complete, Nos. 235772 and 240430, for 240433
240433	-----	Hook Saddle complete, Nos. 200118D, 200364C, 223622, 224004, 224005, 224022, 224024, 240167, 240431 and 248251
240434	16599	Knife Bar
240435	16599	" " Driving Eccentric with 200382C and 200437C
240436	16595	Knife Switch-out Handle
240437	16602	Needle Bar with 200175H, 200420F and 240438
240438	16598	Needle Bar Thread Guide, for 240437
240439	16602	Thread Lubricator Oil Pad Retainer, for 237846
240441	16601	Throat Plate, 50 needle hole, for needle sizes 14 and 15, with 200178D, 200587D, 211416 and 211424, trims opposite the needle and .060 and .085 in. to right of seam
240446	-----	Tension Bracket complete, Nos. 200978H, 201199F, 204271, 223438, 223703, 223704, 223706, 237174, 240023 two each 200309E, 201572B and 244048
240448	16595	Hook Driving Shaft
240802	16594	Arm Shaft Bushing (back) with 202244
241755	-----	Thread Lubricator Oil Pad (felt), for 237846
241758	16602	Thread Lubricator Oil Reservoir, for 237846
241759	-----	Thread Lubricator Oil Wick, for 237846 Nos. 241916 to 241918, for 241922
241916	16598	Roller Presser Arm
241917	16598	" " Pawl
241918	16598	" " " Spring
241922	16598	Roller Presser (no back) complete, Nos. 241916 to 241918 and 351839, for 241922
241942	-----	Roller Presser and Bar complete, Nos. 200096D, 200117F, 202557 to 202559, 233807, 235088, 241922 and two 200141F
242117	16600	Thread Controller Spring Stop
244048	16600	Tension Disc, for 240446
244071	-----	Arm Cap Oil Wick, for 224196
248251	16592	Bobbin Case Opener Lever Link, for 240433
248257	16596	Hook Washer, for 240430
248279	16599	Knife Bar Driving Eccentric Fork with 200382C and 201464C

NUMERICAL LIST OF PARTS

No.	Plate	Name
248293	16595	Knee Lifter Lifting Lever
248295	16596	Knife Bar Angle Extension
248423	16596	Hook Driving Shaft Lock Stud Cotter Pin, for 240215
248425	16596	Hook Driving Shaft Lock Stud Spring, for 240215
Nos. 259270 to 259272, for 259273		
259270	16602	Honing Device Knife Hone
259271	16601	Honing Device Knife Hone Clamp
259272	16595	" " " " Holder with two 215057
259273	-----	Honing Device Knife Hone Holder 259272 with 259270, two each 200466B and 259271, for 259367
Nos. 259274 to 259277, for 259369		
259274	16601	Honing Device Knife Hone Holder Guide
259275	16602	" " " " " "
		Collar
259276	16602	Honing Device Knife Hone Holder Guide Collar Yoke
259277	16601	Honing Device Knife Hone Holder Guide Collar Yoke Hinge Screw Bushing
259366	16595	Honing Device Base with two 260772, for 259369
259367	-----	Honing Device (for trimming knives with pilot) complete, Nos. 259273 and 259369
259369	-----	Honing Device Base 259366 with 674D, 721D, 259274 to 259277, 350373J, 350412C and 350413C, for 259367
260772	16601	Honing Device Knife Position Pin, for 259366
264718	16597	Needle Bar Connecting Link Oil Guard
265032	16218	Safety Clutch Hook Driving Shaft Posi- tion Collar with two 201254C, for 265040
265035	16218	Safety Clutch Locking Lever Spring, for 265040
265036	16602	Safety Clutch Pulley with 200962C and 202253, for 265040
265040	-----	Safety Clutch complete, Nos. 200059E, 201483C, 265032, 265035, 265036, 265050 to 265052, 265056 and 265057
Nos. 265050 to 265052, for 265040		
265050	16218	Safety Clutch Locking Lever Connecting Link
265051	16218	Safety Clutch Throw-in Latch Spring
265052	16218	" " " " Pin
265056	16218	" " Locking Lever, for 265040
265057	16218	" " Throw-in Latch, for 265040

No.	Plate	Name
265314	16599	Hook Driving Shaft Lock Ratchet with 200354C and 200362C
350197E	16585	Feed Lifting Cam Fork Screw, for 240038
350280F	16600	Thread Lubricator Screw, for 237846
350373J	16601	Honing Device Knife Hone Holder Guide Thumb Set Screw, for 259369
350393C	16593	Feed Bar Hinge Screw (driving), for 240031
350412C	16601	Honing Device Knife Hone Clamp Screw, for 259369
350413C	16601	Honing Device Knife Hone Holder Guide Collar Yoke Hinge Screw Bushing Set Screw, for 259369
351839	16598	Roller Presser 1-1/4 in. diam., 3/16 in. face (fine) with 1528J, 1766C, 50553C and twenty-four 16232, for 241922

Genuine Singer Needles should be used
in Singer Machines.
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO." 1

Needles in Containers marked
"For Singer Machines"
are not Singer made needles. 2

Genuine Singer Needles should be used
in Singer Machines.

These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO." 1

Needles in Containers marked


"For Singer Machines"

are not Singer made needles. 2

ILLUSTRATIONS
OF
PARTS

PLATE 10885—ONE-FOURTH SIZE

225433

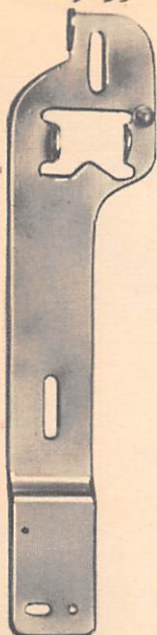

202473



225382

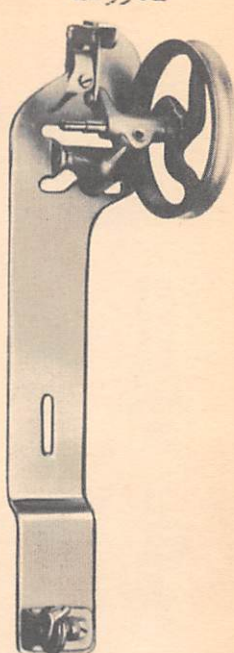


PLATE 10886 - FULL SIZE

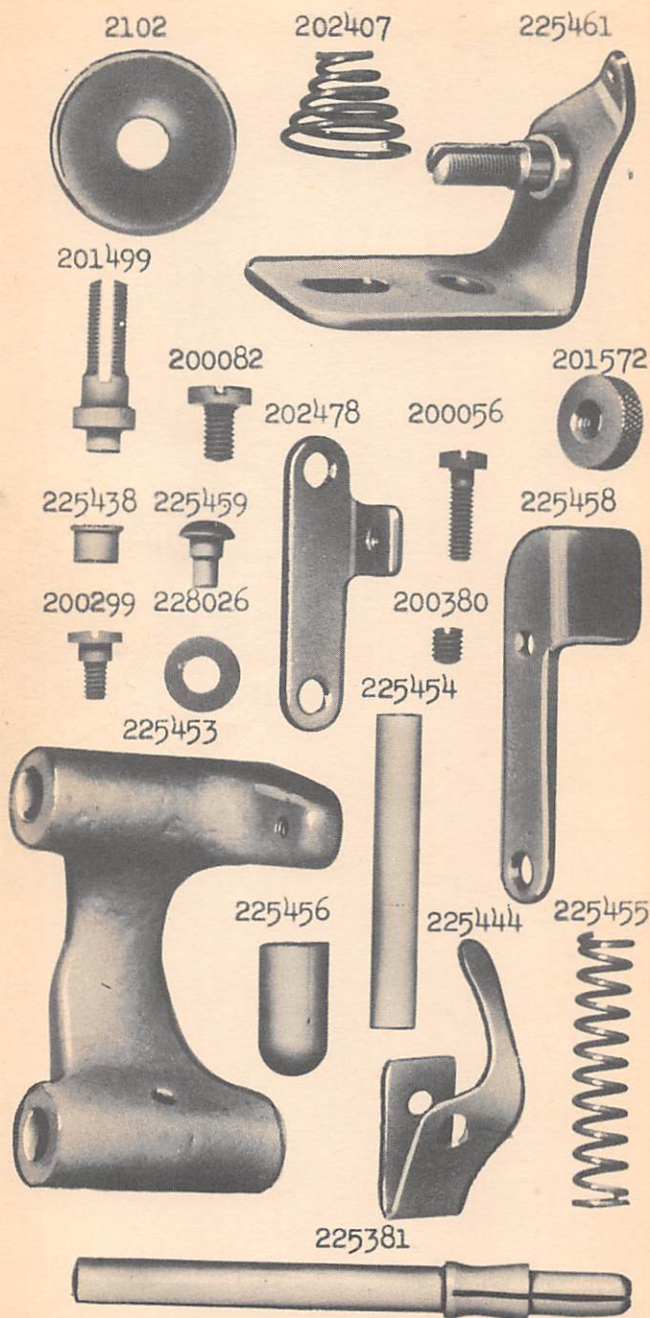


PLATE 11321 — FULL SIZE

200004



200010




204235



200602



202253

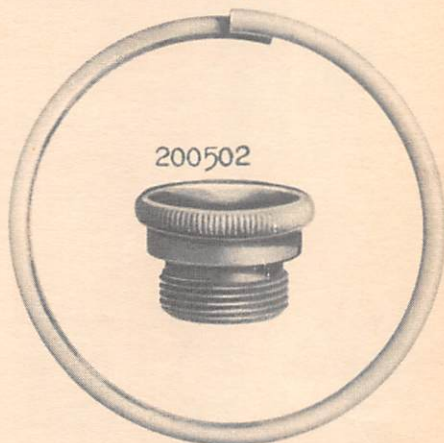

200327



200328



200502



200335



200338



200341



200357



200060



200278



200577



200585



202005



202248



200079



PLATE 11623—FULL SIZE

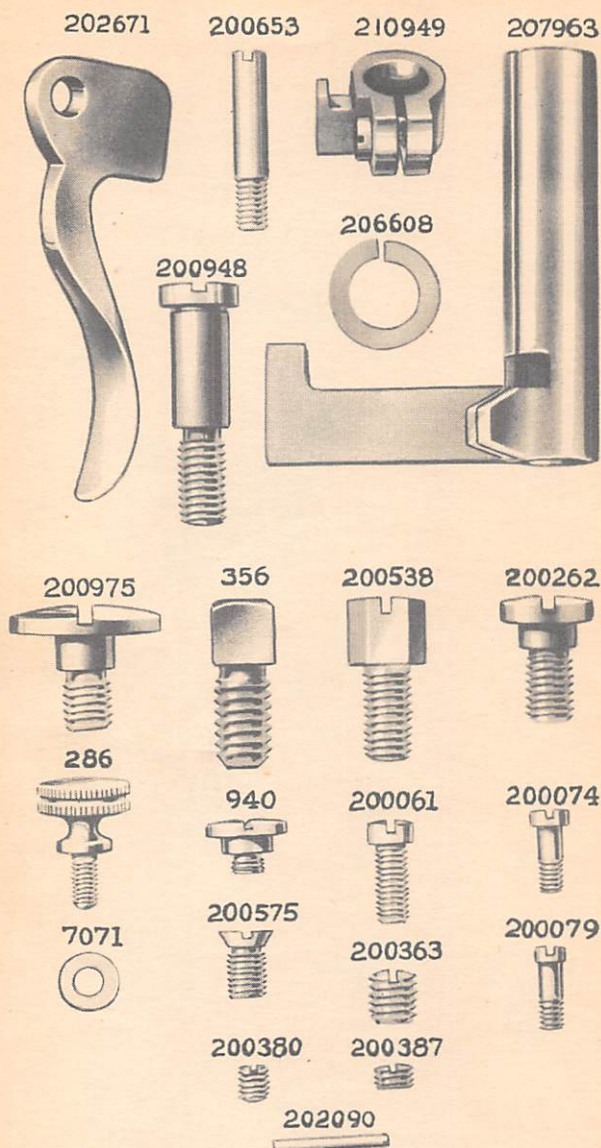


PLATE 14334 - ONE-HALF SIZE

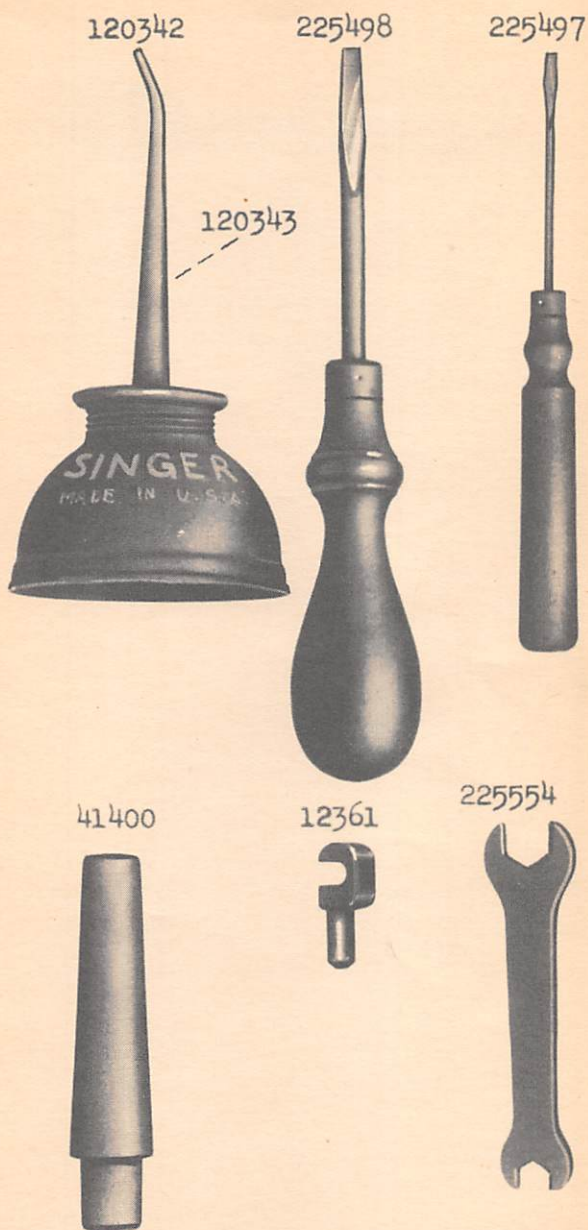


PLATE 15352 - ONE-FOURTH SIZE

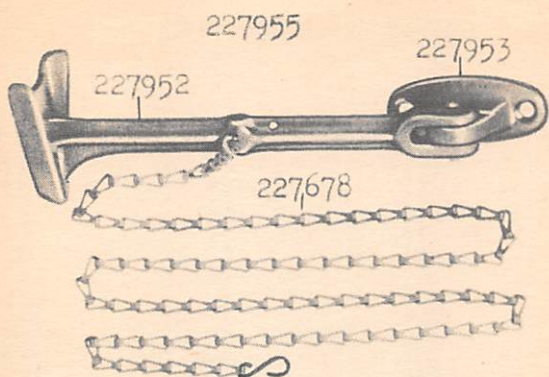


PLATE 15911-ONE-FOURTH SIZE

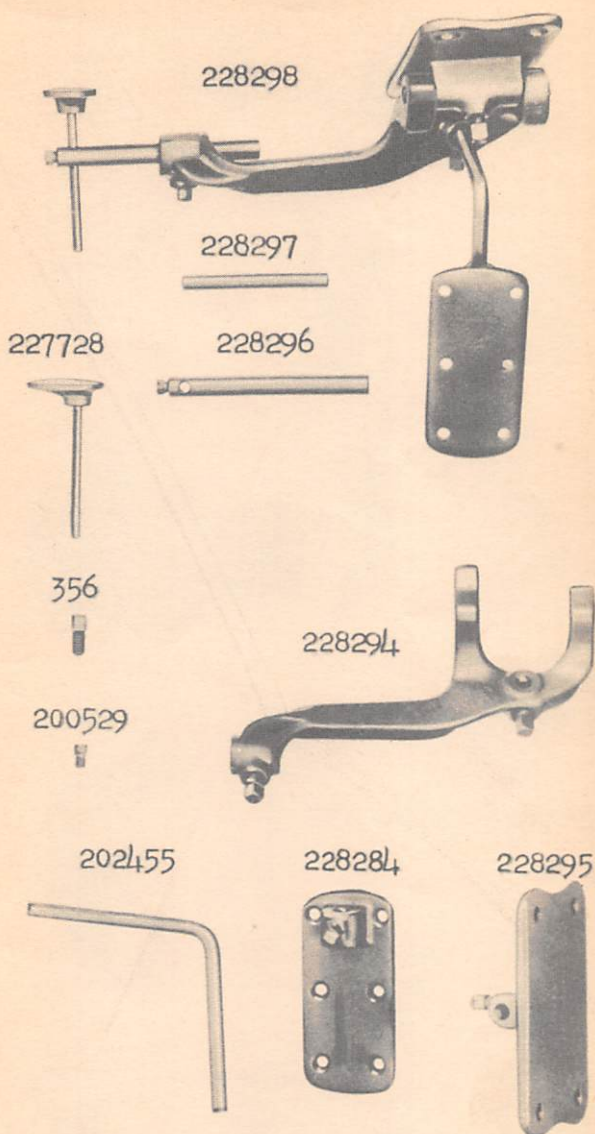


PLATE 16218 - FULL SIZE

201517



201522



200086



200074



210949



200538



230795



200387



200141




265035




265057



265032

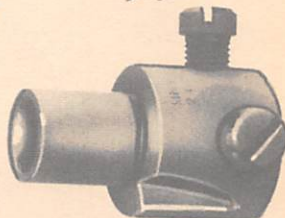

265051



265056



200962



265052



201254



200092



265050



200993



200132



200978



PLATE 16578 - FULL SIZE

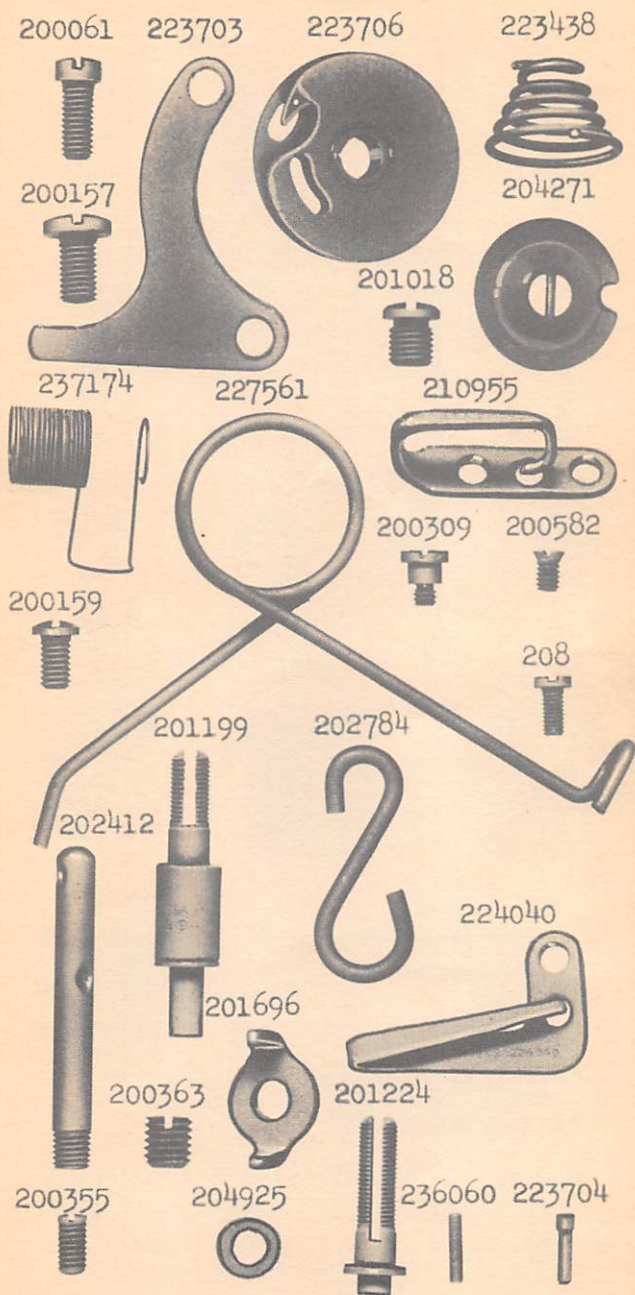


PLATE 16585 - FULL SIZE

200019



202301



202595



200429



202302



200341



200437



200256



201525



200607




225837



350197



202625

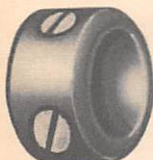


224154



224020



224052

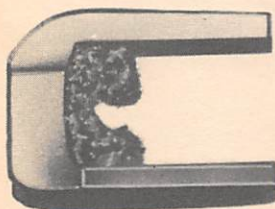

224019



200383



202619



202443



200173



200446



201220



PLATE 16592 - FULL SIZE

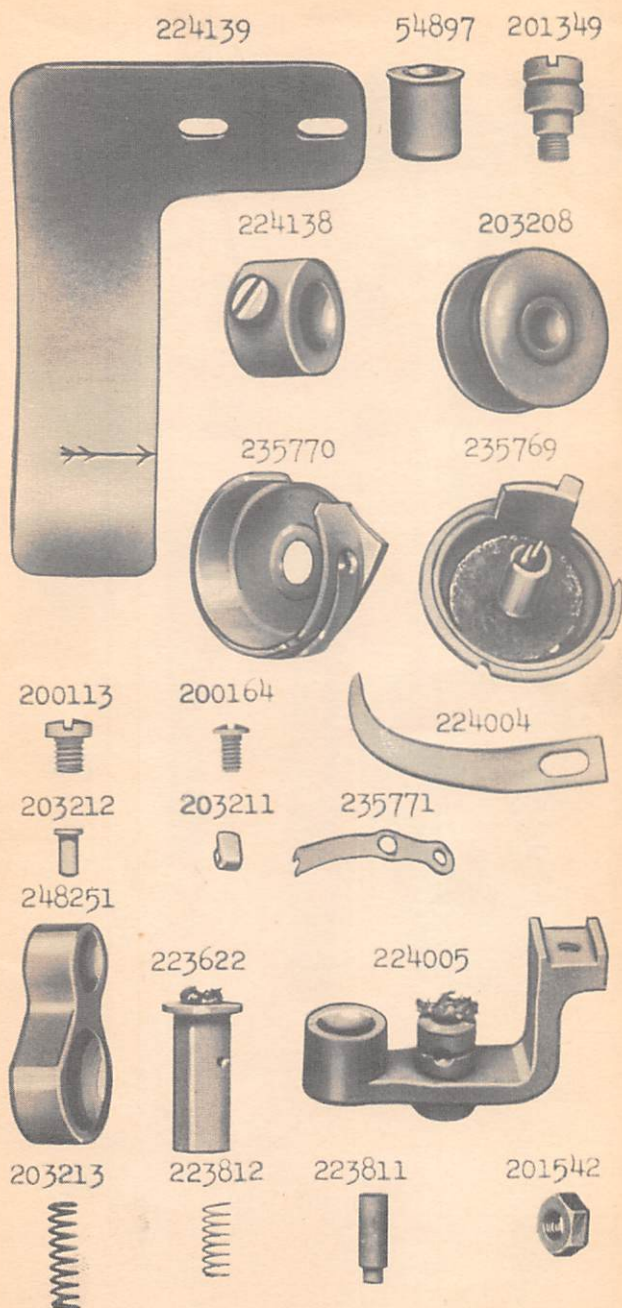


PLATE 16593 - FULL SIZE

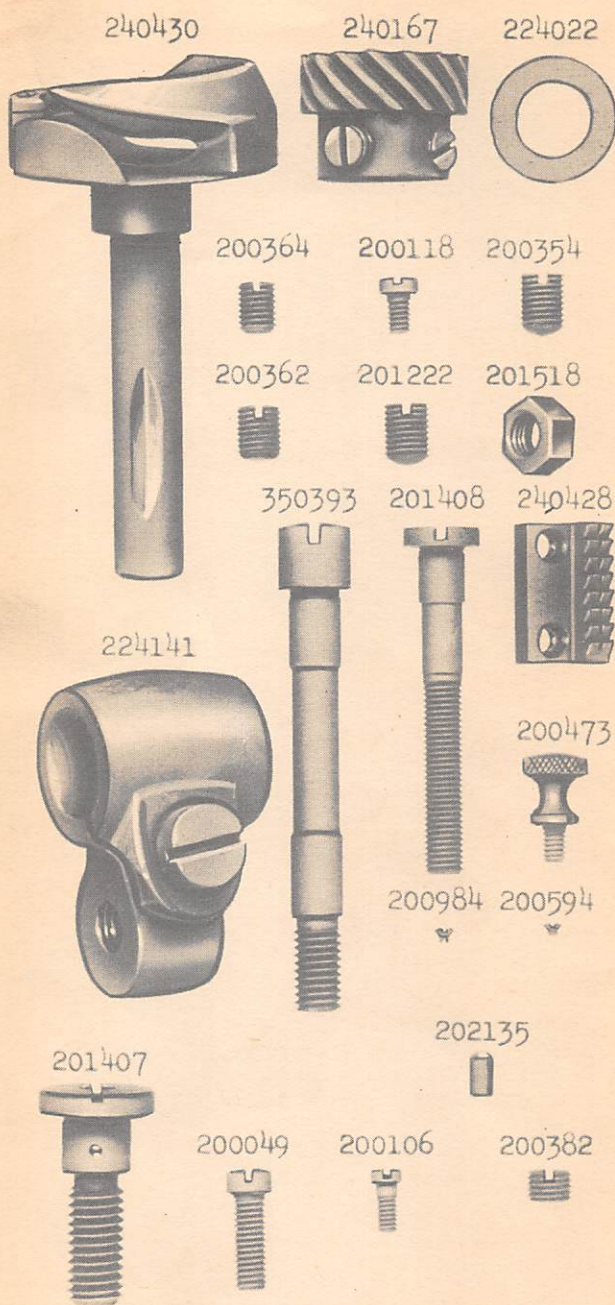


PLATE 16594 - ONE-HALF SIZE

224196




224142 224103




207080




240802

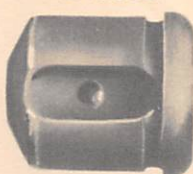


240004

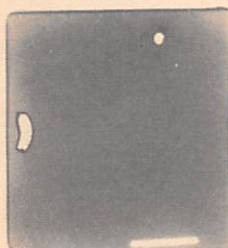


223867

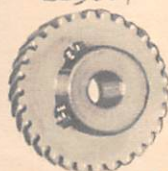


202300

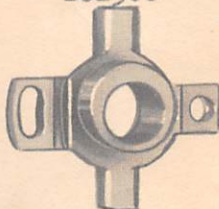

240003

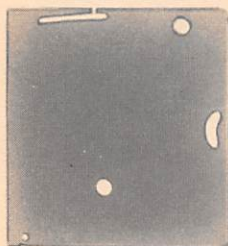

240037

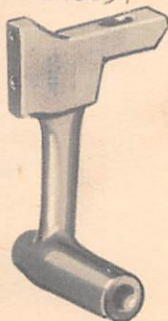

224200

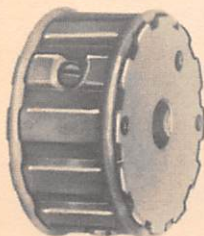


PLATE 16595 - ONE-FOURTH SIZE


259272 240427

223650

235096



240448

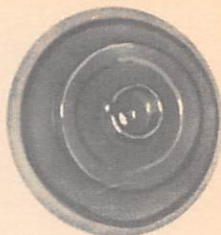


259366




237844




240018

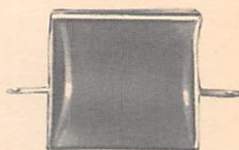


240436

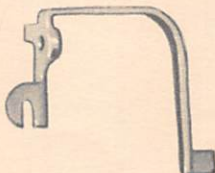

237836



248293



237837



PLATE 16596 - FULL SIZE

200006



200009



206628



237829



200011



240214



240213



200694



201376



201253



200590



248257

203251

227227




248425



207805




225585

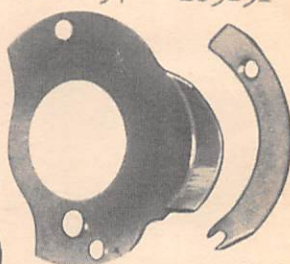


237808

248295

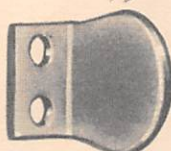

248423

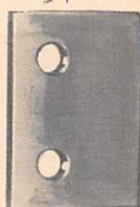

200898



200160



200126



200374



PLATE 16597 - FULL SIZE


234044



235872



202552

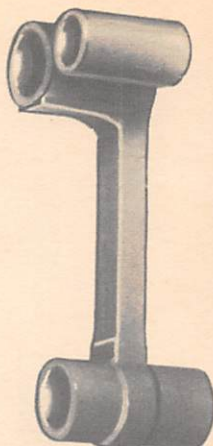

235871



200161



200437



201464



200076



264718

202333




200973



202900




202897

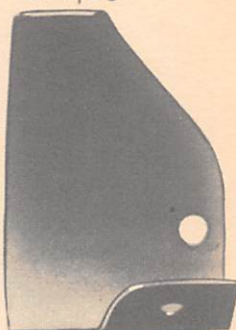

200428



203172

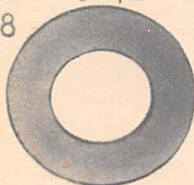

202895

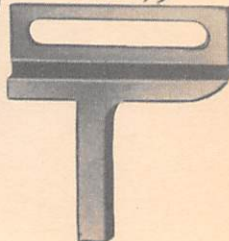


PLATE 16598 - FULL SIZE


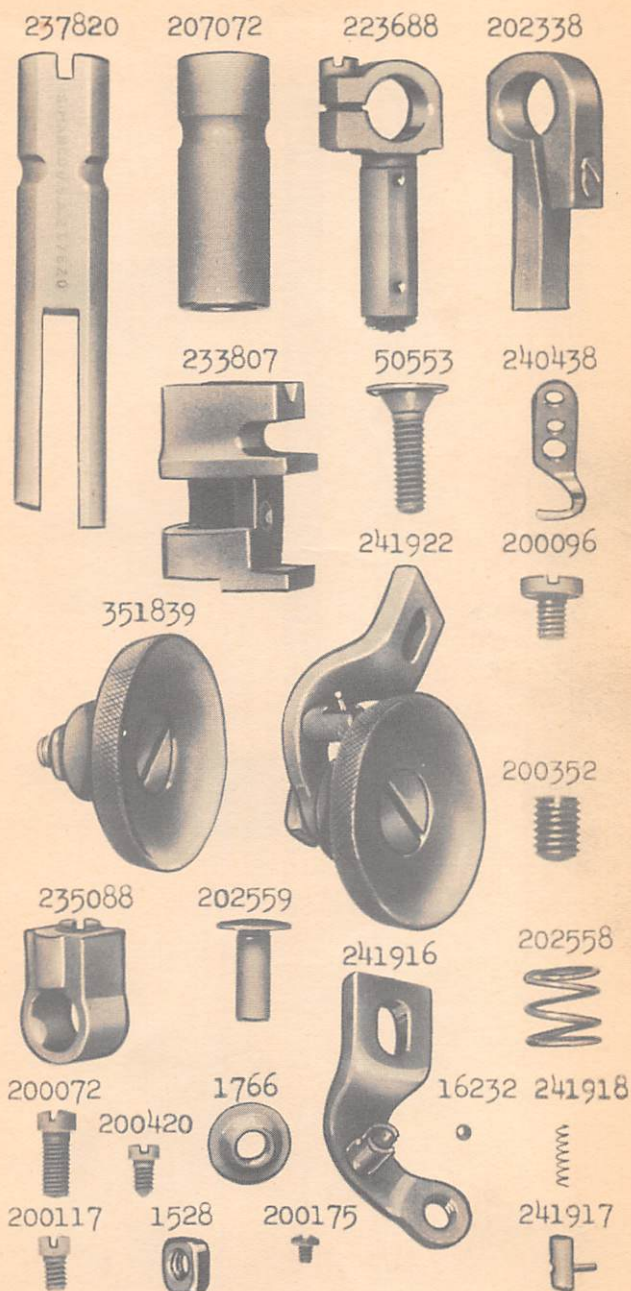


PLATE 16599 - ONE-HALF SIZE


224106



240434

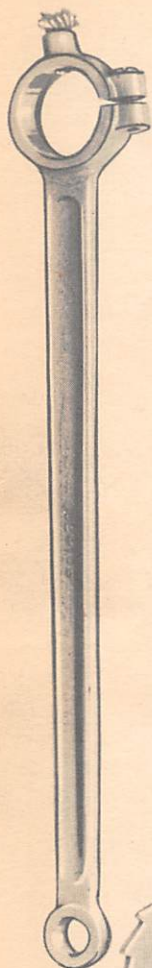

202891

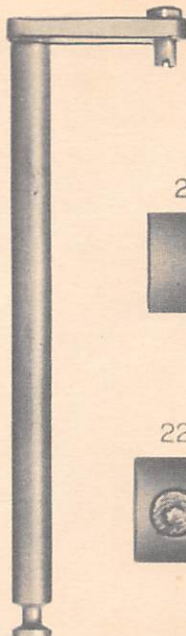

237529



240435




224111




223681



265314

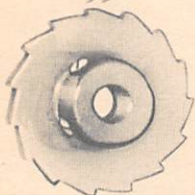

224024

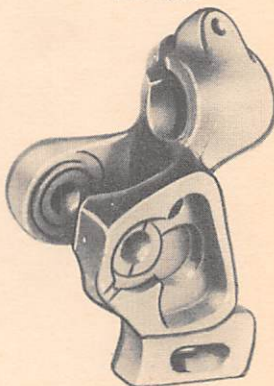

248279



PLATE 16600 - FULL SIZE

201483



200059



214838



350280




236005



202399




244048

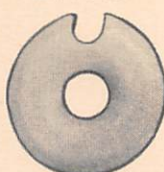


242117



237762

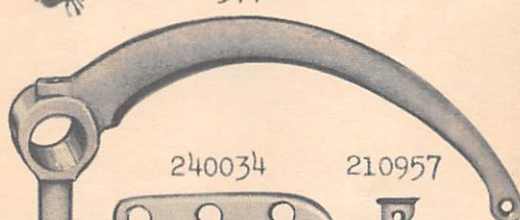

240034

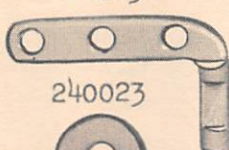

210957



240023

202400



210993



210958




223844



200397



200368

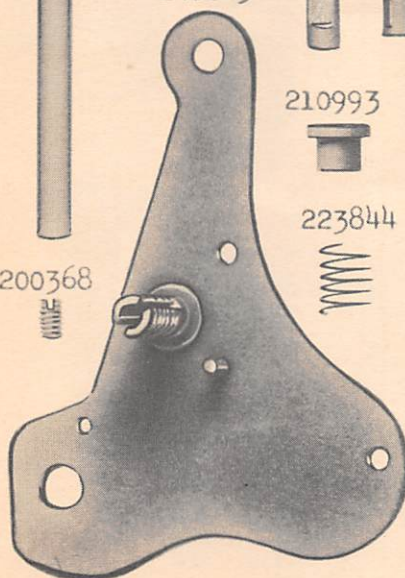

210956

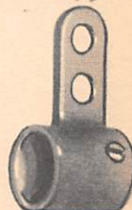


PLATE 1660I - FULL SIZE

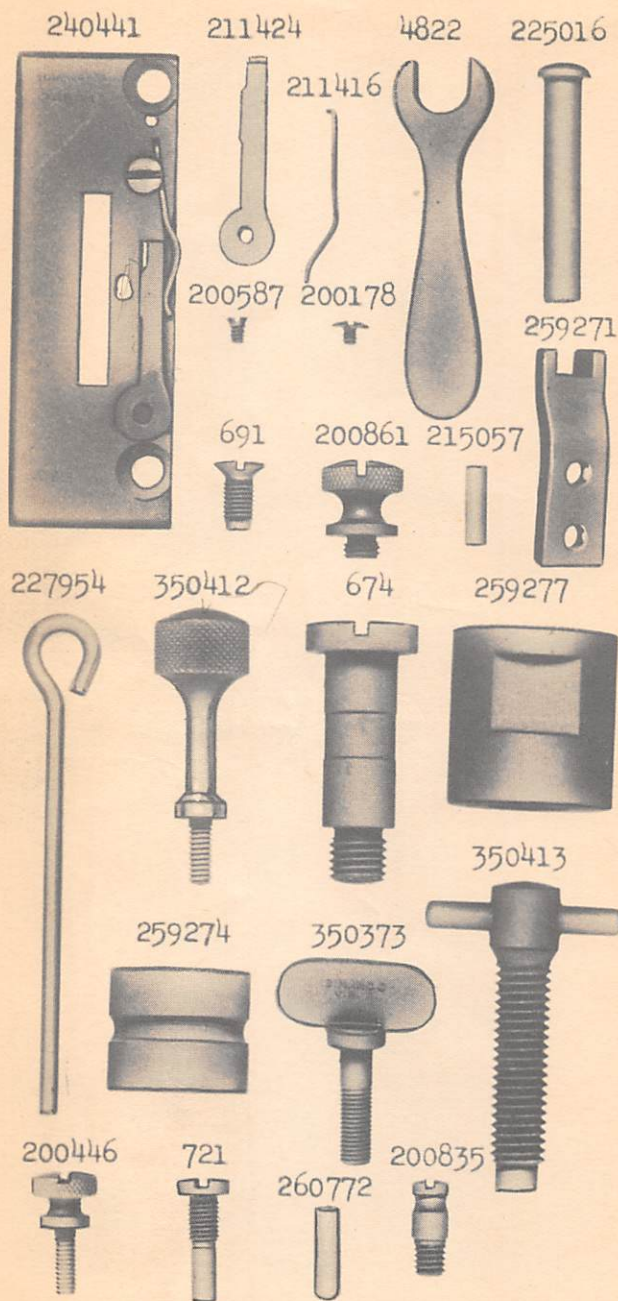


PLATE 16602 - ONE-HALF SIZE

223684 · 202557



240437



223733




259276



259275



241758

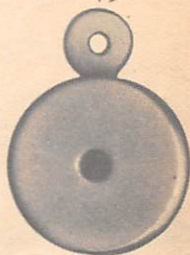


240439



259270




202692

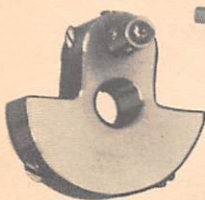

237845



265036

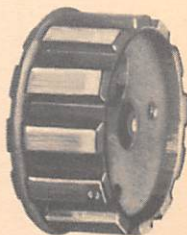

Genuine Singer Needles should be used
in Singer Machines.

These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO." 1

Needles in Containers marked
"For Singer Machines"
are not Singer made needles. 2

