

Form 2601w

1940

Printed in U. S. A.

LIST OF PARTS



MACHINE No. 144 w 102

THE SINGER MANUFACTURING COMPANY

From the library of: Superior Sewing Machine & Supply LLC

Copyright, U. S. A., 1939 and 1940
by The Singer Manufacturing Co.
All Rights Reserved for all Countries

INDEX

	Page
Accessories	15
Bobbin Winder	15
Foot Lifter and Starting Treadle	16
Machine No.144w102	5
Numerical List of Parts	19

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the PART number in the FIRST column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above case), must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished, Nickel Plated and Buffed.
- B. Polished, Nickel Plated and Buffed.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.
- J. Nickel Plated only.
- R. Merlized.
- X. Black Oxide.
- XC. Hardened and Black Oxide.
- Y. Blade Nickel only.

These letters MUST BE USED when they appear in the list and AFTER the number, as in the list.

In this series:


200001 to 201500 and 350001 to 351500 are Screw Numbers.
201501 to 201800 and 351501 to 351800 are Nut Numbers.
201801 to 202000 and 351801 to 352000 are Roller Numbers.
202001 to 350000 are Numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are NOT TO BE USED in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished when repairs are made at the factory.

LIST OF PARTS COMPLETE
FOR

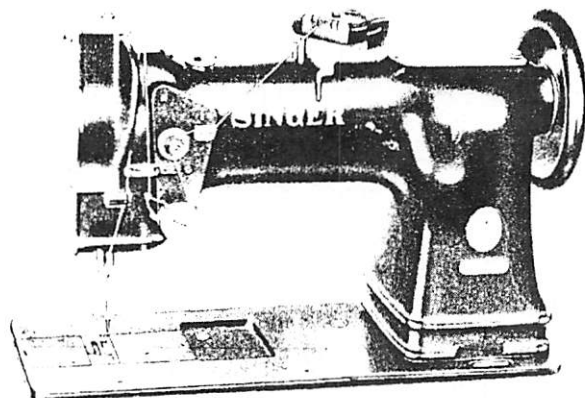

MACHINE No. 144 w 102

Single Needle Lock Stitch Machine with Compound
Feed and High Lift Alternating Pressers.

For Automobile Work, Tents, Awnings, Furniture
Upholstering, Leather Coats, Etc.

Has a high arm with a working space of 10 inches
to the right of the needle.

No.	Plate	Name
*204001	-----	Arm with two 240174
204040	16123	" Base, 1-1/2 in. high
204235	16123	" " Position Pin (2)
224002	16123	" Cap
200273H	16123	" " Screw
202248	16123	" " Washer
204235	16123	" Position Pin (2)
250390E	16123	" Screw (3)
202005	16123	" " Washer (3)
240107	16123	" Shaft with 200357E and 224392
264641	16123	" Bushing (back) with 202244
202244	16123	" " " Oil Packing (wick)
200071E	16123	" " " Screw (3)
207080	16123	" " " (front) with 202244

No.	Plate	Name
202244	16123	Arm Shaft Bushing (front) Oil Packing (wick)
200502B	16123	Arm Shaft Bushing (front) Oil Packing Thumb Screw
200338C	16123	Arm Shaft Bushing (front) Set Screw
264602	16124	" " Connection Belt
224104	16124	" " " " Pulley with 200327C, 200602E and two 202253
200602E	16124	Arm Shaft Connection Belt Pulley Position Screw
200327C	16124	Arm Shaft Connection Belt Pulley Set Screw
202253	16124	Arm Shaft Connection Belt Pulley Spring Flange
224113	16125	Arm Shaft Connection Belt Timing Collar with 200113F
200113F	16125	Arm Shaft Connection Belt Timing Collar Set Screw
224139	16125	Arm Shaft Connection Belt Timing Plate
200164B	16125	" " " " " " " " Screw (2)
224392	16123	Arm Shaft Oil Packing (wick)
200357E	16123	" " " " Stop Screw
237577	16123	Balance Wheel (belt groove 4 in.diam.) with two 200328C
200338C	16123	Balance Wheel Position Screw
*264643	-----	Bed
264644	16125	" Block (for Hook Saddle)
200194E	16125	" " " " " " Screw (2)
54897	16125	" Oil Cup
264603	16133	" Slide (back)
223811	16133	" " " Stop
223812	16133	" " " Spring
264604	16133	" " (front.)
264645	16127	Bobbin
*265086	-----	" Case
264647	16127	" " Latch
*202056	-----	" " Pin
264648	16127	" " Plunger
264649	16127	" " Spring
264650	16127	" " Oiling Felt
265066	16128	" " Opener
265087	16128	" " Lever with 201349C, 201542C and 203101
201349C	16128	Bobbin Case Opener Lever Driving Screw Stud
201542C	16128	Bobbin Case Opener Lever Driving Screw Stud Nut

No.	Plate	Name
203101	16128	Bobbin Case Opener Lever Driving Screw Stud Oil Packing (wick)
265088	16128	Bobbin Case Opener Lever Hinge Stud with 202277
202277	16128	Bobbin Case Opener Lever Hinge Stud Oil Packing (wick)
200403C	16128	Bobbin Case Opener Lever Hinge Stud Set Screw
200387C	16128	Bobbin Case Opener Lever Hinge Stud Set Screw Check Screw
248251	16128	Bobbin Case Opener Lever Link
200118D	16128	" " " Screw
265089	16127	" " Tension Spring
200983F	16127	" " " " Regulating Screw
200597F	16127	" " " " Screw
265090	16127	Bobbin Case complete, Nos. 200597F, 200983F 202056, 264647 to 264650, 265086 and 265089
265318	16133	Face Plate
202135	16133	" " Position Pin
200533B	16133	" " Thumb Screw
264633	16126	Feed Bar
264634	16126	" " Crank with 200363C and 200396C
200396C	16126	" " " Position Screw
200363C	16126	" " " Set Screw
350393C	16126	" " Hinge Screw (driving)
201518E	16126	" " " " Nut
264687	16134	" Dog, 38 elongated needle hole, for needle sizes 25 and 26
265100	16134	Feed Dog, 30 needle hole, for needle size 27, for use with thread larger than No. 12
201491E	16134	Feed Dog Screw (2)
264635	16124	" Driving Connection with 200049D and 202330
201171C	16124	Feed Driving Connection Hinge Screw
201517E	16124	" " " " " Nut
202277	16124	" " " " " Oil Packing (wick)
202330	16124	Feed Driving Connection Oil Packing (wick)
200049D	16124	Feed Driving Connection Pinch Screw
237521	16124	" " Eccentric Regulating Bracket
237043	16124	" " " " "
		237521 with 224108, two each 200256C and 201525E
224108	16124	Feed Driving Eccentric Regulating Bracket Flange with 200383C and 200437C

No.	Plate	Name
200437C	16124	Feed Driving Eccentric Regulating Bracket Flange Position Screw
200383C	16124	Feed Driving Eccentric Regulating Bracket Flange Set Screw
200256C	16124	Feed Driving Eccentric Regulating Bracket Hinge Screw
201525E	16124	Feed Driving Eccentric Regulating Bracket Hinge Screw Nut
202301	16124	Feed Driving Eccentric Regulating Bracket Plunger
237523	16124	Feed Driving Eccentric Regulating Bracket Plunger Spring
200607C	16124	Feed Driving Eccentric Regulating Bracket Plunger Spring Stop Screw
200256C	16124	Feed Driving Eccentric Regulating Bracket Stop Screw
201525E	16124	Feed Driving Eccentric Regulating Bracket Stop Screw Nut
200429C	16124	Feed Driving Eccentric Regulating Screw
200383C	16124	" " " " "
		Check Screw
264655	16126	Feed Driving Rock Shaft
223652	16126	" " " " Crank with
		200019E
200019E	16126	Feed Driving Rock Shaft Crank Pinch Screw
202625	16126	Feed Driving Rock Shaft Stop Collar with two 200383C (2)
200383C	16126	Feed Driving Rock Shaft Stop Collar Set Screw
224154	16125	Feed Lifting Cam with 201220C
264637	16126	" " " Fork with 200173D and
		223655
350197E	16126	Feed Lifting Cam Fork Screw
225837	16126	" " " " " Washer
223655	16126	" " " Oiling Felt
200173D	16126	" " " " " Screw
201220C	16125	" " " Set Screw
264656	16123	" Regulating Spindle with 202443, 202619 and 264657
*264657	-----	Feed Regulating Spindle Head
202443	16123	" " " " " Pin
202619	16123	" " " " " Position Pin
264660	16133	Foot Lifter Lifting Lever with 264518
200215H	16133	" " " " " Hinge Screw
265013	16129	" " " " " Latch
227224	16129	" " " " " Collar with
		201052C

No.	Plate	Name
201052C	16129	Foot Lifter Lifting Lever Latch Collar Set Screw
265014	16129	Foot Lifter Lifting Lever Latch Handle with two 201052C
201052C	16129	Foot Lifter Lifting Lever Latch Handle Set Screw
265015	16129	Foot Lifter Lifting Lever Latch Spring
227116	16129	" " " " " "
		Adjusting Collar
265027	16129	Foot Lifter Lifting Lever Latch Spring Adjusting Collar 227116 with 201052C
201052C	16129	Foot Lifter Lifting Lever Latch Spring Adjusting Collar Set Screw
264518	16133	Foot Lifter Lifting Lever Pin
221547	16133	" " " " Spring
*265091	16127	Hook
265092	16127	" 265091 with 265095 to 265097, two 200583H and four 201253F
265093	16127	Hook and Bobbin Case complete, Nos. 265090 and 265092
224019	16128	Hook Bushing (lower) (bronze)
200364C	16128	" " " Set Screw
265094	16128	" " (upper) (bronze)
200446C	16128	" " " Position Screw
265053	16125	" Driving Gear (spiral) with 200362C and 201254C
201254C	16125	Hook Driving Gear Position Screw
200362C	16125	" " " Set Screw
240167	16128	" " Pinion (spiral) with 200382C and 201220C
201220C	16128	Hook Driving Pinion Position Screw
200382C	16128	" " " Set Screw
224022	16128	" " " Thrust Washer
264666	16125	" " Shaft
224111	16125	" " Bushing (back) with 202244
202244	16125	Hook Driving Shaft Bushing (back) 011 Packing (wick)
237529	16125	Hook Driving Shaft Bushing (front)
200363C	16125	" " " " Set Screw (2)
200383C	16125	" " " " " " Check Screw (2)
265314	16125	Hook Driving Shaft Lock Ratchet with 200354C and 200362C
200354C	16125	Hook Driving Shaft Lock Ratchet Position Screw
200362C	16125	Hook Driving Shaft Lock Ratchet Set Screw

No.	Plate	Name
265044	16125	Hook Driving Shaft Lock Stud
248423	16125	" " " " " Cotter Pin
265045	16125	" " " " " Socket
248425	16125	" " " " " Spring
265046	16125	Hook Driving Shaft Lock Stud complete, Nos. 248423, 248425, 265044 and 265045
265095	16127	Hook Gib Section (long)
265096	16127	" " " (short)
201253F	16127	" " " Screw
265097	16127	" Needle Guard
200583H	16127	" " " Screw
223850	16128	" Saddle with 200009E
265098	16128	" " 223850 with 200364C, 200446C, 224019 and 265094
223681	16125	Hook Saddle Bearing
200363C	16125	" " " Set Screw
200383C	16125	" " " " " Check Screw
200009E	16128	" " Pinch Screw
200006E	16128	" " Screw
225585	16128	" " " Washer
265099	16128	Hook Saddle complete, Nos. 200118D, 200387C 200403C, 224022, 240167, 248251, 265066, 265087, 265088, 265093 and 265098
264607	16129	Lifting Bell Crank
200996C	16129	" " " Cap Screw
264608	16129	" " " Link
350172C	16129	" " " " " Screw Stud
201524E	16129	" " " " " " " Nut
264609	16123	" Eccentric with 200382C and 200398C
264610	16129	" " Connection
240171	16129	" " " Crank with 200029E and 248821
248821	16129	Lifting Eccentric Connection Crank Oil Packing (wick)
200029E	16129	Lifting Eccentric Connection Crank Pinch Screw
200398C	16123	Lifting Eccentric Position Screw
200382C	16123	" " Set Screw
264611	16131	" Presser Foot
200074F	16131	" " " Screw
264615	16129	" Rock Shaft with 201524E and 350172C
240174	16129	Lifting Rock Shaft Bushing
264616	16130	Needle Bar with 200112F, 200583H and 264623
264617	16130	Needle Bar Connecting Link
264667	16130	" " " " Stud with 222598

No.	Plate	Name
222598	16130	Needle Bar Connecting Link Stud Oil Packing (wick)
200374C	16130	Needle Bar Connecting Link Stud Set Screw
200388C	16130	Needle Bar Connecting Link Stud Set Screw
265054	16130	Needle Bar Connecting Stud with 202330 and two 200086C
202330	16130	Needle Bar Connecting Stud Oil Packing (wick)
200086C	16130	Needle Bar Connecting Stud Pinch Screw
264619	16130	" " Crank with 200335C, 200374C, 200388C, 200428C and 264667
203172	16130	Needle Bar Crank Friction Washer
200428C	16130	" " " Position Screw
200383C	16130	" " " " " Check Screw
200335C	16130	" " " Set Screw
200383C	16130	" " " " " Check Screw
264620	16130	" " Rock Frame
210910	16130	" " " " Hinge Stud with 202277
202277	16130	Needle Bar Rock Frame Hinge Stud Oil Packing (wick)
200363C	16130	Needle Bar Rock Frame Hinge Stud Set Screw
200363C	16130	Needle Bar Rock Frame Hinge Stud Set Screw Check Screw
202666	16130	Needle Bar Rock Frame Position Bracket
200098F	16130	" " " " " " " Screw
264673	16129	Needle Bar Rock Frame Rock Shaft with 200387C and 210920
223692	16129	Needle Bar Rock Frame Rock Shaft Crank with 200029E
264638	16124	Needle Bar Rock Frame Rock Shaft Crank Connection with 202277
200833C	16124	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw
201522E	16124	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw Nut
202277	16124	Needle Bar Rock Frame Rock Shaft Crank Connection Oil Packing (wick)
200029E	16129	Needle Bar Rock Frame Rock Shaft Crank Pinch Screw
202668	16129	Needle Bar Rock Frame Slide Block
210920	16129	" " " " " " 202668 with 201141C
201141C	16129	Needle Bar Rock Frame Slide Block Screw Stud

No.	Plate	Name
200387C	16129	Needle Bar Rock Frame Slide Block Screw Stud Set Screw
264623	16130	Needle Bar Thread Guide
200583H	16130	" " " " Screw
200112F	16130	" Set Screw
264690	16131	Presser Bar with 200074F
241535	16131	" " Bushing (lower)
207072	16131	" " " (upper)
200352C	16131	" " " Set Screw (2)
264625	16131	" " Lifting Bracket with 200032E
200975F	16131	" " " " Guide Screw
200032E	16131	" " " " Pinch Screw
264626	16131	" " Position Guide
264627	16131	" " " " Lever with 200086F
200086F	16131	Presser Bar Position Guide Lever Pinch Screw
200352C	16131	Presser Bar Position Guide Set Screw
265060	16133	" " Spring (auxiliary)
240172	16133	" " " (flat)
210949	16131	" " " Bracket with 200086C
200086C	16131	" " " " Pinch Screw
350381C	16133	" " " Regulating Screw
200224H	16133	" " " Support Screw
225004	16133	" " " " " Washer
265032	16125	Safety Clutch Hook Driving Shaft Posi- tion Collar with two 201254C
201254C	16125	Safety Clutch Hook Driving Shaft Posi- tion Collar Set Screw
265056	16125	Safety Clutch Locking Lever
265050	16125	" " " " Connecting Link
350433C	16125	Safety Clutch Locking Lever Hinge Screw
265041	16125	" " " " Spring (for heavy duty)
200962C	16125	Safety Clutch Locking Lever Spring Ad- justing Screw
200053C	16125	Safety Clutch Locking Lever Spring Screw
265036	16125	" " Pulley with 200962C and 202253
202253	16125	Safety Clutch Pulley Spring Flange
265057	16125	" " Throw-in Latch
265052	16125	" " " " Pin
265051	16125	" " " " Spring
265042	16125	Safety Clutch (for heavy duty) complete, Nos. 200053C, 265032, 265036, 265041, 265050 to 265052, 265056, 265057 and 350433C

No.	Plate	Name
264628	16130	Take-up Lever
264629	16130	" " Driving Stud with 202277
202277	16130	" " " Oil Packing (wick)
202400	16130	Take-up Lever Hinge Stud with 202423
202423	16130	" " " Oil Packing (wick)
200363C	16130	Take-up Lever Hinge Stud Set Screw
264674	16132	Tension Bracket with 200061C, 238089 and 350392C
200159F	16132	Tension Bracket Screw (2)
2102	16132	" Disc
32572	16132	" Release Disc
264675	16132	" " Lever
238089	16132	" " " Guide Pin
264676	16131	" " " Rod
200309E	16132	" " " Screw
264695	16132	" " Plunger
223438	16132	" Spring
350392C	16132	" Stud
1560C	16132	" Thumb Nut
264677	16132	Tension Bracket complete, Nos. 1560C, 32572, 200132E, 200309E, 201535E, 223438, 264674, 264675, 264678, 264681 to 264685 264695, 265076, 265077, two 2102 and four 200583H
264678	16132	Thread Controller Disc
265076	16132	" " Spring
265331	16132	" " " (heavy), for use with thread larger than No. 12
265077	16132	Thread Controller Spring Stop
200132E	16132	" " " " Screw
264681	16132	" " " Stud with 201052C
200061C	16132	" " " Set Screw
264682	16132	" " Stud
201052C	16132	" " " Set Screw
264683	16132	" " Thread Guide
201535E	16132	" " " " Nut
202412	16132	" Guide
264685	16132	" " (lower)
264684	16132	" " (upper)
200583H	16132	" " Screw
236955	16129	" Lubricating Cup with 200059C and 201280C
236957	16129	Thread Lubricating Cup Oil Pad (felt)
236959	16129	" " " " (upper)
		Reinforcing Plate
201280C	16129	Thread Lubricating Cup Oil Pad (upper) Tension Screw Stud

No.	Plate	Name
222712	16129	Thread Lubricating Cup Oil Pad (upper) Tension Spring
201572B	16129	Thread Lubricating Cup Oil Pad (upper) Tension Thumb Nut
236961	16129	Thread Lubricating Cup Oil Pad (upper) complete, Nos. 236957 and 236959
200059C	16129	Thread Lubricating Cup Set Screw
236962	16129	" " " Thread Guide
236963	16129	Thread Lubricating Cup complete, Nos. 201572B, 222712, 236955, 236961, 236962 and three 236957
210956	16132	Thread Retainer Bracket with 200397H
265335	16132	" " " Arm
200126F	16132	" " " " Screw (2)
200583H	16132	" " " Screw (2)
210993	16132	" " " Sleeve
223844	16132	" " " Spring
210957	16132	" " " Stud
210958	16132	" " " Collar
200397H	16132	" " " Set Screw
210959	16132	Thread Retainer complete, Nos. 210956 to 210958, 210993 and 223844
264693	16134	Throat Plate
742F	16134	" " " Screw (2)
264630	16130	Vibrating Presser Bar
264631	16129	" " " Connecting Link
202277	16130	" " " Oil Packing (wick)
264614	16130	" " " Foot, 30 needle hole, with 200086F, for 264611
264613	16130	Vibrating Presser Foot, 23 needle hole, with 200086F, for 264611, for use with thread larger than No. 12
200086F	16130	Vibrating Presser Foot Pinch Screw

ACCESSORIES

No.	Plate	Name
264645	16127	Bobbin (5)
*225482	-----	" Case Screw Driver Blade
*225483	-----	" " " " Handle
225497	13067	Bobbin Case Screw Driver complete, Nos. 225482 and 225483
7 x 3	16130	Needles, six, size 24
12361	16133	Bed Hinge Connection (2)
224121	16136	Drip Pan, 20 in. long, with four 1 in. wire nails
41400	13067	Machine Rest Pin (wood)
120342	13067	Oiler (copper plated) with 120343
120343	13067	" Spout (3-1/2 in. long)
*225484	-----	Screw Driver Blade
*225485	-----	" " " " Handle
225498	13067	Screw Driver complete (7-1/4 in. long), Nos. 225484 and 225485
225554	13067	Wrench (steel)

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

259435	16135	Bobbin Holder with 201188C
201188C	16135	" " Set Screw
259316	16135	Frame with 202277 and 225438
225454	16135	" Hinge Pin
202277	16135	" Oil Packing (wick)
225438	16135	" " Well Cap
225455	16135	" Spring
225456	16135	" " Plunger
202473	16135	Pulley with 200380C
200380C	16135	" Set Screw
259436	16135	Spindle
225444	16135	Stop Latch
200056E	16135	" " Screw
225458	16135	" " Thumb Lever
225459	16135	" " " " Hinge Stud
225459	16135	" " " " Joint Stud
202478	16135	" " Trip Lever
200299H	16135	" " " " Hinge Screw
225461	16135	Tension Bracket with 201499B

ACCESSORIES

No.	Plate	Name
200082D	16135	Tension Bracket Screw
228026	16135	" " " Washer
2102	16135	" Disc
202407	16135	" Spring
201499B	16135	" Stud
201572B	16135	" " Thumb Nut
225462	16135	Bobbin Winder Tension Bracket complete, Nos. 201572B, 202407, 225461 and two 2102
259328	16135	Bobbin Winder and Tension Bracket Base
259314	16135	Bobbin Winder complete, Nos. 200056E, 200082D, 200299H, 202473, 202478, 225444, 225454 to 225456, 225458, 225462, 228026 259316, 259328, 259435, 259436, two each 225459 and wood screws 3/4 in., No. 12, R. H. B.

FOOT LIFTER AND STARTING TREADLE

233565	16136	Foot Lifter Lever with two 356C
236787	16136	" " " Chain, 57 in. long, with two 202784
202784	16136	Foot Lifter Lever Chain Hook
356C	16136	" " " Set Screw
265315	16136	" " Treadle with 2718R, 14373 and 50581R
14373	16136	Foot Lifter Treadle Extension
50581R	16136	" " " " Screw
2718R	16136	" " " " " Washer
264531	16136	Starting Treadle with two 356C
202468	16136	" " Pitman Rod (lower)
204125	16136	" " " " (upper) with 202302
202302	16136	Starting Treadle Pitman Rod (upper) Cotter Pin
204126	16136	Starting Treadle Pitman Rod Clamp with two 200530C
200530C	16136	Starting Treadle Pitman Rod Clamp Set Screw
202469	16136	Starting Treadle Pitman complete, Nos. 202468, 204125 and 204126
356C	16136	Starting Treadle Set Screw
233568	16136	" " Shaft
264536	16136	" " Stand with two wood screws 1 in., No. 12

No.	Plate	Name
265317	16136	Foot Lifter and Starting Treadle complete, Nos. 202469, 233565, 233568, 236787 264531, 265315 and two 264536 (Other Foot Lifter parts are listed with parts of machine head)

Genuine Singer Needles should be used
in Singer Machines.
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO." 1

Needles in Containers marked
"For Singer Machines"
are not Singer made needles. 2

NUMERICAL
LIST
OF PARTS

NUMERICAL LIST OF PARTS

No.	Plate	Name
356C	16136	Foot Lifter Lever Set Screw, for 233565
356C	16136	Starting Treadle Set Screw, for 264531
742F	16134	Throat Plate Screw
1560C	16132	Tension Thumb Nut, for 264677
2102	16135	Bobbin Winder Tension Disc, for 225462
2102	16132	Tension Disc, for 264677
2718R	16136	Foot Lifter Treadle Extension Screw Washer, for 265315
12361	16133	Bed Hinge Connection
14373	16136	Foot Lifter Treadle Extension, for 265315
32572	16132	Tension Release Disc, for 264677
41400	13067	Machine Rest Pin (wood)
50581R	16136	Foot Lifter Treadle Extension Screw, for 265315
54897	16125	Bed Oil Cup
120342	13067	Oiler (copper plated) with 120343
120343	13067	" Spout (3-1/2 in. long), for 120342
200006E	16128	Hook Saddle Screw
200009E	16128	" " Pinch Screw, for 223850
200019E	16126	Feed Driving Rock Shaft Crank Pinch Screw, for 223652
200029E	16129	Lifting Eccentric Connection Crank Pinch Screw, for 240171
200029E	16129	Needle Bar Rock Frame Rock Shaft Crank Pinch Screw, for 223692
200032E	16131	Presser Bar Lifting Bracket Pinch Screw, for 264625
200049D	16124	Feed Driving Connection Pinch Screw, for 264635
200053C	16125	Safety Clutch Locking Lever Spring Screw for 265042
200056E	16135	Bobbin Winder Stop Latch Screw, for 259314
200059C	16129	Thread Lubricating Cup Set Screw, for 236955
200061C	16132	Thread Controller Spring Stud Set Screw, for 264674
200071E	16123	Arm Shaft Bushing (back) Screw
200074F	16131	Lifting Presser Foot Screw, for 264690
200082D	16135	Bobbin Winder Tension Bracket Screw, for 259314
200086C	16130	Needle Bar Connecting Stud Pinch Screw, for 265054

NUMERICAL LIST OF PARTS

No.	Plate	Name
200086F	16131	Presser Bar Position Guide Lever Pinch Screw, for 264627
200086C	16131	Presser Bar Spring Bracket Pinch Screw, for 210949
200086F	16130	Vibrating Presser Foot Pinch Screw, for 264613 and 264614
200098F	16130	Needle Bar Rock Frame Position Bracket Screw
200112F	16130	Needle Set Screw, for 264616
200113F	16125	Arm Shaft Connection Belt Timing Collar Set Screw, for 224113
200118D	16128	Bobbin Case Opener Screw, for 265099
200126F	16132	Thread Retainer Bracket Arm Screw
200132E	16132	" Controller Spring Stop Screw, for 264677
200159F	16132	Tension Bracket Screw
200164B	16125	Arm Shaft Connection Belt Timing Plate Screw
200173D	16126	Feed Lifting Cam Oiling Felt Screw, for 264637
200194E	16125	Bed Block (for Hook Saddle) Screw
200215H	16133	Foot Lifter Lifting Lever Hinge Screw
200224H	16133	Presser Bar Spring Support Screw
200256C	16124	Feed Driving Eccentric Regulating Bracket Hinge Screw, for 237043
200256C	16124	Feed Driving Eccentric Regulating Bracket Stop Screw, for 237043
200278H	16123	Arm Cap Screw
200299H	16135	Bobbin Winder Stop Latch Trip Lever Hinge Screw, for 259314
200309E	16132	Tension Release Lever Screw, for 264677
200327C	16124	Arm Shaft Connection Belt Pulley Set Screw, for 224104
200335C	16130	Needle Bar Crank Set Screw, for 264619
200338C	16123	Arm Shaft Bushing (front) Set Screw
200338C	16123	Balance Wheel Position Screw, for 237577
200352C	16131	Presser Bar Bushing Set Screw
200352C	16131	" " Position Guide Set Screw
200354C	16125	Hook Driving Shaft Lock Ratchet Position Screw, for 265314
200357E	16123	Arm Shaft Oil Packing Stop Screw, for 240102
200362C	16125	Hook Driving Gear Set Screw, for 265053
200362C	16125	" " Shaft Lock Ratchet Set Screw, for 265314
200363C	16126	Feed Bar Crank Set Screw, for 264634
200363C	16125	Hook Driving Shaft Bushing Set Screw
200363C	16125	" Saddle Bearing Set Screw

NUMERICAL LIST OF PARTS

21

No.	Plate	Name
200363C	16130	Needle Bar Rock Frame Hinge Stud Set Screw
200363C	16130	Needle Bar Rock Frame Hinge Stud Set Screw Check Screw
200363C	16130	Take-up Lever Hinge Stud Set Screw
200364C	16128	Hook Bushing (lower) Set Screw, for 265098
200374C	16130	Needle Bar Connecting Link Stud Set Screw, for 264619
200380C	16135	Bobbin Winder Pulley Set Screw, for 202473
200382C	16128	Hook Driving Pinion Set Screw, for 240167
200382C	16123	Lifting Eccentric Set Screw, for 264609
200383C	16124	Feed Driving Eccentric Regulating Bracket Flange Set Screw, for 224108
200383C	16124	Feed Driving Eccentric Regulating Screw Check Screw
200383C	16126	Feed Driving Rock Shaft Stop Collar Set Screw, for 202625
200383C	16125	Hook Driving Shaft Bushing Set Screw Check Screw
200383C	16125	Hook Saddle Bearing Set Screw Check Screw
200383C	16130	Needle Bar Crank Position Screw Check Screw
200383C	16130	Needle Bar Crank Set Screw Check Screw
200387C	16128	Bobbin Case Opener Lever Hinge Stud Set Screw Check Screw, for 265099
200387C	16129	Needle Bar Rock Frame Slide Block Screw Stud Set Screw, for 264673
200388C	16130	Needle Bar Connecting Link Stud Set Screw, for 264619
200396C	16126	Feed Bar Crank Position Screw, for 264634
200397H	16132	Thread Retainer Stud Set Screw, for 210956
200398C	16123	Lifting Eccentric Position Screw, for 264609
200403C	16128	Bobbin Case Opener Lever Hinge Stud Set Screw, for 265099
200428C	16130	Needle Bar Crank Position Screw, for 264619
200429C	16124	Feed Driving Eccentric Regulating Screw
200437C	16124	" " " " Bracket Flange Position Screw, for 224108
200446C	16128	Hook Bushing (upper) Position Screw, for 265098
200502B	16123	Arm Shaft Bushing (front) Oil Packing Thumb Screw

NUMERICAL LIST OF PARTS

No.	Plate	Name
200530C	16136	Starting Treadle Pitman Rod Clamp Set Screw, for 204126
200533B	16133	Face Plate Thumb Screw
200583H	16127	Hook Needle Guard Screw, for 265092
200583H	16130	Needle Bar Thread Guide Screw, for 264616
200583H	16132	Thread Guide Screw, for 264677
200583H	16132	" Retainer Screw
200597F	16127	Bobbin Case Tension Spring Screw, for 265090
200602E	16124	Arm Shaft Connection Belt Pulley Posi- tion Screw, for 224104
200607C	16124	Feed Driving Eccentric Regulating Bracket Plunger Spring Stop Screw
200833C	16124	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw
200962C	16125	Safety Clutch Locking Lever Spring Ad- justing Screw, for 265036
200975F	16131	Presser Bar Lifting Bracket Guide Screw
200983F	16127	Bobbin Case Tension Spring Regulating Screw, for 265090
200996C	16129	Lifting Bell Crank Cap Screw
201052C	16129	Foot Lifter Lifting Lever Latch Collar Set Screw, for 227224
201052C	16129	Foot Lifter Lifting Lever Latch Handle Set Screw, for 265014
201052C	16129	Foot Lifter Lifting Lever Latch Spring Adjusting Collar Set Screw, for 265027
201052C	16132	Thread Controller Stud Set Screw, for 264681
201141C	16129	Needle Bar Rock Frame Slide Block Screw Stud, for 210920
201171C	16124	Feed Driving Connection Hinge Screw
201188C	16135	Bobbin Winder Bobbin Holder Set Screw, for 259435
201220C	16125	Feed Lifting Cam Set Screw, for 224154
201220C	16128	Hook Driving Pinion Position Screw, for 240167
201253F	16127	Hook G1b Section Screw, for 265092
201254C	16125	" Driving Gear Position Screw, for 265053
201254C	16125	Safety Clutch Hook Driving Shaft Posi- tion Collar Set Screw, for 265032
201280C	16129	Thread Lubricating Cup Oil Pad (upper) Tension Screw Stud, for 236955
201349C	16128	Bobbin Case Opener Lever Driving Screw Stud, for 265087
201491E	16134	Feed Dog Screw
201499B	16135	Bobbin Winder Tension Stud, for 225461

NUMERICAL LIST OF PARTS

23

No.	Plate	Name.
201517E	16124	Feed Driving Connection Hinge Screw Nut
201518E	16126	" Bar Hinge Screw Nut
201522E	16124	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw Nut
201524E	16129	Lifting Bell Crank Link Screw Stud Nut, for 264615
201525E	16124	Feed Driving Eccentric Regulating Brack- et Hinge Screw Nut, for 237043
201525E	16124	Feed Driving Eccentric Regulating Brack- et Stop Screw Nut, for 237043
201535E	16132	Thread Controller Thread Guide Nut, for 264677
201542C	16128	Bobbin Case Opener Lever Driving Screw Stud Nut, for 265087
201572B	16135	Bobbin Winder Tension Stud Thumb Nut, for 225462
201572B	16129	Thread Lubricating Cup Oil Pad (upper) Tension Thumb Nut, for 236963
202005	16133	Arm Screw Washer
*202056	-----	Bobbin Case Latch Pin, for 265090
202135	16133	Face Plate Position Pin
202244	16123	Arm Shaft Bushing (back) Oil Packing (wick), for 264641
202244	16123	Arm Shaft Bushing (front) Oil Packing (wick), for 207080
202244	16125	Hook Driving Shaft Bushing (back) Oil Packing (wick), for 224111
202248	16123	Arm Cap Screw Washer
202253	16124	" Shaft Connection Belt Pulley Spring Flange, for 224104
202253	16125	Safety Clutch Pulley Spring Flange, for 265036
202277	16128	Bobbin Case Opener Lever Hinge Stud Oil Packing (wick), for 265088
202277	16135	Bobbin Winder Frame Oil Packing (wick), for 259316
202277	16124	Feed Driving Connection Hinge Screw Oil Packing (wick)
202277	16130	Needle Bar Rock Frame Hinge Stud Oil Packing (wick), for 210910
202277	16124	Needle Bar Rock Frame Rock Shaft Crank Connection Oil Packing (wick), for 264638
202277	16130	Take-up Lever Driving Stud Oil Packing (wick), for 264629
202277	16130	Vibrating Presser Bar Oil Packing (wick)
202301	16124	Feed Driving Eccentric Regulating Brack- et Plunger

NUMERICAL LIST OF PARTS

No.	Plate	Name
202302	16136	Starting Treadle Pitman Rod (upper) Cotter Pin, for 204125
202330	16124	Feed Driving Connection Oil Packing (wick), for 264635
202330	16130	Needle Bar Connecting Stud Oil Packing (wick), for 265054
202400	16130	Take-up Lever Hinge Stud with 202423
202407	16135	Bobbin Winder Tension Spring, for 225462
202412	16132	Thread Guide
202423	16130	Take-up Lever Hinge Stud Oil Packing (wick), for 202400
202443	16123	Feed Regulating Spindle Head Pin, for 264656
202468	16136	Starting Treadle Pitman Rod (lower), for 202469
202469	16136	Starting Treadle Pitman complete, Nos. 202468, 204125 and 204126, for 265317
202473	16135	Bobbin Winder Pulley with 200380C, for 259314
202478	16135	Bobbin Winder Stop Latch Trip Lever, for 259314
202619	16123	Feed Regulating Spindle Head Position Pin, for 264656
202625	16126	Feed Driving Rock Shaft Stop Collar with two 200383C
202666	16130	Needle Bar Rock Frame Position Bracket
202668	16129	" " " " Slide Block, for 210920
202784	16136	Foot Lifter Lever Chain Hook, for 236787
203101	16128	Bobbin Case Opener Lever Driving Screw Stud Oil Packing (wick), for 265087
203172	16130	Needle Bar Crank Friction Washer
204125	16136	Starting Treadle Pitman Rod (upper) with 202302, for 202469
204126	16136	Starting Treadle Pitman Rod Clamp with two 200530C, for 202469
204235	16133	Arm Base Position Pin
204235	16133	" Position Pin
207072	16131	Presser Bar Bushing (upper)
207080	16123	Arm Shaft Bushing (front) with 202244
210910	16130	Needle Bar Rock Frame Hinge Stud with 202277
210920	16129	Needle Bar Rock Frame Slide Block 202668 with 201141C, for 264673
210949	16131	Presser Bar Spring Bracket with 200086C Nos. 210956 to 210958, for 210959
210956	16132	Thread Retainer Bracket with 200397H
210957	16132	" " Stud
210958	16132	" " " Collar

NUMERICAL LIST OF PARTS

25

No.	Plate	Name
210959	16132	Thread Retainer complete, Nos. 210956 to 210958, 210993 and 223844
210993	16132	Thread Retainer Sleeve, for 210959
221547	16133	Foot Lifter Lifting Lever Spring
222598	16130	Needle Bar Connecting Link Stud Oil Packing (wick), for 264667
222712	16129	Thread Lubricating Cup Oil Pad (upper) Tension Spring, for 236963
223438	16132	Tension Spring, for 264677
223652	16126	Feed Driving Rock Shaft Crank with 200019E
223655	16126	Feed Lifting Cam Oiling Felt, for 264637
223681	16125	Hook Saddle Bearing
223692	16129	Needle Bar Rock Frame Rock Shaft Crank with 200029E
223811	16133	Bed Slide (back) Stop
223812	16133	" " " " Spring
223844	16132	Thread Retainer Spring, for 210959
223850	16128	Hook Saddle with 200009E, for 265098
224002	16123	Arm Cap
224019	16128	Hook Bushing (lower) (bronze), for 265098
224022	16128	" Driving Pinion Thrust Washer, for 265099
224104	16124	Arm Shaft Connection Belt Pulley with 200327C, 200602E and two 202253
224108	16124	Feed Driving Eccentric Regulating Bracket Flange with 200383C and 200437C, for 237043
224111	16125	Hook Driving Shaft Bushing (back) with 202244
224113	16125	Arm Shaft Connection Belt Timing Collar with 200113F
224121	16136	Drip Pan, 20 in. long, with four 1 in. wire nails
224139	16125	Arm Shaft Connection Belt Timing Plate
224154	16125	Feed Lifting Cam with 201220C
224392	16123	Arm Shaft Oil Packing (wick), for 240102
225004	16133	Presser Bar Spring Support Screw Washer
225438	16135	Bobbin Winder Frame Oil Well Cap, for 259316
225444	16135	Bobbin Winder Stop Latch, for 259314 Nos. 225454 to 225456, for 259314
225454	16135	Bobbin Winder Frame Hinge Pin
225455	16135	" " " Spring
225456	16135	" " " Plunger
225458	16135	" " Stop Latch Thumb Lever, for 259314
225459	16135	Bobbin Winder Stop Latch Thumb Lever Hinge Stud, for 259314

NUMERICAL LIST OF PARTS

No.	Plate	Name
225459	16135	Bobbin Winder Stop Latch Thumb Lever Joint Stud, for 259314
225461	16135	Bobbin Winder Tension Bracket with 201499B, for 225462
225462	16135	Bobbin Winder Tension Bracket complete, Nos. 201572B, 202407, 225461 and two 2102, for 259314
*225482	-----	Bobbin Case Screw Driver Blade, for 225497
*225483	-----	Bobbin Case Screw Driver Handle, for 225497
*225484	-----	Screw Driver Blade, for 225498
*225485	-----	" " Handle, for 225498
225497	13067	Bobbin Case Screw Driver complete, Nos. 225482 and 225483
225498	13067	Screw Driver complete (7-1/4 in. long), Nos. 225484 and 225485
225554	13067	Wrench (steel)
225585	16128	Hook Saddle Screw Washer
225837	16126	Feed Lifting Cam Fork Screw Washer
227116	16129	Foot Lifter Lifting Lever Latch Spring Adjusting Collar, for 265027
227224	16129	Foot Lifter Lifting Lever Latch Collar with 201052C
228026	16135	Bobbin Winder Tension Bracket Screw Washer, for 259314
233565	16136	Foot Lifter Lever with two 356C, for 265317
233568	16136	Starting Treadle Shaft, for 265317
236787	16136	Foot Lifter Lever Chain, 57 in. long, with two 202784, for 265317
236955	16129	Thread Lubricating Cup with 200059C and 201280C, for 236963
236957	16129	Thread Lubricating Cup Oil Pad (felt), for 236961 and 236963
236959	16129	Thread Lubricating Cup Oil Pad (upper) Reinforcing Plate, for 236961
236961	16129	Thread Lubricating Cup Oil Pad (upper) complete, Nos. 236957 and 236959, for 236963
236962	16129	Thread Lubricating Cup Thread Guide, for 236963
236963	16129	Thread Lubricating Cup complete, Nos. 201572B, 222712, 236955, 236961, 236962 and three 236957
237043	16124	Feed Driving Eccentric Regulating Brack- et 237521 with 224108, two each 200256C and 201525E

NUMERICAL LIST OF PARTS

27

No.	Plate	Name
237521	16124	Feed Driving Eccentric Regulating Bracket, for 237043
237523	16124	Feed Driving Eccentric Regulating Bracket Plunger Spring
237529	16125	Hook Driving Shaft Bushing (front)
237577	16123	Balance Wheel (belt groove 4 in. diam.) with two 200338C
238089	16132	Tension Release Lever Guide Pin, for 264674
240102	16123	Arm Shaft with 200357E and 224392
240167	16128	Hook Driving Pinion (spiral) with 200332C and 201220C, for 265099
240171	16129	Lifting Eccentric Connection Crank with 200029E and 248821
240172	16133	Presser Bar Spring (flat)
240174	16129	Lifting Rock Shaft Bushing, for 264601
241535	16131	Presser Bar Bushing (lower)
248251	16128	Bobbin Case Opener Lever Link, for 265099
248423	16125	Hook Driving Shaft Lock Stud Cotter Pin, for 265046
248425	16125	Hook Driving Shaft Lock Stud Spring, for 265046
248821	16129	Lifting Eccentric Connection Crank Oil Packing (wick), for 240171
259314	16135	Bobbin Winder complete, Nos. 200056E, 200082D, 200299H, 202473, 202478, 225444, 225454 to 225456, 225458, 225462, 228026 259316, 259328, 259435, 259436, two each 225459 and wood screws 3/4 in., No. 12, R. H. B.
259316	16135	Bobbin Winder Frame with 202277 and 225438, for 259314
259328	16135	Bobbin Winder and Tension Bracket Base, for 259314
259435	16135	Bobbin Winder Bobbin Holder with 201188C for 259314
259436	16135	Bobbin Winder Spindle, for 259314
264518	16133	Foot Lifter Lifting Lever Pin, for 264660
264531	16136	Starting Treadle with two 356C, for 265317
264536	16136	Starting Treadle Stand with two wood screws 1 in., No. 12, for 265317
*264601	-----	Arm with two 240174
264602	16124	" Shaft Connection Belt
264603	16133	Bed Slide (back)
264604	16133	" " (front)
264607	16129	Lifting Bell Crank
264608	16129	" " " Link

NUMERICAL LIST OF PARTS

No.	Plate	Name
264609	16123	Lifting Eccentric with 200382C and 200398C
264610	16129	Lifting Eccentric Connection
264611	16131	" Presser Foot
264613	16130	Vibrating Presser Foot, 23 needle hole, with 200086F, for 264611, for use with thread larger than No. 12
264614	16130	Vibrating Presser Foot, 30 needle hole, with 200086F, for 264611
264615	16129	Lifting Rock Shaft with 201524E and 350172C
264616	16130	Needle Bar with 200112F, 200583H and 264623
264617	16130	Needle Bar Connecting Link
264619	16130	" " Crank with 200335C, 200374C, 200388C, 200428C and 264667
264620	16130	Needle Bar Rock Frame
264623	16130	" " Thread Guide, for 264616
264625	16131	Presser Bar Lifting Bracket with 200032E
264626	16131	" " Position Guide
264627	16131	" " " Lever with 200086F
264628	16130	Take-up Lever
264629	16130	" " Driving Stud with 202277
264630	16130	Vibrating Presser Bar
264631	16129	" " " Connecting Link
264633	16126	Feed Bar
264634	16126	" " Crank with 200363C and 200396C
264635	16124	" Driving Connection with 200049D and 202330
264637	16126	Feed Lifting Cam Fork with 200173D and 223655
264638	16124	Needle Bar Rock Frame Rock Shaft Crank Connection with 202277
264640	16133	Arm Base, 1-1/2 in. high
264641	16123	" Shaft Bushing (back) with 202244
*264643	-----	Bed
264644	16125	" Block (for Hook Saddle)
264645	16127	Bobbin
Nos. 264647 to 264650, for 265090		
264647	16127	Bobbin Case Latch
264648	16127	" " " Plunger
264649	16127	" " " Spring
264650	16127	" " Oiling Felt
264655	16126	Feed Driving Rock Shaft
264656	16123	" Regulating Spindle with 202443, 202619 and 264657
*264657	-----	Feed Regulating Spindle Head, for 264656

NUMERICAL LIST OF PARTS

29

No.	Plate	Name
264660	16133	Foot Lifter Lifting Lever with 264518
264666	16125	Hook Driving Shaft
264667	16130	Needle Bar Connecting Link Stud with 222598, for 264619
264673	16129	Needle Bar Rock Frame Rock Shaft with 200387C and 210920
264674	16132	Tension Bracket with 200061C, 238089 and 350392C, for 264677
264675	16132	Tension Release Lever, for 264677
264676	16131	" " " Rod
264677	16132	Tension Bracket complete, Nos. 1560C, 32572 200132E, 200309E, 201535E, 223438, 264674 264675, 264678, 264681 to 264685, 264695 265076, 265077, two 2102 and four 200583H
264678	16132	Thread Controller Disc, for 264677 Nos. 264681 to 264685, for 264677
264681	16132	Thread Controller Spring Stud with 201052C
264682	16132	Thread Controller Stud
264683	16132	" " Thread Guide
264684	16132	" Guide (upper)
264685	16132	" " (lower)
264687	16134	Feed Dog, 38 elongated needle hole, for needle sizes 25 and 26
264690	16131	Presser Bar with 200074F
264693	16134	Throat Plate
264695	16132	Tension Release Plunger, for 264677
265013	16129	Foot Lifter Lifting Lever Latch
265014	16129	" " " " " Handle with two 201052C
265015	16129	Foot Lifter Lifting Lever Latch Spring
265027	16129	" " " " " " Ad- justing Collar 227116 with 201052C
265032	16125	Safety Clutch Hook Driving Shaft Posi- tion Collar with two 201254C, for 265042
265036	16125	Safety Clutch Pulley with 200962C and 202253, for 265042
265041	16125	Safety Clutch Locking Lever Spring (for heavy duty), for 265042
265042	16125	Safety Clutch (for heavy duty) complete, Nos. 200053C, 265032, 265036, 265041, 265050 to 265052, 265056, 265057 and 350433C
265044	16125	Hook Driving Shaft Lock Stud, for 265046
265045	16125	" " " " " Socket, for 265046

NUMERICAL LIST OF PARTS

No.	Plate	Name
265046	16125	Hook Driving Shaft Lock Stud complete, Nos.248423,248425,265044 and 265045 Nos.265050 to 265052,for 265042
265050	16125	Safety Clutch Locking Lever Connecting Link
265051	16125	Safety Clutch Throw-in Latch Spring
265052	16125	" " " " Pin
265053	16125	Hook Driving Gear (spiral) with 200362C and 201254C
265054	16130	Needle Bar Connecting Stud with 202330 and two 200086C
265056	16125	Safety Clutch Locking Lever,for 265042
265057	16125	" " Throw-in Latch,for 265042
265060	16133	Presser Bar Spring (auxiliary)
265066	16128	Bobbin Case Opener,for 265099
265076	16132	Thread Controller Spring,for 264677
265077	16132	" " " Stop,for 264677
*265086	-----	Bobbin Case,for 265090
265087	16128	" " Opener Lever with 201349C, 201542C and 203101,for 265099
265088	16128	Bobbin Case Opener Lever Hinge Stud with 202277,for 265099
265089	16127	Bobbin Case Tension Spring,for 265090
265090	16127	Bobbin Case complete,Nos.200597F,200983F 202056,264647 to 264650,265086 and 265089,for 265093
*265091	16127	Hook,for 265092
265092	16127	" 265091 with 265095 to 265097,two 200583H and four 201253F,for 265093
265093	16127	Hook and Bobbin Case complete,Nos.265090 and 265092,for 265099
265094	16128	Hook Bushing (upper) (bronze),for 265098 Nos.265095 to 265097,for 265092
265095	16127	Hook Gib Section (long)
265096	16127	" " " (short)
265097	16127	" Needle Guard
265098	16128	" Saddle 223850 with 200364C,200446C, 224019 and 265094,for 265099
265099	16128	Hook Saddle complete,Nos.200118D,200387C 200403C,224022,240167,248251,265066, 265087,265088,265093 and 265098
265100	16134	Feed Dog,30 needle hole,for needle size 27,for use with thread larger than No.12
265314	16125	Hook Driving Shaft Lock Ratchet with 200354C and 200362C
265315	16136	Foot Lifter Treadle with 2718R,14373 and 50581R,for 265317

NUMERICAL LIST OF PARTS

31

No.	Plate	Name
265317	16136	Foot Lifter and Starting Treadle complete, Nos. 202469, 233565, 233568, 236787, 264531, 265315 and two 264536
265318	16133	Face Plate
265331	16132	Thread Controller Spring (heavy), for use with thread larger than No. 12
265335	16132	Thread Retainer Bracket Arm
350172C	16129	Lifting Bell Crank Link Screw Stud, for 264615
350197E	16126	Feed Lifting Cam Fork Screw
350381C	16133	Presser Bar Spring Regulating Screw
350390E	16133	Arm Screw
350392C	16132	Tension Stud, for 264674
350393C	16126	Feed Bar Hinge Screw (driving)
350433C	16125	Safety Clutch Locking Lever Hinge Screw, for 265042

Genuine Singer Needles should be used
in Singer Machines.
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO." 1


Needles in Containers marked
"For Singer Machines"
are not Singer made needles. 2


**Genuine Singer Needles should be used
in Singer Machines.
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO." 1**

**Needles in Containers marked
"For Singer Machines"
are not Singer made needles. 2**

ILLUSTRATIONS
OF
PARTS

13067 - 1/2

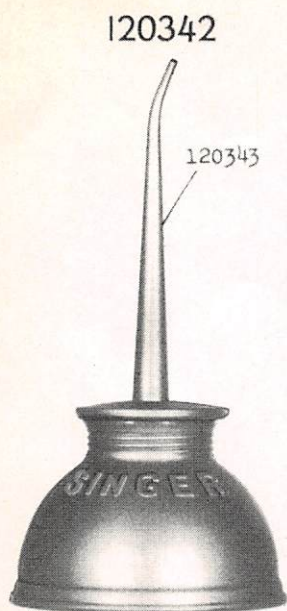


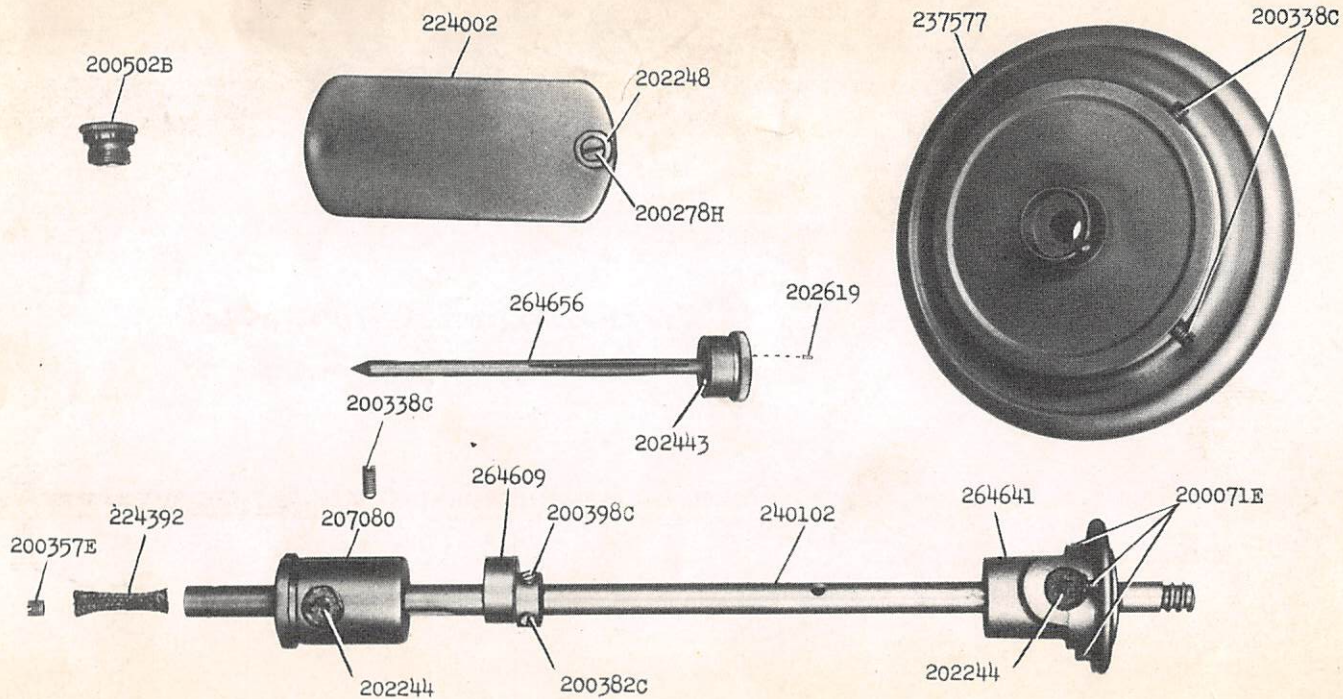


16123 - 1/3


From the library of: Superior Sewing Machine & Supply LLC

16124 - 3/8

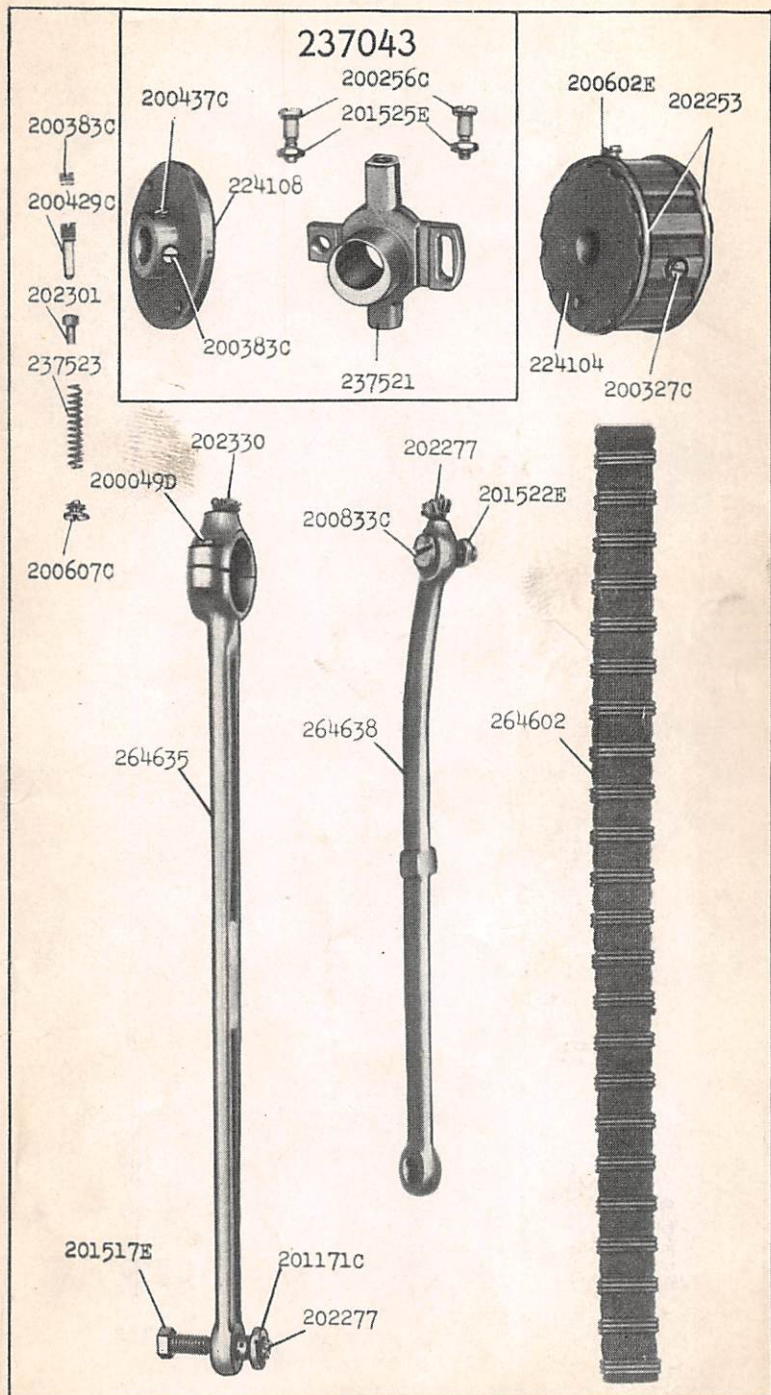

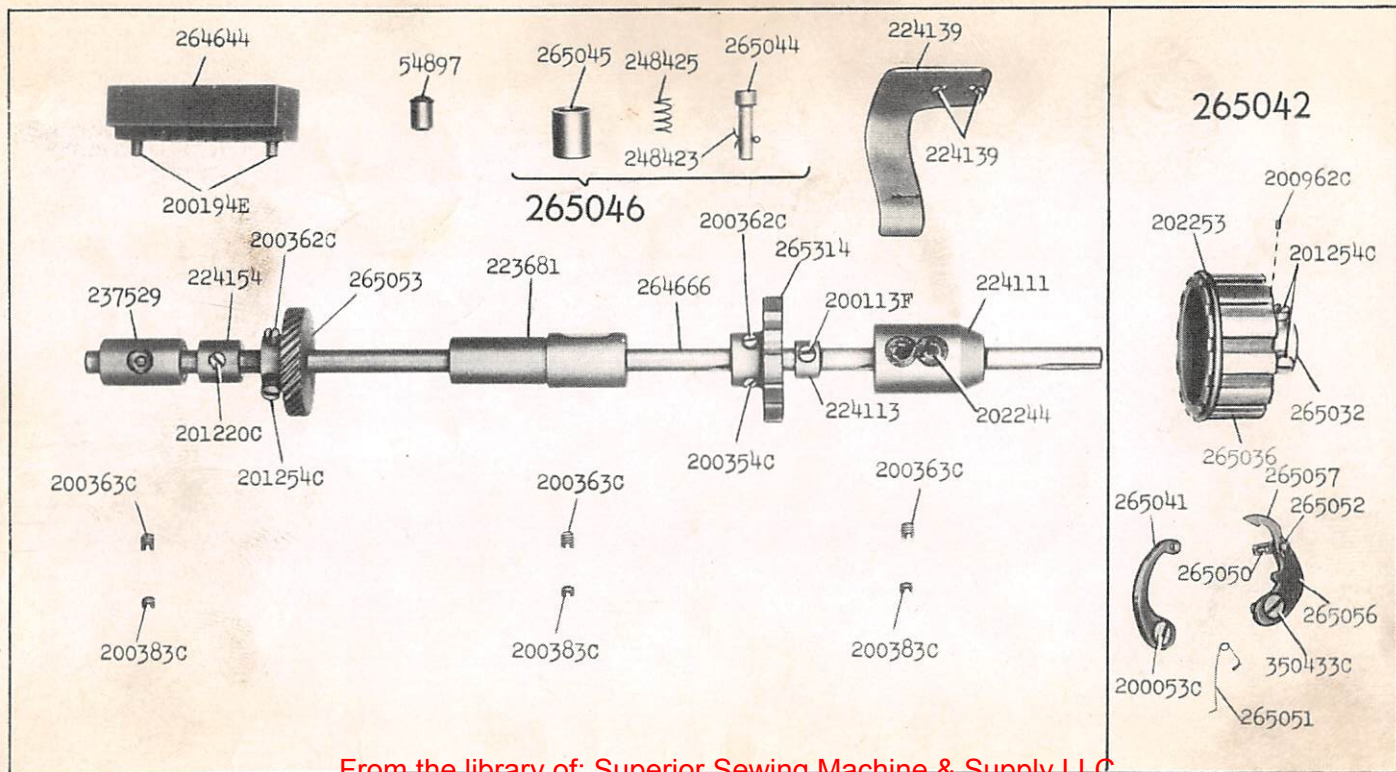

16125 - 1/3

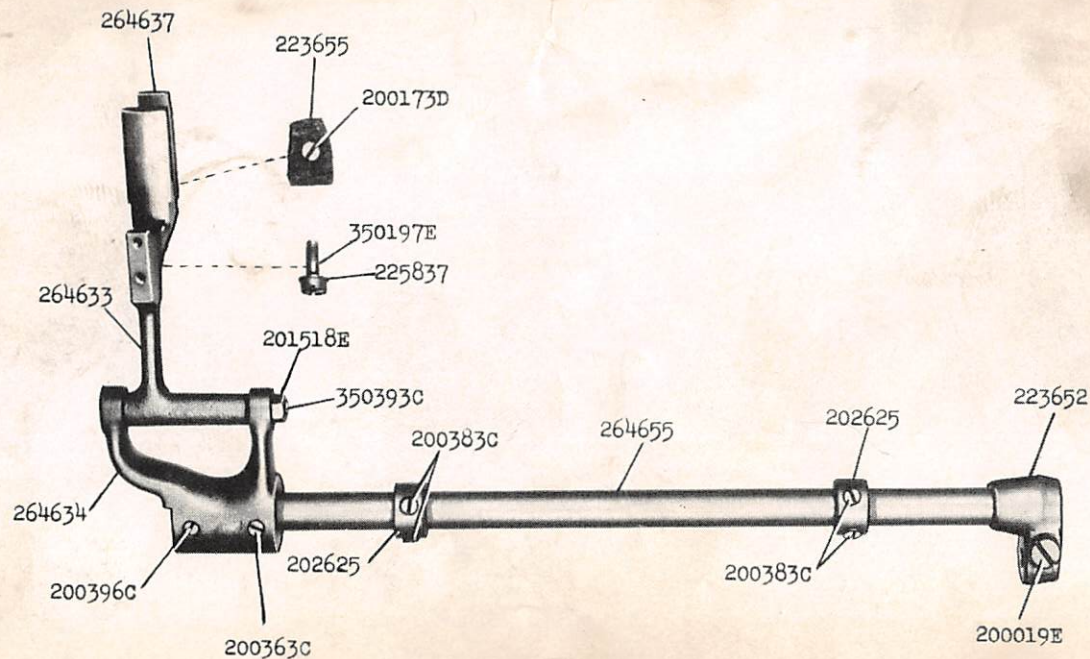





From the library of: Superior Sewing Machine & Supply LLC

265090


17.40

265093


265092

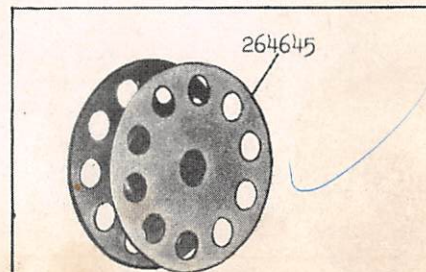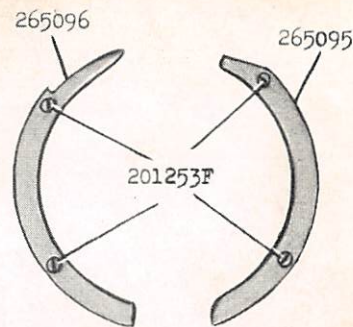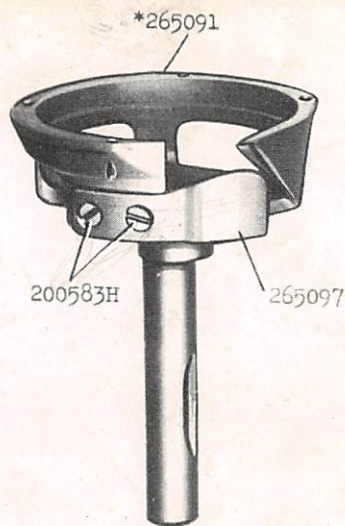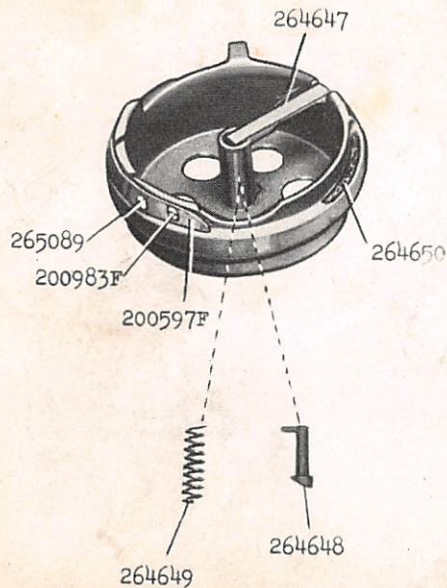

16127 - 3/4

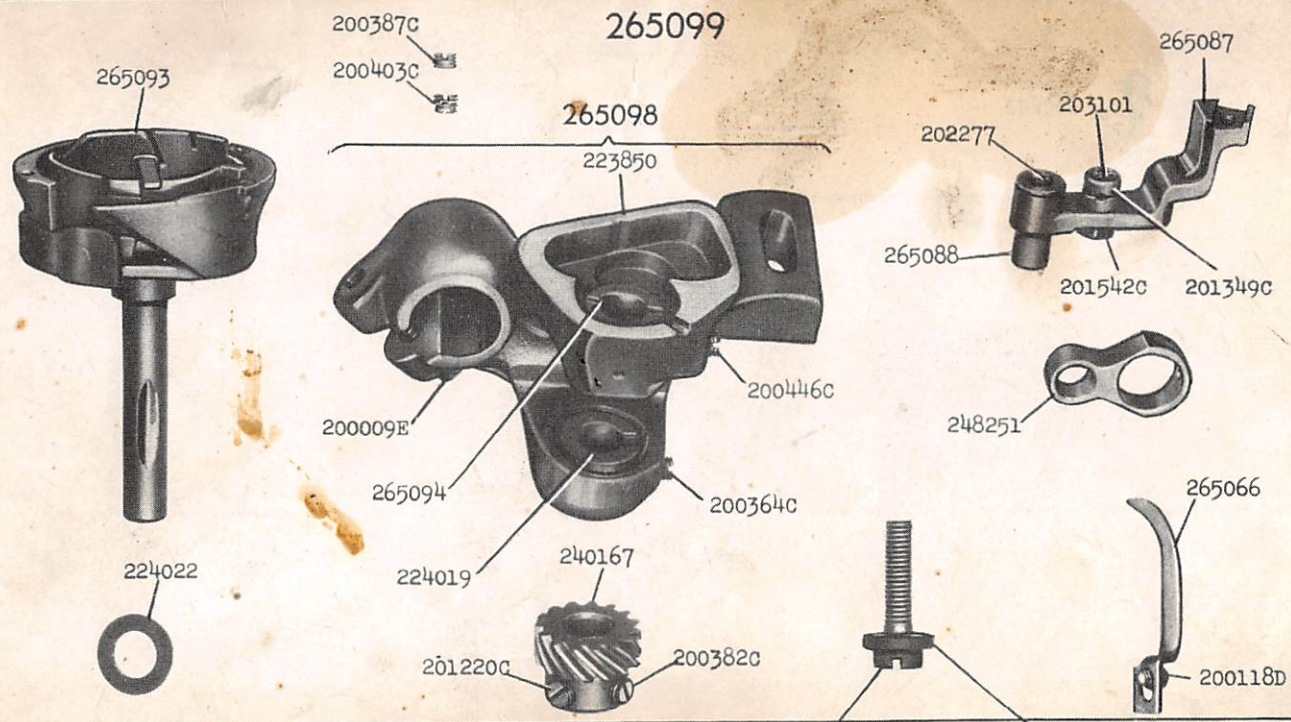


16128 - 5/8

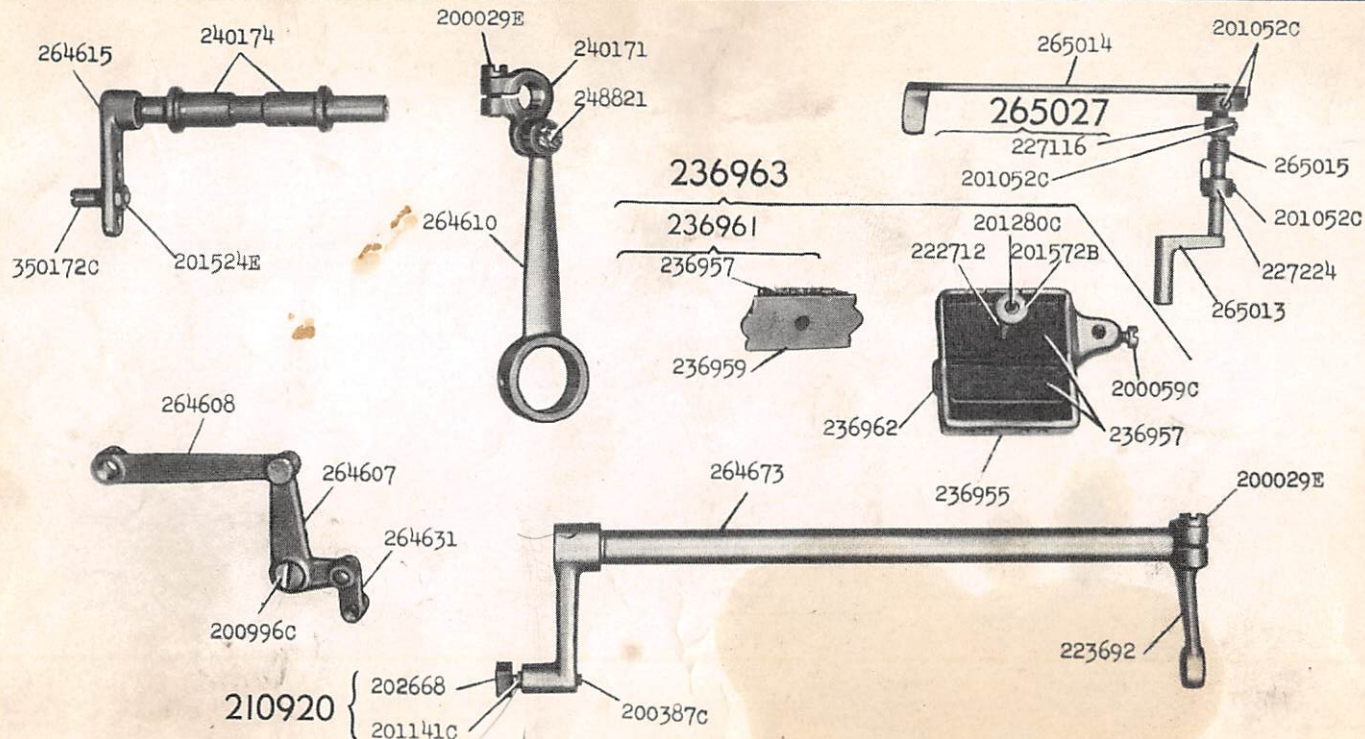


16129 - 1/3




16130 - 1/2

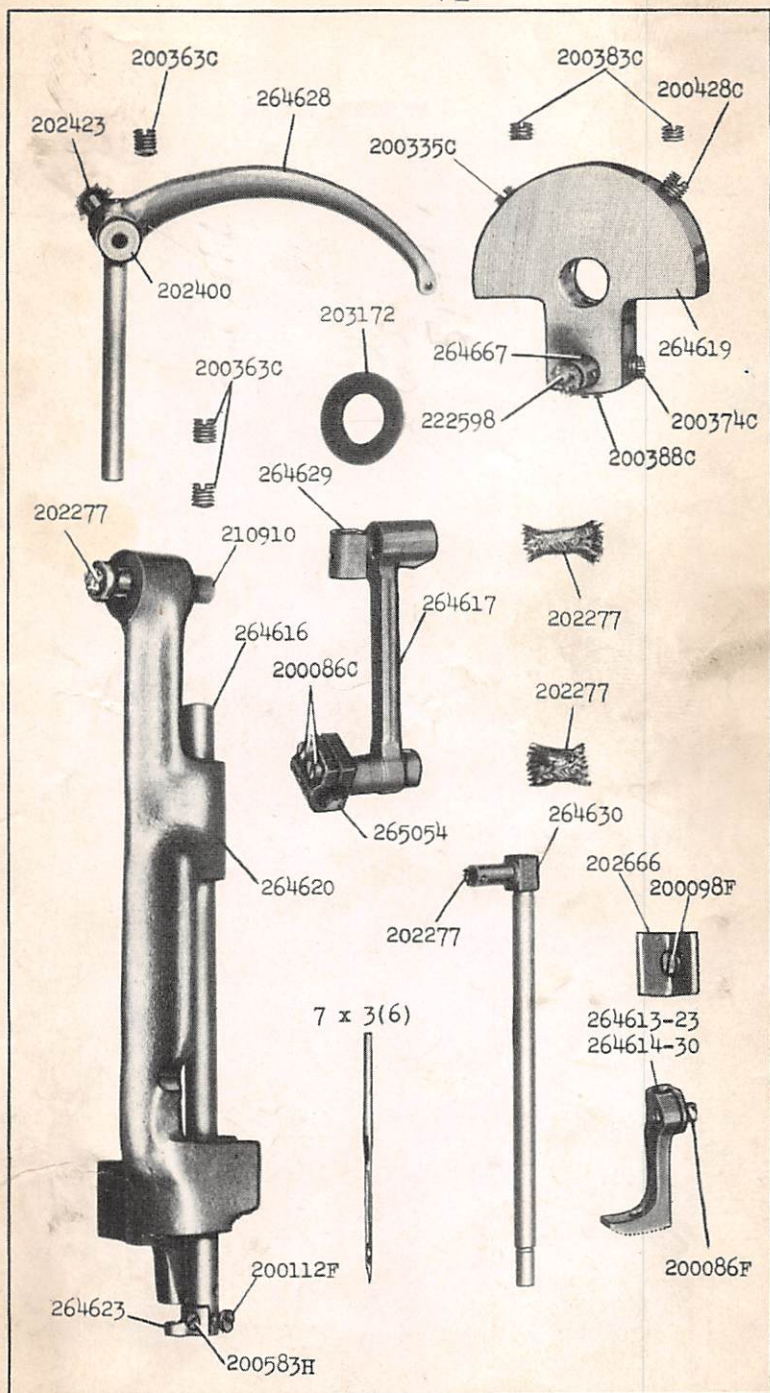


16131 - 5/8

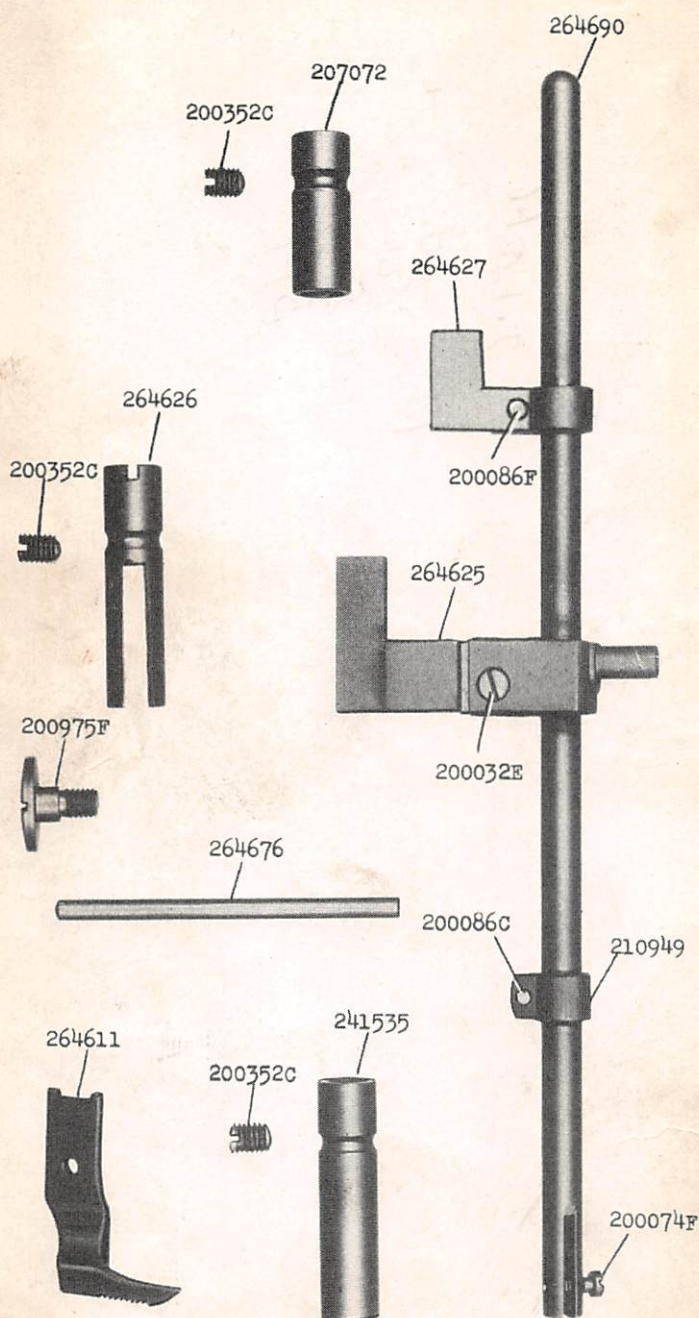


264677

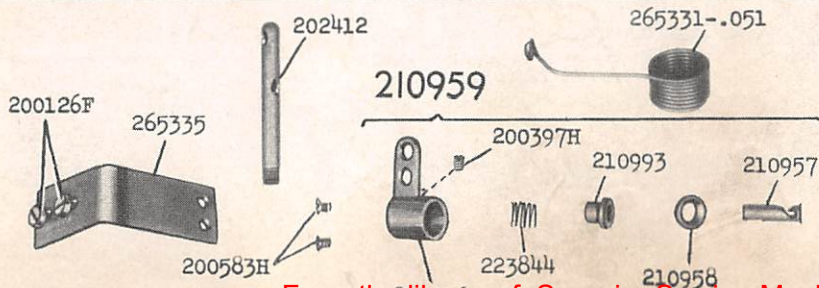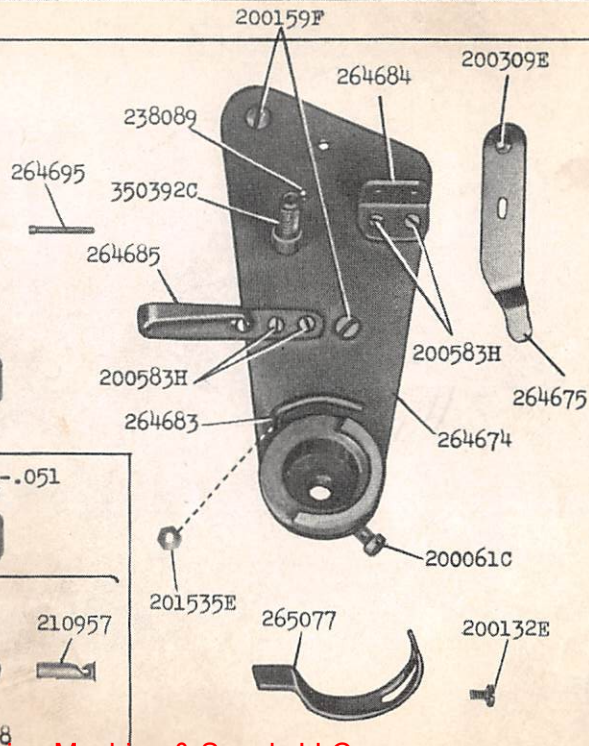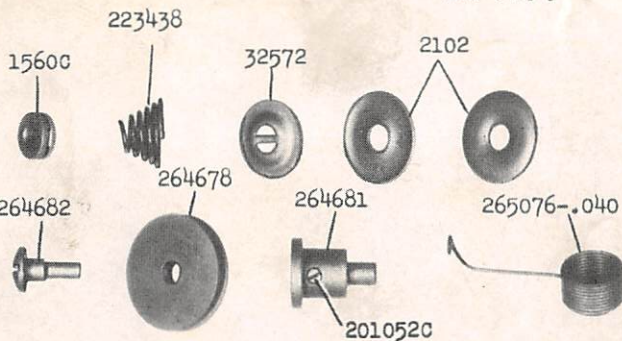

From the library of: Superior Sewing Machine & Supply LLC

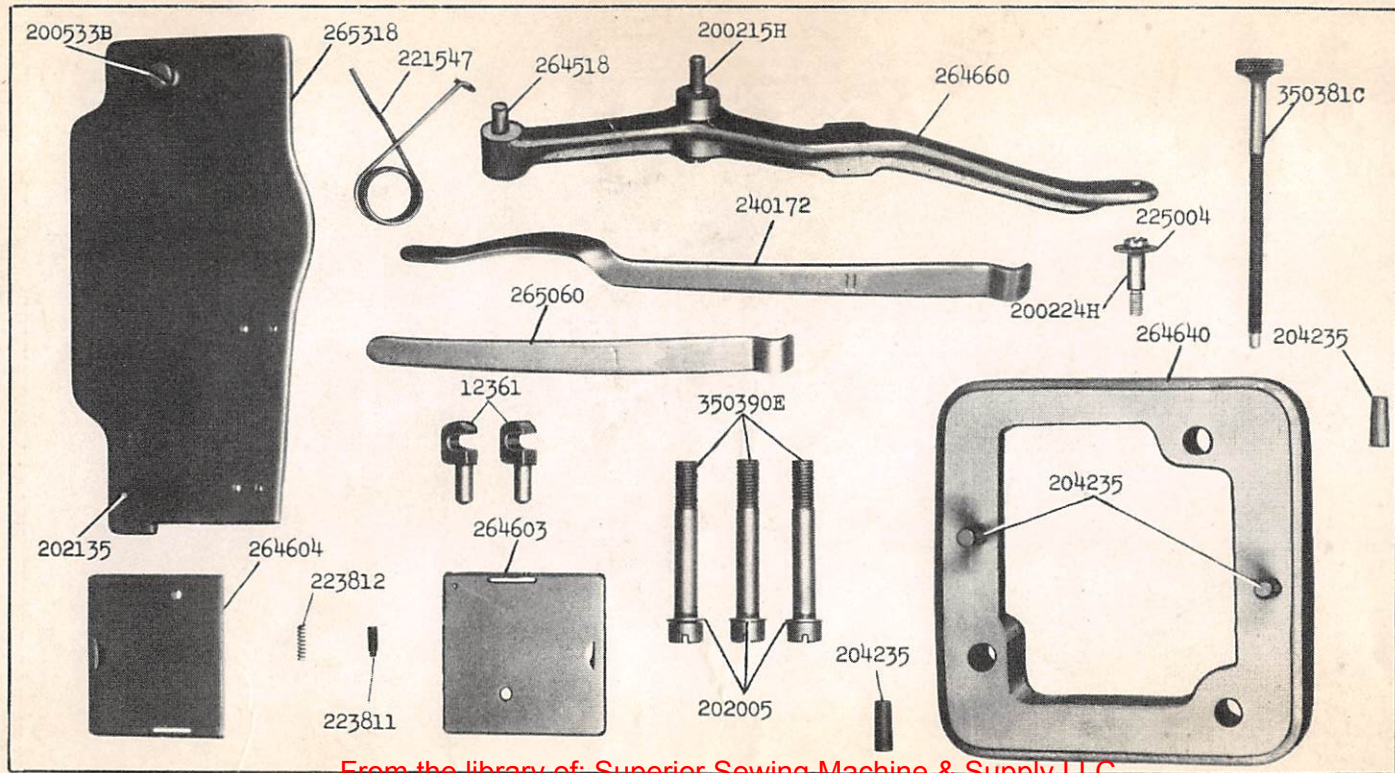

16133 - 1/3

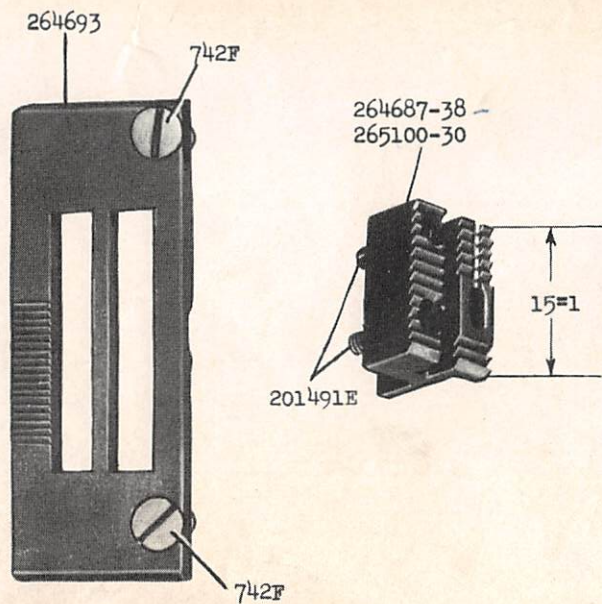

16134

16135 - 3/8

225462

259314

201572B

2102

201499B

259328

202407

225461

228026

200082D

225456

225455

225454

259316

259435

259436

201188C

200299H

202473

225458

202277

202478

225444

225438


200380C

225459

200056E

225459

16136 - 1/6

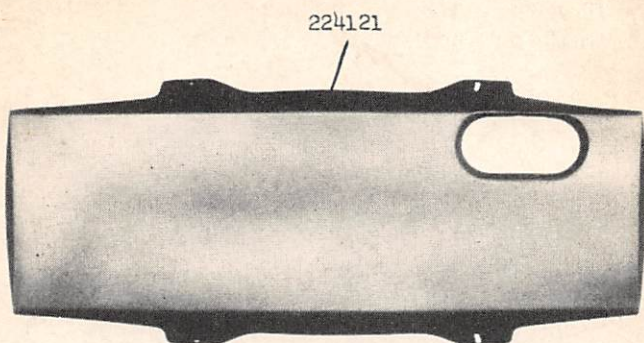

265317

