


# **SINGER**

## **151K1**

From the library of: Superior Sewing Machine & Supply LLC




## 151K2 PARTS WHICH DIFFER FROM 151K1

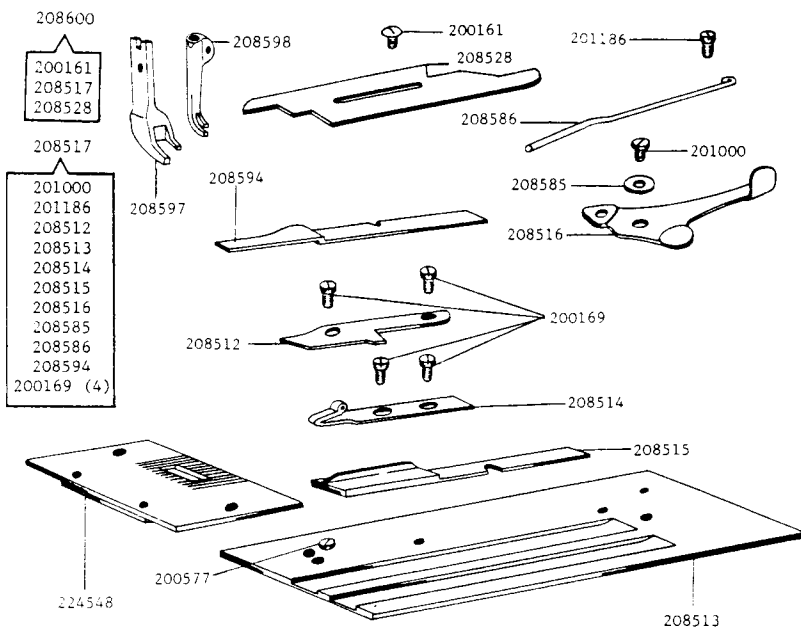


## 151K3 PARTS WHICH DIFFER FROM 151K1

BED PLATE (BACK) 208570 IS SENT WITH THIS MACHINE AS STANDARD UNLESS A BINDER IS SPECIFIED ON ORDER.

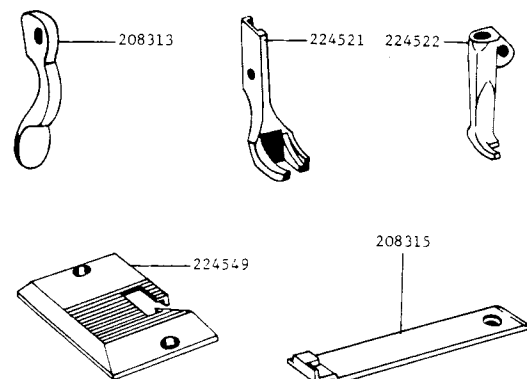


## 151K6 PARTS WHICH DIFFER FROM 151K1


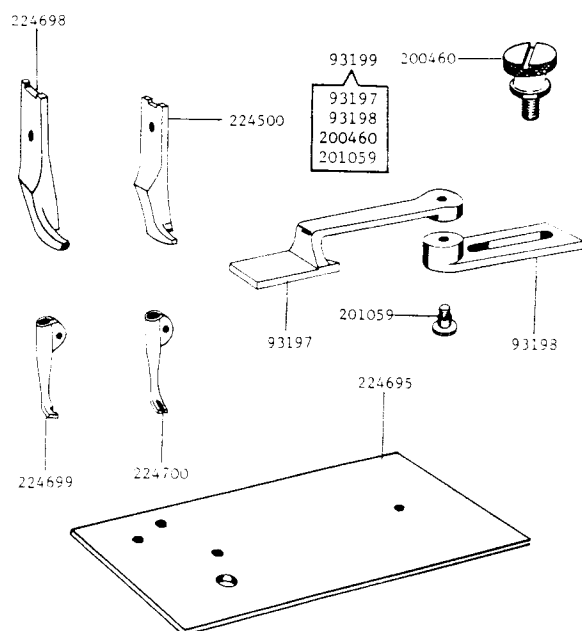


## ACCESSORIES

41400 - for 151K1, 151K3 and 151K6  
41564 - for 151K2

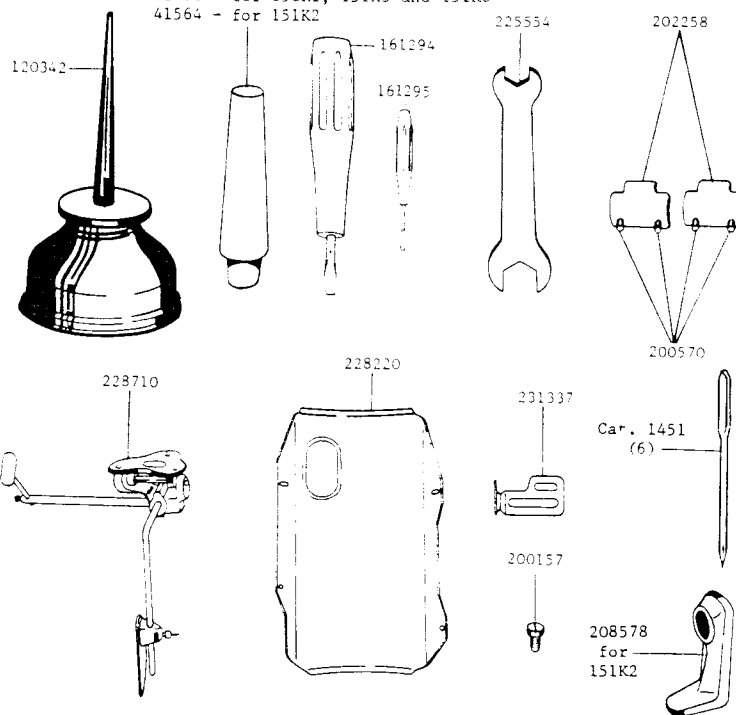

## OPTIONAL PRESSER FEET

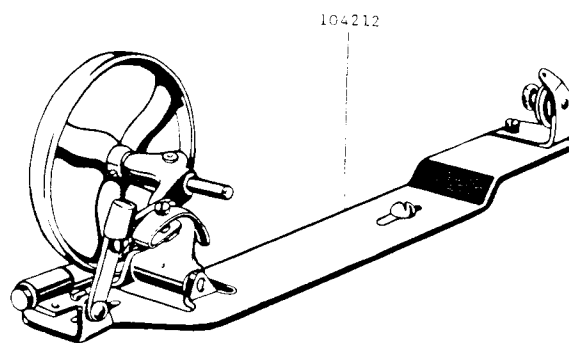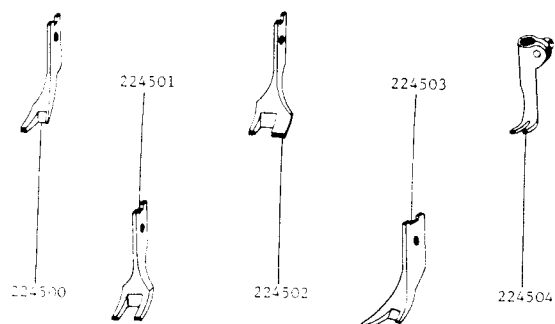

NOTE: THREAD UNWINDER NO. 225258 CAN BE SUPPLIED IN PLACE OF SPOOL HOLDER 101010 AT EXTRA CHARGE.

# LIST OF PARTS FOR 151K1 MACHINE

| Part No.    | Description                                                                       | Part No.    | Description                                                                   |
|-------------|-----------------------------------------------------------------------------------|-------------|-------------------------------------------------------------------------------|
| 462(833)    | Hook Set Screw                                                                    | 201572(819) | Tension Thumb Nut                                                             |
| 141566(803) | Machine Pulley Position Screw                                                     | 202101      | Needle Plate Slide Plate Screw Washer                                         |
| 141567(803) | Machine Pulley Set Screw                                                          | 202135      | Face Plate Position Pin                                                       |
| 200054(803) | Needle Plate Slide Plate Screw                                                    | 202244      | Arm Shaft Bushing (front) Oil Packing (wick)                                  |
| 200054(805) | Presser Bar Lifting Bracket Pinch Screw                                           | 202248      | Arm Cap Screw Washer                                                          |
| 200061(833) | Tension Stud Set Screw                                                            | 202253      | Arm Shaft Connection Belt Pulley Spring Flange                                |
| 200074(806) | Lifting Presser Foot Screw                                                        | 202260      | Hook Shaft Oil Packing (wick)                                                 |
| 200079(819) | Arm Cap Spool Holder Wire Hinge Screw                                             | 202277      | Feed Driving Connection Oil Packing (wick)                                    |
| 200086(833) | Needle Bar Connecting Stud Pinch Screw                                            | 202277      | Lifting Bell Crank Driving Crank Oil Packing (wick)                           |
| 200098(805) | Hook Shaft Ball Bearing Retainer Screw                                            | 202277      | Needle Bar and Needle Plate Carrier Frame Hinge Screw Stud Oil Packing (wick) |
| 200132(805) | Needle Bar Oil Pad Screw                                                          | 202277      | Take-up Lever Driving Stud Oil Packing (wick)                                 |
| 200132(805) | Thread Controller Spring Stop Screw                                               | 202277      | Vibrating Presser Bar Oil Packing (wick)                                      |
| 200136(805) | Bobbin Case Stop Screw                                                            | 202301      | Feed Driving Eccentric Regulating Bracket Plunger                             |
| 200141(806) | Needle Set Screw                                                                  | 202302      | Knee Lifter Connection Lever Lifting Rod Cotter Pin                           |
| 200145(803) | Hook Washer Needle Guard Screw                                                    | 202324      | Hook Shaft Connection Belt Pulley Spring Flange                               |
| 200161(819) | Take-up Lever Oil Guard Screw                                                     | 202330      | Needle Bar Connecting Stud Oil Packing (wick)                                 |
| 200262(819) | Knee Lifter Connection Lever Hinge Screw                                          | 202339      | Presser Bar Lifter                                                            |
| 200262(819) | Knee Lifter Lifting Lever Hinge Screw                                             | 202397      | Take-up (auxiliary)                                                           |
| 200278(819) | Arm Cap Screw                                                                     | 202398      | Take-up Lever                                                                 |
| 200327(803) | Arm Shaft Connection Belt Pulley Set Screw                                        | 202400      | Take-up Lever Hinge Stud with 202423                                          |
| 200335(803) | Arm Shaft Bushing (back) Set Screw                                                | 202404      | Tension Release Plunger                                                       |
| 200335(803) | Arm Shaft Counter Balance Set Screw                                               | 202405      | Tension Release Washer                                                        |
| 200335(803) | Needle Bar Crank Set Screw                                                        | 202410      | Thread Controller Spring                                                      |
| 200338(803) | Arm Shaft Bushing (front) Set Screw                                               | 202412      | Thread Guide                                                                  |
| 200346(803) | Feed Driving Connection Stud Set Screw                                            | 202415      | Thread Guide                                                                  |
| 200346(803) | Hook Shaft Bushing (front) Set Screw                                              | 202422      | Hook Shaft Bushing (front) Oil Packing (wick)                                 |
| 200352(833) | Presser Bar Bushing Set Screw                                                     | 202423      | Take-up Lever Hinge Stud Oil Packing (wick)                                   |
| 200374(833) | Lifting Bell Crank Driving Crank Set Screw                                        | 202443      | Feed Regulating Spindle Head Pin                                              |
| 200378(803) | Arm Shaft Ball Bearing Collar Set Screw                                           | 202595      | Feed Driving Eccentric Regulating Bracket Plunger Spring                      |
| 200383(803) | Feed Driving Eccentric Regulating Screw Check Screw                               | 202619      | Feed Regulating Spindle Head Position Pin                                     |
| 200383(803) | Hook Shaft Ball Bearing Collar Set Screw                                          | 202635      | Arm Shaft Connection Belt Pulley with 200327(803), 200602(803) and two 202253 |
| 200383(803) | Take-up Lever Hinge Stud Set Screw                                                | 203089      | Arm Cap Spool Holder Base                                                     |
| 200397(819) | Thread Guide Set Screw                                                            | 203090      | Arm Cap Spool Holder Base 203089 with 200079(819) and 204296                  |
| 200397(819) | Thread Retainer Set Screw                                                         | 203091      | Arm Cap                                                                       |
| 200428(803) | Needle Bar Crank Position Screw                                                   | 203092      | Arm Cap and Spool Holder complete, Nos. 203090, 203091 and two 200585(819)    |
| 200429(806) | Feed Driving Eccentric Regulating Screw                                           | 203172      | Needle Bar Crank Friction Washer                                              |
| 200459(804) | Cloth Guide Thumb Screw                                                           | 204296      | Arm Cap Spool Holder Wire                                                     |
| 200462(819) | Face Plate Thumb Screw                                                            | 204925      | Tension Stud Washer                                                           |
| 200475(819) | Presser Bar Thumb Screw Thumb Set Screw                                           | 206758      | Needle Bar and Needle Plate Carrier Frame Oil Wick                            |
| 200494(819) | Presser Bar Thumb Screw (pressure regulating)                                     | 207080      | Arm Shaft Bushing (front) with 202244                                         |
| 200502(819) | Arm Shaft Bushing (front) Oil Packing Thumb Screw                                 | 208331      | Feed Driving Eccentric Regulating Bracket                                     |
| 200577(833) | Bed Plate (back) Screw                                                            | 208523      | Arm Shaft                                                                     |
| 200577(833) | Throat Plate Screw                                                                | 208526      | Needle Bar with 200141(806)                                                   |
| 200582(819) | Needle Bar and Needle Plate Carrier Frame Hinge Bearing Screw                     | 208535      | Face Plate                                                                    |
| 200582(819) | Thread Guide Screw                                                                | 208536      | Needle Plate, 53 needle hole, for needle sizes 12 and 13                      |
| 200585(819) | Arm Cap Spool Holder Base Screw                                                   | 208537      | Needle Plate Slide Plate (adjustable)                                         |
| 200592(803) | Bobbin Case Tension Screw                                                         | 208538      | Feed Driving Connection (bronze) with 202277                                  |
| 200596(806) | Hook Gib Screw                                                                    | 208539      | Feed Driving Connection Stud (eccentric) with 224530                          |
| 200602(803) | Arm Shaft Connection Belt Pulley Position Screw                                   | 208540      | Feed Regulating Spindle complete                                              |
| 200607(803) | Feed Driving Eccentric Regulating Bracket Plunger Spring Stop Screw               | 208543      | Knee Lifter Connection Lever 224512 with 208544, 208592 and two 200262(819)   |
| 200614(803) | Hook Gib Hinge Screw                                                              | 208544      | Knee Lifter Lifting Lever                                                     |
| 200625(806) | Tension Stud with 204925                                                          | 208545      | Lifting Bell Crank                                                            |
| 200653(803) | Presser Bar Lifter Hinge Screw                                                    | 208546      | Lifting Bell Crank Driving Crank                                              |
| 200842(805) | Take-up (auxiliary) Screw                                                         | 208547      | Lifting Bell Crank Driving Crank Link                                         |
| 200964(803) | Bobbin Case Latch Stop Screw                                                      | 208550      | Needle Bar and Needle Plate Carrier Frame Hinge Screw Stud Bushing (split)    |
| 200975(806) | Presser Bar Lifting Bracket Guide Screw                                           | 208551      | Needle Bar Connecting Link                                                    |
| 200996(803) | Lifting Bell Crank Stop Screw                                                     | 208552      | Needle Bar Connecting Stud with 200086(833) and 202330                        |
| 200997(803) | Needle Bar and Needle Plate Carrier Frame Hinge Screw Stud Bushing Position Screw | 208553      | Needle Bar Crank with 200335(803), 200374(833), 200428(803) and 201012(803)   |
| 200998(803) | Needle Bar and Needle Plate Carrier Frame Hinge Screw Stud                        | 208555      | Presser Bar Lifting Bracket with 200054(805)                                  |
| 201012(803) | Lifting Bell Crank Driving Crank Position Screw                                   | 208556      | Presser Bar Spring                                                            |
| 201014(803) | Feed Driving Eccentric Regulating Bracket Hinge Screw                             | 208557      | Take-up Lever Driving Stud with 202277                                        |
| 201014(803) | Feed Driving Eccentric Regulating Bracket Stop Screw                              | 208558      | Take-up Lever Oil Guard with 203655 and 224570                                |
| 201015(819) | Vibrating Presser Foot Pinch Screw                                                | 208560      | Tension Release Slide Spring                                                  |
| 201016(803) | Bobbin Case Tension Spring Regulating Screw                                       |             |                                                                               |
| 201018(803) | Hook Shaft Connection Belt Pulley Set Screw                                       |             |                                                                               |
| 201387(806) | Needle Plate Screw                                                                |             |                                                                               |
| 201525(805) | Feed Driving Eccentric Regulating Bracket Hinge Screw Nut                         |             |                                                                               |
| 201525(805) | Feed Driving Eccentric Regulating Bracket Stop Screw Nut                          |             |                                                                               |



| <u>Part No.</u>                                                                               | <u>Description</u>                                                                                                    |
|-----------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| <u>LIST OF CORSET BINDERS FOR 151K3 MACHINE.</u>                                              |                                                                                                                       |
| NOTE:- When ordering, state size required. Send a sample of binding and material to be bound. |                                                                                                                       |
| 208304                                                                                        | Binder complete, .040" opening, for tapes or folded strips from $\frac{1}{4}$ " to $\frac{1}{2}$ " in steps of 1/32"  |
| 208306                                                                                        | Binder complete, .35" opening, for tapes or folded strips from $\frac{1}{4}$ " to $\frac{1}{2}$ ", in steps of 1/32"  |
| 208310                                                                                        | Binder complete, .45" opening, for tapes or folded strips from $\frac{1}{4}$ " to $\frac{1}{2}$ ", in steps of 1/32"  |
| 208312                                                                                        | Binder complete, .025" opening, for tapes or folded strips from $\frac{1}{4}$ " to $\frac{1}{2}$ ", in steps of 1/32" |
| 208320                                                                                        | Binder complete, .030" opening, for tapes or folded strips from $\frac{1}{4}$ " to $\frac{1}{2}$ ", in steps of 1/32" |

SUPPLEMENTARY PARTS LIST FOR MACHINE 151K6.

(Same as complete list for Machine 151K1, with the following exceptions).

PARTS ADDED

|             |                                                                                          |
|-------------|------------------------------------------------------------------------------------------|
| 93197       | Guide                                                                                    |
| 93198       | Guide Bracket                                                                            |
| 93199       | Guide complete, for Collar and Cuff work, Nos. 200460(819), 201059(803), 93197 and 93198 |
| 200460(819) | Guide Bracket Thumb Screw                                                                |
| 201059(803) | Guide Hinge Screw                                                                        |
| 224590      | Lifting Presser Foot (packed with accessories)                                           |
| 224695      | Guide Base Plate                                                                         |
| 224698      | Lifting Presser Foot                                                                     |
| 224699      | Vibrating Presser Foot with 201015(819)                                                  |
| 224700      | Vibrating Presser Foot with 201015(819) (packed with accessories)                        |
| 200577(833) | Guide Base Plate Screw                                                                   |

Part No.                      Description

PARTS REMOVED


|             |                                         |
|-------------|-----------------------------------------|
| 200577(830) | Bed Plate (back) Screw                  |
| 208570      | Bed Plate (back)                        |
| 208571      | Lifting Presser Foot                    |
| 208572      | Vibrating Presser Foot with 201015(819) |

OPTIONAL PRESSER FEET

|        |                                                     |
|--------|-----------------------------------------------------|
| 224500 | Lifting Presser Foot for 208572                     |
| 224501 | Lifting Presser Foot for 208572                     |
| 224502 | Lifting Presser Foot for 208572                     |
| 224503 | Lifting Presser Foot for 224504                     |
| 224504 | Vibrating Presser Foot with 201015(819), for 224503 |

ACCESSORIES

|             |                                                             |
|-------------|-------------------------------------------------------------|
| 41400       | Machine Rest Pin (wood) for 151K1, 151K3 and 151K6 Machines |
| 41564       | Machine Rest Pin (wood) for 151K2 Machine                   |
| 104212      | Universal Bobbin Winder complete                            |
| 120342      | Oiler                                                       |
| 161294      | Screw Driver                                                |
| 161295      | Screw Driver (bobbin case)                                  |
| 200157(819) | Attachment Screw                                            |
| 200570(805) | Bed Hinge Connection Screw                                  |
| 202258      | Bed Hinge Connection                                        |
| 208578      | Drip Pan Button for 151K2 Machine                           |
| -           | Drip Pan Button Wood Screw, 1" No. 13 for 151K2 Machine     |
| 225554      | Wrench (steel)                                              |
| 228220      | Drip Pan with four 3/4" wire nails                          |
| 228710      | Knee Lifter Rock Lever complete                             |
| 231337      | Cloth Guide                                                 |
| 263099      | Bobbin                                                      |
| Cat. 1451   | Needles (6)                                                 |

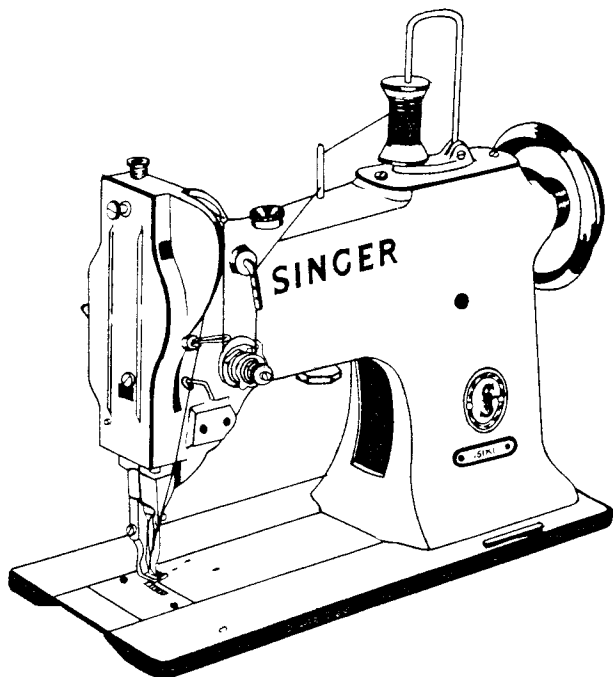

**PARTS CHART**  
for  
**SINGER**  
**CLASS**  
**151K**  
**MACHINES**