

Form 2492w

(138)

Printed in U. S. A.

LIST OF PARTS



MACHINE No. 151w3

*** A TRADE MARK OF

THE SINGER MANUFACTURING COMPANY

From the library of: Superior Sewing Machine & Supply LLC

INSTRUCTIONS FOR OILING

When the machine is shipped from the factory, the OIL RESERVOIR in the machine base is COMPLETELY DRY. Therefore, BEFORE OPERATING THE MACHINE, FILL THE OIL RESERVOIR TO THE CORRECT LEVEL with "TYPE B" or "TYPE D" OIL, sold only by Singer Sewing Machine Company.

Also apply oil several times daily to all oil holes and other oiling points on the machine, as instructed in Form 2432w.

"TYPE D" OIL is stainless.

Copyright, U. S. A., 1919, 1925, 1935 and 1938
by The Singer Manufacturing Company
All Rights Reserved for All Countries

INDEX

	Page
Accessories	12
Binders	13
Bobbin Winder	12
Knee Lifter	13
Machine No.151w3	5
Numerical List of Parts	17

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the **PART** number in the **FIRST** column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above case), must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.
- J. Nickel Plated only.
- R. Merlized.
- Y. Black Nickel Plated only.

These letters **MUST BE USED** when they appear in the list and **AFTER** the number, as in the list.

In this series


200001 to 201500 and 350001 to 351500 are Screw Numbers.
201501 to 201800 and 351501 to 351800 are Nut Numbers.
201801 to 202000 and 351801 to 352000 are Roller Numbers.
202001 to 350000 are Numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are **NOT TO BE USED** in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE
FOR

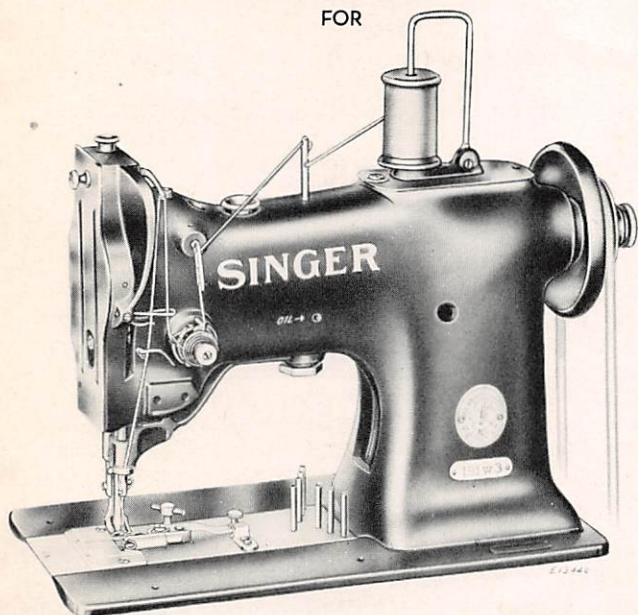

MACHINE No. 151w3

UNISON FEED

BALL BEARING

FOR BINDING CORSETS AND OTHER SIMILAR WORK

No.	Plate	Name
*224536	-----	Arm with 202135
224531	16503	" Cap with 244071
244071	-----	" " Oil Wick
200278H	16501	" " Screw
202248	16501	" " " Washer
203089	16504	" " Spool Holder Base
203090	16504	" " " " " 203089 with 200079H and 204296
200585H	11672	Arm Cap Spool Holder Base Screw
204296	16504	" " " " Wire
200079H	16501	" " " " Hinge Screw
224532	-----	Arm Cap and Spool Holder complete, Nos. 203090, 224531 and two 200585H
204235	16501	Arm Position Pin
200010E	11672	" Screw
202005	11672	" " Washer
208523	16504	" Shaft
249440	16503	" " Ball Bearing

No.	Plate	Name
*240054	-----	Arm Shaft Ball Bearing Collar with two 200378C
240055	16503	Arm Shaft Ball Bearing Collar 240054 with 249440
200378C	16501	Arm Shaft Ball Bearing Collar Set Screw
*240056	-----	" " " " Retaining Washer
*240053	-----	" " Bushing (back)
240057	16503	Arm Shaft Bushing (back, ball bearing) complete, Nos. 240053, 240055 and 240056
200338C	16501	Arm Shaft Bushing (back) Set Screw
207080	16504	" " " (front) with 202244
202244	-----	" " " " Oil Packing (wick)
200502B	13451	" " " " " Thumb Screw
200338C	16501	Arm Shaft Bushing (front) Set Screw
263105	16504	" " Connection Belt
224514	16504	" " " " Pulley with 200327C, 200602E and two 202253
200602E	16501	Arm Shaft Connection Belt Pulley Position Screw
200327C	16501	Arm Shaft Connection Belt Pulley Set Screw
202253	16501	Arm Shaft Connection Belt Pulley Spring Flange
208573	16503	Arm Shaft Counter Balance with 200335C
200335C	16501	" " " " Set Screw
244063	16504	Balance Wheel (disc) (belt groove 2-1/8 in. diam.) with 200328C and 200335C
200328C	16501	Balance Wheel Position Screw
200335C	16501	" " Set Screw
*224537	-----	Bed with 224517 and three 200582H
202258	16503	" Hinge Connection (2)
200570E	11672	" " " Screw (4)
208570	16504	" Plate (back)
Note: Bed Plate 208570 is furnished when order for Machine does not include Binder.		
224538	16503	Bed Slide (front)
201168D	16511	Binder Base Plate Thumb Screw
263099	16501	Bobbin
210846	16501	" Case Base
241402	16501	" " Cap with 200592C, 201016F and 263110
241403	-----	Bobbin Case Cap complete, Nos. 200964C, 210736, 210914 and 241402
210913	16501	Bobbin Case Latch
210914	-----	" " " 210913 with 210734 and 210735
210735	16501	Bobbin Case Latch Fulcrum Pin
210734	16501	" " " Lever

No.	Plate	Name
210736	16501	Bobbin Case Latch Spring
200964C	16501	" " " Stop Screw
263145	16501	" " Stop
200136D	16501	" " " Screw
263110	16501	" " Tension Spring
201016F	16501	" " " " Regulating Screw
200592C	16501	Bobbin Case Tension Spring Screw
241404	16504	Bobbin Case complete, Nos. 210846 and 241403
208535	16504	Face Plate
202135	11672	" " Position Pin
200462B	11672	" " Thumb Screw
208538	11672	Feed Driving Connection (bronze) with 202277
202277	-----	Feed Driving Connection Oil Packing (wick)
208539	11672	Feed Driving Connection Stud (eccentric) with 224530
224530	-----	Feed Driving Connection Stud Oil Pack- ing (wick)
200346C	16502	Feed Driving Connection Stud Set Screw
208331	13451	" " Eccentric Regulating Bracket
224515	-----	" " " " " " 208331 with 224514, two each 201014C and 201525E
201014C	11672	Feed Driving Eccentric Regulating Bracket Hinge Screw
201525E	11672	Feed Driving Eccentric Regulating Bracket Hinge Screw Nut
202301	13451	Feed Driving Eccentric Regulating Bracket Plunger
202595	13451	Feed Driving Eccentric Regulating Bracket Plunger Spring
200607C	13451	Feed Driving Eccentric Regulating Bracket Plunger Spring Stop Screw
201014C	11672	Feed Driving Eccentric Regulating Bracket Stop Screw
201525E	11672	Feed Driving Eccentric Regulating Bracket Stop Screw Nut
200429C	13451	Feed Driving Eccentric Regulating Screw
200383C	13451	" " " " " " Check Screw
208540	16504	Feed Regulating Spindle with 202311, 202443 and 202619
*202311	-----	Feed Regulating Spindle Head
202443	16502	" " " " Pin
202619	16502	" " " " Position Pin
263140	-----	Hook with 263134 and two 462C

PARTS FOR MACHINE No. 151w3

No.	Plate	Name
263141	16502	Hook 263140 with 200145C, 200614C, 263034, 263122 and two 200596F
263147	-----	Hook and Bobbin Case complete, Nos. 241404 and 263141
263122	16502	Hook G1b
200614C	16502	" " Hinge Screw
200596F	16502	" " Screw
263134	-----	" Oiling Felt
462C	16502	" Set Screw
224539	16503	" Shaft with 263139
263029	16503	" " Ball Bearing
*263030	-----	" " " " Collar with two 200383C
263031	16503	Hook Shaft Ball Bearing Collar 263030 with 263029
200383C	13451	Hook Shaft Ball Bearing Collar Set Screw
263032	16503	Hook Shaft Ball Bearing Retainer
200098E	16502	" " " " " Screw (3)
263146	16503	" " Bushing (front) with 202423
200346C	16502	" " " " Set Screw
202423	-----	" " " " Oil Packing (wick)
263033	16503	Hook Shaft Connection Belt Pulley with 202324 and two 201018C
201018C	11672	Hook Shaft Connection Belt Pulley Set Screw
202324	16502	Hook Shaft Connection Belt Pulley Spring Flange
202260	-----	Hook Shaft Oil Packing (wick) (2)
263139	-----	" " " Wick
263034	16502	" Washer Needle Guard
200145C	16502	" " " " Screw
224512	16504	Knee Lifter Connection Lever
208543	-----	" " " " 224512 with 208544, 208592 and two 200262H
200262H	11672	Knee Lifter Connection Lever Hinge Screw
208592	16504	Knee Lifter Connection Lever Lifting Rod with 202302
202302	13451	Knee Lifter Connection Lever Lifting Rod Cotter Pin
208544	16504	Knee Lifter Lifting Lever
200262H	11672	" " " " Hinge Screw
208545	11672	Lifting Bell Crank
208546	11672	" " " " Driving Crank
208547	11672	" " " " " Link
202277	-----	" " " " " Oil Packing (wick)
201012C	11672	Lifting Bell Crank Driving Crank Position Screw

No.	Plate	Name
200374C	16502	Lifting Bell Crank Driving Crank Set Screw
200996C	16502	Lifting Bell Crank Stop Screw
224521	16511	" Presser Foot
200074F	11672	" " " Screw
208526	13451	Needle Bar with 200141F
224540	16504	" " and Needle Plate Carrier Frame with 200346C, 200997C and 208550
350401C	16502	Needle Bar and Needle Plate Carrier Frame Hinge Screw
224517	16502	Needle Bar and Needle Plate Carrier Frame Hinge Bearing
200582H	16502	Needle Bar and Needle Plate Carrier Frame Hinge Bearing Screw (3)
200998C	16502	Needle Bar and Needle Plate Carrier Frame Hinge Screw Stud
208550	16502	Needle Bar and Needle Plate Carrier Frame Hinge Screw Stud Bushing (split)
200997C	16502	Needle Bar and Needle Plate Carrier Frame Hinge Screw Stud Bushing Position Screw
202277	-----	Needle Bar and Needle Plate Carrier Frame Hinge Screw Stud Oil Packing (wick)
208551	16502	Needle Bar Connecting Link
208552	16502	" " " Stud with 200086C and 202330
202330	-----	Needle Bar Connecting Stud Oil Packing (wick)
200086C	16512	Needle Bar Connecting Stud Pinch Screw
208553	16504	" " Crank with 200335C, 200374C, 200428C and 201012C
208582	-----	Needle Bar Crank 208553 with 200996C, 202398, 202400, 208545 to 208547, 208551, 208552, 208555, 208557, 208562 and 208563
203172	16511	Needle Bar Crank Friction Washer
200428C	16511	" " " Position Screw
200335C	16501	" " " Set Screw
224541	-----	" " Oil Pad (felt)
200132E	16511	" " " " Screw
208315	16511	" Plate, 50 needle hole, for needle sizes 14 and 15
201387F	13451	Needle Plate Screw
208537	16511	" " Slide Plate (adjustable)
200054C	13451	" " " " Screw (2)
202101	16511	" " " " " Washer (2)
200141F	16511	" Set Screw

No.	Plate	Name
224527	16511	Oil Leader (brass) (for back hook shaft bearing)
208566	16503	Presser Bar with 200074F
208567	16511	" " Bushing
200352C	16511	" " " Set Screw
208313	16512	" " Lifter
200653C	16512	" " " Hinge Screw
208555	16512	" " Lifting Bracket with 200054E
200975F	16512	" " " Guide Screw
200054E	13451	" " " Pinch Screw
208556	16512	" " Spring
20494B	16512	" " Thumb Screw (pressure regulating)
200475B	16512	Presser Bar Thumb Screw Thumb Set Screw
202355	16512	" " " " " " "
		Packing (brass)
202397	16512	Take-up (auxiliary)
200842E	16512	" " Screw
202398	16512	" Lever
208557	16512	" " Driving Stud with 202277
202277	-----	" " " Oil Packing (wick)
202400	16513	Take-up Lever Hinge Stud with 202423
202423	-----	" " " " Oil Packing (wick)
200383C	13451	Take-up Lever Hinge Stud Set Screw
208558	16512	" " Oil Guard with 223655 and 224572
200161H	16512	Take-up Lever Oil Guard Screw
208568	16512	" " " Leader
202254	-----	" " " Packing (wick)
223655	-----	" " Oiling Felt
224572	13451	" " " Rivet
244048	16513	Tension Disc (back)
244049	16513	" " (front)
202404	16513	" Release Plunger
233629	13451	" " Slide
208560	13451	" " Spring
244061	16513	" " Washer
202407	10881	" Spring
263106	16513	" " Washer
200625F	16513	" Stud with 204925
200061C	16513	" " Set Screw
204925	16513	" " Washer
201572B	10881	" Thumb Nut
244062	-----	Tension complete, Nos. 200625F, 201572B, 202407, 202410, 244048, 244049, 244061 and 263106
202410	16513	Thread Controller Spring
202411	16513	" " " Stop

No.	Plate	Name
200132E	16511	Thread Controller Spring Stop Screw
208574	13451	" Guide
202412	16513	" "
202415	16513	" "
224542	16513	" "
200172H	16513	" " Screw
200582H	16502	" " "
200397H	13451	" " Set Screw
202091	16513	" Retainer Sleeve
202092	16513	" " Spring
204058	16513	" " Stud
200366H	16512	" " " Set Screw
204059	-----	Thread Retainer complete, Nos. 202091, 202092 and 204058
224549	16511	Throat Plate with 263145 and two 200136D
200577XC	11672	Throat Plate Screw (2)
208562	16513	Vibrating Presser Bar
208563	16513	" " " Connecting Link
202277	-----	" " " Oil Packing (wick)
224522	16511	" " Foot with 201015F
201015F	16513	" " " Pinch Screw

SINGER Needles should be used
in **SINGER** Machines
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO.***" ₁

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. ₂

ACCESSORIES

No.	Plate	Name
200157B	16513	Attachment Screw
263099	16501	Bobbin (5)
*225482	-----	" Case Screw Driver Blade
*225483	-----	" " " " Handle
225497	14383	Bobbin Case Screw Driver complete, Nos. 225482 and 225483
135 x 1	-----	Needle ,three each,sizes 12 and 14
228220	-----	Drip Pan with four 1 in.wire nails
41400	14383	Machine Rest Pin (wood)
120342	14383	Oiler with 120343
120343	14383	" Spout 3-1/2 in.long
*225484	-----	Screw Driver Blade
*225485	-----	" " Handle
225498	14383	Screw Driver complete (7-1/4 in.long), Nos.225484 and 225485
225554	14383	Wrench (steel)

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

225453	10884	Frame with 202277 and 225438
225454	10884	" Hinge Pin
202277	-----	" Oil Packing (wick)
225438	10884	" " Well Cap
225455	10884	" Spring
225456	10884	" " Plunger
202473	10885	Pulley with 200380C
200380C	10884	" Set Screw
225381	10884	Spindle
225444	10884	Stop Latch
200056E	10884	" " Screw
225458	10884	" " Thumb Lever
225459	10884	" " " " Hinge Stud
225459	10884	" " " " Joint Stud
202478	10884	" " Trip Lever
200299H	10884	" " " " Hinge Screw
225461	10881	Tension Bracket with 201499B
200082D	10881	" " Screw
228026	10884	" " " Washer
2102	10881	" Disc
202407	10881	" Spring

ACCESSORIES

13

No.	Plate	Name
201499B	10881	Tension Stud
201572B	10881	" " Thumb Nut
225462	10881	Bobbin Winder Tension Bracket complete Nos.201572B,202407,225461 and two 2102
225433	10885	Bobbin Winder and Tension Bracket Base
225382	10885	Universal Bobbin Winder complete,Nos. 200056E,200082D,200299H,202473, 202478,225381,225433,225444,225453 to225456,225458,225462,228026,two each 225459 and wood screws 3/4 in. Nos.12,R.H.B.

KNEE LIFTER

228294	15911	Rock Lever with two 356C
228295	15911	" " Bracket with 356C and four wood screws 7/8 in.No.12
228299	-----	Rock Lever Bracket 228295 and 228294 and 228297
228296	15911	Rock Lever Extension with 200529C
356C	15911	" " " Set Screw
228297	15911	" " Hinge Pin
356C	15911	" " " Set Screw
202455	15911	" " Knee Arm
356C	15911	" " " Set Screw
228284	15911	" " " Plate with 356C
356C	15911	" " " Set Screw
227728	15911	" " Rod with 227729
226729	-----	" " " Cap
200529C	15911	" " " Set Screw
228298	15911	Knee Lifter Rock Lever complete,Nos. 202455,227728,228284,228296 and 228299

(Other Knee Lifter Parts are listed with
parts of Machine Head)

BINDERS

FOR CORSET BINDING

STATE SIZE REQUIRED. SEND SAMPLE OF BINDING
AND MATERIAL TO BE BOUND

208324	16514	Binder Base Plate with seven 225671
208326	16514	" Head Adjusting Lever
200292F	16513	" " " " Hinge Screw
208327	16513	" " " " " "
		Washer
200133D	16513	Binder Head Screw

BINDERS

No.	Plate	Name
208318	16514	Binder Head Slide Block
225671	16514	" Ribbon Tension Pin
208329	16514	" Tape Guide, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 inch
200907B	16513	Binder Tape Guide Screw
208305	16514	" Head, .035 in. opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 inch
208306	16514	Binder complete, .035 in. opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 in., Nos. 200292F, 208305, 208318, 208324, 208326, 208327, 208329, two each 200133D and 200907B
208307	-----	Binder Head, .020 in. opening, for Tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 inch
208308	-----	Binder complete, .020 in. opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 in., Nos. 200292F, 208307, 208318, 208324, 208326, 208327, 208329, two each 200133D and 200907B
208309	-----	Binder Head, .045 in. opening, for tapes or folded strips from 3/8 to 3/4 in. in strips of 1/32 inch
208310	-----	Binder complete, .045 in. opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 in., Nos. 200292F, 208309, 208318, 208324, 208326, 208327, 208329, two each 200133D and 200907B
208311	-----	Binder Head, .025 in. opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 inch
208312	-----	Binder complete, .025 in. opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 in., Nos. 200292F, 208311, 208318, 208324, 208326, 208327, 208329, two each 200133D and 200907B
208319	-----	Binder Head, .030 in. opening, for tapes or folded strips from 3/8 to 3/4 in. in steps of 1/32 inch
208320	-----	Binder complete, .030 in. opening for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 in., Nos. 200292F, 208318, 208319, 208324, 208326, 208327, 208329, two each 200133D and 200907B

No.	Plate	Name
208303	-----	Binder Head, .040 in. opening, for tapes or folded strips from 3/8 to 3/4 in. in steps of 1/32 inch
208304	-----	Binder complete, .040 in. opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 in., Nos. 200292F, 208303, 208318, 208324, 208326, 208327, 208329, two each 200133D and 200907B

SINGER Needles should be used
in **SINGER** Machines
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO.**" ₁

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. ₂

SINGER Needles should be used
in **SINGER** Machines
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO.**" 1

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. 2

NUMERICAL LIST OF PARTS

No.	Plate	Name
356C	15911	Knee Lifter Rock Lever Extension Set Screw, for 228294
356C	15911	Knee Lifter Rock Lever Hinge Pin Set Screw, for 228295
356C	15911	Knee Lifter Rock Lever Knee Arm Set Screw, for 228294
356C	15911	Knee Lifter Rock Lever Knee Plate Set Screw, for 228284
462C	16502	Hook Set Screw, for 263140
2102	10881	Bobbin Winder Tension Disc, for 225462
41400	14383	Machine Rest Pin (wood)
120342	14383	Oiler with 120343
120343	14383	" Spout, 3-1/2 in. long, for 120342
200010E	11672	Arm Screw
200054C	13451	Needle Plate Slide Plate Screw
200054E	13451	Presser Bar Lifting Bracket Pinch Screw, for 208555
200056E	10884	Bobbin Winder Stop Latch Screw, for 225382
200061C	16513	Tension Stud Set Screw
200074F	11672	Lifting Presser Foot Screw, for 208566
200079H	16501	Arm Cap Spool Holder Wire Hinge Screw, for 203090
200082D	10881	Bobbin Winder Tension Bracket Screw, for 225382
200086C	16513	Needle Bar Connecting Stud Pinch Screw, for 208552
200098E	16502	Hook Shaft Ball Bearing Retainer Screw
200132E	16511	Needle Bar Oil Pad Screw
200132E	16511	Thread Controller Spring Stop Screw
200133D	16513	Binder Head Screw, for 208304, 208306, 208308, 208310, 208312 and 208320
200136D	16501	Bobbin Case Stop Screw, for 224549
200141F	16511	Needle Set Screw, for 208526
200145C	16502	Hook Washer Needle Guard Screw, for 263141
200157B	16513	Attachment Screw
200161H	16512	Take-up Lever Oil Guard Screw
200172H	16513	Thread Guide Screw
200262H	11672	Knee Lifter Connection Lever Hinge Screw, for 208543
200262H	11672	Knee Lifter Lifting Lever Hinge Screw, for 208543
200278H	16501	Arm Cap Screw
200292F	16513	Binder Head Adjusting Lever Hinge Screw, for 208304, 208306, 208308, 208310, 208312 and 208320

NUMERICAL LIST OF PARTS

No.	Plate	Name
200299H	10884	Bobbin Winder Stop Latch Trip Lever Hinge Screw, for 225382
200327C	16501	Arm Shaft Connection Belt Pulley Set Screw, for 224514
200328C	16501	Balance Wheel Position Screw, for 244063
200335C	16501	Arm Shaft Counter Balance Set Screw, for 208573
200335C	16501	Balance Wheel Set Screw, for 244063
200335C	16501	Needle Bar Crank Set Screw, for 208553
200338C	16501	Arm Shaft Bushing (back) Set Screw
200338C	16501	" " " (front) Set Screw
200346C	16502	Feed Driving Connection Stud Set Screw, for 224540
200346C	16502	Hook Shaft Bushing (front) Set Screw
200352C	16511	Presser Bar Bushing Set Screw
200366H	16512	Thread Retainer Stud Set Screw
200374C	16502	Lifting Bell Crank Driving Crank Set Screw, for 208553
200378C	16501	Arm Shaft Ball Bearing Collar Set Screw, for 240054
200380C	10884	Bobbin Winder Pulley Set Screw, for 202473
200383C	13451	Feed Driving Eccentric Regulating Screw Check Screw
200383C	13451	Hook Shaft Ball Bearing Collar Set Screw, for 263030
200383C	13451	Take-up Lever Hinge Stud Set Screw
200397H	13451	Thread Guide Set Screw
200428C	16511	Needle Bar Crank Position Screw, for 208553
200429C	13451	Feed Driving Eccentric Regulating Screw
200462B	11672	Face Plate Thumb Screw
200475B	16512	Presser Bar Thumb Screw Thumb Set Screw
200494B	16512	" " " " (pressure reg- ulating)
200502B	13451	Arm Shaft Bushing (front) Oil Packing Thumb Screw
200529C	15911	Knee Lifter Rock Lever Rod Set Screw, for 228296
200570E	11672	Bed Hinge Connection Screw
200577XC	11672	Throat Plate Screw
200582H	16502	Needle Bar and Needle Plate Carrier Frame Hinge Bearing Screw, for 224537
200582H	16502	Thread Guide Screw
200585H	11672	Arm Cap Spool Holder Base Screw, for 224532
200592C	16501	Bobbin Case Tension Spring Screw, for 241402
200596F	16502	Hook Gib Screw, for 263141

NUMERICAL LIST OF PARTS

19

No.	Plate	Name
200602E	16501	Arm Shaft Connection Belt Pulley Position Screw, for 224514
200607C	13451	Feed Driving Eccentric Regulating Bracket Plunger Spring Stop Screw
200614C	16502	Hook Gib Hinge Screw, for 263141
200625F	16513	Tension Stud with 204925, for 244062
200653C	16512	Presser Bar Lifter Hinge Screw
200842E	16512	Take-up (auxiliary) Screw
200907B	16513	Binder Tape Guide Screw, for 208304, 208306, 208308, 208310, 208312 and 208320
200964C	16501	Bobbin Case Latch Stop Screw, for 241403
200975F	16512	Presser Bar Lifting Bracket Guide Screw
200996C	16502	Lifting Bell Crank Stop Screw, for 208582
200997C	16502	Needle Bar and Needle Plate Carrier Frame Hinge Screw Stud Bushing Position Screw, for 224540
200998C	16502	Needle Bar and Needle Plate Carrier Frame Hinge Screw Stud
201012C	11672	Lifting Bell Crank Driving Crank Position Screw, for 208553
201014C	11672	Feed Driving Eccentric Regulating Bracket Hinge Screw, for 224515
201014C	11672	Feed Driving Eccentric Regulating Bracket Stop Screw, for 224515
201015F	16513	Vibrating Presser Foot Pinch Screw, for 224522
201016F	16501	Bobbin Case Tension Spring Regulating Screw, for 241402
201018C	11672	Hook Shaft Connection Belt Pulley Set Screw, for 263033
201168D	16511	Binder Base Plate Thumb Screw
201387F	13451	Needle Plate Screw
201499B	10881	Bobbin Winder Tension Stud, for 225461
201525E	11672	Feed Driving Eccentric Regulating Bracket Hinge Screw Nut, for 224515
201525E	11672	Feed Driving Eccentric Regulating Bracket Stop Screw Nut, for 224515
201572B	10881	Bobbin Winder Tension Stud Thumb Nut, for 225462
201572B	10881	Tension Thumb Nut, for 244062
202005	11672	Arm Screw Washer
202091	16513	Thread Retainer Sleeve, for 204059
202092	16513	" " Spring, for 204059
202101	16511	Needle Plate Slide Plate Screw Washer
202135	11672	Face Plate Position Pin, for 224536
202244	-----	Arm Shaft Bushing (front) Oil Packing (wick), for 207080
202248	16501	Arm Cap Screw Washer

NUMERICAL LIST OF PARTS

No.	Plate	Name
202253	16501	Arm Shaft Connection Belt Pulley Spring Flange, for 224514
202254	-----	Take-up Lever Oil Leader Packing (wick)
202258	16503	Bed Hinge Connection
202260	-----	Hook Shaft Oil Packing (wick)
202277	-----	Bobbin Winder Frame Oil Packing (wick), for 225453
202277	-----	Feed Driving Connection Oil Packing (wick), for 208538
202277	-----	Lifting Bell Crank Driving Crank Oil Packing (wick)
202277	-----	Needle Bar and Needle Plate Carrier Frame Hinge Screw Stud Oil Packing (wick)
202277	-----	Take-up Lever Driving Stud Oil Packing (wick), for 208557
202277	-----	Vibrating Presser Bar Oil Packing (wick)
202301	13451	Feed Driving Eccentric Regulating Bracket Plunger
202302	13451	Knee Lifter Connection Lever Lifting Rod Cotter Pin, for 208592
*202311	-----	Feed Regulating Spindle Head, for 208540
202324	16502	Hook Shaft Connection Belt Pulley Spring Flange, for 263033
202330	-----	Needle Bar Connecting Stud Oil Packing (wick), for 208552
202355	16512	Presser Bar Thumb Screw Thumb Set Screw Packing (brass)
202397	16512	Take-up (auxiliary)
202398	16512	" Lever, for 208582
202400	16513	" " Hinge Stud with 202423, for 208582
202404	16513	Tension Release Plunger
202407	10881	Bobbin Winder Tension Spring, for 225462
202407	10881	Tension Spring, for 244062
202410	16513	Thread Controller Spring, for 244062
202411	16513	" " " Stop
202412	16513	" Guide
202415	16513	" "
202423	-----	Hook Shaft Bushing (front) Oil Packing (wick), for 263146
202423	-----	Take-up Lever Hinge Stud Oil Packing (wick), for 202400
202443	16502	Feed Regulating Spindle Head Pin, for 208540
202455	15911	Knee Lifter Rock Lever Knee Arm, for 228298
202473	10885	Bobbin Winder Pulley with 200380C, for 225382

NUMERICAL LIST OF PARTS

21

No.	Plate	Name
202478	10884	Bobbin Winder Stop Latch Trip Lever, for 225382
202595	13451	Feed Driving Eccentric Regulating Bracket Plunger Spring
202619	16502	Feed Regulating Spindle Head Posi- tion Pin, for 208540
203089	16504	Arm Cap Spool Holder Base, for 203090
203090	16504	" " " " " 203089 with 200079H and 204296, for 224532
203172	16511	Needle Bar Crank Friction Washer
204058	16513	Thread Retainer Stud, for 204059
204059	-----	Thread Retainer complete, Nos. 202091, 202092 and 204058
204235	16501	Arm Position Pin
204296	16504	" Cap Spool Holder Wire, for 203090
204925	16513	Tension Stud Washer, for 200625F
207080	16504	Arm Shaft Bushing (front) with 202244
208303	-----	Binder Head, .040 in. opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 inch, for 208304
208304	-----	Binder complete, .040 in. opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 in., Nos. 200292F, 208303, 208318, 208324, 208326 208327, 208329, two each 200133D and 200907B
208305	16514	Binder Head, .035 in. opening for tapes or folded strips from 3/8 to 3/4 in. in steps of 1/32 inch, for 208306
208306	16514	Binder complete, .035 in. opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 in., Nos. 200292F, 208305, 208318, 208324, 208326 208327, 208329, two each 200133D and 200907B
208307	-----	Binder Head, .020 in., opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 inch, for 208308
208308	-----	Binder complete, .020 in. opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 in., Nos. 200292F, 208307, 208318, 208324, 208326 208327, 208329, two each 200133D and 200907B
208309	-----	Binder Head, .045 in. opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 inch, for 208310

NUMERICAL LIST OF PARTS

No.	Plate	Name
208310	-----	Binder complete, .045 in. opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 in., Nos. 200292F, 208309, 208318, 208324, 208326 208327, 208329, two each 200133D and 200907B
208311	-----	Binder Head, .025 in. opening, for tapes or folded strips from 3/8 to 3/4 in. in steps of 1/32 inch, for 208312
208312	-----	Binder complete, .025 in. opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 in., Nos. 200292F, 208311, 208318, 208324, 208326 208327, 208329, two each 200133D and 200907B
208313	16512	Presser Bar Lifter
208315	16511	Needle Plate, 50 needle hole, for needle sizes 14 and 15
208318	16514	Binder Head Slide Block, for 208304, 208306, 208308, 208310, 208312 and 208320
208319	-----	Binder Head, .030 in. opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 inch, for 208320
208320	-----	Binder complete, .030 in. opening, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 in., Nos. 200292F, 208318, 208319, 208324, 208326 208327, 208329, two each 200133D and 200907B
208324	16514	Binder Base Plate with seven 225671, for 208304, 208306, 208308, 208310, 208312 and 208320
208326	16514	Binder Head Adjusting Lever, for 208304, 208306, 208308, 208310, 208312 and 208320
208327	16513	Binder Head Adjusting Lever Hinge Screw Washer, for 208304, 208306, 208308, 208310, 208312 and 208320
208329	16514	Binder Tape Guide, for tapes or folded strips from 3/8 to 3/4 in., in steps of 1/32 inch, for 208304, 208306, 208308, 208310, 208312 and 208320
208331	13451	Feed Driving Eccentric Regulating Bracket, for 224515
208523	16504	Arm Shaft
208526	13451	Needle Bar with 200141F
208535	16504	Face Plate
208537	16511	Needle Plate Slide Plate (adjustable)

NUMERICAL LIST OF PARTS

23

No.	Plate	Name
208538	11672	Feed Driving Connection (bronze) with 202277
208539	11672	Feed Driving Connection Stud (eccentric) with 224530
208540	16504	Feed Regulating Spindle with 202311, 202443 and 202619
208543	-----	Knee Lifter Connection Lever 224512 with 208544, 208592 and two 200262H
208544	16504	Knee Lifter Lifting Lever, for 208543 Nos. 208545 to 208547, for 208582
208545	11672	Lifting Bell Crank
208546	11672	" " " Driving Crank
208547	11672	" " " " Link
208550	16502	Needle Bar and Needle Plate Carrier Frame Hinge Screw Stud Bushing (split), for 224540 Nos. 208551 to 208553, for 208582
208551	16502	Needle Bar Connecting Link
208552	16502	" " " Stud with 200086C and 202330
208553	16504	Needle Bar Crank with 200335C, 200374C, 200428C and 201012C
208555	16512	Presser Bar Lifting Bracket with 200054E, for 208582
208556	16512	Presser Bar Spring
208557	16512	Take-up Lever Driving Stud with 202277, for 208582
208558	16512	Take-up Lever Oil Guard with 223655 and 224572
208560	13451	Tension Release Slide Spring
208562	16513	Vibrating Presser Bar, for 208582
208563	16513	" " " Connecting Link, for 208582
208566	16503	Presser Bar with 200074F
208567	16511	" " Bushing
208568	16512	Take-up Lever Oil Leader
208570	16504	Bed Plate (back)
208573	16503	Arm Shaft Counter Balance with 200335C
208574	13451	Thread Guide
208582	-----	Needle Bar Crank 208553 with 200996C, 202398, 202400, 208545 to 208547, 208551, 208552, 208555, 208557, 208562 and 208563
208592	16504	Knee Lifter Connection Lever Lifting Rod with 202302, for 208543
210734	16501	Bobbin Case Latch Lever, for 210914
210735	16501	" " " Fulcrum Pin, for 210914
210736	16501	" " " Spring, for 241403
210846	16501	" " Base, for 241404
210914	16501	" " Latch, for 210913

NUMERICAL LIST OF PARTS

No.	Plate	Name
210914	-----	Bobbin Case Latch 210913 with 210734 and 210735, for 241403
223655	-----	Take-up Lever Oiling Felt, for 208558
224512	16504	Knee Lifter Connection Lever, for 208543
224514	16504	Arm Shaft Connection Belt Pulley with 200327C, 200602E and two 202253, for 224515
224515	-----	Feed Driving Eccentric Regulating Bracket 208331 with 224514, two each 201014C and 201525E
224517	16502	Needle Bar and Needle Plate Carrier Frame Hinge Bearing, for 224537
224521	16511	Lifting Presser Foot
224522	16511	Vibrating Presser Foot with 201015F
224527	16511	Oil Leader (brass) (for back hook shaft bearing)
224530	-----	Feed Driving Connection Stud Oil Packing (wick), for 208539
224531	16503	Arm Cap with 244071, for 224532
224532	-----	Arm Cap and Spool Holder complete, Nos. 203090, 224531 and two 200585H
*224536	-----	Arm with 202135
*224537	-----	Bed with 224517 and three 200582H
224538	16503	" Slide (front)
224539	16503	Hook Shaft with 263139
224540	16504	Needle Bar and Needle Plate Carrier Frame with 200346C, 200997C and 208550
224541	-----	Needle Bar Oil Pad (felt)
224542	16513	Thread Guide
224549	16511	Throat Plate with 263145 and two 200136D
224572	13451	Take-up Lever Oiling Felt Rivet, for 208558
225381	10884	Bobbin Winder Spindle, for 225382
225382	10885	Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200299H, 202473, 202478, 225381, 225433, 225444, 225453 to 225456, 225458, 225462, 228026, two each 225459 and wood screws 3/4 in., No. 12, R. H. B.
225433	10885	Bobbin Winder and Tension Bracket Base, for 225382
225438	10884	Bobbin Winder Frame Oil Well Cap, for 225453
225444	10884	Bobbin Winder Stop Latch, for 225382 Nos. 225453 to 225456, for 225382
225453	10884	Bobbin Winder Frame with 202277 and 225438
225454	10884	Bobbin Winder Frame Hinge Pin
225455	10884	" " " Spring

NUMERICAL LIST OF PARTS

25


No.	Plate	Name
225456	10884	Bobbin Winder Frame Spring Plunger
225458	10884	" " Stop Latch Thumb Lever,for 225382
225459	10884	Bobbin Winder Stop Latch Thumb Lever Hinge Stud,for 225382
225459	10884	Bobbin Winder Stop Latch Thumb Lever Joint Stud,for 225382
225461	10881	Bobbin Winder Tension Bracket with 201499B,for 225462
225462	10881	Bobbin Winder Tension Bracket complete, Nos.201572B,202407,225461 and two 2102,for 225382
*225482	-----	Bobbin Case Screw Driver Blade,for 225497
*225483	-----	Bobbin Case Screw Driver Handle,for 225497
*225484	-----	Screw Driver Blade,for 225498
*225485	-----	" " Handle,for 225498
225497	14383	Bobbin Case Screw Driver complete,Nos. 225482 and 225483
225498	14383	Screw Driver complete (7-1/4 in.long) Nos.225484 and 225485
225554	14383	Wrench (steel)
225671	16514	Binder Ribbon Tension Pin,for 208324
227728	15911	Knee Lifter Rock Lever Rod with 227729, for 228298
*227729	-----	Knee Lifter Rock Lever Rod Cap,for 227728
228026	10884	Bobbin Winder Tension Bracket Screw Washer,for 225382
228220	-----	Drip Pan with four 1 in..wire nails
228284	15911	Knee Lifter Rock Lever Knee Plate,with 356C,for 228298
228294	15911	Knee Lifter Rock Lever with two 356C, for 228299
228295	15911	Knee Lifter Rock Lever Bracket with 356C and four wood screws 7/8 in. No.12,for 228299
228296	15911	Knee Lifter Rock Lever Extension with 200529C,for 228298
228297	15911	Knee Lifter Rock Lever Hinge Pin,for 228299
228298	15911	Knee Lifter Rock Lever complete ,Nos. 202455,227728,228284,228296 and 228299
228299	-----	Knee Lifter Rock Lever Bracket 228295 with 228294 and 228297,for 228298
233629	13451	Tension Release Slide
*240053	-----	Arm Shaft Bushing (back),for 240057
*240054	-----	" " Ball Bearing Collar with two 200378C,for 240055

NUMERICAL LIST OF PARTS

No.	Plate	Name
240055	16503	Arm Shaft Ball Bearing Collar 240054 with 249440, for 240057
*240056	-----	Arm Shaft Ball Bearing Retaining Washer, for 240057
240057	16503	Arm Shaft Bushing (back, ball bearing) complete, Nos. 240053, 240055 and 240056
241402	16501	Bobbin Case Cap with 200592C, 201016F and 263110, for 241403
241403	-----	Bobbin Case Cap complete, Nos. 200964C, 210736, 210914 and 241402, for 241404
241404	-----	Bobbin Case complete, Nos. 210846 and 241403, for 263147
244048	16513	Tension Disc (back), for 244062
244049	16513	" " (front), for 244062
244061	16513	" Release Washer, for 244062
244062	-----	Tension complete, Nos. 200625F, 201572B, 202407, 202410, 244048, 244049, 244061 and 263106
244063	16504	Balance Wheel (disc) (belt groove 2-1/8 in. diam.) with 200328C and 200335C
244071	-----	Arm Cap Oil Wick, for 224531
249440	16503	" Shaft Ball Bearing, for 240055
263029	16503	Hook Shaft Ball Bearing, for 263031
*263030	-----	" " " " Collar with two 200383C, for 263031
263031	16503	Hook Shaft Ball Bearing Collar 263030 with 263029
263032	16503	Hook Shaft Ball Bearing Retainer
263033	16503	" " Connection Belt Pulley with 202324 and two 201018C
263034	16502	Hook Washer Needle Guard, for 263141
263099	16501	Bobbin
263105	16504	Arm Shaft Connection Belt
263106	16513	Tension Spring Washer, for 244062
263110	16501	Bobbin Case Tension Spring, for 241402
263122	16502	Hook G1b, for 263141
263134	-----	" Oiling Felt, for 263140
263139	-----	" Shaft Oil Wick, for 224539
263140	-----	" with 263134 and two 462C, for 263141
263141	16502	" 263140 with 200145C, 200614C, 263034 263122 and two 200596F, for 263147
263145	16501	Bobbin Case Stop, for 224549
263146	16503	Hook Shaft Bushing (front) with 202423
263147	-----	Hook and Bobbin Case complete, Nos. 241404 and 263141
350401C	16502	Needle Bar and Needle Plate Carrier Frame Hinge Screw

PLATE 10881—FULL SIZE

225461

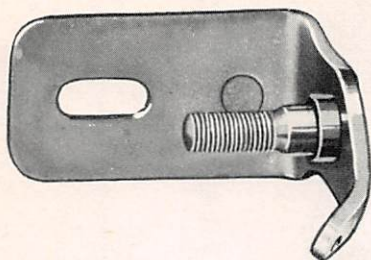

200082




202104



2102



225462

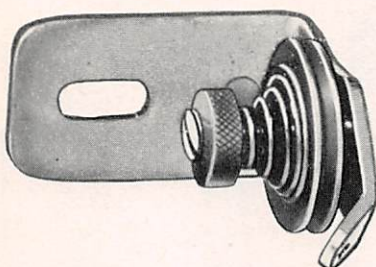

202407



201499



201572



PLATE 10884 - FULL SIZE


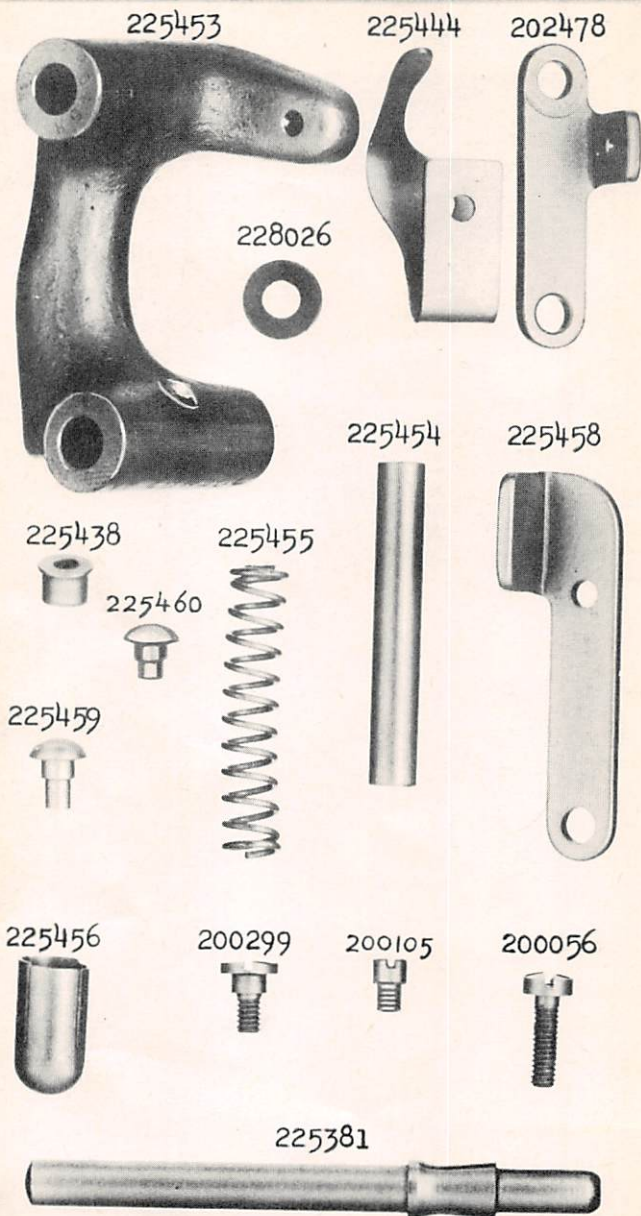


PLATE 10885—ONE-FOURTH SIZE

225433



202473

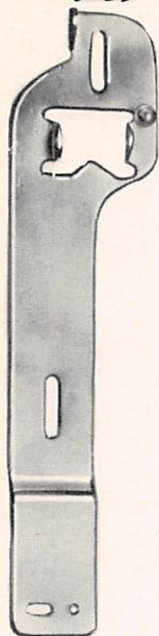

225382

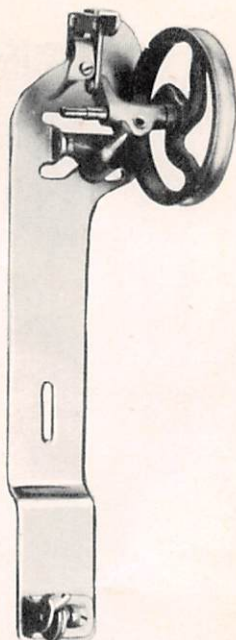


PLATE 11672 - FULL SIZE

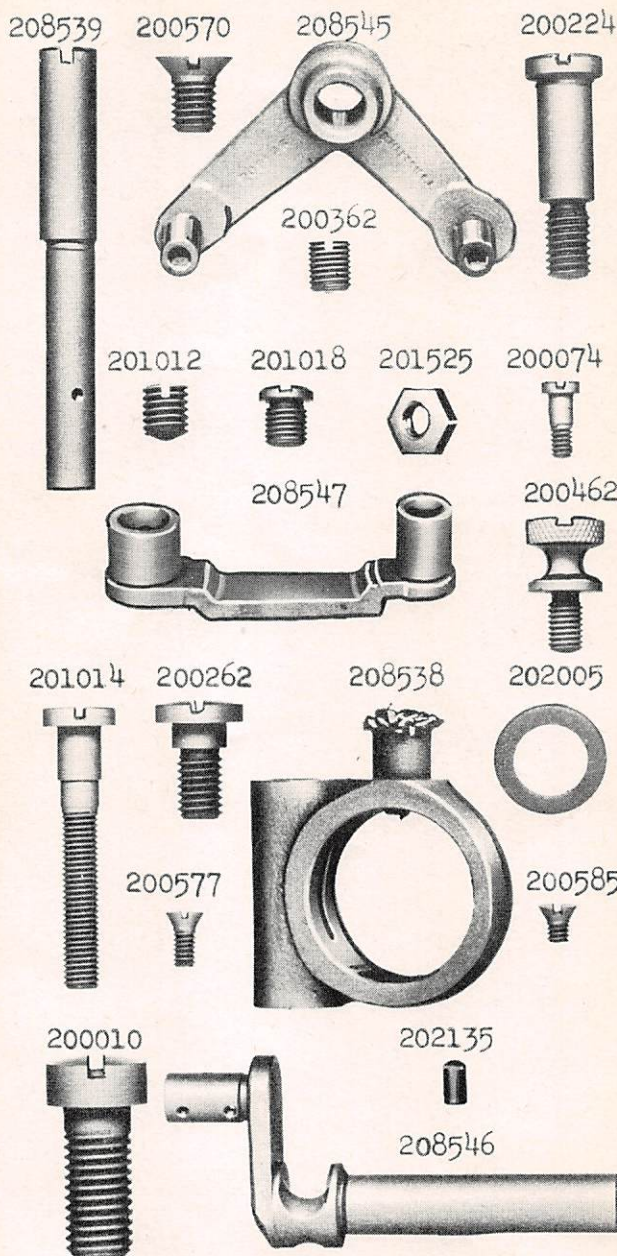


PLATE 13451—FULL SIZE

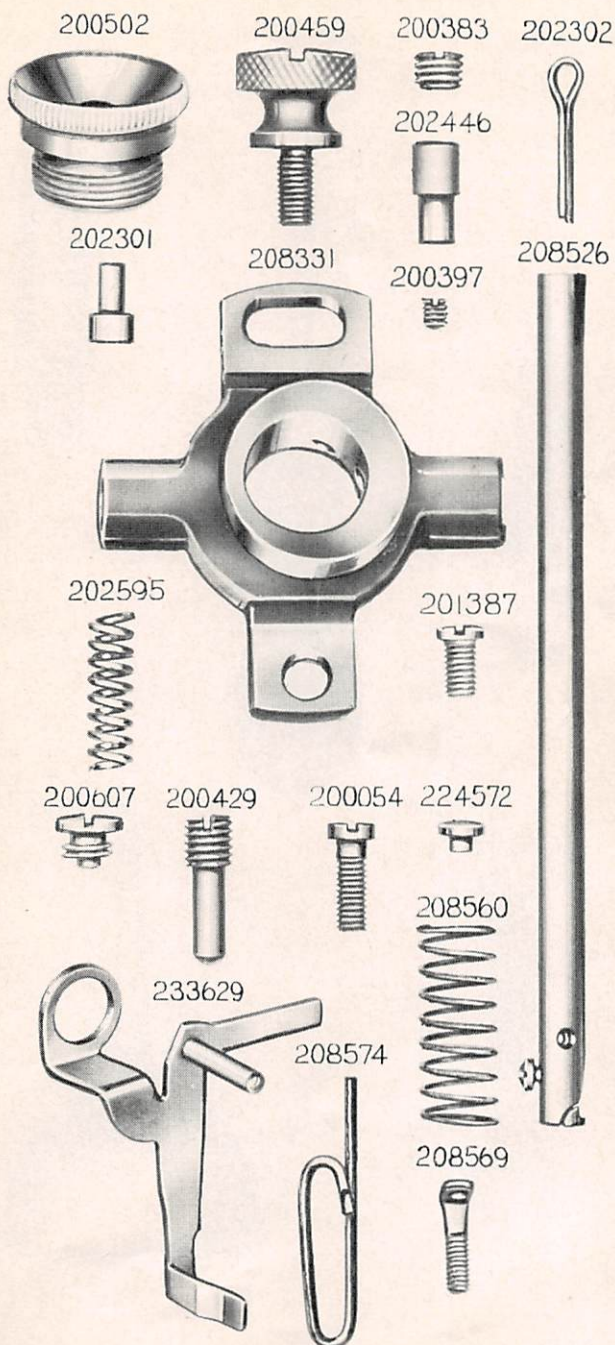


PLATE 14383 - ONE-HALF SIZE

225497



225498



41400



225554



120342

120343

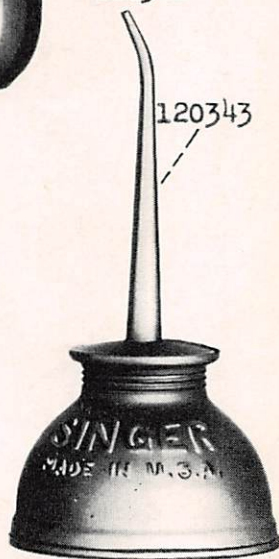


PLATE 15911-ONE-FOURTH SIZE

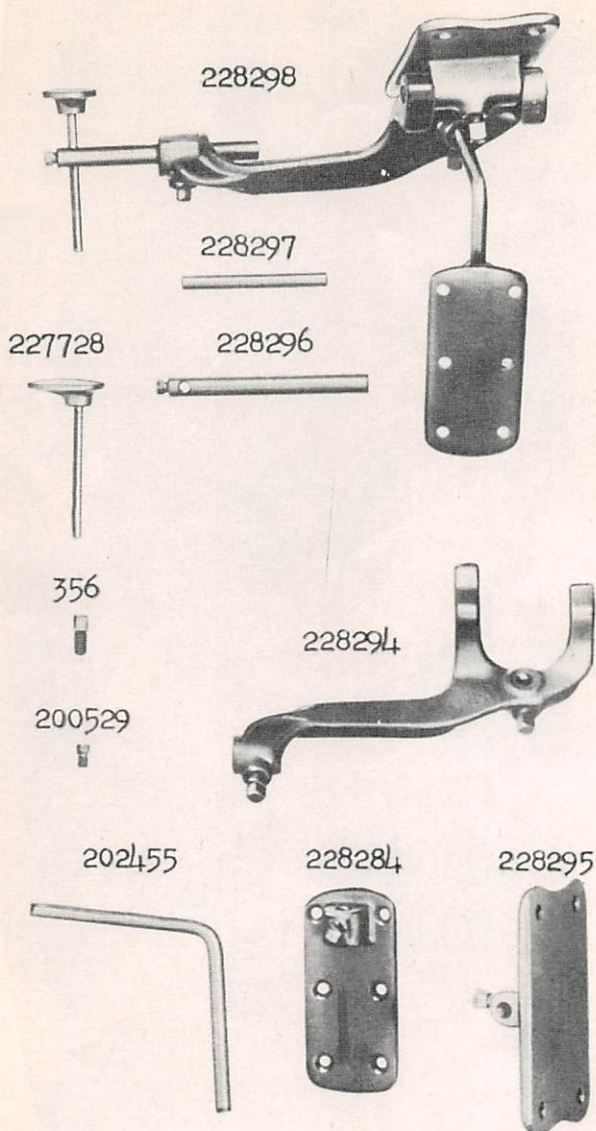


PLATE 16501 - FULL SIZE

200278



202248



200338



200335



200398



201016



263110




200592



200602



202253

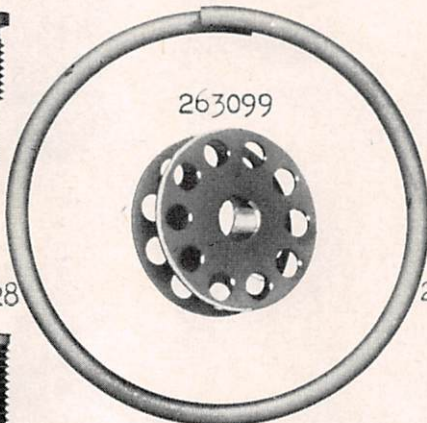

263099

200327




200328




204235



210846

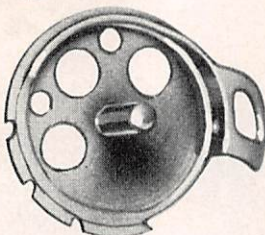

263145

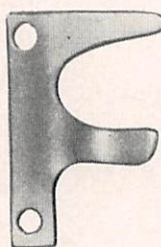

200079



200136




210913 210736




200964



241402

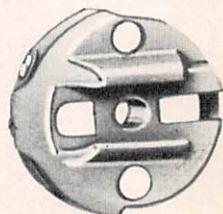

210734



210735



PLATE 16502 - FULL SIZE



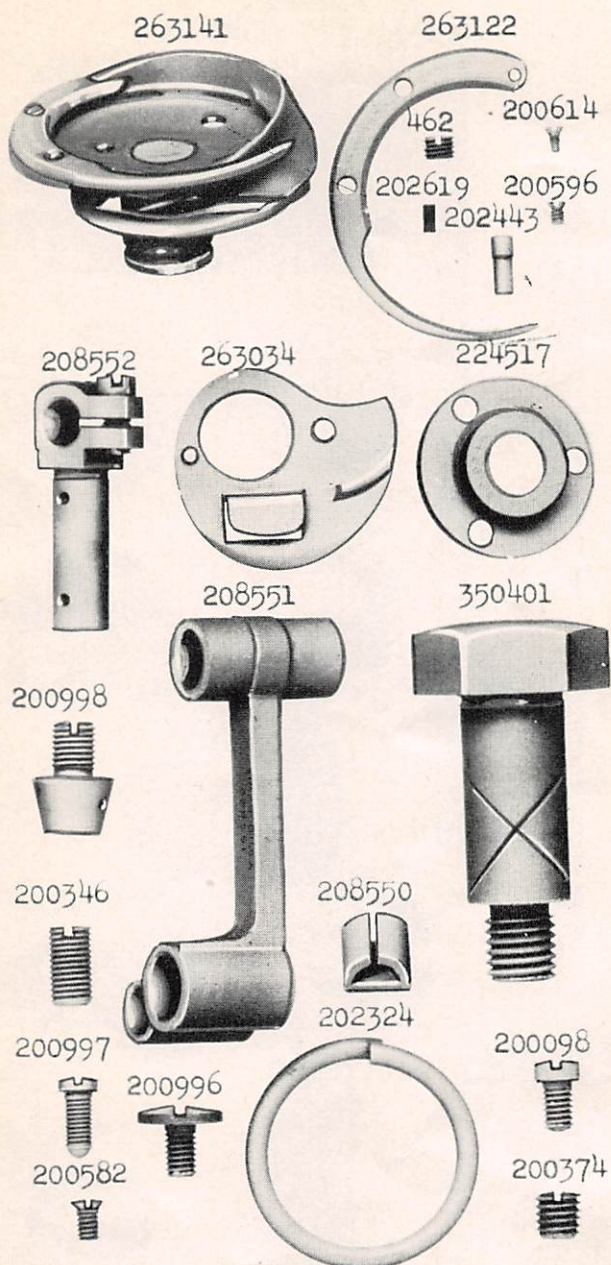


PLATE 16503 - ONE-HALF SIZE


224539 208566

224531

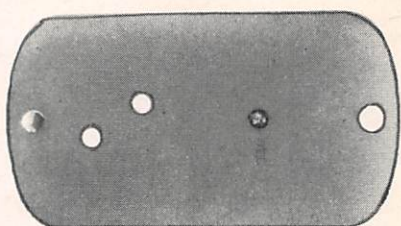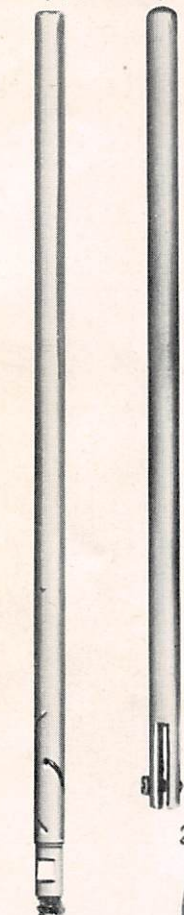



208573

263032

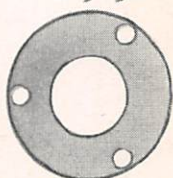

263033

202258

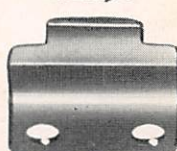
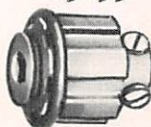


240057



263031

240055

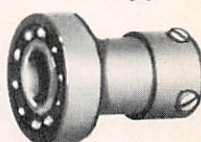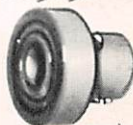

263146

224538



263029

249440

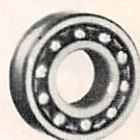


PLATE 16504 - ONE-FOURTH SIZE

208523




208592




263105



244063

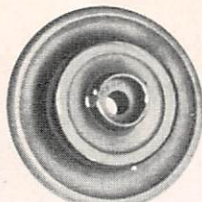

208535

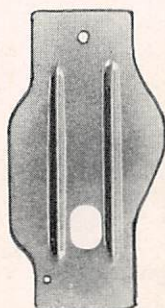

203090

204296



208570



224514



207080




203089

208553



224540

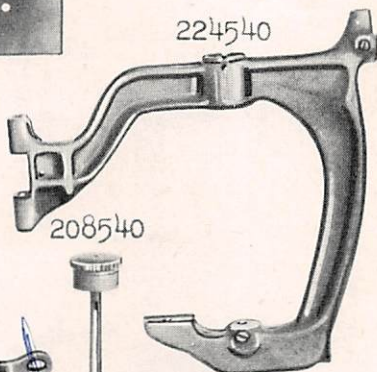

208540



208544



224512



PLATE 16511 - FULL SIZE


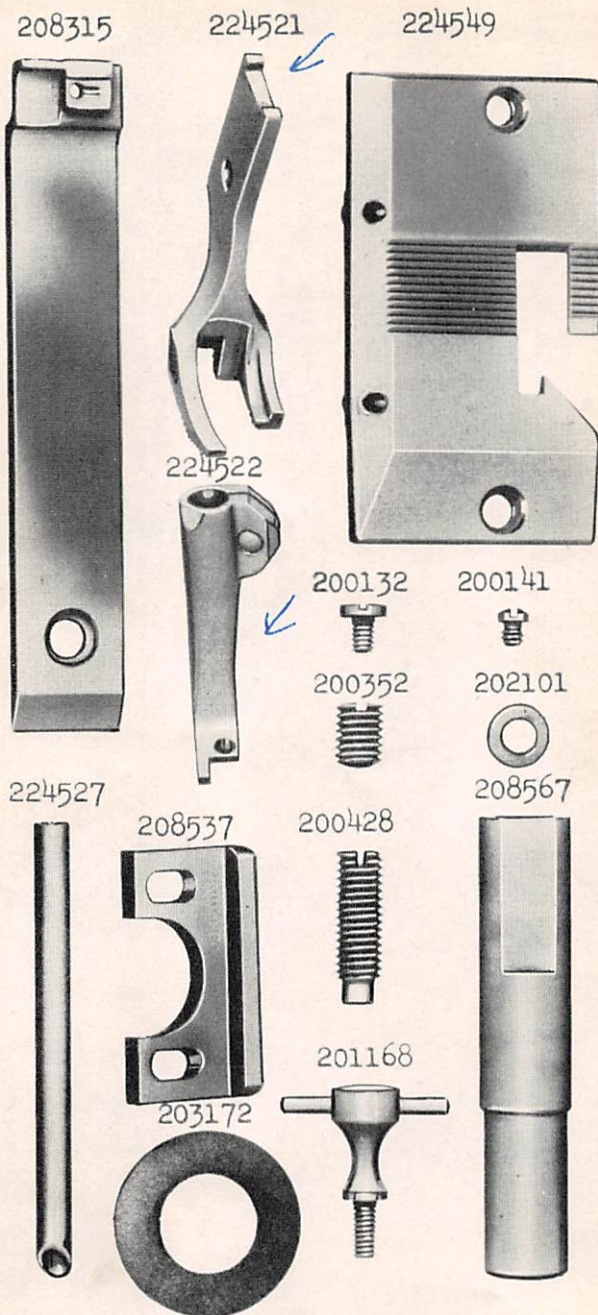


PLATE 16512 - FULL SIZE

208556




208558

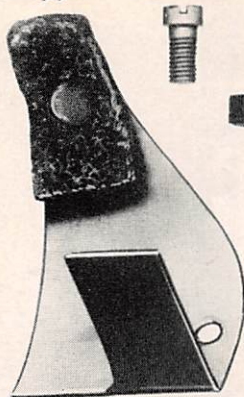

200086



208555

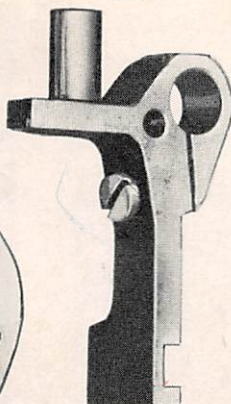

200975




208568




202397



200653



202398

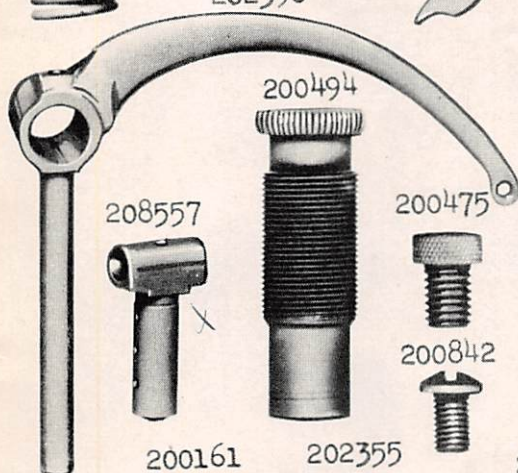

208313



200494



208557



200475



200842



200161



202355



200366



PLATE 16513 - FULL SIZE

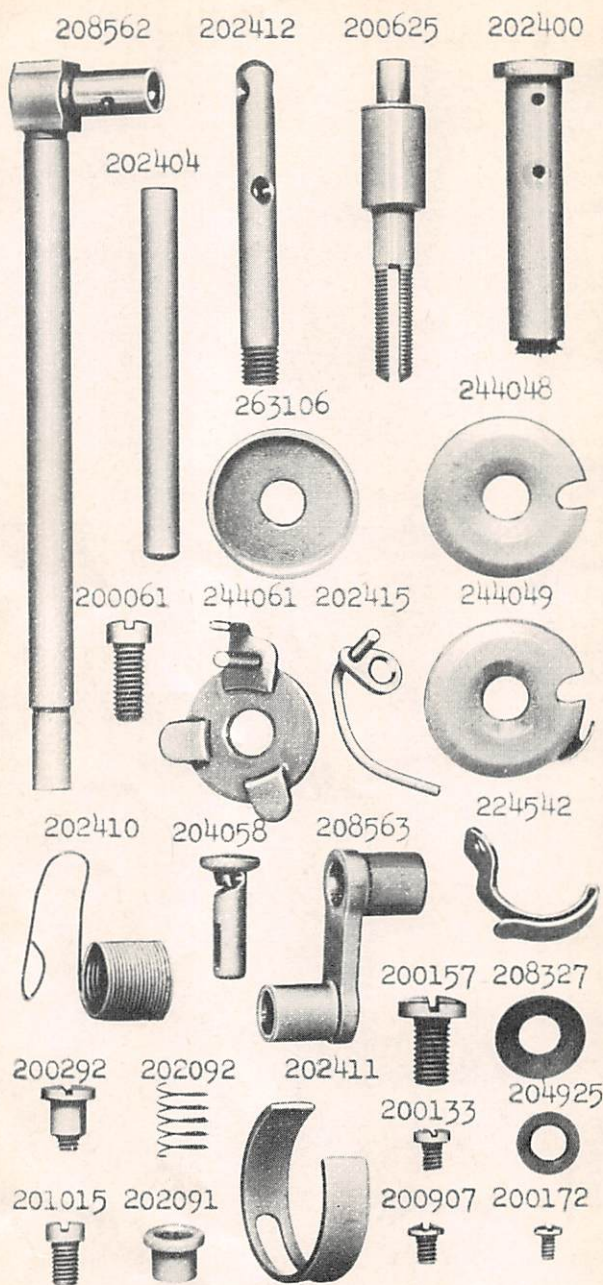


PLATE 16514 - ONE-HALF SIZE


208326



208305



208318




208329




225671



208324

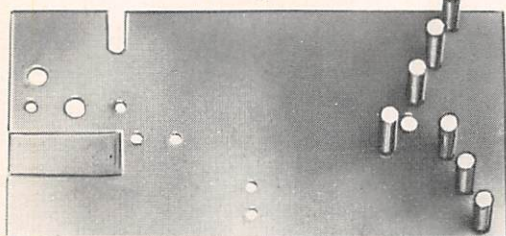

208306

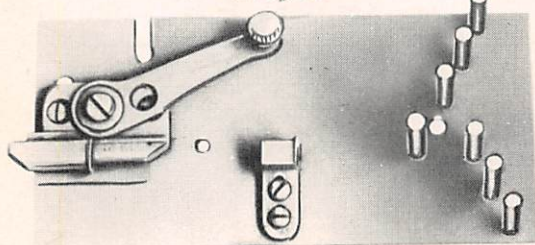

SINGER Needles should be used
in **SINGER** Machines
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO.**" 1

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. 2

