

ILLUSTRATED
LIST OF PARTS
FOR
Nos. 191K1 to 191K3
MACHINES



** A Trade Mark of THE SINGER MANUFACTURING CO.

July, 1960

FORM K6281

(List of Parts for 191K1 to 191K3 Machines)

ALTERATIONS

Page 28.—

51354zb Alter to 140991zb and delete plate
32630 " " 173615 " " "

Page 34 and Numerical.—

15072 Delete
125068 " with 15072
193r Alter to 193zb

Page 35.—

86642 Alter to 86742
25537 " " 161294
120378 " " 161295 and add (120378 will be supplied until stock is exhausted)

Page 35 and Numerical.—

161324 Delete 25537, 86642, 120378 and after 50053b insert 86742, 161294 and 161295
161325 Delete 25537, 86642, 120378 and after 50053b insert 86742, 161294 and 161295

Page 39 and Numerical.—

94028 Delete (wood)
94031a Alter to 94031za
94033b " " 94033zb
94034 " 94031a to 94031za
94051 " 94033b to 94033zb
399a " to 399za
94052 " SS566c to SS566cr and 399a to 399za
SS566c " to SS566cr

Numerical.—

1130e (Thread Take-up Lever Cap Screw) Delete
1130e (Thread Take-up Lever Link Hinge Stud Cap Screw) Alter 173564 to 173566
25537 No. Cancelled, order 161294
32630 " " " 173615
32755 Add 173615

July, 1960

Sheet 1—Three Sheets

FORM K6381

(List of Parts for 191K1 to 191K3 Machines)

ALTERATIONS

Page 28.	51351xb After to 140991xb and delete plate	32630 " " 173815 " " "
Page 34 and Numerical—		
15072 Delete		
15008 " with 15072		
1937 After to 193xb		
Page 35.—		
88842 After to 88742		
32537 " " 181294		
150378 " " 181295 and add 150378 will be supplied until stock is expanded)		
Page 35 and Numerical—		
181327 Delete 25537, 88842, 150378 and after 50033b insert 88742, 181294 and 181295		
181327 Delete 25537, 88842, 150378 and after 50033b insert 88742, 181294 and 181295		
Page 39 and Numerical—		
94038 Delete (wood)		
94031a After to 94031a		
94033b " " 94033xb		
94034 " 94031a to 94031xb		
94051 " 94033b to 94033xb		
399a " to 399xb		
94052 " 22588c to 22588c and 399a to 399xb		
22588c " to 22588c		
Numerical—		
11306 (Thread Take-up Lever Cap Screw) Delete		
11306 (Thread Take-up Lever Link Hinge Stud Cap Screw) After 17386d to 17386e		
25537 No. Cancelled, order 181294		
32630 " " 173815		
32755 Add 173815		

Sheet 2—Three Sheets

Form K6281—continued.

Numerical.—

51354zb	Delete
86642	No. Cancelled, order 86742
120378	" " " 161295
173616	Alter 32630 to 173615

ADDITIONS

NUMERICAL SECTION

86742	2574	Ruffler for 161324 and 161325	...	...
140991zb	—	Face Plate Screw	...	...
161294	2574	Screw Driver (machine) for 161324 and 161325	...	...
161295	2574	Screw Driver (bobbin case) for 161324 and 161325	...	...
173615	—	Face Plate Thread Guard 32755 with 173616	(for agents only)	

Form K6281—continued.

Numerical—


513545b Delete
80842 No. Cancelled, order 80742
120378 " " 161395
173616 After 32630 to 173615

ADDITIONS


NUMERICAL SECTION

80742	3274	Router for 161324 and 161325	...
140901xb	—	Face Plate Screw	...
161294	3274	Screw Driver (machine) for 161324 and 161325	...
161295	3274	Screw Driver (bobbin case) for 161324 and 161325	...
173616	—	Face Plate Thread Guard 32735 with 173616 (for agents only)	...

INSERT in FORM K6281 (List of Parts for 191K1 to 191K3 Machines)
in place of PLATE 2574

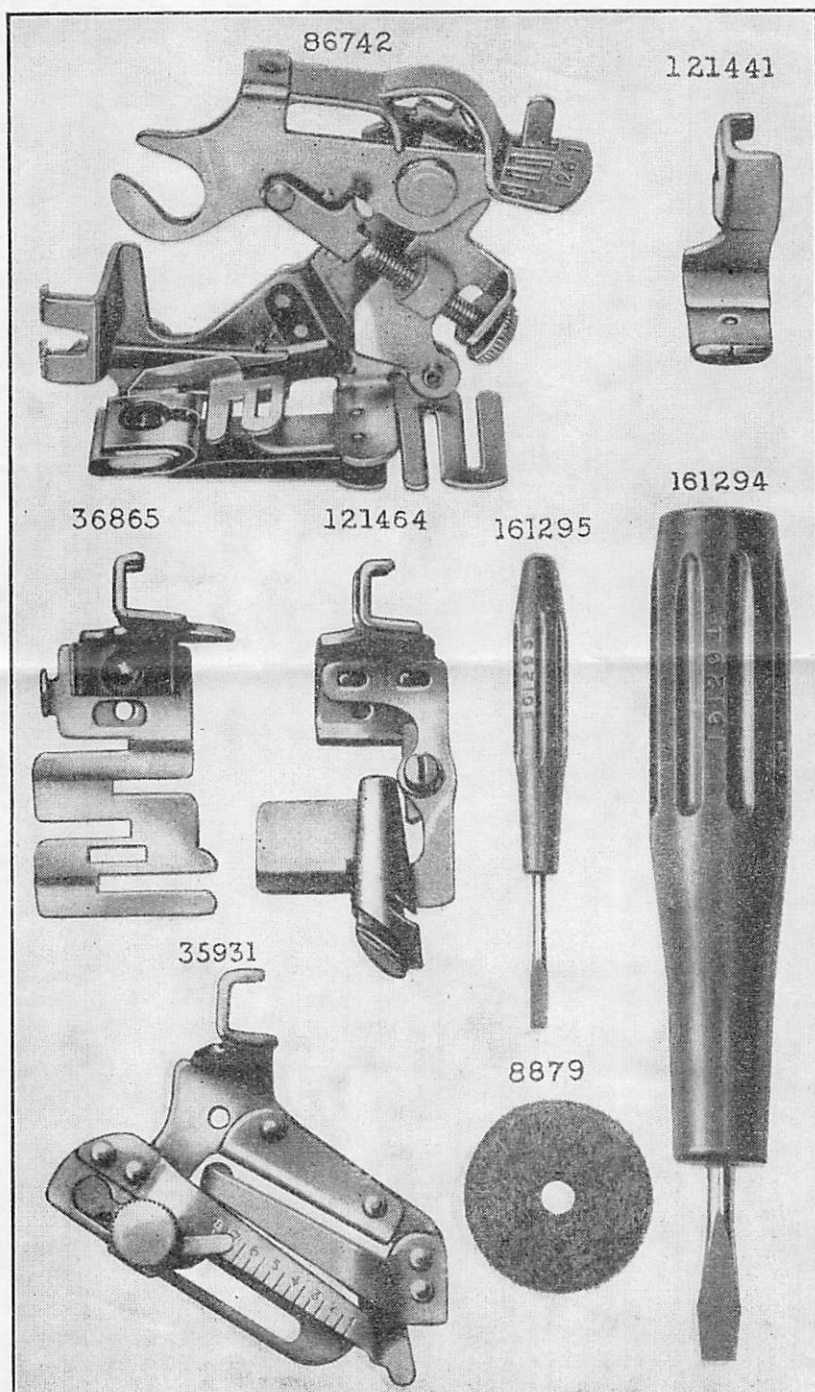

INSERT in FORM K6281 (List of Parts for 191K1 to 191K3 Machines)
in place of PLATE 3574

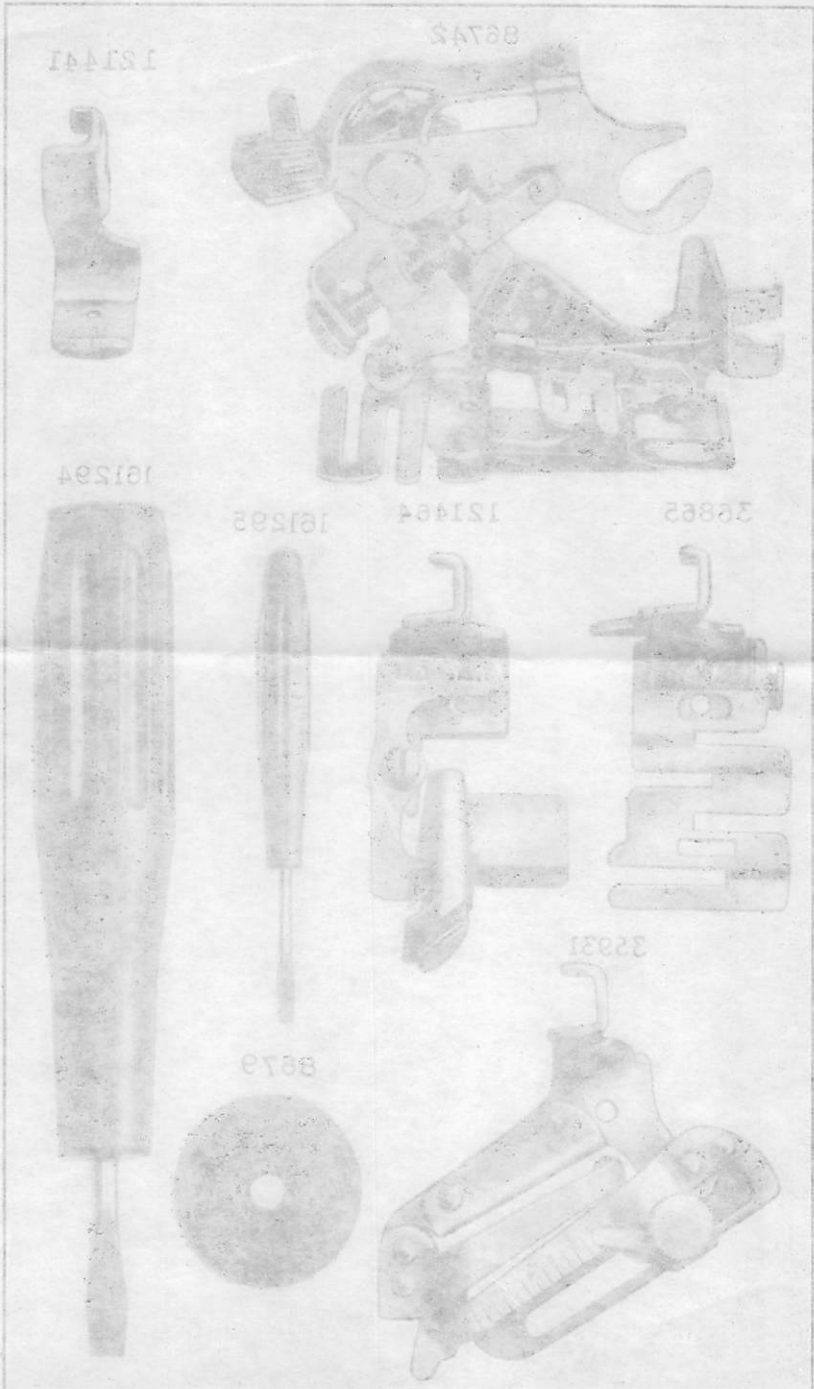

March, 1958

FORM K6281

(List of Parts for 191K1 to 191K3 Machines)

ALTERATIONS

Page 9.—

Plate 2719 Alter 161129 to 161122

Page 17.—

Plate 26002 Alter 51354zj to 51354zb

Page 18.—

Plate 26007 Alter 125415 to 125421

Page 28 and Numerical.—

173504 Alter to 173504zb

173505 " " 173505zb, 173504 to 173504zb, and add for Black
Machines

51354j " " 51354zb

Page 28.—

51224w Alter to 50684zb, and delete plate

Page 30.—

1239al Alter to 1293al

Page 32.—

125415 Alter to †125421

Page 32 and Numerical.—

173552 Alter 125415 to 125421

Page 34.—

158j Insert quantity (2)

Page 34 and Numerical.—

2007 Delete

Numerical.—

51224w Delete

125415 Obsolete, use 125421

ADDITION

NUMERICAL SECTION

50684zb	—	Face Plate Thumb Screw	...	...
†125421	26007	Tension Indicator for 173552	...	...

March, 1958

FORM K6281

(List of Parts for 191K1 to 191K3 Machines)

ALTERATIONS

Page 9.—

Plate 2719 Alter 161129 to 161123

Page 17.—

Plate 26002 Alter 21354x to 21354xb

Page 18.—

Plate 26007 Alter 125415 to 125421

Page 28 and Numerical.—

173504 Alter to 173504xb

173505 " " 173505xb, 173504 to 173504xb, and add for Black

Machines

21354j " " 21354xb

Page 28.—

21354w Alter to 20084xb and delete plate

Page 30.—

12394j Alter to 12934j

Page 32.—

125415 Alter to 1135421

Page 33 and Numerical.—

173522 Alter 125415 to 125421

Page 34.—

128j Insert quantity (2)

Page 34 and Numerical.—

2007 Delete

Numerical.—

21234w Delete

125415 Obsolete, use 125421


ADDITION

NUMERICAL SECTION


20084xb — Face Plate Thumb Screw

1125421 26007 Tension Indicator for 173522


121170

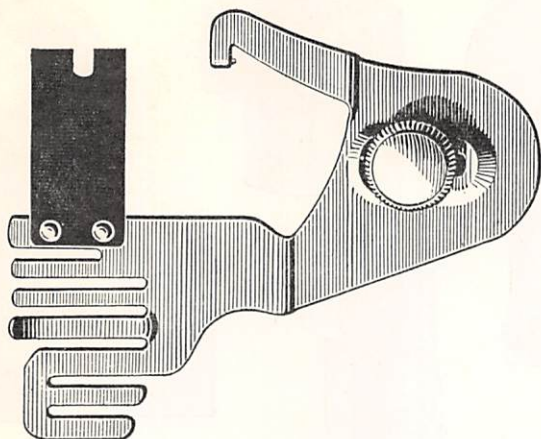


121547

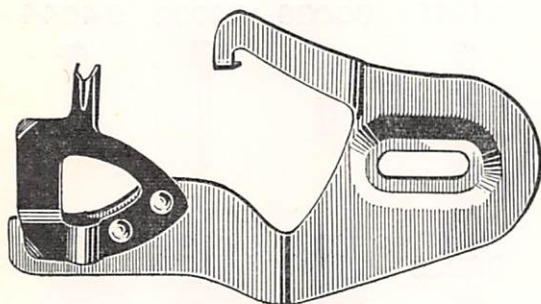


94028

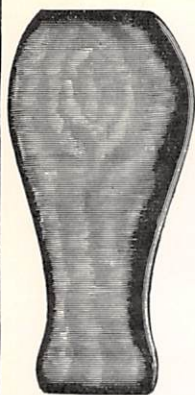


94048

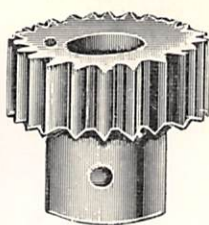


94046

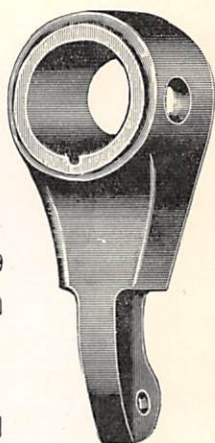

94036

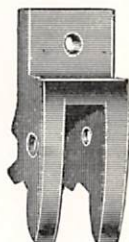

94039



94029



94069



80028



94032



94044



55531



94038



94037



94033



94030



183




94040



SS599



SS600

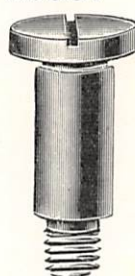

SS566



399




SS565



SS567




94050

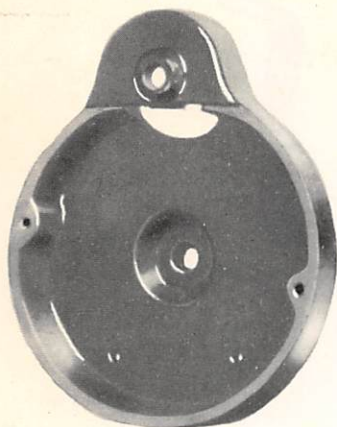

94031




94051

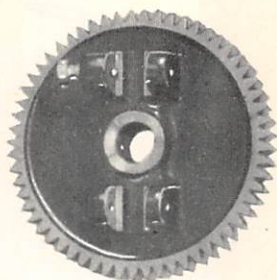


94027




94052

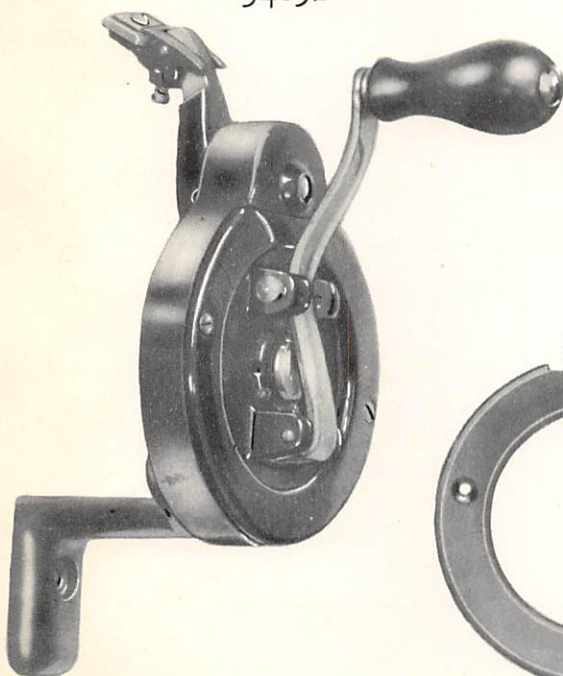

94016

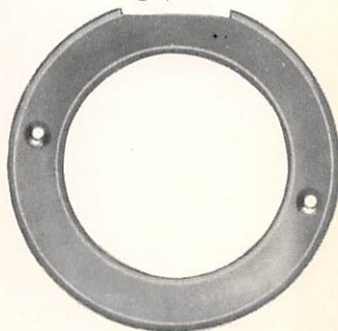

SS 528



96425



96426



96844



96427




96845



NW95




86642

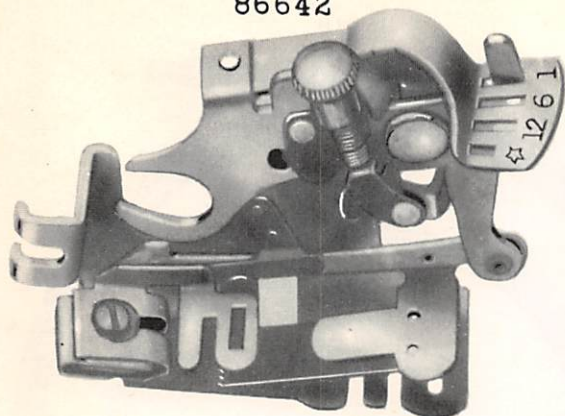


121441




25537

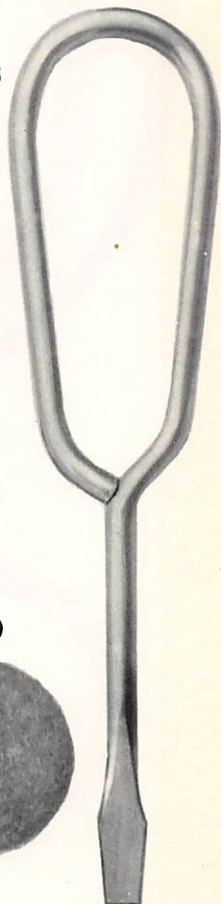

36865

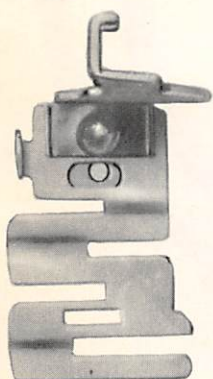


121464

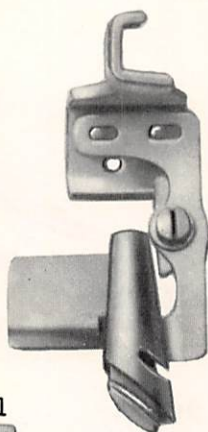

120378



35931

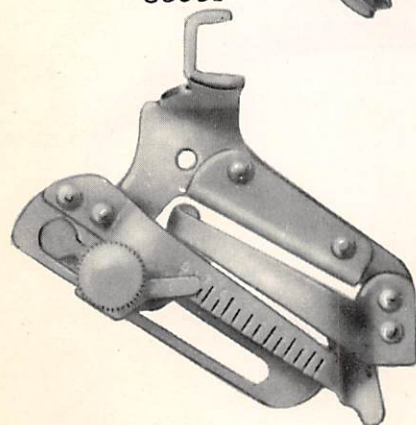


8879




96418



87589

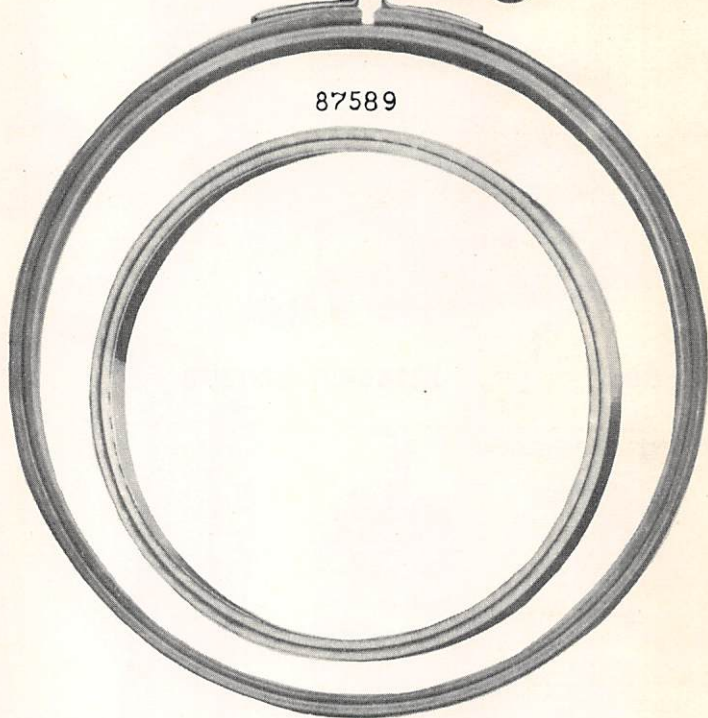


96422

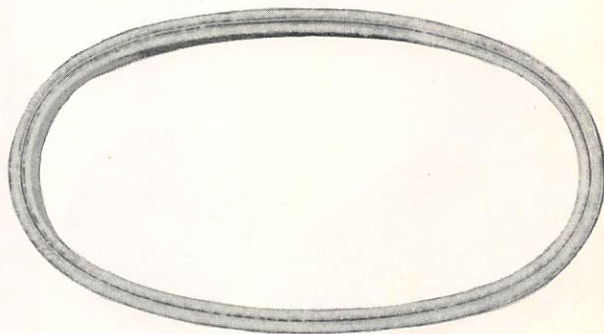

161127

140728

161129

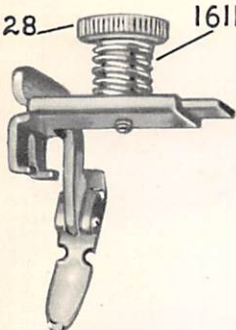


160846



160845



121094

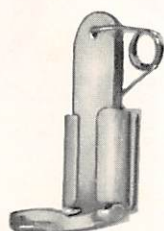


25539



25525




25527

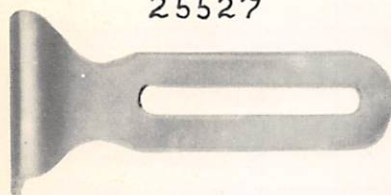


50053



35932

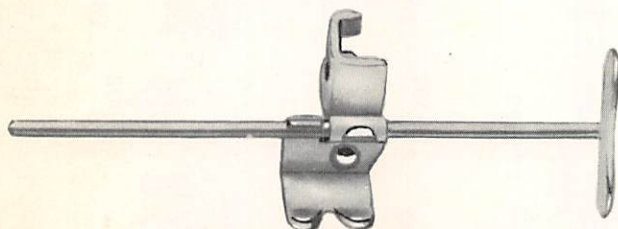

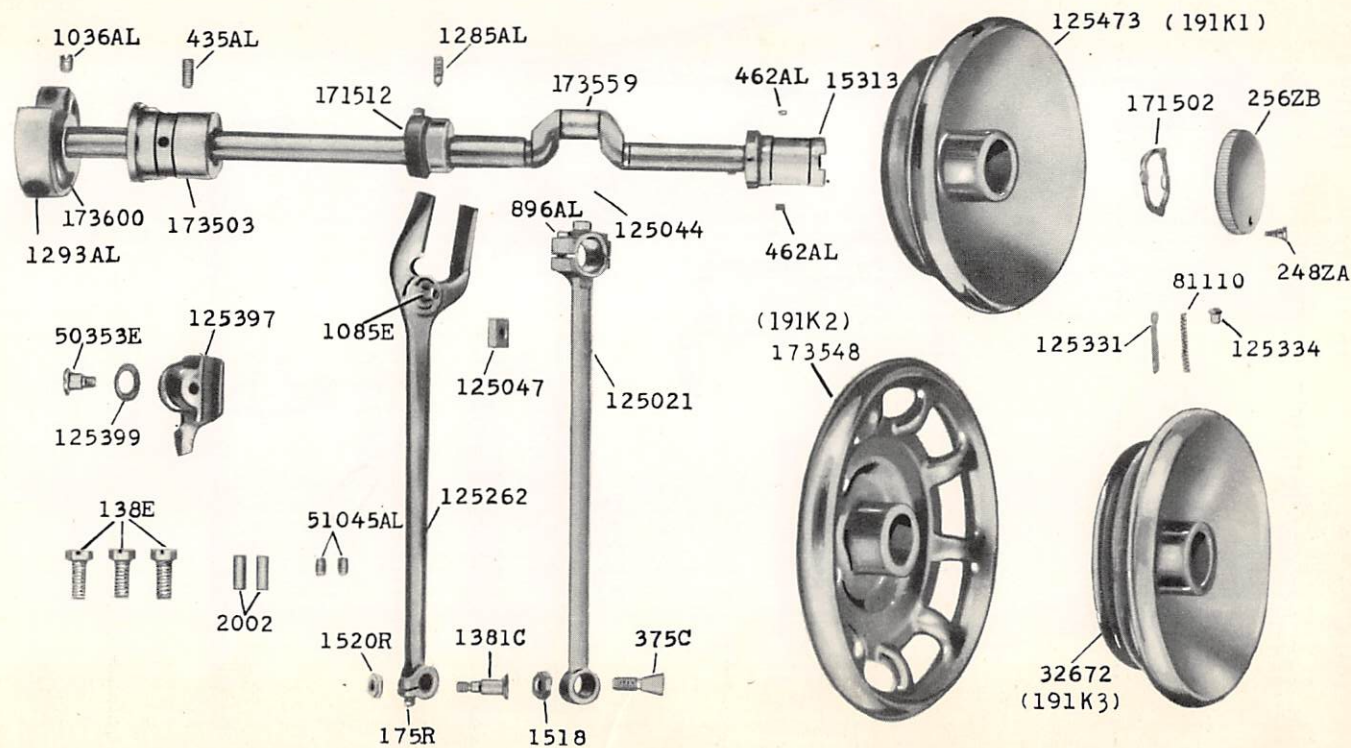


51224ZB



45321



125113

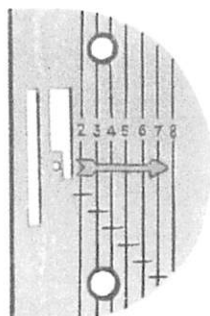

15279



208AL

691BB




125338


125337




51282BA





125336

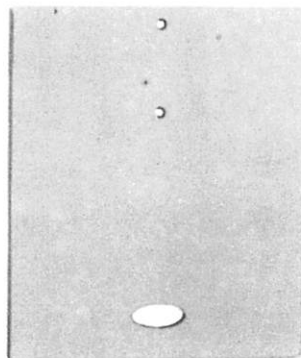

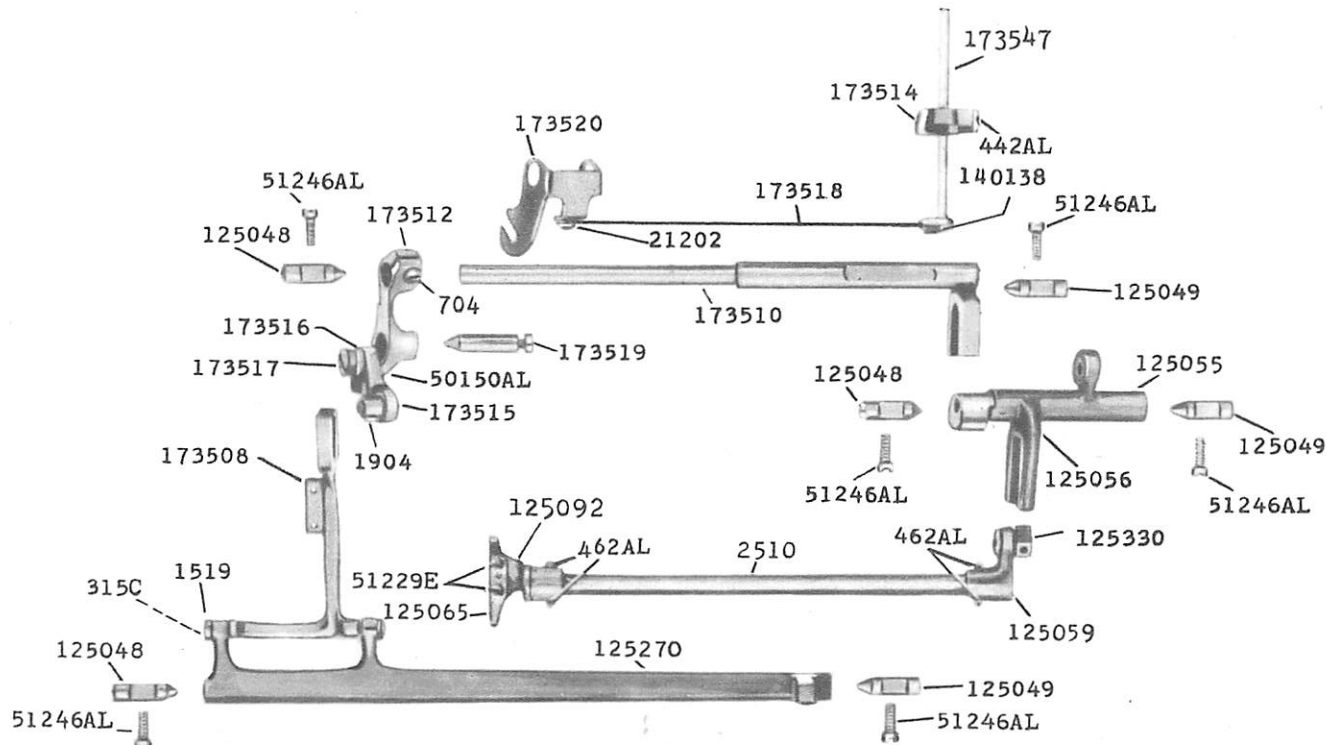

From the library of: Superior Sewing Machine & Supply LLC

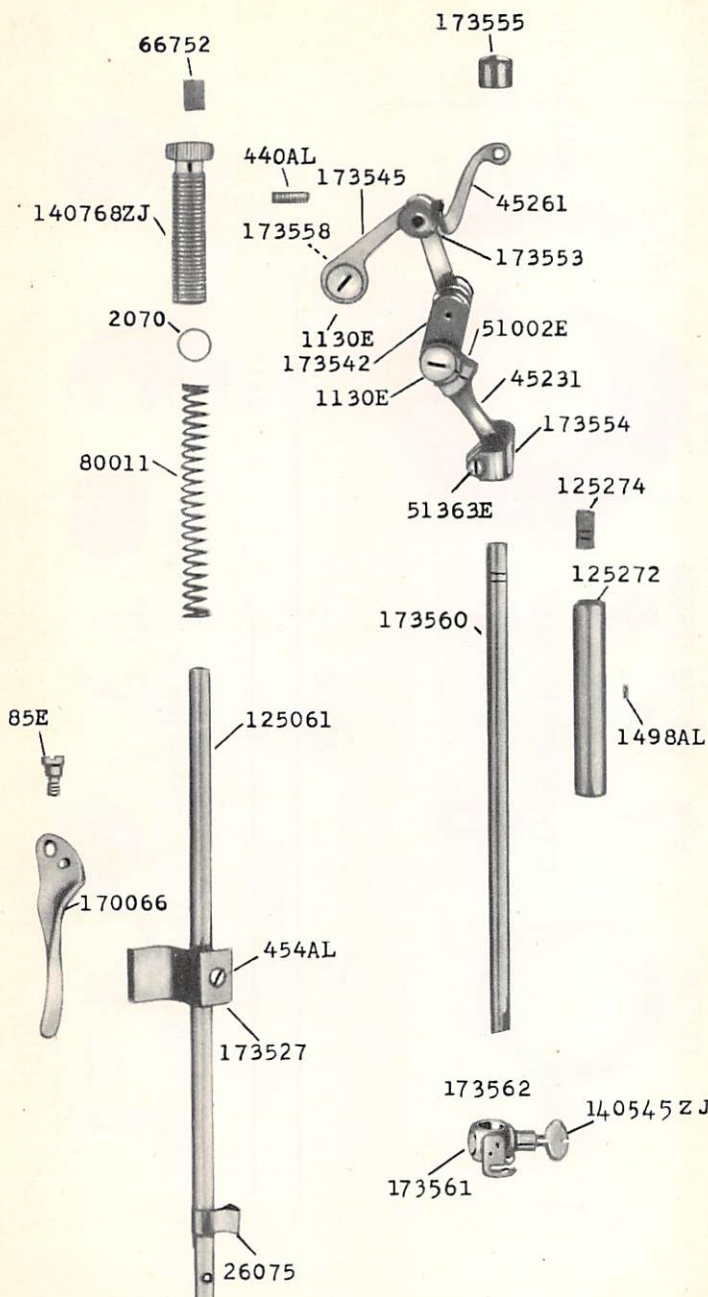

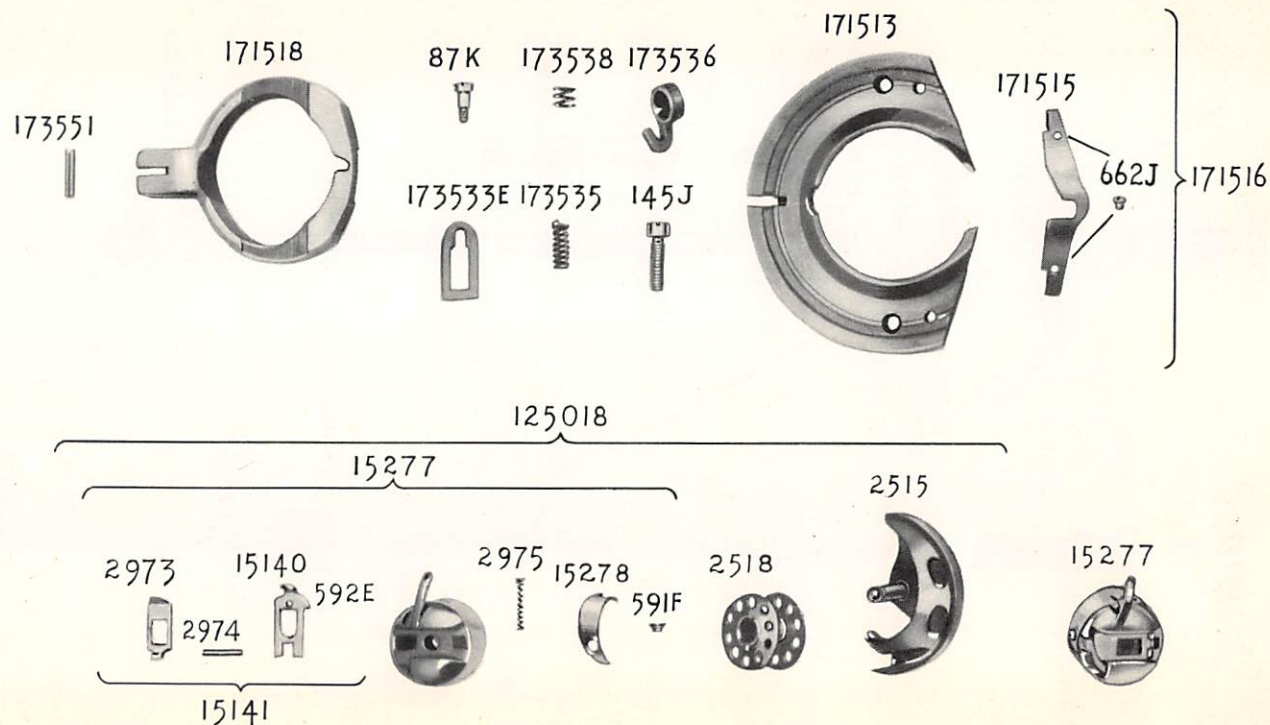

120842



120914




85893




36583



120687

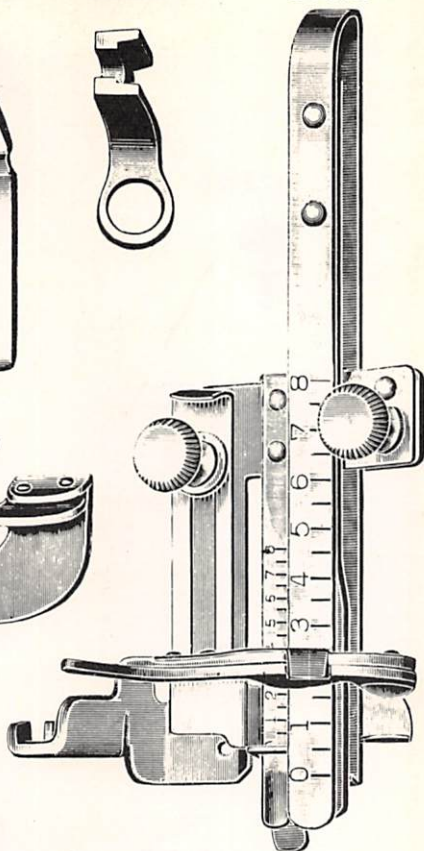

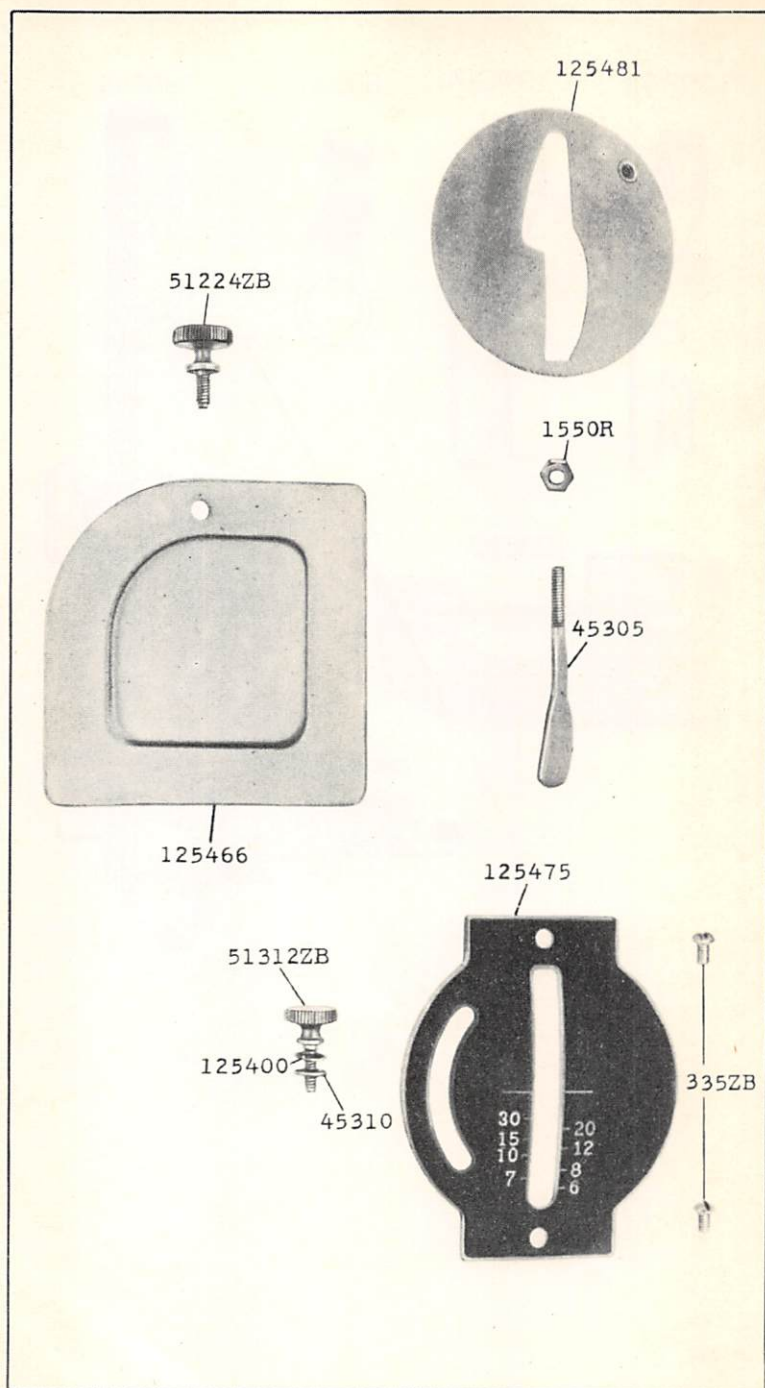

173573


51354ZJ





173572

32630

51224ZB

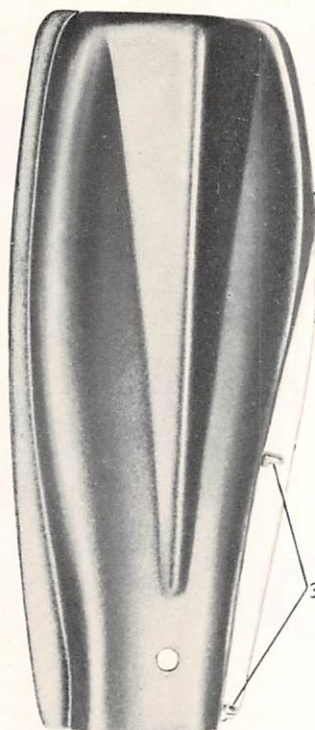

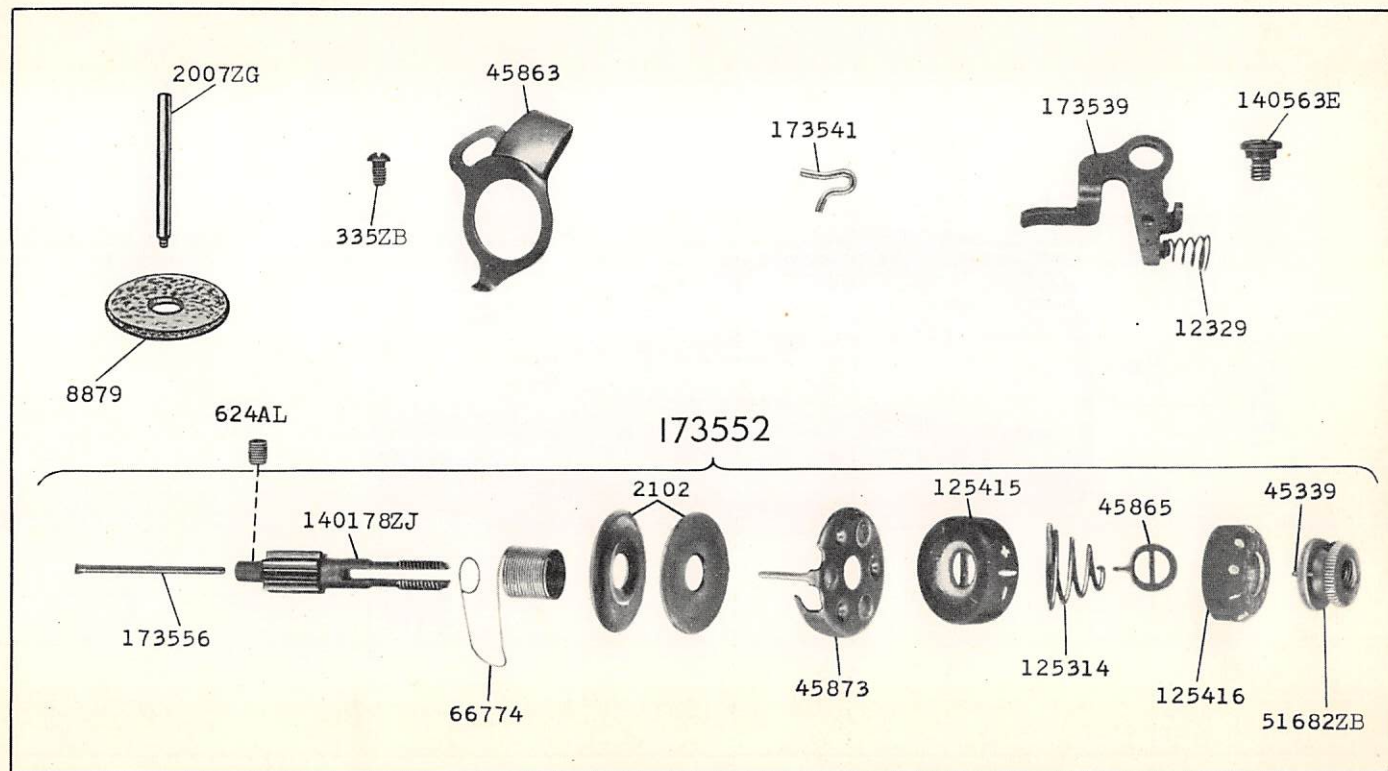

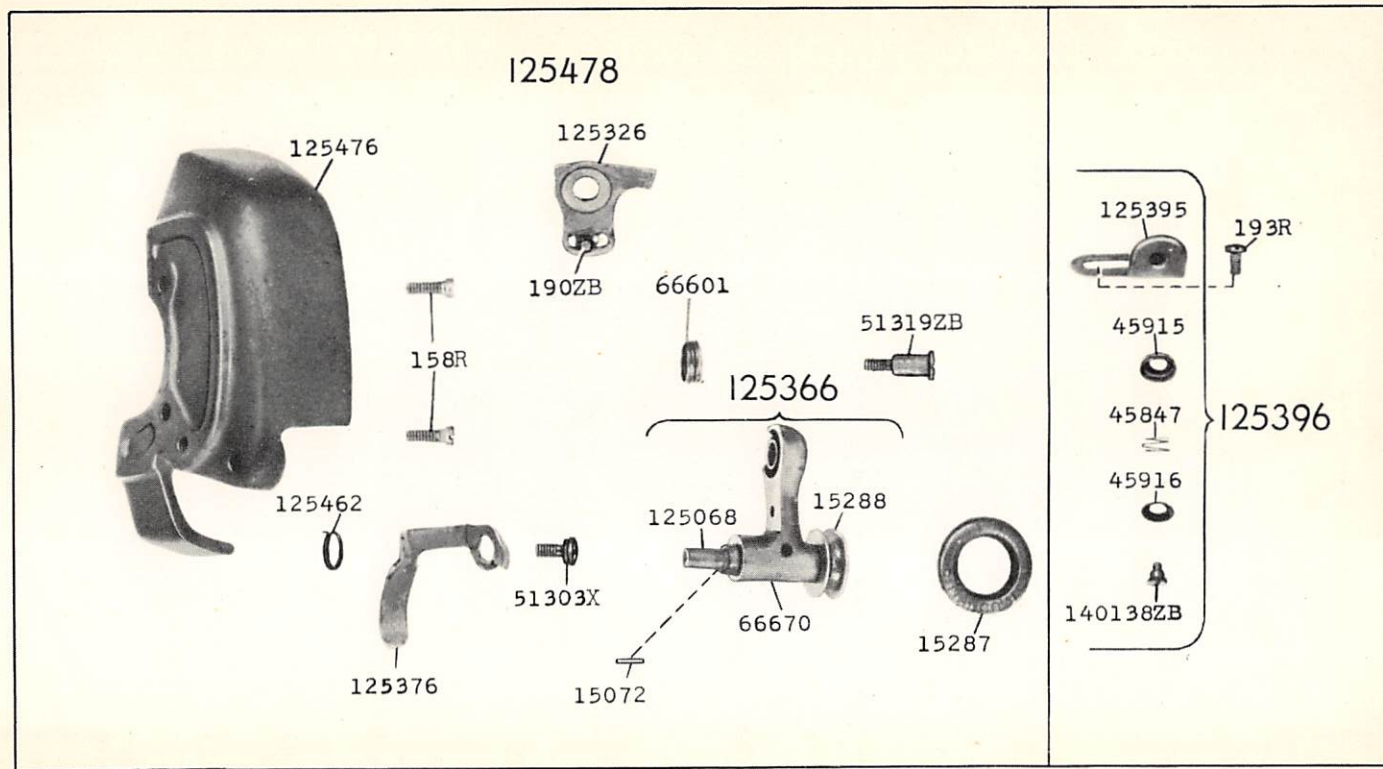

LIST OF PARTS
FOR
191K1 to 191K3 Machines

CONTENTS

	Page
Parts complete for 191K1 to 191K3 Machines 	27
Attachments 	35
Bobbin Winder 	34
Embroidery Hoops 	37
Hand Attachment 	39
Numerical List of Parts 	41

INSTRUCTIONS FOR ORDERING

In ordering from this List, the prefix and affix letters with the part number MUST BE quoted exactly as they are shown in the first column.

A number always indicates the same part in whatever List it may appear, or for whatever machine.

The affix letters (where shown) indicate the style of finish, as follows:—

- A. Hardened, Polished, Nickel Plated and Buffed.
- B. Polished, Nickel Plated and Buffed.
- C. Hardened only.
- D. Polished only.
- E. Soft, Not Polished.
- F. Hardened and Polished.
- G. Bright Rumbled and Nickel Plated.
- H. Blued.
- J. Nickel Plated only.
- K. Hardened and Nickel Plated.
- L. Brass Plated.
- M. Oxidized.
- R. Phosphate Coating Formed on Surface of Iron or Steel.
- S. Cadmium Plated.
- T. Copper Plated.
- U. Zinc Plated.
- V. Silver Plated.
- W. Polished and Nickel Plated.
- X. Black Oxide for Iron and Steel.
- Y. Black Nickel Plated only.
- Z. Chromium Plated.
- A.A. Buffed and Chromium Plated.
- A.B. Hardened, Polished, Buffed and Chromium Plated.
- A.E. Hardened, Bright Rumbled and Nickel Plated.
- A.F. Hardened, Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated.
- A.G. Alumilite (Plain).
- A.H. Alumilite (Dyed). Colour must be stated.
- A.J. Polished, Nickel Plated and Chromium Plated.
- A.K. Hardened, Polished, Nickel Plated and Chromium Plated.
- A.L. Heat Treated for Toughness.
- A.L.D. Heat Treated for Toughness and Polished.
- A.L.X. Heat Treated for Toughness and Black Oxide.
- A.S. Black Moulded Phenolic.
- A.T. Beige Moulded Phenolic.
- A.U. Brown Moulded Phenolic.
- A.W. Hardened then Flame Coated with Tungsten Carbide.
- B.A. Chrome Nickel, Satin Finish.
- B.B. Hardened and Chrome Nickel, Satin Finish.
- C.R. Hardened and Phosphate Coating Formed on Surface of Steel.
- C.U. Hardened and Zinc Plated.
- F.J. Hardened, Polished and Nickel Plated.
- T.A. Hardened, Polished, Copper and Nickel Plated and Buffed.
- T.B. Copper and Nickel Plated and Polished.
- T.J. Copper and Nickel Plated only.
- T.K. Hardened, Copper and Nickel Plated.
- T.L. Copper and Brass Plated.
- T.M. Copper Plated and Oxidized.
- X.C. Hardened and Black Oxide for Iron and Steel.
- Z.A. Hardened, Polished, Nickel Plated, Buffed and Chromium Plated.
- Z.B. Polished, Nickel Plated, Buffed and Chromium Plated.
- Z.C. Hardened and Chromium Plated.
- Z.D. Polished and Chromium Plated.
- Z.G. Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated.
- Z.J. Nickel and Chromium Plated.
- Z.T. Copper and Chromium Plated.

Parts marked with an asterisk () are furnished only when the repairs are made at Factory.*

PARTS COMPLETE

FOR

Nos. 191K1 to 191K3 MACHINES

**Lock Stitch, C.B. Oscillating Shuttle, Reversible Feed, Link Take-up,
Feed Throw-out Device for Darning and Embroidery for Family Use.**

No.	Plate								
*173601	—	Arm	...	...	...	...	...	...	...

NOTE.—Arm cannot be supplied separately and can only be sent as a unit, Arm and Bed assembled.

173501	—	Arm and Bed , complete, Nos. 81110, 125331, 125334 and four 1405431							
2002	2816	Arm	Dowel Pin (2)	...	...	...	...	...	...
125331	2816	"	Oil Pad (felt), for oiling Arm Shaft Back Bearing	...					
81110	2816	"	" " Spring	...	...	...	...	...	...
125334	2816	"	" " " Cap	...	...	...	...	...	...
138e	2816	"	Screw (3)	...	...	...	...	...	...
173603	—	"	Shaft	...	...	...	...	...	...
173559	2816	"	" 173603 with 171509, 171512, 173503 and 173600	...					
173503	2816	"	Bushing	...	...	...	...	...	...
435al	2816	"	" " Set Screw	...	...	...	...	...	...
171509	—	"	" Counterbalance with 1285al	...	...	...	...	...	...
1285al	2816	"	" " Position Screw	...	...	...	...	...	...
125466	26001	"	Side Cover	...	...	...	...	...	...

NOTE.—In ordering it is necessary to state Colour of Machine.

51224zb	26001	Arm	Side Cover Thumb Screw	...	...	...	...	...	...
2007zg	26007	"	Spool Pin	...	...	...	...	...	...
*173602	—	Bed	...	...	...	...	...	...	...

NOTE.—Bed cannot be supplied separately and can only be sent as a unit, Arm and Bed assembled.

256zb	2816	Clamp Stop Motion Clamp Screw			...	...	...	...	...
248za	2816	"	" " " Stop Screw	...	...	...	...	...	...
171502	2816	"	" " " Washer	...	...	...	...	...	...
*15312	—	"	" " " Flanged Bushing	...	...	...	...	...	...
15313	26000	"	" " " " 15312 with two 462al	...	...	...	...	...	...
2022	—	"	" " " " Pin	...	...	...	...	...	...
462al	2816	"	" " " " Set Screw	...	...	...	...	...	...
15314	—	Clamp Stop Motion , complete, Nos. 248za, 256zb, 15313 and 171502 (for Agents only)							

No.	Plate							
125021	2816	Crank Connecting Rod with 125044 and two 896al						...
896al	2816	" " " Cap Screw			...	...		...
375c	2816	" " " Hinge Screw			...	...		...
1518r	2816	" " " " Nut			...	...		...
125044	2816	" " " Oil Pad (felt)			...	...		...
173504	—	Face Plate for 173505	...	...	...	...		...
173572	26002	" " " 173573	...	...	...	...		...
173505	—	Face Plate , complete, Nos. 173504, two each 32755 and 125424						
173573	26002	Face Plate , complete, Nos. 173572, two each 32755 and 125424 (for Two-Tone finish machines)			...	...		...
51354j	26002	Face Plate Screw	...	...	...	...		...
32755	—	" " Thread Guard	...	...	...	...		...
32630	26002	" " " " 32755 with 125424 (<i>for Agents only</i>)			...	...		...
125424	—	" " " " Rivet	...	...	...	...		...
51224w	26002	" " Thumb Screw	...	...	...	...		...
173508	2818	Feed Bar	...	...	...	...		...
1904	2818	" " Roller	...	...	...	...		...
1813	—	" " " and Stud, Nos. 1904 and 125060	...	...	...	...		...
*125060	—	" " " Stud	...	...	...	...		...
315c	2818	" " Screw Centre	...	...	...	...		...
15445	—	" " " " 315c with 1519r (2)	...	...	...	...		...
1519r	2818	" " " " Nut	...	...	...	...		...
171512	2816	Feed Cam with 1285al	...	...	...	...		...
1285al	2816	" " Position Screw	...	...	...	...		...
15279	2817	Feed Dog , 12 teeth (14 teeth to the inch)	...	...	...	...		...
208al	2817	" " Screw (2)	...	...	...	...		...
125262	2816	Feed Forked Connection with 175r	...	...	...	...		...
125340	—	" " " 125262 with 125335	...	...	...	...		...
175r	2816	" " " Adjusting Screw	...	...	...	...		...
1381c	2816	" " " Hinge Screw (eccentric)	...	...	...	...		...
1520r	2816	" " " " Nut	...	...	...	...		...
125047	2816	" " " Slide Block	...	...	...	...		...
125335	—	" " " " 125047 with 1085e	...	...	...	...		...
1085e	2816	" " " " Screw Stud	...	...	...	...		...
173510u	2818	Feed Lifting Rock Shaft	...	...	...	...		...
173511	—	" " " " with Feed Throw-out Assembly, complete, Nos. 173510u, 173513 and 173520x	...	...	...	...		...
173512	2818	Feed Lifting Rock Shaft Crank with 704x and 50150al	...	...	...	...		...
704x	2818	" " " " " Clamping Screw	...	...	...	...		...

No.	Plate											
173513	—	Feed Lifting Rock Shaft Crank with Feed Throw-out Lever, complete, Nos. 173512 and 173515 to 173517u										
125048	2818	Feed Lifting Rock Shaft Centre (left)										
125049	2818	"	"	"	"	"	(right)	...	...	...		
51246al	2818	"	"	"	"	"	Set Screw (2)	...	...	...		
125397	2816	Feed Regulator										
125398	—	"	"	125397 with 125381				...	...	...		
50353e	2816	"	"	Hinge Screw				...	...	...		
125399	2816	"	"	"	"	Friction Washer				...	...	
45305	26001	Feed Reversing Handle										
125381	—	"	"	"	45305 with 1550r				...	...	...	
1550r	26001	"	"	"	Lock Nut				...	...	...	
125270u	2818	Feed Rock Shaft										
125048	2818	"	"	"	Centre (left)				...	...	...	
125049	2818	"	"	"	"	(right)				...	...	
51246al	2818	"	"	"	"	Set Screw (2)				...	...	
†173514	2818	Feed Throw-out Knob with 442al										
442al	2818	"	"	"	Set Screw				...	...	...	
173547	2818	"	"	"	Shaft and Bobbin Winder Spool Pin				...	...	...	
173515	2818	"	"	Lever with 1813				...	...	...		
173516	2818	"	"	"	Tension Spring				...	...	...	
173517u	2818	"	"	"	"	"	Hinge Stud				...	...
50150al	2818	"	"	"	"	"	"	"	Set Screw	...	...	
173518u	2818	"	"	Pitman Rod				...	...	...		
21202j	2818	"	"	"	"	Washer (2)				...	...	
140138j	2818	"	"	"	"	"	Screw (2)				...	...
173519x	2818	"	"	Plunger				...	...	...		
173520x	2818	"	"	"	Bracket				...	...	...	
†125473	2816	Hand Wheel, 2¼" pulley, for 191K1 Machine										
†173548	2816	"	"	(spoked), 2½" pulley, for 191K2 Machine				...	...	...		
†32672	2816	"	"	(disc), 3¼" pulley, for 191K3 Machine				...	...	...		
51045al	2816	Machine Hinge Connection Set Screw (2)										
173560	2819	Needle Bar										
*125272	2819	"	"	Bushings				...	...	...		
125273	—	"	"	"	125272 with 125274				...	...	...	
125274	2819	"	"	"	Oil Pad (felt)				...	...	...	
1498al	2819	"	"	"	Set Screw				...	...	...	

† In ordering it is necessary to state Colour of Machine.

No.	Plate								
45231	2819	Needle Bar	Connecting Link with 51002e	...	...	...			
173524	—	"	"	"	"	45231 with 173554	...	...	
51002e	2819	"	"	"	"	Adjusting Screw	...	...	
173554	2819	"	"	"	"	Stud with 51363e	...	...	
51363e	2819	"	"	"	"	Set Screw	...	...	
173600	2816	"	"	"	"	Crank with 1036al and 1293al	...	...	
1239al	2816	"	"	"	"	Position Screw	...	...	
173555	2819	"	"	"	"	Hole Plug	...	...	
173561	2819	Needle Clamp Body	...	...	...		...	...	
173562	2819	"	"	"	"	173561 with 140545c	...	...	
140545c	2819	"	"	"	"	Thumb Screw	...	...	
140543l	—	Number Plate Drive Screw	...	...	...		...	...	
125055u	2818	Oscillating Rock Shaft	with 125056	...	...		...	...	
125048	2818	"	"	"	"	Centre (left)	...	...	
51246al	2818	"	"	"	"	(") Set Screw	...	...	
125049	2818	"	"	"	"	(right)	...	...	
51246al	2818	"	"	"	"	(") Set Screw	...	...	
125056	2818	"	"	"	"	Oil Wick (braided cotton)	...	...	
2510	2818	Oscillating Shaft	...	...	...		...	...	
*125063	—	"	"	"	"	2510 with 2049 and 125062	...	...	
*125086	—	"	"	"	"	125063 with 125058u, 125065 and two 51229e	...	...	
*125057u	—	"	"	"	"	Crank	...	...	
*125058u	—	"	"	"	"	125057u with 462al and 125330	...	...	
125059	2818	"	"	"	"	125057u with 125330 and two 462al	...	...	
2049	—	"	"	"	"	Pin	...	...	
462al	2818	"	"	"	"	Set Screw	...	...	
*15170	—	"	"	"	"	Slide Block	...	...	
125330	2818	"	"	"	"	"	15170 with 125060	...	
*125060	—	"	"	"	"	Stud	...	...	
125061	2819	Presser Bar	...	...	...		...	...	
173527	2819	"	"	"	"	Guide Bracket with 454al	...	...	
454al	2819	"	"	"	"	Set Screw	...	...	
170066	2819	"	"	"	"	Lifter	...	...	
85e	2819	"	"	"	"	Hinge Stud	...	...	
80011	2819	"	"	"	"	Spring	...	...	
2070	2819	"	"	"	"	Washer	...	...	
45329	—	Presser Foot Hinge Pin	...	...	...		...	...	
*45319	—	"	"	"	"	Plate	...	...	
*32774	—	"	"	"	"	Shank	...	...	
45321	2817	"	"	"	"	(hinged) complete, Nos. 32774, 45319 and 45329	...	...	
51224zb	2817	"	"	"	"	Thumb Screw	...	...	

No.	Plate							
*140768zb	2819	Pressure Regulating Thumb Screw						
173557	—	"	"	"	"	140768zb with 66752	...	...
66752	2819	"	"	"	"	Plug (felt)	...	...
2518	2820	Shuttle Bobbin						
15140	2820	"	"	Case Latch	...	...	...	...
2973	2820	"	"	"	"	Lever	...	...
2974	2820	"	"	"	"	" Fulcrum Pin	...	...
2975	2820	"	"	"	"	Spring	...	...
592e	2820	"	"	"	"	Stop Screw	...	...
15141	2820	"	"	"	"	Hinge, Nos. 2973, 2974 and 15140	...	...
15277	2820	"	"	"	"	Nos. 592e, 2975 and 15141	...	...
2515	2820	"	Body	...	...	...	...	...
591f	2820	"	Tension Regulating Screw	...	...	...	...	...
15278	2820	"	"	Spring	...	...	...	...
125018	2820	Shuttle, 1 $\frac{11}{16}$" diam., complete, Nos. 2515, 2518 and 15277 ...						
*125062	—	Shuttle Driver						
125092	2818	"	"	125062 with two 462al	...	...	...	...
125064	—	"	"	125092 with 125065 and two 51229e	...	...	...	...
						(for Agents only)		
125065	2818	"	"	Cushion Spring	...	...	...	...
51229e	2818	"	"	"	"	Screw	...	...
2049	—	"	"	Pin	...	...	...	...
462al	2818	"	"	Set Screw	...	...	...	...
171513u	2820	Shuttle Race Body						
171514	—	"	"	"	171513u with 171515 and two 662j	...	...	...
171515	2820	"	"	Cap	...	...	...	...
662j	2820	"	"	"	Screw	...	...	...
171516	2820	Shuttle Race, complete, Nos. 171514, 171518u, 173533e, 173535, 173551, two each 87k, 173536 and 173538 ...						
*171517	—	Shuttle Race 171516 with 2515						
171518u	2820	Shuttle Race Gate						
173533e	2820	"	"	"	Hinge Bracket	...	...	...
173551	2820	"	"	"	"	"	Hinge Pin	...
173535	2820	"	"	"	"	"	Spring	...
173536	2820	"	"	"	Latch	...	...	...
87k	2820	"	"	"	"	"	Screw	...
173538	2820	"	"	"	"	"	Spring	...
145j	26006	"	"	"	Screw (2)	...	...	...

No.	Plate							
125336	2817	Shuttle Race Slide	...	...	...	...	...	...
125337	2817	" " " Spring	...	...	...	...	...	...
51282zj	2817	" " " " Screw	...	...	...	...	...	...
125338	2817	Shuttle Race Slide, complete, Nos. 125336, 125337 and two 51282zj						
45863	26007	Slack Thread Regulator and Tension Thread Guide	...					
335r	26007	" " " Screw	...	...	...	...	...	...
†125475	26001	Stitch Indicator Plate	...	...	...	...	...	...
335r	26001	" " " Screw (2)	...	...	...	...	...	...
125481	26001	" Regulating Plate	...	...	...	...	...	...
125479	—	" " " 125481 with 45310, 51312zb, 125400 and 125475						
51312zb	26001	" " Thumb Screw	...	...	...	...	...	...
125400	26001	" " " Friction Washer	...	...	...	...	...	...
45310	26001	" " " Washer (fibre)	...	...	...	...	...	...
2102	26007	Tension Disc	...	...	...	...	...	...
†125415	26007	" Indicator	...	...	...	...	...	...
†125416	26007	" " Flange	...	...	...	...	...	...
45865	26007	" " " Stop Washer	...	...	...	...	...	...
51682zb	26007	" Regulating Thumb Nut with 45339	...	...	...	...	...	...
45339	26007	" " " Engaging Pin	...	...	...	...	...	...
173539	26007	" Releasing Lever	...	...	...	...	...	...
140563e	26007	" " " Hinge Screw	...	...	...	...	...	...
12329	26007	" " " Spring	...	...	...	...	...	...
173556	26007	" " Pin	...	...	...	...	...	...
125314	26007	Tension Spring	...	...	...	...	...	...
140178zj	26007	" Stud	...	...	...	...	...	...
45352	—	" " 140178zj with 51682zb	...	...	...	...	...	...
624al	26007	" " Set Screw	...	...	...	...	...	...
173552	26007	Tension (graduated), complete, Nos. 45352, 45865, 45873, 66774, 125314, 125415, 125416, 173556 and two 2102						
26075	2819	Thread Cutter and Holder	...	...	...	...	...	...
173541	26007	" Guard (head of arm, upper)	...	...	...	...	...	...
173542	2819	Thread Take-up Crank	...	...	...	...	...	...
173566	—	" " " 173542 with 1130e and 173524	...	...	...	...	...	...
1036al	2816	" " " Set Screw	...	...	...	...	...	...

† In ordering it is necessary to state Colour of Machine.

No.	Plate								
45261	2819	Thread Take-up Lever			...	...	...	...	...
173563	—	"	"	"	45261 with 173545 and 173553				...
173564	—	"	"	"	complete, Nos. 1130e, 173558 and				173563
173565	—	"	"	"	173564 with 173566		...	...	...
1130e	2819	"	"	"	Cap Screw		...	...	...
173553	2819	"	"	"	Hinge Stud		...	...	...
173545	2819	"	"	"	Link	...	...	...	...
173558	2819	"	"	"	" Hinge Stud	...	...	...	...
1130e	2819	"	"	"	" " " Cap Screw				...
440al	2819	"	"	"	" " " Set Screw				...
66774	26007	Thread Take-up Spring			...	...	...	...	...
45873	26007	"	"	"	Thread Guard	...	...	...	...
125113	2817	Throat Plate for 15279			...	...	...	...	...
691za	2817	"	"	Screw (2)	...	...	...	...	...
140543l	—	Trade Mark Drive Screw			...	...	...	...	...
125029	—	Drip Pan (for Cover Set)			...	...	...	...	...

Bobbin Winder

For HAND WHEELS Nos. 32672, 125473 and 173548

No.	Plate							
15072	26009	Bobbin Position Pin	...	...	...	...	...	...
†125476	26009	Bracket (belt cover)	...	...	...	...	...	...
158j	26009	" Screw	...	...	...	...	...	...
†66670	26009	Frame	...	...	...	...	...	...
125366	26009	" 66670 with 15288 and 125068	...	...	...	...	...	...
51319r	26009	" Hinge Screw	...	...	...	...	...	...
66601	26009	" Spring	...	...	...	...	...	...
†15287	26009	Friction Ring (rubber)	...	...	...	...	...	...
15288	26009	Pulley	...	...	...	...	...	...
125068	26009	Spindle with 15072	...	...	...	...	...	...
2007	26007	Spool Pin	...	...	...	...	...	...
125376	26009	Stop Latch	...	...	...	...	...	...
51303x	26009	" " Hinge Screw	...	...	...	...	...	...
125462	26009	" " Spring	...	...	...	...	...	...
125395	26009	Tension Bracket	...	...	...	...	...	...
125396	26009	" " complete, Nos. 45847, 45915, 45916, 125395 and 140138zb	...	...	...	...	...	...
193r	26009	" " Screw	...	...	...	...	...	...
45915	26009	" Disc	...	...	...	...	...	...
45916	26009	" " Screw Washer	...	...	...	...	...	...
45847	26009	" " Spring	...	...	...	...	...	...
140138zb	26009	" Screw	...	...	...	...	...	...
125326	26009	Tripping Arm	...	...	...	...	...	...
190r	26009	" " Screw	...	...	...	...	...	...
†125478	26009	Bobbin Winder (automatic), complete, Nos. 190r, 15287, 51303x, 51319r, 66601, 125326, 125366, 125376, 125462 and 125476	...	...	...	...	...	...

† In ordering it is necessary to state Colour of Machine.

Attachments

ATTACHMENT SET

Supplied with Machine

No.	Plate						
121464	2574	Binder ...	...	...	...	...	...
36865	2574	Edge Stitcher ...	...	...	...	...	...
121441	2574	Gathering Foot (double toe)	...	...	...	...	...
35931	2574	Hemmer (adjustable)	...	...	...	...	...
15 × 1	—	Needles (6)	...	...	...	...	...
86642	2574	Ruffler	...	...	...	...	...
25537	2574	Screw Driver (machine)	...	...	...	...	...
120378	2574	" " (bobbin case)	...	...	...	...	...
8879	2574	Spool Pin Washer (cloth)	...	...	...	...	...
160810	—	Set of Attachments, complete, Nos. 25537, 35931, 36865, 86642, 120378, 121441, 121464, two 8879 and six needles.	...	...	...	...	...

160811	—	Set of Attachments (less needles), complete, Nos. 25537, 35931, 36865, 86642, 120378, 121441, 121464 and two 8879	...
--------	---	---	-----

120842	2821	Hemmer (foot) $\frac{5}{64}$ " hem	...	...	...	...
2518	2820	Shuttle Bobbin (4)	...	...	...	...
120861	—	Tin of Oil (3 oz.)	...	...	...	...

The following Attachments may be purchased at an additional charge :

25525	2719	Bias Gauge	...	...	...	...	...
25527b	2719	Cloth Guide	...	...	...	...	...
50053b	2719	" " and Under Braider Thumb Screw	...	...	...	...	...
36835	2821	Feller (foot)	...	...	...	...	...
120687	2821	Imitation Hemstitching Attachment with Yielding Presser Plate	...	...	...	...	...
35932	2719	Quilter	...	...	...	...	...
121170	909	Ruffler Shirring Plate	...	...	...	...	...
25539	2719	Stiletto	...	...	...	...	...
36583	2821	Tucker	...	...	...	...	...
121547	909	Under Braider	...	...	...	...	...

Art Work and Darning

No.	Plate					
85893	2821	Embroidery Foot (for art work)	...	...	...	...
121094	2719	Darning Foot (spring)	...	...	...	...

Cording Feet

For Edge Stitching, Cording and Slide Fastener Work.

No.	Plate						
160845	2719	Presser Foot (left toe)	...	...	...	...	...
160846	2719	" " (right toe)	...	...	...	...	...
140728	2719	Presser Foot Adjusting Thumb Screw	...	...	...	...	...
161122	2719	" " " " " Spring	...	...	...	...	...
161123	—	" " Hinge Pin	...	...	...	...	...
161124	—	" " Plate	...	...	...	...	...
161125	—	" " Shank (adjustable)	...	...	...	...	...
161126	—	" " " (stationary)	...	...	...	...	...
161127	2719	Presser Foot (hinged, adjustable) for sewing on the right or left side of the needle, complete, Nos. 140728 and 161122 to 161126					

Imitation Hemstitching Attachment

No.	Plate				
120687	2821	with Yielding Presser Plate	...	...	...

Embroidery Hoops

(Plain)

(Birch)

No.	Plate						
101336	—	Hoop (inner)	...	...	...	...	...
101337	—	" (outer)	...	...	...	...	...
87586	—	" (round)	$5\frac{5}{8}$ " diam. $\times$ $7\frac{m}{m}$ " high, Nos. 101336 and 101337				
101346	—	" (inner)	...	...	...	...	...
101347	—	" (outer)	...	...	...	...	...
96416	—	" (round)	7 " diam. $\times$ $7\frac{m}{m}$ " high, Nos. 101346 and 101347				
101338	—	" (inner)	...	...	...	...	...
101339	—	" (outer)	...	...	...	...	...
87589	2659	" (round)	8 " diam. $\times$ $7\frac{m}{m}$ " high, Nos. 101338 and 101339				
101340	—	" (inner)	...	...	...	...	...
101341	—	" (outer)	...	...	...	...	...
87593	—	" (round)	10 " diam. $\times$ $7\frac{1}{16}$ " high, Nos. 101340 and 101341				
101342	—	" (inner)	...	...	...	...	...
101343	—	" (outer)	...	...	...	...	...
87595	—	" (round)	12 " diam. $\times$ $1\frac{1}{2}$ " high, Nos. 101342 and 101343				
101358	—	" (inner)	...	...	...	...	...
101359	—	" (outer)	...	...	...	...	...
96422	2659	" (oval)	9 " $\times$ $4\frac{1}{2}$ " $\times$ $7\frac{m}{m}$ " high, Nos. 101358 and 101359				
101344	—	" (inner)	...	...	...	...	...
101345	—	" (outer)	...	...	...	...	...
87597	—	" (oval)	12 " $\times$ $5\frac{1}{2}$ " $\times$ $7\frac{m}{m}$ " high, Nos. 101344 and 101345				

Embroidery Hoops

(With Spring)

(Birch)

No.	Plate						
101364	—	Hoop (inner) for 101246	...	...	...	...	...
101365	—	" (outer) with Spring, for 101246	...	...	...	...	...
101246	—	" (round)	10 " diam. $\times$ $7\frac{1}{16}$ " high, Nos. 101364 and 101365				

Embroidery Hoops

(With Clamp)

(Birch)

No.	Plate	
101348	—	Hoop (inner)
101349	—	" (outer) with SS528j, NN95j, two 96425 and four 96427 ...
96417	—	" (round) $5\frac{5}{8}$ " diam. $\times 7\frac{m}{m}$ high, Nos. 101348 and 101349 ...
101350	—	" (inner)
101351	—	" (outer) with SS528j, NN95j, two 96426 and four 96427 ...
96418	2659	" (round) 7" diam. $\times 7\frac{m}{m}$ high, Nos. 101350 and 101351 ...
101352	—	" (inner)
101353	—	" (outer) with SS528j, NN95j, two 96426 and four 96427 ...
96419	—	" (round) 8" diam. $\times 7\frac{m}{m}$ high, Nos. 101352 and 101353 ...
101354	—	" (inner)
101355	—	" (outer) with SS528j, NN95j, two 96426 and four 96427 ...
96420	—	" (round) 10" diam. $\times \frac{7}{16}$ " high, Nos. 101354 and 101355 ...
101356	—	" (inner)
101357	—	" (outer) with SS528j, NN95j, two 96844 and four 96845 ...
96421	—	" (round) 12" diam. $\times \frac{1}{2}$ " high, Nos. 101356 and 101357 ...
101360	—	" (inner)
101361	—	" (outer) with SS528j, NN95j, 96425, 96426 and four 96427
96423	—	" (oval) $9" \times 4\frac{1}{2}" \times 7\frac{m}{m}$ high, Nos. 101360 and 101361 ...
101362	—	" (inner)
101363	—	" (outer) with SS528j, NN95j, 96425, 96426 and four 96427
96424	—	" (oval) $12" \times 5\frac{1}{2}" \times 7\frac{m}{m}$ high, Nos. 101362 and 101363 ...
96425	2399	Clamping Bracket for 101349, 101361 and 101363 ...
96426	2399	" " " 101351, 101353, 101355, 101361 and 101363
96844	2399	" " " 101357
96427	2399	" " Rivet for 101349, 101351, 101353, 101355, 101361 and 101363
96845	2399	" " Rivet for 101357
SS528j	2399	" " Screw
NN95j	2399	" " " Nut

Hand Attachment

No.	Plate								
†94050	2284	Body ...	...	...	...	...	...	...	...
†94027	2284	" Bracket ...	...	...	...	...	...	...	...
183e	2114	" " Screw	...	...	...	...	...	...	...
†94028	2114	Crank Handle (wood)	...	...	...	...	...	...	...
94029b	2114	" " Spindle	...	...	...	...	...	...	...
94030b	2114	" " " Flange (loose)	...	...	...	...	...	...	...
94069	2114	" Hinge Pin	...	...	...	...	...	...	...
94031a	2284	" Lever ...	...	...	...	...	...	...	...
94032	2114	" " Lock Pin	...	...	...	...	...	...	...
94033b	2114	" " " " Head	...	...	...	...	...	...	...
55531	2114	" " " " Spring	...	...	...	...	...	...	...
94034b	—	Crank, complete, Nos. 94028, 94029b, 94030b and 94031a							
†94046	2114	Driver ...	...	...	...	...	...	...	...
94070	—	" 94046 with 80028 and 94048	...	...	...	...	...	...	...
94036	2114	" Finger ...	...	...	...	...	...	...	...
94041	—	" " 94036 with SS567e, 94039 and 94040	...	...	...	...	...	...	...
94039	2114	" " Driving Pad (raw-hide)	...	...	...	...	...	...	...
94040	2114	" " " " Plate	...	...	...	...	...	...	...
SS567e	2114	" " " " and Plate Binding Screw	...	...	...	...	...	...	...
94044	2114	" " Hinge Pin	...	...	...	...	...	...	...
94037	2114	" " Latch	...	...	...	...	...	...	...
SS565e	2114	" " " Screw Stud	...	...	...	...	...	...	...
94038	2114	" " " Spring	...	...	...	...	...	...	...
†94051	2284	Gear with 55531, 94032 and 94033b							
94016	2284	" Cover	...	...	...	...	...	...	...
399a	2114	" " Screw	...	...	...	...	...	...	...
SS599f	2114	" Screw Stud	...	...	...	...	...	...	...
94048	2114	Pinion ...	...	...	...	...	...	...	...
80028	2114	" Dowel Pin	...	...	...	...	...	...	...
SS600f	2114	" Screw Stud	...	...	...	...	...	...	...
†94052	2284	Hand Attachment , complete, Nos. SS565e, SS566c, SS599f, SS600f, 94016, 94027, 94034b, 94037, 94038, 94041, 94044, 94050, 94051, 94069, 94070, two each 183e and 399a							
SS566c	2114	Hand Attachment Screw	...	...	...	...	...	...	...

† In ordering it is necessary to state Colour of Machine.

Numerical List of Parts

No.	Plate			
85c	2819	Presser Bar Lifter Hinge Stud	...	...
87k	2820	Shuttle Race Gate Latch Screw for	171516	
NN95j	2399	Embroidery Hoop Clamping Bracket Screw		
		Nut for 101349, 101351, 101353, 101355,		
		101357, 101361 and 101363	...	...
138e	2816	Arm Screw	...	...
145j	2820	Shuttle Race Screw	...	...
158j	26009	Bobbin Winder Bracket Screw	...	...
175r	2816	Feed Forked Connection Adjusting Screw for		
		125262	...	...
183e	2114	Hand Attachment Body Bracket Screw for		
		94052	...	...
190r	26009	Bobbin Winder Tripping Arm Screw for		
		125478	...	...
193r	26009	Bobbin Winder Tension Bracket Screw	...	...
208al	2817	Feed Dog Screw	...	...
248za	2816	Clamp Stop Motion Clamp Stop Screw for		
		15314	...	...
256zb	2816	Clamp Stop Motion Clamp Screw for	15314	
315c	2818	Feed Bar Screw Centre for	15445	...
335r	26007	Slack Thread Regulator Screw	...	...
335r	26001	Stitch Indicator Plate Screw	...	...
375c	2816	Crank Connecting Rod Hinge Screw	...	...
399a	2114	Hand Attachment Gear Cover Screw for		
		94052	...	...
435al	2816	Arm Shaft Bushing Set Screw	...	...
440al	2819	Thread Take-up Lever Link Hinge Stud Set		
		Screw	...	...
442al	2818	Feed Throw-out Knob Set Screw for	173514	
454al	2819	Presser Bar Guide Bracket Set Screw for		
		173527	...	...
462al	2816	Clamp Stop Motion Flanged Bushing Set		
		Screw for 15313	...	...
462al	2818	Oscillating Shaft Crank Set Screw for	125058u	
		and 125059	...	...
462al	2818	Shuttle Driver Set Screw for	125092	...
SS528j	2399	Embroidery Hoop Clamping Bracket Screw		
		for 101349, 101351, 101353, 101355,		
		101357, 101361 and 101363	...	...
SS565e	2114	Hand Attachment Driver Finger Latch		
		Screw Stud for 94052	...	...

No.	Plate		
SS566c	2114	Hand Attachment Screw for 94052	...
SS567e	2114	Hand Attachment Driver Finger Driving Pad and Plate Binding Screw for 94041	...
591f	2820	Shuttle Tension Regulating Screw	...
592e	2820	Shuttle Bobbin Case Latch Stop Screw for 15277	
SS599f	2114	Hand Attachment Gear Screw Stud for 94052	
SS600f	2114	Hand Attachment Pinion Screw Stud for 94052	
624al	26007	Tension Stud Set Screw	
662j	2820	Shuttle Race Cap Screw for 171514	...
691za	2817	Throat Plate Screw	
704x	2818	Feed Lifting Rock Shaft Crank Clamping Screw for 173512	
896al	2816	Crank Connecting Rod Cap Screw for 125021	...
1036al	2816	Thread Take-up Crank Set Screw for 173600	...
1085e	2816	Feed Forked Connection Slide Block Screw Stud for 125335	
1130e	2819	Thread Take-up Lever Cap Screw for 173566	...
1130e	2819	Thread Take-up Lever Link Hinge Stud Cap Screw for 173564	
1285al	2816	Arm Shaft Counterbalance Position Screw for 171509	
1285al	2816	Feed Cam Position Screw for 171512	...
1293al	2816	Needle Bar Crank Position Screw for 173600	...
1381c	2816	Feed Forked Connection Hinge Screw (eccentric)	...
1498al	2819	Needle Bar Bushing Set Screw	
1518r	2816	Crank Connecting Rod Hinge Screw Nut	
1519r	2818	Feed Bar Screw Centre Nut for 15445	...
1520r	2816	Feed Forked Connection Hinge Screw Nut	...
1550r	26001	Feed Reversing Handle Lock Nut for 125381	...
1813	—	Feed Bar Roller and Stud, Nos. 1904 and 125060 for 173515	
1904	2818	Feed Bar Roller for 1813	
2002	2816	Arm Dowel Pin	
2007zj	26007	Arm Spool Pin	
2007	26007	Bobbin Winder Spool Pin	
2022	—	Clamp Stop Motion Flanged Bushing Pin	
2049	—	Oscillating Shaft Crank Pin for 125063	...
2049	—	Shuttle Driver Pin	
2070	2819	Presser Bar Spring Washer	
2102	26007	Tension Disc for 173552	
2510	2818	Oscillating Shaft for 125063	
2515	2820	Shuttle Body for 125018 and 171517	...
2518	2820	Shuttle Bobbin for 125018	
2973	2820	Shuttle Bobbin Case Latch Lever for 15141	...

No.	Plate	
2974	2820	Shuttle Bobbin Case Latch Lever Fulcrum Pin for 15141
2975	2820	Shuttle Bobbin Case Latch Spring for 15277
8879	2574	Spool Pin Washer (cloth) for 160810 and 160811
12329	26007	Tension Releasing Lever Spring
15072	26009	Bobbin Winder Bobbin Position Pin for 125068
15140	2820	Shuttle Bobbin Case Latch for 15141 ...
15141	2820	Shuttle Bobbin Case Hinge, Nos. 2973, 2974 and 15140 for 15277
*15170	—	Oscillating Shaft Crank Slide Block for 125330
15277	2820	Shuttle Bobbin Case, Nos. 592e, 2975 and 15141 for 125018
15278	2820	Shuttle Tension Spring
15279	2817	Feed Dog, 12 teeth (14 teeth to the inch) ...
†15287	26009	Bobbin Winder Friction Ring (rubber) for 125478
15288	26009	Bobbin Winder Pulley for 125366 ...
*15312	—	Clamp Stop Motion Flanged Bushing for 15313
15313	2816	Clamp Stop Motion Flanged Bushing 15312, with two 462al, for 15314
15314	—	Clamp Stop Motion, complete, Nos. 248za, 256zb, 15313 and 171502 (<i>for Agents only</i>)
15445	—	Feed Bar Screw Centre 315c with 1519r ...
21202j	2818	Feed Throw-out Pitman Rod Washer ...
25525	2719	Bias Gauge
25527b	2719	Cloth Guide
25537	2574	Screw Driver (machine) for 160810 and 160811
25539	2719	Stiletto
26075	2819	Thread Cutter and Holder
32630	26002	Face Plate Thread Guard 32755 with 125424 (<i>for Agents only</i>)
†32672	2816	Hand Wheel (disc), 3¼" pulley, for 191K3 Machine
32755	—	Face Plate Thread Guard for 32630, 173505 and 173573
*32774	—	Presser Foot Shank for 45321
35931	2574	Hemmer (adjustable) for 160810 and 160811
35932	2719	Quilter
36583	2821	Tucker
36835	2821	Feller (foot)
36865	2574	Edge Stitcher for 160810 and 160811 ...

† In ordering it is necessary to state Colour of Machine.

No.	Plate	
45231	2819	Needle Bar Connecting Link with 51002e, for 173524
45261	2819	Thread Take-up Lever for 173563 ...
45305	26001	Feed Reversing Handle for 125381 ...
45310	26001	Stitch Regulating Thumb Screw Washer (fibre) for 125479
*45319	—	Presser Foot Plate for 45321
45321	2817	Presser Foot (hinged) complete, Nos. 32774, 45319 and 45329
45329	—	Presser Foot Hinge Pin for 45321 ...
45339	26007	Tension Regulating Thumb Nut Engaging Pin for 51682zb
45352	—	Tension Stud 140178zj with 51682zb for 173552
45847	26009	Bobbin Winder Tension Disc Spring for 125396
45863	26007	Slack Thread Regulator and Tension Thread Guide
45865	26007	Tension Indicator Flange Stop Washer for 173552
45873	26007	Thread Take-up Spring Thread Guard for 173552
45915	26009	Bobbin Winder Tension Disc for 125396 ...
45916	26009	Bobbin Winder Tension Disc Screw Washer for 125396
50053b	2719	Cloth Guide and Under Braider Thumb Screw
50150a1	2818	Feed Throw-out Lever Tension Spring Hinge Stud Set Screw for 173512
50353e	2816	Feed Regulator Hinge Screw
51002e	2819	Needle Bar Connecting Link Adjusting Screw for 45231
51045a1	2816	Machine Hinge Connection Set Screw ...
51224w	26002	Face Plate Thumb Screw
51224zb	26001	Arm Side Cover Thumb Screw
51224zb	2817	Presser Foot Thumb Screw
51229e	2818	Shuttle Driver Cushion Spring Screw for 125064 and 125086
51246a1	2818	Feed Lifting Rock Shaft Centre Set Screw ...
51246a1	2818	Feed Rock Shaft Centre Set Screw ...
51246a1	2818	Oscillating Rock Shaft Centre (left) Set Screw
51246a1	2818	Oscillating Rock Shaft Centre (right) Set Screw
51282zj	2817	Shuttle Race Slide Spring Screw for 125338
51303x	26009	Bobbin Winder Stop Latch Hinge Screw for 125478
51312zb	26001	Stitch Regulating Thumb Screw for 125479

No.	Plate	
51319r	26009	Bobbin Winder Frame Hinge Screw for 125478
51354j	26002	Face Plate Screw
51363e	2819	Needle Bar Connecting Stud Set Screw for 173554
51682zb	26007	Tension Regulating Thumb Nut with 45339 for 45352
55531	2114	Hand Attachment Crank Lever Lock Pin Spring for 94051
66601	26009	Bobbin Winder Frame Spring for 125478 ...
†66670	26009	Bobbin Winder Frame for 125366 ...
66752	2819	Pressure Regulating Thumb Screw Plug (felt) for 173557
66774	26007	Thread Take-up Spring for 173552 ...
80011	2819	Presser Bar Spring
80028	2114	Hand Attachment Pinion Dowel Pin for 94070
81110	2816	Arm Oil Pad Spring for 173501
85893	2821	Embroidery Foot (for art work)
86642	2574	Ruffler for 160810 and 160811
87586	—	Embroidery Hoop (round, birch) 5½" diam. × 7 ^m / _m high, Nos. 101336 and 101337 ...
87589	2659	Embroidery Hoop (round, birch) 8" diam. × 7 ^m / _m high, Nos. 101338 and 101339 ...
87593	—	Embroidery Hoop (round, birch) 10" diam. × 7 ^m / _m high, Nos. 101340 and 101341 ...
87595	—	Embroidery Hoop (round, birch) 12" diam. × 1½" high, Nos. 101342 and 101343 ...
87597	—	Embroidery Hoop (oval, birch) 12" × 5½" × 7 ^m / _m high, Nos. 101344 and 101345 ...
94016	2284	Hand Attachment Gear Cover for 94052 ...
†94027	2284	Hand Attachment Body Bracket for 94052
†94028	2114	Hand Attachment Crank Handle (wood) for 94034b
94029b	2114	Hand Attachment Crank Handle Spindle for 94034b
94030b	2114	Hand Attachment Crank Handle Spindle Flange (Icose) for 94034b
94031a	2284	Hand Attachment Crank Lever for 94034b
94032	2114	Hand Attachment Crank Lever Lock Pin for 94051
94033b	2114	Hand Attachment Crank Lever Lock Pin Head for 94051
94034b	—	Hand Attachment Crank, complete, Nos. 94028, 94029b, 94030b and 94031a, for 94052

† In ordering it is necessary to state Colour of Machine.

No.	Plate	
94036	2114	Hand Attachment Driver Finger for 94041
94037	2114	Hand Attachment Driver Finger Latch for 94052
94038	2114	Hand Attachment Driver Finger Latch Spring for 94052
94039	2114	Hand Attachment Driver Finger Driving Pad (raw-hide) for 94041
94040	2114	Hand Attachment Driver Finger Driving Pad Plate for 94041
94041	—	Hand Attachment Driver Finger 94036, with SS567e, 94039 and 94040, for 94052 ...
94044	2114	Hand Attachment Driver Finger Hinge Pin for 94052
†94046	2114	Hand Attachment Driver for 94070 ...
94048	2114	Hand Attachment Pinion for 94070 ...
†94050	2284	Hand Attachment Body for 94052 ...
†94051	2284	Hand Attachment Gear with 55531, 94032 and 94033b, for 94052
†94052	2284	Hand Attachment, complete, Nos. SS565e, SS566c, SS599f, SS600f, 94016, 94027, 94034b, 94037, 94038, 94041, 94044, 94050, 94051, 94069, 94070, two each 183e and 399a
94069	2114	Hand Attachment Crank Hinge Pin for 94052
94070	—	Hand Attachment Driver 94046 with 80028 and 94048, for 94052
96416	—	Embroidery Hoop (round, birch) 7" diam. × 7 $\frac{m}{m}$ " high, Nos. 101346 and 101347 ...
96417	—	Embroidery Hoop (round, birch) 5 $\frac{5}{8}$ " diam. × 7 $\frac{m}{m}$ " high, Nos. 101348 and 101349 ...
96418	2659	Embroidery Hoop (round, birch) 7" diam. × 7 $\frac{m}{m}$ " high, Nos. 101350 and 101351 ...
96419	—	Embroidery Hoop (round, birch) 8" diam. × 7 $\frac{m}{m}$ " high, Nos. 101352 and 101353 ...
96420	—	Embroidery Hoop (round, birch) 10" diam. × 7 $\frac{1}{16}$ " high, Nos. 101354 and 101355 ...
96421	—	Embroidery Hoop (round, birch) 12" diam. × 1 $\frac{1}{2}$ " high, Nos. 101356 and 101357 ...
96422	2659	Embroidery Hoop (oval, birch) 9" × 4 $\frac{1}{2}$ " × 7 $\frac{m}{m}$ " high, Nos. 101358 and 101359 ...
96423	—	Embroidery Hoop (oval, birch) 9" × 4 $\frac{1}{2}$ " × 7 $\frac{m}{m}$ " high, Nos. 101360 and 101361 ...
96424	—	Embroidery Hoop (oval, birch) 12" × 5 $\frac{1}{2}$ " × 7 $\frac{m}{m}$ " high, Nos. 101362 and 101363 ...

† In ordering it is necessary to state Colour of Machine.

No.	Plate	
96425	2399	Embroidery Hoop Clamping Bracket for 101349, 101361 and 101363
96426	2399	Embroidery Hoop Clamping Bracket for 101351, 101353, 101355, 101361 and 101363
96427	2399	Embroidery Hoop Clamping Bracket Rivet for 101349, 101351, 101353, 101355, 101361 and 101363
96844	2399	Embroidery Hoop Clamping Bracket for 101357
96845	2399	Embroidery Hoop Clamping Bracket Rivet for 101357
101246	—	Embroidery Hoop (round, birch) 10" diam. × $\frac{7}{16}$ " high, complete, Nos. 101364 and 101365
101336	—	Embroidery Hoop (inner) for 87586 ...
101337	—	Embroidery Hoop (outer) for 87586 ...
101338	—	Embroidery Hoop (inner) for 87589 ...
101339	—	Embroidery Hoop (outer) for 87589 ...
101340	—	Embroidery Hoop (inner) for 87593 ...
101341	—	Embroidery Hoop (outer) for 87593 ...
101342	—	Embroidery Hoop (inner) for 87595 ...
101343	—	Embroidery Hoop (outer) for 87595 ...
101344	—	Embroidery Hoop (inner) for 87597 ...
101345	—	Embroidery Hoop (outer) for 87597 ...
101346	—	Embroidery Hoop (inner) for 96416 ...
101347	—	Embroidery Hoop (outer) for 96416 ...
101348	—	Embroidery Hoop (inner) for 96417 ...
101349	—	Embroidery Hoop (outer) with SS528j, NN95j, two 96425 and four 96427, for 96417
101350	—	Embroidery Hoop (inner) for 96418 ...
101351	—	Embroidery Hoop (outer) with SS528j, NN95j, two 96426 and four 96427, for 96418
101352	—	Embroidery Hoop (inner) for 96419 ...
101353	—	Embroidery Hoop (outer) with SS528j, NN95j, two 96426 and four 96427, for 96419
101354	—	Embroidery Hoop (inner) for 96420 ...
101355	—	Embroidery Hoop (outer) with SS528j, NN95j, two 96426 and four 96427, for 96420
101356	—	Embroidery Hoop (inner) for 96421 ...
101357	—	Embroidery Hoop (outer) with SS528j, NN95j, two 96844 and four 96845, for 96421

No.	Plate		
101358	—	Embroidery Hoop (inner) for 96422	...
101359	—	Embroidery Hoop (outer) for 96422	...
101360	—	Embroidery Hoop (inner) for 96423	...
101361	—	Embroidery Hoop (outer) with SS528j, NN95j, 96425, 96426 and four 96427 for 96423	
101362	—	Embroidery Hoop (inner) for 96424	...
101363	—	Embroidery Hoop (outer) with SS528j, NN95j, 96425, 96426 and four 96427, for 96424	
101364	—	Embroidery Hoop (inner) for 101246	...
101365	—	Embroidery Hoop (outer) with Spring, for 101246	
120378	2574	Screw Driver (bobbin case) for 160810 and 160811	
120687	2821	Imitation Hemstitching Attachment, with yielding presser plate	
120842	2821	Hemmer (foot), $\frac{5}{8}$ " hem	
120861	—	Tin of Oil (3 oz.)	
121094	2719	Darning Foot (spring)	
121170	909	Ruffler Shirring Plate	
121441	2574	Gathering Foot (double toe) for 160810 and 160811	
121464	2574	Binder for 160810 and 160811	
121547	909	Under Braider	
125018	2820	Shuttle, $1\frac{11}{16}$ " diam., complete, Nos. 2515, 2518 and 15277	
125021	2816	Crank Connecting Rod with 125044 and two 896al	
125029	—	Drip Pan (for Cover Set)	
125044	2816	Crank Connecting Rod Oil Pad (felt) for 125021	
125047	2816	Feed Forked Connection Slide Block for 125335	
125048	2818	Feed Lifting Rock Shaft Centre (left)	...
125048	2818	Feed Rock Shaft Centre (left)	
125048	2818	Oscillating Rock Shaft Centre (left)	...
125049	2818	Feed Lifting Rock Shaft Centre (right)	...
125049	2818	Feed Rock Shaft Centre (right)	
125049	2818	Oscillating Rock Shaft Centre (right)	...
125055u	2818	Oscillating Rock Shaft with 125056	...
125056	2818	Oscillating Rock Shaft Oil Wick (braided cotton) for 125055u	
*125057u	—	Oscillating Shaft Crank for 125058u and 125059	

No.	Plate	
*125058u	—	Oscillating Shaft Crank 125057u with 462al and 125330 for 125086 ...
125059	2818	Oscillating Shaft Crank 125057u with 125330 and two 462al ...
*125060	—	Feed Bar Roller Stud for 1813 ...
*125060	—	Oscillating Shaft Crank Slide Block Stud for 125330 ...
125061	26005	Presser Bar ...
*125062	—	Shuttle Driver for 125063 and 125092 ...
*125063	—	Oscillating Shaft 2510 with 2049 and 125062 for 125086 ...
125064	—	Shuttle Driver 125092 with 125065 and two 51229e (<i>for Agents only</i>)
125065	2818	Shuttle Driver Cushion Spring for 125064 and 125086 ...
125068	26009	Bobbin Winder Spindle with 15072, for 125366 ...
*125086	—	Oscillating Shaft 125063 with 125058u, 125056 and two 51229e ...
125092	2818	Shuttle Driver 125062, with two 462al for 125064 ...
125113	2817	Throat Plate for 15279 ...
125262	2816	Feed Forked Connection with 175r for 125340
125270u	2818	Feed Rock Shaft ...
*125272	26005	Needle Bar Bushing for 125273 ...
125273	—	Needle Bar Bushing 125272 with 125274 ...
125274	2819	Needle Bar Bushing Oil Pad (felt) for 125273
125314	26007	Tension Spring for 173552 ...
125326	26009	Bobbin Winder Tripping Arm for 125478 ...
125330	2818	Oscillating Shaft Crank Slide Block 15170, with 125060, for 125058u and 125059 ...
125331	2816	Arm Oil Pad (felt) for oiling Arm Shaft Back Bearing for 173501 ...
125334	2816	Arm Oil Pad Spring Cap for 173501 ...
125335	—	Feed Forked Connection Slide Block 125047, with 1085e, for 125340 ...
125336	2817	Shuttle Race Slide for 125338 ...
125337	2817	Shuttle Race Slide Spring for 125338 ...
125338	2817	Shuttle Race Slide, complete, Nos. 125336, 125337 and two 51282zj ...
125340	—	Feed Forked Connection 125262 with 125335
125366	26009	Bobbin Winder Frame 66670 with 15288 and 125068 for 125478 ...
125376	26009	Bobbin Winder Stop Latch for 125478 ...
125381	—	Feed Reversing Handle 45305 with 1550r for 125398 ...
125395	26009	Bobbin Winder Tension Bracket for 125396

No.	Plate	
125396	26009	Bobbin Winder Tension Bracket, complete, Nos. 45847, 45915, 45916, 125395 and 140138zb
125397	2816	Feed Regulator for 125398
125398	—	Feed Regulator 125397 with 125381
125399	2816	Feed Regulator Hinge Screw Friction Washer
125400	26001	Stitch Regulating Thumb Screw Friction Washer for 125479
†125415	26007	Tension Indicator for 173552
†125416	26007	Tension Indicator Flange, for 173552
125424	—	Face Plate Thread Guard Rivet for 32630, 173505 and 173573
125462	26009	Bobbin Winder Stop Latch Spring for 125478
†125466	26001	Arm Side Cover
†125473	2816	Hand Wheel, 2 $\frac{1}{4}$ " pulley, for 191K1 Machine
†125475	26001	Stitch Indicator Plate for 125479
†125476	26009	Bobbin Winder Bracket (belt cover) for 125478
†125478	26009	Bobbin Winder (automatic), complete, Nos. 190r, 15287, 51303x, 51319r, 66601, 125326, 125366, 125376, 125462 and 125476 for Hand Wheels Nos. 32672, 125473 and 173548
125479	—	Stitch Regulating Plate 125481 with 45310, 51312zb, 125400 and 125475
125481	26001	Stitch Regulating Plate for 125479

† In ordering it is necessary to state Colour of Machine.

No.	Plate	
140138j	2818	Feed Throw-out Pitman Rod Washer Screw
140138zb	26009	Bobbin Winder Tension Screw for 125396 ...
140178zb	26007	Tension Stud for 45352
140543l	—	Number Plate Drive Screw for 173501 ...
140543l	—	Trade Mark Drive Screw for 173501 ...
140545c	2819	Needle Clamp Body Thumb Screw for 173562
140563e	26007	Tension Releasing Lever Hinge Screw ...
140728	2719	Presser Foot Adjusting Thumb Screw for 161127
*140768zb	2819	Pressure Regulating Thumb Screw for 173557
160810	—	Set of Attachments, complete, Nos. 25537, 35931, 36865, 86642, 120378, 121441, 121464, two 8879 and six needles ...
160811	—	Set of Attachments (less needles), complete, Nos. 25537, 35931, 36865, 86642, 120378, 121441, 121464 and two 8879 ...
160845	2719	Presser Foot (left toe) for Edge Stitching, Cording and Slide Fastener Work ...
160846	2719	Presser Foot (right toe) for Edge Stitching, Cording and Slide Fastener Work ...
161122	2719	Presser Foot Adjusting Thumb Screw Spring for 161127
161123	—	Presser Foot Hinge Pin for 161127 ...
161124	—	Presser Foot Plate for 161127 ...
161125	—	Presser Foot Shank (adjustable) for 161127
161126	—	Presser Foot Shank (stationary) for 161127
161127	2719	Presser Foot (hinged, adjustable) for sewing on the right or left side of the needle, complete, Nos. 140728 and 161122 to 161126 for Cording and Slide Fastener Work

No.	Plate	
170066	2819	Presser Bar Lifter
171502	2816	Clamp Stop Motion Clamp Washer for 15314
171509	—	Arm Shaft Counterbalance with 1285al ...
171512	2816	Feed Cam with 1285al for 173559
171513u	2820	Shuttle Race Body for 171514
171514	—	Shuttle Race Body 171513u with 171515 and two 662j, for 171516
171515	2820	Shuttle Race Cap for 171514
171516	2820	Shuttle Race, complete, Nos. 171514, 171518, 173533, 173535, 173551, two each 87k, 173536 and 173538 for 171517
*171517	—	Shuttle Race 171516 with 2515
171518u	2820	Shuttle Race Gate for 171516
173501	—	Arm and Bed, complete, Nos. 81110, 125331, 125334 and four 140543l
173503	2816	Arm Shaft Bushing for 173559
173504	—	Face Plate for 173505
173505	—	Face Plate, complete, Nos. 173504, two each 32755 and 125424
173508	2818	Feed Bar
173510u	2818	Feed Lifting Rock Shaft for 173511
173511	—	Feed Lifting Rock Shaft with Feed Throw-out Assembly, complete, Nos. 173510u, 173513 and 173520
173512	2818	Feed Lifting Rock Shaft Crank, with 704x and 50150al for 173513
173513	—	Feed Lifting Rock Shaft Crank with Feed Throw-out Lever, complete, Nos. 173512 and 173515 to 173517 for 173511
†173514	2818	Feed Throw-out Knob with 442al
173515	2818	Feed Throw-out Lever with 1813 for 173513
173516	2818	Feed Throw-out Lever Tension Spring for 173513
173517u	2818	Feed Throw-out Lever Tension Spring Hinge Stud for 173513
173518u	2818	Feed Throw-out Pitman Rod
173519x	2818	Feed Throw-out Plunger
173520x	2818	Feed Throw-out Plunger Bracket for 173511
173524	—	Needle Bar Connecting Link 45231 with 173554 for 173566
173527	2819	Presser Bar Guide Bracket with 454al
173533e	2820	Shuttle Race Gate Hinge Bracket for 171516
173535	2820	Shuttle Race Gate Hinge Bracket Spring for 171516
173536	2820	Shuttle Race Gate Latch for 171516

† In ordering it is necessary to state Colour of Machine.

No.	Plate	
173538	2820	Shuttle Race Gate Latch Spring for 171516
173539	26007	Tension Releasing Lever ...
173541	26007	Thread Guard (head of arm, upper) ...
173542	2819	Thread Take-up Crank for 173566 ...
173545	2819	Thread Take-up Lever Link for 173563 ...
173547	2818	Feed Throw-out Knob Shaft and Bobbin Winder Spool Pin ...
†173548	2816	Hand Wheel (spoked), 2½" pulley, for 191K2 Machine ...
173551	2820	Shuttle Race Gate Hinge Bracket Hinge Pin for 171516 ...
173552	26007	Tension (graduated), complete, Nos. 45352, 45865, 45873, 66774, 125314, 125415, 125416, 173556 and two 2102 ...
173553	2819	Thread Take-up Lever Hinge Stud for 173563
173554	2819	Needle Bar Connecting Stud with 51363e for 173524 ...
173555	2819	Needle Bar Hole Plug ...
173556	26007	Tension Releasing Pin for 173552 ...
173557	—	Pressure Regulating Thumb Screw 140768zb with 66752 ...
173558	2819	Thread Take-up Lever Link Hinge Stud for 173564 ...
173559	2816	Arm Shaft 173603 with 171509, 171512, 173503 and 173600 ...
173560	2819	Needle Bar ...
173561	2819	Needle Clamp Body for 173562 ...
173562	2819	Needle Clamp Body 173561 with 140545c ...
173563	—	Thread Take-up Lever 45261 with 173545 and 173553 for 173564 ...
173564	—	Thread Take-up Lever, complete, Nos. 1130e, 173558 and 173563 for 173565 ...
173565	—	Thread Take-up Lever 173564 with 173566
173566	—	Thread Take-up Crank 173542 with 1130e and 173524 for 173565 ...
173572	26002	Face Plate for 173573 ...
173573	26002	Face Plate, complete, Nos. 173572, two each 32755 and 125424 (for Two-Tone finish machines) ...
173600	2816	Needle Bar Crank with 1036al and 1293al for 173559 ...
*173601	—	Arm ...

† In ordering it is necessary to state Colour of Machine.

No.	Plate					
*173602	—	Bed	...	...	...	...
173603	—	Arm Shaft for 173559	...	...	...	...

