

Form 20932

(558)

Printed in U.S.A.

DEPARTMENT 52

LIST OF PARTS



DEPARTMENT 52

SINGER^{**}

MACHINE No. 246-14

THE SINGER MANUFACTURING COMPANY

** A Trademark of THE SINGER MANUFACTURING COMPANY

From the library of: Superior Sewing Machine & Supply LLC

INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling and when in continuous use, the oil gauge should be checked daily. The oil level should be maintained at the midpoint of the gauge.

To oil the machine, apply "TYPE A" OIL, sold only by Singer Sewing Machine Company, to the oil filler cup on top of the machine, as instructed in Form 20743

INDEX

	Page
Accessories	20
Belt Guard (Adjustable)	21
Blind Stitch Hemming Attachment No. 160381	21
Blind Stitch Hemming Attachment No. 160384	21
Blind Stitch Hemming Attachment Support	22
Chip Chute	22
Edge Guide (Floating)	22
Set of Fittings Complete No. 164382	18
Set of Fittings Complete No. 164383	18
Set of Fittings Complete No. 164539	19
Set of Fittings Complete No. 164540	20
Foot Lifter Parts	23
Machine Base	23
Machine No. 246-14	7
Numerical List of Parts	25
Thread Unwinder No. 151031	23
Thread Unwinder No. 151163	24

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the part **NUMBER** in the **FIRST** column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A—Hardened, Polished, Nickel Plated and Buffed
- B—Polished, Nickel Plated and Buffed
- C—Hardened Only
- D—Polished Only
- E—Soft, Not Polished
- F—Hardened and Polished
- G—Bright Rumbled and Nickel Plated
- H—Blued
- J—Nickel Plated Only
- K—Hardened and Nickel Plated
- L—Brass Plated
- M—Oxidized
- R—Phosphate Coating Formed on Surface of Iron or Steel
- S—Cadmium Plated
- T—Copper Plated
- U—Zinc Plated
- V—Silver Plated
- W—Polished and Nickel Plated
- X—Black Oxide for Iron and Steel
- Y—Black Nickel Plated Only
- Z—Chromium Plated
- A.A—Buffed and Chromium Plated
- A.B—Hardened, Polished, Buffed and Chromium Plated
- A.E—Hardened, Bright Rumbled and Nickel Plated
- A.F—Hardened, Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated
- A.G—Alumilite (Plain)
- A.H—Alumilite (Dyed) Color Must be Stated
- A.J—Polished, Nickel Plated and Chromium Plated
- A.K—Hardened, Polished, Nickel Plated and Chromium Plated
- A.L—Heat Treated for Toughness
- A.L.D—Heat Treated for Toughness and Polished
- A.L.X—Heat Treated for Toughness and Black Oxide

INSTRUCTIONS FOR ORDERING

- A.S—Black Moulded Phenolic
- A.T—Beige Moulded Phenolic
- A.U—Brown Moulded Phenolic
- A.W—Hardened then Flame Coated with Tungsten Carbide
- B.A—Chrome Nickel Satin Finish
- B.B—Hardened and Chrome Nickel, Satin Finished
- C.R—Hardened and Phosphate Coating Formed on Surface of Steel
- F.J—Hardened, Polished and Nickel Plated
- T.A—Hardened, Polished, Copper and Nickel Plated and Buffed
- T.B—Copper and Nickel Plated and Polished
- T.J—Copper and Nickel Plated Only
- T.K—Hardened, Copper and Nickel Plated
- T.L—Copper and Brass Plated
- T.M—Copper Plated and Oxidized
- X.C—Hardened and Black Oxide for Iron and Steel
- Z.A—Hardened, Polished Nickel Plated, Buffed and Chromium Plated
- Z.B—Polished, Nickel Plated, Buffed and Chromium Plated
- Z.C—Hardened and Chromium Plated
- Z.D—Polished and Chromium Plated
- Z.G—Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated
- Z.J—Nickel and Chromium Plated
- Z.T—Copper and Chromium Plated

These letters **MUST BE USED** when they appear in the list; and **AFTER** the number as in the list.

In this series:

1 to 1500, 50001 to 51500 and 140001 to 142,000 are screw numbers

1501 to 1800 and 51500 to 51800 are nut numbers


1801 to 2000 and 51801 to 52000 are roller numbers

2001 to 50000 and 52001 to 140000 and 142001 to 190000 are Sewing Machine Parts, 190001 and upward are numbers of Electrical Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are **NOT TO BE USED** in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE FOR

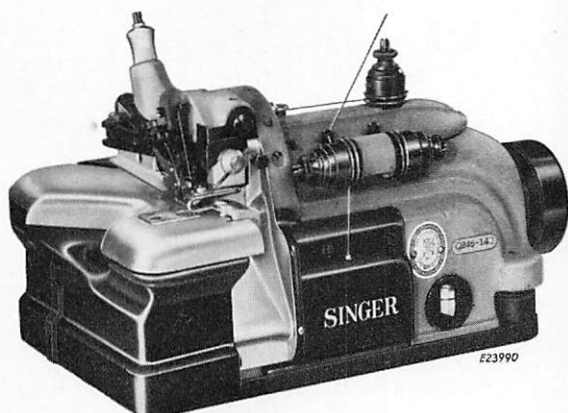

MACHINE No. 246-14

FOR TRIMMING, OVEREDGING AND BLIND STITCH
HEMMING OR WELTING LIGHT AND MEDIUM WEIGHT
FABRICS. ONE NEEDLE, ONE LOOPER. TWO - THREAD
OVEREDGE STITCH. GATHERING FEED. TRIMMER.

No.	PLATE	NAME
164347	24868	CHAIN CUTTER.....
51362AL	24868	CHAIN CUTTER SCREW (2).....
164001	24869	CHIP GUARD.....
1209J	24869	CHIP GUARD SCREW (LOWER).....
140509J	24869	CHIP GUARD SCREW (UPPER).....
164518	24877	CLOTH GUIDE.....
160748	24877	CLOTH GUIDE BRACKET.....
208J	24877	CLOTH GUIDE BRACKET SCREW.....
140061K	24877	CLOTH GUIDE HINGE SCREW.....
164519	-----	CLOTH GUIDE (SWING-OUT) COMPLETE, Nos. 140061K, 160748 AND 164518..
164512	24869	CLOTH PLATE EXTENSION.....
51408J	24869	CLOTH PLATE EXTENSION SCREW (2)....
1700J	24869	CLOTH PLATE EXTENSION SCREW NUT....
931084	24869	CLOTH PLATE EXTENSION SCREW NUT LOCK WASHER.....
164205	24869	CLOTH PLATE LOCK SPRING.....
1700J	24869	CLOTH PLATE LOCK SPRING NUT.....
931084	24869	CLOTH PLATE LOCK SPRING NUT LOCK WASHER.....

No.	PLATE	NAME
1250AL	24869	CLOTH PLATE LOCK SPRING SCREW STUD.
164104	24869	CLOTH PLATE PLUNGER.....
164105	24869	CLOTH PLATE PLUNGER SPRING.....
624AL	24869	CLOTH PLATE PLUNGER SET SCREW.....
164106	24869	CLOTH PLATE POSITION COLLAR WITH TWO 624AL.....
624AL	24869	CLOTH PLATE POSITION COLLAR SET SCREW (2).....
164513	24869	CLOTH PLATE.....
164514	24869	CLOTH PLATE WITH EXTENSION COMPLETE, Nos. 164205, 164512, 164513 AND TWO EACH 1700J, 51408J AND 931084
164003	24827	FEED BAR HINGE PIN (ECCENTRIC).....
1389C	24827	FEED BAR HINGE PIN SET SCREW.....
164004	24827	FEED BAR SLIDE BLOCK (BACK) (2)....
1628C	24827	FEED BAR SLIDE BLOCK (BACK) NUT....
17022	24827	FEED BAR SLIDE BLOCK (BACK) NUT WASHER.....
164005	24827	FEED BAR SLIDE BLOCK (FRONT).....
164687	24827	FEED (BACK) BAR WITH 164010.....
164017	24827	FEED (BACK) BAR CONNECTION.....
164008	24827	FEED (BACK) BAR CONNECTION BEARING.
164009	24827	FEED (BACK) BAR CONNECTION HINGE SCREW STUD.....
1671C	24827	FEED (BACK) BAR CONNECTION HINGE SCREW STUD NUT.....
164010	24827	FEED (BACK) BAR CONNECTION HINGE SCREW STUD NUT POSITION PIN.....
164495	24873	FEED (BACK) DOG SECTION (LEFT).....
164243	24873	FEED (BACK) DOG SECTION (RIGHT)....
1100AL	24873	FEED (BACK) DOG SECTION (RIGHT) SCREW.....
164496	24873	FEED (BACK) DOG COMPLETE, Nos. 1100AL, 164243 AND 164495.....
1454F	24873	FEED (BACK) DOG SCREW.....
164020	24827	FEED (BACK) ECCENTRIC.....
		NOTE: FEED (BACK) ECCENTRIC No. 164020 IS FURNISHED IN 6 TO 16, 18, 20, 22, 24, 28, 32 AND 36 STITCHES TO THE INCH, UNLESS OTHERWISE STATED, No. 164020 (14 STITCHES TO THE INCH) IS SUPPLIED REGULARLY.
164006	24827	FEED (FRONT) BAR WITH 164010.....
164007	24827	FEED (FRONT) BAR CONNECTION.....
164018	24827	FEED (FRONT) BAR CONNECTION BEARING
164009	24827	FEED (FRONT) BAR CONNECTION HINGE SCREW STUD.....
1671C	24827	FEED (FRONT) BAR CONNECTION HINGE SCREW STUD NUT.....
164010	24827	FEED (FRONT) BAR CONNECTION HINGE SCREW STUD NUT POSITION PIN.....
164208	-----	FEED (BACK) AND (FRONT) BARS COM- plete, Nos. 164005, 164006, 164007, 164008, 164017, 164018, 164687 AND TWO EACH 1671C, 164004 AND 164009.....
164497	24873	FEED (FRONT) DOG.....
1454F	24873	FEED (FRONT) DOG SCREW.....
164020	24827	FEED (FRONT) ECCENTRIC.....
		NOTE: FEED (FRONT) ECCENTRIC No. 164020 IS FURNISHED IN 6 TO 16, 18, 20, 22, 24, 28, 32 AND 36 STITCHES TO THE INCH, UNLESS OTHERWISE STATED, No. 164020 (14 STITCHES TO THE INCH) IS SUPPLIED REGULARLY.

No.	PLATE	NAME
164520	24827	FEED ECCENTRIC COVER.....
164399	24827	FEED ECCENTRIC COVER BRACKET WITH 164023.....
157C	24827	FEED ECCENTRIC COVER BRACKET SCREW.
629K	24827	FEED ECCENTRIC COVER HINGE SCREW...
164401	24827	FEED ECCENTRIC COVER LATCH SPRING..
227J	24827	FEED ECCENTRIC COVER LATCH SPRING SCREW (2).....
164023	24827	FEED ECCENTRIC OIL WICK.....
164521	24827	FEED ECCENTRIC COVER COMPLETE, FOR USE WITH ECCENTRICS OF 4 STITCHES AND ABOVE NOS. 629K, 164399, 164401, 164520 AND TWO 227J.....
164025	24812	FEED LIFTING AND KNIFE (MOVABLE) ECCENTRIC.....
164455	24868	FINGER GUARD.....
164456	24868	FINGER GUARD ADAPTER.....
1259AL	24829	FINGER GUARD ADAPTER SCREW.....
1423J	24868	FINGER GUARD SCREW.....
164550	24868	KNIFE (MOVABLE).....
164027	24868	KNIFE (MOVABLE) CLAMP.....
140050C	24868	KNIFE (MOVABLE) CLAMP SCREW.....
164028	24868	KNIFE (MOVABLE) GUARD (LOWER).....
164458	24868	KNIFE (MOVABLE) GUARD (UPPER).....
164029	24868	KNIFE (MOVABLE) HOLDER.....
198J	24868	KNIFE (MOVABLE) HOLDER SCREW.....
164030	24868	KNIFE (MOVABLE) HOLDER SCREW BEAR- ING.....
164714	24868	KNIFE (MOVABLE) LEVER WITH 620AL...
164715	-----	KNIFE (MOVABLE) LEVER 164714 WITH 132583, 164035, 164136 AND 164153
164032	24868	KNIFE (MOVABLE) LEVER BEARING.....
447AL	24868	KNIFE (MOVABLE) LEVER BEARING SET SCREW (LONG).....
624AL	24868	KNIFE (MOVABLE) LEVER BEARING SET SCREW (SHORT).....
164373	24829	KNIFE (MOVABLE) LEVER COVER AND PRESSER BAR (UPRIGHT) HOUSING WITH 1259AL.....
50073J	24829	KNIFE (MOVABLE) LEVER COVER AND PRESSER BAR (UPRIGHT) HOUSING SCREW (2).....
164374	-----	KNIFE (MOVABLE) LEVER COVER AND PRESSER BAR (UPRIGHT) HOUSING COMPLETE, NOS. 50060K, 164137, 164138, 164139, 164142, 164143, 164144, 164194 AND 164373.....
164180	24868	KNIFE (MOVABLE) LEVER GUIDE.....
164181	24868	KNIFE (MOVABLE) LEVER GUIDE HOLDER WITH TWO 140239AL.....
164210	24868	KNIFE (MOVABLE) LEVER GUIDE HOLDER 164181 WITH 197J, 164177, 164180 AND 164182.....
164182	24868	KNIFE (MOVABLE) LEVER GUIDE HOLDER THREAD TUBE.....
447AL	24868	KNIFE (MOVABLE) LEVER GUIDE HOLDER THREAD TUBE SET SCREW (FRAME END)
140239AL	24868	KNIFE (MOVABLE) LEVER GUIDE HOLDER THREAD TUBE SET SCREW (HOLDER END).....
197J	24868	KNIFE (MOVABLE) LEVER GUIDE SCREW..
132583	24868	KNIFE (MOVABLE) LEVER HINGE PIN WITH 132584.....

No.	PLATE	NAME
132584	24868	KNIFE (MOVABLE) LEVER HINGE PIN OIL WICK.....
620AL	24868	KNIFE (MOVABLE) LEVER HINGE PIN SET SCREW.....
164034	24868	KNIFE (MOVABLE) LEVER HINGE STUD...
164035	-----	KNIFE (MOVABLE) LEVER HINGE STUD 164034 WITH 164036 AND 164269....
164036	24868	KNIFE (MOVABLE) LEVER HINGE STUD OIL WICK (LONG).....
164269	-----	KNIFE (MOVABLE) LEVER HINGE STUD OIL WICK (SHORT).....
447AL	24868	KNIFE (MOVABLE) LEVER HINGE STUD SET SCREW (BACK).....
1143AL	24868	KNIFE (MOVABLE) LEVER HINGE STUD SET SCREW (TOP).....
164728	24868	KNIFE (STATIONARY) (2).....
164744	24868	KNIFE (STATIONARY) CLAMPING GIB....
140788C	24868	KNIFE (STATIONARY) CLAMPING GIB SCREW.....
3146	24868	KNIFE (STATIONARY) CLAMPING GIB SCREW WASHER.....
164746	24868	KNIFE (STATIONARY) HOLDER.....
164747	-----	KNIFE (STATIONARY) HOLDER (ADJUST- ABLE) COMPLETE, Nos. 742F, 164745 AND 164746.....
164748	24868	KNIFE (STATIONARY) HOLDER (ADJUST- ABLE) WITH GIB COMPLETE, Nos. 3146, 140788C, 164744 AND 164747.
164590	24868	KNIFE (STATIONARY) HOLDER ADJUSTING STUD.....
190E	24868	KNIFE (STATIONARY) HOLDER ADJUSTING STUD CAP SCREW.....
39541	24868	KNIFE (STATIONARY) HOLDER ADJUSTING STUD CAP SCREW WASHER.....
164745	24868	KNIFE (STATIONARY) HOLDER BODY WITH TWO 50611C.....
50611C	24868	KNIFE (STATIONARY) HOLDER POSITION SCREW.....
742F	24868	KNIFE (STATIONARY) HOLDER SCREW....
164042	24868	KNIFE (STATIONARY) HOLDER SLEEVE...
140088E	24868	KNIFE (STATIONARY) HOLDER SLEEVE SCREW.....
59456	24868	KNIFE (STATIONARY) HOLDER SLEEVE SCREW WASHER.....
164043	24868	KNIFE (STATIONARY) HOLDER SPRING...
164525	24868	KNIFE (STATIONARY) HOLDER SPRING STUD.....
164462	24868	LINT STRIPPER WITH 735AL.....
735AL	24868	LINT STRIPPER SCREW.....
164045	24870	LOOPER.....
164046	24870	LOOPER CARRIER WITH 460AL, 50379F AND 164202.....
164660	24870	LOOPER CARRIER HOLDER WITH 1083C, 140393AL AND 140596AL.....
164661	-----	LOOPER CARRIER HOLDER 164660 WITH 1324C, 59456 AND 164046.....
1083C	24870	LOOPER CARRIER HOLDER CLAMPING SCREW
140596AL	-----	LOOPER CARRIER HOLDER SET SCREW (LEFT).....
140393AL	24870	LOOPER CARRIER HOLDER SET SCREW (RIGHT).....
1324C	24870	LOOPER CARRIER SCREW.....
460AL	24870	LOOPER CARRIER SCREW SET SCREW....

No.	PLATE	NAME
59456	24870	LOOPER CARRIER SCREW WASHER.....
164048	24870	LOOPER DRIVING SHAFT.....
164049	24870	LOOPER DRIVING SHAFT BUSHING (BACK)
140394E	24870	LOOPER DRIVING SHAFT BUSHING (BACK)
		CAP SCREW.....
164293	24870	LOOPER DRIVING SHAFT BUSHING (BACK)
		CAP SCREW WASHER (FIBER).....
164737	24870	LOOPER DRIVING SHAFT BUSHING (FRONT)
164051	24870	LOOPER DRIVING SHAFT CRANK WITH
		1083C.....
1083C	24870	LOOPER DRIVING SHAFT CRANK CLAMPING
		SCREW.....
164052	24812	LOOPER DRIVING SHAFT CRANK CONNEC-
		TION WITH TWO EACH 171AL AND
		140159AL.....
164215	-----	LOOPER DRIVING SHAFT CRANK 164051
		WITH 164052.....
171AL	24812	LOOPER DRIVING SHAFT CRANK CONNEC-
		TION CAP (LOWER) SCREW (2).....
140159AL	24812	LOOPER DRIVING SHAFT CRANK CONNEC-
		TION CAP (UPPER) SCREW (2).....
164067	24870	LOOPER DRIVING SHAFT CRANK KEY.....
1324C	24870	LOOPER DRIVING SHAFT CRANK KEY SCREW
45057	24870	LOOPER DRIVING SHAFT CRANK KEY
		SCREW WASHER.....
164053	24870	LOOPER DRIVING SHAFT CRANK THRUST
		BEARING.....
164739	24870	LOOPER DRIVING SHAFT OIL RING
		(RUBBER).....
164740	24870	LOOPER DRIVING SHAFT OIL RING
		SPACER.....
50379F	24870	LOOPER SET SCREW.....
164202	24870	LOOPER STOP PIN.....
164349	-----	LOOPER THREAD TUBE.....
853AL	24877	LOOPER THREAD TUBE SET SCREW.....
*164072	-----	MACHINE FRAME.....
*164526	-----	MACHINE FRAME COMPLETE, Nos. 140396E,
		164072, 164077, 164528 AND THREE
		140395C.....
164074	24813	MACHINE FRAME BOTTOM COVER.....
164075	24813	MACHINE FRAME BOTTOM COVER GASKET..
914C	24813	MACHINE FRAME BOTTOM COVER SCREW
		(13).....
*164527	-----	MACHINE FRAME BRACKET.....
*164528	-----	MACHINE FRAME BRACKET 164527 WITH
		164207 AND TWO 187E.....
164207	24871	MACHINE FRAME BRACKET KEY.....
187E	24871	MACHINE FRAME BRACKET KEY SCREW (2)
140396E	24871	MACHINE FRAME BRACKET SCREW (LARGE)
164077	24871	MACHINE FRAME BRACKET SCREW (LARGE)
		WASHER (FIBER).....
164229	24871	MACHINE FRAME BRACKET SCREW (LARGE)
		WASHER (FELT).....
140395C	24871	MACHINE FRAME BRACKET SCREW (SMALL)
		(3).....
164515	24813	MACHINE FRAME COVER (BACK).....
50571J	24813	MACHINE FRAME COVER (BACK) SCREW
		(LONG) (2).....
914J	24813	MACHINE FRAME COVER (BACK) SCREW
		(SHORT).....
164516	24813	MACHINE FRAME COVER (BACK) 164515
		WITH 1637K AND 140228C.....
164081	24871	MACHINE FRAME OIL LEAD.....

No.	PLATE	NAME
140088E	24871	MACHINE FRAME OIL LEAD SCREW.....
1698J	24871	MACHINE FRAME OIL LEAD SCREW NUT....
164082	24871	MACHINE FRAME OIL PLUG BRACKET.....
140346AL	24871	MACHINE FRAME OIL PLUG BRACKET SET SCREW.....
164083	24871	MACHINE FRAME OIL SCREEN.....
206J	24871	MACHINE FRAME OIL SCREEN SCREW (3)..
164603	24871	MACHINE FRAME OIL SPLASH GUARD (INTERNAL).....
164605	24871	MACHINE FRAME OIL SPLASH GUARD (INTERNAL) OIL PAD.....
164606	24871	MACHINE FRAME OIL SPLASH GUARD (INTERNAL) OIL PAD FASTENER.....
164604	24871	MACHINE FRAME OIL SPLASH GUARD (INTERNAL) COMPLETE, Nos. 164603, 164605 AND 164606.....
164085	24829	MACHINE FRAME OIL SPLASH GUARD (TOP)
51023W	24829	MACHINE FRAME OIL SPLASH GUARD (TOP) SCREW (2).....
164722	24871	MACHINE FRAME OIL TUBE WITH 164602..
447AL	24871	MACHINE FRAME OIL TUBE SET SCREW....
164602	24871	MACHINE FRAME OIL TUBE WICK.....
164089	24812	MACHINE FRAME ROTARY SHAFT.....
164090	-----	MACHINE FRAME ROTARY SHAFT 164089 WITH 164097, 164215, 164216, 164217 AND TWO EACH 164093 AND 164232.....
139026	24812	MACHINE FRAME ROTARY SHAFT BALL BEARING.....
164092	24812	MACHINE FRAME ROTARY SHAFT BALL BEARING HOUSING.....
51369C	24812	MACHINE FRAME ROTARY SHAFT BALL BEARING HOUSING SCREW (3).....
164093	24812	MACHINE FRAME ROTARY SHAFT BALL SLEEVE (TWO PIECES) (2).....
164232	24812	MACHINE FRAME ROTARY SHAFT BALL SLEEVE GUIDE (2).....
164600	24812	MACHINE FRAME ROTARY SHAFT BUSHING (FRONT).....
1036AL	24812	MACHINE FRAME ROTARY SHAFT BUSHING (FRONT) SET SCREW.....
164095	24812	MACHINE FRAME ROTARY SHAFT BUSHING (INTERMEDIATE).....
51332C	24812	MACHINE FRAME ROTARY SHAFT BUSHING (INTERMEDIATE) SET SCREW.....
164096	24812	MACHINE FRAME ROTARY SHAFT COUNTER- BALANCE WITH 1036AL.....
1036AL	24812	MACHINE FRAME ROTARY SHAFT COUNTER- BALANCE SET SCREW.....
164097	24812	MACHINE FRAME ROTARY SHAFT KEY.....
51649C	24812	MACHINE FRAME ROTARY SHAFT NUT.....
131056	24812	MACHINE FRAME ROTARY SHAFT NUT WASHER.....
164098	24812	MACHINE FRAME ROTARY SHAFT OIL AND BALL BEARING GREASE RETAINER.....
164099	24812	MACHINE FRAME ROTARY SHAFT SCREW STUD.....
164100	24812	MACHINE FRAME ROTARY SHAFT THRUST BEARING.....
164101	24872	MACHINE FRAME TOP COVER.....
164214	-----	MACHINE FRAME TOP COVER 164101 WITH 330J, 164103 AND TWO 164418.....
164102	24872	MACHINE FRAME TOP COVER GASKET.....

No.	PLATE	NAME
164103	24872	MACHINE FRAME TOP COVER OIL LEAD....
330J	24872	MACHINE FRAME TOP COVER OIL LEAD SCREW.....
51369J	24872	MACHINE FRAME TOP COVER SCREW (3)...
164231	24812	MACHINE PULLEY (ROUND AND "V" BELT) WITH TWO 448AL.....
164071	24812	MACHINE PULLEY CAP.....
140416X	24812	MACHINE PULLEY CAP SCREW.....
448AL	24812	MACHINE PULLEY SET SCREW (2).....
164109	24829	NEEDLE CLAMP.....
51720C	24829	NEEDLE CLAMPING NUT.....
164110	24829	NEEDLE DRIVING SHAFT WITH 164118....
164275	-----	NEEDLE DRIVING SHAFT 164110 WITH 51720C, 164109 AND 164117.....
164111	24829	NEEDLE DRIVING SHAFT BUSHING.....
164112	24829	NEEDLE DRIVING SHAFT BUSHING CAP....
164113	24829	NEEDLE DRIVING SHAFT BUSHING OIL LEAD.....
452AL	24829	NEEDLE DRIVING SHAFT BUSHING OIL LEAD HOLE PLUG SCREW.....
164114	24829	NEEDLE DRIVING SHAFT CRANK WITH 1083C AND TWO 140596AL.....
164115	24829	NEEDLE DRIVING SHAFT CRANK BALL.....
1083C	24829	NEEDLE DRIVING SHAFT CRANK CLAMPING SCREW.....
164217	24812	NEEDLE DRIVING SHAFT CRANK CONNEC- TION WITH 164115 AND TWO EACH 157AL AND 171AL.....
157AL	24812	NEEDLE DRIVING SHAFT CRANK CONNEC- TION CAP (LOWER) SCREW (2).....
171AL	24812	NEEDLE DRIVING SHAFT CRANK CONNEC- TION CAP (UPPER) SCREW (2).....
140596AL	24829	NEEDLE DRIVING SHAFT CRANK SET SCREW (2).....
164117	24829	NEEDLE HOLDER.....
164118	24829	NEEDLE STOP PIN.....
164119	24812	OIL AGITATOR.....
164120	24871	OIL COOLER WITH TWO 164125.....
164121	24871	OIL COOLER COVER.....
164123	24871	OIL COOLER COVER 164121 WITH 164135.
164122	24871	OIL COOLER COVER GASKET.....
145J	24871	OIL COOLER COVER SCREW.....
164124	24871	OIL COOLER GASKET.....
164125	24871	OIL COOLER OIL PIPE (OUTLET, LEFT)..
164125	24871	OIL COOLER OIL PIPE (OUTLET, RIGHT)..
164126	24871	OIL COOLER OIL TUBE WITH 138269 AND 164128.....
164736	-----	OIL COOLER OIL TUBE 164126 WITH 51630 AND 164127.....
164127	24871	OIL COOLER OIL TUBE COUPLING.....
51630	24871	OIL COOLER OIL TUBE LOCK NUT.....
138269	24871	OIL COOLER OIL TUBE SLEEVE.....
164128	24871	OIL COOLER OIL TUBE WICK.....
51139J	24871	OIL COOLER SCREW (LONG) (2).....
1324J	24871	OIL COOLER SCREW (SHORT).....
164135	24871	OIL CUP FOR FILLING MACHINE.....
164607	24868	OIL DEFLECTOR.....
164131	24871	OIL SIGHT GAUGE BACKGROUND DISC.....
164132	24871	OIL SIGHT GAUGE BACKGROUND DISC GASKET.....
164133	24871	OIL SIGHT GAUGE WINDOW.....
164132	24871	OIL SIGHT GAUGE WINDOW GASKET.....
164134	24871	OIL SIGHT GAUGE WINDOW RETAINER.....

No.	PLATE	NAME
164132	24871	OIL SIGHT GAUGE WINDOW RETAINER GASKET.....
1485J	24871	OIL SIGHT GAUGE WINDOW RETAINER SCREW (2).....
164136	24868	PRESSER BAR BRACKET.....
164137	24829	PRESSER BAR LIFTING BRACKET WITH 462AL, 624AL AND 51846.....
51846	24829	PRESSER BAR LIFTING BRACKET ROLLER AND STUD.....
624AL	24829	PRESSER BAR LIFTING BRACKET SET SCREW (LONG).....
462AL	24829	PRESSER BAR LIFTING BRACKET SET SCREW (SHORT).....
164138	24829	PRESSER BAR LIFTING LEVER.....
164139	24829	PRESSER BAR LIFTING LEVER SPRING....
140228C	24813	PRESSER BAR LIFTING LEVER STOP SCREW
1637K	24813	PRESSER BAR LIFTING LEVER STOP SCREW NUT.....
164350	24868	PRESSER BAR (SWING-OUT).....
164141	24868	PRESSER BAR (SWING-OUT) LIFTING SCREW STUD.....
1700J	24868	PRESSER BAR (SWING-OUT) LIFTING SCREW NUT.....
164142	24829	PRESSER BAR (SWING-OUT) OPENING LEVER.....
50060K	24829	PRESSER BAR (SWING-OUT) OPENING LEVER HINGE SCREW.....
140510C	24868	PRESSER BAR (SWING-OUT) PIVOT SCREW.
164351	24868	PRESSER BAR (SWING-OUT) PIVOT SCREW LOCK WASHER.....
51362AL	24868	PRESSER BAR (SWING-OUT) PIVOT SCREW LOCK WASHER SCREW.....
164143	24829	PRESSER BAR (UPRIGHT).....
164144	24829	PRESSER BAR (UPRIGHT) SPRING.....
164416	-----	PRESSER BAR (UPRIGHT) SPRING (HEAVY)
164509	24873	PRESSER FOOT BODY (HINGED).....
164356	24873	PRESSER FOOT CHAINING-OFF FINGER....
164147	24873	PRESSER FOOT CLAMPING PLATE.....
50225J	24873	PRESSER FOOT CLAMPING PLATE SCREW...
164517	24874	PRESSER FOOT HEMMING GUIDE FOR 1/4 IN., 3/8 IN., 1/2 IN., 5/8 IN., 3/4 IN., 7/8 IN., 1 IN.; 1-1/8 IN., 1-1/4 IN., 1-3/8 IN. AND 1-1/2 IN. GAUGES.....
NOTE: WHEN ORDERING No. 164517 GAUGE RE- QUIRED MUST BE STATED. UNLESS OTHER- WISE SPECIFIED No. 164517 WILL BE FURNISHED IN 3/4 IN. GAUGE.		
50225J	24873	PRESSER FOOT HEMMING GUIDE CLAMPING SCREW.....
164510	24873	PRESSER FOOT HEMMING GUIDE CLAMPING SCREW WASHER.....
164511	24873	PRESSER FOOT (HINGED) COMPLETE, Nos. 164147, 164356, 164509, 164510 AND TWO 50225J.....
164194	24829	PRESSURE REGULATING THUMB SCREW....
164252	24870	SPREADER.....
164056	24870	SPREADER CARRIER WITH 50370AL.....
164828	24870	SPREADER CARRIER CONNECTION.....
164829	-----	SPREADER CARRIER CONNECTION AND GUIDE BAR, Nos. 1700J, 50420AL, 164785, 164786 AND 164828.....

No.	PLATE	NAME
164597	24870	SPREADER CARRIER CONNECTION GUIDE BAR BRACKET WITH TWO 462AL.....
914C	24870	SPREADER CARRIER CONNECTION GUIDE BAR BRACKET SCREW (LEFT).....
1057AL	24870	SPREADER CARRIER CONNECTION GUIDE BAR BRACKET SCREW (RIGHT).....
164785	24870	SPREADER CARRIER CONNECTION GUIDE BAR OIL CONTROLLING SCREW SEAT (BRASS).....
50420AL	24870	SPREADER CARRIER CONNECTION GUIDE BAR OIL PLUG SCREW.....
1700J	24870	SPREADER CARRIER CONNECTION GUIDE BAR OIL PLUG SCREW NUT.....
164786	24870	SPREADER CARRIER CONNECTION GUIDE BAR OIL WICK.....
462AL	24870	SPREADER CARRIER CONNECTION GUIDE BAR SET SCREW (2).....
164061	24870	SPREADER CARRIER CONNECTION HINGE STUD WITH 1019AL.....
1443J	24870	SPREADER CARRIER CONNECTION HINGE STUD CAP SCREW.....
164397	24870	SPREADER CARRIER CONNECTION HINGE STUD ADJUSTING PIN.....
1019AL	-----	SPREADER CARRIER CONNECTION HINGE STUD ADJUSTING PIN SET SCREW.....
132565	24870	SPREADER CARRIER HINGE PIN.....
50370AL	24870	SPREADER CARRIER HINGE PIN SET SCREW
164062	24870	SPREADER DRIVING LEVER WITH 1083C AND TWO 140596AL.....
164830	-----	SPREADER DRIVING LEVER 164062 WITH 1443J, 1700J, 132565, 164056, 164061, 164068, 164397, 164597 AND 164829.....
1083C	24870	SPREADER DRIVING LEVER CLAMPING SCREW.....
140596AL	24870	SPREADER DRIVING LEVER SET SCREW (2)
164063	24870	SPREADER DRIVING SHAFT.....
164049	24870	SPREADER DRIVING SHAFT BUSHING (BACK)
140394E	24870	SPREADER DRIVING SHAFT BUSHING (BACK) CAP SCREW.....
164293	24870	SPREADER DRIVING SHAFT BUSHING (BACK) CAP SCREW WASHER (FIBER)...
164738	24870	SPREADER DRIVING SHAFT BUSHING (FRONT).....
164066	24870	SPREADER DRIVING SHAFT CRANK WITH 1083C.....
164216	-----	SPREADER DRIVING SHAFT CRANK 164066 WITH 164052.....
1083C	24870	SPREADER DRIVING SHAFT CRANK CLAMP- ING SCREW.....
164052	24812	SPREADER DRIVING SHAFT CRANK CON- NECTION WITH TWO EACH 171AL AND 140159AL.....
171AL	24812	SPREADER DRIVING SHAFT CRANK CON- NECTION CAP (LOWER) SCREW (2).....
140159AL	24812	SPREADER DRIVING SHAFT CRANK CON- NECTION CAP (UPPER) SCREW (2).....
164067	24870	SPREADER DRIVING SHAFT CRANK KEY....
1324C	24870	SPREADER DRIVING SHAFT CRANK KEY SCREW.....
45057	24870	SPREADER DRIVING SHAFT CRANK KEY SCREW WASHER.....

No.	PLATE	NAME
164053	24870	SPREADER DRIVING SHAFT CRANK THRUST BEARING.....
164739	24870	SPREADER DRIVING SHAFT OIL RING (RUBBER).....
164740	24870	SPREADER DRIVING SHAFT OIL RING SPACER.....
164068	24870	SPREADER LOCKING SCREW STUD.....
1700J	24870	SPREADER LOCKING SCREW STUD.....
164219	24870	SPREADER POSITION COLLAR WITH 904AL.
904AL	24870	SPREADER POSITION COLLAR SET SCREW..
2102	24872	TENSION (HEAVY) DISC (2).....
164155	24872	TENSION (HEAVY) REGULATING THUMB NUT
50133C	24872	TENSION (HEAVY) SCREW STUD.....
164156	-----	TENSION (HEAVY) SCREW STUD 50133C WITH 164155.....
164161	24872	TENSION (HEAVY) SPRING.....
59537	24872	TENSION (HEAVY) SPRING BUSHING.....
164158	24872	TENSION (HEAVY) SPRING COVER.....
164162	24872	TENSION (HEAVY) COMPLETE, Nos. 59537, 164156, 164158, 164161 AND TWO 2102.....
2102	24872	TENSION (LIGHT) DISC (4).....
164155	24872	TENSION (LIGHT) REGULATING THUMB NUT (2).....
50133C	24872	TENSION (LIGHT) SCREW STUD (2).....
164156	-----	TENSION (LIGHT) SCREW STUD 50133C WITH 164155 (2).....
164157	24872	TENSION (LIGHT) SPRING (2).....
59537	24872	TENSION (LIGHT) SPRING BUSHING (2)..
164158	24872	TENSION (LIGHT) SPRING COVER (2)....
164160	24872	TENSION (LIGHT) COMPLETE, Nos. 59537, 164156, 164157, 164158 AND TWO 2102 (2).....
164285	24872	TENSION (LOOPER THREAD) THREAD GUIDE (LEFT).....
164286	24872	TENSION (LOOPER THREAD) THREAD GUIDE (RIGHT).....
164159	24872	TENSION (NEEDLE THREAD) THREAD GUIDE
164418	24872	TENSION THREAD EYELET (2).....
164091	24870	THREAD (LOOPER) STRIPPER AND TAKE-UP WITH 164555.....
164163	24761	THREAD (LOOPER) STRIPPER AND TAKE-UP EYELET (ADJUSTABLE).....
1443J	24761	THREAD (LOOPER) STRIPPER AND TAKE-UP EYELET (ADJUSTABLE) SCREW.....
164555	-----	THREAD (LOOPER) STRIPPER AND TAKE-UP GUIDE WIRE.....
187E	24870	THREAD (LOOPER) STRIPPER AND TAKE-UP SCREW.....
17022	24870	THREAD (LOOPER) STRIPPER AND TAKE-UP SCREW WASHER.....
164164	24761	THREAD (LOOPER) THREAD EYELET (MOVABLE).....
1423J	24761	THREAD (LOOPER) THREAD EYELET SCREW.
164165	24761	THREAD (LOOPER) THREAD EYELET (STATIONARY).....
1607J	24761	THREAD (LOOPER) THREAD EYELET (STATIONARY) NUT.....
164166	24761	THREAD (LOOPER) TUBE.....
624AL	24761	THREAD (LOOPER) TUBE SET SCREW.....
164167	24761	THREAD (LOOPER) PLATE WITH 624AL....
164168	24761	THREAD (LOOPER) PLATE COVER.....
164206	-----	THREAD (LOOPER) PLATE COVER 164168 WITH 164169 AND 164170.....

No.	PLATE	NAME
164169	24761	THREAD (LOOPER) PLATE COVER HINGE...
164170	24761	THREAD (LOOPER) PLATE COVER HINGE PIN.....
164171	24761	THREAD (LOOPER) PLATE COVER SPRING (2).....
332J	24761	THREAD (LOOPER) PLATE COVER SPRING SCREW (2).....
896AL	24761	THREAD (LOOPER) PLATE SCREW (2).....
164173	24761	THREAD (LOOPER) PLATE THREAD BUSHING
50318W	24761	THREAD (LOOPER) PLATE THREAD BUSHING SCREW.....
164174	-----	THREAD (LOOPER) PLATE COMPLETE, Nos. 1423J, 1443J, 1607J, 50318W, 164163, 164164, 164165, 164166, 164167, 164173, 164206 AND TWO EACH 332J AND 164171.....
164175	24870	THREAD (LOOPER) TAKE-UP.....
164176	24870	THREAD (LOOPER) TAKE-UP PLATE.....
190E	24870	THREAD (LOOPER) TAKE-UP SCREW (LOWER)
1443J	24870	THREAD (LOOPER) TAKE-UP SCREW (UPPER)
164381	24868	THREAD (NEEDLE) CONTROLLER.....
164153	24868	THREAD (NEEDLE) CONTROLLER LEVER....
1443J	24868	THREAD (NEEDLE) CONTROLLER SCREW (2)
164177	24868	THREAD EYELET (NEEDLE THREAD).....
140239AL	24868	THREAD EYELET (NEEDLE THREAD) SET SCREW.....
164358	24873	THROAT PLATE.....
1094F	24873	THROAT PLATE SCREW (2).....

FITTINGS

SET OF FITTINGS COMPLETE NO. 164382

For Rayon, Balbriggan and Nylon
For Two-Thread Blind Hem Stitch

No.	PLATE	NAME
164234	24876	BLIND STITCH HEMMING ATTACHMENT ADJUSTING SLIDE (CYLINDRICAL).....
140456K	24876	BLIND STITCH HEMMING ATTACHMENT ADJUSTING THUMB SCREW.....
140457J	24876	BLIND STITCH HEMMING ATTACHMENT ADJUSTING THUMB SCREW LOCKING SCREW.....
164235	24876	BLIND STITCH HEMMING ATTACHMENT HINGE BRACKET.....
164236	24876	BLIND STITCH HEMMING ATTACHMENT SUPPORT.....
164238	24876	BLIND STITCH HEMMING ATTACHMENT SUPPORT CAP.....
140458C	24876	BLIND STITCH HEMMING ATTACHMENT THUMB SCREW.....
164237	24876	BLIND STITCH HEMMING ATTACHMENT SUPPORT COMPLETE, Nos. 140456K, 140457J, 140458C, 164234, 164235, 164236 AND 164238.....
164531	24876	FEED (BACK) DOG SECTION (LEFT).....
164243	24876	FEED (BACK) DOG SECTION (RIGHT).....
1100AL	24876	FEED (BACK) DOG SECTION (RIGHT) SCREW.....
164532	24876	FEED (BACK) DOG COMPLETE, Nos. 1100AL, 164243 AND 164531.....
164533	24876	FEED (FRONT) DOG.....
164354	24876	PRESSER FOOT BODY (HINGED).....
164356	24876	PRESSER FOOT CHAINING-OFF FINGER....
164147	24876	PRESSER FOOT CLAMPING PLATE.....
50225J	24876	PRESSER FOOT CLAMPING PLATE SCREW...
164357	24876	PRESSER FOOT (HINGED) COMPLETE, Nos. 50225J, 164147, 164354 AND 164356.
164382	24876	SET OF FITTINGS COMPLETE, Nos. 164237, 164357, 164532 AND 164533.

SET OF FITTINGS COMPLETE NO. 164383

For Rayon, Balbriggan and Nylon
For Two-Thread Blind Hem Stitch

No.	PLATE	NAME
164234	24876	BLIND STITCH HEMMING ATTACHMENT ADJUSTING SLIDE (CYLINDRICAL).....
140456K	24876	BLIND STITCH HEMMING ATTACHMENT ADJUSTING THUMB SCREW.....
140457J	24876	BLIND STITCH HEMMING ATTACHMENT ADJUSTING THUMB SCREW LOCKING SCREW.....
164235	24876	BLIND STITCH HEMMING ATTACHMENT HINGE BRACKET.....
164236	24876	BLIND STITCH HEMMING ATTACHMENT SUPPORT.....
164238	24876	BLIND STITCH HEMMING ATTACHMENT SUPPORT CAP.....
140458C	24876	BLIND STITCH HEMMING ATTACHMENT THUMB SCREW.....

No.	PLATE	NAME
164237	24876	BLIND STITCH HEMMING ATTACHMENT SUPPORT COMPLETE, Nos. 140456K, 140457J, 140458C, 164234, 164235, 164236 AND 164238.....
164242	24876	FEED {BACK} DOG SECTION {LEFT}.....
164243	24876	FEED {BACK} DOG SECTION {RIGHT}.....
1100AL	24876	FEED {BACK} DOG SECTION {RIGHT} SCREW.....
164244	24876	FEED {BACK} DOG COMPLETE, Nos. 1100AL, 164242 AND 164243.....
164348	24876	FEED {FRONT} DOG.....
164354	24876	PRESSER FOOT BODY (HINGED).....
164356	24876	PRESSER FOOT CHAINING-OFF FINGER....
164147	24876	PRESSER FOOT CLAMPING PLATE.....
50225J	24876	PRESSER FOOT CLAMPING PLATE SCREW...
164357	24876	PRESSER FOOT (HINGED) COMPLETE, Nos. 50225J, 164147, 164354 AND 164356.
164383	24876	SET OF FITTINGS COMPLETE, Nos. 164237, 164244, 164348 AND 164357.

SET OF FITTINGS COMPLETE NO. 164539

For Light and Medium Weight Sweater Materials
For Two-Thread Blind Hem Stitch
(Wire Hemming Fittings) (Fine Feed)

NOTE: THIS MACHINE IS REGULARLY FITTED
WITH SET No. 164539, UNLESS OTHER
FITTINGS ARE SPECIFIED ON ORDER.

No.	PLATE	NAME
164347	24874	CHAIN CUTTER.....
160749	24874	EDGE GUIDE (FLOATING) COMPLETE.....
164495	24874	FEED {BACK} DOG SECTION {LEFT}.....
164243	24874	FEED {BACK} DOG SECTION {RIGHT}.....
1100AL	24874	FEED {BACK} DOG SECTION {RIGHT} SCREW.....
164496	24874	FEED {BACK} DOG COMPLETE, Nos. 1100AL, 164243 AND 164495.....
164497	24874	FEED {FRONT} DOG.....
164550	24874	KNIFE (MOVABLE).....
164350	24874	PRESSER BAR (SWING-OUT).....
164509	24874	PRESSER FOOT BODY (HINGED).....
164356	24874	PRESSER FOOT CHAINING-OFF FINGER....
164147	24874	PRESSER FOOT CLAMPING PLATE.....
50225J	24874	PRESSER FOOT CLAMPING PLATE SCREW...
164517	24874	PRESSER FOOT HEMMING GUIDE FOR 1/4 IN., 3/8 IN., 1/2 IN., 5/8 IN., 3/4 IN., 7/8 IN., 1 IN., 1-1/8 IN., 1-1/4 IN., 1-3/8 IN. AND 1-1/2 IN. GAUGES.....
NOTE: WHEN ORDERING No. 164517 GAUGE RE- QUIRED MUST BE STATED, UNLESS OTHER- WISE SPECIFIED No. 164517 WILL BE FURNISHED IN 3/4 IN. GAUGE.		
50225J	24874	PRESSER FOOT HEMMING GUIDE CLAMPING SCREW.....
164510	24874	PRESSER FOOT HEMMING GUIDE CLAMPING SCREW WASHER.....
164511	24874	PRESSER FOOT (HINGED) COMPLETE, Nos. 164147, 164356, 164509, 164510 AND TWO 50225J.....

FITTINGS

No.	PLATE	NAME
164252	24874	SPREADER.....
164091	24874	THREAD { LOOPER } STRIPPER AND TAKE-UP
164175	24874	THREAD { LOOPER } TAKE-UP.....
164381	24874	THREAD { NEEDLE } CONTROLLER.....
164358	24874	THROAT PLATE.....
164539	24874	SET OF FITTINGS COMPLETE, Nos. 160749, 164091, 164175, 164252, 164347, 164350, 164358, 164381, 164496, 164497, 164511, 164517 AND 164550.....

SET OF FITTINGS COMPLETE NO. 164540

For Rayon, Balbriggan and Nylon
For Two-Thread Blind Hem Stitch
(Wire Hemming Fittings) (Coarse Feed)

No.	PLATE	NAME
164531	24875	FEED { BACK } DOG SECTION { LEFT }.....
164243	24875	FEED { BACK } DOG SECTION { RIGHT }.....
1100AL	24875	FEED { BACK } DOG SECTION { RIGHT } SCREW.....
164532	24875	FEED { BACK } DOG COMPLETE, Nos. 1100AL, 164243 AND 164531.....
164533	24875	FEED { FRONT } DOG.....
164540	24875	SET OF FITTINGS COMPLETE, Nos. 164532 AND 164533.....

ACCESSORIES

No.	PLATE	NAME
164203	24826	FEED ECCENTRIC EXTRACTOR (NOT REGULARLY FURNISHED WITH MACHINE).
164592	24826	GAUGE (NOT REGULARLY FURNISHED WITH MACHINE).....
160725	24826	OIL CONTAINER.....
160727	24826	OIL CONTAINER (FILLED, 5 OZ. MFG. OIL, LIGHT GRADE, NOT STAINLESS), Nos. 160725 AND 160726.....
160726	24826	OIL CONTAINER CAP.....
160728	24826	OIL CONTAINER SPOUT, FOR USE WHEN FILLING OIL RESERVOIR.....
164198	24826	PRESSER BAR LIFTING CHAIN SPRING (UNDER TABLE).....
26026	24826	SCREW DRIVER.....
164196	24826	THREADER (6).....
164204	24826	TWEEZERS.....
164197	24826	WRENCH { SOCKET }.....
10875	-----	WRENCH { FLAT } FOR 1701 AND 51649....
164831	-----	WRENCH { FLAT } FOR 1700.....

BELT GUARD (Adjustable)

No.	PLATE	NAME
164183	24866	BELT GUARD.....
164199	24866	BELT GUARD BRACKET (BACK).....
164200	24866	BELT GUARD BRACKET (FRONT).....
51326J	24866	BELT GUARD SCREW (2).....
164201	24866	BELT GUARD (ADJUSTABLE) COMPLETE, Nos. 164183, 164199, 164200 AND TWO EACH 51326J AND WOOD SCREWS 3/4 IN. No. 7 F.H.....

BLIND STITCH HEMMING ATTACHMENT (WITH FOLDER) FLIP-UP TYPE COMPLETE, NO. 160381, FOR GENERAL WORK

No.	PLATE	NAME
160376	24877	FOLDER FOR 1/2 IN. TO 2 IN. HEM, IN STOPS OF 1/8 IN.....
		NOTE: WHEN ORDERING No. 160376, SIZE OF HEM REQUIRED MUST BE STATED.
160377	24877	FOLDER HINGE.....
160378	24877	FOLDER HINGE BRACKET WITH 904AL.....
59480	24877	FOLDER HINGE PIN.....
904AL	24877	FOLDER HINGE PIN SET SCREW.....
160574	-----	FOLDER HOLDER COMPLETE, Nos. 335J, 1628K, 59480, 160377, 160378, 160379 AND 160380.....
160379	24877	FOLDER SCREW STUD.....
1628K	24877	FOLDER SCREW STUD NUT.....
160380	24877	FOLDER STOP PLATE.....
335J	24877	FOLDER STOP PLATE SCREW.....
160381	24877	BLIND STITCH HEMMING ATTACHMENT (WITH FOLDER) COMPLETE, FOR 1/2 IN. TO 2 IN. HEM, IN STEPS OF 1/8 IN., Nos. 160376 AND 160574.....
		NOTE: WHEN ORDERING No. 160381, SIZE OF HEM REQUIRED MUST BE STATED.

BLIND STITCH HEMMING ATTACHMENT (WITH FOLDER) YIELDING TYPE COMPLETE, NO. 160384, FOR TUBULAR WORK

No.	PLATE	NAME
160385	24877	FOLDER FOR 1/2 IN. TO 1-1/2 IN. HEM, IN STEPS OF 1/8 IN.....
		NOTE: WHEN ORDERING No. 160385, SIZE OF HEM REQUIRED MUST BE STATED.
160383	24877	FOLDER BRACKET.....
160575	-----	FOLDER HOLDER COMPLETE, Nos. 3146, 50388J AND 160383.....
50388J	24877	FOLDER SCREW.....
3146	24877	FOLDER SCREW WASHER.....
160384	24877	BLIND STITCH HEMMING ATTACHMENT (WITH FOLDER) COMPLETE, FOR 1/2 IN. TO 1-1/2 IN. HEM, IN STEPS OF 1/8 IN., Nos. 160385 AND 160575.....
		NOTE: WHEN ORDERING No. 160384, SIZE OF HEM REQUIRED MUST BE STATED.

BLIND STITCH HEMMING ATTACHMENT SUPPORT NO. 164237

No.	PLATE	NAME
164234	24877	BLIND STITCH HEMMING ATTACHMENT ADJUSTING SLIDE (CYLINDRICAL).....
140456K	24877	BLIND STITCH HEMMING ATTACHMENT ADJUSTING THUMB SCREW.....
140457J	24877	BLIND STITCH HEMMING ATTACHMENT ADJUSTING THUMB SCREW LOCKING SCREW.....
164235	24877	BLIND STITCH HEMMING ATTACHMENT HINGE BRACKET.....
164236	24877	BLIND STITCH HEMMING ATTACHMENT SUPPORT.....
164238	24877	BLIND STITCH HEMMING ATTACHMENT SUPPORT CAP.....
140458C	24877	BLIND STITCH HEMMING ATTACHMENT THUMB SCREW.....
164237	24877	BLIND STITCH HEMMING ATTACHMENT SUPPORT COMPLETE, Nos. 140456K, 140457J, 140458C, 164234, 164235, 164236 AND 164238.....

CHIP CHUTE

No.	PLATE	NAME
168198	24866	CHIP CHUTE WITH FOUR WOOD SCREWS 3/8 IN. No. 6 R.H. BLACKED.

EDGE GUIDE (Floating)

No.	PLATE	NAME
160746	24877	EDGE GUIDE (FLOATING).....
160395	-----	EDGE GUIDE (FLOATING) SPRING.....
904AL	24877	EDGE GUIDE (FLOATING) SPRING SCREW..
220J	24877	EDGE GUIDE (FLOATING) SPRING SCREW LOCK SCREW.....
160747	24877	EDGE GUIDE (FIXED).....
240J	24877	EDGE GUIDE (FIXED) SCREW.....
50589K	24877	EDGE GUIDE ADJUSTING SCREW.....
160398	24877	EDGE GUIDE BRACKET WITH 220J AND 904AL.....
160399	24877	EDGE GUIDE SUPPORT AND THROAT PLATE GUIDE WITH 853AL.....
1454E	-----	EDGE GUIDE SUPPORT AND THROAT PLATE GUIDE SCREW.....
160749	24877	EDGE GUIDE (FLOATING) COMPLETE, Nos. 208J, 240J, 50589K, 160395, 160398, 160399, 160746, 160747 AND 164519.....

FOOT LIFTER PARTS

No.	PLATE	NAME
6439	24866	CHAIN, 36 IN. TO 45 IN. WITH 56864 AND 56865.....
		NOTE: WHEN ORDERING No. 6439, GIVE LENGTH REQUIRED.
4879	24866	CHAIN CONNECTING LINK.....
56864	24866	CHAIN HOOK {LARGE}.....
56865	24866	CHAIN HOOK {SMALL}.....
4881	24866	TREADLE.....
4882	24866	TREADLE SHAFT.....
4883	-----	TREADLE SPRING.....
4884	24866	TREADLE STAND.....
4885	24866	TREADLE COMPLETE, Nos. 4879, 4881, 4882, 4883, 4884 AND TWO WOOD SCREWS 1 IN. No. 16 F.H.....

MACHINE BASE

No.	PLATE	NAME
164184	24866	MACHINE BASE WITH TWO EACH WOOD SCREWS 3/4 IN. No. 8 R.H. AND 1-1/4 IN. No. 6 F.H.....
164188	24866	MACHINE CUSHION {LARGE} (2).....
164189	24866	MACHINE CUSHION {SMALL} (2).....
164190	24866	MACHINE PAD (FELT).....
140418E	24812	MACHINE SCREW STUD {BACK}.....
657E	24812	MACHINE SCREW STUD {FRONT}.....

THREAD UNWINDER NO. 151031

FOR THREE SPOOLS

No.	PLATE	NAME
228692	-----	SPOOL PIN (3).....
201528X	-----	SPOOL PIN NUT (3).....
395243	-----	SPOOL PIN WASHER (3).....
151023	24764	SPOOL REST WITH 858AL AND THREE EACH 201528X, 228692 AND 395243.....
150203	24764	SPOOL REST CUSHION (FELT) (3).....
858AL	24764	SPOOL REST HUB SET SCREW.....
151024	24764	SPOOL REST ROD.....
1122C	24764	SPOOL REST ROD SET SCREW (2).....
151025	24764	SPOOL REST STAND WITH TWO 1122C AND THREE WOOD SCREWS 1 IN. No. 12 F.H.
151026	24764	THREAD GUIDE {LOWER}.....
50311C	24764	THREAD GUIDE {LOWER} HOLDER SET SCREW.....
151027	24764	THREAD GUIDE {LOWER} SUPPORT WITH 50311C.....
151028	24764	THREAD GUIDE {UPPER, HOLLOW} (2)....
151029	24764	THREAD GUIDE {UPPER} HOLDER WITH FOUR 453AL.....
453AL	24764	THREAD GUIDE SET SCREW (3).....
151030	24764	THREAD GUIDE ROD.....
453AL	24764	THREAD GUIDE ROD SET SCREW.....
151031	24764	THREAD UNWINDER COMPLETE, Nos. 151023, 151024, 151025, 151026, 151027, 151029, 151030, TWO 151028 AND THREE 150203.....

THREAD UNWINDER NO. 151163 FOR FOUR SPOOLS

No.	PLATE	NAME
228692	24867	SPOOL PIN (3).....
228764	24867	SPOOL PIN.....
201528X	-----	SPOOL PIN NUT (3).....
395243	-----	SPOOL PIN WASHER (3).....
151023	24867	SPOOL REST WITH 858AL AND THREE EACH 201528X, 228692 AND 395243 (THREE SPOOLS).....
228765	24867	SPOOL REST WITH 201254C.....
150203	24867	SPOOL REST CUSHION (FELT) (4).....
858AL	24867	SPOOL REST HUB SET SCREW.....
151024	24867	SPOOL REST ROD.....
1122C	24867	SPOOL REST ROD SET SCREW (2).....
201254C	24867	SPOOL REST SET SCREW.....
151025	24867	SPOOL REST STAND WITH TWO 1122C AND THREE WOOD SCREWS 1 IN. No. 12 F.H.
151026	24867	THREAD GUIDE (LOWER).....
50311C	24867	THREAD GUIDE (LOWER) HOLDER SET SCREW.....
151027	24867	THREAD GUIDE (LOWER) SUPPORT WITH 50311C.....
151028	24867	THREAD GUIDE (UPPER, HOLLOW) (2)....
151162	24867	THREAD GUIDE (UPPER, SOLID).....
151029	24867	THREAD GUIDE (UPPER) HOLDER WITH FOUR 453AL.....
453AL	24867	THREAD GUIDE SET SCREW (3).....
151030	24867	THREAD GUIDE ROD.....
453AL	24867	THREAD GUIDE ROD SET SCREW.....
151163	24867	THREAD UNWINDER COMPLETE, Nos. 151023, 151024, 151025, 151026, 151027, 151029, 151030, 151162, 228764, 228765, TWO 151028 AND FOUR 150203.....

NUMERICAL LIST OF PARTS

No.	PLATE	NAME
145J	24871	OIL COOLER COVER SCREW.....
157C	24827	FEED ECCENTRIC COVER BRACKET SCREW..
157AL	24812	NEEDLE DRIVING SHAFT CRANK CON- NECTION CAP (LOWER) SCREW FOR 164217.....
171AL	24812	LOOPER DRIVING SHAFT CRANK CON- NECTION CAP (LOWER) SCREW FOR 164052.....
171AL	24812	NEEDLE DRIVING SHAFT CRANK CON- NECTION CAP (UPPER) SCREW FOR 164217.....
171AL	24812	SPREADER DRIVING SHAFT CRANK CON- NECTION CAP (LOWER) SCREW FOR 164052.....
187E	24871	MACHINE FRAME BRACKET KEY SCREW FOR 164528.....
187E	24870	THREAD (LOOPER) STRIPPER AND TAKE-UP SCREW.....
190E	24868	KNIFE (STATIONARY) HOLDER ADJUSTING STUD CAP SCREW.....
190E	24870	THREAD (LOOPER) TAKE-UP SCREW (LOWER)
197J	24868	KNIFE (MOVABLE) LEVER GUIDE SCREW FOR 164210.....
198J	24868	KNIFE (MOVABLE) HOLDER SCREW.....
206J	24871	MACHINE FRAME OIL SCREEN SCREW.....
208J	24877	CLOTH GUIDE BRACKET SCREW FOR 160749
220J	24877	EDGE GUIDE (FLOATING) SPRING SCREW LOCK SCREW FOR 160398.....
227J	24827	FEED ECCENTRIC COVER LATCH SPRING SCREW FOR 164521.....
240J	24877	EDGE GUIDE (FIXED) SCREW FOR 160398.
330J	24872	MACHINE FRAME TOP COVER OIL LEAD SCREW FOR 164214.....
332J	24761	THREAD (LOOPER) PLATE COVER SPRING SCREW FOR 164174.....
335J	24877	BLIND STITCH HEMMING ATTACHMENT FOLDER STOP PLATE SCREW FOR 160381
447AL	24868	KNIFE (MOVABLE) LEVER BEARING SET SCREW (LONG).....
447AL	24868	KNIFE (MOVABLE) LEVER GUIDE HOLDER THREAD TUBE SET SCREW (FRAME END).
447AL	24868	KNIFE (MOVABLE) LEVER HINGE STUD SET SCREW (BACK).....
447AL	24871	MACHINE FRAME OIL TUBE SET SCREW....
448AL	24812	MACHINE PULLEY SET SCREW FOR 164231.
452AL	24829	NEEDLE DRIVING SHAFT BUSHING OIL LEAD HOLE PLUG SCREW.....
453AL	24764	THREAD UNWINDER THREAD GUIDE SET SCREW FOR 151029.....
453AL	24764	THREAD UNWINDER THREAD GUIDE ROD SET SCREW FOR 151029.....
460AL	24870	LOOPER CARRIER SCREW SET SCREW FOR 164046.....
462AL	24829	PRESSER BAR LIFTING BRACKET SET SCREW (SHORT) FOR 164137.....
462AL	24870	SPREADER CARRIER CONNECTION GUIDE BAR SET SCREW FOR 164597.....
620AL	24868	KNIFE (MOVABLE) LEVER HINGE PIN SET SCREW FOR 164714.....

NUMERICAL LIST OF PARTS

No.	PLATE	NAME
624AL	24869	CLOTH PLATE PLUNGER SET SCREW.....
624AL	24869	CLOTH PLATE POSITION COLLAR SET SCREW FOR 164106.....
624AL	24868	KNIFE (MOVABLE) LEVER BEARING SET SCREW (SHORT).....
624AL	24829	PRESSER BAR LIFTING BRACKET SET SCREW (LONG) FOR 164137.....
624AL	24761	THREAD (LOOPER) TUBE SET SCREW FOR 164167.....
629K	24827	FEED ECCENTRIC COVER HINGE SCREW FOR 164521.....
657E	24812	MACHINE SCREW STUD (FRONT).....
735AL	24868	LINT STRIPPER SCREW FOR 164462.....
742F	24868	KNIFE (STATIONARY) HOLDER SCREW FOR 164747.....
853AL	24877	LOOPER THREAD TUBE SET SCREW FOR 160399.....
858AL	24764	THREAD UNWINDER SPOOL REST HUB SET SCREW FOR 151023.....
896AL	24761	THREAD (LOOPER) PLATE SCREW.....
904AL	24877	BLIND STITCH HEMMING ATTACHMENT FOLDER HINGE PIN SET SCREW FOR 160378.....
904AL	24877	EDGE GUIDE (FLOATING) SPRING SCREW FOR 160398.....
904AL	24870	SPREADER POSITION COLLAR SET SCREW FOR 164219.....
914C	24813	MACHINE FRAME BOTTOM COVER SCREW....
914J	24813	MACHINE FRAME COVER (BACK) SCREW (SHORT).....
914C	24870	SPREADER CARRIER CONNECTION GUIDE BAR BRACKET SCREW (LEFT).....
1019AL	-----	SPREADER CARRIER CONNECTION HINGE STUD ADJUSTING PIN SET SCREW FOR 164061.....
1036AL	24812	MACHINE FRAME ROTARY SHAFT BUSHING (FRONT) SET SCREW.....
1036AL	24812	MACHINE FRAME ROTARY SHAFT COUNTER- BALANCE SET SCREW FOR 164096.....
1057AL	24870	SPREADER CARRIER CONNECTION GUIDE BAR BRACKET SCREW (RIGHT).....
1083C	24870	LOOPER CARRIER HOLDER CLAMPING SCREW FOR 164660.....
1083C	24829	LOOPER DRIVING SHAFT CRANK CLAMPING SCREW FOR 164051.....
1083C	24829	NEEDLE DRIVING SHAFT CRANK CLAMPING SCREW FOR 164114.....
1083C	24870	SPREADER DRIVING LEVER CLAMPING SCREW FOR 164062.....
1083C	24870	SPREADER DRIVING SHAFT CRANK CLAMP- ING SCREW FOR 164066.....
1094F	24873	THROAT PLATE SCREW.....
1100AL	24873	FEED (BACK) DOG SECTION (RIGHT) SCREW FOR 164244, 164496 AND 164532.....
1122C	24764	THREAD UNWINDER SPOOL REST ROD SET SCREW FOR 151025.....
1143AL	24868	KNIFE (MOVABLE) LEVER HINGE STUD SET SCREW (TOP).....
1209J	24869	CHIP GUARD SCREW (LOWER).....
1250AL	24869	CLOTH PLATE LOCK SPRING SCREW STUD..
1259AL	24829	FINGER GUARD ADAPTER SCREW FOR 164373.....

No.	PLATE	NAME
1324C	24870	LOOPER CARRIER SCREW FOR 164661.....
1324C	24870	LOOPER DRIVING SHAFT CRANK KEY SCREW
1324J	24871	OIL COOLER SCREW (SHORT).....
1324C	24870	SPREADER DRIVING SHAFT CRANK KEY SCREW.....
1389C	24827	FEED BAR HINGE PIN SET SCREW.....
1423J	24868	FINGER GUARD SCREW.....
1423J	24761	THREAD (LOOPER) THREAD EYELET SCREW FOR 164174.....
1443J	24870	SPREADER CARRIER CONNECTION HINGE STUD CAP SCREW FOR 164830.....
1443J	24761	THREAD (LOOPER) STRIPPER AND TAKE-UP EYELET (ADJUSTABLE) SCREW FOR 164174.....
1443J	24870	THREAD (LOOPER) TAKE-UP SCREW (UPPER).....
1443J	24870	THREAD (NEEDLE) CONTROLLER SCREW....
1454E	-----	EDGE GUIDE SUPPORT AND THROAT PLATE GUIDE SCREW.....
1454F	24873	FEED (BACK) DOG SCREW.....
1454F	24873	FEED (FRONT) DOG SCREW.....
1485J	24871	OIL SIGHT GAUGE WINDOW RETAINER SCREW.....
1607J	24761	THREAD (LOOPER) THREAD EYELET (STATIONARY) NUT FOR 164174.....
1628C	24827	FEED BAR SLIDE BLOCK (BACK) NUT....
1628K	24877	BLIND STITCH HEMMING ATTACHMENT FOLDER SCREW STUD NUT FOR 160574..
1637K	24813	PRESSER BAR LIFTING LEVER STOP SCREW NUT FOR 164516.....
1671C	24827	FEED (BACK) BAR CONNECTION HINGE SCREW STUD NUT.....
1671C	24827	FEED (FRONT) BAR CONNECTION HINGE SCREW STUD NUT FOR 164208.....
1698J	24871	MACHINE FRAME OIL LEAD SCREW NUT....
1700J	24869	CLOTH PLATE EXTENSION SCREW NUT FOR 164514.....
1700J	24869	CLOTH PLATE LOCK SPRING NUT FOR 164514.....
1700J	24868	PRESSER BAR (SWING-OUT) LIFTING SCREW STUD NUT.....
1700J	24870	SPREADER CARRIER CONNECTION GUIDE BAR OIL PLUG SCREW NUT FOR 164829.
1700J	24870	SPREADER LOCKING SCREW STUD NUT FOR 164830.....
2102	24872	TENSION (HEAVY) DISC FOR 164162.....
2102	24872	TENSION (LIGHT) DISC FOR 164160.....
3146	24868	KNIFE (STATIONARY) CLAMPING GIB SCREW WASHER FOR 164748.....
3146	24877	BLIND STITCH HEMMING ATTACHMENT FOLDER SCREW WASHER FOR 160575....
4879	24866	FOOT LIFTER CHAIN CONNECTING LINK FOR 4885.....
4881	24866	FOOT LIFTER TREADLE FOR 4885.....
4882	24866	FOOT LIFTER TREADLE SHAFT FOR 4885..
4883	-----	FOOT LIFTER TREADLE SPRING FOR 4885.
4884	24866	FOOT LIFTER TREADLE STAND FOR 4885..
4885	24866	FOOT LIFTER TREADLE COMPLETE, Nos. 4879, 4881, 4882, 4883, 4884 AND TWO WOOD SCREWS 1 IN. No. 16 F.H..

NUMERICAL LIST OF PARTS

No.	PLATE	NAME
6439	24866	FOOT LIFTER CHAIN, 36 IN. TO 45 IN. WITH 56864 AND 56865.....
		NOTE: WHEN ORDERING No. 6439, GIVE LENGTH REQUIRED.
10875	-----	WRENCH (FLAT) FOR 1701 AND 51649 (ACCESSORIES).....
17022	24827	FEED BAR SLIDE BLOCK (BACK) NUT WASHER.....
17022	24870	THREAD (LOOPER) STRIPPER AND TAKE-UP SCREW WASHER.....
26026	24826	SCREW DRIVER (ACCESSORIES).....
39541	24868	KNIFE (STATIONARY) HOLDER ADJUSTING STUD CAP SCREW WASHER.....
45057	24870	LOOPER DRIVING SHAFT CRANK KEY SCREW WASHER.....
45057	24870	SPREADER DRIVING SHAFT CRANK KEY SCREW WASHER.....
50060K	24829	PRESSER BAR (SWING-OUT) OPENING LEVER HINGE SCREW FOR 164374.....
50073J	24829	KNIFE (MOVABLE) LEVER COVER AND PRESSER BAR (UPRIGHT) HOUSING SCREW.....
50133C	24872	TENSION (HEAVY) SCREW STUD FOR 164156.....
50133C	24872	TENSION (LIGHT) SCREW STUD FOR 164156.....
50225J	24873	PRESSER FOOT CLAMPING PLATE SCREW FOR 164357 AND 164511.....
50225J	24873	PRESSER FOOT HEMMING GUIDE CLAMPING SCREW FOR 164511.....
50311C	24764	THREAD UNWINDER THREAD GUIDE (LOWER) HOLDER SET SCREW FOR 151027.....
50318W	24761	THREAD (LOOPER) PLATE THREAD BUSHING SCREW FOR 164174.....
50370AL	24870	SPREADER CARRIER HINGE PIN SET SCREW FOR 164056.....
50379F	24870	LOOPER SET SCREW FOR 164046.....
50388J	24877	BLIND STITCH HEMMING ATTACHMENT FOLDER SCREW FOR 160575.....
50420AL	24870	SPREADER CARRIER CONNECTION GUIDE BAR OIL PLUG SCREW FOR 164829.....
50571J	24813	MACHINE FRAME COVER (BACK) SCREW (LONG).....
50589K	24877	EDGE GUIDE ADJUSTING SCREW FOR 160749.....
50611C	24868	KNIFE (STATIONARY) HOLDER POSITION SCREW FOR 164745.....
51023W	24829	MACHINE FRAME OIL SPLASH GUARD (TOP) SCREW.....
51139J	24871	OIL COOLER SCREW (LONG).....
51326J	24866	BELT GUARD SCREW FOR 164201.....
51332C	24812	MACHINE FRAME ROTARY SHAFT BUSHING (INTERMEDIATE) SET SCREW.....
51362AL	24868	CHAIN CUTTER SCREW.....
51362AL	24868	PRESSER BAR (SWING-OUT) PIVOT SCREW LOCK WASHER SCREW.....
51369C	24812	MACHINE FRAME ROTARY SHAFT BALL BEARING HOUSING SCREW.....
51369J	24872	MACHINE FRAME TOP COVER SCREW.....
51408J	24869	CLOTH PLATE EXTENSION SCREW FOR 164514.....
51630	24871	OIL COOLER OIL TUBE LOCK NUT FOR 164736.....

No.	PLATE	NAME
51649C	24812	MACHINE FRAME ROTARY SHAFT NUT.....
51720C	24829	NEEDLE CLAMPING NUT FOR 164275.....
51846	24829	PRESSER BAR LIFTING BRACKET ROLLER AND STUD FOR 164137.....
56864	24866	FOOT LIFTER CHAIN HOOK (LARGE) FOR 6439.....
56865	24866	FOOT LIFTER CHAIN HOOK (SMALL) FOR 6439.....
59456	24868	KNIFE (STATIONARY) HOLDER SLEEVE SCREW WASHER.....
59456	24870	LOOPER CARRIER SCREW WASHER FOR 164661.....
59480	24877	BLIND STITCH HEMMING ATTACHMENT FOLDER HINGE PIN FOR 160574.....
59537	24872	TENSION (HEAVY) SPRING BUSHING FOR 164162.....
59537	24872	TENSION (LIGHT) SPRING BUSHING FOR 164160.....
131056	24812	MACHINE FRAME ROTARY SHAFT NUT WASHER.....
132565	24870	SPREADER CARRIER HINGE PIN FOR 164830.....
132583	24868	KNIFE (MOVABLE) LEVER HINGE PIN WITH 132584, FOR 164715.....
132584	24868	KNIFE (MOVABLE) LEVER HINGE PIN OIL WICK FOR 132583.....
138269	24871	OIL COOLER OIL TUBE SLEEVE FOR 164126.....
139026	24812	MACHINE FRAME ROTARY SHAFT BALL BEARING.....
140050C	24868	KNIFE (MOVABLE) CLAMP SCREW.....
140061K	24877	CLOTH GUIDE HINGE SCREW FOR 164519..
140088E	24868	KNIFE (STATIONARY) HOLDER SLEEVE SCREW.....
140088E	24871	MACHINE FRAME OIL LEAD SCREW.....
140159AL	24812	LOOPER DRIVING SHAFT CRANK CON- NECTION CAP (UPPER) SCREW FOR 164052.....
140159AL	24812	SPREADER DRIVING SHAFT CRANK CON- NECTION CAP (UPPER) SCREW FOR 164052.....
140228C	24813	PRESSER BAR LIFTING LEVER STOP SCREW FOR 164516.....
140239AL	24868	KNIFE (MOVABLE) LEVER GUIDE HOLDER THREAD TUBE SET SCREW (HOLDER END) FOR 164181.....
140239AL	24868	THREAD EYELET (NEEDLE THREAD) SET SCREW FOR 164181.....
140346AL	24871	MACHINE FRAME OIL PLUG BRACKET SET SCREW.....
140393AL	24870	LOOPER CARRIER HOLDER SET SCREW (RIGHT) FOR 164660.....
140394E	24870	LOOPER DRIVING SHAFT BUSHING (BACK) CAP SCREW.....
140394E	24870	SPREADER DRIVING SHAFT BUSHING (BACK) CAP SCREW.....
140395C	24871	MACHINE FRAME BRACKET SCREW (SMALL) FOR 164526.....
140396E	24871	MACHINE FRAME BRACKET SCREW (LARGE) FOR 164526.....
140416X	24812	MACHINE PULLEY CAP SCREW.....
140418E	24812	MACHINE SCREW STUD (BACK).....

No.	PLATE	NAME
140456K	24876	BLIND STITCH HEMMING ATTACHMENT ADJUSTING THUMB SCREW FOR 164237..
140457J	24876	BLIND STITCH HEMMING ATTACHMENT ADJUSTING THUMB SCREW LOCKING SCREW FOR 164237.....
140458C	24876	BLIND STITCH HEMMING ATTACHMENT THUMB SCREW FOR 164237.....
140509J	24869	CHIP GUARD SCREW (UPPER).....
140510C	24868	PRESSER BAR (SWING-OUT) PIVOT SCREW.
140596AL	-----	LOOPER CARRIER HOLDER SET SCREW (LEFT) FOR 164660.....
140596AL	24829	NEEDLE DRIVING SHAFT CRANK SET SCREW FOR 164114.....
140596AL	24870	SPREADER DRIVING LEVER SET SCREW FOR 164062.....
140788C	24868	KNIFE (STATIONARY) CLAMPING GIB SCREW FOR 164748.....
150203	24764	THREAD UNWINDER SPOOL REST CUSHION (FELT) FOR 151031 AND 151163.....
151023	24764	THREAD UNWINDER SPOOL REST WITH 858AL AND THREE EACH 201528X, 228692 AND 395243, FOR 151031 AND 151163.....
151024	24764	THREAD UNWINDER SPOOL REST ROD FOR 151031 AND 151163.....
151025	24764	THREAD UNWINDER SPOOL REST STAND WITH TWO 1122C AND THREE WOOD SCREWS 1 IN. No. 12 F.H., FOR 151031 AND 151163.....
151026	24764	THREAD UNWINDER THREAD GUIDE (LOWER) FOR 151031 AND 151163.....
151027	24764	THREAD UNWINDER THREAD GUIDE (LOWER) SUPPORT WITH 50311C, FOR 151031 AND 151163.....
151028	24764	THREAD UNWINDER THREAD GUIDE (UPPER, HOLLOW) FOR 151031 AND 151163.....
151029	24764	THREAD UNWINDER THREAD GUIDE (UPPER) HOLDER WITH FOUR 453AL, FOR 151031 AND 151163.....
151030	24764	THREAD UNWINDER THREAD GUIDE ROD FOR 151031 AND 151163.....
151031	24764	THREAD UNWINDER COMPLETE, FOR THREE SPOOLS, Nos. 151023, 151024, 151025, 151026, 151027, 151029, 151031, TWO 151028 AND THREE 150203.....
151162	24867	THREAD UNWINDER THREAD GUIDE (UPPER, SOLID) FOR 151163.....
151163	24867	THREAD UNWINDER COMPLETE, Nos. 151023, 151024, 151025, 151026, 151027, 151029, 151030, 151162, 228764, 228765, TWO 151028 AND FOUR 150203.....
160376	24877	BLIND STITCH HEMMING ATTACHMENT FOLDER, FOR 1/2 IN. TO 2 IN. HEM, IN STEPS OF 1/8 IN., FOR 160381... NOTE: WHEN ORDERING No. 160376, SIZE OF HEM REQUIRED MUST BE STATED.
160377	24877	BLIND STITCH HEMMING ATTACHMENT FOLDER HINGE FOR 160574.....
160378	24877	BLIND STITCH HEMMING ATTACHMENT FOLDER HINGE BRACKET WITH 904AL, FOR 160574.....

No.	PLATE	NAME
160379	24877	BLIND STITCH HEMMING ATTACHMENT FOLDER SCREW STUD FOR 160574.....
160380	24877	BLIND STITCH HEMMING ATTACHMENT FOLDER STOP PLATE FOR 160574.....
160381	24877	BLIND STITCH HEMMING ATTACHMENT (WITH FOLDER) COMPLETE, FOR 1/2 IN. TO 2 IN. HEM, IN STEPS OF 1/8 IN., FOR USE WITH SETS OF FITTINGS NOS. 164382 AND 164383, Nos. 160376 AND 160574.....
		NOTE: WHEN ORDERING No. 160381, SIZE OF HEM REQUIRED MUST BE STATED.
160383	24877	BLIND STITCH HEMMING ATTACHMENT FOLDER BRACKET FOR 160575.....
160384	24877	BLIND STITCH HEMMING ATTACHMENT (WITH FOLDER) COMPLETE, FOR 1/2 IN. TO 1-1/2 IN. HEM, IN STEPS OF 1/8 IN., FOR USE WITH SETS OF FITTINGS NOS. 164382 AND 164383, Nos. 160385 AND 160575....
		NOTE: WHEN ORDERING No. 160384, SIZE OF HEM REQUIRED MUST BE STATED.
160385	24877	BLIND STITCH HEMMING ATTACHMENT FOLDER FOR 1/2 IN. TO 1-1/2 IN. HEM, IN STEPS OF 1/8 IN., FOR 160384.....
		NOTE: WHEN ORDERING No. 160385, SIZE OF HEM REQUIRED MUST BE STATED.
160395	-----	EDGE GUIDE (FLOATING) SPRING FOR 160749.....
160398	24877	EDGE GUIDE BRACKET WITH 220J AND 904AL, FOR 160749.....
160399	24877	EDGE GUIDE SUPPORT AND THROAT PLATE GUIDE WITH 853AL, FOR 160749.....
160574	-----	BLIND STITCH HEMMING ATTACHMENT FOLDER HOLDER COMPLETE, FOR 160381, Nos. 335J, 1628K, 59480, 160377, 160378, 160379 AND 160380.
160575	-----	BLIND STITCH HEMMING ATTACHMENT HOLDER COMPLETE, FOR 160384, Nos. 3146, 50388J AND 160383.....
160725	24826	OIL CONTAINER FOR 160727.....
160726	24826	OIL CONTAINER CAP FOR 160727.....
160727	24826	OIL CONTAINER (FILLED, 5 OZ. MFG. OIL, LIGHT GRADE, NOT STAINLESS) Nos. 160725 AND 160726 (ACCESSORIES).....
160728	24826	OIL CONTAINER SPOUT, FOR USE WHEN FILLING OIL RESERVOIR (ACCESSORIES)
160746	24877	EDGE GUIDE (FLOATING) FOR 160749....
160747	24877	EDGE GUIDE (FIXED) FOR 160749.....
160748	24877	CLOTH GUIDE BRACKET FOR 164519.....
160749	24874	EDGE GUIDE (FLOATING) COMPLETE, Nos. 208J, 240J, 50589K, 160395, 160398, 160399, 160746, 160747 AND 164519.....
164001	24869	CHIP GUARD.....
164003	24827	FEED BAR HINGE PIN (ECCENTRIC).....
164004	24827	FEED BAR SLIDE BLOCK (BACK) FOR 164208.....
164005	24827	FEED BAR SLIDE BLOCK (FRONT) FOR 164208.....
164006	24827	FEED (FRONT) BAR WITH 164010, FOR 164208.....

NUMERICAL LIST OF PARTS

No.	PLATE	NAME
164007	24827	FEED (FRONT) BAR CONNECTION FOR 164208.....
164008	24827	FEED (BACK) BAR CONNECTION BEARING FOR 164208.....
164009	24827	FEED (BACK) BAR CONNECTION HINGE SCREW STUD FOR 164208.....
164009	24827	FEED (FRONT) BAR CONNECTION HINGE SCREW STUD FOR 164208.....
164010	24827	FEED (BACK) BAR CONNECTION HINGE SCREW STUD NUT POSITION PIN FOR 164687.....
164010	24827	FEED (FRONT) BAR CONNECTION HINGE SCREW STUD NUT POSITION PIN FOR 164006.....
164017	24827	FEED (BACK) BAR CONNECTION FOR 164208.....
164018	24827	FEED (FRONT) BAR CONNECTION BEARING FOR 164208.....
164020	24827	FEED (BACK) ECCENTRIC.....
		NOTE: FEED (BACK) ECCENTRIC No. 164020 IS FURNISHED IN 6 TO 16, 18, 20, 22, 24, 28, 32 AND 36 STITCHES TO THE INCH, UNLESS OTHERWISE STATED, No. 164020 (14 STITCHES TO THE INCH) IS SUPPLIED REGULARLY.
164020	24827	FEED (FRONT) ECCENTRIC.....
		NOTE: FEED (FRONT) ECCENTRIC No. 164020 IS FURNISHED IN 6 TO 16, 18, 20, 22, 24, 28, 32 AND 36 STITCHES TO THE INCH, UNLESS OTHERWISE STATED, No. 164020 (14 STITCHES TO THE INCH) IS SUPPLIED REGULARLY.
164023	24827	FEED ECCENTRIC OIL WICK FOR 164399..
164025	24812	FEED LIFTING AND KNIFE (MOVABLE) ECCENTRIC.....
164027	24868	KNIFE {MOVABLE} CLAMP.....
164028	24868	KNIFE {MOVABLE} GUARD (LOWER).....
164029	24868	KNIFE {MOVABLE} HOLDER.....
164030	24868	KNIFE {MOVABLE} HOLDER SCREW BEARING
164032	24868	KNIFE {MOVABLE} LEVER BEARING.....
164034	24868	KNIFE {MOVABLE} LEVER HINGE STUD FOR 164035.....
164035	-----	KNIFE (MOVABLE) LEVER HINGE STUD 164034 WITH 164036 AND 164269, FOR 164715.....
164036	24868	KNIFE (MOVABLE) LEVER HINGE STUD OIL WICK (LONG).....
164042	24868	KNIFE {STATIONARY} HOLDER SLEEVE....
164043	24868	KNIFE {STATIONARY} HOLDER SPRING....
164045	24870	LOOPER.....
164046	24870	LOOPER CARRIER WITH 460AL, 50379F AND 164202, FOR 164661.....
164048	24870	LOOPER DRIVING SHAFT.....
164049	24870	LOOPER DRIVING SHAFT BUSHING (BACK).
164049	24870	SPREADER DRIVING SHAFT BUSHING (BACK)
164051	24870	LOOPER DRIVING SHAFT CRANK WITH 1083C, FOR 164215.....
164052	24812	LOOPER DRIVING SHAFT CRANK CONNECTION WITH TWO EACH 171AL AND 140159AL, FOR 164215.....
164052	24812	SPREADER DRIVING SHAFT CRANK CON- NECTION WITH TWO EACH 171AL AND 140159AL, FOR 164216.....

No.	PLATE	NAME
164053	24870	LOOPER DRIVING SHAFT CRANK THRUST BEARING.....
164053	24870	SPREADER DRIVING SHAFT CRANK THRUST BEARING.....
164056	24870	SPREADER CARRIER WITH 50370AL, FOR 164830.....
164061	24870	SPREADER CARRIER CONNECTION HINGE STUD WITH 1019AL, FOR 164830.....
164062	24870	SPREADER DRIVING LEVER WITH 1083C AND TWO 140596AL, FOR 164830.....
164063	24870	SPREADER DRIVING SHAFT.....
164066	24870	SPREADER DRIVING SHAFT CRANK WITH 1083C, FOR 164216.....
164067	24870	LOOPER DRIVING SHAFT CRANK KEY.....
164067	24870	SPREADER DRIVING SHAFT CRANK KEY....
164068	24870	SPREADER LOCKING SCREW STUD FOR 164830.....
164071	24812	MACHINE PULLEY CAP.....
*164072	-----	MACHINE FRAME FOR 164526.....
164074	24813	MACHINE FRAME BOTTOM COVER.....
164075	24813	MACHINE FRAME BOTTOM COVER GASKET...
164077	24871	MACHINE FRAME BRACKET SCREW (LARGE) WASHER (FIBER) FOR 164526.....
164081	24871	MACHINE FRAME OIL LEAD.....
164082	24871	MACHINE FRAME OIL PLUG BRACKET.....
164083	24871	MACHINE FRAME OIL SCREEN.....
164085	24829	MACHINE FRAME OIL SPLASH GUARD (TOP)
164089	24812	MACHINE FRAME ROTARY SHAFT FOR 164090.....
164090	-----	MACHINE FRAME ROTARY SHAFT 164089 WITH 164097, 164215, 164216, 164217 AND TWO EACH 164093 AND 164232.....
164091	24870	THREAD (LOOPER) STRIPPER AND TAKE-UP WITH 164555.....
164092	24812	MACHINE FRAME ROTARY SHAFT BALL BEARING HOUSING.....
164093	24812	MACHINE FRAME ROTARY SHAFT BALL SLEEVE (TWO PIECES) FOR 164090....
164095	24812	MACHINE FRAME ROTARY SHAFT BUSHING (INTERMEDIATE).....
164096	24812	MACHINE FRAME ROTARY SHAFT COUNTER-BALANCE WITH 1036AL.....
164097	24812	MACHINE FRAME ROTARY SHAFT KEY FOR 164090.....
164098	24812	MACHINE FRAME ROTARY SHAFT OIL AND BALL BEARING GREASE RETAINER.....
164099	24812	MACHINE FRAME ROTARY SHAFT SCREW STUD.....
164100	24812	MACHINE FRAME ROTARY SHAFT THRUST BEARING.....
164101	24872	MACHINE FRAME TOP COVER FOR 164214..
164102	24872	MACHINE FRAME TOP COVER GASKET.....
164103	24872	MACHINE FRAME TOP COVER OIL LEAD FOR 164214.....
164104	24869	CLOTH PLATE PLUNGER.....
164105	24869	CLOTH PLATE PLUNGER SPRING.....
164106	24869	CLOTH PLATE POSITION COLLAR WITH TWO 624AL.....
164109	24829	NEEDLE CLAMP FOR 164275.....
164110	24829	NEEDLE DRIVING SHAFT WITH 164118, FOR 164275.....
164111	24829	NEEDLE DRIVING SHAFT BUSHING.....

No.	PLATE	NAME
164112	24829	NEEDLE DRIVING SHAFT BUSHING CAP....
164113	24829	NEEDLE DRIVING SHAFT BUSHING OIL LEAD.....
164114	24829	NEEDLE DRIVING SHAFT CRANK WITH 1083C AND TWO 140596AL.....
164115	24829	NEEDLE DRIVING SHAFT CRANK BALL.....
164117	24829	NEEDLE HOLDER FOR 164275.....
164118	24829	NEEDLE STOP PIN FOR 164110.....
164119	24812	OIL AGITATOR.....
164120	24871	OIL COOLER WITH TWO 164125.....
164121	24871	OIL COOLER COVER FOR 164123.....
164122	24871	OIL COOLER COVER GASKET.....
164123	24871	OIL COOLER COVER 164121 WITH 164135.
164124	24871	OIL COOLER GASKET.....
164125	24871	OIL COOLER OIL PIPE (OUTLET, LEFT) FOR 164120.....
164125	24871	OIL COOLER OIL PIPE (OUTLET, RIGHT) FOR 164120.....
164126	24871	OIL COOLER OIL TUBE WITH 138269 AND 164128, FOR 164736.....
164127	24871	OIL COOLER OIL TUBE COUPLING FOR 164736.....
164128	24871	OIL COOLER OIL TUBE WICK FOR 164126.
164131	24871	OIL SIGHT GAUGE BACKGROUND DISC.....
164132	24871	OIL SIGHT GAUGE BACKGROUND DISC GASKET.....
164132	24871	OIL SIGHT GAUGE WINDOW GASKET.....
164132	24871	OIL SIGHT GAUGE WINDOW RETAINER GASKET.....
164133	24871	OIL SIGHT GAUGE WINDOW.....
164134	24871	OIL SIGHT GAUGE WINDOW RETAINER.....
164135	24871	OIL CUP, FOR FILLING MACHINE, FOR 164123.....
164136	24868	PRESSER BAR BRACKET FOR 164715.....
164137	24829	PRESSER BAR LIFTING BRACKET WITH 462AL, 624AL AND 51846, FOR 164374
164138	24829	PRESSER BAR LIFTING LEVER FOR 164374
164139	24829	PRESSER BAR LIFTING LEVER SPRING FOR 164374.....
164141	24868	PRESSER BAR (SWING-OUT) LIFTING SCREW STUD.....
164142	24829	PRESSER BAR (SWING-OUT) OPENING LEVER FOR 164374.....
164143	24829	PRESSER BAR (UPRIGHT) FOR 164374....
164144	24829	PRESSER BAR (UPRIGHT) SPRING FOR 164374.....
164147	24873	PRESSER FOOT CLAMPING PLATE FOR 164357 AND 164511.....
164153	24868	THREAD (NEEDLE) CONTROLLER LEVER FOR 164715.....
164155	24872	TENSION (HEAVY) REGULATING THUMB NUT FOR 164162.....
164155	24872	TENSION (LIGHT) REGULATING THUMB NUT FOR 164160.....
164156	-----	TENSION (HEAVY) SCREW STUD 50133C WITH 164155, FOR 164162.....
164156	-----	TENSION (LIGHT) SCREW STUD 50133C WITH 164155, FOR 164160.....
164157	24872	TENSION (LIGHT) SPRING FOR 164160...
164158	24872	TENSION (HEAVY) SPRING COVER FOR 164162.....
164158	24872	TENSION (LIGHT) SPRING COVER FOR 164160.....

No.	PLATE	NAME
164159	24872	TENSION {NEEDLE THREAD} THREAD GUIDE
164160	24872	TENSION {LIGHT} COMPLETE, Nos. 59537, 164156, 164157, 164158 AND TWO 2102.....
164161	24872	TENSION {HEAVY} SPRING FOR 164162...
164162	24872	TENSION {HEAVY} COMPLETE, Nos. 59537, 164156, 164158, 164161 AND TWO 2102.....
164163	24761	THREAD {LOOPER} STRIPPER AND TAKE-UP EYELET {ADJUSTABLE} FOR 164174....
164164	24761	THREAD {LOOPER} THREAD EYELET {MOVABLE} FOR 164174.....
164165	24761	THREAD {LOOPER} THREAD EYELET {STATIONARY} FOR 164174.....
164166	24761	THREAD {LOOPER} TUBE FOR 164174.....
164167	24761	THREAD {LOOPER} PLATE WITH 624AL, FOR 164174.....
164168	24761	THREAD {LOOPER} PLATE COVER FOR 164206.....
164169	24761	THREAD {LOOPER} PLATE COVER HINGE FOR 164206.....
164170	24761	THREAD {LOOPER} PLATE COVER HINGE PIN FOR 164206.....
164171	24761	THREAD {LOOPER} PLATE COVER SPRING FOR 164174.....
164173	24761	THREAD {LOOPER} PLATE THREAD BUSHING FOR 164174.....
164174	-----	THREAD {LOOPER} PLATE COMPLETE, Nos. 1423J, 1443J, 1607J, 50318W, 164163, 164164, 164165, 164166, 164167, 164173, 164206 AND TWO EACH 332J AND 164171.....
164175	24870	THREAD {LOOPER} TAKE-UP.....
164176	24870	THREAD {LOOPER} TAKE-UP PLATE.....
164177	24868	THREAD EYELET {NEEDLE THREAD} FOR 164210.....
164180	24868	KNIFE {MOVABLE} LEVER GUIDE FOR 164210.....
164181	24868	KNIFE {MOVABLE} LEVER GUIDE HOLDER WITH TWO 140239AL, FOR 164210.....
164182	24868	KNIFE {MOVABLE} LEVER GUIDE HOLDER THREAD TUBE FOR 164210.....
164183	24866	BELT GUARD FOR 164201.....
164184	24866	MACHINE BASE WITH TWO EACH WOOD SCREWS 3/4 IN. No. 8 R.H. AND 1-1/4 IN. No. 6 F.H.....
164188	24866	MACHINE CUSHION {LARGE}.....
164189	24866	MACHINE CUSHION {SMALL}.....
164190	24866	MACHINE PAD {FELT}.....
164194	24829	PRESSURE REGULATING THUMB SCREW FOR 164374.....
164196	24826	THREADER {ACCESSORIES}.....
164197	24826	WRENCH {SOCKET} {ACCESSORIES}.....
164198	24826	PRESSER BAR LIFTING CHAIN SPRING {UNDER TABLE} {ACCESSORIES}.....
164199	24866	BELT GUARD BRACKET {BACK} FOR 164201
164200	24866	BELT GUARD BRACKET {FRONT} FOR 164201.....
164201	24866	BELT GUARD {ADJUSTABLE} COMPLETE, Nos. 164183, 164199, 164200 AND TWO EACH 51326J AND WOOD SCREWS 3/4 IN. No. 7 F.H.....
164202	24870	LOOPER STOP PIN FOR 164046.....



No.	PLATE	NAME
164203	24826	FEED ECCENTRIC EXTRACTOR (NOT REGULARLY FURNISHED WITH MACHINE) (ACCESSORIES).....
164204	24826	TWEEZERS (ACCESSORIES).....
164205	24869	CLOTH PLATE LOCK SPRING FOR 164514..
164206	-----	THREAD (LOOPER) PLATE COVER 164168 WITH 164169 AND 164170, FOR 164174
164207	24871	MACHINE FRAME BRACKET KEY FOR 164528
164208	-----	FEED (BACK) AND (FRONT) BASE COM- PLETE, Nos. 164005, 164006, 164007, 164008, 164017, 164018, 164687 AND TWO EACH 1671C, 164004 AND 164009.....
164210	24868	KNIFE (MOVABLE) LEVER GUIDE HOLDER 164181 WITH 197J, 164177, 164180 AND 164182.....
164214	-----	MACHINE FRAME TOP COVER 164101 WITH 330J, 164103 AND TWO 164418.....
164215	-----	LOOPER DRIVING SHAFT CRANK 164051 WITH 164052, FOR 164090.....
164216	-----	SPREADER DRIVING SHAFT CRANK 164066 WITH 164052, FOR 164090.....
164217	24812	NEEDLE DRIVING SHAFT CRANK CON- NECTION WITH 164115 AND TWO EACH 157AL AND 171AL, FOR 164090.....
164219	24870	SPREADER POSITION COLLAR WITH 904AL.
164229	24871	MACHINE FRAME BRACKET SCREW (LARGE) WASHER (FELT).....
164231	24812	MACHINE PULLEY (ROUND AND "V" BELT) WITH TWO 448AL.....
164232	24812	MACHINE FRAME ROTARY SHAFT BALL SLEEVE GUIDE FOR 164090.....
164234	24876	BLIND STITCH HEMMING ATTACHMENT ADJUSTING SLIDE (CYLINDRICAL) FOR 164237.....
164235	24876	BLIND STITCH HEMMING ATTACHMENT HINGE BRACKET FOR 164237.....
164236	24876	BLIND STITCH HEMMING ATTACHMENT SUPPORT FOR 164237.....
164237	24876	BLIND STITCH HEMMING ATTACHMENT SUPPORT COMPLETE, FOR 164382 AND 164383, FOR USE WITH BLIND STITCH HEMMING ATTACHMENTS Nos. 160381 AND 160384, Nos. 140456K, 140457J, 140458C, 164234, 164235, 164236 AND 164238.....
164238	24876	BLIND STITCH HEMMING ATTACHMENT SUPPORT CAP FOR 164237.....
164242	24876	FEED (BACK) DOG SECTION (LEFT) FOR 164244.....
164243	24873	FEED (BACK) DOG SECTION (RIGHT) FOR 164244, 164496 AND 164532.....
164244	24876	FEED (BACK) DOG COMPLETE, FOR 164383, Nos. 1100AL, 164242 AND 164243....
164252	24870	SPREADER.....
164269	-----	KNIFE (MOVABLE) LEVER HINGE STUD OIL WICK (LONG) FOR 164035.....
164275	-----	NEEDLE DRIVING SHAFT 164110 WITH 51720C, 164109 AND 164117.....
164285	24872	TENSION (LOOPER THREAD) THREAD GUIDE (LEFT).....
164286	24872	TENSION (LOOPER THREAD) THREAD GUIDE (RIGHT).....

No.	PLATE	NAME
164293	24870	LOOPER DRIVING SHAFT BUSHING (BACK) CAP SCREW WASHER (FIBER).....
164293	24870	SPREADER DRIVING SHAFT BUSHING (BACK) CAP SCREW WASHER (FIBER)...
164347	24868	CHAIN CUTTER FOR 164539.....
164348	24876	FEED (FRONT) DOG FOR 164383.....
164349	-----	LOOPER THREAD TUBE.....
164350	24868	PRESSER BAR (SWING-OUT).....
164351	24868	PRESSER BAR (SWING-OUT) PIVOT SCREW LOCK WASHER.....
164354	24876	PRESSER FOOT BODY (HINGED) FOR 164357.....
164356	24873	PRESSER FOOT CHAINING-OFF FINGER FOR 164357 AND 164511.....
164357	24876	PRESSER FOOT (HINGED) COMPLETE, FOR 164382 AND 164383, Nos. 50225J, 164147, 164354 AND 164356.....
164358	24873	THROAT PLATE.....
164373	24829	KNIFE (MOVABLE) LEVER COVER AND PRESSER BAR (UPRIGHT) HOUSING WITH 1259AL, FOR 164374.....
164374	-----	KNIFE (MOVABLE) LEVER COVER AND PRESSER BAR (UPRIGHT) HOUSING COMPLETE, Nos. 50060K, 164137, 164138, 164139, 164142, 164143, 164144, 164194 AND 164373.....
164381	24868	THREAD (NEEDLE) CONTROLLER FOR 164539.....
164382	24876	SET OF FITTINGS COMPLETE, FOR RAYON, BALBRIGGAN AND NYLON, FOR TWO- THREAD BLIND HEM STITCH, Nos. 164237, 164357, 164532 AND 164533.
164383	24876	SET OF FITTINGS COMPLETE, FOR LIGHT AND MEDIUM WEIGHT SWEATER MATERIALS FOR TWO-THREAD BLIND HEM STITCH, Nos. 164237, 164244, 164348 AND 164357.....
164397	24870	SPREADER CARRIER CONNECTION HINGE STUD ADJUSTING PIN FOR 164830.....
164399	24827	FEED ECCENTRIC COVER BRACKET WITH 164023, FOR 164521.....
164401	24827	FEED ECCENTRIC COVER LATCH SPRING FOR 164521.....
164416	-----	PRESSER BAR (UPRIGHT) SPRING (HEAVY)
164418	24872	TENSION THREAD EYELET FOR 164214....
164455	24868	FINGER GUARD.....
164456	24868	FINGER GUARD ADAPTER.....
164458	24868	KNIFE (MOVABLE) GUARD (UPPER).....
164462	24868	LINT STRIPPER WITH 735AL.....
164495	24873	FEED (BACK) DOG SECTION (LEFT) FOR 164496.....
164496	24873	FEED (BACK) DOG COMPLETE, FOR 164539, Nos. 1100AL, 164243 AND 164495....
164497	24873	FEED (FRONT) DOG.....
164509	24873	PRESSER FOOT BODY (HINGED) FOR 164511.....
164510	24873	PRESSER FOOT HEMMING GUIDE CLAMPING SCREW WASHER FOR 164511.....
164511	24873	PRESSER FOOT (HINGED) COMPLETE FOR 164539, Nos. 164147, 164356, 164509, 164510 AND TWO 50225J.....
164512	24869	CLOTH PLATE EXTENSION FOR 164514....
164513	24869	CLOTH PLATE FOR 164514.....

No.	PLATE	NAME
164514	24869	CLOTH PLATE WITH EXTENSION COMPLETE, Nos. 164205, 164512, 164513 AND TWO EACH 1700J, 51408J AND 931084.
164515	24813	MACHINE FRAME COVER (BACK) FOR 164516.....
164516	24813	MACHINE FRAME COVER (BACK) 164515 WITH 1637K AND 140228C.....
164517	24874	PRESSER FOOT HEMMING GUIDE FOR 1/4 IN., 3/8 IN., 1/2 IN., 5/8 IN., 3/4 IN., 7/8 IN., 1 IN., 1-1/8 IN., 1-1/4 IN., 1-3/8 IN. AND 1-1/2 IN. GAUGES.....
NOTE: WHEN ORDERING No. 164517, GAUGE REQUIRED MUST BE STATED. UNLESS OTHERWISE SPECIFIED, No. 164517 WILL BE FURNISHED IN 3/4 IN. GAUGE.		
164518	24877	CLOTH GUIDE FOR 164519.....
164519	-----	CLOTH GUIDE (SWING-OUT) COMPLETE, FOR 160749, Nos. 140061K, 160748 AND 164518.....
164520	24827	FEED ECCENTRIC COVER FOR 164521.....
164521	24827	FEED ECCENTRIC COVER COMPLETE, FOR USE WITH ECCENTRICS OF 4 STITCHES AND ABOVE, Nos. 629K, 164399, 164401, 164520 AND TWO 227J.....
164525	24868	KNIFE (STATIONARY) HOLDER SPRING STUD.....
*164526	-----	MACHINE FRAME COMPLETE, Nos. 140396E, 164072, 164077, 164528 AND THREE 140395C.....
*164527	-----	MACHINE FRAME BRACKET FOR 164528....
*164528	-----	MACHINE FRAME BRACKET 164527 WITH 164207 AND TWO 187E, FOR 164526...
164531	24875	FEED (BACK) DOG SECTION (LEFT) FOR 164532.....
164532	24875	FEED (BACK) DOG COMPLETE, FOR 164382 AND 164540, Nos. 1100AL, 164243 AND 164531.....
164533	24875	FEED (FRONT) DOG FOR 164382 AND 164540.....
164539	24874	SET OF FITTINGS COMPLETE, FOR LIGHT AND MEDIUM SWEATER MATERIALS, FOR TWO-THREAD BLIND HEM STITCH (WIRE HEMMING FITTINGS), Nos. 160749, 164091, 164175, 164252, 164347, 164350, 164358, 164381, 164496, 164497, 164511, 164517 AND 164550.
NOTE: THIS MACHINE IS REGULARLY FITTED WITH SET No. 164539, UNLESS OTHER FITTINGS ARE SPECIFIED ON ORDER.		
164540	24875	SET OF FITTINGS COMPLETE, FOR RAYON, BALBRIGGAN AND NYLON, FOR TWO-THREAD BLIND HEM STITCH (WIRE HEMMING FITTINGS), Nos. 164532 AND 164533.....
164550	24868	KNIFE (MOVABLE).....
164555	-----	THREAD (LOOPER) STRIPPER AND TAKE-UP GUIDE WIRE FOR 164091.....
164590	24868	KNIFE (STATIONARY) HOLDER ADJUSTING STUD.....
164592	24826	GAUGE (NOT REGULARLY FURNISHED WITH MACHINE).....

No.	PLATE	NAME
164597	24870	SPREADER CARRIER CONNECTION GUIDE BAR BRACKET WITH TWO 462AL, FOR 164830.....
164600	24812	MACHINE FRAME ROTARY SHAFT BUSHING (FRONT).....
164602	24871	MACHINE FRAME OIL TUBE WICK FOR 164722.....
164603	24871	MACHINE FRAME OIL SPLASH GUARD (INTERNAL) FOR 164604.....
164604	24871	MACHINE FRAME OIL SPLASH GUARD (INTERNAL) COMPLETE, NOS. 164603, 164605 AND 164606.....
164605	24871	MACHINE FRAME OIL SPLASH GUARD (INTERNAL) OIL PAD FOR 164604.....
164606	24871	MACHINE FRAME OIL SPLASH GUARD (INTERNAL) OIL PAD FASTENER FOR 164604.....
164607	24868	OIL DEFLECTOR.....
164660	24870	LOOPER CARRIER HOLDER WITH 1083C, 140393AL AND 140596AL, FOR 164661.
164661	-----	LOOPER CARRIER HOLDER 164660 WITH 1324C, 59456 AND 164046.....
164687	24827	FEED (BACK) BAR WITH 164010, FOR 164208.....
164714	24868	KNIFE (MOVABLE) LEVER WITH 620AL, FOR 164715.....
164715	-----	KNIFE (MOVABLE) LEVER 164714 WITH 132583, 164035, 164136 AND 164153.
164722	24871	MACHINE FRAME OIL TUBE WITH 164602..
164728	24868	KNIFE (STATIONARY).....
164736	-----	OIL COOLER OIL TUBE 164126 WITH 51630 AND 164127.....
164737	24870	LOOPER DRIVING SHAFT BUSHING (FRONT)
164738	24870	SPREADER DRIVING SHAFT BUSHING (FRONT).....
164739	24870	LOOPER DRIVING SHAFT OIL RING (RUBBER).....
164739	24870	SPREADER DRIVING SHAFT OIL RING (RUBBER).....
164740	24870	LOOPER DRIVING SHAFT OIL RING SPACER
164740	24870	SPREADER DRIVING SHAFT OIL RING SPACER.....
164744	24868	KNIFE (STATIONARY) CLAMPING GIB FOR 164748.....
164745	24868	KNIFE (STATIONARY) HOLDER BODY WITH TWO 50611C, FOR 164747.....
164746	24868	KNIFE (STATIONARY) HOLDER FOR 164747
164747	-----	KNIFE (STATIONARY) HOLDER (ADJUSTABLE) COMPLETE, FOR 164748, NOS. 742F, 164745 AND 164746.....
164748	24868	KNIFE (STATIONARY) HOLDER (ADJUSTABLE) WITH GIB COMPLETE, NOS. 3146, 140788C, 164744 AND 164747..
164785	24870	SPREADER CARRIER CONNECTION GUIDE BAR OIL CONTROLLING SCREW SEAT (BRASS) FOR 164829.....
164786	24870	SPREADER CARRIER CONNECTION GUIDE BAR OIL WICK FOR 164829.....
164828	24870	SPREADER CARRIER CONNECTION FOR 164829.....
164829	-----	SPREADER CARRIER CONNECTION AND GUIDE BAR, FOR 164830, NOS. 1700J, 50420AL, 164785, 164786 AND 164828

No.	PLATE	NAME
164830	-----	SPREADER DRIVING LEVER 164062 WITH 1443J, 1700J, 132565, 164056, 164061, 164068, 164397, 164597 AND 164829.....
164831	-----	WRENCH (FLAT) FOR 1700 (ACCESSORIES)
168198	24866	CHIP CHUTE WITH FOUR WOOD SCREWS 3/8 IN. No. 6 R.H. BLACKED.....
201254C	24867	THREAD UNWINDER SPOOL REST SET SCREW FOR 228765.....
201528X	-----	THREAD UNWINDER SPOOL PIN NUT FOR 151023.....
228692	24867	THREAD UNWINDER SPOOL PIN FOR 151023
228764	24867	THREAD UNWINDER SPOOL PIN FOR 151163
228765	24867	THREAD UNWINDER SPOOL REST WITH 201254C, FOR 151163.....
395243	-----	THREAD UNWINDER SPOOL PIN WASHER FOR 151023.....
931084	24869	CLOTH PLATE EXTENSION SCREW NUT LOCK WASHER FOR 164514.....
931084	24869	CLOTH PLATE LOCK SPRING NUT LOCK WASHER FOR 164514.....

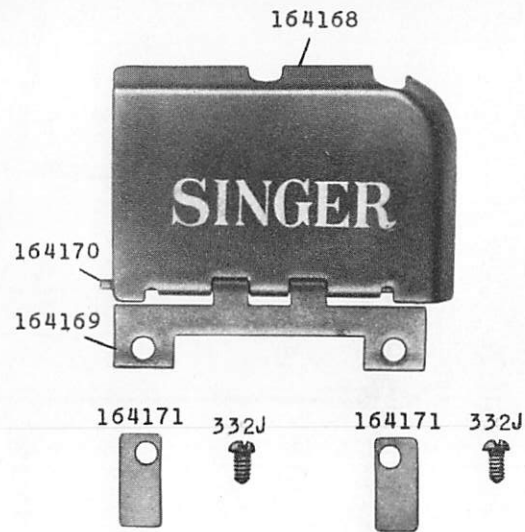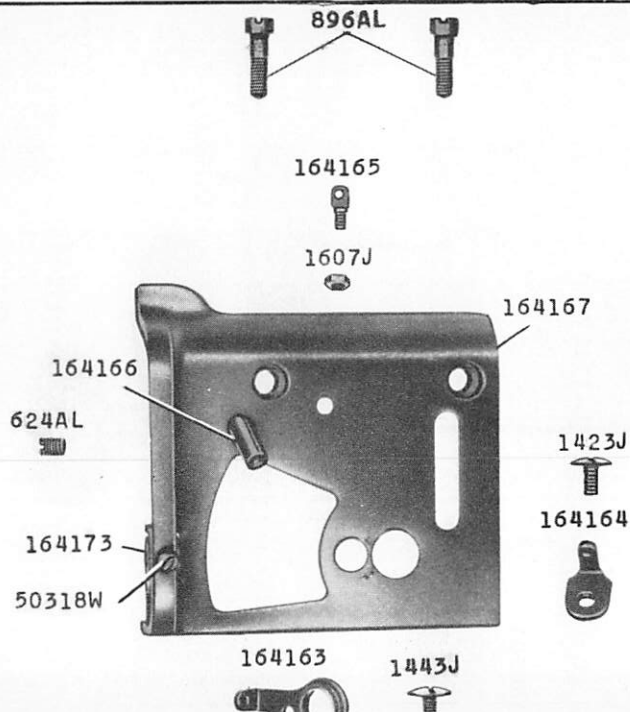



24761 - 2/3

From the library of: Superior Sewing Machine & Supply LLC

24764 - 1/6

151031



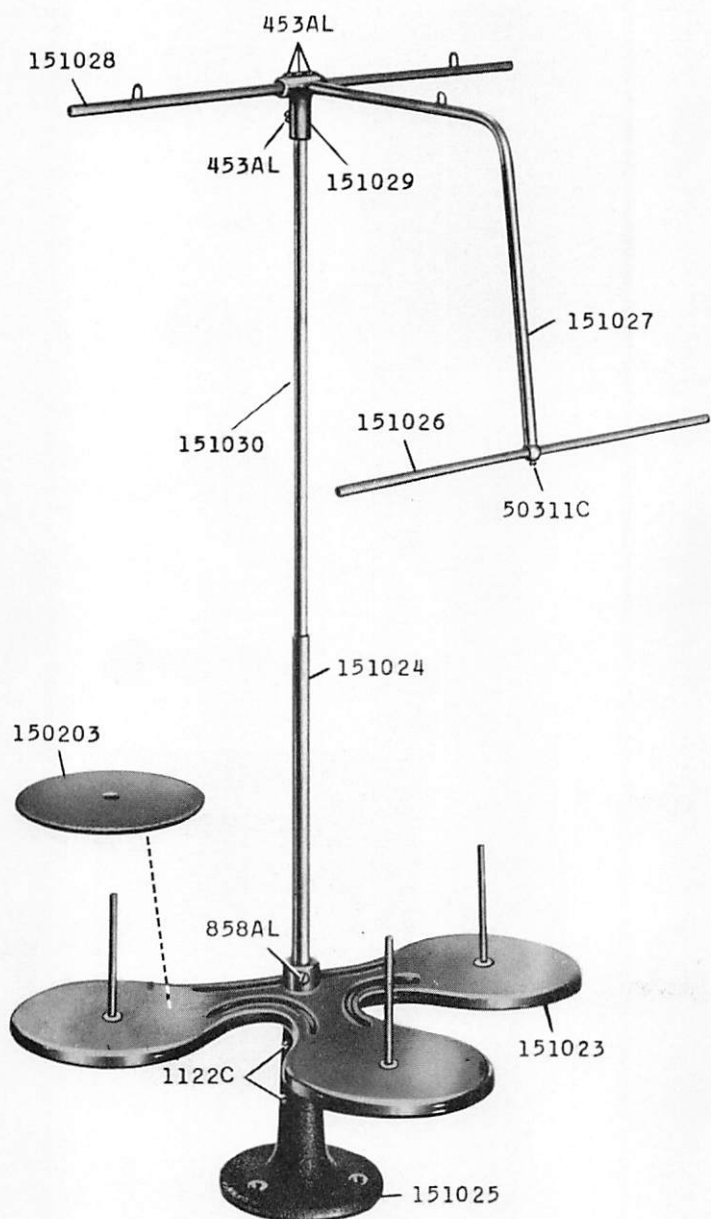


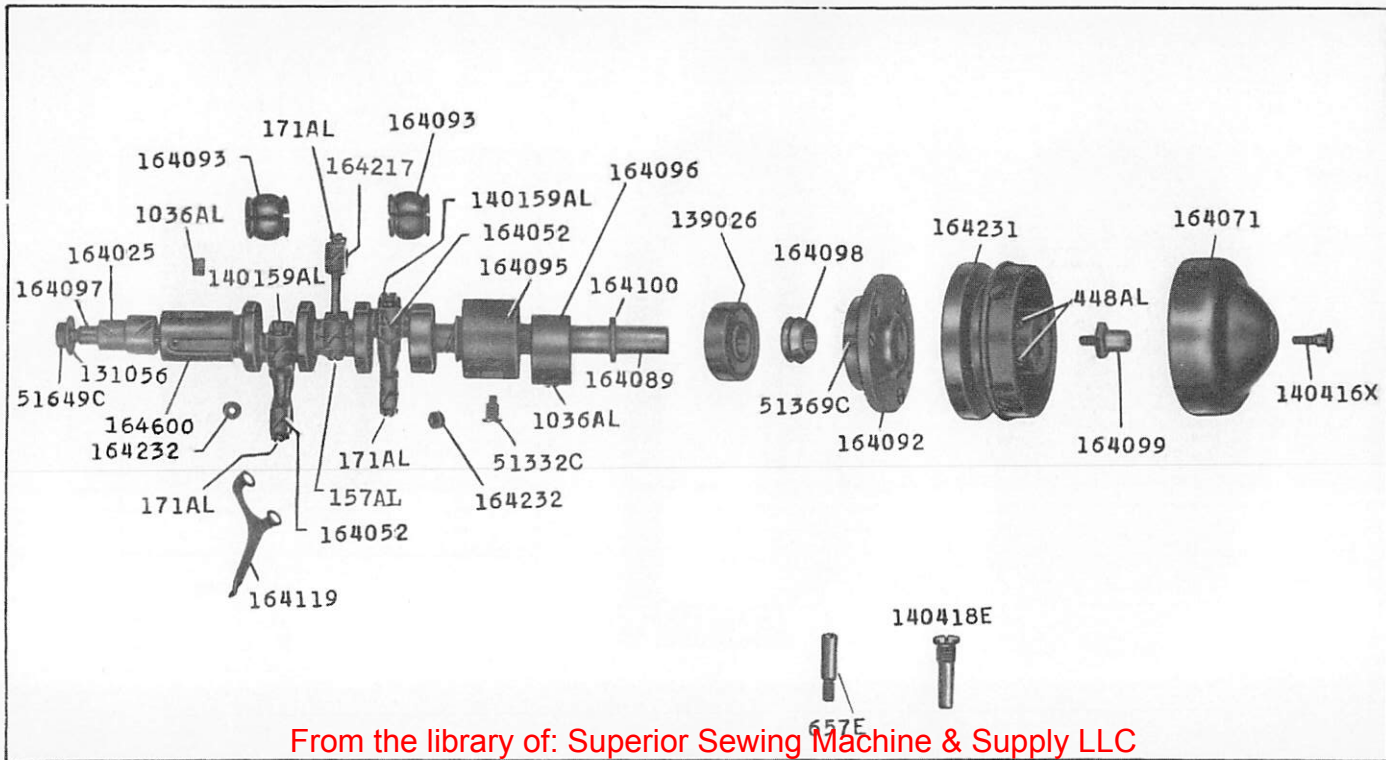

24812-1/3


From the library of: Superior Sewing Machine & Supply LLC

24813-1/3

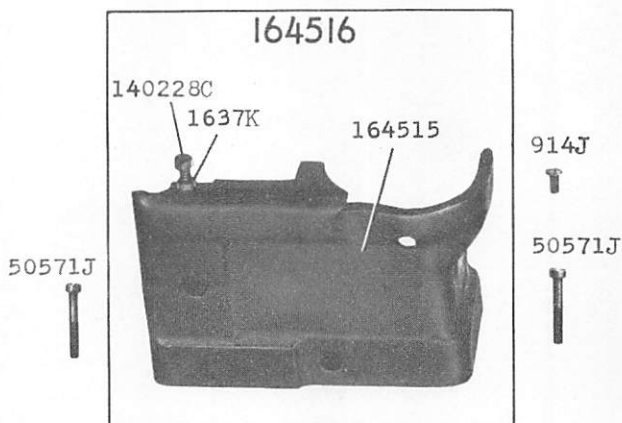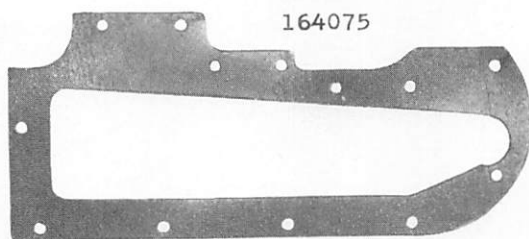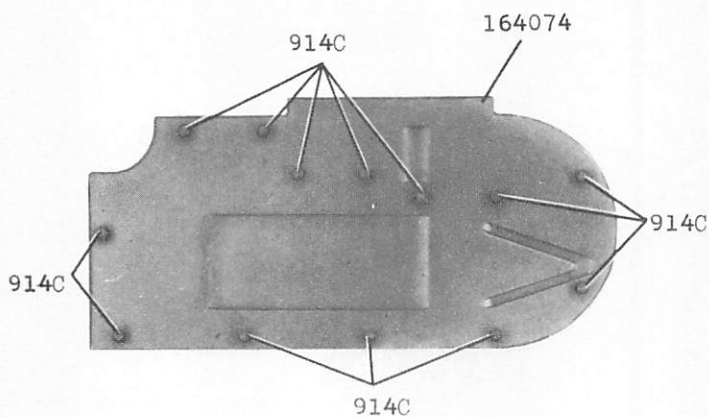

24826-1/2

160728

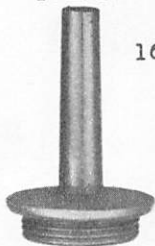

164198



164197



164196



164203



160727

160725

160726



26026



8908




164592




164204






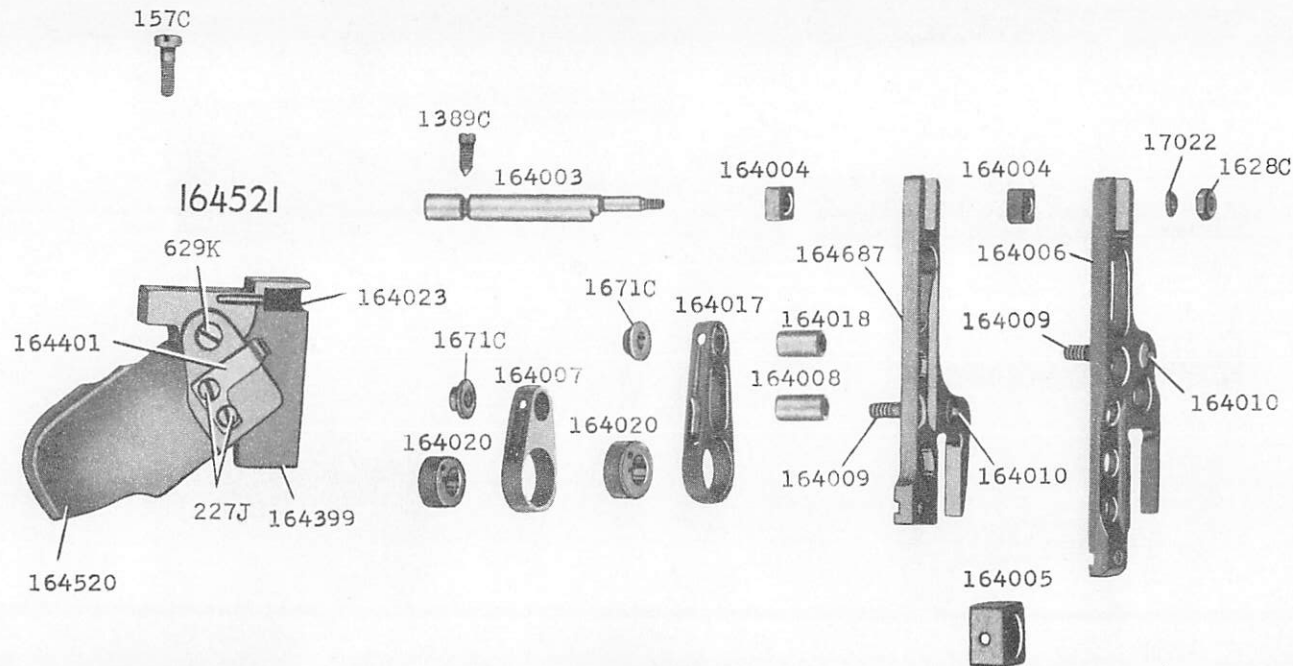


24827-1/2

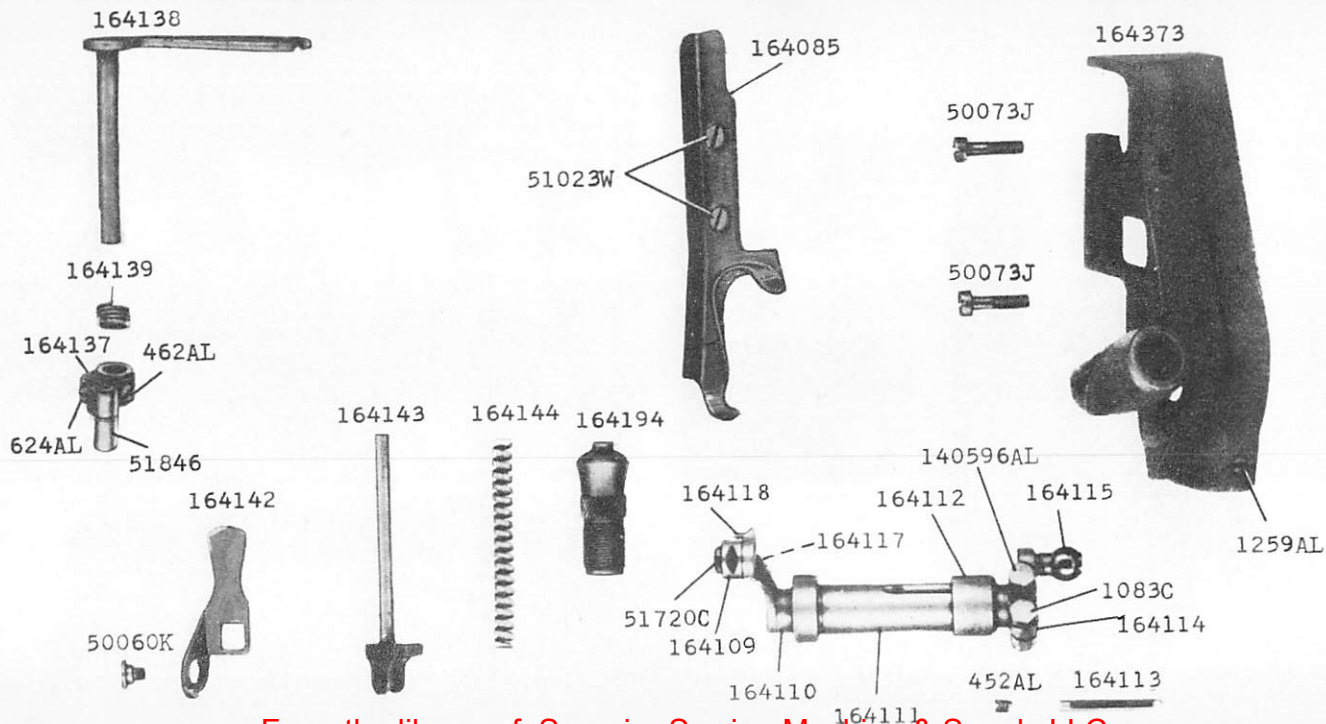

From the library of: Superior Sewing Machine & Supply LLC

24866 - 1/4

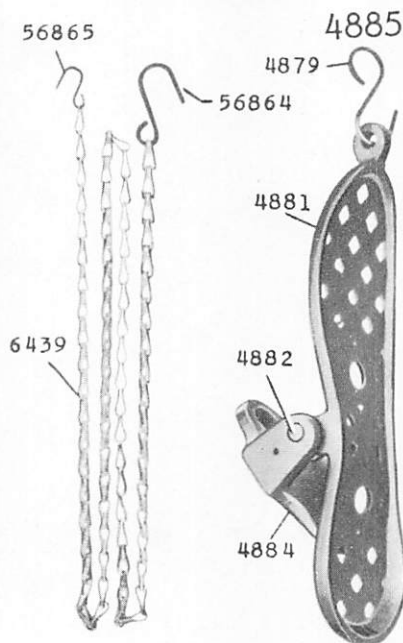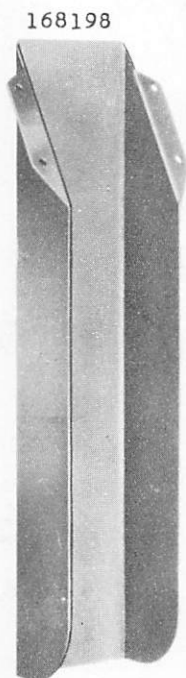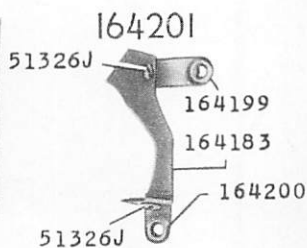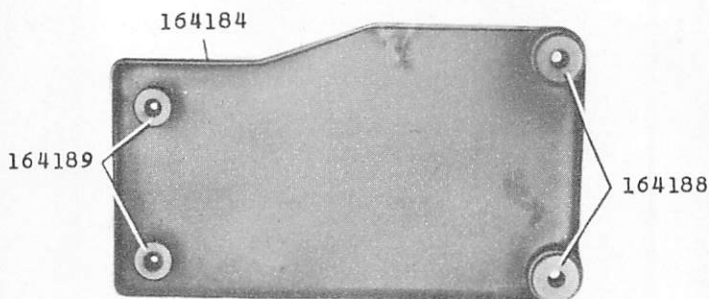

151163

453AL 151162 151028

151027 151029 453AL

151030


151026 50311C

228764 228765 228692

201254C 858AL 150203


150203 150203 150203

151024 1122C 151025

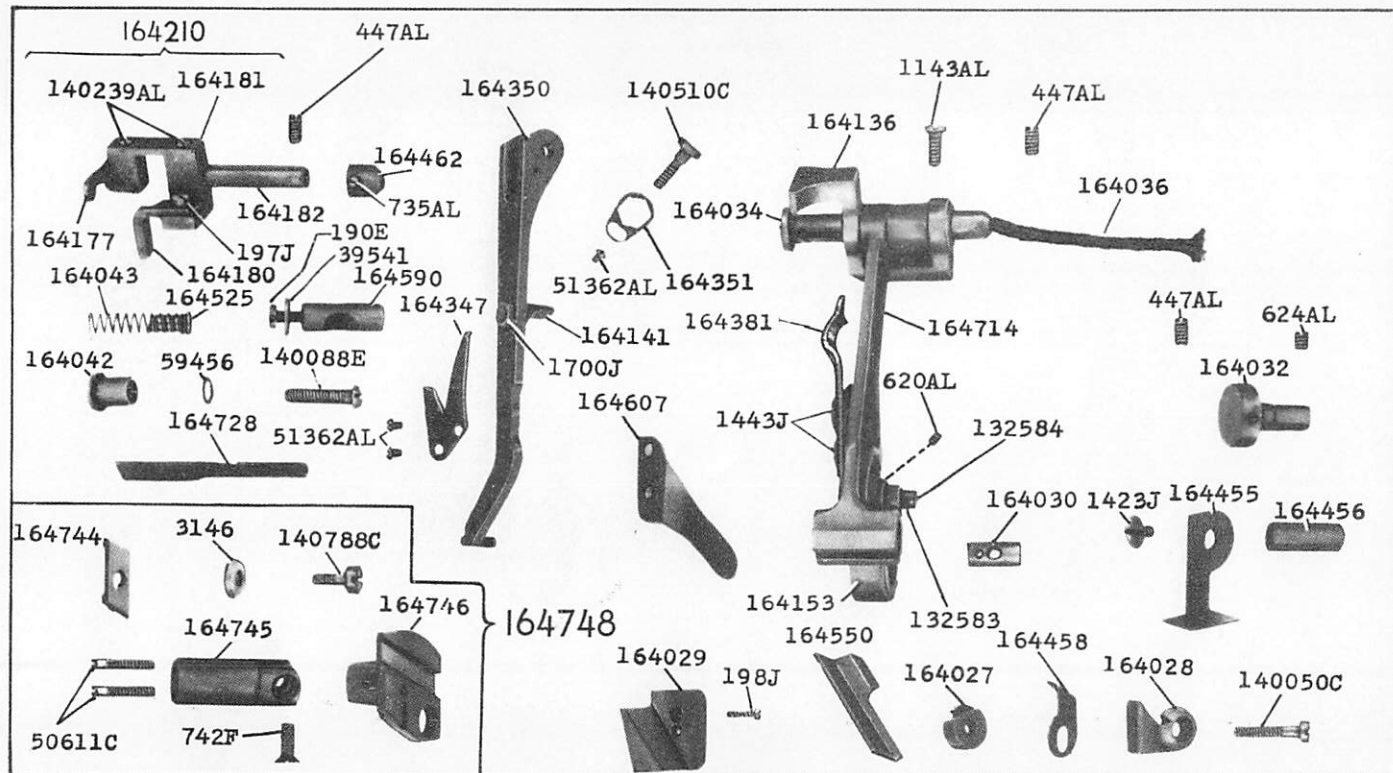


24868-1/2

From the library of: Superior Sewing Machine & Supply LLC

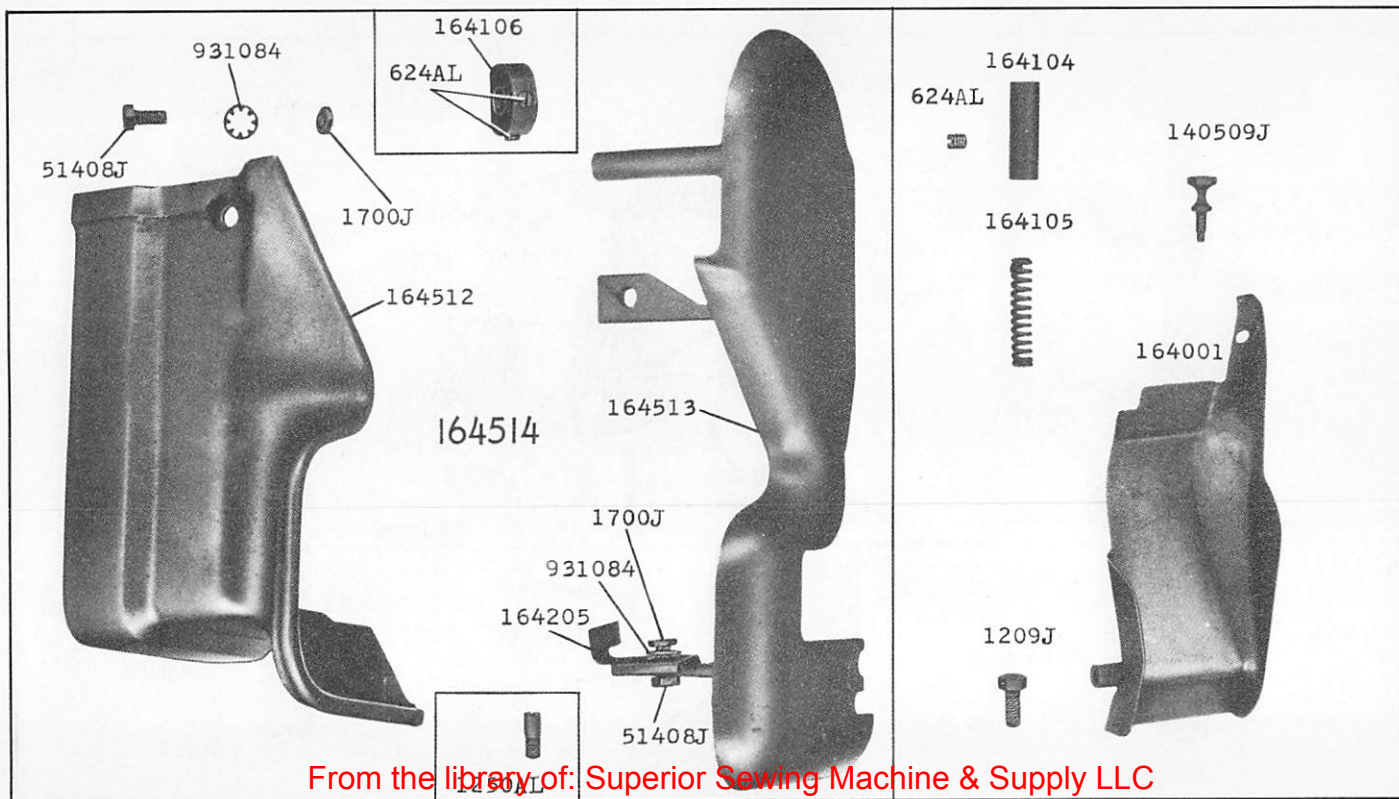


From the library of: Superior Sewing Machine & Supply LLC

24869-1/2

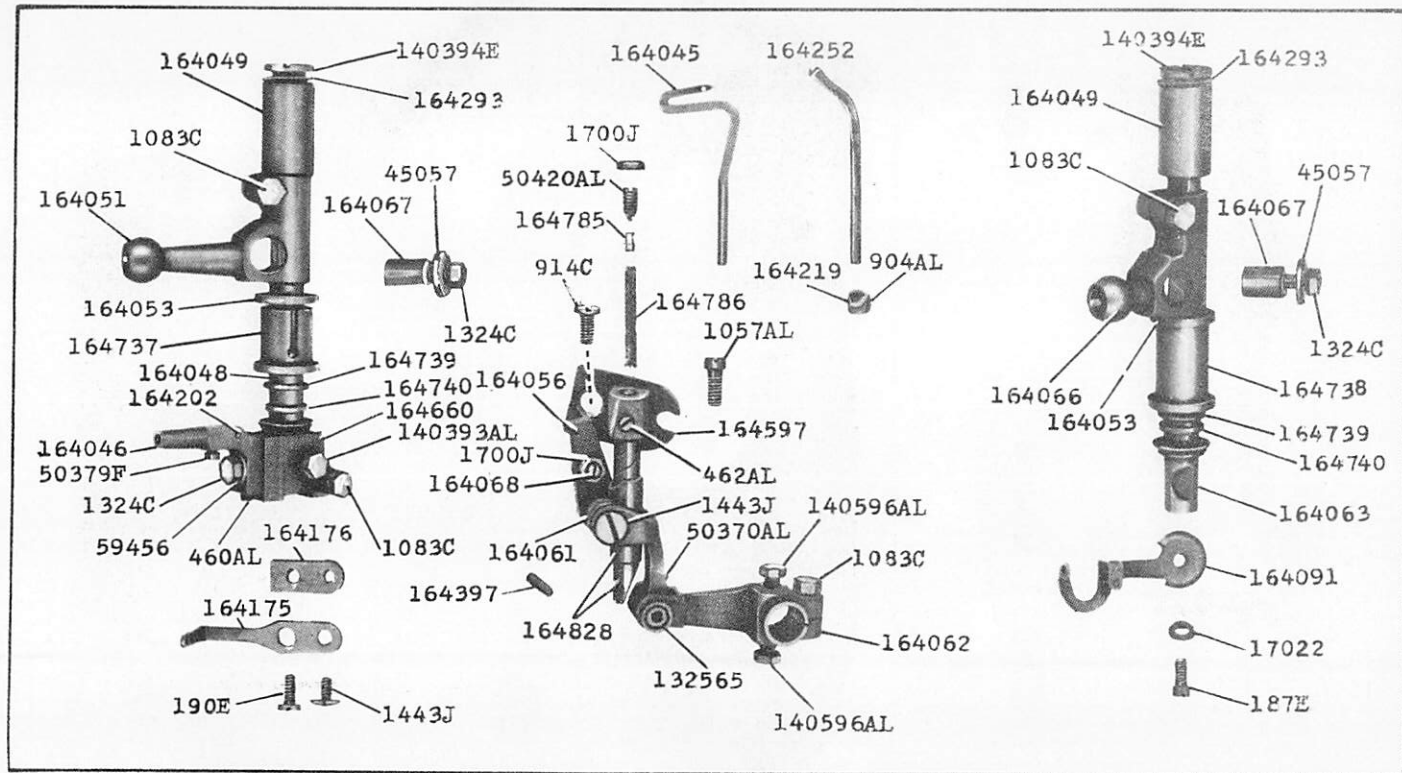


24870-1/2

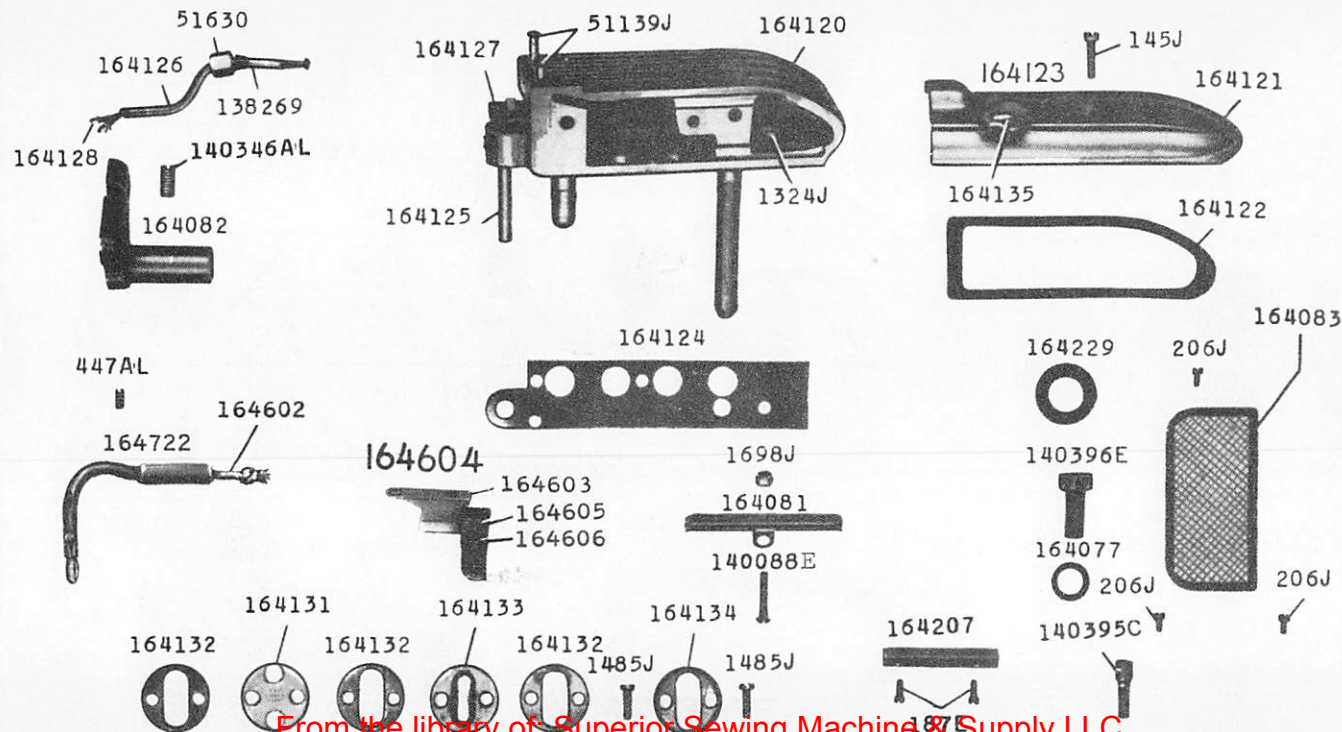

From the library of: Superior Sewing Machine & Supply LLC

24871-1/3

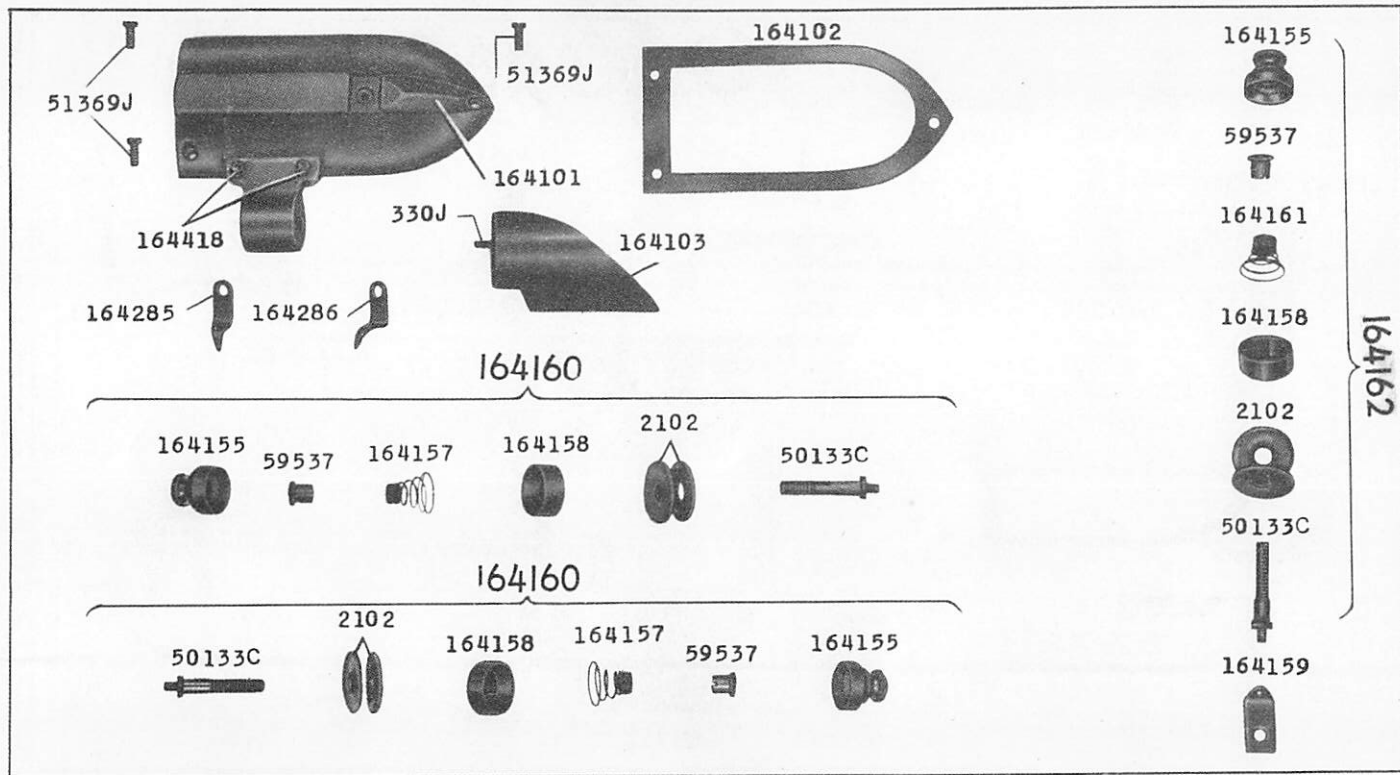

24872-1/3

From the library of: Superior Sewing Machine & Supply LLC

24873-2/3


164497




1454F



164496

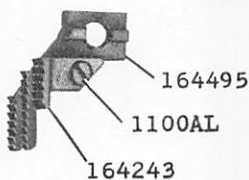


164358

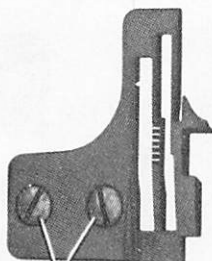

1094F

164511

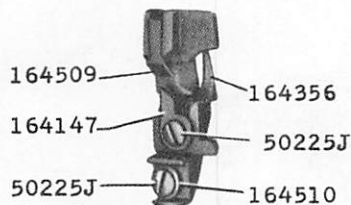


24874-2/3

164539


164497




164496

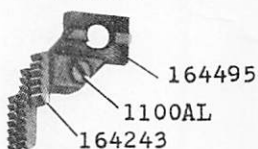

164511

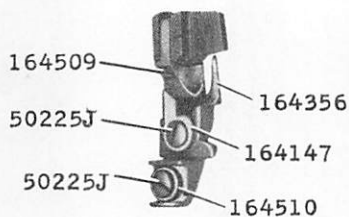

164358

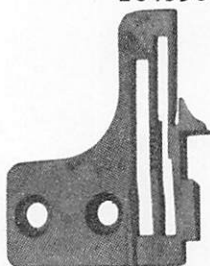

164252



160749



164550



164347



164350



164091



164381



164517



164175




24875-2/3

164540


164533




164532

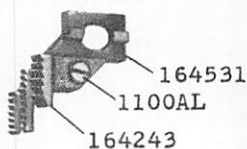


164511

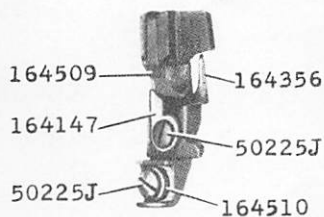

164358 164252

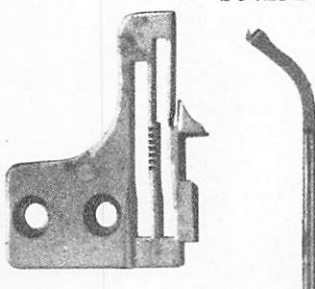

160749

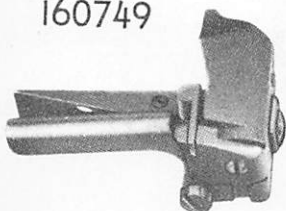

164550



164347



164350



164091



164381



164517




164175



24876-2/3

164382


164532

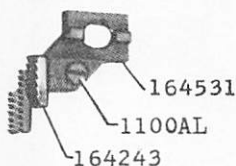


164533



164237

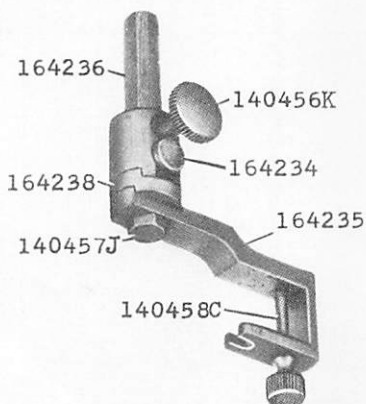


164357

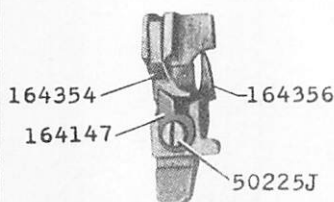

164383


164244

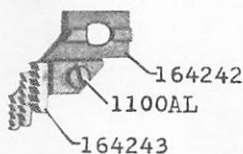


164348




164237

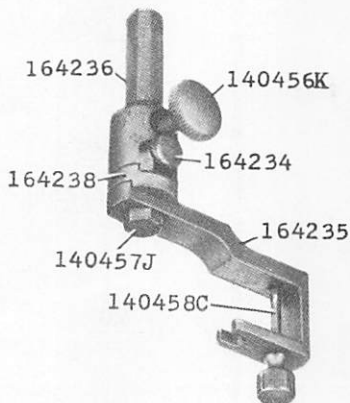


164357

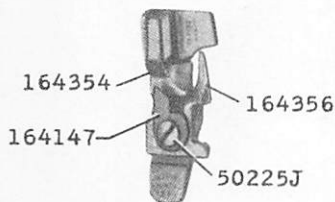


164237

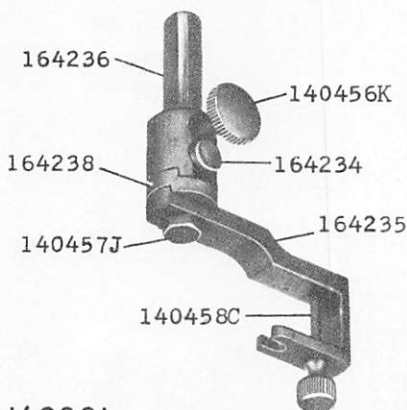


160381

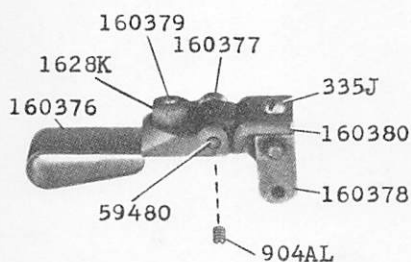

160384

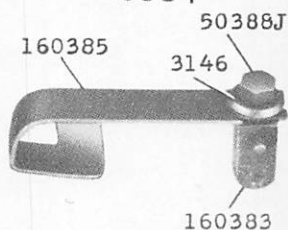

160749

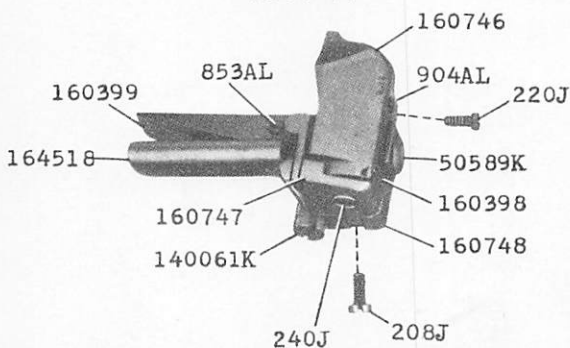

DEPARTMENT 52

DEPARTMENT 52

