

LIST OF PARTS



SINGER^{**}

MACHINE No. 246-15

THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling and when in continuous use, the oil gauge should be checked daily. The oil level should be maintained at the midpoint of the gauge.

To oil the machine, apply "TYPE A" OIL, sold only by Singer Sewing Machine Company, to the oil filler cup on top of the machine, as instructed in Form 20741

INDEX

	Page
Accessories.....	21
Belt Guard	21
Chip Chute	21
Foot Lifter Parts	21
Machine Base	22
Machine No. 246-15	7
Numerical List of Parts	25
Set of Fittings Complete No. 164391	18
Set of Fittings Complete No. 164445	19
Set of Fittings Complete No. 164542	20
Thread Unwinder No. 151031	22
Thread Unwinder No. 151163	23

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the part **NUMBER** in the **FIRST** column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

A—Hardened, Polished, Nickel Plated and Buffed

B—Polished, Nickel Plated and Buffed

C—Hardened Only

D—Polished Only

E—Soft, Not Polished

F—Hardened and Polished

G—Bright Rumbled and Nickel Plated

H—Blued

J—Nickel Plated Only

K—Hardened and Nickel Plated

L—Brass Plated

M—Oxidized

R—Phosphate Coating Formed on Surface of Iron or Steel

S—Cadmium Plated

T—Copper Plated

U—Zinc Plated

V—Silver Plated

W—Polished and Nickel Plated

X—Black Oxide for Iron and Steel

Y—Black Nickel Plated Only

Z—Chromium Plated

A.A—Buffed and Chromium Plated

A.B—Hardened, Polished, Buffed and Chromium Plated

A.E—Hardened, Bright Rumbled and Nickel Plated

A.F—Hardened, Bright Rumbled, Nickel Plated,
Bright Rumbled and Chromium Plated

A.G—Alumilite (Plain)

A.H—Alumilite (Dyed) Color Must be Stated

A.J—Polished, Nickel Plated and Chromium Plated

A.K—Hardened, Polished, Nickel Plated and Chromium
Plated

A.L—Heat Treated for Toughness

A.L.D—Heat Treated for Toughness and Polished

A.L.X—Heat Treated for Toughness and Black Oxide

INSTRUCTIONS FOR ORDERING

- A.S—Black Moulded Phenolic
- A.T—Beige Moulded Phenolic
- A.U—Brown Moulded Phenolic
- A.W—Hardened then Flame Coated with Tungsten Carbide
- B.A—Chrome Nickel Satin Finish
- B.B—Hardened and Chrome Nickel, Satin Finished
- C.R—Hardened and Phosphate Coating Formed on Surface of Steel
- F.J—Hardened, Polished and Nickel Plated
- T.A—Hardened, Polished, Copper and Nickel Plated and Buffed
- T.B—Copper and Nickel Plated and Polished
- T.J—Copper and Nickel Plated Only
- T.K—Hardened, Copper and Nickel Plated
- T.L—Copper and Brass Plated
- T.M—Copper Plated and Oxidized
- X.C—Hardened and Black Oxide for Iron and Steel
- Z.A—Hardened, Polished Nickel Plated, Buffed and Chromium Plated
- Z.B—Polished, Nickel Plated, Buffed and Chromium Plated
- Z.C—Hardened and Chromium Plated
- Z.D—Polished and Chromium Plated
- Z.G—Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated
- Z.J—Nickel and Chromium Plated
- Z.T—Copper and Chromium Plated

These letters **MUST BE USED** when they appear in the list; and **AFTER** the number as in the list.

In this series:

1 to 1500, 50001 to 51500 and 140001 to 142,000 are screw numbers

1501 to 1800 and 51500 to 51800 are nut numbers


1801 to 2000 and 51801 to 52000 are roller numbers

2001 to 50000 and 52001 to 140000 and 142001 to 190000 are Sewing Machine Parts, 190001 and upward are numbers of Electrical Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are **NOT TO BE USED** in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE FOR

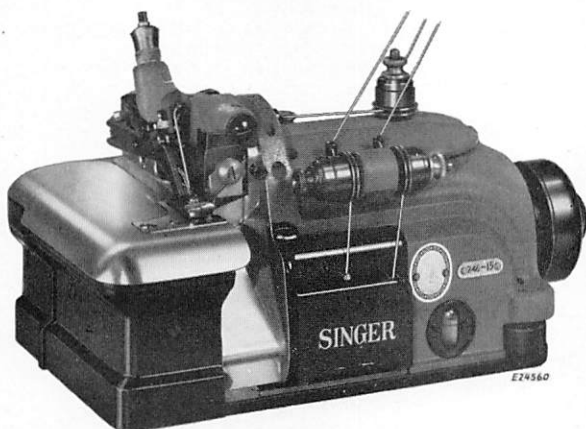

MACHINE No. 246-15

FOR TRIMMING AND OVEREDGING MEDIUM HEAVY AND
HEAVY WEIGHT FABRICS. ONE NEEDLE. TWO LOOPERS.
GATHERING FEED. TRIMMER.

SPEED UP TO 5000 R. P. M., DEPENDING ON MATERIALS USED AND
OPERATIONS PERFORMED

No.	PLATE	NAME
164001	24855	CHIP GUARD.....
1209J	24855	CHIP GUARD SCREW (LOWER).....
140509J	24855	CHIP GUARD SCREW (UPPER).....
164002	24855	CLOTH PLATE EXTENSION.....
51408J	24855	CLOTH PLATE EXTENSION SCREW (2).....
1700J	24855	CLOTH PLATE EXTENSION SCREW NUT.....
931084	24855	CLOTH PLATE EXTENSION SCREW NUT LOCK WASHER.....
164205	24855	CLOTH PLATE LOCK SPRING.....
1700J	24855	CLOTH PLATE LOCK SPRING NUT.....
931084	24855	CLOTH PLATE LOCK SPRING NUT LOCK WASHER.....
1250AL	24855	CLOTH PLATE LOCK SPRING SCREW STUD....
164104	24855	CLOTH PLATE PLUNGER.....
164105	24855	CLOTH PLATE PLUNGER SPRING.....
624AL	24855	CLOTH PLATE PLUNGER SET SCREW.....
164106	24855	CLOTH PLATE POSITION COLLAR WITH TWO 624AL.....
624AL	24855	CLOTH PLATE POSITION COLLAR SET SCREW (2).....
164593	24855	CLOTH PLATE.....
164594	24855	CLOTH PLATE WITH EXTENSION COMPLETE, Nos. 164002, 164205, 164593 AND TWO EACH 1700J, 51408J AND 931084..
164003	24856	FEED BAR HINGE PIN (ECCENTRIC).....
1389C	24856	FEED BAR HINGE PIN SET SCREW.....
164004	24856	FEED BAR SLIDE BLOCK (BACK) (2).....
1628C	24856	FEED BAR SLIDE BLOCK (BACK) NUT.....
17022	24856	FEED BAR SLIDE BLOCK (BACK) NUT WASHER
164366	24856	FEED BAR SLIDE BLOCK (FRONT).....
164687	24856	FEED (BACK) BAR WITH 164010.....
164017	24856	FEED (BACK) BAR WITH 164010.....
164008	24856	FEED (BACK) BAR CONNECTION BEARING....

No.	PLATE	NAME
164009	24856	FEED (BACK) BAR CONNECTION HINGE SCREW STUD.....
1671C	24856	FEED (BACK) BAR CONNECTION HINGE SCREW STUD NUT
164010	24856	FEED (BACK) BAR CONNECTION HINGE SCREW STUD POSITION PIN.....
164367	24861	FEED (BACK) DOG SECTION (LEFT).....
164223	24861	FEED (BACK) DOG SECTION (RIGHT).....
1100AL	24861	FEED (BACK) DOG SECTION (RIGHT) SCREW
164369	24861	FEED (BACK) DOG COMPLETE, Nos. 1100AL, 164223 AND 164367.....
1454F	24861	FEED (BACK) DOG SCREW.....
164020	24856	FEED (BACK) ECCENTRIC.....
NOTE: FEED (BACK) ECCENTRIC No. 164020 IS FURNISHED IN 6 TO 16, 18, 20, 22, 24, 28, 32 AND 36 STITCHES TO THE INCH UNLESS OTHERWISE STATED, No. 164020 (14 STITCHES TO THE INCH) IS SUPPLIED REGULARLY.		
164006	24856	FEED (FRONT) BAR WITH 164010.....
164007	24856	FEED (FRONT) BAR CONNECTION.....
164018	24856	FEED (FRONT) BAR CONNECTION BEARING..
164009	24856	FEED (FRONT) BAR CONNECTION HINGE SCREW STUD.....
1671C	24856	FEED (FRONT) BAR CONNECTION HINGE SCREW STUD NUT.....
164010	24856	FEED (FRONT) BAR CONNECTION HINGE SCREW STUD POSITION PIN.....
164370	-----	FEED (BACK) AND (FRONT) BARS COM- PLETE, Nos. 164006, 164007, 164008, 164017, 164018, 164366, 164687 AND TWO EACH 1671C, 164004 AND 164009.
164371	24861	FEED (FRONT) DOG.....
1454F	24861	FEED (FRONT) DOG SCREW.....
164020	24856	FEED (FRONT) ECCENTRIC.....
NOTE: FEED (FRONT) ECCENTRIC No. 164020 IS FURNISHED IN 6 TO 16, 18, 20, 22, 24, 28, 32 AND 36 STITCHES TO THE INCH UNLESS OTHERWISE STATED, No. 164020 (14 STITCHES TO THE INCH) IS SUPPLIED REGULARLY.		
164520	24856	FEED ECCENTRIC COVER.....
164399	24856	FEED ECCENTRIC COVER BRACKET WITH 164023.....
157C	24856	FEED ECCENTRIC COVER BRACKET SCREW...
629K	24856	FEED ECCENTRIC COVER HINGE SCREW....
164401	24856	FEED ECCENTRIC COVER LATCH SPRING....
227J	24856	FEED ECCENTRIC COVER LATCH SPRING SCREW (2).....
164023	24856	FEED ECCENTRIC OIL WICK.....
164521	24856	FEED ECCENTRIC COVER COMPLETE, FOR USE WITH ECCENTRICS OF 4 STITCHES AND ABOVE, Nos. 629K, 164399, 164401, 164520 AND TWO 227J.....
164372	24857	FEED LIFTING AND KNIFE (MOVABLE) LEVER ECCENTRIC.....
164455	24858	FINGER GUARD.....
164456	24858	FINGER GUARD ADAPTOR.....
1259AL	24829	FINGER GUARD ADAPTOR SCREW.....
1423J	24858	FINGER GUARD SCREW.....
164556	24858	KNIFE (MOVABLE) (2).....
164027	24858	KNIFE (MOVABLE) CLAMP.....

No.	PLATE	NAME
140050C	24858	KNIFE (MOVABLE) CLAMP SCREW.....
164028	24858	KNIFE (MOVABLE) GUARD (LOWER).....
164458	24858	KNIFE (MOVABLE) GUARD (UPPER).....
164029	24858	KNIFE (MOVABLE) HOLDER.....
198J	24858	KNIFE (MOVABLE) HOLDER SCREW.....
164030	24858	KNIFE (MOVABLE) HOLDER SCREW BEARING.
164714	24858	KNIFE (MOVABLE) LEVER WITH 620AL.....
164715	-----	KNIFE (MOVABLE) LEVER 164714 WITH 132583, 164035, 164136 AND 164153.
164032	24858	KNIFE (MOVABLE) LEVER BEARING.....
447AL	24858	KNIFE (MOVABLE) LEVER BEARING SET SCREW (LONG).....
624AL	24858	KNIFE (MOVABLE) LEVER BEARING SET SCREW (SHORT).....
164373	24829	KNIFE (MOVABLE) LEVER COVER AND PRESSER BAR (UPRIGHT) HOUSING WITH 1259AL.....
50073J	24829	KNIFE (MOVABLE) LEVER COVER AND PRESSER BAR (UPRIGHT) HOUSING SCREW (2).....
164374	-----	KNIFE (MOVABLE) LEVER COVER AND PRESSER BAR (UPRIGHT) HOUSING COMPLETE, Nos. 50060K, 164137, 164138, 164139, 164142, 164143, 164144, 164194 AND 164373.....
164180	24858	KNIFE (MOVABLE) LEVER GUIDE.....
164181	24858	KNIFE (MOVABLE) LEVER GUIDE HOLDER WITH TWO 140239AL.....
164210	24858	KNIFE (MOVABLE) LEVER GUIDE HOLDER 164181 WITH 197J, 164177, 164180 AND 164182.....
164182	24858	KNIFE (MOVABLE) LEVER GUIDE HOLDER THREAD TUBE.....
447AL	24858	KNIFE (MOVABLE) LEVER GUIDE HOLDER THREAD TUBE SET SCREW (FRAME END).
140239AL	24858	KNIFE (MOVABLE) LEVER GUIDE HOLDER THREAD TUBE SET SCREW (HOLDER END)
197J	24858	KNIFE (MOVABLE) LEVER GUIDE SCREW....
132583	24858	KNIFE (MOVABLE) LEVER HINGE PIN WITH 132584.....
132584	24858	KNIFE (MOVABLE) LEVER HINGE PIN OIL WICK.....
620AL	24858	KNIFE (MOVABLE) LEVER HINGE PIN SET SCREW.....
164034	24858	KNIFE (MOVABLE) LEVER HINGE STUD.....
164035	-----	KNIFE (MOVABLE) LEVER HINGE STUD 164034 WITH 164036 AND 164269
164036	24858	KNIFE (MOVABLE) LEVER HINGE STUD OIL WICK (LONG).....
164269	-----	KNIFE (MOVABLE) LEVER HINGE STUD OIL WICK (SHORT).....
447AL	24858	KNIFE (MOVABLE) LEVER HINGE STUD SET SCREW (BACK).....
1143AL	24858	KNIFE (MOVABLE) LEVER HINGE STUD SET SCREW (TOP).....
164728	24858	KNIFE (STATIONARY) (2).....
164744	24858	KNIFE (STATIONARY) CLAMPING GIB.....
140788C	24858	KNIFE (STATIONARY) CLAMPING GIB SCREW
3146	24858	KNIFE (STATIONARY) CLAMPING GIB SCREW WASHER.....
164746	24858	KNIFE (STATIONARY) HOLDER.....

No.	PLATE	NAME
164747	-----	KNIFE (STATIONARY) HOLDER (ADJUSTABLE) COMPLETE, NOS. 742F, 164745 AND 164746.....
164748	24858	KNIFE (STATIONARY) HOLDER (ADJUSTABLE) WITH GIB COMPLETE, NOS. 3146, 140788C, 164744 AND 164747.....
164590	24858	KNIFE (STATIONARY) HOLDER ADJUSTING STUD.....
190E	24858	KNIFE (STATIONARY) HOLDER ADJUSTING STUD CAP SCREW.....
39541	24858	KNIFE (STATIONARY) HOLDER ADJUSTING STUD CAP SCREW WASHER.....
164745	24858	KNIFE (STATIONARY) HOLDER BODY WITH TWO 50611C.....
50611C	24858	KNIFE (STATIONARY) HOLDER POSITION SCREW (2).....
742F	24858	KNIFE (STATIONARY) HOLDER SCREW.....
164042	24858	KNIFE (STATIONARY) HOLDER SLEEVE.....
140088R	24858	KNIFE (STATIONARY) HOLDER SLEEVE SCREW
59456	24858	KNIFE (STATIONARY) HOLDER SLEEVE SCREW WASHER.....
164043	24858	KNIFE (STATIONARY) HOLDER SPRING.....
164525	24858	KNIFE (STATIONARY) HOLDER SPRING STUD
164462	24858	LINT STRIPPER WITH 735AL.....
735AL	24858	LINT STRIPPER SET SCREW.....
164045	24859	LOOPER (LEFT HAND).....
164046	24859	LOOPER (LEFT HAND) CARRIER WITH 460AL, 50379F AND 164202.....
164660	24859	LOOPER (LEFT HAND) CARRIER HOLDER WITH 1083C, 140393AL AND 140596AL.
164661	-----	LOOPER (LEFT HAND) CARRIER HOLDER 164660 WITH 1324C, 59456 AND 164046.....
1083C	24859	LOOPER (LEFT HAND) CARRIER HOLDER CLAMPING SCREW.....
140596AL	-----	LOOPER (LEFT HAND) CARRIER HOLDER SET SCREW (LEFT).....
140393AL	24859	LOOPER (LEFT HAND) CARRIER HOLDER SET SCREW (RIGHT).....
1324C	24859	LOOPER (LEFT HAND) CARRIER SCREW.....
460AL	24859	LOOPER (LEFT HAND) CARRIER SCREW SET SCREW.....
59456	24859	LOOPER (LEFT HAND) CARRIER SCREW WASHER.....
164048	24859	LOOPER (LEFT HAND) DRIVING SHAFT.....
164049	24859	LOOPER (LEFT HAND) DRIVING SHAFT BUSHING (BACK).....
140394E	24859	LOOPER (LEFT HAND) DRIVING SHAFT BUSHING (BACK) CAP SCREW.....
164293	24859	LOOPER (LEFT HAND) DRIVING SHAFT BUSHING (BACK) CAP SCREW WASHER...
164737	24859	LOOPER (LEFT HAND) DRIVING SHAFT BUSHING (FRONT).....
164051	24859	LOOPER (LEFT HAND) DRIVING SHAFT CRANK WITH 1083C.....
1083C	24859	LOOPER (LEFT HAND) DRIVING SHAFT CRANK CLAMPING SCREW.....
164052	24857	LOOPER (LEFT HAND) DRIVING SHAFT CRANK CONNECTION WITH TWO EACH 171AL AND 140159AL.....
164215	-----	LOOPER (LEFT HAND) DRIVING SHAFT CRANK 164051 WITH 164052.....

No.	PLATE	NAME
171AL	24857	LOOPER (LEFT HAND) DRIVING SHAFT CRANK CONNECTION CAP (LOWER) SCREW (2).....
140159AL	24857	LOOPER (LEFT HAND) DRIVING SHAFT CRANK CONNECTION CAP (UPPER) SCREW (2).....
164067	24859	LOOPER (LEFT HAND) DRIVING SHAFT CRANK KEY.....
1324C	24859	LOOPER (LEFT HAND) DRIVING SHAFT CRANK KEY SCREW.....
45057	24859	LOOPER (LEFT HAND) DRIVING SHAFT CRANK KEY SCREW WASHER.....
164053	24859	LOOPER (LEFT HAND) DRIVING SHAFT CRANK THRUST BEARING.....
164739	24859	LOOPER (LEFT HAND) DRIVING SHAFT OIL RING (RUBBER).....
164740	24859	LOOPER (LEFT HAND) DRIVING SHAFT OIL RING SPACES.....
50379F	24859	LOOPER (LEFT HAND) SET SCREW.....
164202	24859	LOOPER (LEFT HAND) STOP PIN.....
164054	-----	LOOPER (LEFT HAND) THREAD TUBE.....
853AL	24861	LOOPER (LEFT HAND) THREAD TUBE SET SCREW.....
164375	24859	LOOPER (RIGHT HAND).....
164056	24859	LOOPER (RIGHT HAND) CARRIER WITH 50370AL.....
164828	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION.....
164829	-----	LOOPER (RIGHT HAND) CARRIER CONNEC- TION AND GUIDE BAR, Nos. 1700J, 50420AL, 164785, 164786 AND 164828
164597	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION GUIDE BAR BRACKET WITH TWO 462AL.....
914C	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION GUIDE BAR BRACKET SCREW (LEFT).....
1057AL	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION GUIDE BAR BRACKET SCREW (RIGHT).....
164785	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION GUIDE BAR OIL CONTROLLING SCREW SEAT (BRASS).....
50420AL	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION GUIDE BAR OIL PLUG SCREW.....
1700J	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION GUIDE BAR OIL PLUG SCREW NUT.
164786	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION GUIDE BAR OIL WICK.....
462AL	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION GUIDE BAR SET SCREW (2).....
164061	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION HINGE STUD WITH 1019AL.....
1443J	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION HINGE STUD CAP SCREW.....
164397	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION HINGE STUD ADJUSTING PIN.....
1019AL	-----	LOOPER (RIGHT HAND) CARRIER CONNEC- TION HINGE STUD ADJUSTING PIN SET SCREW.....
132565	24859	LOOPER (RIGHT HAND) CARRIER HINGE PIN
50370AL	24859	LOOPER (RIGHT HAND) CARRIER HINGE PIN SET SCREW.....

No.	PLATE	NAME
164062	24859	LOOPER (RIGHT HAND) DRIVING LEVER WITH 1083C AND TWO 140596AL.....
1083C	24859	LOOPER (RIGHT HAND) DRIVING LEVER CLAMPING SCREW.....
164830	-----	LOOPER (RIGHT HAND) DRIVING LEVER 164062 WITH 1443J, 1700J, 132565, 164056, 164061, 164068, 164397, 164597 AND 164829.....
140596AL	24859	LOOPER (RIGHT HAND) DRIVING LEVER SET SCREW (2).....
164063	24859	LOOPER (RIGHT HAND) DRIVING SHAFT....
164049	24859	LOOPER (RIGHT HAND) DRIVING SHAFT BUSHING (BACK).....
140394E	24859	LOOPER (RIGHT HAND) DRIVING SHAFT BUSHING (BACK) CAP SCREW.....
164293	24859	LOOPER (RIGHT HAND) DRIVING SHAFT BUSHING (BACK) CAP SCREW WASHER...
164738	24859	LOOPER (RIGHT HAND) DRIVING SHAFT BUSHING (FRONT).....
164066	24859	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK WITH 1083C.....
1083C	24859	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK CLAMPING SCREW.....
164052	24857	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK CONNECTION WITH TWO EACH 171AL AND 140159AL.....
164216	-----	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK 164066 WITH 164052.....
171AL	24857	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK CONNECTION CAP (LOWER) SCREW (2).....
140159AL	24857	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK CONNECTION CAP (UPPER) SCREW (2).....
164067	24859	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK KEY.....
1324C	24859	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK KEY SCREW.....
45057	24859	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK KEY SCREW WASHER.....
164053	24859	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK THRUST BEARING.....
164739	24859	LOOPER (RIGHT HAND) DRIVING SHAFT OIL RING (RUBBER).....
164740	24859	LOOPER (RIGHT HAND) DRIVING SHAFT OIL RING SPACER.....
164068	24859	LOOPER (RIGHT HAND) LOCKING SCREW STUD.....
1700J	24859	LOOPER (RIGHT HAND) LOCKING SCREW STUD NUT.....
164219	24859	LOOPER (RIGHT HAND) POSITION COLLAR WITH 904AL.....
904AL	24859	LOOPER (RIGHT HAND) POSITION COLLAR SET SCREW.....
*164072	-----	MACHINE FRAME.....
*164526	-----	MACHINE FRAME COMPLETE, Nos. 140396E, 164072, 164077, 164528 AND THREE 140395E.....
164074	24813	MACHINE FRAME BOTTOM COVER.....
164075	24813	MACHINE FRAME BOTTOM COVER GASKET....
914C	24813	MACHINE FRAME BOTTOM COVER SCREW (13)
*164527	-----	MACHINE FRAME BRACKET.....

No.	PLATE	NAME
*164528	-----	MACHINE FRAME BRACKET 164527 WITH 164207 AND TWO 187E.....
164207	24860	MACHINE FRAME BRACKET KEY.....
187E	24860	MACHINE FRAME BRACKET KEY SCREW (2)..
140395E	24860	MACHINE FRAME BRACKET SCREW (SMALL) (3).....
140396E	24860	MACHINE FRAME BRACKET SCREW (LARGE)..
164077	24860	MACHINE FRAME BRACKET SCREW (LARGE) WASHER (FIBER).....
164229	24860	MACHINE FRAME BRACKET SCREW (LARGE) WASHER (FELT).....
164515	24813	MACHINE FRAME COVER (BACK).....
50571J	24813	MACHINE FRAME COVER (BACK) SCREW (LONG) (2).....
914J	24813	MACHINE FRAME COVER (BACK) SCREW (SHORT).....
164516	24813	MACHINE FRAME COVER (BACK) 164515 WITH 1637K AND 140228C.....
164081	24860	MACHINE FRAME OIL LEAD.....
140088E	24860	MACHINE FRAME OIL LEAD SCREW.....
1698J	24860	MACHINE FRAME OIL LEAD SCREW NUT.....
164082	24860	MACHINE FRAME OIL PLUG BRACKET.....
140346AL	24860	MACHINE FRAME OIL PLUG BRACKET SET SCREW.....
164083	24860	MACHINE FRAME OIL SCREEN.....
206J	24860	MACHINE FRAME OIL SCREEN SCREW (3)...
164608	24860	MACHINE FRAME OIL SPLASH GUARD (INTERNAL).....
164605	24860	MACHINE FRAME OIL SPLASH GUARD (INTERNAL) OIL PAD.....
164606	24860	MACHINE FRAME OIL SPLASH GUARD (INTERNAL) OIL PAD FASTENER.....
164609	24860	MACHINE FRAME OIL SPLASH GUARD (INTERNAL) COMPLETE, Nos. 164605, 164606 AND 164608.....
164085	24829	MACHINE FRAME OIL SPLASH GUARD (TOP)...
51023W	24829	MACHINE FRAME OIL SPLASH GUARD (TOP) SCREW (2).....
164722	24860	MACHINE FRAME OIL TUBE WITH 164602...
447AL	24860	MACHINE FRAME OIL TUBE SET SCREW.....
164602	24860	MACHINE FRAME OIL TUBE WICK.....
164376	24857	MACHINE FRAME ROTARY SHAFT.....
164377	-----	MACHINE FRAME ROTARY SHAFT 164376 WITH 164097, 164215, 164216, 164217 AND TWO EACH 164093 AND 164232.....
139026	24857	MACHINE FRAME ROTARY SHAFT BALL BEARING.....
164092	24857	MACHINE FRAME ROTARY SHAFT BALL BEARING HOUSING.....
51369C	24857	MACHINE FRAME ROTARY SHAFT BALL BEARING HOUSING SCREW (3).....
164093	24857	MACHINE FRAME ROTARY SHAFT BALL SLEEVE (TWO PIECES) (2).....
164232	24857	MACHINE FRAME ROTARY SHAFT BALL SLEEVE GUIDE (2).....
164600	24857	MACHINE FRAME ROTARY SHAFT BUSHING (FRONT).....
1036AL	24857	MACHINE FRAME ROTARY SHAFT BUSHING (FRONT) SET SCREW.....
164095	24857	MACHINE FRAME ROTARY SHAFT BUSHING (INTERMEDIATE).....

No.	PLATE	NAME
51332C	24857	MACHINE FRAME ROTARY SHAFT BUSHING (INTERMEDIATE) SET SCREW.....
164096	24857	MACHINE FRAME ROTARY SHAFT COUNTER- BALANCE WITH 1036AL.....
1036AL	24857	MACHINE FRAME ROTARY SHAFT COUNTER- BALANCE SET SCREW.....
164097	24857	MACHINE FRAME ROTARY SHAFT KEY.....
51649C	24857	MACHINE FRAME ROTARY SHAFT NUT.....
131056	24857	MACHINE FRAME ROTARY SHAFT NUT WASHER
164098	24857	MACHINE FRAME ROTARY SHAFT OIL AND BALL BEARING GREASE RETAINER.....
164099	24857	MACHINE FRAME ROTARY SHAFT SCREW STUD
164100	24857	MACHINE FRAME ROTARY SHAFT THRUST BEARING.....
164101	24772	MACHINE FRAME TOP COVER.....
164214	-----	MACHINE FRAME TOP COVER 164101 WITH 330J, 164103 AND TWO 164418.....
164102	24772	MACHINE FRAME TOP COVER GASKET.....
164103	24772	MACHINE FRAME TOP COVER OIL LEAD.....
330J	24772	MACHINE FRAME TOP COVER OIL LEAD SCREW.....
51369J	24772	MACHINE FRAME TOP COVER SCREW (3)....
164231	24857	MACHINE PULLEY (ROUND AND "V" BELT) WITH TWO 448AL.....
164071	24857	MACHINE PULLEY CAP.....
140416X	24857	MACHINE PULLEY CAP SCREW.....
448AL	24857	MACHINE PULLEY SET SCREW (2).....
164109	24829	NEEDLE CLAMP.....
51720C	24829	NEEDLE CLAMPING NUT.....
164110	24829	NEEDLE DRIVING SHAFT WITH 164118.....
164275	-----	NEEDLE DRIVING SHAFT 164110 WITH 51720C, 164109 AND 164117.....
164111	24829	NEEDLE DRIVING SHAFT BUSHING.....
164112	24829	NEEDLE DRIVING SHAFT BUSHING CAP.....
164113	24829	NEEDLE DRIVING SHAFT BUSHING OIL LEAD
452AL	24829	NEEDLE DRIVING SHAFT BUSHING OIL LEAD HOLE PLUG SCREW.....
164114	24829	NEEDLE DRIVING SHAFT CRANK WITH 1083C AND TWO 140596AL.....
164115	24829	NEEDLE DRIVING SHAFT CRANK BALL.....
1083C	24829	NEEDLE DRIVING SHAFT CRANK CLAMPING SCREW.....
164217	24857	NEEDLE DRIVING SHAFT CRANK CONNECTION WITH 164115 AND TWO EACH 157AL AND 171AL.....
157AL	24857	NEEDLE DRIVING SHAFT CRANK CONNECTION CAP (LOWER) SCREW (2).....
171AL	24857	NEEDLE DRIVING SHAFT CRANK CONNECTION CAP (UPPER) SCREW (2).....
140596AL	24829	NEEDLE DRIVING SHAFT CRANK SET SCREW (2).....
164117	24829	NEEDLE HOLDER.....
164118	24829	NEEDLE STOP PIN.....
164119	24857	OIL AGITATOR.....
164120	24860	OIL COOLER, Nos. TWO 164125.....
164121	24860	OIL COOLER COVER.....
164123	24860	OIL COOLER COVER 164121 WITH 164135..
164122	24860	OIL COOLER COVER GASKET.....
145J	24860	OIL COOLER COVER SCREW.....
164124	24860	OIL COOLER GASKET.....
164125	24860	OIL COOLER OIL PIPE (2).....
164126	24860	OIL COOLER OIL TUBE WITH 138269 AND 164128.....

No.	PLATE	NAME
164736	-----	OIL COOLER OIL TUBE 164126 WITH 51630 AND 164127.....
164127	24860	OIL COOLER OIL TUBE COUPLING.....
51630	24860	OIL COOLER OIL TUBE LOCK NUT.....
138269	24860	OIL COOLER OIL TUBE SLEEVE.....
164128	24860	OIL COOLER OIL TUBE WICK.....
51139J	24860	OIL COOLER SCREW (LONG) (2).....
1324J	24860	OIL COOLER SCREW (SHORT).....
164607	24858	OIL DEFLECTOR.....
164131	24860	OIL SIGHT GAUGE BACKGROUND DISC.....
164132	24860	OIL SIGHT GAUGE BACKGROUND DISC GASKET.....
164133	24860	OIL SIGHT GAUGE WINDOW.....
164132	24860	OIL SIGHT GAUGE WINDOW GASKET.....
164134	24860	OIL SIGHT GAUGE WINDOW RETAINER.....
164132	24860	OIL SIGHT GAUGE WINDOW RETAINER GASKET.....
1485J	24860	OIL SIGHT GAUGE WINDOW RETAINER SCREW (2).....
164135	24860	OIL CUP FOR FILLING MACHINE.....
164136	24858	PRESSER BAR BRACKET.....
164137	24829	PRESSER BAR LIFTING BRACKET WITH 462AL, 624AL AND 51846.....
51846	24829	PRESSER BAR LIFTING BRACKET ROLLER AND STUD.....
624AL	24829	PRESSER BAR LIFTING BRACKET SET SCREW (LONG).....
462AL	24829	PRESSER BAR LIFTING BRACKET SET SCREW (SHORT).....
164138	24829	PRESSER BAR LIFTING LEVER.....
164139	24829	PRESSER BAR LIFTING LEVER SPRING.....
140228C	24813	PRESSER BAR LIFTING LEVER STOP SCREW.....
1637K	24813	PRESSER BAR LIFTING LEVER STOP SCREW NUT.....
164350	24858	PRESSER BAR (SWING-OUT).....
164141	24858	PRESSER BAR (SWING-OUT) LIFTING SCREW STUD.....
1700J	24858	PRESSER BAR (SWING-OUT) LIFTING SCREW STUD NUT.....
164142	24829	PRESSER BAR (SWING-OUT) OPENING LEVER.....
50060K	24829	PRESSER BAR (SWING-OUT) OPENING LEVER HINGE SCREW.....
140510C	24858	PRESSER BAR (SWING-OUT) PIVOT SCREW..
164351	24858	PRESSER BAR (SWING-OUT) PIVOT SCREW LOCKING PLATE.....
51362AL	24858	PRESSER BAR (SWING-OUT) PIVOT SCREW LOCKING PLATE SCREW.....
164143	24829	PRESSER BAR (UPRIGHT).....
164144	24829	PRESSER BAR (UPRIGHT) SPRING.....
164416	-----	PRESSER BAR (UPRIGHT) SPRING (HEAVY).....
164378	24861	PRESSER FOOT BODY.....
164379	24861	PRESSER FOOT CHAINING-OFF FINGER.....
164147	24861	PRESSER FOOT CLAMPING PLATE.....
50225J	24861	PRESSER FOOT CLAMPING PLATE SCREW.....
164360	24861	PRESSER FOOT GUIDE.....
50169J	24861	PRESSER FOOT GUIDE SCREW.....
164380	24861	PRESSER FOOT COMPLETE, Nos. 50169J, 50225J, 164147, 164360, 164378 AND 164379.....
164194	24829	PRESSURE REGULATING THUMB SCREW.....
2102	24772	TENSION (HEAVY) DISC (4).....
164155	24772	TENSION (HEAVY) REGULATING THUMB NUT (2).....

No.	PLATE	NAME
50133C	24772	TENSION {HEAVY} SCREW STUD (2).....
164156	-----	TENSION {HEAVY} SCREW STUD 50133C AND 164155 (2).....
164161	24772	TENSION {HEAVY} SPRING (2).....
59537	24772	TENSION {HEAVY} SPRING BUSHING (2)...
164158	24772	TENSION {HEAVY} SPRING COVER (2).....
164162	24772	TENSION {HEAVY} COMPLETE, Nos. 59537, 164156, 164158, 164161 AND TWO 2102 (2).....
2102	24772	TENSION {LIGHT} DISC (2).....
164155	24772	TENSION {LIGHT} REGULATING THUMB NUT.
50133C	24772	TENSION {LIGHT} SCREW STUD.....
164156	-----	TENSION {LIGHT} SCREW STUD 50133C WITH 164155.....
164157	24772	TENSION {LIGHT} SPRING.....
59537	24772	TENSION {LIGHT} SPRING BUSHING.....
164158	24772	TENSION {LIGHT} SPRING COVER.....
164160	24772	TENSION {LIGHT} COMPLETE, Nos. 59537, 164156, 164157, 164158 AND TWO 2102
164285	24772	TENSION {LOOPER THREAD} THREAD GUIDE (LEFT).....
164286	24772	TENSION {LOOPER THREAD} THREAD GUIDE (RIGHT).....
164159	24772	TENSION {NEEDLE THREAD} THREAD GUIDE.
164418	24772	TENSION THREAD EYELET (2).....
164091	24859	THREAD {LOOPER, RIGHT HAND} STRIPPER AND TAKE-UP WITH 164555.....
164163	24761	THREAD {LOOPER, RIGHT HAND} STRIPPER AND TAKE-UP EYELET (ADJUSTABLE)...
1443J	24761	THREAD {LOOPER, RIGHT HAND} STRIPPER AND TAKE-UP EYELET (ADJUSTABLE) SCREW.....
164555	-----	THREAD {LOOPER, RIGHT HAND} STRIPPER AND TAKE-UP WIRE.....
187E	24859	THREAD {LOOPER, RIGHT HAND} STRIPPER AND TAKE-UP SCREW.....
17022	24859	THREAD {LOOPER, RIGHT HAND} STRIPPER AND TAKE-UP SCREW WASHER.....
164164	24761	THREAD {LOOPER, RIGHT HAND} THREAD EYELET (MOVABLE).....
1423J	24761	THREAD {LOOPER, RIGHT HAND} THREAD EYELET SCREW.....
164165	24761	THREAD {LOOPER, RIGHT HAND} THREAD EYELET (STATIONARY).....
1607J	24761	THREAD {LOOPER, RIGHT HAND} THREAD EYELET (STATIONARY) NUT.....
164166	24761	THREAD {LOOPER, RIGHT HAND} TUBE.....
624AL	24761	THREAD {LOOPER, RIGHT HAND} TUBE SET SCREW.....
164167	24761	THREAD {LOOPER} PLATE WITH 624AL.....
164168	24761	THREAD {LOOPER} PLATE COVER.....
164206	-----	THREAD {LOOPER} PLATE COVER 164168 WITH 164169 AND 164170.....
164169	24761	THREAD {LOOPER} PLATE COVER HINGE....
164170	24761	THREAD {LOOPER} PLATE COVER HINGE PIN
164171	24761	THREAD {LOOPER} PLATE COVER SPRING (2)
332J	24761	THREAD {LOOPER} PLATE COVER SPRING SCREW (2).....
896AL	24761	THREAD {LOOPER} PLATE COVER SPRING THREAD BUSHING SCREW (2).....
164173	24761	THREAD {LOOPER} PLATE THREAD BUSHING.
50318W	24761	THREAD {LOOPER} PLATE THREAD BUSHING SCREW.....

No.	PLATE	NAME
164174	-----	THREAD (LOOPER) PLATE COMPLETE, Nos. 1423J, 1443J, 1607J, 50318W, 164163, 164164, 164165, 164166, 164167, 164173, 164206 AND TWO EACH 332J AND 164171.....
164175	24859	THREAD (LOOPER) TAKE-UP.....
164176	24859	THREAD (LOOPER) TAKE-UP PLATE.....
190E	24859	THREAD (LOOPER) TAKE-UP SCREW (LOWER)
1443J	24859	THREAD (LOOPER) TAKE-UP SCREW (UPPER)
164151	24858	THREAD (NEEDLE) CONTROLLER.....
164153	24858	THREAD (NEEDLE) CONTROLLER LEVER.....
1443J	24858	THREAD (NEEDLE) CONTROLLER SCREW.....
164177	24858	THREAD EYELET (NEEDLE THREAD).....
140239AL	24858	THREAD EYELET (NEEDLE THREAD) SET SCREW.....
164227	24861	THROAT PLATE.....
164591	24861	THROAT PLATE GUIDE WITH 853AL.....
1454E	24861	THROAT PLATE GUIDE SCREW.....
1094F	24861	THROAT PLATE SCREW (2).....

**SINGER Needles should be used
in SINGER Machines
These Needles and their Containers
are marked with the
Company's Trademark "SIMANCO" 1**

**Needles in Containers marked
"FOR SINGER MACHINES"
are NOT SINGER made needles 2**

SET OF FITTINGS COMPLETE No. 164391

For Sweater Material, For Three-Thread Stitch

Note: Set of Fittings No. 164391 is regular to Machine, unless otherwise stated on Machine order.

No.	PLATE	NAME
164367	24862	FEED {BACK} DOG SECTION {LEFT}.....
164223	24862	FEED {BACK} DOG SECTION {RIGHT}.....
1100AL	24862	FEED {BACK} DOG SECTION {RIGHT} SCREW.
164369	24862	FEED {BACK} DOG COMPLETE, Nos. 1100AL, 164223 AND 164367.....
164371	24862	FEED (FRONT) DOG.....
164556	24862	KNIFE (MOVABLE).....
164375	24862	LOOPER (RIGHT HAND).....
164350	24862	PRESSER BAR (SWING-OUT).....
164378	24862	PRESSER FOOT BODY.....
164379	24862	PRESSER FOOT CHAINING-OFF FINGER.....
164147	24862	PRESSER FOOT CLAMPING PLATE.....
50225J	24862	PRESSER FOOT CLAMPING PLATE SCREW.....
164360	24862	PRESSER FOOT GUIDE.....
50169J	24862	PRESSER FOOT GUIDE SCREW.....
164380	24862	PRESSER FOOT COMPLETE, Nos. 50169J, 50225J, 164147, 164360, 164378 AND 164379.....
164091	24862	THREAD {LOOPER, RIGHT HAND} STRIPPER AND TAKE-UP.....
164175	24862	THREAD {LOOPER} TAKE-UP.....
164151	24862	THREAD {NEEDLE} CONTROLLER.....
164227	24862	THROAT PLATE.....
164591	24862	THROAT PLATE GUIDE WITH 853AL.....
164391	24862	SET OF FITTINGS COMPLETE, Nos. 164091, 164151, 164175, 164227, 164350, 164369, 164371, 164375, 164380, 164556 AND 164591.....

SET OF FITTINGS COMPLETE No. 164445
For Joining the Abutted Edges of Piece Goods, 1/8 in. Bight,
for Two-Thread Stitch

No.	PLATE	NAME
164295	24863	FEED DOG, 18 TEETH (12 TEETH TO THE INCH).....
164530	24863	GUIDE {SWING-OUT}.....
164297	24863	GUIDE {SWING-OUT} ARM.....
164298	24863	GUIDE {SWING-OUT} ARM HOLDER.....
50267R	24863	GUIDE {SWING-OUT} ARM HOLDER SCREW (2)
164541	24863	GUIDE {SWING-OUT} ARM LOCK SPRING....
1423J	24863	GUIDE {SWING-OUT} ARM LOCK SPRING SCREW.....
1550J	24863	GUIDE {SWING-OUT} ARM LOCK SPRING SCREW NUT.....
164502	24863	GUIDE {SWING-OUT} EXTENSION {LOWER}..
164299	24863	GUIDE {SWING-OUT} EXTENSION {UPPER}..
197J	24863	GUIDE {SWING-OUT} EXTENSION SCREW....
164503	-----	GUIDE {SWING-OUT} WITH EXTENSIONS COMPLETE, Nos. 197J, 164299, 164502 AND 164530.....
1425J	24863	GUIDE {SWING-OUT} HINGE SCREW.....
42436	24863	GUIDE {SWING-OUT} HINGE SCREW WASHER.
1443J	24863	GUIDE {SWING-OUT} SCREW (2).....
164311	24863	GUIDE {SWING-OUT} WITH ARM AND HOLDER COMPLETE, Nos. 1423J, 1425J, 1550J, 42436, 164297, 164298, 164503, 164541 AND TWO 1443J.....
164492	24863	MACHINE FRAME OIL SPLASH GUARD (TOP)..
164471	24863	PRESSER FOOT BODY.....
164442	24863	PRESSER FOOT CHAINING-OFF FINGER.....
164147	24863	PRESSER FOOT CLAMPING PLATE.....
50225J	24863	PRESSER FOOT CLAMPING PLATE SCREW....
164310	24863	PRESSER FOOT GUIDE.....
218D	24863	PRESSER FOOT GUIDE SCREW.....
164583	24863	PRESSER FOOT COMPLETE, Nos. 218D, 50225J, 164147, 164310, 164442 AND 164471.....
164476	24863	PRESSER FOOT THREAD CHAIN GUARD.....
140180J	24863	PRESSER FOOT THREAD CHAIN GUARD SCREW
164444	24863	SPREADER.....
164381	24863	THREAD (NEEDLE) CONTROLLER.....
164440	24863	THROAT PLATE.....
164445	24863	SET OF FITTINGS COMPLETE, Nos. 140180J, 164295, 164311, 164381, 164440, 164444, 164476, 164492, 164583 AND TWO 50267R.....
NOTE: WHEN USING SET OF FITTINGS COMPLETE No. 164445, THE FOLLOWING PARTS WHICH ARE NOT INCLUDED IN THIS SET OF FITTINGS, ARE NECESSARY, IF MACHINE HAS PREVIOUSLY BEEN FITTED OTHER THAN REGULAR (SEE SET OF FITTINGS No. 164391)		
164556	24863	KNIFE (MOVABLE).....
164350	24863	PRESSER BAR (SWING-OUT).....
164091	24863	THREAD (LOOPER, RIGHT HAND) STRIPPER AND TAKE-UP.....
164175	24863	THREAD (LOOPER) TAKE-UP.....
164591	24863	THROAT PLATE GUIDE WITH 853AL.....

SET OF FITTINGS COMPLETE No. 164542

For Serging, For Three-Thread Tight

Stitch, For Approximately 3/16 in. Bight

No.	PLATE	NAME
164469	24864	FEED DOG.....
164530	24864	GUIDE {SWING-OUT}.....
164297	24864	GUIDE {SWING-OUT} ARM.....
164298	24864	GUIDE {SWING-OUT} ARM HOLDER.....
50267R	24864	GUIDE {SWING-OUT} ARM HOLDER SCREW (2)
164541	24864	GUIDE {SWING-OUT} ARM LOCK SPRING....
1423J	24864	GUIDE {SWING-OUT} ARM LOCK SPRING SCREW.....
1550J	24864	GUIDE {SWING-OUT} ARM LOCK SPRING SCREW NUT.....
164502	24864	GUIDE {SWING-OUT} EXTENSION {LOWER}..
164299	24864	GUIDE {SWING-OUT} EXTENSION {UPPER}..
197J	24864	GUIDE {SWING-OUT} EXTENSION SCREW....
164503	-----	GUIDE {SWING-OUT} WITH EXTENSION COMPLETE, Nos. 197J, 164299, 164502 AND 164530.....
1425J	24864	GUIDE {SWING-OUT} HINGE SCREW.....
42436	24864	GUIDE {SWING-OUT} HINGE SCREW WASHER.
1443J	24864	GUIDE {SWING-OUT} SCREW (2).....
164311	24864	GUIDE {SWING-OUT} WITH ARM AND HOLDER COMPLETE, Nos. 1423J, 1425J, 1550J, 42436, 164297, 164298, 164503, 164541 AND TWO 1443J.....
164492	24864	MACHINE FRAME OIL SPLASH GUARD (TOP).
164471	24864	PRESSER FOOT BODY.....
164146	24864	PRESSER FOOT CHAINING-OFF FINGER....
164147	24864	PRESSER FOOT CLAMPING PLATE.....
50225J	24864	PRESSER FOOT CLAMPING PLATE SCREW....
164303	24864	PRESSER FOOT GUIDE.....
218D	24864	PRESSER FOOT GUIDE SCREW.....
164475	24864	PRESSER FOOT COMPLETE, Nos. 218D, 50225J, 164146, 164147, 164303 AND 164471.....
164476	24864	PRESSER FOOT THREAD CHAIN GUARD.....
140180J	24864	PRESSER FOOT THREAD CHAIN GUARD SCREW
164440	24864	THROAT PLATE.....
164542	24864	SET OF FITTINGS COMPLETE, Nos. 140180J, 164311, 164440, 164469, 164475, 164476, 164492 AND TWO 50267R.....
NOTE: WHEN USING SET OF FITTINGS COMPLETE No. 164542, THE FOLLOWING PARTS WHICH ARE NOT INCLUDED IN THIS SET OF FIT- TINGS, ARE NECESSARY, IF MACHINE HAS PREVIOUSLY BEEN FITTED OTHER THAN REGULAR (SEE SET OF FITTINGS No. 164391)		
164375	24864	LOOPER (RIGHT HAND).....
164556	24864	KNIFE (MOVABLE).....
164350	24864	PRESSER BAR (SWING-OUT).....
164091	24864	THREAD (LOOPER, RIGHT HAND) STRIPPER AND TAKE-UP.....
164175	24864	THREAD {LOOPER} TAKE-UP.....
164151	24864	THREAD {NEEDLE} CONTROLLER.....
164591	24864	THROAT PLATE GUIDE WITH 853AL.....

ACCESSORIES

No.	PLATE	NAME
164203	24865	FEED ECCENTRIC EXTRACTOR (NOT REGULARLY FURNISHED WITH MACHINE).....
164460	24865	GAUGE (NOT REGULARLY FURNISHED WITH MACHINE).....
160725	24865	OIL CONTAINER.....
160727	24865	OIL CONTAINER (FILLED, 5 OZ. MFG. OIL, LIGHT GRADE, NOT STAINLESS) Nos. 160725 AND 160726.....
160726	24865	OIL CONTAINER CAP.....
160728	24865	OIL CONTAINER SPOUT, FOR USE WHEN FILLING OIL RESERVOIR.....
164198	24865	PRESSER BAR LIFTING CHAIN SPRING (UNDER TABLE).....
26026	24865	SCREW DRIVER.....
164196	24865	THREADER (6).....
164204	24865	TWEEZERS.....
164197	24865	WRENCH (SOCKET).....
10875	24865	WRENCH {FLAT} FOR 1701 AND 51649.....
164831	24865	WRENCH {FLAT} FOR 1700.....

BELT GUARD (Adjustable)

No.	PLATE	NAME
164183	24866	BELT GUARD.....
164199	24866	BELT GUARD BRACKET {BACK}.....
164200	24866	BELT GUARD BRACKET {FRONT}.....
51326J	24866	BELT GUARD SCREW (2).....
164201	24866	BELT GUARD (ADJUSTABLE) COMPLETE, Nos. 164183, 164199, 164200 AND TWO EACH 51326J AND WOOD SCREWS 3/4 IN. No. 7 F.H.....

CHIP CHUTE

No.	PLATE	NAME
168198	24866	CHIP CHUTE WITH FOUR WOOD SCREWS 3/8 IN. No. 6 R.H. BLACKED.....

FOOT LIFTER PARTS

No.	PLATE	NAME
6439	24866	CHAIN, 36 IN. TO 45 IN. WITH 56864 AND 56865.....
NOTE: WHEN ORDERING NO. 6439, GIVE LENGTH REQUIRED.		
4879	24866	CHAIN CONNECTING LINK.....
56864	24866	CHAIN HOOK {LARGE}.....
56865	24866	CHAIN HOOK {SMALL}.....
4881	24866	TREADLE.....
4882	24866	TREADLE SHAFT.....

FOOT LIFTER PARTS (Continued)

No.	PLATE	NAME
4883	-----	TREADLE SPRING.....
4884	24866	TREADLE STAND.....
4885	24866	TREADLE COMPLETE, Nos. 4879, 4881, 4882, 4883, 4884 AND TWO WOOD SCREWS 1 IN. No. 16 F.H.....

MACHINE BASE

No.	PLATE	NAME
164184	24866	MACHINE BASE WITH TWO EACH WOOD SCREWS 3/4 IN. No. 8 R.H. AND 1-1/4 IN. No. 6 F.H.....
164188	24866	MACHINE CUSHION {LARGE} {2}.....
164189	24866	MACHINE CUSHION {SMALL} {2}.....
164190	24866	MACHINE PAD (FELT).....
140418E	24857	MACHINE SCREW STUD {BACK}.....
657E	24857	MACHINE SCREW STUD {FRONT}.....

THREAD UNWINDER No. 151031

FOR THREE SPOOLS

No.	PLATE	NAME
228692	-----	SPOOL PIN (3).....
201528X	-----	SPOOL PIN NUT (3).....
395243	-----	SPOOL PIN WASHER (3).....
151023	24764	SPOOL REST WITH 858AL AND THREE EACH 201528X, 228692 AND 395243.....
150203	24764	SPOOL REST CUSHION (FELT) (3).....
858AL	24764	SPOOL REST HUB SET SCREW.....
151024	24764	SPOOL REST ROD.....
1122C	24764	SPOOL REST ROD SET SCREW (2).....
151025	24764	SPOOL REST STAND WITH TWO 1122C AND THREE WOOD SCREWS 1 IN. No. 12 F.H.
151026	24764	THREAD GUIDE {LOWER}.....
50311C	24764	THREAD GUIDE {LOWER} HOLDER SET SCREW
151027	24764	THREAD GUIDE {LOWER} SUPPORT WITH 50311C.....
151028	24764	THREAD GUIDE {UPPER, HOLLOW} (2).....
151029	24764	THREAD GUIDE {UPPER} HOLDER WITH FOUR 453AL.....
453AL	24764	THREAD GUIDE SET SCREW (3).....
151030	24764	THREAD GUIDE ROD.....
453AL	24764	THREAD GUIDE ROD SET SCREW.....
151031	24764	THREAD UNWINDER COMPLETE, Nos. 151023, 151024, 151025, 151026, 151027, 151029, 151030, TWO 151028 AND THREE 150203.....

THREAD UNWINDER No. 151163 FOR FOUR SPOOLS

No.	PLATE	NAME
228692	24867	SPOOL PIN (3).....
228764	24867	SPOOL PIN.....
201528X	-----	SPOOL PIN NUT (3).....
395243	-----	SPOOL PIN WASHER (3).....
151023	24867	SPOOL REST WITH 858AL AND THREE EACH 201528X, 228692 AND 395243 (THREE SPOOLS).....
228765	24867	SPOOL REST WITH 201254C.....
150203	24867	SPOOL REST CUSHION (FELT) (4).....
858AL	24867	SPOOL REST HUB SET SCREW FOR 151023..
151024	24867	SPOOL REST ROD.....
1122C	24867	SPOOL REST ROD SET SCREW (2).....
201254C	24867	SPOOL REST SET SCREW.....
151025	24867	SPOOL REST STAND WITH TWO 1122C AND THREE WOOD SCREWS 1 IN. No. 12 F.H.
151026	24867	THREAD GUIDE {LOWER}.....
50311C	24867	THREAD GUIDE {LOWER} HOLDER SET SCREW
151027	24867	THREAD GUIDE {LOWER} SUPPORT WITH 50311C.....
151028	24867	THREAD GUIDE {UPPER, HOLLOW} (2).....
151162	24867	THREAD GUIDE {UPPER, SOLID}.....
151029	24867	THREAD GUIDE {UPPER} HOLDER WITH FOUR 453AL.....
453AL	24867	THREAD GUIDE SET SCREW (3).....
151030	24867	THREAD GUIDE ROD.....
453AL	24867	THREAD GUIDE ROD SET SCREW.....
151163	24867	THREAD UNWINDER COMPLETE, Nos. 151023, 151024, 151025, 151026, 151027, 151029, 151030, 151162, 228764, 228765, TWO 151028 AND FOUR 150203

**SINGER Needles should be used
in SINGER Machines
These Needles and their Containers
are marked with the
Company's Trademark "SIMANCO" 1**

**Needles in Containers marked
"FOR SINGER MACHINES"
are NOT SINGER made needles 2**

NUMERICAL LIST OF PARTS

No.	PLATE	NAME
145J	24860	OIL COOLER COVER SCREW.....
157C	24856	FEED ECCENTRIC COVER BRACKET SCREW...
157AL	24857	NEEDLE DRIVING SHAFT CRANK CONNECTION CAP (LOWER) SCREW FOR 164217.....
171AL	24857	LOOPER (LEFT HAND) DRIVING SHAFT CRANK CONNECTION CAP (LOWER) SCREW FOR 164052.....
171AL	24857	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK CONNECTION CAP (LOWER) SCREW FOR 164052.....
171AL	24857	NEEDLE DRIVING SHAFT CRANK CONNECTION CAP (UPPER) SCREW FOR 164217.....
187E	24860	MACHINE FRAME BRACKET KEY SCREW FOR 164528.....
187E	24859	THREAD (LOOPER, RIGHT HAND) STRIPPER AND TAKE-UP SCREW.....
190E	24858	KNIFE (STATIONARY) HOLDER ADJUSTING STUD CAP SCREW.....
190E	24859	THREAD (LOOPER) TAKE-UP SCREW (LOWER)
197J	24863	GUIDE (SWING-OUT) EXTENSION SCREW FOR 164503.....
197J	24858	KNIFE (MOVABLE) LEVER GUIDE SCREW FOR 164210.....
198J	24858	KNIFE (MOVABLE) HOLDER SCREW.....
206J	24860	MACHINE FRAME OIL SCREEN SCREW.....
218D	24863	PRESSER FOOT GUIDE SCREW FOR 164475 AND 164583.....
227J	24856	FEED ECCENTRIC COVER LATCH SPRING SCREW FOR 164521.....
330J	24772	MACHINE FRAME TOP COVER OIL LEAD SCREW FOR 164214.....
332J	24761	THREAD (LOOPER) PLATE COVER SPRING SCREW FOR 164174.....
447AL	24858	KNIFE (MOVABLE) LEVER BEARING SET SCREW (LONG).....
447AL	24858	KNIFE (MOVABLE) LEVER GUIDE HOLDER THREAD TUBE SET SCREW (FRAME END).
447AL	24858	KNIFE (MOVABLE) LEVER HINGE STUD SET SCREW (BACK).....
447AL	24860	MACHINE FRAME OIL TUBE SET SCREW.....
448AL	24857	MACHINE PULLEY SET SCREW FOR 164231..
452AL	24829	NEEDLE DRIVING SHAFT BUSHING OIL LEAD HOLE PLUG SCREW.....
453AL	24764	THREAD UNWINDER THREAD GUIDE SET SCREW FOR 151029.....
453AL	24764	THREAD UNWINDER THREAD GUIDE ROD SET SCREW FOR 151029.....
460AL	24859	LOOPER (LEFT HAND) CARRIER SCREW SET SCREW FOR 164046.....
462AL	24859	LOOPER (RIGHT HAND) CARRIER CONNECTION GUIDE BAR SET SCREW FOR 164597....
462AL	24829	PRESSER BAR LIFTING BRACKET SET SCREW (SHORT) FOR 164137.....
620AL	24858	KNIFE (MOVABLE) LEVER HINGE PIN SET SCREW FOR 164714.....
624AL	24855	CLOTH PLATE PLUNGER SET SCREW.....
624AL	24855	CLOTH PLATE POSITION COLLAR SET SCREW FOR 164106.....
624AL	24858	KNIFE (MOVABLE) LEVER BEARING SET SCREW (SHORT).....

No.	PLATE	NAME
624AL	24829	PRESSER BAR LIFTING BRACKET SET SCREW (LONG) FOR 164137.....
624AL	24761	THREAD (LOOPER, RIGHT HAND) TUBE SET SCREW FOR 164167.....
629K	24856	FEED ECCENTRIC COVER HINGE SCREW FOR 164521.....
657E	24857	MACHINE SCREW STUD (FRONT).....
735AL	24858	LINT STRIPPER SET SCREW FOR 164462...
742F	24858	KNIFE (STATIONARY) HOLDER SCREW FOR 164747.....
853AL	24861	LOOPER (LEFT HAND) THREAD TUBE SET SCREW FOR 164591.....
858AL	24764	THREAD UNWINDER SPOOL REST HUB SET SCREW FOR 151023.....
896AL	24761	THREAD (LOOPER) PLATE COVER SPRING THREAD BUSHING SCREW.....
904AL	24859	LOOPER (RIGHT HAND) POSITION COLLAR SET SCREW FOR 164219.....
914C	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION GUIDE BAR BRACKET SCREW (LEFT)
914C	24813	MACHINE FRAME BOTTOM COVER SCREW.....
914J	24813	MACHINE FRAME COVER (BACK) SCREW (SHORT).....
1019AL	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION HINGE STUD ADJUSTING PIN SET SCREW FOR 164061.....
1036AL	24857	MACHINE FRAME ROTARY SHAFT BUSHING (FRONT) SET SCREW.....
1036AL	24857	MACHINE FRAME ROTARY SHAFT COUNTER- BALANCE SET SCREW FOR 164096.....
1057AL	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION GUIDE BAR BRACKET SCREW (RIGHT).....
1083C	24859	LOOPER (LEFT HAND) CARRIER HOLDER CLAMPING SCREW FOR 164660.....
1083C	24859	LOOPER (LEFT HAND) DRIVING SHAFT CRANK CLAMPING SCREW FOR 164051...
1083C	24859	LOOPER (RIGHT HAND) DRIVING LEVER CLAMPING SCREW FOR 164062.....
1083C	24859	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK CLAMPING SCREW FOR 164066...
1083C	24829	NEEDLE DRIVING SHAFT CRANK CLAMPING SCREW FOR 164114.....
1094F	24861	THROAT PLATE SCREW.....
1100AL	24861	FEED (BACK) DOG SECTION (RIGHT) SCREW FOR 164369.....
1122C	24764	THREAD UNWINDER SPOOL REST ROD SET SCREW FOR 151025.....
1143AL	24858	KNIFE (MOVABLE) LEVER HINGE STUD SET SCREW (TOP).....
1209J	24855	CHIP GUARD SCREW (LOWER).....
1250AL	24855	CLOTH PLATE LOCK SPRING SCREW STUD...
1259AL	24829	FINGER GUARD ADAPTOR SCREW FOR 164373
1324C	24859	LOOPER (LEFT HAND) CARRIER SCREW FOR 164661.....
1324C	24859	LOOPER (LEFT HAND) DRIVING SHAFT CRANK KEY SCREW.....
1324C	24859	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK KEY SCREW.....
1324J	24860	OIL COOLER SCREW (SHORT).....
1389C	24856	FEED BAR HINGE PIN SET SCREW.....
1423J	24858	FINGER GUARD SCREW.....

NUMERICAL LIST OF PARTS

27

No.	PLATE	NAME
1423J	24863	GUIDE (SWING-OUT) ARM LOCK SPRING SCREW FOR 164311.....
1423J	24761	THREAD (LOOPER, RIGHT HAND) THREAD EYELET SCREW FOR 164174.....
1425J	24863	GUIDE (SWING-OUT) HINGE SCREW FOR 164311.....
1443J	24863	GUIDE (SWING-OUT) SCREW FOR 164311...
1443J	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION HINGE STUD CAP SCREW FOR 164830.....
1443J	24761	THREAD (LOOPER, RIGHT HAND) STRIPPER AND TAKE-UP EYELET (ADJUSTABLE) SCREW FOR 164174.....
1443J	24859	THREAD (LOOPER) TAKE-UP SCREW (UPPER)
1443J	24858	THREAD (NEEDLE) CONTROLLER SCREW....
1454F	24861	FEED (BACK) DOG SCREW.....
1454F	24861	FEED (FRONT) DOG SCREW.....
1454E	24861	THROAT PLATE GUIDE SCREW.....
1485J	24860	OIL SIGHT GAUGE WINDOW RETAINER SCREW
1550J	24863	GUIDE (SWING-OUT) ARM LOCK SPRING SCREW NUT FOR 164311.....
1607J	24761	THREAD (LOOPER, RIGHT HAND) THREAD EYELET (STATIONARY) NUT FOR 164174
1628C	24856	FEED BAR SLIDE BLOCK (BACK) NUT.....
1637K	24813	PRESSER BAR LIFTING LEVER STOP SCREW NUT FOR 164516.....
1671C	24856	FEED (BACK) BAR CONNECTION HINGE SCREW STUD NUT FOR 164370.....
1671C	24856	FEED (FRONT) BAR CONNECTION HINGE SCREW STUD NUT FOR 164370.....
1698J	24860	MACHINE FRAME OIL LEAD SCREW NUT.....
1700J	24855	CLOTH PLATE EXTENSION SCREW NUT FOR 164594.....
1700J	24855	CLOTH PLATE LOCK SPRING NUT FOR 164594.....
1700J	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION GUIDE BAR OIL PLUG SCREW NUT FOR 164829.....
1700J	24859	LOOPER (RIGHT HAND) LOCKING SCREW STUD NUT FOR 164830.....
1700J	24858	PRESSER BAR (SWING-OUT) LIFTING SCREW STUD NUT.....
2102	24772	TENSION (HEAVY) DISC FOR 164162.....
2102	24772	TENSION (LIGHT) DISC FOR 164160.....
3146	24858	KNIFE (STATIONARY) CLAMPING GIB SCREW WASHER FOR 164748.....
4879	24866	FOOT LIFTER CHAIN CONNECTING LINK FOR 4885.....
4881	24866	FOOT LIFTER TREADLE FOR 4885.....
4882	24866	FOOT LIFTER TREADLE SHAFT FOR 4885...
4883	-----	FOOT LIFTER TREADLE SPRING FOR 4885..
4884	24866	FOOT LIFTER TREADLE STAND FOR 4885...
4885	24866	FOOT LIFTER TREADLE COMPLETE, Nos. 4879, 4881, 4882, 4883, 4884 AND TWO WOOD SCREWS 1 IN. No. 16 F.H..
6439	24866	FOOT LIFTER CHAIN, 36 IN. TO 45 IN., WITH 56864 AND 56865.....
NOTE: WHEN ORDERING No. 6439, GIVE LENGTH REQUIRED.		
10875	24865	WRENCH (FLAT) FOR 51649 (ACCESSORIES)
17022	24856	FEED BAR SLIDE BLOCK (BACK) NUT WASHER.....

No.	PLATE	NAME
17022	24859	THREAD (LOOPER, RIGHT HAND) STRIPPER AND TAKE-UP SCREW WASHER.....
26026	24865	SCREW DRIVER (ACCESSORIES).....
39541	24858	KNIFE (STATIONARY) HOLDER ADJUSTING STUD CAP SCREW WASHER.....
42436	24863	GUIDE (SWING-OUT) HINGE SCREW WASHER FOR 164311.....
45057	24859	LOOPER (LEFT HAND) DRIVING SHAFT CRANK KEY SCREW WASHER.....
45057	24859	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK KEY SCREW WASHER.....
50060K	24829	PRESSER BAR (SWING-OUT) OPENING LEVER HINGE SCREW FOR 164374.....
50073J	24829	KNIFE (MOVABLE) LEVER COVER AND PRESSER BAR (UPRIGHT) HOUSING SCREW.....
50133C	24772	TENSION (HEAVY) SCREW STUD FOR 164156
50133C	24772	TENSION (LIGHT) SCREW STUD FOR 164156
50169J	24861	PRESSER FOOT GUIDE SCREW FOR 164380..
50225J	24861	PRESSER FOOT CLAMPING PLATE SCREW FOR 164380, 164475 AND 164583.....
50267R	24863	GUIDE (SWING-OUT) ARM HOLDER SCREW FOR 164445 AND 164542.....
50311C	24764	THREAD UNWINDER THREAD GUIDE (LOWER) HOLDER SET SCREW FOR 151027.....
50318W	24761	THREAD (LOOPER) PLATE THREAD BUSHING SCREW FOR 164174.....
50370AL	24859	LOOPER (RIGHT HAND) CARRIER HINGE PIN SET SCREW FOR 164056.....
50379F	24859	LOOPER (LEFT HAND) SET SCREW FOR 164046.....
50420AL	24859	LOOPER (RIGHT HAND) CARRIER CONNec- TION GUIDE BAR OIL PLUG SCREW FOR 164829.....
50571J	24813	MACHINE FRAME COVER (BACK) SCREW (LONG).....
50611C	24858	KNIFE (STATIONARY) HOLDER POSITION SCREW FOR 164745.....
51023W	24829	MACHINE FRAME OIL SPLASH GUARD (TOP) SCREW.....
51139J	24860	OIL COOLER SCREW (LONG).....
51326J	24866	BELT GUARD SCREW FOR 164201.....
51332C	24857	MACHINE FRAME ROTARY SHAFT BUSHING (INTERMEDIATE) SET SCREW.....
51362AL	24858	PRESSER BAR (SWING-OUT) PIVOT SCREW LOCKING PLATE SCREW.....
51369C	24857	MACHINE FRAME ROTARY SHAFT BALL BEARING HOUSING SCREW.....
51369J	24772	MACHINE FRAME TOP COVER SCREW.....
51408J	24855	CLOTH PLATE EXTENSION SCREW FOR 164594.....
51630	24860	OIL COOLER OIL TUBE LOCK NUT FOR 164736.....
51649C	24857	MACHINE FRAME ROTARY SHAFT NUT.....
51720C	24829	NEEDLE CLAMPING NUT FOR 164275.....
51846	24829	PRESSER BAR LIFTING BRACKET ROLLER AND STUD FOR 164137.....
56864	24866	FOOT LIFTER CHAIN HOOK (LARGE) FOR 6439.....
56865	24866	FOOT LIFTER CHAIN HOOK (SMALL) FOR 6439.....
59456	24858	KNIFE (STATIONARY) HOLDER SLEEVE SCREW WASHER.....

No.	PLATE	NAME
59456	24859	LOOPER (LEFT HAND) CARRIER SCREW WASHER FOR 164661.....
59537	24772	TENSION (HEAVY) SPRING BUSHING FOR 164162.....
59537	24772	TENSION (LIGHT) SPRING BUSHING FOR 164160.....
131056	24857	MACHINE FRAME ROTARY SHAFT NUT WASHER
132565	24859	LOOPER (RIGHT HAND) CARRIER HINGE PIN FOR 164830.....
132583	24858	KNIFE (MOVABLE) LEVER HINGE PIN WITH 132584, FOR 164715.....
132584	24858	KNIFE (MOVABLE) LEVER HINGE PIN OIL WICK FOR 132583.....
138269	24860	OIL COOLER OIL TUBE SLEEVE FOR 164126
139026	24857	MACHINE FRAME ROTARY SHAFT BALL BEARING.....
140050C	24858	KNIFE (MOVABLE) CLAMP SCREW.....
140088R	24858	KNIFE (STATIONARY) HOLDER SLEEVE SCREW.....
140088E	24860	MACHINE FRAME OIL LEAD SCREW.....
140159AL	24857	LOOPER (LEFT HAND) DRIVING SHAFT CRANK CONNECTION CAP (UPPER) SCREW FOR 164052.....
140159AL	24857	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK CONNECTION CAP (UPPER) SCREW FOR 164052.....
140180J	24863	PRESSER FOOT THREAD CHAIN GUARD SCREW FOR 164445 AND 164542.....
140228C	24813	PRESSER BAR LIFTING LEVER STOP SCREW FOR 164516.....
140239AL	24858	KNIFE (MOVABLE) LEVER GUIDE HOLDER THREAD TUBE SET SCREW (HOLDER END) FOR 164181.....
140239AL	24858	THREAD EYELET (NEEDLE THREAD) SET SCREW FOR 164181.....
140346AL	24860	MACHINE FRAME OIL PLUG BRACKET SET SCREW.....
140393AL	24859	LOOPER (LEFT HAND) CARRIER HOLDER SET SCREW (RIGHT) FOR 164660.....
140394E	24859	LOOPER (LEFT HAND) DRIVING SHAFT BUSHING (BACK) CAP SCREW.....
140394E	24859	LOOPER (RIGHT HAND) DRIVING SHAFT BUSHING (BACK) CAP SCREW.....
140395E	24860	MACHINE FRAME BRACKET SCREW (SMALL) FOR 164526.....
140396E	24860	MACHINE FRAME BRACKET SCREW (LARGE) FOR 164526.....
140416X	24857	MACHINE PULLEY CAP SCREW.....
140418E	24857	MACHINE SCREW STUD (BACK).....
140509J	24855	CHIP GUARD SCREW (UPPER).....
140510C	24858	PRESSER BAR (SWING-OUT) PIVOT SCREW..
140596AL	-----	LOOPER (LEFT HAND) CARRIER HOLDER SET SCREW (LEFT) FOR 164660.....
140596AL	24859	LOOPER (RIGHT HAND) DRIVING LEVER SET SCREW FOR 164062.....
140596AL	24829	NEEDLE DRIVING SHAFT CRANK SET SCREW FOR 164114.....
140788C	24858	KNIFE (STATIONARY) CLAMPING GIB SCREW
150203	24764	THREAD UNWINDER SPOOL REST CUSHION (FELT) FOR 151031 AND 151163.....
151023	24764	THREAD UNWINDER SPOOL REST WITH 858AL AND THREE EACH 201528X, 228692 AND 395243, FOR 151031 AND 151163.....

No.	PLATE	NAME
151024	24764	THREAD UNWINDER SPOOL REST ROD FOR 151031 AND 151163.....
151025	24764	THREAD UNWINDER SPOOL REST STAND WITH TWO 1122C AND THREE WOOD SCREWS 1 IN. No. 12 F.H., FOR 151031 AND 151163.....
151026	24764	THREAD UNWINDER THREAD GUIDE (LOWER) FOR 151031 AND 151163.....
151027	24764	THREAD UNWINDER THREAD GUIDE (LOWER) SUPPORT WITH 50311C, FOR 151031 AND 151163.....
151028	24764	THREAD UNWINDER THREAD GUIDE (UPPER, HOLLOW) FOR 151031 AND 151163.....
151029	24764	THREAD UNWINDER THREAD GUIDE (UPPER) HOLDER WITH FOUR 453AL, FOR 151031 AND 151163.....
151030	24764	THREAD UNWINDER THREAD GUIDE ROD FOR 151031 AND 151163.....
151031	24764	THREAD UNWINDER COMPLETE, Nos. 151023, 151024, 151025, 151026, 151027, 151029, 151030, two 151028 AND THREE 150203.....
151162	24867	THREAD UNWINDER THREAD GUIDE (UPPER, SOLID) FOR 151163.....
151163	24867	THREAD UNWINDER COMPLETE, Nos. 151023, 151024, 151025, 151026, 151027, 151029, 151030, 151162, 225259, TWO 151028 AND FOUR 150203.....
160725	24865	OIL CONTAINER FOR 160727.....
160726	24865	OIL CONTAINER CAP FOR 160727.....
160727	24865	OIL CONTAINER (FILLED, 5 OZ. MFG. OIL, LIGHT GRADE, NOT STAINLESS), Nos. 160725 AND 160726 (ACCESSORIES)...
160728	24865	OIL CONTAINER SPOUT, FOR USE WHEN FILLING OIL RESERVOIR (ACCESSORIES)
164001	24855	CHIP GUARD.....
164002	24855	CLOTH PLATE EXTENSION FOR 164594.....
164003	24856	FEED BAR HINGE PIN (ECCENTRIC).....
164004	24856	FEED BAR SLIDE BLOCK (BACK) FOR 164370
164006	24856	FEED (FRONT) BAR WITH 164010, FOR 164370.....
164007	24856	FEED (FRONT) BAR CONNECTION FOR 164370
164008	24856	FEED (BACK) BAR CONNECTION BEARING FOR 164370.....
164009	24856	FEED (BACK) BAR CONNECTION HINGE SCREW STUD FOR 164370.....
164009	24856	FEED (FRONT) BAR CONNECTION HINGE SCREW STUD FOR 164370.....
164010	24856	FEED (BACK) BAR CONNECTION HINGE SCREW STUD POSITION PIN FOR 164687
164010	24856	FEED (FRONT) BAR CONNECTION HINGE SCREW STUD POSITION PIN FOR 164006
164017	24856	FEED (BACK) BAR CONNECTION FOR 164370
164018	24856	FEED (FRONT) BAR CONNECTION BEARING FOR 164370.....
164020	24856	FEED (BACK) ECCENTRIC.....
NOTE:		FEED (BACK) ECCENTRIC No. 164020 IS FURNISHED IN 6 TO 16, 18, 20, 22, 24, 28, 32 AND 36 STITCHES TO THE INCH UNLESS OTHERWISE STATED. No. 164020 (14 STITCHES TO THE INCH) IS SUPPLIED REGULARLY.

No.	PLATE	NAME
164020	24856	FEED (FRONT) ECCENTRIC.....
		NOTE: FEED (FRONT) ECCENTRIC No. 164020 IS FURNISHED IN 6 TO 16, 18, 20, 22, 24, 28, 32 AND 36 STITCHES TO THE INCH UNLESS OTHERWISE STATED. No. 164020 (14 STITCHES TO THE INCH) IS SUPPLIED REGULARLY.
164023	24856	FEED ECCENTRIC OIL WICK FOR 164399 ..
164027	24858	KNIFE (MOVABLE) CLAMP.....
164028	24858	KNIFE (MOVABLE) GUARD (LOWER).....
164029	24858	KNIFE (MOVABLE) HOLDER.....
164030	24858	KNIFE (MOVABLE) HOLDER SCREW BEARING.
164032	24858	KNIFE (MOVABLE) LEVER BEARING.....
164034	24858	KNIFE (MOVABLE) LEVER HINGE STUD FOR 164035.....
164035	-----	KNIFE (MOVABLE) LEVER HINGE STUD 164034 WITH 164036 AND 164269, FOR 164715.....
164036	24858	KNIFE (MOVABLE) LEVER HINGE STUD OIL WICK (LONG) FOR 164035.....
164042	24858	KNIFE (STATIONARY) HOLDER SLEEVE.....
164043	24858	KNIFE (STATIONARY) HOLDER SPRING.....
164045	24859	LOOPER (LEFT HAND).....
164046	24859	LOOPER (LEFT HAND) CARRIER WITH 460AL, 50379F AND 164202, FOR 164661.....
164048	24859	LOOPER (LEFT HAND) DRIVING SHAFT.....
164049	24859	LOOPER (LEFT HAND) DRIVING SHAFT BUSHING (BACK).....
164049	24859	LOOPER (RIGHT HAND) DRIVING SHAFT BUSHING (BACK).....
164051	24859	LOOPER (LEFT HAND) DRIVING SHAFT CRANK WITH 1083C, FOR 164215.....
164052	24857	LOOPER (LEFT HAND) DRIVING SHAFT CRANK CONNECTION WITH TWO EACH 171AL AND 140159AL, FOR 164215....
164052	24857	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK CONNECTION WITH TWO EACH 171AL AND 140159AL, FOR 164216....
164053	24859	LOOPER (LEFT HAND) DRIVING SHAFT CRANK THRUST BEARING.....
164053	24859	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK THRUST BEARING.....
164054	-----	LOOPER (LEFT HAND) THREAD TUBE.....
164056	24859	LOOPER (RIGHT HAND) CARRIER WITH 50370AL, FOR 164830.....
164061	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION HINGE STUD WITH 1019AL, FOR 164830.....
164062	24859	LOOPER (RIGHT HAND) DRIVING LEVER WITH 1083C AND TWO 140596AL, FOR 164830.....
164063	24859	LOOPER (RIGHT HAND) DRIVING SHAFT....
164066	24859	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK WITH 1083C, FOR 164216.....
164067	24859	LOOPER (LEFT HAND) DRIVING SHAFT CRANK KEY.....
164067	24859	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK KEY.....
164068	24859	LOOPER (RIGHT HAND) LOCKING SCREW STUD FOR 164830.....
164071	24857	MACHINE PULLEY CAP.....
*164072	-----	MACHINE FRAME FOR 164526.....
164074	24813	MACHINE FRAME BOTTOM COVER.....

NO.	PLATE	NAME
164075	24813	MACHINE FRAME BOTTOM COVER GASKET....
164077	24860	MACHINE FRAME BRACKET SCREW (LARGE) WASHER (FIBER) FOR 164526.....
164081	24860	MACHINE FRAME OIL LEAD
164082	24860	MACHINE FRAME OIL PLUG BRACKET.....
164083	24860	MACHINE FRAME OIL SCREEN.....
164085	24829	MACHINE FRAME OIL SPLASH GUARD (TOP).
164091	24859	THREAD (LOOPER, RIGHT HAND) STRIPPER AND TAKE-UP WITH 164555, FOR 164391
164092	24857	MACHINE FRAME ROTARY SHAFT BALL BEARING HOUSING.....
164093	24857	MACHINE FRAME ROTARY SHAFT BALL SLEEVE (TWO PIECES) FOR 164377....
164095	24857	MACHINE FRAME ROTARY SHAFT BUSHING (INTERMEDIATE).....
164096	24857	MACHINE FRAME ROTARY SHAFT COUNTER- BALANCE WITH 1036AL.....
164097	24857	MACHINE FRAME ROTARY SHAFT KEY FOR 164377.....
164098	24857	MACHINE FRAME ROTARY SHAFT OIL AND BALL BEARING GREASE RETAINER.....
164099	24857	MACHINE FRAME ROTARY SHAFT SCREW STUD
164100	24857	MACHINE FRAME ROTARY SHAFT THRUST BEARING.....
164101	24772	MACHINE FRAME TOP COVER FOR 164214...
164102	24772	MACHINE FRAME TOP COVER GASKET.....
164103	24772	MACHINE FRAME TOP COVER OIL LEAD FOR 164214.....
164104	24855	CLOTH PLATE PLUNGER.....
164105	24855	CLOTH PLATE PLUNGER SPRING.....
164106	24855	CLOTH PLATE POSITION COLLAR WITH TWO 624AL.....
164109	24829	NEEDLE CLAMP FOR 164275.....
164110	24829	NEEDLE DRIVING SHAFT WITH 164118, FOR 164275.....
164111	24829	NEEDLE DRIVING SHAFT BUSHING.....
164112	24829	NEEDLE DRIVING SHAFT BUSHING CAP.....
164113	24829	NEEDLE DRIVING SHAFT BUSHING OIL LEAD
164114	24829	NEEDLE DRIVING SHAFT CRANK WITH 1083C AND TWO 140596AL.....
164115	24829	NEEDLE DRIVING SHAFT CRANK BALL.....
164117	24829	NEEDLE HOLDER FOR 164275.....
164118	24829	NEEDLE STOP PIN FOR 164110.....
164119	24857	OIL AGITATOR.....
164120	24860	OIL COOLER, Nos. two 164125.....
164121	24860	OIL COOLER COVER FOR 164123.....
164122	24860	OIL COOLER COVER GASKET.....
164123	24860	OIL COOLER COVER 164121 WITH 164135..
164124	24860	OIL COOLER GASKET.....
164125	24860	OIL COOLER OIL PIPE FOR 164123.....
164126	24860	OIL COOLER OIL TUBE WITH 138269 AND 164128, FOR 164736.....
164127	24860	OIL COOLER OIL TUBE COUPLING FOR 164736.....
164128	24860	OIL COOLER OIL TUBE WICK FOR 164126..
164131	24860	OIL SIGHT GAUGE BACKGROUND DISC.....
164132	24860	OIL SIGHT GAUGE BACKGROUND DISC GASKET.....
164132	24860	OIL SIGHT GAUGE WINDOW GASKET.....
164132	24860	OIL SIGHT GAUGE WINDOW RETAINER GASKET.....
164133	24860	OIL SIGHT GAUGE WINDOW.....
164134	24860	OIL SIGHT GAUGE WINDOW RETAINER.....

No.	PLATE	NAME
164135	24860	OIL CUP FOR FILLING MACHINE.....
164136	24860	PRESSER BAR BRACKET FOR 164715.....
164137	24829	PRESSER BAR LIFTING BRACKET WITH 462AL, 624AL AND 51846, FOR 164374
164138	24829	PRESSER BAR LIFTING LEVER FOR 164374.
164139	24829	PRESSER BAR LIFTING LEVER SPRING FOR 164374.....
164141	24858	PRESSER BAR (SWING-OUT) LIFTING SCREW STUD.....
164142	24829	PRESSER BAR (SWING-OUT) OPENING LEVER FOR 164374.....
164143	24829	PRESSER BAR (UPRIGHT) FOR 164374.....
164144	24829	PRESSER BAR (UPRIGHT) SPRING FOR 164374.....
164146	24864	PRESSER FOOT CHAINING-OFF FINGER FOR 164475.....
164147	24861	PRESSER FOOT CLAMPING PLATE FOR 164380, 164475 AND 164583.....
164151	24858	THREAD (NEEDLE) CONTROLLER FOR 164391
164153	24858	THREAD (NEEDLE) CONTROLLER LEVER FOR 164715.....
164155	24772	TENSION (HEAVY) REGULATING THUMB NUT FOR 164156.....
164155	24772	TENSION (LIGHT) REGULATING THUMB NUT FOR 164156.....
164156	-----	TENSION (HEAVY) SCREW STUD 50133C, WITH 164155, FOR 164162.....
164156	-----	TENSION (LIGHT) SCREW STUD 50133C, WITH 164155, FOR 164160.....
164157	24772	TENSION (LIGHT) SPRING FOR 164160....
164158	24772	TENSION (HEAVY) SPRING COVER FOR 164162.....
164158	24772	TENSION (LIGHT) SPRING COVER FOR 164160.....
164159	24772	TENSION (NEEDLE THREAD) THREAD GUIDE.
164160	24772	TENSION (LIGHT) COMPLETE, NOS. 59537, 164156, 164157, 164158 AND TWO 2102.....
164161	24772	TENSION (HEAVY) SPRING FOR 164162....
164162	24772	TENSION (HEAVY) COMPLETE, NOS. 59537, 164156, 164158, 164161 AND TWO 2102.....
164163	24761	THREAD (LOOPER, RIGHT HAND) STRIPPER AND TAKE-UP EYELET (ADJUSTABLE) FOR 164174.....
164164	24761	THREAD (LOOPER, RIGHT HAND) THREAD EYELET (MOVABLE) FOR 164174.....
164165	24761	THREAD (LOOPER, RIGHT HAND) THREAD EYELET (STATIONARY) FOR 164174....
164166	24761	THREAD (LOOPER, RIGHT HAND) TUBE FOR 164174.....
164167	24761	THREAD (LOOPER) PLATE WITH 624AL, FOR 164174.....
164168	24761	THREAD (LOOPER) PLATE COVER FOR 164206.....
164169	24761	THREAD (LOOPER) PLATE COVER HINGE FOR 164206.....
164170	24761	THREAD (LOOPER) PLATE COVER HINGE PIN FOR 164206.....
164171	24761	THREAD (LOOPER) PLATE COVER SPRING FOR 164174.....
164173	24761	THREAD (LOOPER) PLATE THREAD BUSHING FOR 164174.....

No.	PLATE	NAME
164174	-----	THREAD (LOOPER) PLATE COMPLETE, Nos. 1423J, 1443J, 1607J, 50318W, 164163, 164164, 164165, 164166, 164167, 164173, 164206 AND TWO EACH 332J AND 164171.....
164175	24859	THREAD (LOOPER) TAKE-UP FOR 164391...
164176	24859	THREAD (LOOPER) TAKE-UP PLATE.....
164177	24858	THREAD EYELET (NEEDLE THREAD) FOR 164210.....
164180	24858	KNIFE (MOVABLE) LEVER GUIDE FOR 164210.....
164181	24858	KNIFE (MOVABLE) LEVER GUIDE HOLDER WITH TWO 140239AL, FOR 164210.....
164182	24858	KNIFE (MOVABLE) LEVER GUIDE HOLDER THREAD TUBE FOR 164210.....
164183	24866	BELT GUARD FOR 164201.....
164184	24866	MACHINE BASE WITH TWO EACH WOOD SCREWS 3/4 IN. No. 8 R.H. AND 1-1/4 IN. No. 6 F.H.....
164188	24866	MACHINE CUSHION (LARGE).....
164189	24866	MACHINE CUSHION (SMALL).....
164190	24866	MACHINE PAD (FELT).....
164194	24829	PRESSURE REGULATING THUMB SCREW FOR 164374.....
164196	24865	THREADER (ACCESSORIES).....
164197	24865	WRENCH (SOCKET) (ACCESSORIES).....
164198	24865	PRESSER BAR LIFTING CHAIN SPRING (UNDER TABLE) (ACCESSORIES).....
164199	24866	BELT GUARD BRACKET (BACK) FOR 164201.
164200	24866	BELT GUARD BRACKET (FRONT) FOR 164201
164201	24866	BELT GUARD (ADJUSTABLE) COMPLETE, Nos. 164183, 164199, 164200 AND TWO EACH 51326J AND WOOD SCREWS 3/4 IN. No. 7 F.H.....
164202	24859	LOOPER (LEFT HAND) STOP PIN FOR 164046.....
164203	24865	FEED ECCENTRIC EXTRACTOR (NOT REGU- LARLY FURNISHED WITH MACHINE) (ACCESSORIES).....
164204	24865	TWEEZERS (ACCESSORIES).....
164205	24855	CLOTH PLATE LOCK SPRING FOR 164594...
164206	-----	THREAD (LOOPER) PLATE COVER 164168 WITH 164169 AND 164170, FOR 164174
164207	24860	MACHINE FRAME BRACKET KEY FOR 164528.
164210	24858	KNIFE (MOVABLE) LEVER GUIDE HOLDER 164181 WITH 197J, 164177, 164180 AND 164182.....
164214	-----	MACHINE FRAME TOP COVER 164101 WITH 330J, 164103 AND TWO 164418.....
164215	-----	LOOPER (LEFT HAND) DRIVING SHAFT CRANK 164051 WITH 164052, FOR 164377.....
164216	-----	LOOPER (RIGHT HAND) DRIVING SHAFT CRANK 164066 WITH 164052, FOR 164377.....
164217	24857	NEEDLE DRIVING SHAFT CRANK CONNec- TION WITH 164115 AND TWO EACH 157AL AND 171AL, FOR 164377.....
164219	24859	LOOPER (RIGHT HAND) POSITION COLLAR WITH 904AL.....
164223	24861	FEED (BACK) DOG SECTION (RIGHT) FOR 164369.....
164227	24861	THROAT PLATE FOR 164391.....

No.	PLATE	NAME
164229	24860	MACHINE FRAME BRACKET SCREW (LARGE) WASHER (FELT).....
164231	24857	MACHINE PULLEY (ROUND AND "V" BELT) WITH TWO 448AL.....
164232	24857	MACHINE FRAME ROTARY SHAFT BALL SLEEVE GUIDE FOR 164377.....
164269	-----	KNIFE (MOVABLE) LEVER HINGE STUD OIL WICK (SHORT) FOR 164035.....
164275	-----	NEEDLE DRIVING SHAFT 164110 WITH 51720C, 164109 AND 164117.....
164285	24772	TENSION (LOOPER THREAD) THREAD GUIDE (LEFT).....
164286	24772	TENSION (LOOPER THREAD) THREAD GUIDE (RIGHT).....
164293	24859	LOOPER (LEFT HAND) DRIVING SHAFT BUSHING (BACK) CAP SCREW WASHER...
164293	24859	LOOPER (RIGHT HAND) DRIVING SHAFT BUSHING (BACK) CAP SCREW WASHER...
164295	24863	FEED DOG, 18 TEETH (12 TEETH TO THE INCH) FOR 164445.....
164297	24863	GUIDE (SWING-OUT) ARM FOR 164311.....
164298	24863	GUIDE (SWING-OUT) ARM HOLDER FOR 164311.....
164299	24863	GUIDE (SWING-OUT) EXTENSION (UPPER) FOR 164503.....
164303	24864	PRESSER FOOT GUIDE FOR 164475.....
164310	24863	PRESSER FOOT GUIDE FOR 164583.....
164311	24863	GUIDE (SWING-OUT) WITH ARM AND HOLDER COMPLETE, FOR 164445 AND 164542, Nos. 1423J, 1425J, 1550J, 42436, 164297, 164298, 164503, 164541 AND TWO 1443J.....
164350	24858	PRESSER BAR (SWING-OUT) FOR 164391...
164351	24858	PRESSER BAR (SWING-OUT) PIVOT SCREW LOCKING PLATE.....
164360	24861	PRESSER FOOT GUIDE FOR 164380.....
164366	24856	FEED BAR SLIDE BLOCK (FRONT) FOR 164370.....
164367	24861	FEED (BACK) DOG SECTION (LEFT) FOR 164369.....
164369	24861	FEED (BACK) DOG COMPLETE, FOR 164391, Nos. 1100AL, 164223 AND 164367....
164370	-----	FEED (BACK) AND (FRONT) BARS COMPLETE, Nos. 164006, 164007, 164008, 164017, 164018, 164366, 164687 AND TWO EACH 1671C, 164004 AND 164009.....
164371	24861	FEED (FRONT) DOG FOR 164391.....
164372	24857	FEED LIFTING AND KNIFE (MOVABLE) LEVER ECCENTRIC.....
164373	24829	KNIFE (MOVABLE) LEVER COVER AND PRESSER BAR (UPRIGHT) HOUSING WITH 1259AL, FOR 164374.....
164374	---,---	KNIFE (MOVABLE) LEVER COVER AND PRESSER BAR (UPRIGHT) HOUSING COMPLETE, Nos. 50060K, 164137, 164138, 164139, 164142, 164143, 164144, 164194 AND 164373.....
164375	24859	LOOPER (RIGHT HAND).....
164376	24857	MACHINE FRAME ROTARY SHAFT FOR 164377
164377	-----	MACHINE FRAME ROTARY SHAFT 164376 WITH 164097, 164215, 164216, 164217 AND TWO EACH 164093 AND 164232.....


No.	PLATE	NAME
164378	24861	PRESSER FOOT BODY FOR 164380.....
164379	24861	PRESSER FOOT CHAINING-OFF FINGER FOR 164380.....
164380	24861	PRESSER FOOT COMPLETE, FOR 164391, Nos. 50169J, 50225J, 164147, 164360, 164378 AND 164379.....
164381	24863	THREAD (NEEDLE) CONTROLLER FOR 164445
164391	24862	SET OF FITTINGS COMPLETE, FOR SWEATER MATERIAL, FOR THREE-THREAD STITCH, Nos. 164091, 164151, 164175, 164227, 164350, 164369, 164371, 164380, 164556 AND 164591.....
164397	24859	LOOPER (RIGHT HAND) CARRIER COMB- TION HINGE STUD ADJUSTING PIN FOR 164830.....
164399	24856	FEED ECCENTRIC COVER BRACKET WITH 164023, FOR 164521.....
164401	24856	FEED ECCENTRIC COVER LATCH SPRING FOR 164521.....
164416	-----	PRESSER BAR (UPRIGHT) SPRING (HEAVY).
164418	24772	TENSION THREAD EYELET FOR 164214.....
164440	24863	THROAT PLATE FOR 164445 AND 164542...
164442	24863	PRESSER FOOT CHAINING-OFF FINGER FOR 164583.....
164444	24863	SPREADER FOR 164445.....
164445	24863	SET OF FITTINGS COMPLETE, FOR JOINING THE ABUTTED EDGES OF PIECE GOODS, 1/8 IN. BIGHT, FOR TWO-THREAD STITCH, Nos. 140180J, 164295, 164311, 164381, 164440, 164444, 164476, 164492, 164583 AND TWO 50267R.....
164455	24858	FINGER GUARD.....
164456	24858	FINGER GUARD ADAPTOR.....
164458	24858	KNIFE (MOVABLE) GUARD (UPPER).....
164460	24865	GAUGE (NOT REGULARLY FURNISHED WITH MACHINE) (ACCESSORIES).....
164462	24858	LINT STRIPPER WITH 735AL.....
164469	24864	FEED DOG FOR 164542.....
164471	24863	PRESSER FOOT BODY FOR 164475 AND 164583.....
164475	24864	PRESSER FOOT COMPLETE, FOR 164542, Nos. 218D, 50225J, 164146, 164147, 164303 AND 164471.....
164476	24863	PRESSER FOOT THREAD CHAIN GUARD FOR 164445 AND 164542.....
164492	24863	MACHINE FRAME OIL SPLASH GUARD (TOP) FOR 164445 AND 164542.....
164502	24863	GUIDE (SWING-OUT) EXTENSION (LOWER) FOR 164503.....
164503	-----	GUIDE (SWING-OUT) WITH EXTENSION COMPLETE, FOR 164311, Nos. 197J, 164299, 164502 AND 164530.....
164515	24813	MACHINE FRAME COVER (BACK) FOR 164516
164516	24813	MACHINE FRAME COVER (BACK) 164515 WITH 1637K AND 140228C.....
164520	24856	FEED ECCENTRIC COVER FOR 164521.....
164521	24856	FEED ECCENTRIC COVER COMPLETE, FOR USE WITH ECCENTRICS OF 4 STITCHES AND ABOVE, Nos. 629K, 164399, 164401, 164520 AND TWO 227J.....
164525	24858	KNIFE (STATIONARY) HOLDER SPRING STUD

NUMERICAL LIST OF PARTS

37

No.	PLATE	NAME
*164526	-----	MACHINE FRAME COMPLETE, Nos. 140396E, 164072, 164077, 164528 AND THREE 140395E.....
*164527	-----	MACHINE FRAME BRACKET FOR 164528.....
*164528	-----	MACHINE FRAME BRACKET 164527 WITH 164207 AND TWO 187E, FOR 164526...
164530	24863	GUIDE (SWING-OUT) FOR 164503.....
164541	24863	GUIDE (SWING-OUT) ARM LOCK SPRING FOR 164311.....
164542	24864	SET OF FITTINGS COMPLETE, FOR SERGING, FOR THREE-THREAD TIGHT STITCH, FOR APPROXIMATELY 3/16 IN. BIGHT, Nos. 140180J, 164311, 164440, 164469, 164475, 164476, 164492 AND TWO 50267R.....
164555	-----	THREAD (LOOPER, RIGHT HAND) STRIPPER AND TAKE-UP WIRE FOR 164091.....
164556	24858	KNIFE (MOVABLE) FOR 164391.....
164583	24863	PRESSER FOOT COMPLETE, FOR 164445, Nos. 218D, 50225J, 164147, 164310, 164442 AND 164471.....
164590	24858	KNIFE (STATIONARY) HOLDER ADJUSTING STUD.....
164591	24861	THROAT PLATE GUIDE WITH 853AL, FOR 164391.....
164593	24855	CLOTH PLATE FOR 164593.....
164594	24855	CLOTH PLATE WITH EXTENSION COMPLETE, Nos. 164002, 164205, 164593 AND TWO EACH 1700J, 51408J AND 931084.
164597	24859	LOOPER (RIGHT HAND) CARRIER CONNECTION GUIDE BAR BRACKET WITH TWO 462AL, FOR 164830.....
164600	24857	MACHINE FRAME ROTARY SHAFT BUSHING (FRONT).....
164602	24860	MACHINE FRAME OIL TUBE WICK FOR 164722
164605	24860	MACHINE FRAME OIL SPLASH GUARD (INTERNAL) OIL PAD FOR 164609.....
164606	24860	MACHINE FRAME OIL SPLASH GUARD (INTERNAL) OIL PAD FASTENER FOR 164609.....
164607	24858	OIL DEFLECTOR.....
164608	24860	MACHINE FRAME OIL SPLASH GUARD (INTERNAL) FOR 164609.....
164609	24860	MACHINE FRAME OIL SPLASH GUARD (INTERNAL) COMPLETE, Nos. 164605, 164606 AND 164608.....
164660	24859	LOOPER (LEFT HAND) CARRIER HOLDER WITH 1083C, 140393AL AND 140596AL, FOR 164661.....
164661	-----	LOOPER (LEFT HAND) CARRIER HOLDER 164660 WITH 1324C, 59456 AND 164046.....
164687	24856	FEED (BACK) BAR WITH 164010, FOR 164370.....
164714	24858	KNIFE (MOVABLE) LEVER WITH 620AL, FOR 164715.....
164715	-----	KNIFE (MOVABLE) LEVER 164714 WITH 132583, 164035, 164136 AND 164153.
164722	24860	MACHINE FRAME OIL TUBE WITH 164602...
164728	24858	KNIFE (STATIONARY).....
164736	-----	OIL COOLER OIL TUBE 164126 WITH 51630 AND 164127.....


No.	PLATE	NAME
164737	24859	LOOPER (LEFT HAND) DRIVING SHAFT BUSHING (FRONT).....
164738	24859	LOOPER (RIGHT HAND) DRIVING SHAFT BUSHING (FRONT).....
164739	24859	LOOPER (LEFT HAND) DRIVING SHAFT OIL RING (RUBBER).....
164739	24859	LOOPER (RIGHT HAND) DRIVING SHAFT OIL RING (RUBBER).....
164740	24859	LOOPER (LEFT HAND) DRIVING SHAFT OIL RING SPACER.....
164740	24859	LOOPER (RIGHT HAND) DRIVING SHAFT OIL RING SPACER.....
164744	24858	KNIFE (STATIONARY) CLAMPING GIB FOR 164748.....
164745	24858	KNIFE (STATIONARY) HOLDER BODY WITH TWO 50611C, FOR 164747.....
164746	24858	KNIFE (STATIONARY) HOLDER FOR 164747.
164747	-----	KNIFE (STATIONARY) HOLDER (ADJUSTABLE) COMPLETE, FOR 164748, Nos. 742F, 164745 AND 164746.....
164748	24858	KNIFE (STATIONARY) HOLDER (ADJUSTABLE) WITH GIB COMPLETE, Nos. 3146, 140788C, 164744 AND 164747.....
164785	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION GUIDE BAR OIL CONTROLLING SCREW SEAT (BRASS) FOR 164829.....
164786	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION GUIDE BAR OIL WICK FOR 164829
164828	24859	LOOPER (RIGHT HAND) CARRIER CONNEC- TION FOR 164829.....
164829	-----	LOOPER (RIGHT HAND) CARRIER CONNEC- TION AND GUIDE BAR, FOR 164830, Nos. 1700J, 50420AL, 164785, 164786 AND 164828.....
164830	-----	LOOPER (RIGHT HAND) DRIVING LEVER 164062 WITH 1443J, 1700J, 132565, 164056, 164061, 164068, 164397, 164597 AND 164829.....
164831	24865	WRENCH (FLAT) FOR 1700 (ACCESSORIES).
168198	24866	CHIP CHUTE WITH FOUR WOOD SCREWS 3/8 IN. No. 6 R.H. BLACKED.....
201254C	24867	THREAD UNWINDER SPOOL REST SET SCREW FOR 228765.....
201528X	-----	THREAD UNWINDER SPOOL PIN NUT FOR 151023 AND 225259.....
228692	24867	THREAD UNWINDER SPOOL PIN FOR 151023 AND 225259.....
228764	24867	THREAD UNWINDER SPOOL PIN FOR 151163.
228765	24867	THREAD UNWINDER SPOOL REST WITH 201254C.....
395243	-----	THREAD UNWINDER SPOOL PIN WASHER FOR 151023.....
931084	24855	CLOTH PLATE EXTENSION SCREW NUT LOCK WASHER FOR 164594.....
931084	24855	CLOTH PLATE LOCK SPRING NUT LOCK WASHER FOR 164594.....


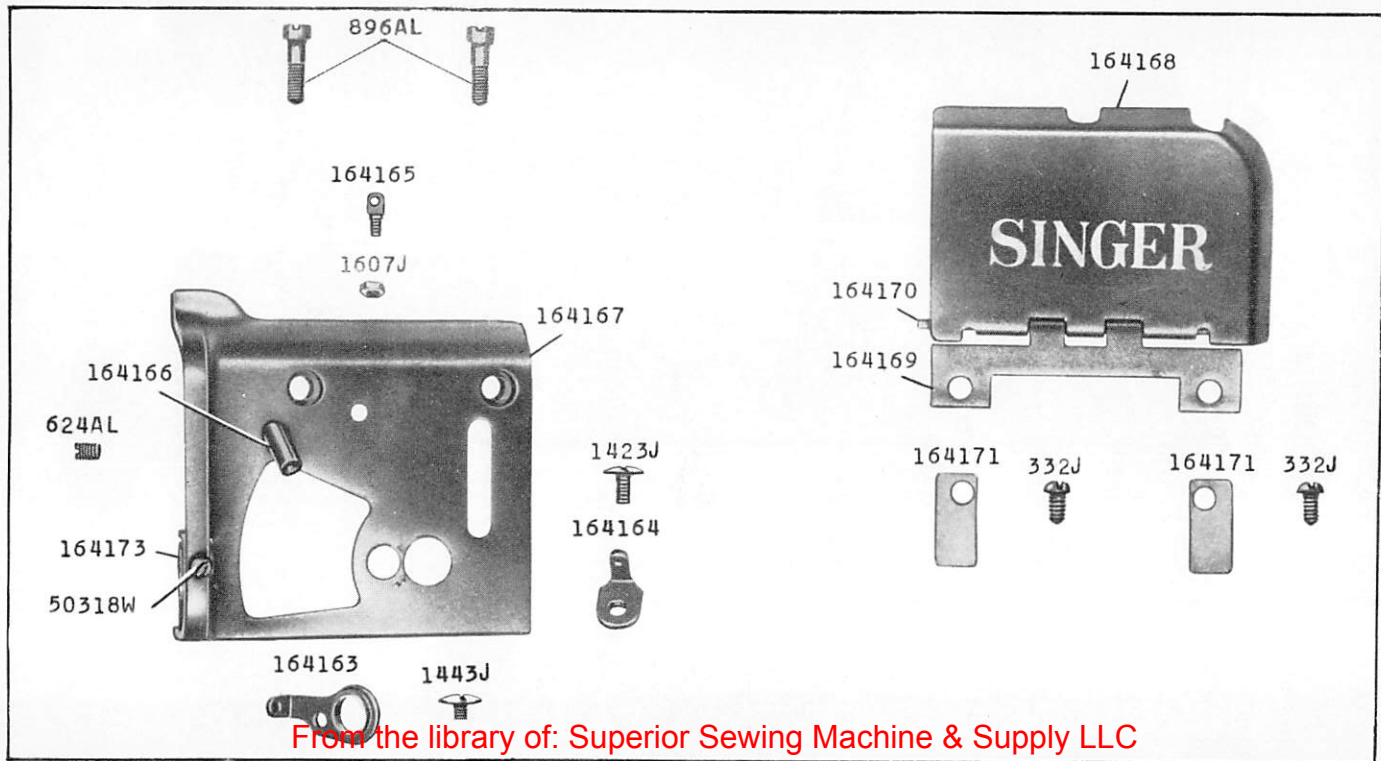


24761 - 2/3

From the library of: Superior Sewing Machine & Supply LLC

24764 - 1/6

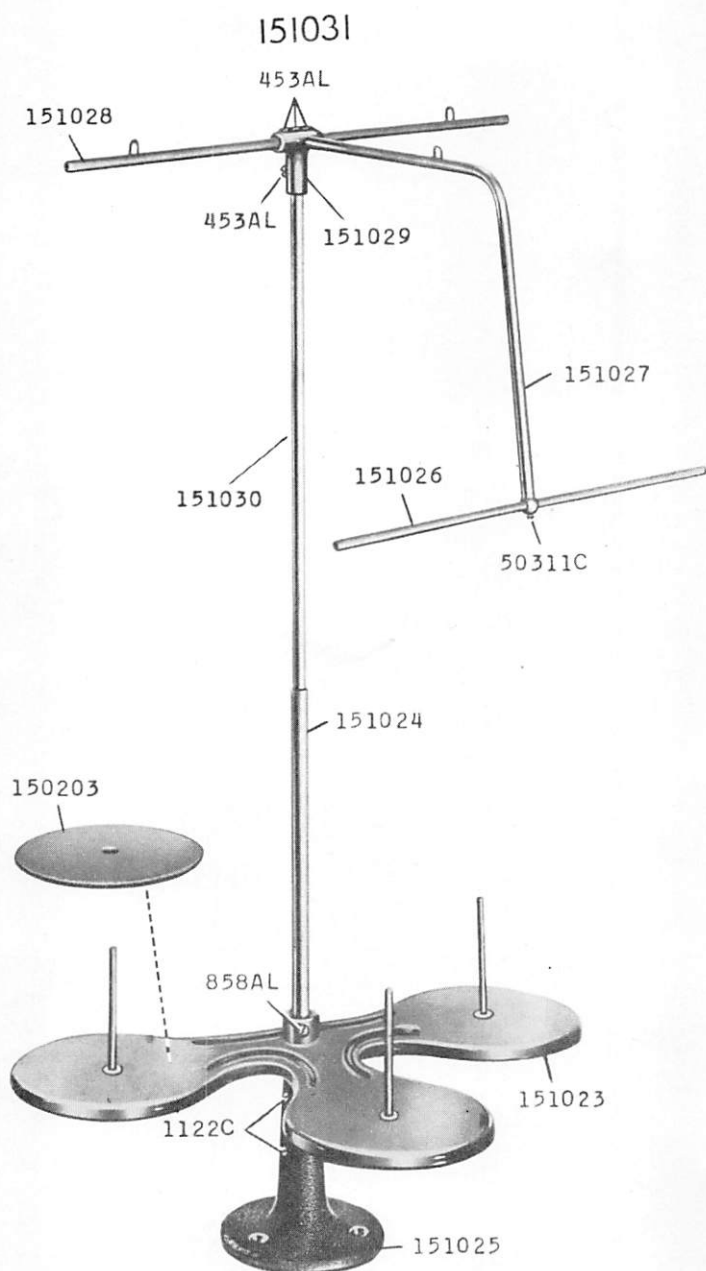

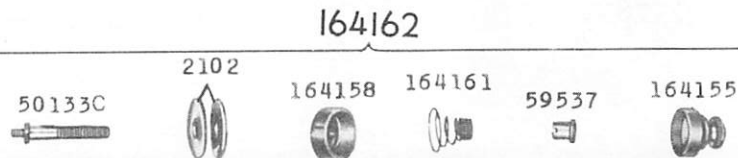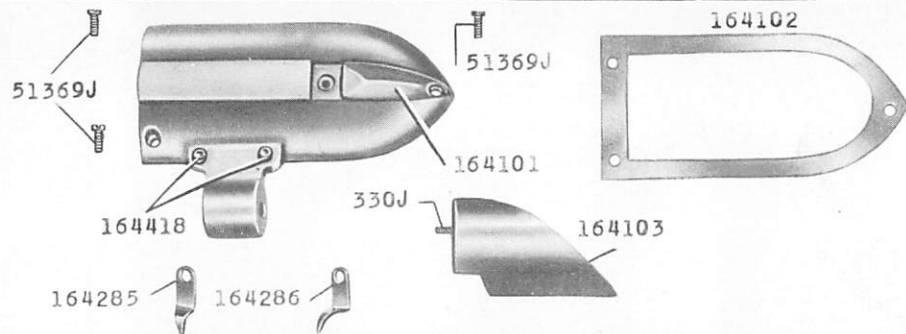

164155



59537



164161



164158



2102



50133C



164159






164162


24772 - 1/3

From the library of: Superior Sewing Machine & Supply LLC


24813-1/3

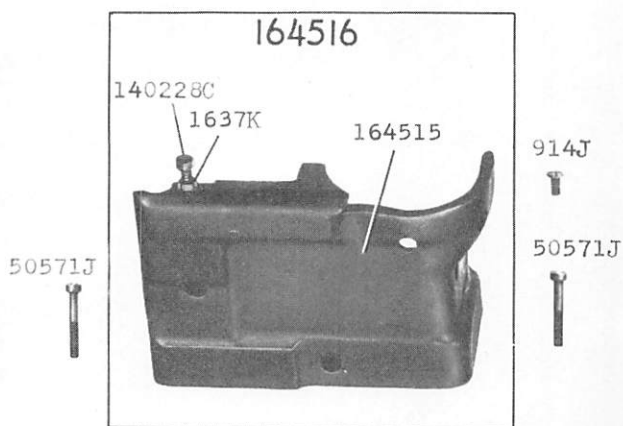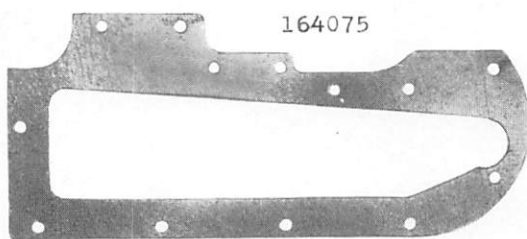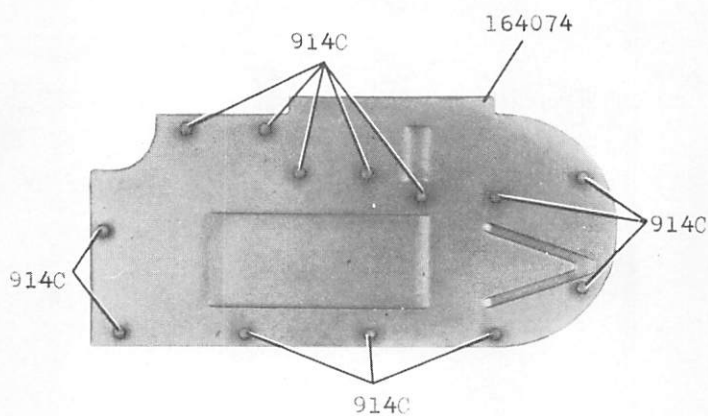

24829-1/2

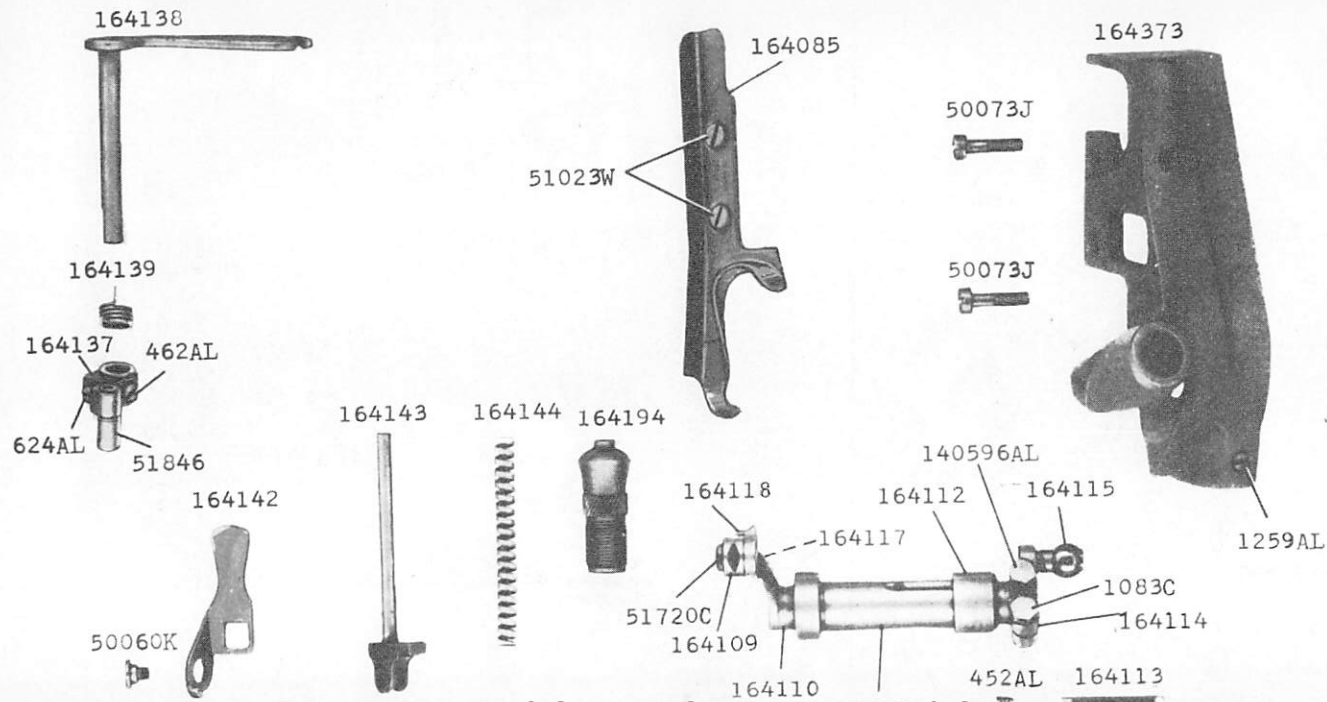


From the library of: Superior Sewing Machine & Supply LLC

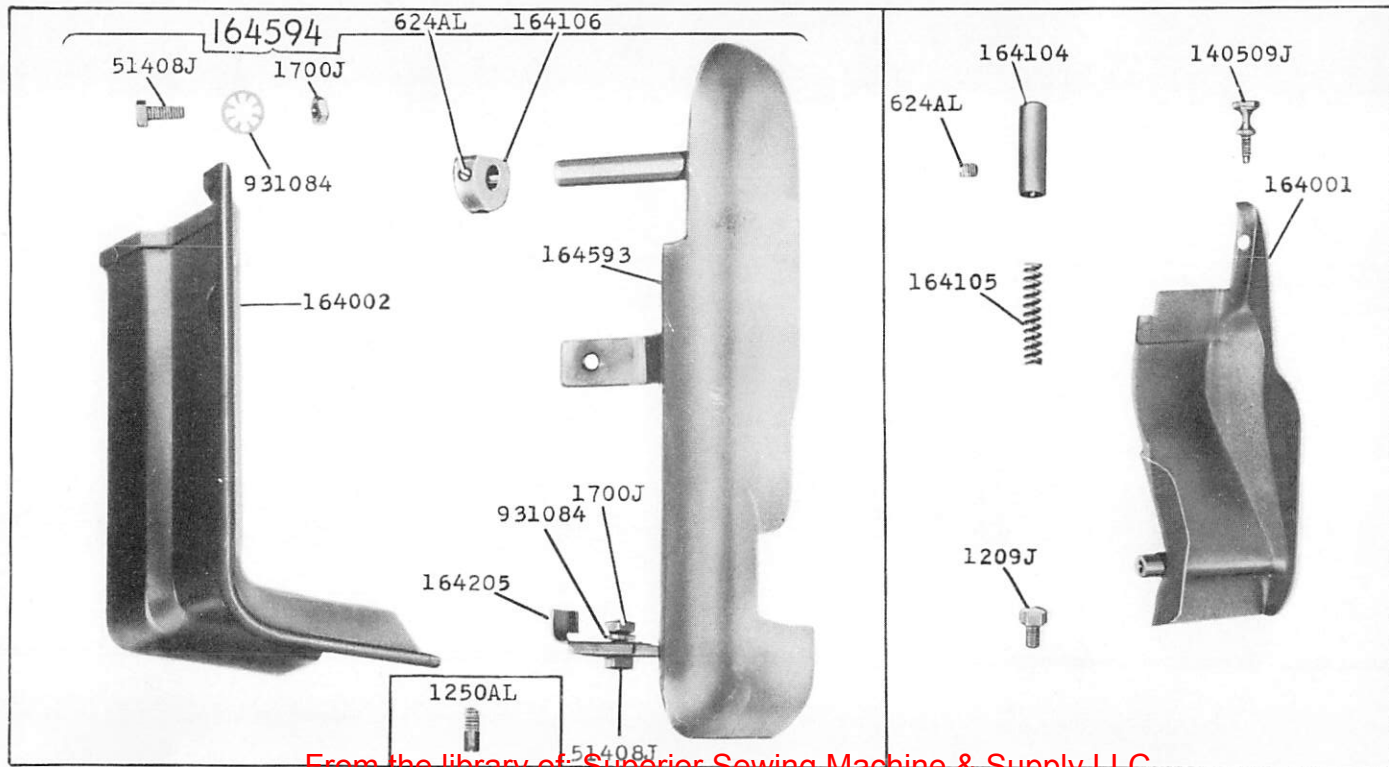


24855-1/2

From the library of: Superior Sewing Machine & Supply LLC

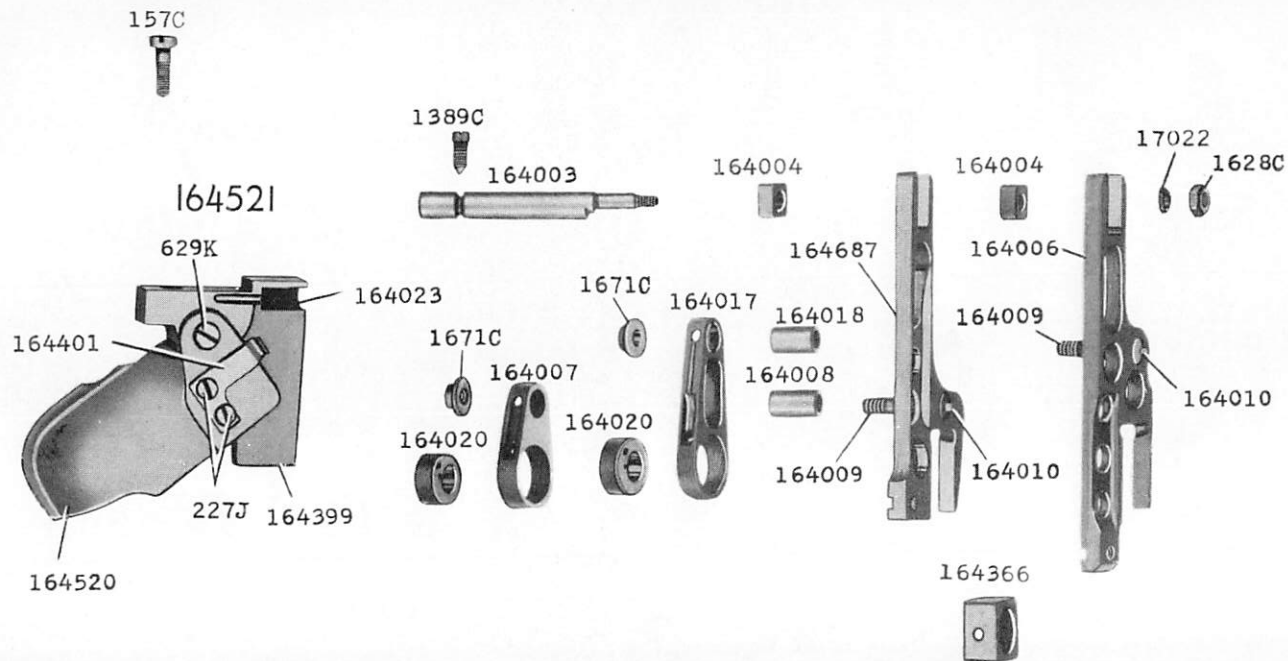


From the library of: Superior Sewing Machine & Supply LLC

24856-1/2

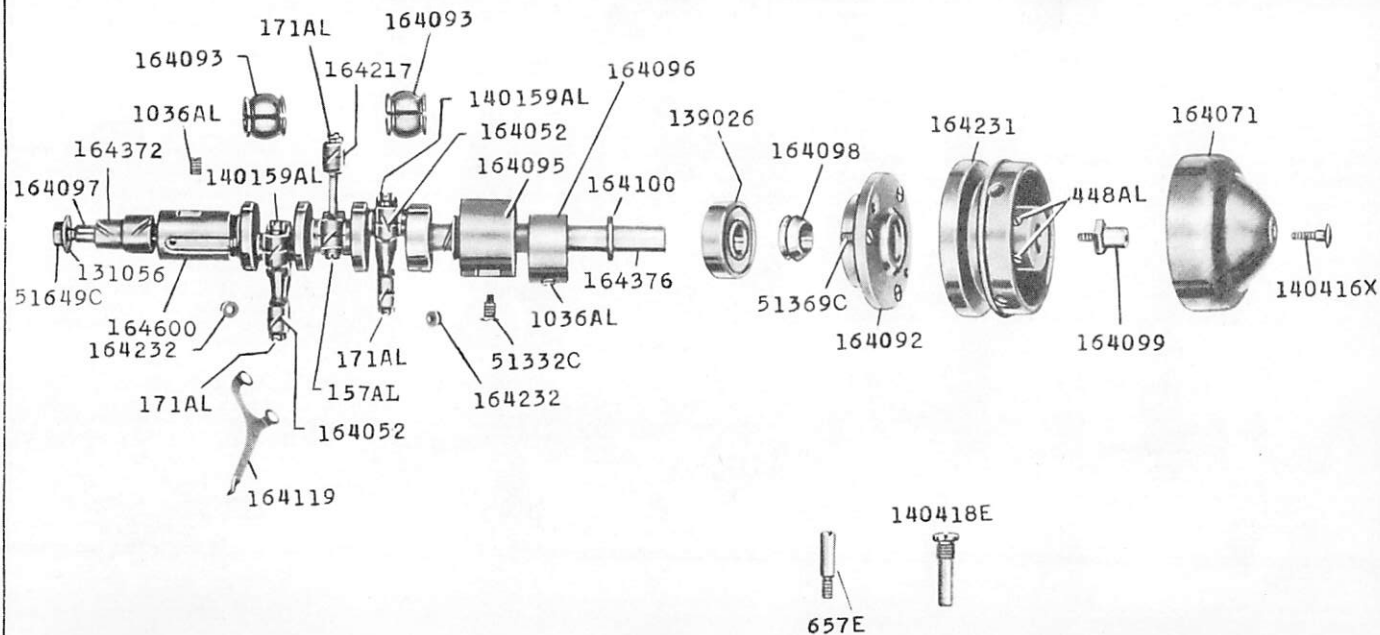


24857-1/3

From the library of: Superior Sewing Machine & Supply LLC

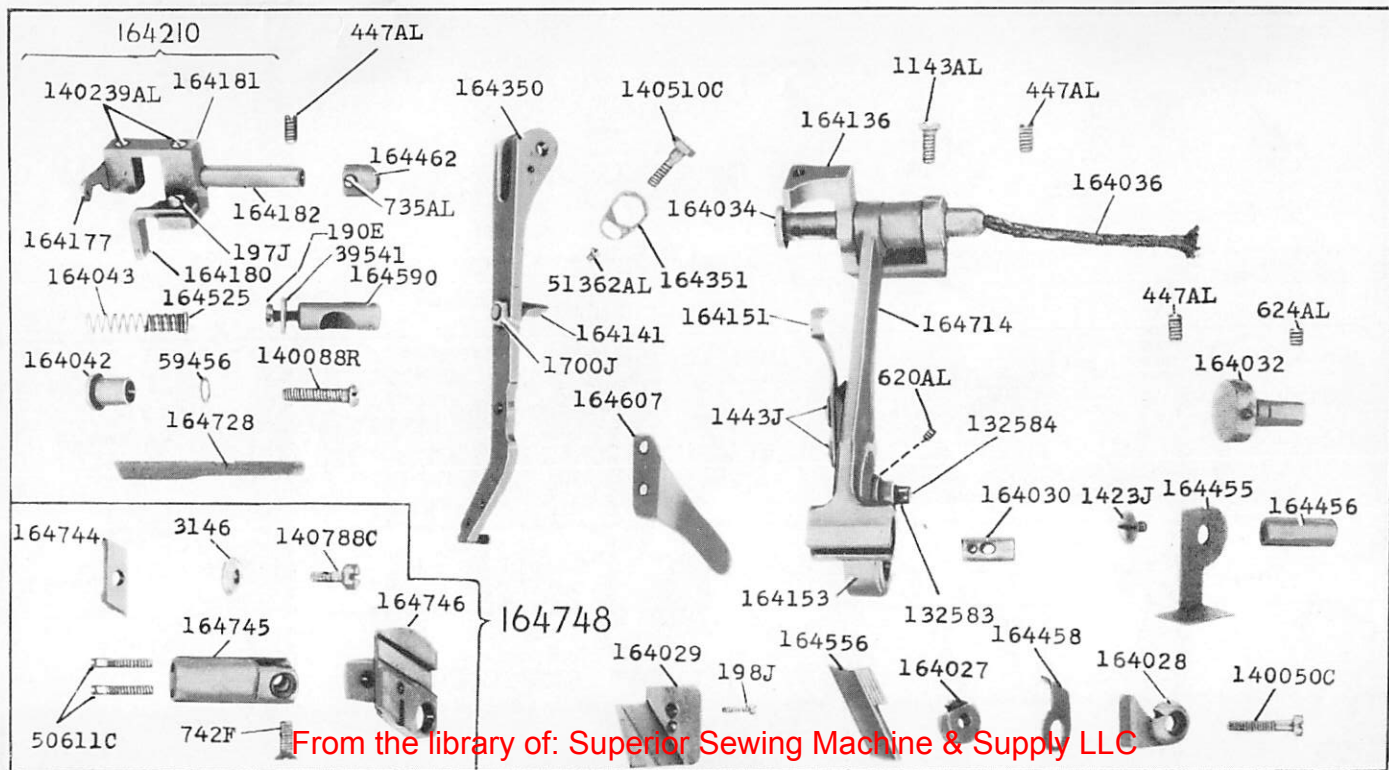




24858-1/2

From the library of: Superior Sewing Machine & Supply LLC

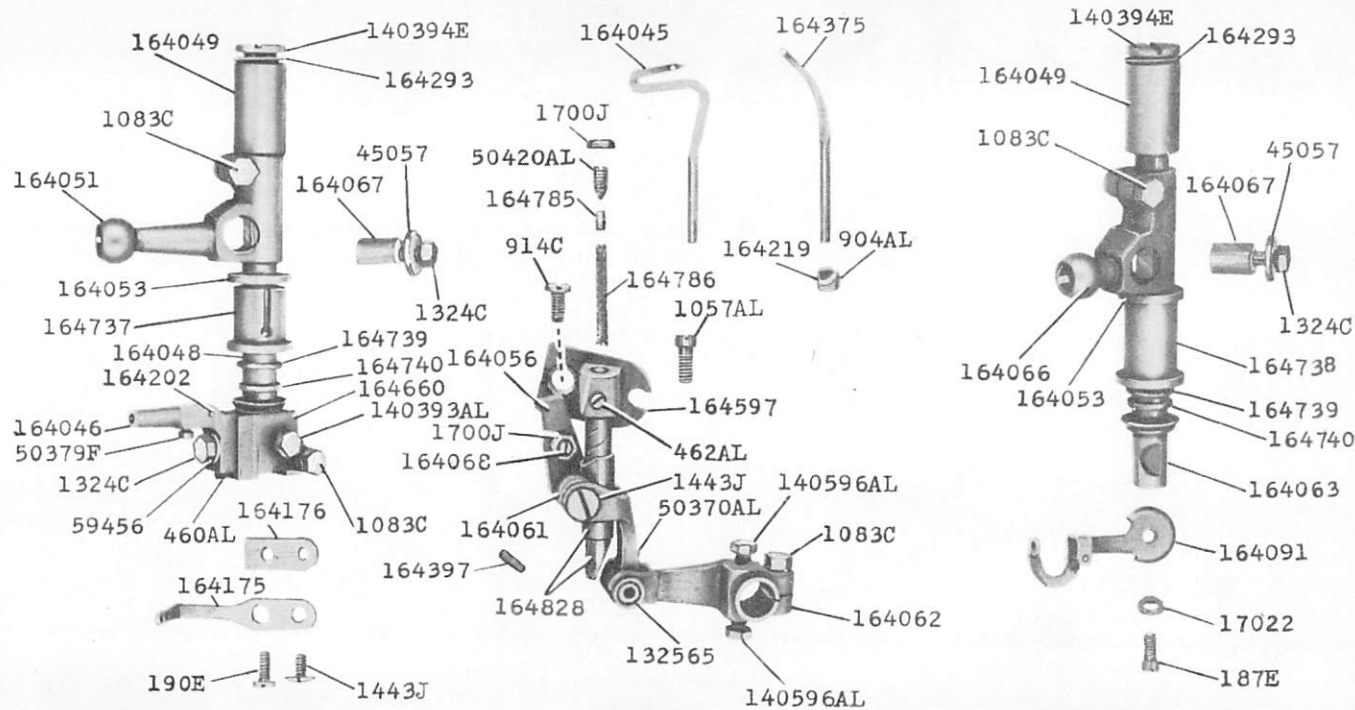

24859-1/2


24861-2/3

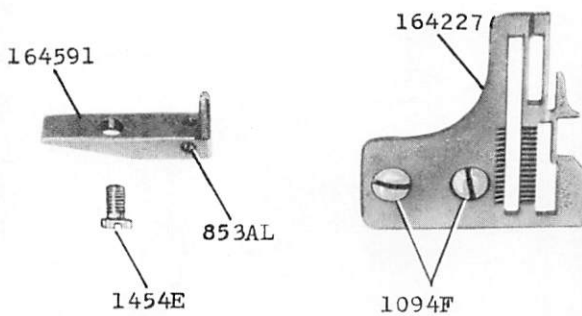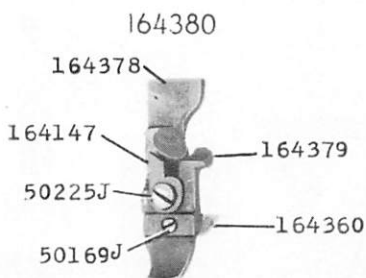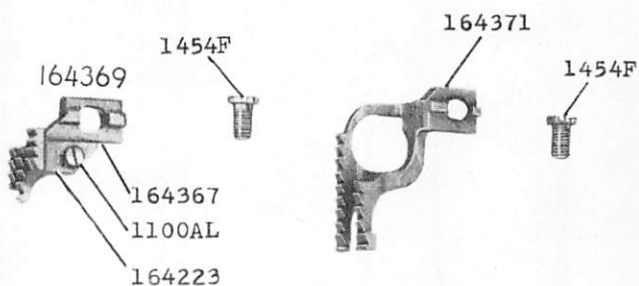

24862-2/3

164391


164369

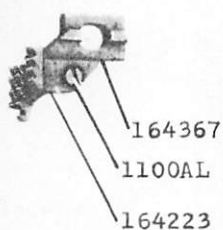

164371



164227

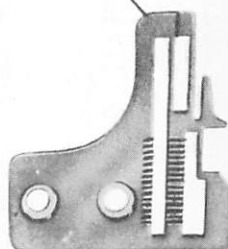

164380

164378

164147

50225J

50169J




164379

164360

164556




164350

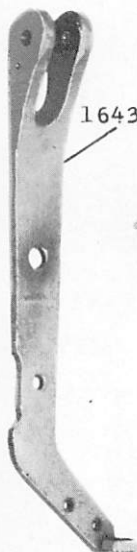

164151



164591



164091



164375





164175



24863-1/2

164445

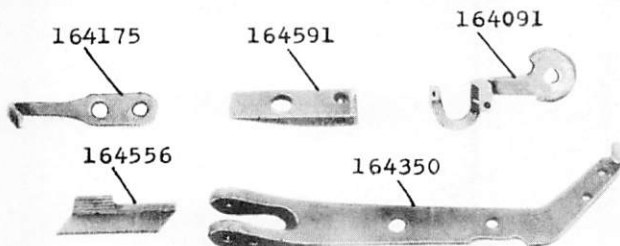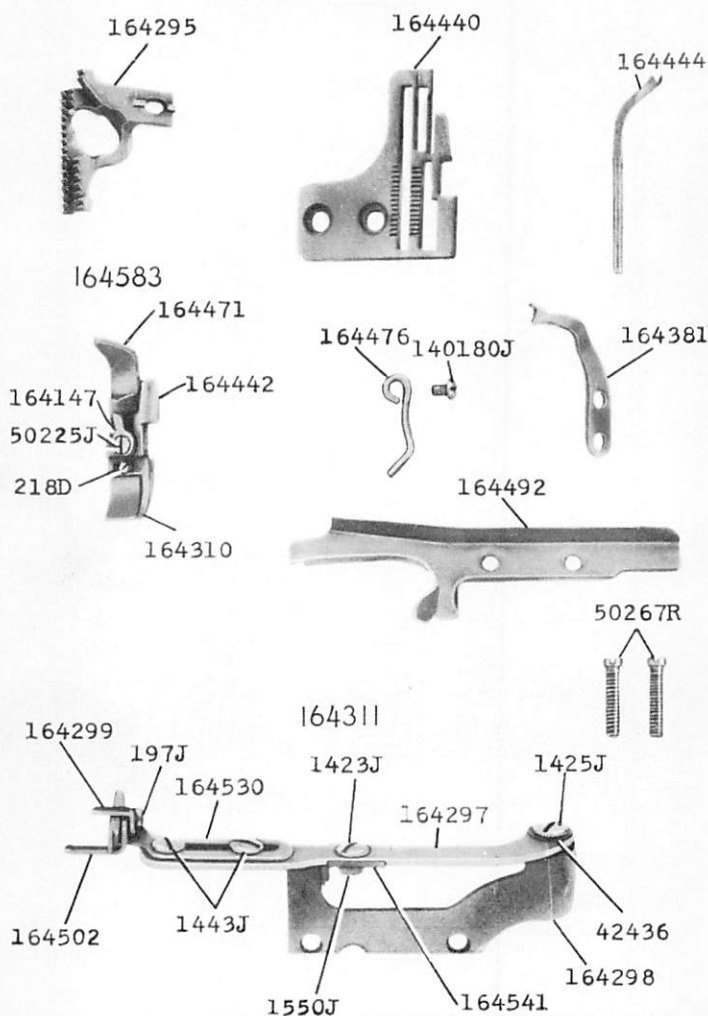


24864-1/2

164542

164469



164440

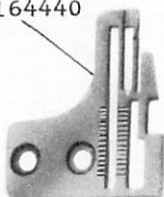

164476



140180J

164475

164471

164147

164146

50225J

218D

164303



164492

50267R



164311

164299

197J

164530

1423J

164297

1425J

164502

1443J

1550J

164541

164298

42436

164151

164375


164175

164591



164091

164556

164350



24865-1/2

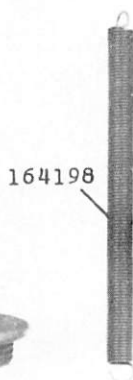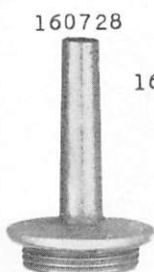

164197



164196

164203



164831



26026



10875



160727







164460




164204

24866 - 1/4

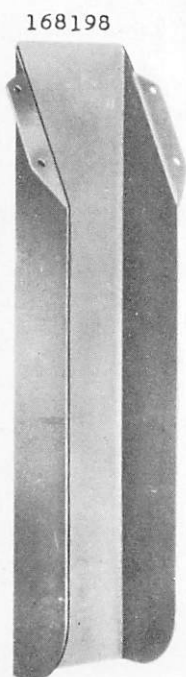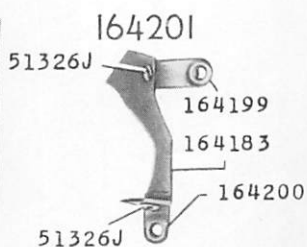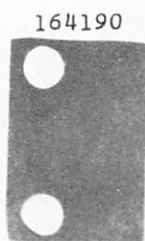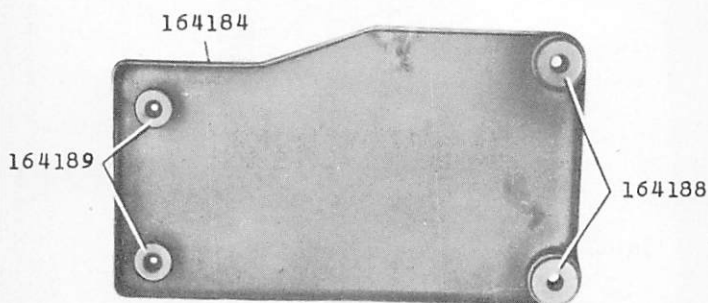


56865

6439



4885

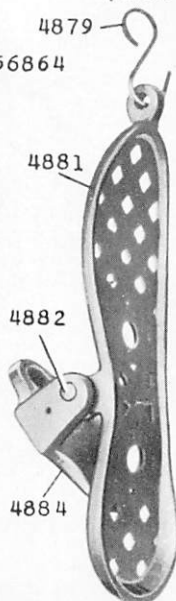

24867 - 1/6

