



MACHINE PARTS CHART
for
SINGER*

366K125 and 366K126

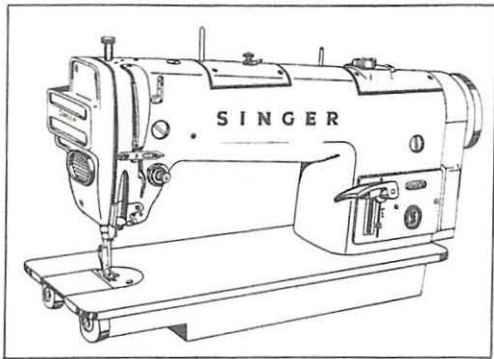

SINGER

366K125 and 366K126

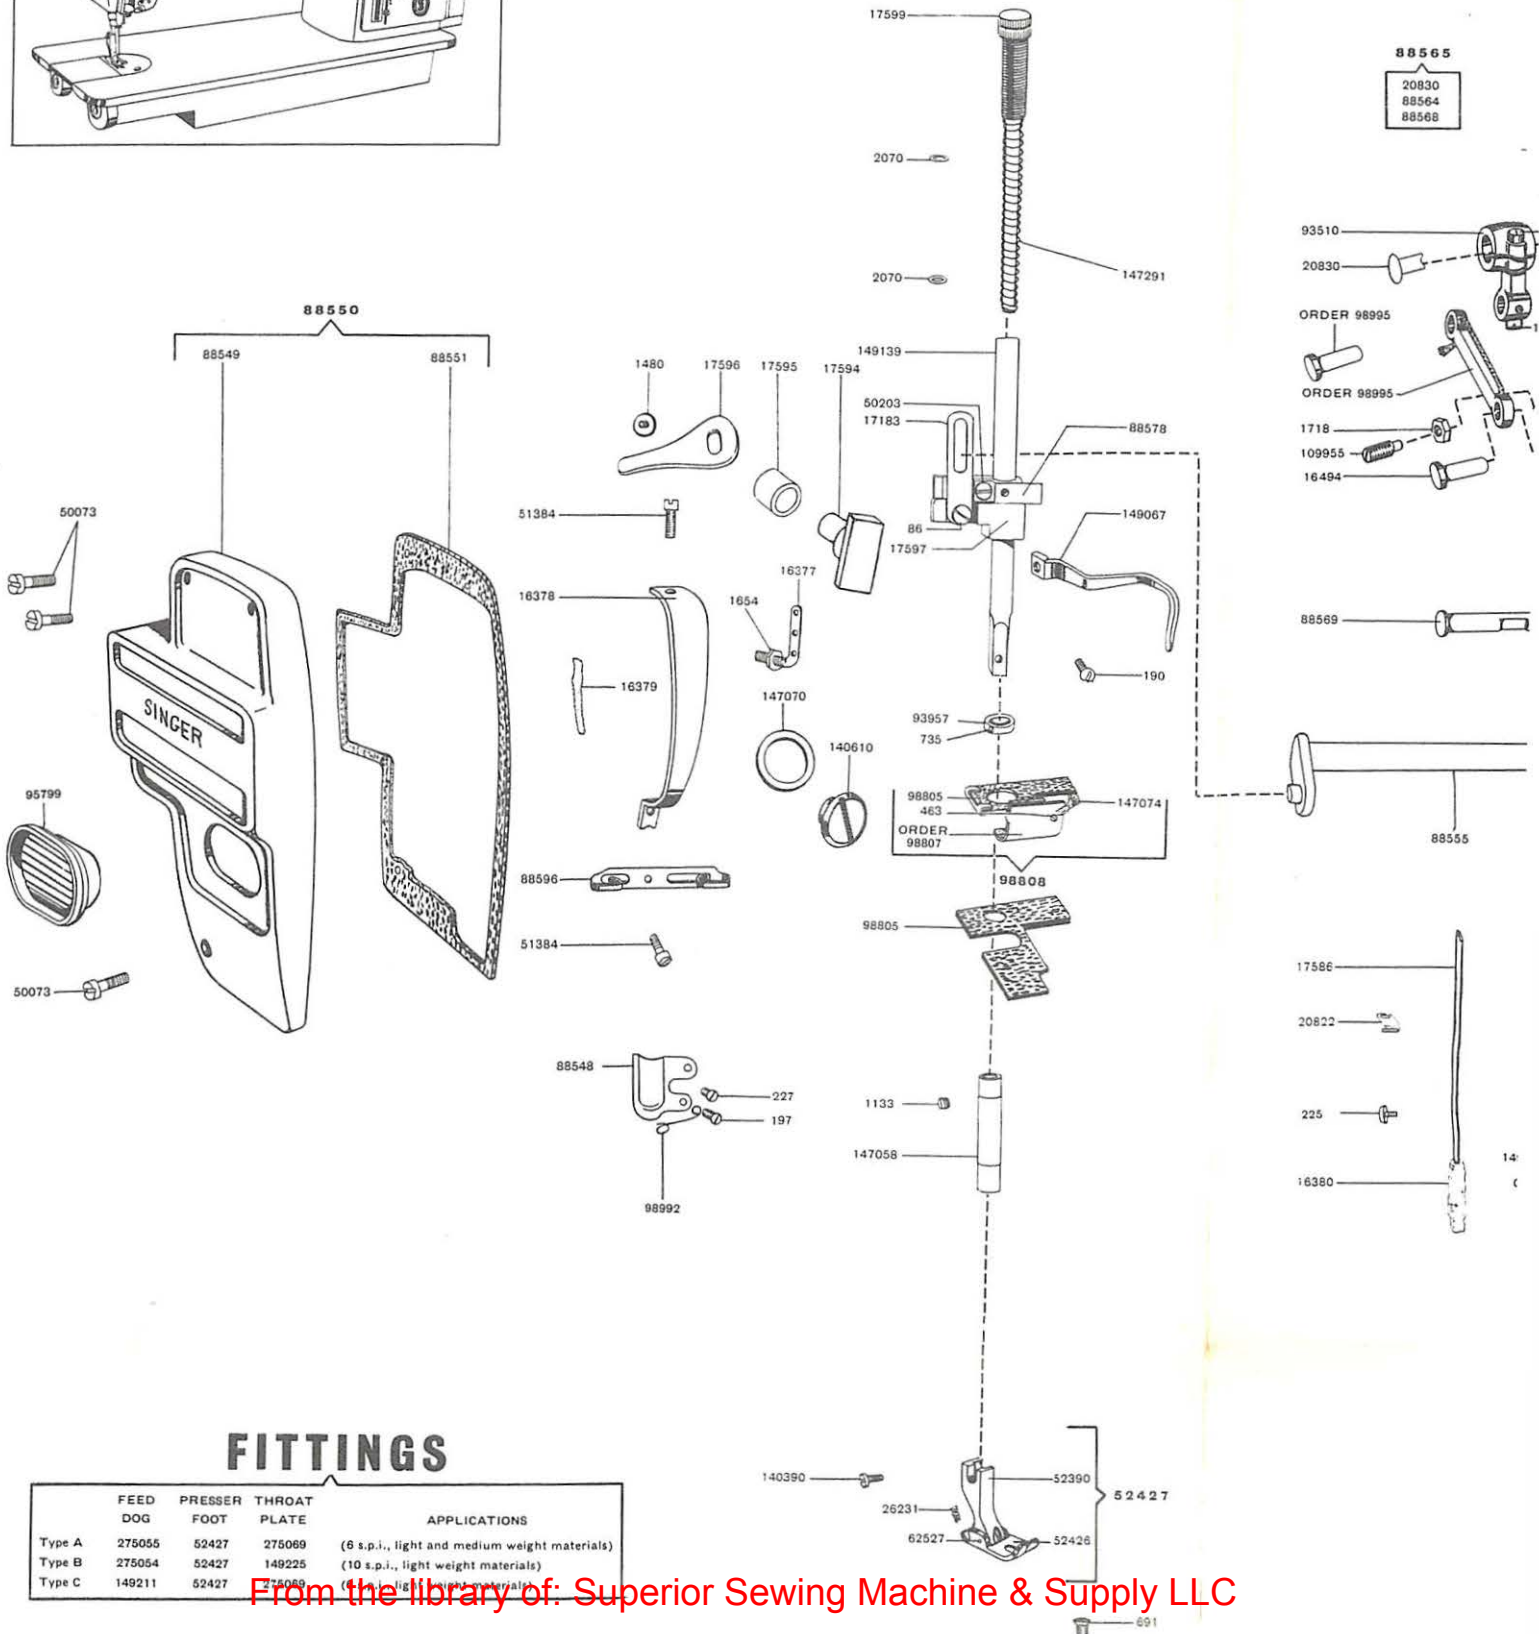


FITTINGS

	FEED DOG	PRESSER FOOT	THROAT PLATE	APPLICATIONS
Type A	275055	52427	275069	(6 s.p.i., light and medium weight materials)
Type B	275054	52427	149225	(10 s.p.i., light weight materials)
Type C	149211	52427	275069	(6 s.p.i., light weight materials)





From the library of: Superior Sewing Machine & Supply LLC


Parts for 336K126 Machine which differ from those for 366K125 Machine

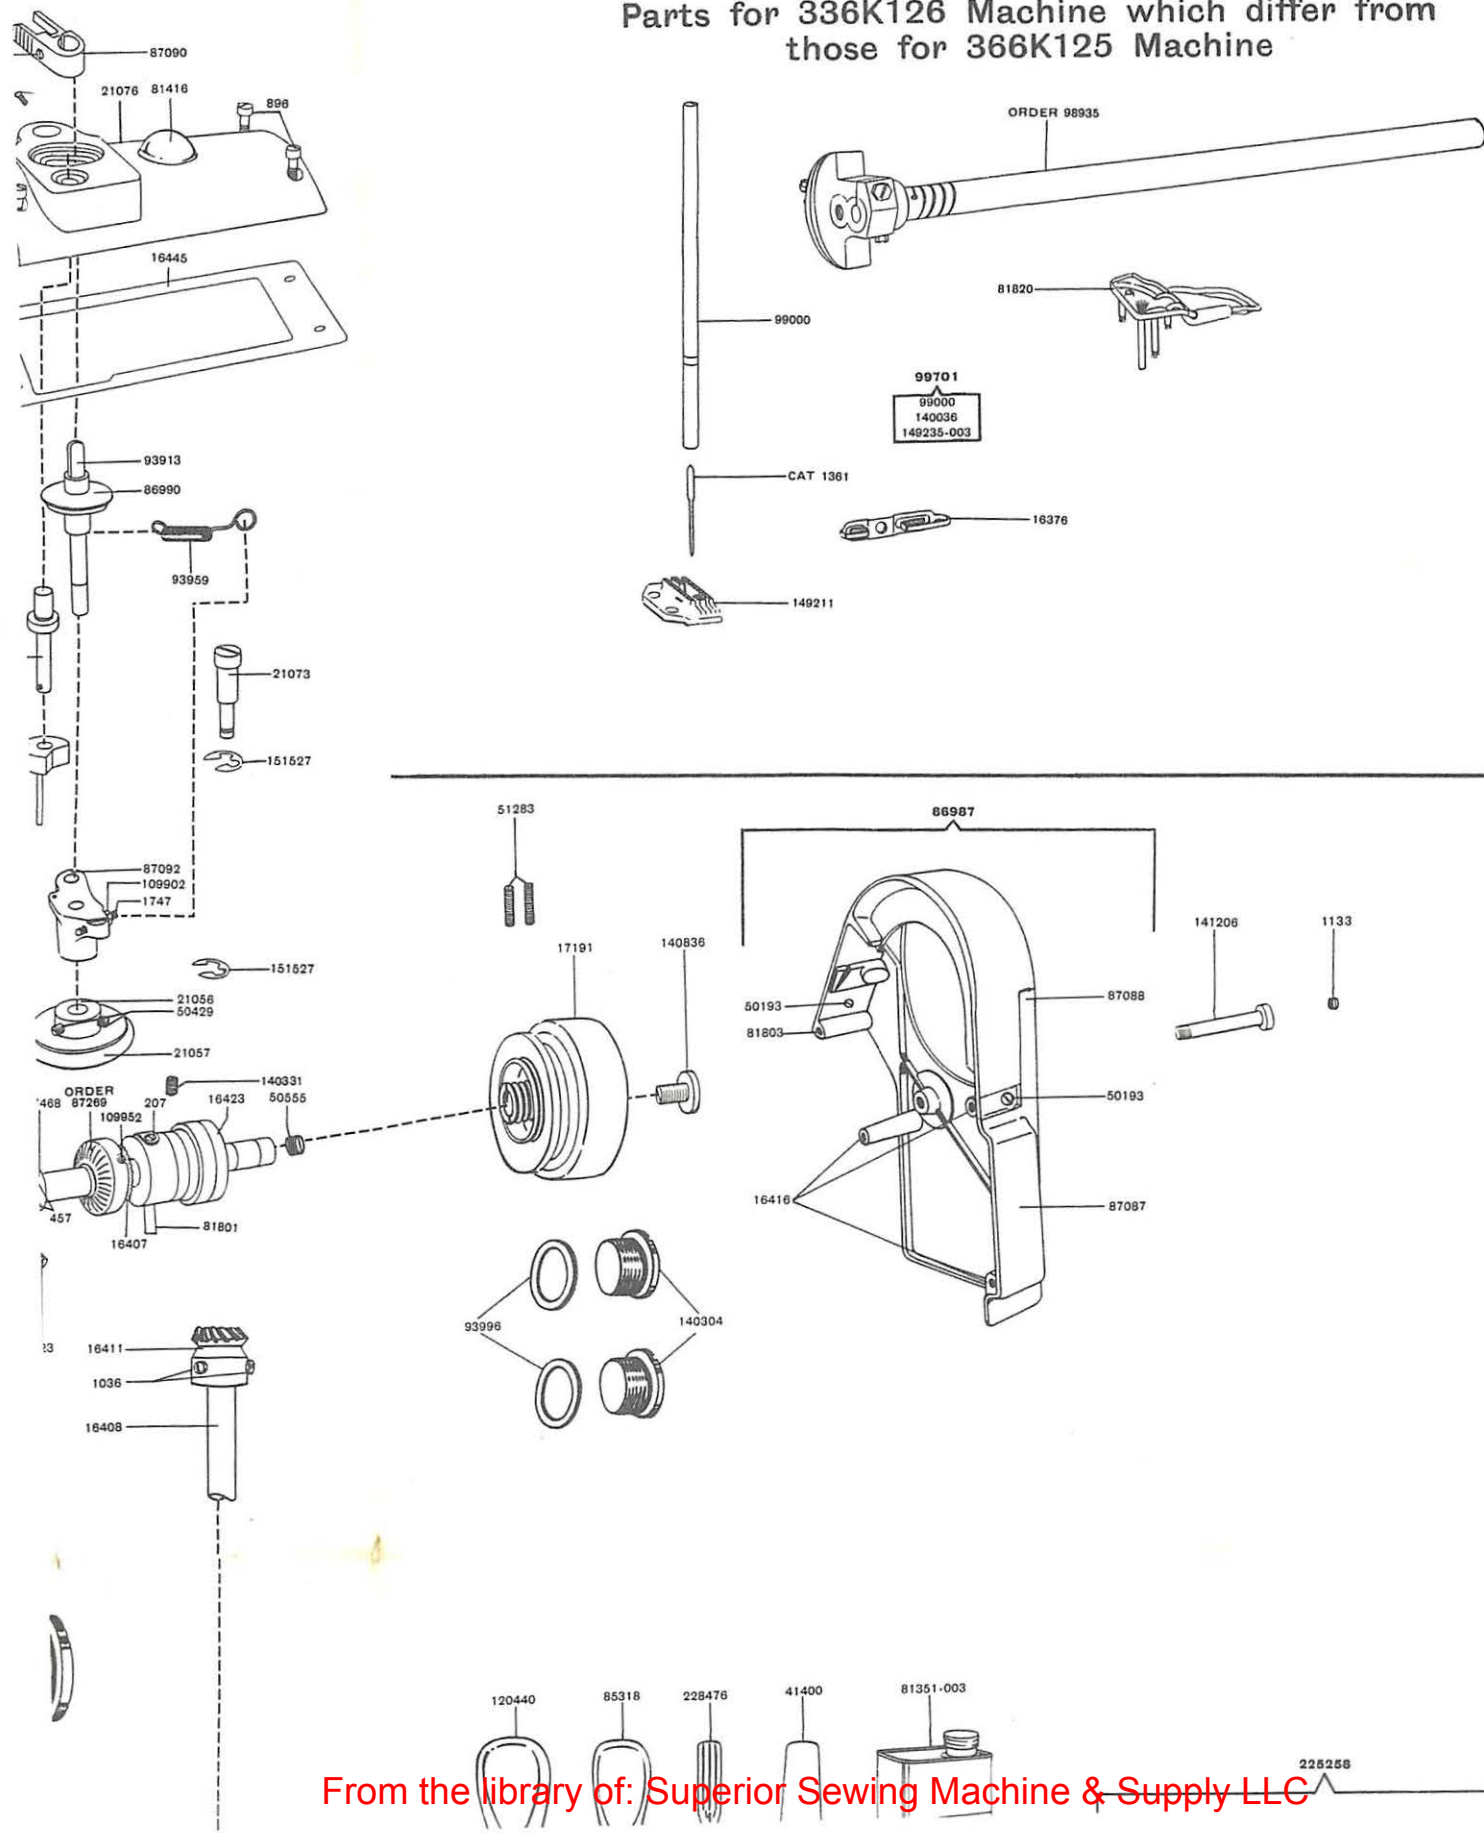



FITTINGS

	FEED DOG	PRESSER FOOT	THROAT PLATE	APPLICATIONS
Type A	275055	52427	275069	(6 s.p.i., light and medium weight materials)
Type B	275054	52427	149225	(10 s.p.i., light weight materials)
Type C	149211	52427	275069	(6 s.p.i., light weight materials)

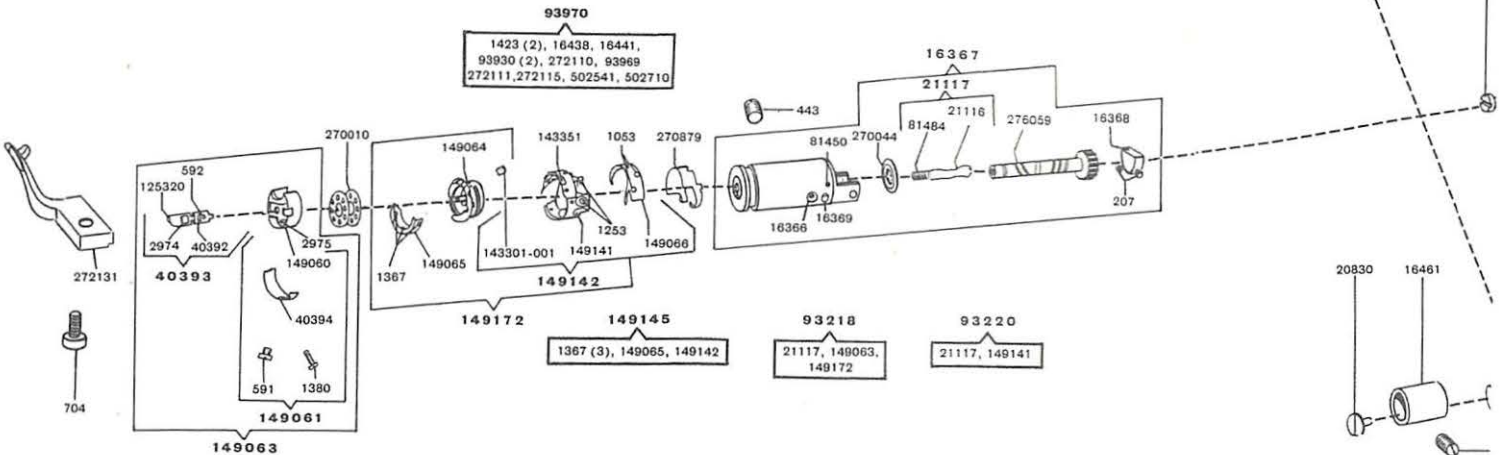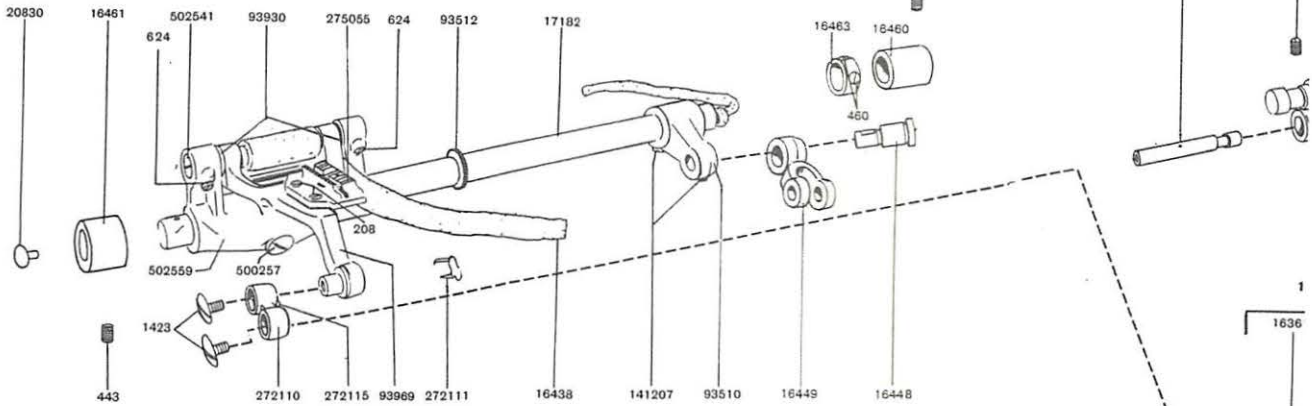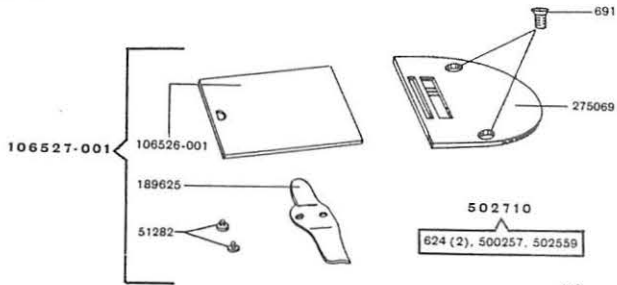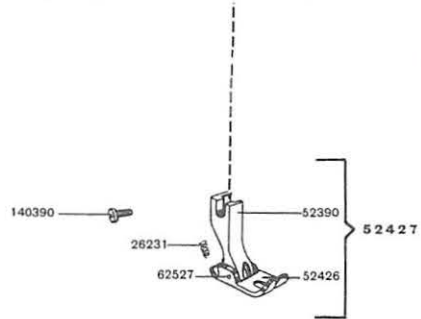

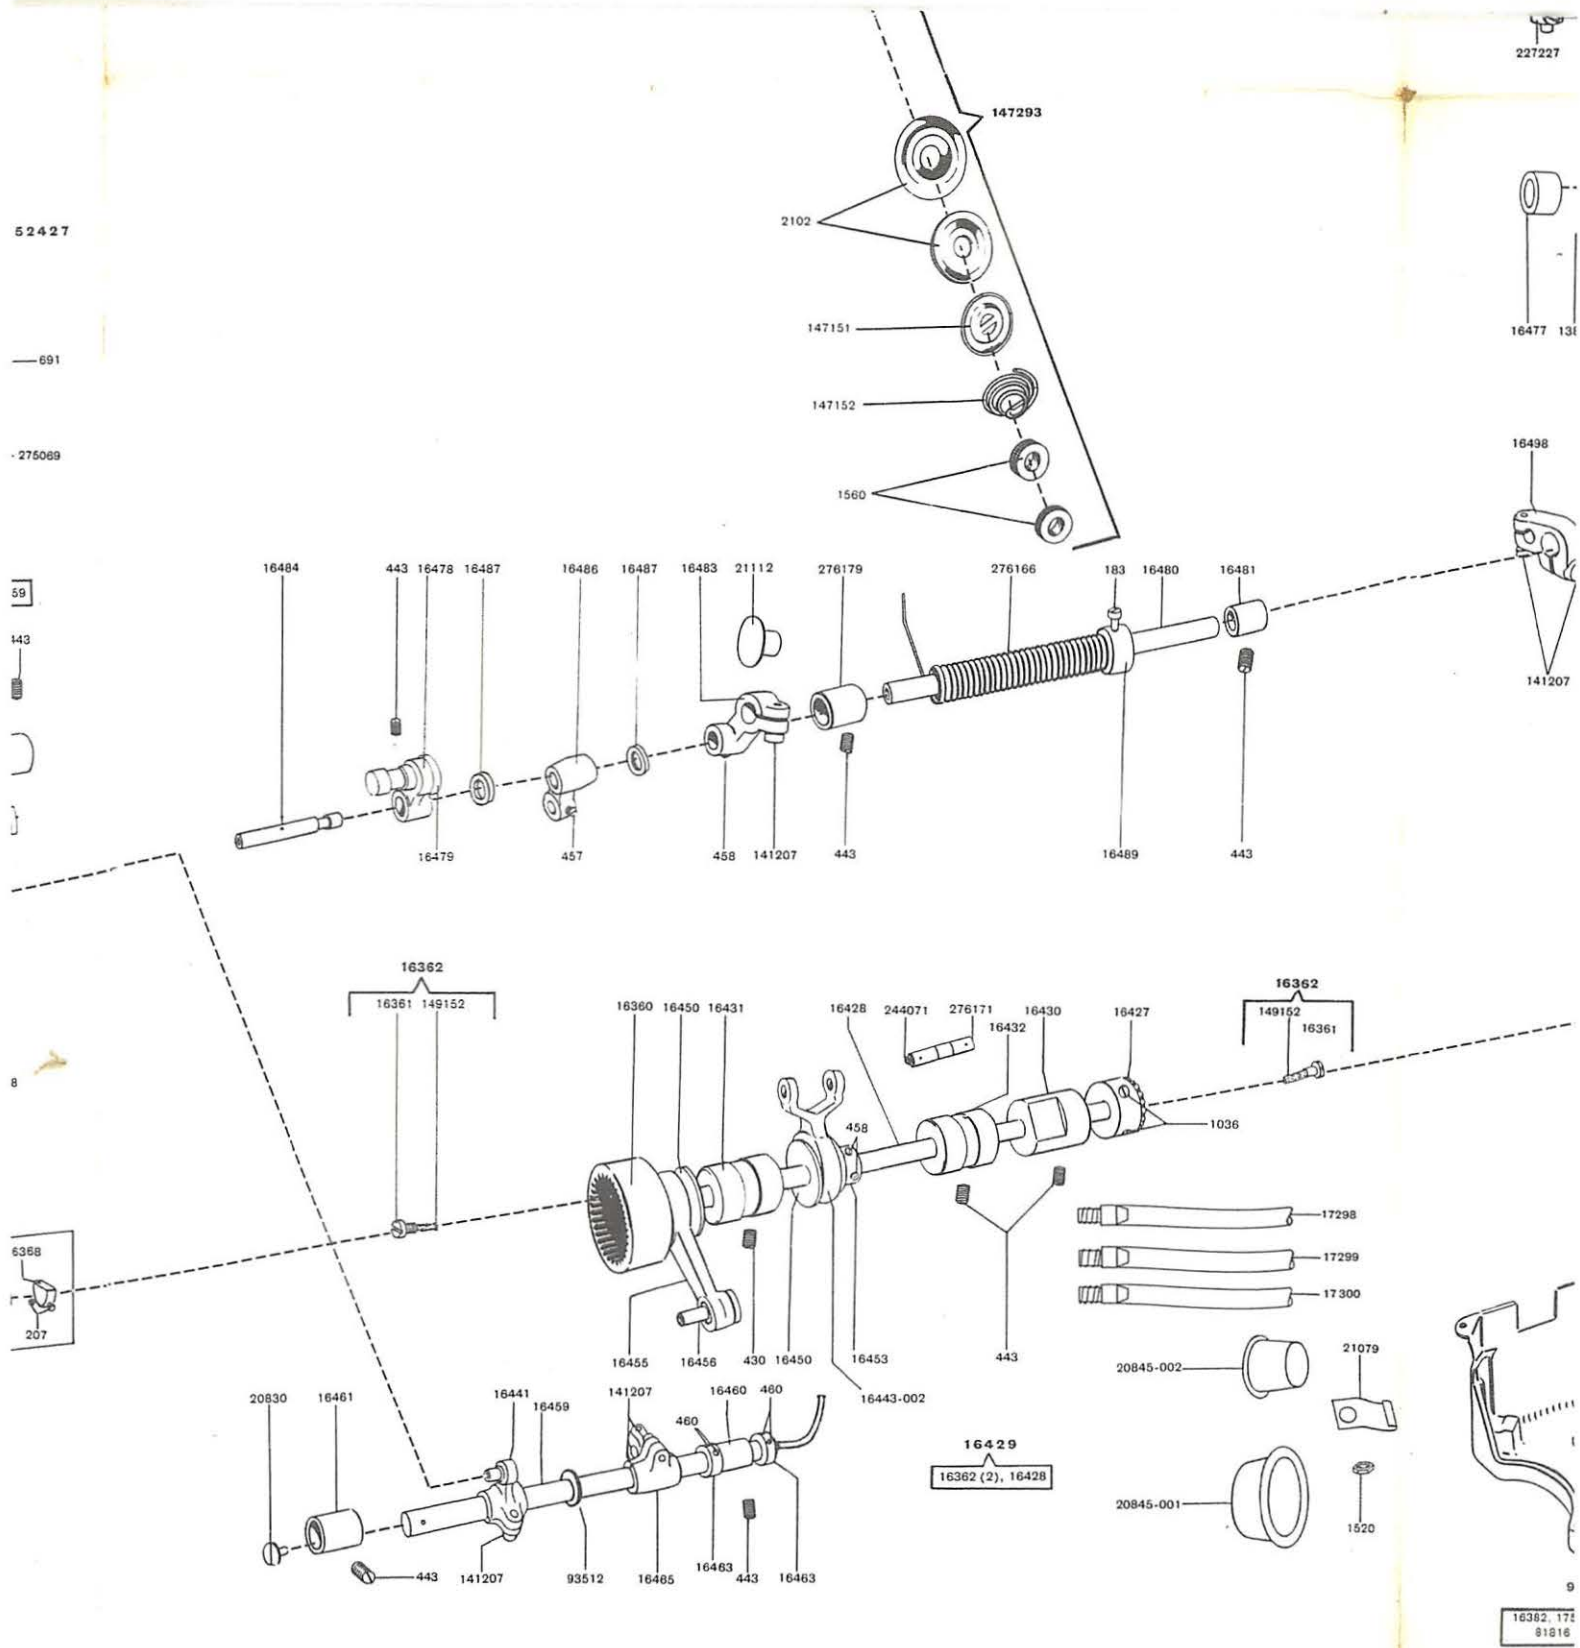

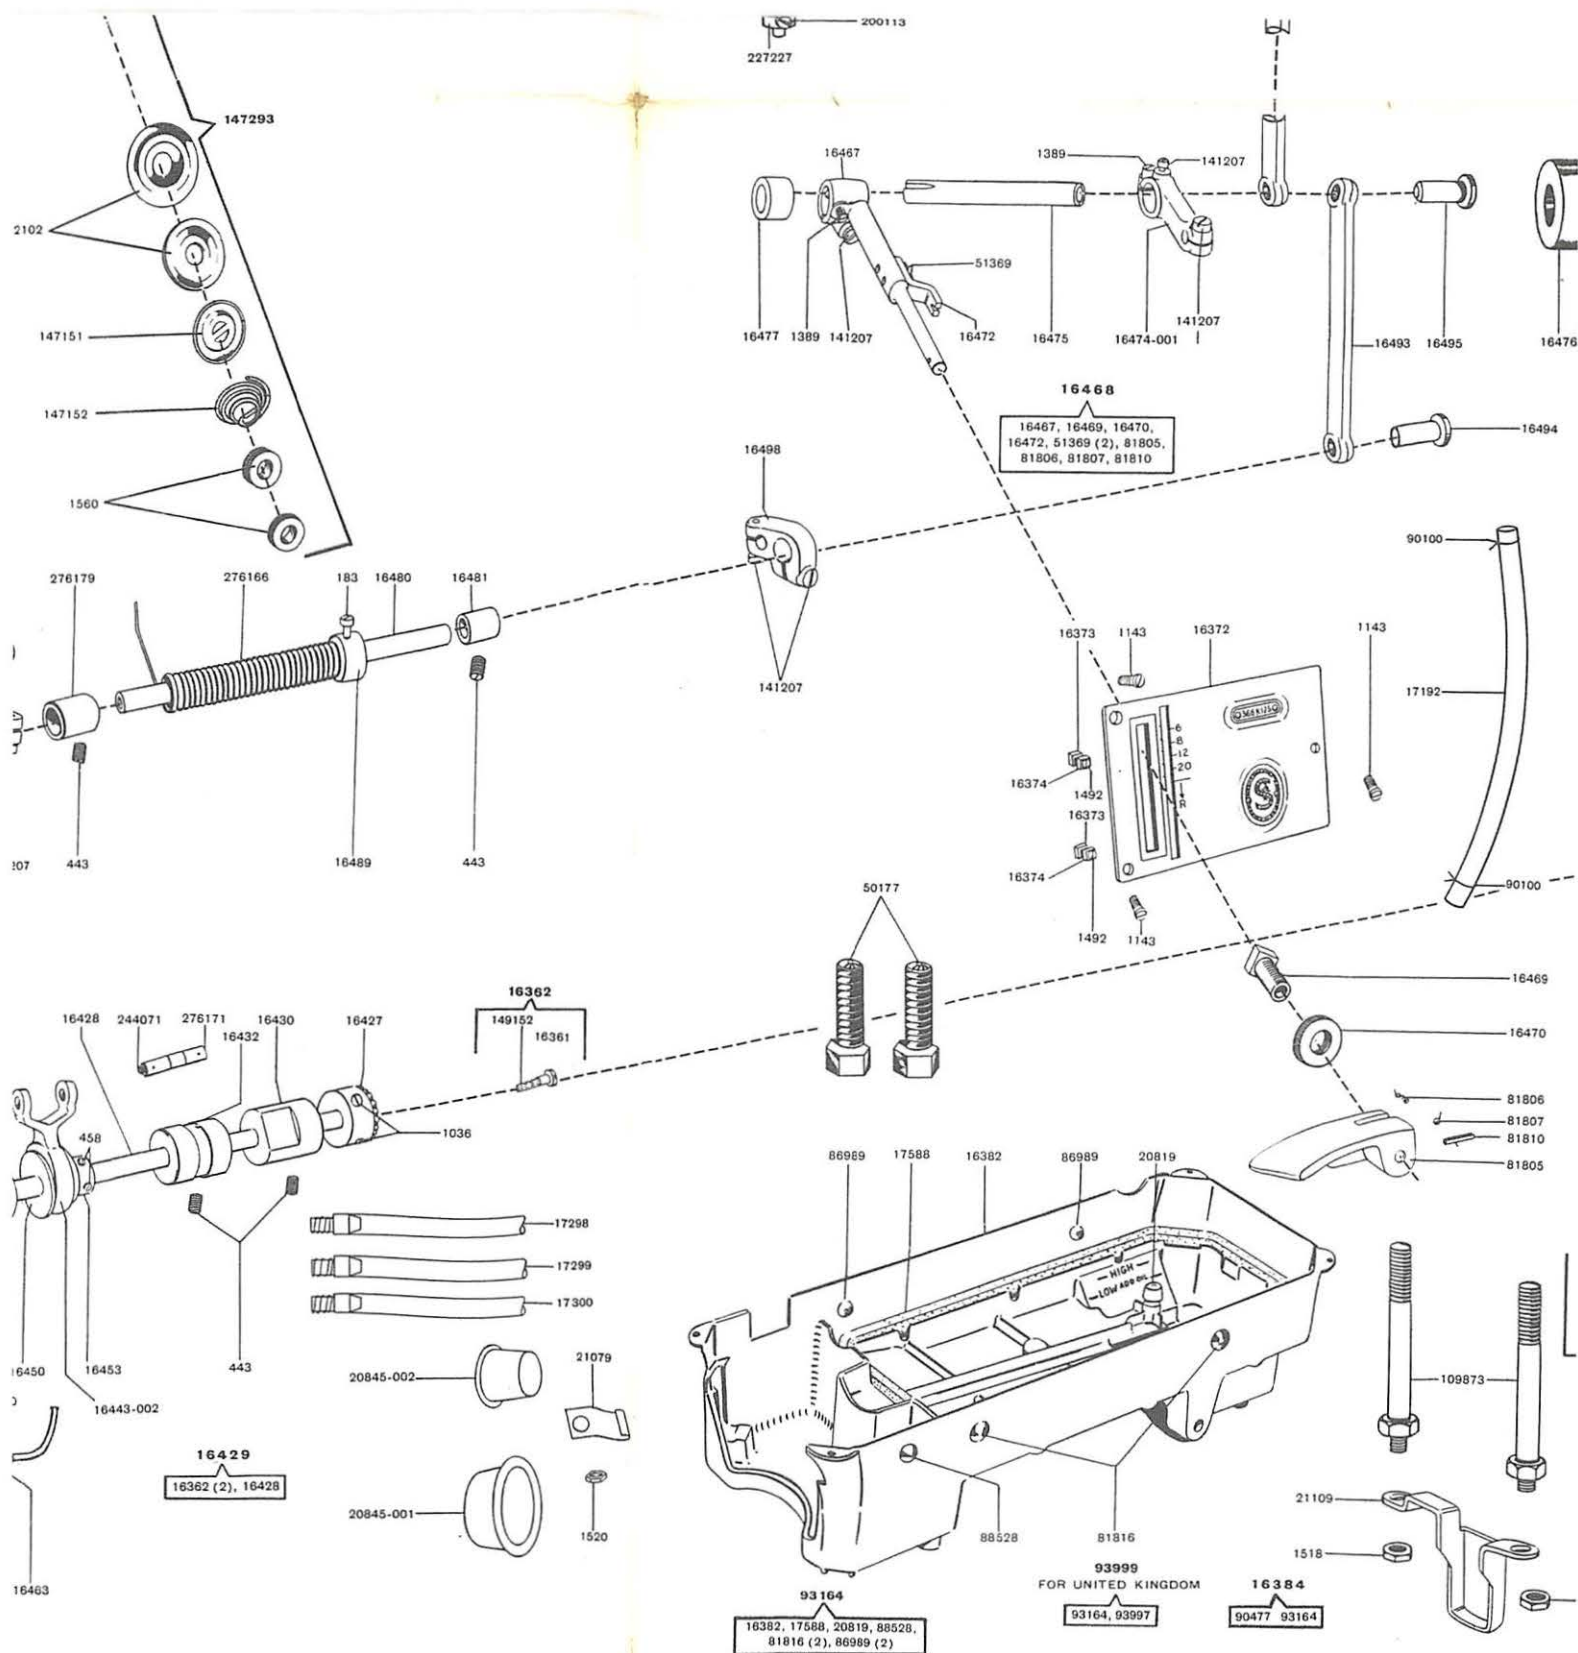

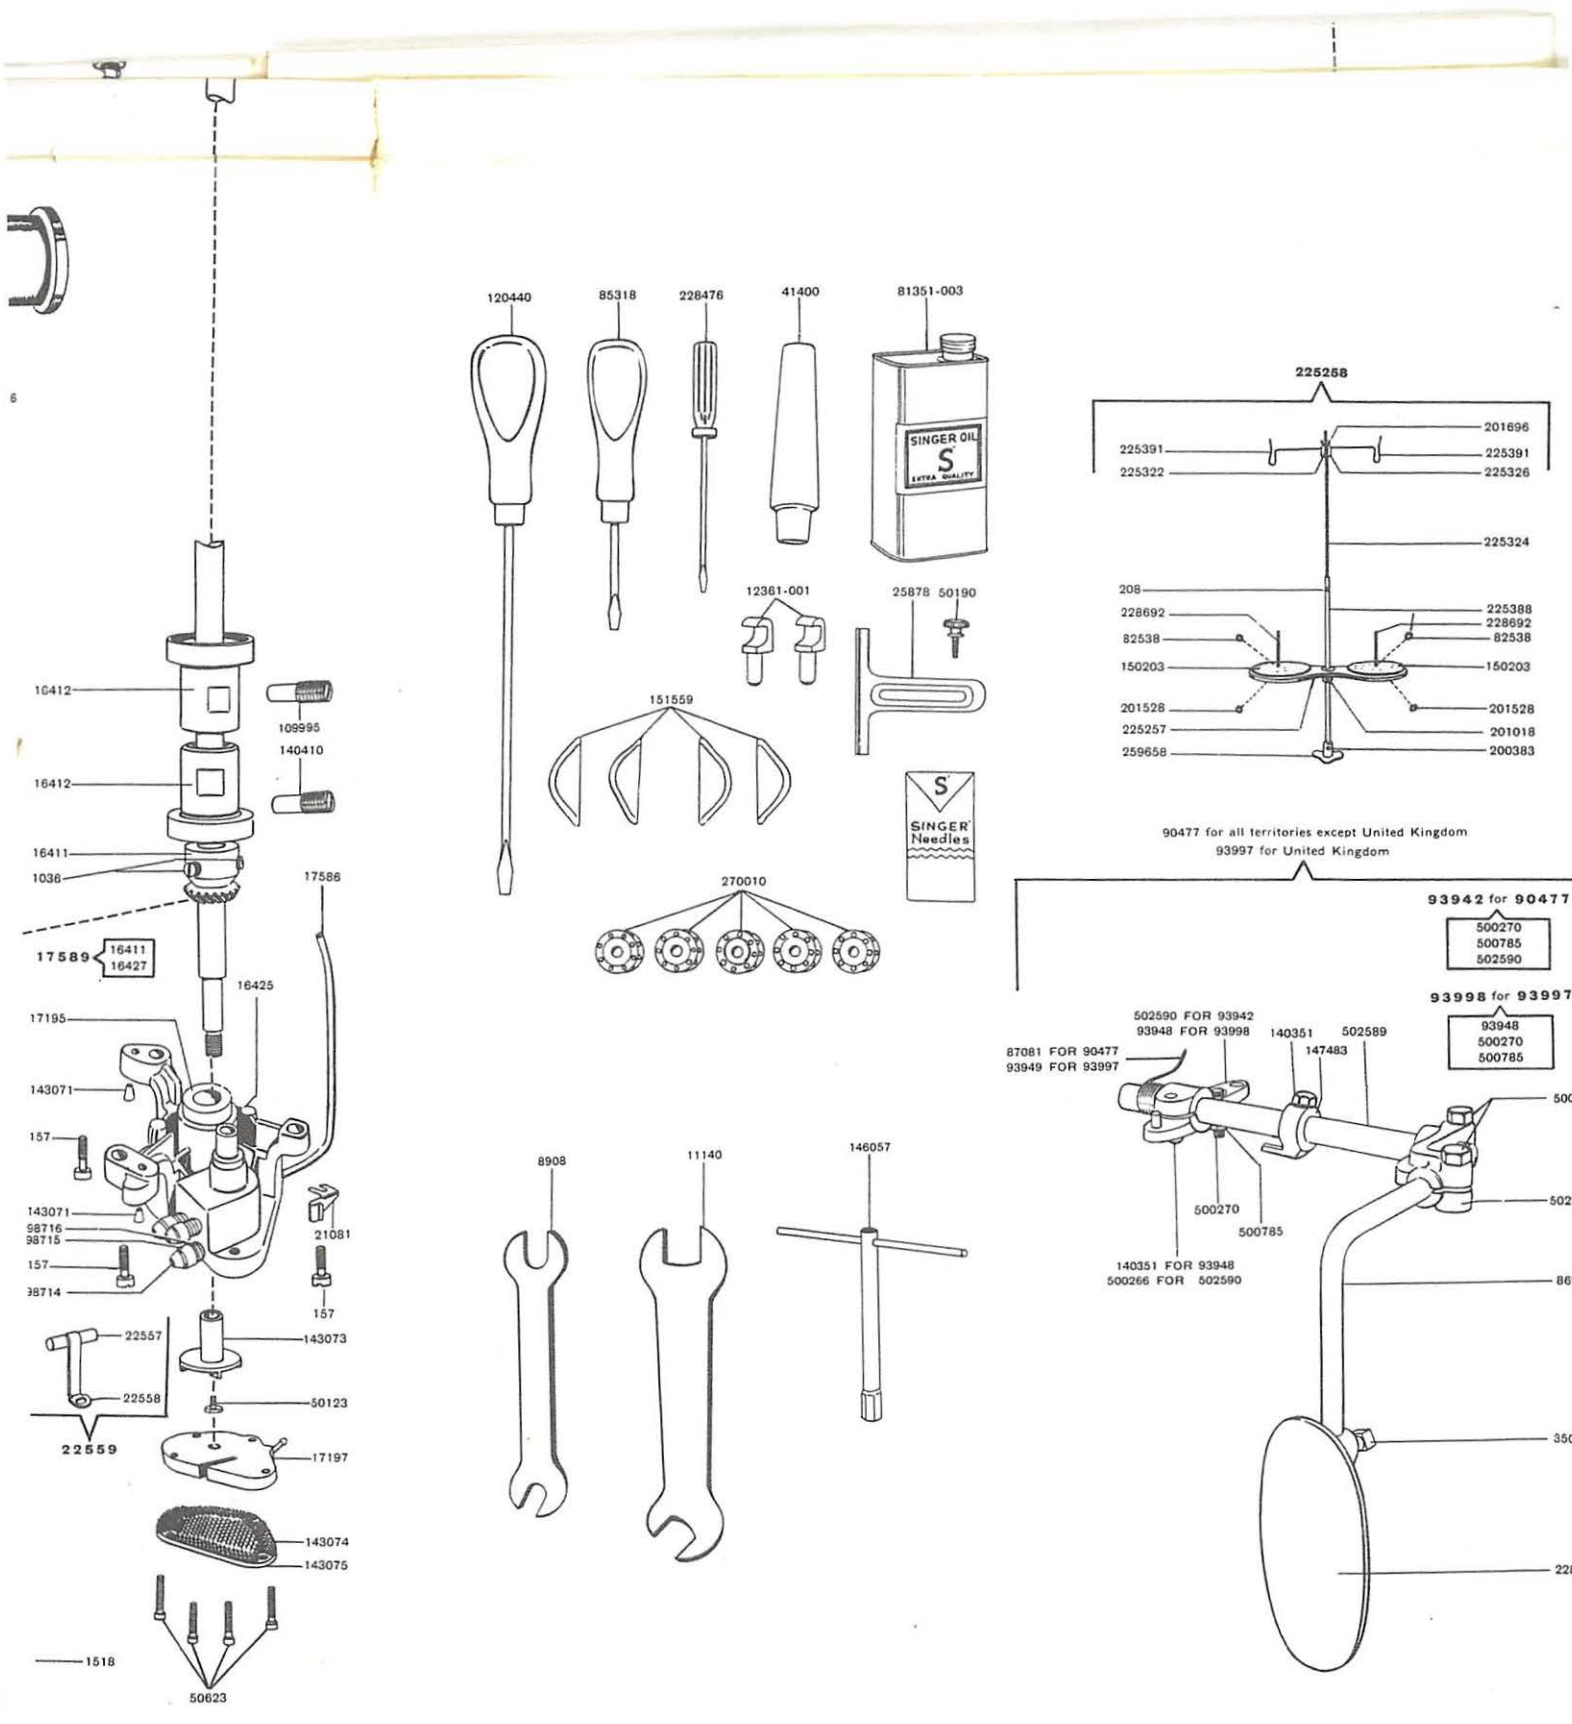

MACHINE PARTS FOR 366K125 MACHINE

<u>Part No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Description</u>
86(830)	Knee Lifter Lifting Link Hinge Screw	458(830)	Needle Feed and Needle Feed Reversing
157(805)	Oil Pump (centrifugal) Body Screw		Shaft Crank (front) Hinge Stud Set Screw
157(805)	Oil Pump (centrifugal) Body and Oil	460(830)	Feed Lifting Rock Shaft Collar Set Screw
	Return Tube Retaining Clamp Screw	460(830)	Feed Rock Shaft Collar Set Screw
183(806)	Feed Regulator and Feed Reversing	460(830)	Needle Bar Frame Crank Shaft Collar Set
	Shaft Spring Adjusting Collar Set		Screw
	Screw	463(830)	Needle Bar Frame Oil Retainer Oil Wick Pinch
190(805)	Slack Thread Regulator Screw		Screw
197(803)	Arm Thread Shield Screw (lower)	465(830)	Needle Bar Timing Indicator Set Screw
198(809)	Bobbin Winder Spindle Engaging Lever	591(806)	Rotating Hook Bobbin Case Tension Regulating
	Set Screw		Screw
207(805)	Arm Shaft (horizontal) Flanged	592(805)	Rotating Hook Bobbin Case Latch Stop Screw
	Bushing (back) Oil Sump Tube	624(813)	Feed Bar Hinge Pin (eccentric) Set Screw
	Holder Screw	691(806)	Throat Plate Screw
207(804)	Rotating Hook Shaft End Bearing	704(809)	Rotating Hook Bobbin Case Holder Position
	Screw		Bracket Screw
208(830)	Feed Dog Screw	735(830)	Needle Bar Frame Oil Retainer Collar Set
217(813)	Arm Side Shield Screw		Screw
217(833)	Tension Releasing Lever (adjustable)	896(809)	Arm Side Cover (back) Screw
	Screw	896(809)	Arm Top Cover (back) Screw
		896(809)	Arm Top Cover (front) Screw
225(805)	Oil Return Tube (from needle head	1036(830)	Arm Shaft (horizontal) Bevel Gear Set Screw
	cavity to pump cover) Retaining		(not illustrated)
	Clamp (cavity end) Screw	1036(830)	Arm Shaft (upright) Bevel Gear (lower) Set
227(803)	Arm Thread Shield Screw (upper)		Screw
423(830)	Arm Shaft (horizontal) Bushing	1036(830)	Arm Shaft (upright) Bevel Gear (upper) Set
	(centre) Set Screw		Screw
430(830)	Rotating Hook Driving Shaft	1036(830)	Rotating Hook Driving Shaft Bevel Gear Set
	Bushing (front) Set Screw		Screw
440(830)	Needle Bar Frame Crank Shaft	1036(830)	Thread Take-up Crank Set Screw
	Bushing (front) Set Screw	1053(805)	Rotating Hook Thread Guard Screw
443(830)	Feed Lifting Rock Shaft Bushing	1125(830)	Rotating Hook Driving Shaft Gear and Feed
	(back) Set Screw		Lifting Eccentric Position Screw (not
443(830)	Feed Lifting Rock Shaft Bushing		illustrated)
	(front) Set Screw	1133(805)	Belt Cover Screw Hole Plug Screw
443(830)	Feed Regulator and Feed Reversing	1133(830)	Needle Bar Frame Adjusting Bracket Support
	Mechanism Support Stud Set Screw		Stud Set Screw
443(830)	Feed Regulator and Feed Reversing	1133(830)	Needle Bar Frame Crank Shaft Bushing (back)
	Shaft Bushing (back) Set Screw		Set Screw
443(830)	Feed Regulator and Feed Reversing	1133(830)	Presser Bar Bushing (lower) Set Screw
	Shaft Bushing (front) Set Screw	1143(809)	Stitch Indicator Plate Cover Screw
443(830)	Feed Rock Shaft Bushing (back)	1253(830)	Rotating Hook Set Screw
	Set Screw	1259(830)	Needle Feed Driving Eccentric Set Screw
443(830)	Feed Rock Shaft Bushing (front)	1367(805)	Rotating Hook Section Screw
	Set Screw	1380(805)	Rotating Hook Bobbin Case Tension Spring
443(830)	Needle Feed Driving Mechanism		Screw
	Support Link Hinge Stud Set Screw	1389(805)	Feed Regulator and Reversing Lever
443(830)	Rotating Hook Driving Shaft		Positioning Screw
	Bushing (back) Set Screw	1389(830)	Feed Regulator Lever and Feed Reversing Crank
443(830)	Rotating Hook Driving Shaft		Positioning Screw
	Bushing (intermediate) Set Screw	1423(803)	Feed Bar Connecting Link Cap Screw
443(830)	Rotating Hook Shaft Bushing	1467(805)	Knee Lifter Rock Frame Shaft Connection
	Set Screw		(back) Cap Screw
448(830)	Needle Feed and Needle Feed	1480(830)	Presser Bar Lifting Stud Bushing Set Screw
	Reversing Shaft Bushing (back) and (front)	1492(809)	Stitch Indicator Stop Plate (adjustable,
	Set Screw		back and front) Clamping Screw
448(830)	Thread Take-up Spring Regulator	1518(809)	Bed Leg (back) Nut
	Set Screw		
457(830)	Arm Shaft (horizontal) Thrust	1520	Oil Retaining Clamp Nut
	Collar Set Screw		
457(830)	Feed Driving Connection Link	1560(803)	Tension Regulating Thumb Nut
	Hinge Pin Set Screw	1560(803)	Tension Regulating Thumb Nut Lock Nut
457(830)	Needle Feed Driving Connection	1562(809)	Bobbin Winder Thread Tension Stud Thumb Nut
	Link Hinge Pin Set Screw	1654	Thread Retainer Lock Nut
457(830)	Rotating Hook Driving Shaft	1718	Needle Bar Frame Adjusting Bracket Screw
	Gear and Feed Lifting Eccentric		Lock Nut
	Set Screw (not illustrated)	1747	Bobbin Winder Spindle Positioning Bracket
458(830)	Feed Eccentric Set Screw		Adjusting Screw Nut
458(830)	Feed Regulator and Feed Reversing	2070	Presser Bar Spring Washer
	Shaft Crank Hinge Stud Set Screw	2102	Tension Disc

MACHINE PARTS FOR 366K125 MACHINE

<u>Part No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Description</u>
2455	Bobbin Winder Thread Tension Disc	16460	Feed Lifting Rock Shaft Bushing (back)
2974	Rotating Hook Bobbin Case Latch Lever	16460	Feed Rock Shaft Bushing (back)
	Fulcrum Pin	16461	Feed Lifting Rock Shaft Bushing (front)
2975	Rotating Hook Bobbin Case Latch Spring	16461	Feed Rock Shaft Bushing (front)
8879	Arm Spool Pin Washer (cloth)	16463	Feed Lifting Rock Shaft Collar with two 460(830)
12329	Tension Releasing Lever Spring		Feed Rock Shaft Collar with two 460(830)
12398	Tension Releasing Lever Hinge Pin	16463	Needle Bar Frame Crank Shaft Collar with two 460(830)
16360	Rotating Hook Driving Shaft Gear and Feed Lifting Eccentric (internal teeth) with 457(830) and 1125(830)	16463	Feed Lifting Rock Shaft Crank with two 141207(805)
16361	Rotating Hook Driving Shaft Oil Filter Wick Holder	16465	Feed Regulator and Reversing Lever with 1389(830) and 141207(805)
16362	Rotating Hook Driving Shaft Oil Filter Wick Holder 16361 with 149152	16467	Feed Regulator and Reversing Lever 16467 with 16469, 16470, 16472, 81805 to 81807, 81810 and two 51369(819)
16366	Rotating Hook Shaft Bushing	16468	Feed Regulator and Reversing Lever Handle Slide
16367	Rotating Hook Shaft Bushing complete Nos. 16366, 16368, 16369, 21117, 81450, 270044, 276059 and two 207(804)	16469	Feed Regulator and Reversing Lever Handle Thumb Nut
16368	Rotating Hook Shaft End Bearing	16470	Stitch Indicator
16369	Rotating Hook Shaft Oil Regulating Screw	16472	Feed Regulator Lever and Feed Reversing Crank with 1389(805) and two 141207(805)
16372	Stitch Indicator Plate and Cover	16474-001	Feed Regulator Lever and Feed Reversing Crank Hinge Pin
16373	Stitch Indicator Stop Plate (adjustable, back)	16475	Feed Regulator Lever and Feed Reversing Crank Hinge Pin Bushing (back)
16374	Stitch Indicator Stop Plate (adjustable, front)	16476	Feed Regulator Lever and Feed Reversing Crank Hinge Pin Bushing (front)
16377	Thread Retainer	16477	Feed Regulator and Feed Reversing Mechanism Support Link
16378	Thread Take-up Lever Guard	16478	Needle Feed Driving Mechanism Support Link
16379	Thread Take-up Lever Guard Oil Return Felt	16479	Feed Regulator and Feed Reversing Mechanism Support Stud
16380	Oil Return Tube Lint Screen and Needle Bar and Presser Bar Bushing Wick	16479	Needle Feed Driving Mechanism Support Link Hinge Stud
16407	Arm Shaft (horizontal) Bevel Gear (right hand, spiral) with 1036(830) and 140346(830)	16480	Feed Regulator and Feed Reversing Shaft
16408	Arm Shaft (upright)	16481	Feed Regulator and Feed Reversing Shaft Bushing (back)
16411	Arm Shaft (upright) Bevel Gear (lower, right hand spiral) with two 1036(830)	16483	Feed Regulator and Feed Reversing Shaft Crank (front) with 458(830) and 141207(805)
16411	Arm Shaft (upright) Bevel Gear (upper, right hand spiral) with two 1036(830)	16483	Needle Feed and Needle Feed Reversing Shaft Crank (front) with 458(830) and 141207(805)
16412	Arm Shaft (upright) Bushing (lower)	16484	Feed Regulator and Feed Reversing Shaft Crank Hinge Stud
16412	Arm Shaft (upright) Bushing (upper)	16484	Needle Feed and Needle Feed Reversing Shaft Crank (front) Hinge Stud
16416	Belt Cover (bottom half) Rest Pad	16486	Feed Regulator and Feed Reversing Shaft Crank Link with 457(830)
16423	Arm Shaft (horizontal) Flanged Bushing (back)	16486	Needle Feed Driving Connection Crank Link with 457(805)
16425	Oil Pump (centrifugal) Body	16487	Feed Regulator and Feed Reversing Shaft Crank Link Wearing Disc
16427	Rotating Hook Driving Shaft Bevel Gear	16487	Needle Feed Driving Connection Crank Link Wearing Disc
16428	Rotating Hook Driving Shaft	16489	Feed Regulator and Feed Reversing Shaft Spring Adjusting Collar with two 183(806)
16429	Rotating Hook Driving Shaft 16428 with two 16362	16493	Feed Reversing Lever Connection
16430	Rotating Hook Driving Shaft Bushing (back)	16493	Needle Feed and Needle Feed Reversing Connection
16431	Rotating Hook Driving Shaft Bushing (front)	16494	Feed Reversing Lever Connection Hinge Stud
16432	Rotating Hook Driving Shaft Bushing (intermediate)	16494	Needle Feed and Needle Feed Reversing Connection Hinge Stud
16438	Feed Bar Hinge Pin (eccentric) Lubricating Felt	16495	Feed Reversing Lever, Needle Feed and Needle Feed Reversing Lever Connection Hinge Stud
16441	Feed Bar Lifting Crank with 141207(805)	16498	Feed Reversing Lever Crank (lower) with two 141207(805)
16442	Needle Feed Driving Connection	16498	Needle Feed and Needle Feed Reversing Shaft Crank (back) with two 141207(805)
16443-002	Feed Driving Connection	16709	Arm Side Shield Wick Spring Holder
16445	Arm Top Cover (back) Gasket		
16448	Feed Driving Connection Crank Hinge Stud		
16448	Needle Bar Frame Crank (back) Hinge Stud		
16449	Feed Driving Connection Link		
16449	Needle Feed Driving Connection Link		
16450	Feed Driving Connection Sleeve Bearing Wearing Disc		
16450	Feed Lifting Connection Sleeve Bearing Wearing Disc		
16453	Feed Eccentric with two 458(830)		
16455	Feed Lifting Connection		
16456	Feed Lifting Connection Hinge Stud		
16459	Feed Lifting Rock Shaft with 20830		

MACHINE PARTS FOR 366K125 MACHINE

<u>Part No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Description</u>
17182	Feed Rock Shaft	32574	Tension Releasing Pin
17183	Knee Lifter Lifting Link	40392	Rotating Hook Bobbin Case Latch
17184	Knee Lifter Lifting Rod	40393	Rotating Hook Bobbin Case Latch Hinge
17191	Machine Pulley, 3-5in. rim diameter 'V'		Nos. 2974, 40392 and 125320
	Belt groove 2-9in. diam. with two	40394	Rotating Hook Bobbin Case Tension Spring
	51283(830)	43808	Bobbin Winder Thread Tension Spring
17192	Oil Tube (from Oil Pump to Arm Shaft	50073(809)	Face Plate Screw
	(horizontal) Bushing) (centre)	50123(805)	Oil Pump (centrifugal) Impeller Locking
17195	Oil Tube Insert for (Arm Shaft		Screw
	(horizontal) Bushing) (centre)	50177(805)	Arm Screw (front)
17298	Oil Tube (for oiling Rotating Hook	50193(805)	Belt Cover (bottom and top half) Fixing
	Shaft Bearings)		Screw
17299	Oil Tube (for oiling Rotating Hook	50193(803)	Needle Bar Frame Adjusting Bracket Support
	Drive Shaft Bushing) (front)		Stud Screw
17300	Oil Tube (for oiling Rotating Hook	50203(830)	Presser Bar Guide Bracket Clamping Screw
	Drive Shaft Bushing) (intermediate)	50305(803)	Tension Stud Set Screw
17586	Oil Return Tube (from needle head cavity	50429(805)	Bobbin Winder Pulley Set Screw
	to pump cover)	50555(805)	Arm Shaft (horizontal) Plug Screw
17589	Pair of Gears for Lower Shaft, Nos.	50608(809)	Arm Hole Plug Screw (top of Arm)
	16411 and 16427 (for agents only)	50623(805)	Oil Pump (centrifugal) Screen Frame Screw
17590	Pair of Gears for Upper Shaft, Nos.	51220	Bobbin Winder Spindle Positioning
	16411 and 16407 (for agents only)		Bracket Stud Set Screw
17594	Presser Bar Lifting Stud	51282(809)	Bed Slide Spring Screw
17595	Presser Bar Lifting Stud Bushing	51283(830)	Machine Pulley Set Screw
17596	Presser Bar Lifting Stud Lifting Lever	51369(809)	Stitch Indicator Screw
17597	Presser Bar Lifting Bracket	51384(809)	Thread Take-up Lever Guard and Thread
17599	Pressure Regulating Thumb Screw and		Eyelet and Thread Guard Screw (front of
	Presser Bar Guide		Arm)
20789	Arm Shaft (horizontal) Bushing (centre)	51384(809)	Thread Take-up Lever Guard Screw (upper)
20791	Arm Shaft (horizontal) Flanged Bushing	52083	Thread Take-up Spring Regulator with
	(front)		50305(803)
20822	Oil Return Tube (from needle head cavity	52130	Thread Take-up Lever Thread Eyelet
	to pump cover) Retaining Clamp (cavity		Bushing
	end)	52239	Arm Spool Pin and Thread Eyelet
20830	Feed Lifting Rock Shaft Oil Wick Clamping	52390	Presser Foot Shank
	Plug	52394	Thread Take-up Spring
20830	Feed Rock Shaft Oil Wick Clamping Plug	52426	Presser Foot Plate
20830	Needle Bar Frame Crank Shaft Oil Wick	52427	Presser Foot (spring hinged) complete Nos.
	Clamping Plug		26231, 52390, 52426 and 62527
20845-001	Bed Hole Plug (right, centre)	62527	Presser Foot Hinge Pin
20845-002	Bed Hole Plug (right, front)	81416	Arm Top Cover (back) Oil Sight Dome
21056	Bobbin Winder Pulley with two 50429(805)	81439	Bobbin Winder Thread Tension Thread
21057	Bobbin Winder Pulley Friction Ring		Guide
21065	Bobbin Winder Spindle Engaging Lever	81450	Rotating Hook Shaft Oil Regulating Screw
	Stud		Lock
21069	Bobbin Winder Spindle Engaging Lever	81484	Rotating Hook Shaft Oil Filter Wick Holder
	Stud Cam Pin (spiral)	81801	Arm Shaft (horizontal) Flanged Bushing
21073	Bobbin Winder Spindle Positioning		(back) Oil Sump Tube
	Bracket Stud	81803	Belt Cover (bottom half) Locating Pad
21075	Bobbin Winder Spindle Positioning		(small)
	Bracket Tension Spring Stud	81805	Feed Regulator and Reversing Lever Handle
21076	Arm Top Cover	81806	Feed Regulator and Reversing Lever Spring
21077	Arm Top Cover complete Nos. 21056,	81807	Feed Regulator and Reversing Lever Handle
	21057, 21065, 21069, 21073, 21075,		Spring End Bearing
	21076(728), 81416, 86990, 87090, 87091,	81810	Feed Regulator and Reversing Lever Handle
	87092, 93913, 93959 and two 151527		Retaining Pin
21079	Oil Tube (for oiling Rotating Hook and	86987	Belt Cover complete Nos. 81803, 87087(728)
	Hook Shaft Bearings) Retaining Clamp		87088(728) two 50193(809) and three 16416
21081	Oil Return Tube (from needle head cavity	86990	Bobbin Winder Spindle Oil Sling Washer
	to pump cover) Retaining Clamp (pump end)		(felt)
21109	Bed Leg (back)	86991	Knee Lifter Lifting Rod Washer (felt)
21112	Feed Bar Hinge Pin (eccentric) Lubricat-	86992	Knee Lifter Lifting Rod Washer (steel)
	ing Felt Retaining Plug	87087	Belt Cover (bottom half)
21116	Rotating Hook Shaft Oil Filter Wick	87088	Belt Cover (top half)
21117	Rotating Hook Shaft Oil Filter Wick	87090	Bobbin Winder Spindle Engaging Lever with
	Holder complete, Nos. 21116 and 81484		198(819)
22557	Magnet	87091	Bobbin Winder Spindle Engaging Lever Stud
22558	Magnet Retaining Clamp		Cam
22559	Magnet 22557 with 22558(813)	87092	Bobbin Winder Spindle Positioning Bracket
26231	Presser Foot Spring	87268	with 1747 and 109902
			Bobbin Winder Pulley Friction Ring Driving
			Hub Securing Ring for 87269

MACHINE PARTS FOR 366K125 MACHINE

<u>Part No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Description</u>
87269	Bobbin Winder Pulley Friction Ring	93561	Needle Bar Frame Adjusting Bracket Screw
	Driving Hub (two pieces) with 87268		Wearing Button
	(for agents only)	93562	Needle Bar Frame Adjusting Bracket
88545	Arm Side Cover (back)	93591	Oil Wick Holder with two 147141
88546	Arm Side Cover (back) Gasket	93913	Bobbin Winder Spindle
88548	Arm Thread Shield	93930	Feed Bar Hinge Pin (eccentric) Thrust
88549	Face Plate		Washer
88550	Face Plate 88549 with 95799	93944	Knee Lifter Lifting Rod Spring
88551	Face Plate Gasket	93957	Needle Bar Frame Oil Retainer Collar with
88555	Knee Lifter Rock Frame Shaft		735(830)
88556	Knee Lifter Rock Frame Shaft Connection	93959	Bobbin Winder Spindle Positioning Bracket
	(back)		Tension Spring
88558	Needle Bar (hollow) complete, 88898 with	93969	Feed Bar
	140036(803) and 149235-003	93970	Feed Bar 93969 with 16438, 16441, 272110,
88561	Needle Bar Frame with 465(830)		272111, 272115, 502541, 502710, two each
88562	Needle Bar Frame Setting Bar (gauge)		1423(830) and 93930
	(not illustrated)	93982	Thread Take-up Lever Link Hinge Stud with
88564	Needle Bar Frame Crank Shaft		147074
88565	Needle Bar Frame Crank Shaft 88564 with	93996	Arm Hole (back) Plug Screw Washer (for
	20830 and 88568		access to Knee Lifter Hinge Screw)
88566	Needle Bar Frame Crank Shaft Bushing	93996	Arm Hole (back) Plug Screw Washer (for
	(back)		access to Needle Feed and Reversing
88567	Needle Bar Frame Crank Shaft Bushing		Shaft)
	(front)	95788	Oil Return Tube Guide Spring (not illustrated)
88568	Needle Bar Frame Crank Shaft Oil Wick	98714	Oil Tube Insert
88569	Needle Bar Frame Hinge Stud	98715	Oil Tube Insert Collar
88570	Needle Bar Frame Hinge Stud Bushing	98716	Oil Tube Insert Spring
88573	Needle Feed Driving Eccentric with two	95799	Face Plate Plug
	1259(830)	98771	Oil Return Tube Arm Hole Plug (not
88574	Needle Feed and Needle Feed Reversing		illustrated)
	Shaft	98787	Thread Take-up Crank with Thread Take-up
88575	Needle Feed and Needle Feed Reversing		Lever, with 149160 and eighteen 143056
	Shaft Bushing (back)		(for agents only)
88576	Needle Feed and Needle Feed Reversing	98788	Thread Take-up Crank with Thread Take-up
	Shaft Bushing (front)		Lever, complete, Nos. 90439, 149028,
88578	Presser Bar Guide Bracket with 50203(830)		149160 and eighteen 143056
88590	Needle Bar Frame Adjusting Bracket	98789	Thread Take-up Crank with Thread Take-up
	Support Stud		Lever complete, Nos. 93982 and 98786
88592	Arm Top Cover (front)		(for agents only)
88593	Arm Top Cover (front) Gasket	98803	Arm Side Shield
88596	Thread Eyelet and Thread Guard (front of	98805	Needle Bar Frame Oil Retainer Felt Pad
	Arm)		(upper)
88598	Needle Bar Frame 88561 with 98995 (not	98805	Needle Bar Frame Oil Retainer Felt Pad
	illustrated)		(lower)
88898	Needle Bar	98807	Needle Bar Frame Oil Retainer with 98805
90092	Bobbin Winder Thread Tension Stud	98808	Needle Bar Frame Oil Retainer 98807 with
90093	Bobbin Winder Thread Tension complete,		147074
	Nos. 1562(819), 43808, 90092(819) and	98992	Thread Retainer (lower) Eyelet
	two 2455	98995	Needle Bar Frame Connecting Link with
90100	Oil Tube Retainer Clip (upright)		88568
90430	Tension Releasing Lever Body	106526-001	Bed Slide
90431	Tension Releasing Lever Segment	106527-001	Bed Slide, complete, Nos. 106526-001,
90432	Tension Releasing Lever Body 90430 with		189625 and two 51282(819)
	217(833) and 90431	109873(805)	Arm and Bed Leg (back) Screw
90439	Thread Take-up Crank with 140231(803)	109902	Bobbin Winder Spindle Positioning Bracket
	147492-002 and eighteen 143056		Adjusting Screw
90450	Arm Side Shield complete Nos. 16709,	109951(830)	Needle Bar Frame Connecting Link Hinge
	98803 and 147008		Stud Wedge Screw
93218	Rotating Hook (air cooled) 149172 with	109952(830)	Needle Shaft (hor.) Bevel Gear Positioning and
	21117 and 149063 (for agents only)		Bobbin Winder Friction Ring Driving Hub Screw
93220	Rotating Hook (air cooled) 149141	109955(830)	Needle Bar Frame Adjusting Bracket Screw
	with 21117 (for agents only)	109995(830)	Arm Shaft (upright) Bushing (upper) Set
93510	Needle Bar Frame Crank (back) with two		Screw
	141207(805)	125320	Rotating Hook Bobbin Case Latch Lever
93510	Needle Bar Frame Crank (front) with	140036(803)	Needle Bar Thread Guard Screw
	two 141207(805)	140231(803)	Needle Bar Connecting Link Cap Screw
93512	Feed Lifting Rock Shaft Oil Seal	140232(813)	Oil Wick Holder Screw
93512	Feed Rock Shaft Oil Seal	140239(830)	Needle Set Screw
93513	Needle Bar Frame Connecting Link Hinge	140279(830)	Arm Shaft (horizontal) Flanged Bushing
	Stud Wedge		(front) Set Screw
93516	Arm Shaft (horizontal) with Needle Bar	140279(830)	Thread Take-up Lever Link Hinge Stud
	Crank, with 1036(830) and 140542(830)		Set Screw

MACHINE PARTS FOR 366K125 MACHINE

<u>Part No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Description</u>
140304(809)	Arm Hole (back) Plug Screw (for access to Knee Lifter Hinge Screw)	147070	Thread Take-up Crank Clamping Screw Hole Plug Screw Gasket
140304(809)	Arm Hole (back) Plug Screw (for access to Needle Feed and Reversing Shaft)	147074	Needle Bar Frame Oil Retainer Oil Wick
140331(830)	Arm Shaft (horizontal) Flanged Bushing (back) Set Screw	147074	Thread Take-up Lever Link Hinge Stud Oil Wick
140390(830)	Presser Foot Screw	147141	Oil Wick, 11ins. long
140410(830)	Arm Shaft (upright) Bushing (lower) Set Screw	147151	Tension Releasing Disc
140542(830)	Needle Bar Crank Position Screw	147152	Tension Spring
140610(809)	Arm Hole Plug Screw (for access to Arm Shaft (upright) Bevel Gear (upper))	147291	Presser Bar Spring
140610(809)	Knee Lifter and Reversing Rod Access Hole Plug Screw	147292	Tension Stud 140873(803) with two 1560(803) (for agents only)
140610(809)	Thread Take-up Crank Clamping Screw Hole Plug Screw	147293	Tension complete Nos. 32574, 52083, 52394, 147151, 147152, 147292 and two 2102 (for agents only)
140706(803)	Needle Bar Connecting Stud Clamping Screw	147468	Arm Shaft (horizontal) Thrust Collar with two 457(830)
140836(804)	Arm Shaft (horizontal) Screw (back)	147492-002	Needle Bar Connecting Link
140873(803)	Tension Stud	149028	Needle Bar Connecting Stud with 140706(803)
141004(869)	Needle Bar Frame Hinge Stud Set Screw	149060	Rotating Hook Bobbin Case
141202(805)	Arm Shaft (horizontal) Screw Plug (front)	149061	Rotating Hook Bobbin Case 149060 with 591(806) 1380(805) and 40394
141206(810)	Belt Cover Screw	149063	Rotating Hook Bobbin Case complete, Nos. 592(805), 2975, 40393 and 149061
141207(805)	Feed Bar Lifting Crank Pinch Screw	149064	Rotating Hook Bobbin Case Holder
141207(805)	Feed Driving Connection Crank Pinch Screw	149065	Rotating Hook Section
141207(805)	Feed Lifting Connection Hinge Stud Pinch Screw	149066	Rotating Hook Thread Guard
141207(805)	Feed Lifting Rock Shaft Crank Pinch Screw	149067	Slack Thread Regulator
141207(805)	Feed Regulator and Reversing Lever Pinch Screw	149139	Presser Bar (hollow)
141207(805)	Feed Regulator and Feed Reversing Shaft Crank (front) Pinch Screw	149141	Rotating Hook (air cooled) with 143301-001, and two 1253(830)
141207(805)	Feed Reversing Lever Connection Hinge Stud Pinch Screw	149142	Rotating Hook (air cooled) 149141 with 143351, 149066 and four 1053(805)
141207(805)	Feed Reversing Lever Needle Feed and Needle Feed Reversing Lever Connection Hinge Stud Pinch Screw	149145	Rotating Hook (air cooled) 149142 with 149065 and three 1367(805) (for agents only)
141207(805)	Feed Reversing Lever Crank (lower) Pinch Screw	149152	Rotating Hook Driving Shaft Oil Filter Wick
141207(805)	Needle Bar Frame Crank (back) Pinch Screw	149160	Thread Take-up Crank Wearing Plate
141207(805)	Needle Bar Frame Crank (front) Pinch Screw	149172	Rotating Hook (air cooled) 149142 with 149064, 149065 and three 1367(805)
141207(805)	Needle Feed and Needle Feed Reversing Connection Hinge Stud Pinch Screw	149224	Oil Wick Holder Plug (felt)
141207(805)	Needle Feed and Needle Feed Reversing Shaft Crank (back) Pinch Screw	149234-001	Needle Bar Timing Indicator
141207(805)	Needle Feed and Needle Feed Reversing Shaft Crank (front) Pinch Screw	149235-003	Needle Bar Thread Guard
141208(830)	Thread Take-up Crank Clamping Screw	151527	Bobbin Winder Spindle Positioning Bracket
143056	Needle Bar Connecting Link Roller Bearing (not illustrated)	151527	Retaining Ring
143056	Thread Take-up Lever Roller Bearing for 88581 and 88582 (not illustrated)	189625	Bobbin Winder Spindle Retaining Ring
143071	Oil Pump (centrifugal) Body Position Pin	200113(806)	Bed Slide Spring
143073	Oil Pump (centrifugal) Impeller	202302	Knee Lifter Lifting Rod Spring Collar
143074	Oil Pump (centrifugal) Screen	227227	Set Screw
143075	Oil Pump (centrifugal) Screen Frame	244071	Knee Lifter Lifting Rod Cotter Pin
143301-001	Rotating Hook Oil Wick (felt)	244071	Knee Lifter Lifting Rod Spring Collar with 200113(806)
143351	Rotating Hook Wiper	270010	Feed Driving Connection Link Hinge Pin
147008	Arm Side Shield Wick	270044	Oil Packing
147058	Presser Bar Bushing (lower)	270879	Needle Feed Driving Connection Link Hinge Pin Oil Packing
147070	Arm Hole Plug Screw Washer (for use with 140610(819))	270880	Rotating Hook Bobbin
147070	Knee Lifter and Reversing Rod Access Hole Plug Screw Gasket	272110	Rotating Hook Shaft Thrust Washer
		272111	Rotating Hook Oil Guard
		272115	Rotating Hook Shaft Bushing Bearing (short) Oil Packing Wick (not illustrated)
		272131	Feed Bar Connecting Link
		275055	Feed Bar Connecting Link Oil Wick Clamp
		275069	Feed Bar Connecting Link Oil Wick
		276059	Rotating Hook Bobbin Case Holder Position Bracket
		276046	Feed Dog (16teeth to the inch)
			Throat Plate
			Rotating Hook Shaft
			Feed Regulator and Feed Reversing Shaft Crank Hinge Stud Oil Packing (wick)

MACHINE PARTS FOR 366K125 MACHINE

<u>Part No.</u>	<u>Description</u>
276166	Feed Regulator and Feed Reversing Shaft Spring
276171	Feed Driving Connection Link Hinge Pin with 244071
276171	Feed Driving Connection Link Hinge Pin with 244071
276179	Feed Regulator and Feed Reversing Shaft Bushing (front)
500257(805)	Feed Bar Carrier Pinch Screw
502541	Feed Bar Hinge Pin (eccentric)
502559	Feed Bar Carrier
502710	Feed Bar Carrier 502559 with 500257(805) and two 624(833)

MACHINE PARTS FOR 366K126 MACHINEWHICH DIFFER FROM THOSE FOR 366K125 MACHINE

<u>Part No.</u>	<u>Description</u>
16376	Thread Eyelet and Thread Guard (front of Arm)
81820	Oil Wick Holder complete, with two 147141
98935	Arm Shaft (horizontal) with Needle Bar Crank, with 1036(830), 140542(830) and 141202(805)
99000	Needle Bar
99701	Needle Bar complete, Nos. 99000, 140036(803) and 149235-003
149211	Feed Dog

ACCESSORIES

<u>Part No.</u>	<u>Description</u>
8908	Wrench
11140	Wrench
12361-001	Machine Hinge Connection
25878	Guide
41400	Machine Rest Pin (wood)
50190(809)	Guide Thumb Screw
81351-003	One quart can filled with light grade stainless oil (Type C)
85318	Screwdriver
120440	Screwdriver
146057	Wrench (socket)
151559	Machine Rest Pad
228476	Screwdriver
270010	Bobbin

KNEE LIFTER PARTS

<u>Part No.</u>	<u>Description</u>
20819	Bell Crank Plunger
86988	Rock Shaft Knee Arm for 90477 and 93997
87018	Rock Shaft Spring for 90477 for all territories except United Kingdom
90477	Knee Lifter complete Nos. 86988, 87018, 93942, 147483, 228364, 502589 and 502720 for 16384 for all territories except United Kingdom
93942	Knee Lifter Rock Shaft Crank (complete) Nos. 500270(805), 500785(805) and 502590 for 90477 (for all territories except United Kingdom)
93948	Rock Shaft Crank with 140351(805) for 93998
93949	Rock Shaft Spring for 93997 for United Kingdom
93997	Knee Lifter complete Nos. 86988, 93998, 93949, 147483, 228364, 502589 and 502720 for 93999 for United Kingdom

KNEE LIFTER PARTS

<u>Part No.</u>	<u>Description</u>
93998	Rock Shaft Crank complete Nos. 93948, 500270(805) and 500785(805) for 93997 for United Kingdom
140351(830)	Knee Lifter Rock Shaft Stop Dog Pinch Screw for 147483
140351(805)	Rock Shaft Crank Pinch Screw for 93948
147483	Knee Lifter Rock Shaft Stop Dog with 140351(830) for 90477 and 93997
228364	Rock Shaft Knee Arm Plate with 350231(803) for 90477 and 93997
350231(803)	Rock Shaft Knee Arm Plate Set Screw for 228364
500249(805)	Rock Shaft Knee Arm Hub Pinch Screw for 502720
500266(805)	Rock Shaft Crank Pinch Screw for 502590
500270(805)	Rock Shaft Crank Stop Screw for 93942 and 93948
500785(805)	Rock Shaft Crank Stop Screw Nut for 93942 and 93948
502589	Rock Shaft for 90477
502590	Rock Shaft Crank with 500266(805) for 93942
502720	Rock Shaft Knee Arm Hub complete Nos. 502591 and two 500249(805) for 90477 and 93997

MACHINE BASE AND OIL RESERVOIR

16382	Machine Base and Oil Reservoir
16384	Machine Base and Oil Reservoir with Knee Lifter, complete, Nos. 90477 and 93164 for all territories except United Kingdom
17588	Machine Base and Oil Reservoir Gasket
81816	Machine Base and Oil Reservoir Isolating Pad (front)
86989	Machine Base and Oil Reservoir Isolating Pad (back)
88528	Machine Base and Oil Reservoir Isolating Pad (front, Face Plate End)
93164	Machine Base and Oil Reservoir 16382 with 17588, 20819, 88528, two each 81816 and 86989
93999	Machine Base and Oil Reservoir with Knee Lifter complete, Nos. 93164 and 93997 for United Kingdom.

THREAD UNWINDER

208(830)	Thread Guide Rod Screw
82538	Spool Pin Washer
150203	Spool Rest Cushion (felt)
200383(803)	Spool Rest Rod Set Screw
201018(803)	Spool Rest Set Screw
201528(808)	Spool Pin Nut
201696(808)	Thread Guide Lock Nut
225257	Spool Rest (for two spools) (flat) with 201018(803), two each 82538, 201528(808) and 228692
225258	Thread Unwinder (for two spools) complete Nos. 201696(808), 225257, 225324, 225326, 225388, 259658, two each 150203, 225391 and three wood screws $\frac{1}{8}$ " No.12
225322	Thread Guide Rod Washer
225324	Thread Guide Rod with 208(830) and 225322
225326	Thread Guide Position Cup
225388	Spool Rest Rod
225391	Thread Guide
228692	Spool Pin
259658	Spool Stand with 200383(803)

Foot Operated Feed Reversing Lever Kits
(not illustrated)
(available at extra charge)

<u>Part No.</u>	<u>Description</u>
4879	Chain Connecting Link for 4885
4881	Foot Treadle for 4885
4882	Foot Treadle Shaft for 4885
4883	Foot Treadle Spring for 4885
4884	Foot Treadle Stand for 4885
-	Foot Treadle Stand Wood Screw, 1" No. 16 F.H. for 4885
4885	Foot Treadle Complete, Nos. 4879, 4881 to 4884 and two wood screws 1" No. 16 F.H. for 93912
6439-004	Chain (45" long) with 56864 and 56865 for 93911 and 93912
56864	Chain Hook (large) for 6439-004
56865	Chain Hook (small) for 6439-004
93575	Foot Operated Feed Reversing Lever for 93911 and 93912
93911	Foot Operated Feed Reversing Lever Kit complete, Nos., 6439-004, 93575 and 109519(830), for machines fitted to a Stand or other equipment which already includes a suitable Foot Treadle
93912	Foot Operated Feed Reversing Lever Kit complete, Nos. 4885, 6439-004, 93575 and 109519(830) for machines fitted to a Stand or other equipment which does not include a suitable Foot Treadle.
109519(830)	Foot Operated Feed Reversing Lever Securing Screw for 93911 and 93912