

Form 18900, Revised
(1037)
Printed in U. S. A.

LIST OF PARTS



MACHINE No. 44-10

*** A TRADE-MARK OF

THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling and when in continuous use, "TYPE B" or "TYPE D" OIL, sold only by Singer Sewing Machine Company, should be applied at least twice each day to all oil holes marked "OIL".

INDEX

	Page
Accessories.....	12
Ball Bearing Roller Pressers.....	15
Ball Bearing Roller Pressers with Ratchet Brake.....	16
Belt Guard.....	12
Bobbin Winder.....	19
Finger Guard.....	13
Foot Lifter Parts.....	18
Knee Lifter Parts.....	17
Machine Base.....	12
Machine No. 44-10.....	5
Numerical List of Parts.....	21
Obsolete Parts.....	20
Plain Roller Pressers.....	15
Thread Lubricator.....	13
Thread Unwinder.....	19

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the part NUMBER in the FIRST column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A-Hardened, Polished, Nickel Plated and Buffed
- B-Polished, Nickel Plated and Buffed
- C-Hardened Only
- D-Polished Only
- E-Soft, Not Polished
- F-Hardened and Polished
- F.J-Hardened, Polished and Nickel Plated
- G-Bright Rumbled and Nickel Plated
- H-Blued
- J-Nickel Plated Only
- K-Hardened and Nickel Plated
- L-Brass Plated
- M-Oxidized
- N-Japanned, Dull
- P-Japanned, Bright
- R-Merlized
- S-Cadmium Plating
- T-Copper Plated
- T.A-Hardened, Polished, Copper and Nickel Plated and Buffed
- T.B-Copper and Nickel Plated and Polished
- T.J-Copper and Nickel Plated Only
- T.K-Hardened, Copper and Nickel Plated
- T.L-Copper and Brass Plated
- T.M-Copper Plated and Oxidized
- U-Zinc Plated
- V-Silver Plated
- W-Polished and Nickel Plated
- X-Black Oxide, for Iron and Steel
- X.C-Hardened and Black Oxide, for Iron or Steel
- Y-Black Nickel Plated Only
- Z-Chromium Plated
- Z.A-Hardened, Polished, Nickel Plated, Buffed and Chromium Plated
- Z.B-Polished, Nickel Plated, Buffed and Chromium Plated
- Z.C-Hardened and Chromium Plated
- Z.J-Nickel and Chromium Plated

These letters MUST BE USED when they appear in the list; and AFTER the number as in the list.

In this series:

- 1 to 1500, 50001 to 51500 and 140001 to 142000 are Screw Numbers
- 1501 to 1800 and 51501 to 51800 are Nut Numbers
- 1801 to 2000 and 51801 to 52000 are Roller Numbers
- 2001 to 50000 and 52001 to 140000 and 140001 to 190000 are Sewing Machine Parts, 190001 and upward are numbers of Electrical Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are NOT TO BE USED in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

LIST OF PARTS COMPLETE FOR



MACHINE No. 44-10

FOR LEATHER. DROP FEED. ROLLER PRESSER.

No.	Plate	Name
*62603	----	Arm with 11104, 15404 and two 15405.....
8582	8387	" Dowel Pin.....
12453	8387	" Oil Tube, for oiling intermediate bearing.....
15783	8387	Arm Oil Tube, for 11119.....
11119	8387	" " " 15783 with 52045, for oiling 12408.....
12454	8387	Arm Oil Tube with 132590, for oiling 12409.....
24131	8387	Arm Oil Tube with 52045, for oiling 12197
132590	8387	" " " Packing (wick) for 12454...
52045	8387	" " " " " 11119 and 24131.....
748E	8387	Arm Screw (back).....
868E	8387	" " (front).....
16511	8388	" Shaft.....
*62545	----	" " 16511 with 12197 and 20188....

No.	Plate	Name
*62636	----	Arm Shaft 62545 with 20197.....
*11104	----	" " Bushing (front).....
12357	8388	" " Flanged Bushing (back).....
448C	8387	" " " " " Set Screw
144D	8387	" " Screw.....
12480	8388	" Side Cap.....
219J	8387	" " " Screw.....
12193	8388	" " Cover.....
51224D	8387	" " " Thumb Screw.....
52239	22479	" Spool Pin and Thread Eyelet.....
11241	8388	" " " Washer (cloth).....
24296	8388	Balance Wheel (power) light rim, 2-3/16 in. pulley, with two 448C.....
24297	8388	Balance Wheel Oil Cover.....
210J	8387	" " " " Screw.....
448C	8387	" " Set Screw.....
*16503	----	Bed.....
20197	8388	Crank Connecting Rod with two 896C.....
896C	8387	" " " Cap Screw.....
908C	8387	" " " Hinge Screw.....
1619E	8387	" " " " " Nut.....
12366	----	Face Plate.....
*44181	----	" " Thread Guard (lower).....
12150	8387	" " " " " 44181 with 12152.....
12152	8387	Face Plate Thread Guard (lower) Rivet....
45720	22479	" " " " (upper) with 125373.....
125373	22479	Face Plate Thread Guard (upper) Rivet....
12367	8389	Face Plate complete, Nos. 12150, 12366 and 45720.....
190J	8387	Face Plate Screw.....
51224D	8387	" " Thumb Screw.....
12368	8389	Feed Bar.....
313C	8387	" " Screw Center.....
56813	----	" " " " 313C with 1519J....
1519J	8387	" " " " Nut.....
12197	8389	" Cam and Feed Lifting Eccentric with 446C.....
446C	8387	Feed Cam and Feed Lifting Eccentric Set Screw.....
52165	22479	Feed Connecting Link.....
375C	8390	" " " Hinge Screw.....
1518E	8390	" " " " " Nut.....
12436	8391	" Dog, 11 teeth (18 teeth to the inch) for 12438, 12452 and 20192.....

Note: No. 12436 is sent with this Machine unless
another Feed Dog is specified on order.

20323	8391	Feed Dog, 8 teeth (12 teeth to the inch) for 12438, 12452 and 20192.....
-------	------	---

No.	Plate	Name
20011	8391	Feed Dog, 11 teeth (18 teeth to the inch) for 20012 and 20293.....
62890	8391	Feed Dog (spiked teeth) for 12438, 12452 and 20192.....
208C	8391	Feed Dog Screw.....
12123	8389	" Forked Connection.....
375C	8390	" " " Hinge Screw.....
1518J	8390	" " " " " Nut.....
43994	----	Feed Forked Connection complete, Nos. 12123, 52165, 56886 and two each 375C and 1518J.....
16504	8392	Feed Lifting Rock Shaft.....
16556	8390	" " " " Crank (back) with 462C.....
3093	8390	Feed Lifting Rock Shaft Crank (back) Pin.
462C	8390	" " " " " " Set Screw.....
12376	8390	Feed Lifting Rock Shaft Crank (front) with 157J and 1813.....
157J	8390	Feed Lifting Rock Shaft Crank (front) Clamping Screw.....
1813	8390	Feed Lifting Rock Shaft Crank (front) Roller and Stud.....
16588	----	Feed Lifting Rock Shaft complete, Nos. 3093, 12376, 16504 and 16556.....
43976	8389	Feed Lifting Rock Shaft Crank Connecting Rod with two 966E.....
966E	8390	Feed Lifting Rock Shaft Crank Connecting Rod Cap Screw.....
375C	8390	Feed Lifting Rock Shaft Crank Connecting Rod Hinge Screw.....
1518E	8390	Feed Lifting Rock Shaft Crank Connecting Rod Hinge Screw Nut.....
307C	8390	Feed Lifting Rock Shaft Screw Center.....
56814	----	" " " " " " 307C with 1513J.....
1513J	8390	Feed Lifting Rock Shaft Screw Center Nut.
3039	8389	" Regulator.....
56886	----	" " 3039 with 818D.....
1128E	8390	" " Hinge Screw.....
818D	8390	" " Thumb Screw.....
16506	8392	" Rock Shaft.....
29633	8390	" " " Crank with 157J.....
157J	8390	" " " " Clamping Screw.....
24376	----	Feed Rock Shaft complete, Nos. 16506 and 29633.....
307C	8390	Feed Rock Shaft Screw Center.....
56814	----	" " " " " 307C with 1513J
1513J	8390	" " " " " Nut.....
12448	8392	Needle Bar (hollow).....

No.	Plate	Name
19229	8392	Needle Bar (hollow) for high lift.....
*12382	8389	" " Connecting Link with 794E.....
43997	----	" " " " 12382 with 12384
794E	8390	" " " " Adjusting Screw.
*12383	----	" " " Stud.....
1904	8390	" " " " Roller (roller only).....
453C	8390	Needle Bar Connecting Stud Set Screw.....
12384	8389	Needle Bar Connecting Stud complete, Nos. 453C, 1904 and 12383.....
20188	8389	Needle Bar Crank with 858C with 1065C....
1065C	8390	" " " Position Screw.....
858C	8390	" " " Set Screw.....
936E	8390	" " Screw Bushing.....
2166	8390	" " Thread Guard.....
233J	8394	" " " " Screw.....
2167	8394	" Clamp with 196F.....
196F	8394	" " Screw.....
44222	8393	Oil Cup.....
44223	8393	" " 44222 with 44005.....
44214	----	" " Extension.....
44005	8393	" " " 44214 with 24075.....
24075	8393	" " " Post.....
44006	8393	" " Packing (felt).....
44224	8393	" " Thread Retainer.....
44225	8393	Oil Cup complete, Nos. 44006, 44223 and 44224.....
*24104	8389	Oscillating Rock Shaft.....
12388	8389	" " " Hinge Pin.....
448C	8387	" " " " " Set Screw
4784	8393	" " " Oil Pad (felt)....
24105	----	Oscillating Rock Shaft complete, Nos. 4784 12388 and 24104.....
139602	----	Oscillating Rock Shaft 24105 with 908C...
16509	8392	" Shaft.....
19496	----	" " Crank for 19447.....
44134	----	" " " " 44135.....
2049	8396	" " " Pin.....
457C	8394	" " " Set Screw for 19447
453C	8390	" " " " " 44135
19448	8394	" " " Slide Block.....
226J	8394	" " " " " Cap Screw
12424	8394	" " " " " " "
		Washer.....
988C	8394	Oscillating Shaft Crank Slide Block Screw Stud.....
1518E	8390	Oscillating Shaft Crank Slide Block Screw Stud Nut.....
19449	8394	Oscillating Shaft Crank Slide Block complete, Nos. 226J, 988C, 12424 and 19448

No.	Plate	Name
19447	8394	Oscillating Shaft Crank complete, Nos. 457C, 1518E, 19449 and 19496.....
44135	8394	Oscillating Shaft Crank complete, Nos. 1518E, 19449, 44134 and two 453C.....
19441	8392	Presser Bar (hollow).....
19464	----	Presser Bar complete, Nos. 190J, 19441 to 19443 and 24445.....
12326	8393	Presser Bar Guide Bracket with 453C.....
453C	8390	" " " " Set Screw.....
52016	8395	" " Lifter.....
689C	8395	" " " Hinge Screw.....
1520J	8394	" " " " Nut.....
12327	8394	" " Lifting and Releasing Lever Bracket.....
11167	8392	Presser Bar Spring (light) .051" wire....
Note: No. 11167 is sent with this Machine unless another Spring is specified on order.		
12139	8392	Presser Bar Spring (medium) .055" wire...
20023	8392	" " " (heavy) .063" wire...
11170	8395	" " " Washer.....
19165	8395	" Foot.....
Note: No. 19165 is sent with this Machine unless another Presser Foot is specified on order.		
20114	8395	Presser Foot.....
20271	8395	" " for beading or top stitching
20272	8395	" " shoe tips and gores.....
20273	8395	" " inside stays, for 3/64 in. to 1/4 in. gauge.....
20274	8395	Presser Foot for outside stays.....
190J	8387	" " Screw.....
688J	8396	Pressure Regulating Thumb Screw.....
1841	----	Roller, 7/8 in. diam., 9/64 in. face, fine with 652D and 1528J.....
62677	8395	Roller Arm for 62722.....
19442	8395	" " Bracket.....
19443	8395	" " " Position Collar with 456C.....
456C	8395	Roller Arm Bracket Position Collar Set Screw.....
987E	8395	Roller Arm Bracket Screw Stud.....
19444	8395	" " " Spring.....
19445	8395	" " " " Pin.....
19446	8395	" " " " Stud.....
24445	----	Roller Arm Bracket Spring Stud complete, Nos. 987E and 19444 to 19446.....
62722	8402	Roller Presser complete, 7/8 in. diam., 9/64 in. face, fine roller, Nos. 1841 and 62677.....

Note: No. 62722 is sent with this Machine unless another Roller Presser is specified on order.

No.	Plate	Name
190J	8387	Roller Presser Screw.....
652D	8403	" Screw for 1841.....
1528J	8396	" " Nut for 1841.....
2996	8396	Shuttle Bobbin.....
*62739	----	" " Case.....
15140	8396	" " " Latch.....
2973	8396	" " " " Lever.....
2974	8396	" " " " " Fulcrum Pin
2975	8396	" " " " Spring.....
592E	8396	" " " " Stop Screw.....
15141	8396	" " " Hinge, Nos. 2973, 2974 and 15140.....
*7553	8396	Shuttle Bobbin Case Position Finger.....
2523	8396	" " " " " Rivet
24412	8396	" " " " " Plate.....
391J	8402	" " " " " Screw.
62740	8396	Shuttle Bobbin Case complete, Nos. 591F, 592E, 2523, 2975, 7553, 15141, 15278 and 62739.....
12393	8396	Shuttle Body.....
591F	8403	" Tension Regulating Screw.....
15278	8396	" " Spring.....
19292	8397	" 1-11/16 in. diam., Nos. 2996, 12393 and 62740.....
*12394	----	Shuttle Driver.....
12444	8397	" " 12394 with two 1266C.....
2049	8396	" " Pin.....
1266C	8403	" " Set Screw.....
2531	8398	" Race Back.....
2532	8396	" " " Position Pin.....
2533	8396	" " " Spring.....
907D	8397	" " " " Screw.....
62902	----	" " Body.....
62907	----	" " " 62902 with 24418 and two 1053J.....
62908	22479	Shuttle Race Body 62907 with two 2532....
62909	----	" " " 62908 with two 391J....
24418	----	" " Cap.....
1053J	8397	" " " Screw.....
62906	22479	Shuttle Race complete, Nos. 907D, 2531, 2533, 24412 and 62909.....
145D	8397	Shuttle Race Screw.....
12431	----	" " Slide.....
4307	8392	" " " Spring.....
725J	8398	" " " " Screw.....
12432	8392	Shuttle Race Slide complete, Nos. 4307, 12431 and two 725J.....
2102	8398	Tension Disc.....
1560C	8398	" Regulating Thumb Nut.....
32572	8398	" Releasing Disc.....

No.	Plate	Name
43944	8398	Tension Releasing Lever.....
12398	8398	" " " Hinge Pin.....
12329	8398	" " " Spring.....
32574	8398	" " Pin.....
50327C	8398	" Screw Stud.....
44141	----	" " " 50327C with 1560C.....
43945	8398	" Spring.....
12149	8398	" Thread Guard.....
44118	----	Tension complete, Nos. 7336, 32572, 32574 43945, 43946, 44141 and two 2102.....
52454	8398	Thread Retainer.....
624C	8398	" " Set Screw.....
12404	8398	" Take-up Crank.....
3094	8398	" " " Wedge.....
690E	8398	" " " " Screw.....
12408	8397	" " Lever.....
775E	8398	" " " Cap Screw.....
12166	8398	" " " Hinge Pin.....
12409	8397	" " " Link.....
11204	8397	" " " " Hinge Pin.....
435C	8398	" " " " " " Set Screw.....
12410	----	Thread Take-up Lever complete, Nos. 12166 12408 and 12409.....
43946	8398	Thread Take-up Spring.....
7336	8397	" " " Regulator.....
448C	8387	" " " " Set Screw.
43990	----	Thread Take-up complete, Nos. 775E, 11204 12404, 12410 and 43997.....
12438	8391	Throat Plate, large oblong needle hole, for 12436, 20323 and 62890.....
Note: No. 12438 is sent with this Machine unless otherwise specified on order.		
20012	8391	Throat Plate, large oblong needle hole, for 20011.....
12452	8391	Throat Plate, small oblong needle hole, raised at needle hole for top stitching, for 12436, 20323 and 62890.....
20192	----	Throat Plate, small oblong needle hole, for 12436, 20323 and 62890.....
20293	----	Throat Plate, small oblong needle hole, for 20011.....
691F	8391	Throat Plate Screw.....
*15404	----	Trade Mark.....
15405	8398	" " Rivet.....
24079	8407	Drip Pan.....

ACCESSORIES

No.	Plate	Name
51075E	8399	Machine Hinge Bolt with 51581E.....
51581E	8394	" " " Nut.....
6055	8399	" " " Washer.....
12361	8399	" " Connection.....
44139	8399	" " Plate.....
44140	----	Machine Hinge complete, Nos. 12361, 44139 and wood screw 1-1/4 in. No. 14.....
44180	----	Machine Hinge complete, Nos. 6055, 12361, 44139 and 51075E.....
12405	8399	Machine Rest (felt).....
41400	8400	" " Pin (wood) 3-1/8 in. long...
120342	8400	Oiler (copper plated) with 120343.....
120343	8400	" Spout, 3-1/2 in. long.....
26026	8400	Screw Driver (machine).....
26485	8400	" " (shuttle tension).....
35018	8400	Tape Delivery Blade.....
8909	8400	Wrench for 1513, 1518 and 51581.....
4822	8400	" " 1521 and 1528.....
8908	8400	" " 1519 and 1520.....
19221	8400	" " 936 and 1619.....
22003	8400	" " 1550.....

MACHINE BASE

No.	Plate	Name
24106	8399	Bed Frame Cushion (felt).....
158E	8399	" " " Screw.....
24107	8399	" " Hinge Connection.....
9261	8399	" " " Pin.....
970D	8399	" " Thumb Screw.....
24108	8408	Bed Frame with 970D, two each 9261, 24107 four each 158E, 24106 and six wood screws 1-1/4 in. No. 12.....
24908	8407	Drip Pan with two wood screws 1/2 in. No. 5 R.H.B.....

BELT GUARD

No.	Plate	Name
41929	8408	Belt Guard.....
8418	8399	" " Button.....
3419	8399	" " " Washer (leather).....

No.	Plate	Name
8420	----	Belt Guard Button 8418 with 8419 and wood screw 1-1/4 in. No. 9 R.H.B.....
41930	8399	Belt Guard Hinge.....
41931	----	Belt Guard complete, Nos. 8420, 41929, two 41930 and four wood screws 3/4 in.No. 9.....

FINGER GUARD

No.	Plate	Name
120857	8397	Finger Guard.....
120858	8397	" " Holder with 50302J.....
50302J	8397	" " " Set Screw.....
236J	8397	" " Screw.....
120860	8397	Finger Guard complete, Nos. 120857, 120858 and two 236J.....

THREAD LUBRICATOR

No.	Plate	Name
62816	8393	Face Plate with 2827 and 12150.....
*44181	----	" " Thread Guard (lower).....
12150	8387	" " " " " 44181 with 12152.....
12152	8387	Face Plate Thread Guard (lower) Rivet....
2827	8387	" " " " (upper) with 8505
8505	8387	" " " " Rivet....
62817	----	Face Plate with Thread Lubricator complete, Nos. 1529E, 50222J, 62816, 62828 and two 21202.....
*62818	----	Thread Lubricator Bracket.....
62819	8397	" " Oil Pad (felt).....
*62820	----	" " " " Holder.....
*62821	----	" " " " " 62820 with 62823.....
62822	8393	Thread Lubricator Oil Pad Holder 62821 with 62819, 62824 and 62827.....
*62823	----	Thread Lubricator Oil Pad Holder Oil Tube
62824	8397	" " " " Retainer.....
*62830	----	" " " Reservoir.....
17822	8397	" " " " Rivet....
8068	8397	" " " " Washer (inside).....
124371	8397	Thread Lubricator Oil Reservoir Rivet Washer (outside).....

THREAD LUBRICATOR

No.	Plate	Name
62827	----	Thread Lubricator Oil Wick (braided cotton).....
62828	----	Thread Lubricator complete, Nos. 8068, 17822, 62818, 62822, 62830 and 124371
62829	8393	Thread Lubricator 62828 with 1529E, 50222J and two 21202.....
50222J	8397	Thread Lubricator Screw.....
21202	8397	" " " Friction Washer..
1529E	8397	" " " Nut.....

SINGER Needles should be used
in SINGER Machines.
These Needles and their Containers
are marked with the
Company's Trade-Mark "SIMANCO. **" 1

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. 2

PLAIN ROLLER PRESSERS

Diameter of Roller	9/16"	9/16"	7/8"	7/8"	1 1/4"	1 1/4"	1 1/4"
Face of Roller	3/32"	3/32"	9/64"	3/16"	9/64"	9/64"	3/16"
Knurl of Roller	coarse	fine	coarse	coarse	coarse	fine	coarse
Roller	51801	51802	1868	1895	1911	1912	1897
Roller Arm	24903	24903	62677	62677	16573	16573	24990
Roller Screw	388D	388D	652D	652D	386D	386D	386D
Roller Screw Nut	1550H	1550H	1528J	1528J	1528J	1528J	1528J
Roller Presser complete	24904	24905	62721	62680	16581	16582	62627

BALL BEARING ROLLER PRESSERS

Diameter of Roller	7/8"	1 1/4"
Face of Roller	9/64"	7/32"
Knurl of Roller	coarse	coarse
Roller complete	51902	51863
Roller Arm	62857	62747
Roller Ball	206417	16232
Roller Ball Retaining Nut	201699	1766C
Roller Screw	350104C	50553C
Roller Nut	1528J	1528J
Roller Presser complete	62868	62748

From the library of: Superior Sewing Machine & Supply LLC

BALL BEARING ROLLER PRESSERS WITH RATCHET BRAKE

Diameter of Roller	7/8"	7/8"	7/8"	7/8"	7/8"	1 1/4"	1 1/4"
Face of Roller	9/64"	3/32"	1/8"	1/8"	9/64"	7/32"	1/8"
Knurl of Roller	coarse	fine	coarse	fine	fine	coarse	coarse
Roller complete	51890	51912	51909	51907	51882	51894	51892
Roller Arm	62840	62840	62840	62840	62840	44274	62843
Roller Ball	206417	206417	206417	206417	206417	16232	16232
Roller Ball Retaining Nut	201699C	201699C	201699C	201699C	201699C	1766C	1766C
Roller Ratchet Spring Stop	62850	62850	62850	62850	62850	62853	62853
Roller Ratchet Spring Stop Bracket	62851	62851	62877	62851	62851	62851	62851
Roller Ratchet Spring Stop Bracket complete	62852	62852	62878	62852	62852	62854	62854
Roller Ratchet Spring Stop Bracket Screw	230F	230F	230F	230F	230F	230F	230F
Roller Ratchet Spring Stop Screw	665J	665J	665J	665J	665J	665J	665J
Roller Screw	350104C	350104C	350104C	350104C	350104C	50553C	50553C
Roller Screw Nut	1528J	1528J	1528J	1528J	1528J	1528J	1528J
Roller Presser complete	44276	62880	62891	62871	62842	44279	62849

From the library of: Superior Sewing Machine & Supply LLC

KNEE LIFTER PARTS

No.	Plate	Name
5596	8404	Bell Crank.....
56848	----	" " 5596 with 5599 and 5601.....
5599	8404	" " Bracket.....
178E	8403	" " " Screw.....
5601	8404	" " Hinge Pin.....
5735	8404	" " Spring.....
5598	8404	Bell Crank complete, Nos. 5735 and 56848.
16510	8404	Lifting Lever with 448C.....
12415	8404	" " Connecting Rod.....
12416	8404	" " " " Joint.....
76D	8403	" " " " " Hinge Screw.....
1521E	8403	Lifting Lever Connecting Rod Lock Nut....
802D	8404	" " Hinge Screw.....
12241	8404	" " Link.....
766D	8403	" " " Hinge Screw.....
12240	8404	" " Pin.....
448C	8387	" " " Set Screw.....
2759	8404	" Rod with 2761.....
2761	8404	" " Cap (washer).....
2762	8404	" " Collar with 362C.....
362C	8403	" " " Set Screw.....
2760	----	Lifting Rod complete, Nos. 2759 and 2762.
2763	8406	Rock Shaft.....
12242	8404	" " Hanger with two wood screws 1 in. No. 10.....
2765	8406	Rock Shaft Knee Arm.....
2766	8406	" " " " Hub with 356C.....
356C	8403	" " " " " Set Screw.....
2768	----	Rock Shaft Knee Arm complete, Nos. 2765 to 2767.....
2767	8406	Rock Shaft Knee Plate with 356C.....
356C	8403	" " " " Set Screw.....
2769	8404	" " Lifting Arm with 356C.....
356C	8403	" " " " Set Screw.....
6337	8406	" " " Bracket with two 356C.
2778	8406	" " " Hook.....
356C	8403	" " " " Set Screw
356C	8403	" " " " Set Screw.....
2770	8406	" " Stop Dog with 356C.....
356C	8403	" " " " Set Screw.....
2777	8406	Rock Shaft complete for 16512, Nos. 2763, 2768, 2770, 2778, 6337 and two 12242.
16512	----	Knee Lifter complete (power table) Nos. 76D, 766D, 802D, 1521E, 2777, 5598, 12240, 12241, 12415, 12416, 16510 and two 178E.....

FOOT LIFTER PARTS

No.	Plate	Name
5596	8404	Bell Crank.....
56848	----	" " 5596 with 5599 and 5601.....
5599	8404	" " Bracket.....
178E	8403	" " " Screw.....
5601	8404	" " Hinge Pin.....
5735	8404	" " Spring.....
5598	8404	Bell Crank complete, Nos. 5735 and 56848.
5670	----	Chain, length 26 in. to 35 in. with 56864 and 56865.....
Note: When ordering No.5670, state length required.		
56864	8404	Chain Hook (large).....
56865	8404	" " (small).....
4879	8404	" Connecting Link.....
16510	8404	Lifting Lever with 448C.....
12415	8404	" " Connecting Rod.....
12416	8404	" " " " " Joint.....
76D	8403	" " " " " Hinge Screw.....
1521E	8403	Lifting Lever Connecting Rod Lock Nut....
802D	8404	" " Hinge Screw.....
12241	8404	" " Link.....
766D	8403	" " " Hinge Screw.....
12240	8404	" " Pin.....
448C	8387	" " " Set Screw.....
2763	8406	Rock Shaft.....
12242	8404	" " Hanger with two wood screws 1 in. No. 10.....
6337	8406	Rock Shaft Lifting Bracket with two 356C.
12243	8406	" " " " " Hook, for 5598
7125	8406	" " " " " " 5670
356C	8403	" " " " " Set Screw
356C	8403	" " " " " Set Screw.....
2770	8406	" " Stop Dog with 356C.....
356C	8403	" " " " " Set Screw.....
4880	8406	Rock Shaft complete, Nos. 2763, 2770, 7125 12243 and two each 6337 and 12242....
4881	8406	Treadle.....
4882	8404	" Shaft.....
4883	8404	" Spring.....
4884	8406	" Stand.....
4885	8406	Treadle complete, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16.....
19331	----	Foot Lifter complete, Nos. 76D, 766D, 802D 1521E, 4880, 4885, 5598, 5670, 12240, 12241, 12415, 12416, 16510 and two 178E.....

THREAD UNWINDER

FOR ONE LARGE SPOOL OR ONE LARGE CONE OF THREAD

No.	Plate	Name
225259	8405	Spool Rest with 201018C.....
150203	8405	" " Cushion (felt).....
225388	8405	" " Rod.....
200383C	8403	" " " Set Screw.....
201018C	8403	" " Set Screw.....
202490	8405	" Stand with 200383C.....
225391	8405	Thread Guide.....
201696J	8403	" " Lock Nut.....
225326	22479	" " Position Cup.....
225324	8405	" " Rod with 208E and 225322....
208E	8391	" " " Screw.....
225322	8403	" " " Washer.....
225260	8405	Thread Unwinder complete, Nos. 150203, 201696J, 202490, 225259, 225324, 225326 225388, 225391 and three wood screws 7/8 in. No. 12.....
27739	8405	Thread Cone (wood) for large cones.....
225390	8405	" " Holder, for inverted cones...

Note: Nos. 27739 and 225390 are used with, but not included in 225260.

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

FOR POWER TABLE

No.	Plate	Name
225433	8406	Bobbin Winder and Tension Bracket Base...
225453	8393	Frame with 202277 and 225438.....
225454	8393	" Hinge Pin.....
202277	----	" Oil Packing (wick).....
225438	8403	" " Well Cap.....
225455	8403	" Spring.....
225456	8403	" " Plunger.....
202473	8406	Pulley with 200380C.....
200380C	8403	" Set Screw.....
225381	8393	Spindle.....
225444	8393	Stop Latch.....
200056E	8403	" " Screw.....
225458	8393	" " Thumb Lever.....

BOBBIN WINDER

No.	Plate	Name
225459	8403	Stop Latch Thumb Lever Hinge Stud.....
202478	8393	" " Trip Lever.....
200299H	8403	" " " " Hinge Screw.....
225461	8393	Tension Bracket with 201499B.....
200082D	8403	" " Screw.....
228026	----	" " " Washer.....
2102	8398	" Disc.....
202407	8403	" Spring.....
201499B	8393	" Stud.....
201572B	8403	" " Thumb Nut.....
225462	----	Tension Bracket complete, Nos. 201572B, 202407, 225461 and two 2102.....
225382	8406	Bobbin Winder (swinging automatic, right hand) complete, Nos. 200056E, 200082D 200299H, 202473, 202478, 225381, 225433, 225444, 225453 to 225456, 225458, 225462, 228026, two each 225459 and wood screws 3/4 in. No. 12 R.H.B.....

OBSOLETE PARTS

No.	Plate	Name
12403	8388	Arm Spool Pin and Thread Eyelet, use 52239
2827	8387	Face Plate Thread Guard (upper) with 8505
8505	8387	" " " " Rivet....
3033	8390	Feed Connecting Link, use 52165.....
24413	----	Shuttle Race Body, use 62902.....
62502	----	" " " 24413 with 24418 and two 1053J, use 62907.....
62517	8393	Shuttle Race Body 62502 with two 2532, use 62908.....
24419	8393	Shuttle Race complete, Nos. 907D, 2531, 2533; 24412, 62517 and two 391J, use 62906.....
28084	----	Machine Rest Pin.....

NUMERICAL
LIST
OF PARTS

NUMERICAL LIST OF PARTS

No.	Plate	Name
76D	8403	Lifting Lever Connecting Rod Joint Hinge Screw, for 16512 and 19331 (Foot and Knee Lifters).....
144D	8387	Arm Shaft Screw.....
145D	8397	Shuttle Race Screw.....
157J	8390	Feed Lifting Rock Shaft Crank (front) Clamping Screw, for 12376.....
157J	8390	Feed Rock Shaft Crank Clamping Screw, for 29633.....
158E	8399	Bed Frame Cushion Screw, for 24108.....
178E	8403	Bell Crank Bracket Screw, for 16512 and 19331 (Foot and Knee Lifters).....
190J	8387	Face Plate Screw.....
190J	8387	Presser Foot Screw, for 19464.....
190J	8387	Roller Presser Screw.....
196F	8394	Needle Clamp Screw, for 2167.....
208C	8391	Feed Dog Screw.....
208E	8391	Thread Unwinder Thread Guide Rod Screw, for 225324.....
210J	8387	Balance Wheel Oil Cover Screw.....
219J	8387	Arm Side Cap Screw.....
226J	8394	Oscillating Shaft Crank Slide Block Cap Screw, for 19449.....
230F	8402	Roller Ratchet Spring Stop Bracket Screw, for 44276, 44279, 62842, 62849, 62871 62880 and 62891.....
233J	8394	Needle Bar Thread Guard Screw.....
236J	8397	Finger Guard Screw, for 120860.....
307C	8390	Feed Lifting Rock Shaft Screw Center, for 56814.....
307C	8390	Feed Rock Shaft Screw Center, for 56814..
313C	8387	" Bar Screw Center, for 56813.....
356C	8403	Rock Shaft Knee Arm Hub Set Screw, for 2766 (Knee Lifter).....
356C	8403	Rock Shaft Knee Plate Set Screw, for 2767 (Knee Lifter).....
356C	8403	Rock Shaft Lifting Arm Set Screw, for 2769 (Knee Lifter).....
356C	8403	Rock Shaft Lifting Bracket Hook Set Screw for 6337 (Foot and Knee Lifters).....
356C	8403	Rock Shaft Lifting Bracket Set Screw, for 6337 (Foot and Knee Lifters).....
356C	8403	Rock Shaft Stop Dog Set Screw, for 2770 (Foot and Knee Lifters).....

NUMERICAL LIST OF PARTS

No.	Plate	Name
362C	8403	Lifting Rod Collar Set Screw, for 2762 (Knee Lifter).....
375C	8390	Feed Connecting Link Hinge Screw, for 43994.....
375C	8390	Feed Forked Connection Hinge Screw, for 43994.....
375C	8390	Feed Lifting Rock Shaft Crank Connecting Rod Hinge Screw.....
386D	8403	Roller Screw, for 1897, 1911 and 1912....
388D	8403	" " " 51801 and 51802.....
391J	8402	Shuttle Bobbin Case Position Plate Screw, for 62909.....
435C	8398	Thread Take-up Lever Link Hinge Pin Set Screw.....
446C	8387	Feed Cam and Feed Lifting Eccentric Set Screw, for 12197.....
448C	8387	Arm Shaft Flanged Bushing (back) Set Screw.....
448C	8387	Balance Wheel Set Screw, for 24296.....
448C	8387	Lifting Lever Pin Set Screw, for 16510 (Foot and Knee Lifters).....
449C	8387	Oscillating Rock Shaft Hinge Pin Set Screw.....
448C	8387	Thread Take-up Spring Regulator Set Screw
453C	8390	Needle Bar Connecting Rod Set Screw, for 12384.....
453C	8390	Oscillating Shaft Crank Set Screw, for 44135.....
453C	8390	Presser Bar Guide Bracket Set Screw, for 12326.....
456C	8395	Roller Arm Bracket Position Collar Set Screw, for 19443.....
457C	8394	Oscillating Shaft Crank Set Screw, for 19447.....
462C	8390	Feed Lifting Rock Shaft Crank (back) Set Screw, for 16556.....
591F	8403	Shuttle Tension Regulating Screw, for 62740.....
592E	8396	Shuttle Bobbin Case Latch Stop Screw, for 62740.....
624C	8398	Thread Retainer Set Screw.....
652D	8403	Roller Screw, for 1841, 1868 and 1895....
665J	8401	" Ratchet Spring Stop Screw, for 62852, 62854 and 62878.....
688J	8396	Presser Regulating Thumb Screw.....
689C	8395	" Bar Lifter Hinge Screw.....
690E	8398	Thread Take-up Crank Wedge Screw.....
691F	8391	Throat Plate Screw.....
725J	8398	Shuttle Race Slide Spring Screw, for 12432
748E	8387	Arm Screw (back).....

No.	Plate	Name
766D	8403	Lifting Lever Link Hinge Screw, for 16512 and 19331 (Foot and Knee Lifters)....
775E	8398	Thread Take-up Lever Cap Screw, for 43990
794E	8390	Needle Bar Connecting Link Adjusting Screw, for 12382.....
802D	8404	Lifting Lever Hinge Screw, for 16512 and 19331 (Foot and Knee Lifters).....
818D	8390	Feed Regulator Thumb Screw, for 56886....
858C	8390	Needle Bar Crank Set Screw, for 20188....
868E	8387	Arm Screw (front).....
896C	8387	Crank Connecting Rod Cap Screw, for 20197
907D	8397	Shuttle Race Back Spring Screw, for 62906
908C	8387	Crank Connecting Rod Hinge Screw.....
936E	8390	Needle Bar Screw Bushing.....
966E	8390	Feed Lifting Rock Shaft Crank Connecting Rod Cap Screw, for 43976.....
970D	8399	Bed Frame Thumb Screw, for 24108.....
987E	8395	Roller Arm Bracket Screw Stud, for 24445.
988C	8394	Oscillating Shaft Crank Slide Block Screw Stud, for 19449.....
1053J	8397	Shuttle Race Cap Screw, for 62907.....
1065C	8390	Needle Bar Crank Position Screw, for 20188
1128E	8390	Feed Regulator Hinge Screw.....
1266C	8403	Shuttle Driver Set Screw, for 12444.....
1513J	8390	Feed Rock Shaft Screw Center Nut, for 56814.....
1513J	8390	Feed Lifting Rock Shaft Screw Center Nut, for 56814.....
1518E	8390	Feed Connecting Link Hinge Screw Nut, for 43994.....
1518J	8390	Feed Forked Connection Hinge Screw Nut, for 43994.....
1518E	8390	Feed Lifting Rock Shaft Crank Connecting Rod Hinge Screw Nut.....
1518E	8390	Oscillating Shaft Crank Slide Block Screw Stud Nut, for 19447 and 44135.....
1519J	8387	Feed Bar Screw Center Nut, for 56813.....
1520J	8394	Presser Bar Lifter Hinge Screw Nut.....
1521E	8403	Lifting Lever Connecting Rod Lock Nut, for 16512 and 19331 (Foot and Knee Lifters).....
1528J	8396	Roller Screw Nut, for 1841, 1868, 1895, 1897, 1911 and 1912.....
1528J	8396	Roller Screw Nut, for 51863, 51882, 51890 51892, 51894, 51902, 51907, 51909 and 51912.....
1529E	8397	Thread Lubricator Screw Nut, for 62817 and 62829.....
1550H	8403	Roller Screw Nut, for 51801 and 51802....
1560C	8398	Tension Regulating Thumb Nut, for 44141..

No.	Plate	Name
1619E	8387	Crank Connecting Rod Hinge Screw Nut.....
1766C	8402	Roller Ball Retaining Nut, for 51863, 51892 and 51894.....
1813	8390	Feed Lifting Rock Shaft Crank (front) Roller and Stud, for 12376.....
1841	----	Roller, 7/8 in. diam., 9/64 in. face, fine with 652D and 1528J, for 62722.....
1868	8401	Roller, 7/8 in. diam., 9/64 in. face, coarse, with 652D and 1528J, for 62721
1895	8401	Roller, 7/8 in. diam., 3/16 in. face, coarse, with 652D and 1528J, for 62680
1897	8401	Roller, 1-1/4 in. diam., 3/16 in. face, coarse, with 386D and 1528J, for 62627
1904	8390	Needle Bar Connecting Stud Roller (roller only) for 12384.....
1911	8401	Roller, 1-1/4 in. diam., 9/64 in. face, coarse, with 386D and 1528J, for 16581
1912	----	Roller, 1-1/4 in. diam., 9/64 in. face, fine, with 386D and 1528J, for 16582.
2049	8396	Oscillating Shaft Crank Pin.....
2049	8396	Shuttle Driver Pin.....
2102	8398	Tension Disc, for 44118.....
2102	8398	Bobbin Winder Tension Disc, for 225462...
2166	8390	Needle Bar Thread Guard.....
2167	8394	" Clamp with 196F.....
2523	8396	Shuttle Bobbin Case Position Finger Rivet for 62740.....
2531	8398	Shuttle Race Back, for 62906.....
2532	8396	" " " Position Pin, for 62908.
2533	8396	" " " Spring, for 62906.....
2759	8404	Lifting Rod with 2761, for 2760 (Knee Lifter).....
2760	----	Lifting Rod complete, Nos. 2759 and 2762 (Knee Lifter).....
2761	8404	Lifting Rod Cap (washer) for 2759 (Knee Lifter).....
2762	8404	Lifting Rod Collar with 362C, for 2760...
2763	8406	Rock Shaft, for 2777 and 4880 (Foot and Knee Lifters).....
2765	8406	Rock Shaft Knee Arm, for 2768 (Knee Lifter
2766	8406	" " " " Hook with 356C, for 2768 (Knee Lifter).....
2767	8406	Rock Shaft Knee Plate with 356C, for 2768 (Knee Lifter).....
2768	----	Rock Shaft Knee Arm complete for 2777, Nos. 2765 to 2767 (Knee Lifter).....
2769	8404	Rock Shaft Lifting Arm with 356C (Knee Lifter).....
2770	8406	Rock Shaft Stop Dog with 356C, for 2777 and 4880 (Foot and Knee Lifters).....

No.	Plate	Name
2777	8406	Rock Shaft complete for 16512, Nos. 2763, 2768, 2770, 2778, 6337 and two 12242 (Knee Lifter).....
2778	8406	Rock Shaft Lifting Bracket Hook, for 2777 (Knee Lifter).....
2827	8387	Face Plate Thread Guard (upper) with 8505 for 62816, obsolete.....
2973	8396	Shuttle Bobbin Case Latch Lever, for 15141
2974	8396	" " " " " Fulcrum Pin, for 15141.....
2975	8396	Shuttle Bobbin Case Latch Spring, for 62740.....
2996	8396	Shuttle Bobbin, for 19292.....
3033	8390	Feed Connecting Link, for 43994, obsolete use 52165.....
3039	8389	Feed Regulator, for 56886.....
3093	8390	" Lifting Rock Shaft Crank (back) Pin, for 16588.....
3094	8398	Thread Take-up Crank Wedge.....
4307	8392	Shuttle Race Slide Spring, for 12432.....
4784	8393	Oscillating Rock Shaft Oil Pad (felt) for 24105.....
4822	8400	Wrench for 1521 and 1528 (Accessories)
4879	8404	Chain Connecting Link, for 4885 (Foot Lifter).....
4880	8406	Rock Shaft complete for 19331, Nos. 2763, 2770, 7125, 12243 and two each 6337 and 12242 (Foot Lifter).....
4881	8406	Treadle, for 4885 (Foot Lifter).....
4882	8404	" Shaft, for 4885 (Foot Lifter)....
4883	8404	" Spring, for 4885 (Foot Lifter)...
4884	8406	" Stand, for 4885 (Foot Lifter)....
4885	8406	Treadle complete for 19331, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16 (Foot Lifter).....
5596	8404	Bell Crank, for 56848 (Foot and Knee Lifters).....
5598	8404	Bell Crank complete for 12243, 16512 and 19331, Nos. 5735 and 56848 (Foot and Knee Lifters).....
5599	8404	Bell Crank Bracket, for 56848 (Foot and Knee Lifters).....
5601	8404	Bell Crank Hinge Pin, for 56848 (Foot and Knee Lifters).....
5670	----	Chain, length 26 in. to 35 in. with 56864 and 56865, for 7125 and 19331 (Foot Lifter).....
5735	8404	Bell Crank Spring, for 5598 (Foot and Knee Lifters).....

NUMERICAL LIST OF PARTS

No.	Plate	Name
6055	8399	Machine Hinge Bolt Nut Washer, for 44180 (Accessories).....
6337	8406	Rock Shaft Lifting Bracket with two 356C, for 2777 and 4880 (Foot and Knee Lifters).....
7125	8406	Rock Shaft Lifting Bracket Hook, for 4880 and 5670 (Foot Lifter).....
7336	8397	Thread Take-up Spring Regulator, for 44118
*7553	8396	Shuttle Bobbin Case Position Finger, for 62740.....
8068	8397	Thread Lubricator Oil Reservoir Rivet Washer (inside) for 62828.....
8418	8399	Belt Guard Button, for 8420.....
8419	8399	" " " Washer (leather) for 8420.....
8420	----	Belt Guard Button 8418 with 8419 and wood screw 1-1/4 in. No. 9 R.H.B., for 41931.....
8505	8387	Face Plate Thread Guard (upper) Rivet, for 2827, obsolete.....
8582	8387	Arm Dowel Pin.....
8908	8400	Wrench for 1519 and 1520 (Accessories)...
8909	8400	" " 1513, 1518 and 51581 (Accessories).....
9261	8399	Bed Frame Hinge Connection Pin, for 24108
*11104	----	Arm Shaft Bushing (front) for 62603.....
11119	8387	" Oil Tube 15783 with 52045, for oiling 12408.....
11167	8392	Presser Bar Spring (light) .051" wire....
11170	8395	" " " Washer.....
11204	8397	Thread Take-up Lever Link Hinge Pin, for 43990.....
11241	8388	Arm Spool Pin Washer (cloth).....
12123	8389	Feed Forked Connection, for 43994.....
12139	8392	Presser Bar Spring (medium) .055" wire...
12149	8398	Tension Thread Guard.....
12150	8387	Face Plate Thread Guard (lower) 44181 with 12152, for 12367 and 62816.....
12152	8387	Face Plate Thread Guard (lower) Rivet, for 12150.....
12166	8398	Thread Take-up Lever Hinge Pin, for 12410.
12193	8388	Arm Side Cover.....
12197	8389	Feed Cam and Feed Lifting Eccentric with 446C, for 62545.....
12240	8404	Lifting Lever Pin, for 16512 and 19331 (Foot and Knee Lifters).....
12241	8404	Lifting Lever Link, for 16512 and 19331 (Foot and Knee Lifters).....
12242	8404	Rock Shaft Hanger with two wood screws 1 in. No. 10, for 2777 and 4880 (Foot and Knee Lifters).....

NUMERICAL LIST OF PARTS

27

No.	Plate	Name
12243	8406	Rock Shaft Lifting Bracket Hook, for 4880 and 5598 (Foot Lifter).....
12326	8393	Presser Bar Guide Bracket with 453C.....
12327	8394	" " Lifting and Releasing Lever Bracket.....
12329	8398	Tension Releasing Lever Spring.....
12357	8388	Arm Shaft Flanged Bushing (back).....
12361	8399	Machine Hinge Connection, for 44140 and 44180 (Accessories).....
12366	----	Face Plate, for 12367.....
12367	8389	Face Plate complete, Nos. 12150, 12366 and 45720.....
12368	8389	Feed Bar.....
12376	8390	" Lifting Rock Shaft Crank (front) with 157J and 1813, for 16588.....
*12382	8389	Needle Bar Connecting Link with 794E, for 43997.....
*12383	----	Needle Bar Connecting Stud, for 12384....
12384	8389	Needle Bar Connecting Stud complete, Nos. 453C, 1904 and 12383, for 43997.....
12388	8389	Oscillating Rock Shaft Hinge Pin, for 24105.....
12393	8396	Shuttle Body, for 19292.....
*12394	----	" Driver, for 12444.....
12398	8398	Tension Releasing Lever Hinge Pin.....
12403	8388	Arm Spool Pin and Thread Eyelet, obsolete use 52239.....
12404	8398	Thread Take-up Crank, for 43990.....
12405	8399	Machine Rest (felt) Accessories.....
12408	8397	Thread Take-up Lever, for 12410.....
12409	8397	" " " Link, for 12410.....
12410	----	Thread Take-up Lever complete for 43990, Nos. 12166, 12408 and 12409.....
12415	8404	Lifting Lever Connecting Rod, for 16512 and 19331 (Foot and Knee Lifters)....
12416	8404	Lifting Lever Connecting Rod Joint, for 16512 and 19331 (Foot and Knee Lifters).....
12424	8394	Oscillating Shaft Crank Slide Block Cap Screw Washer, for 19449.....
12431	----	Shuttle Race Slide, for 12432.....
12432	8392	Shuttle Race Slide complete, Nos. 4307, 12431 and two 725J.....
12436	8391	Feed Dog, 11 teeth (18 teeth to the inch) for 12438, 12452 and 20192.....
12438	8391	Throat Plate, large oblong needle hole, for 12436, 20323 and 62890.....
12444	8397	Shuttle Driver 12394 with two 1266C.....
12448	8392	Needle Bar (hollow).....

NUMERICAL LIST OF PARTS

No.	Plate	Name
12452	8391	Throat Plate, small oblong needle hole, for 12436, 20323 and 62890, raised at needle hole, for top stitching.....
12453	8387	Arm Oil Tube, for oiling intermediate bearing.....
12454	8387	Arm Oil Tube with 132590, for oiling 12409.....
12480	8388	Arm Side Cap.....
15140	8396	Shuttle Bobbin Case Latch, for 15141.....
15141	8396	" " " Hinge, for 62740, Nos. 2973, 2974 and 15140.....
15278	8396	Shuttle Tension Spring, for 62740.....
*15404	----	Trade Mark, for 62603.....
15405	8398	" " Rivet, for 62603.....
15783	8387	Arm Oil Tube, for 11119.....
16232	8403	Roller Ball, for 51863, 51892 and 51894..
*16503	----	Bed.....
16504	8392	Feed Lifting Rock Shaft, for 16588.....
16506	8392	" Rock Shaft, for 24376.....
16509	8392	Oscillating Shaft.....
16510	8404	Lifting Lever with 448C, for 16512 and 19331 (Foot and Knee Lifters).....
16511	8388	Arm Shaft, for 62545.....
16512	----	Knee Lifter complete (power table) Nos. 76D, 766D, 802D, 1521E, 2777, 5598, 12240, 12241, 12415, 12416, 16510 and two 178E.....
16556	8390	Feed Lifting Rock Shaft Crank (back) with 462C, for 16588.....
16573	8402	Roller Arm, for 16581 and 16582.....
16581	----	Roller Presser complete, 1-1/4 in. diam., 9/64 in. face, coarse roller, Nos. 1911 and 16573.....
16582	----	Roller Presser complete, 1-1/4 in. diam., 9/64 in. face, fine roller, Nos. 1912 and 16573.....
16588	----	Feed Lifting Rock Shaft complete, Nos. 3093, 12376, 16504 and 16556.....
17822	8397	Thread Lubricator Oil Reservoir Rivet, for 62828.....
19165	8395	Presser Foot.....
19221	8400	Wrench for 936 and 1619 (Accessories)....
19229	8392	Needle Bar (hollow) for high lift.....
19292	8397	Shuttle, 1-11/16 in. diam., Nos. 2996, 12393 and 62740.....
19331	----	Foot Lifter complete, Nos. 76D, 766D, 802D, 1521E, 4880, 4885, 5598, 5670, 12240, 12241, 12415, 12416, 16510 and two 178E.....
19441	8392	Presser Bar (hollow) for 19464.....

NUMERICAL LIST OF PARTS

29

No.	Plate	Name
19442	8395	Roller Arm Bracket, for 19464.....
19443	8395	" " " Position Collar with 456C, for 19464.....
19444	8395	Roller Arm Bracket Spring, for 24445.....
19445	8395	" " " " Pin, for 24445.
19446	8395	" " " " Stud, for 24445
19447	8394	Oscillating Shaft Crank complete, Nos. 457C, 1518E, 19449 and 19496.....
19448	8394	Oscillating Shaft Crank Slide Block, for 19449.....
19449	8394	Oscillating Shaft Crank Slide Block com- plete for 19447 and 44135, Nos. 226J, 988C, 12424 and 19448.....
19464	----	Presser Bar complete, Nos. 190J, 19441 to 19443 and 24445.....
19496	----	Oscillating Shaft Crank, for 19447.....
20011	8391	Feed Dog, 11 teeth (18 teeth to the inch) for 20012 and 20293.....
20012	8391	Throat Plate, large oblong needle hole, for 20011.....
20023	8392	Presser Bar Spring (heavy) .063" wire....
20114	8395	" Foot.....
20188	8389	Needle Bar Crank with 858C and 1065C, for 62545.....
20192	----	Throat Plate, small oblong needle hole, for 12436, 20323 and 62890.....
20197	8388	Crank Connecting Rod with two 896C, for 62636.....
20271	8395	Presser Foot, for beading or top stitching
20272	8395	" " " shoe tips and gores.....
20273	8395	" " " inside stays, for 3/64 in. to 1/4 in. gauge.....
20274	8395	Presser Foot, for outside stays.....
20293	----	Throat Plate, small oblong needle hole, for 20011.....
20323	8391	Feed Dog, 8 teeth (12 teeth to the inch) for 12438, 12452 and 20192.....
21202	8397	Thread Lubricator Screw Friction Washer, for 62817 and 62829.....
22003	8400	Wrench for 1550 (Accessories).....
24075	8393	Oil Cup Extension Post, for 44005.....
24079	8407	Drip Pan.....
*24104	8389	Oscillating Rock Shaft, for 24105.....
24105	----	Oscillating Rock Shaft complete, Nos. 4784 12388 and 24104.....
24106	8399	Bed Frame Cushion (felt) for 24108.....
24107	8399	" " Hinge Connection, for 24108....
24108	8408	" " with 970D, two each 9261, 24107, four each 158E, 24106 and six wood screws 1-1/4 in. No. 12.....

NUMERICAL LIST OF PARTS

No.	Plate	Name
24131	8387	Arm Oil Tube with 52045, for oiling 12197
24296	8388	Balance Wheel (power) light rim, 2-3/16 in. pulley, with two 448C.....
24297	8388	Balance Wheel Oil Cover.....
24376	----	Feed Rock Shaft complete, Nos. 16506 and 29633.....
24412	8396	Shuttle Bobbin Case Position Plate, for 62906.....
24413	----	Shuttle Race Body, for 62502, obsolete, use 62902.....
24418	8396	Shuttle Race Cap, for 62907.....
24419	8393	Shuttle Race complete, Nos. 907D, 2531, 2533, 24412, 62517 and two 391J, ob- solete, use 62906.....
24445	----	Roller Arm Bracket Spring Stud complete for 19464, Nos. 987E and 19444 to 19446.....
24903	8402	Roller Arm, for 24904 and 24905.....
24904	----	Roller Presser complete, 9/16 in. diam., 3/32 in. face, coarse roller, Nos. 24903 and 51801.....
24905	----	Roller Presser complete, 9/16 in. diam., 3/32 in. face, fine roller, Nos. 24903 and 51802.....
24908	8407	Drip Pan with two wood screws 1/2 in. No. 5 R.H.B., for 24108.....
24990	8402	Roller Arm, for 62627.....
26026	8400	Screw Driver (machine) Accessories.....
26485	8400	" " (shuttle tension) Accesso- ries.....
27739	8405	Thread Unwinder Thread Cone (wood) for large cones, for 225260.....
28084	----	Machine Rest Pin (Accessories) obsolete.
29633	8390	Feed Rock Shaft Crank with 157J, for 24376.....
32572	8398	Tension Releasing Disc, for 44118.....
32574	8398	" " Pin, for 44118.....
35018	8400	Tape Delivery Blade (Accessories).....
41400	8400	Machine Rest Pin (wood) 3-1/8 in. long (Accessories).....
41929	8408	Belt Guard, for 41931.....
41930	8399	" " Hinge, for 41931.....
41931	----	Belt Guard complete, Nos. 8420, 41929, two 41930 and four wood screws 3/4 in. No. 9.....
43944	8398	Tension Releasing Lever.....
43945	8398	" Spring, for 44118.....
43946	8398	Thread Take-up Spring, for 44118.....
43976	8389	Feed Lifting Rock Shaft Crank Connecting Rod with two 966E.....

No.	Plate	Name
43990	----	Thread Take-up complete, Nos. 775E, 11204 12404, 12410 and 43997.....
43994	----	Feed Forked Connection complete, Nos. 12123, 52165, 56886 and two each 375C and 1518J.....
43997	----	Needle Bar Connecting Link 12382 with 12384, for 43990.....
44005	8393	Oil Cup Extension 44214 with 24075, for 44223.....
44006	8393	Oil Cup Packing (felt) for 44225.....
44118	----	Tension complete, Nos. 7336, 32572, 32574 43945, 43946, 44141 and two 2102.....
44134	----	Oscillating Shaft Crank, for 44135.....
44135	8394	Oscillating Shaft Crank complete, Nos. 1518E, 19449, 44134 and two 453C.....
44139	8399	Machine Hinge Plate, for 44140 and 44130 (Accessories).....
44140	----	Machine Hinge complete, Nos. 12361, 44139 and wood screw 1-1/4 in. No. 14 (Ac- cessories).....
44141	----	Tension Screw Stud 50327C with 1560C, for 44118.....
44180	----	Machine Hinge complete, Nos. 6055, 12361, 44139 and 51075E (Accessories).....
*44181	----	Face Plate Thread Guard (lower) for 12150
44214	----	Oil Cup Extension, for 44005.....
44222	8393	" " for 44223.....
44223	8393	" " 44222 with 44005, for 44225.....
44224	8393	" " Thread Retainer, for 44225.....
44225	8393	Oil Cup complete, Nos. 44006, 44223 and 44224.....
44274	8402	Roller Arm, for 44279.....
44276	----	Roller Presser (ball bearing) complete, 7/8 in. diam., 9/64 in. face, coarse roller, Nos. 230F, 51890, 62840 and 62852.....
44279	8394	Roller Presser (ball bearing) complete, 1-1/4 in. diam., 7/32 in. face, coarse roller, Nos. 230F, 44274, 51894 and 62854.....
45720	22479	Face Plate Thread Guard (upper) with 125373.....
50222J	8397	Thread Lubricator Screw, for 62817 and 62829.....
50302J	8397	Finger Guard Holder Set Screw, for 120858
50327C	8398	Tension Screw Stud, for 44141.....
50553C	8401	Roller Screw, for 51863, 51892 and 51894.
51075E	8399	Machine Hinge Bolt with 51581E, for 44180 (Accessories).....
51224D	8387	Arm Side Cover Thumb Screw.....

NUMERICAL LIST OF PARTS

No.	Plate	Name
51224D	8387	Face Plate Thumb Screw.....
51581E	8394	Machine Hinge Bolt Nut, for 51075E (Accessories).....
51801	8401	Roller, 9/16 in. diam., 3/32 in. face, coarse, with 388D and 1550H, for 24904
51802	----	Roller, 9/16 in. diam., 3/32 in. face, fine, with 388D and 1550H, for 24905.
51863	8401	Roller, 1-1/4 in. diam., 7/32 in. face (ball bearing) complete for 62748, Nos. 1528J, 1766C, 50553C and twenty-four 16232.....
51882	8401	Roller, 7/8 in. diam., 9/64 in. face, fine (ball bearing) complete for 62842, Nos. 1528J, 201699C, 350104C and twenty-eight 206417.....
51890	----	Roller, 7/8 in. diam., 9/64 in. face, coarse (ball bearing) complete for 44276, Nos. 1528J, 201699C, 350104C and twenty-eight 206417.....
51892	8401	Roller, 1-1/4 in. diam., 1/8 in. face, coarse (ball bearing) complete for 62849, Nos. 1528J, 1766C, 50553C and twenty-four 16232.....
51894	----	Roller, 1-1/4 in. diam., 7/32 in. face, coarse (ball bearing) complete for 44279, Nos. 1528J, 1766C, 50553C and twenty-four 16232.....
51902	8401	Roller, 7/8 in. diam., 9/64 in. face, coarse (ball bearing) complete for 62868, Nos. 1528J, 201699C, 350104C and twenty-eight 206417.....
51907	8401	Roller, 7/8 in. diam., 1/8 in. face, fine (ball bearing) complete for 62871, Nos. 1528J, 201699C, 350104C and twenty-eight 206417.....
51909	8401	Roller, 7/8 in. diam., 1/8 in. face, coarse (ball bearing) complete for 62891, Nos. 1528J, 201699C, 350104C and twenty-eight 206417.....
51912	8401	Roller, 7/8 in. diam., 3/32 in. face, fine (ball bearing) complete for 62880, Nos. 1528J, 201699C, 350104C and twenty-eight 206417.....
52045	8387	Arm Oil Tube Packing (wick) for 11119 and 24131.....
52165	22479	Feed Connecting Link, for 43994.....
52239	22479	Arm Spool Pin and Thread Eyelet.....
52454	8398	Thread Retainer.....
56813	----	Feed Bar Screw Center 313C with 1519J....

No.	Plate	Name
56814	----	Feed Lifting Rock Shaft Screw Center 307C with 1513J.....
56814	----	Feed Rock Shaft Screw Center 307C with 1513J.....
56848	----	Bell Crank 5596 with 5599 and 5601, for 5598 (Foot and Knee Lifters).....
56864	8404	Chain Hook (large) for 5670 (Foot Lifter)
56865	8404	" " (small) for 5670 (Foot Lifter)
56886	----	Feed Regulator 3039 with 818D, for 43994.
*62502	----	Shuttle Race Body 24413 with 24418 and two 1053J, for 62517, obsolete, use 62907.....
62517	8393	Shuttle Race Body 62502 with two 2532, for 24419, obsolete, use 62908.....
*62545	----	Arm Shaft 16511 with 12197 and 20188, for 62636.....
*62603	----	Arm with 11104, 15404 and two 15405.....
62627	----	Roller Presser complete, 1-1/4 in. diam., 3/16 in. face, coarse roller, Nos. 1897 and 24990.....
*62636	----	Arm Shaft 62545 with 20197.....
62677	8395	Roller Arm, for 62680 and 62721.....
62680	8402	Roller Presser complete, 7/8 in. diam., 3/16 in. face with roller set 1/8 in. beyond center of needle, Nos. 1895 and 62677.....
62721	8402	Roller Presser complete, 7/8 in. diam., 9/64 in. face, coarse roller, Nos. 1868 and 62677.....
62722	8402	Roller Presser complete, 7/8 in. diam., 9/64 in. face, fine roller, Nos. 1841 and 62677.....
*62739	----	Shuttle Bobbin Case, for 62740.....
62740	8396	Shuttle Bobbin Case complete for 19292, Nos. 591F, 592E, 2523, 2975, 7553, 15141, 15278 and 62739.....
62747	8402	Roller Arm, for 62748.....
62748	8394	Roller Presser (ball bearing) complete, 1-1/4 in. diam., 7/32 in. face, coarse roller, Nos. 51863 and 62747.....
62816	8393	Face Plate with 2827 and 12150, for 62817.
62817	----	Face Plate with Thread Lubricator complete, Nos. 1529E, 50222J, 62816, 62828 and two 21202.....
*62818	----	Thread Lubricator Bracket, for 62828.....
62819	8397	" " Oil Pad (felt) for 62822.....
*62820	----	Thread Lubricator Oil Pad Holder, for 62821.....

No.	Plate	Name
*62821	----	Thread Lubricator Oil Pad Holder 62820 with 62823, for 62822.....
62822	8393	Thread Lubricator Oil Pad Holder 62821 with 62819, 62824 and 62827, for 62828
*62823	----	Thread Lubricator Oil Pad Holder Oil Tube for 62821.....
62824	8397	Thread Lubricator Oil Pad Retainer, for 62822.....
62827	----	Thread Lubricator Oil Wick (braided cotton) for 62822.....
62828	----	Thread Lubricator complete for 62817 and 62829, Nos. 8068, 17822, 62818, 62822 62830 and 124371.....
62829	8393	Thread Lubricator 62828 with 1529E, 50222J and two 21202.....
*62830	----	Thread Lubricator Oil Reservoir, for 62828
62840	8402	Roller Arm, for 44276, 62842, 62871, 62880 and 62891.....
62842	----	Roller Presser (ball bearing) complete, 7/8 in. diam., 9/64 in. face, fine roller, Nos. 230F, 51882, 62840 and 62852.....
62843	8402	Roller Arm, for 62849.....
62849	8394	Roller Presser (ball bearing) complete, 1-1/4 in. diam., 1/8 in. face, coarse roller, Nos. 230F, 51892, 62843 and 62854.....
62850	8401	Roller Ratchet Spring Stop, for 62852 and 62878.....
62851	8402	Roller Ratchet Spring Stop Bracket, for 62852 and 62854.....
62852	----	Roller Ratchet Spring Stop Bracket 62851 with 665J and 62850, for 44276, 62842 62871 and 62880.....
62853	8401	Roller Ratchet Spring Stop, for 62854....
62854	----	Roller Ratchet Spring Stop Bracket 62851 with 665J and 62853, for 44279 and 62849.....
62857	8402	Roller Arm, for 62868.....
62868	8402	Roller Presser (ball bearing) complete, 7/8 in. diam., 9/64 in. face, coarse roller, Nos. 51902 and 62857.....
62871	----	Roller Presser (ball bearing) complete, 7/8 in. diam., 1/8 in. face, fine roller, Nos. 230F, 51907, 62840 and 62852.....
62877	8402	Roller Ratchet Spring Stop Bracket, for 62878.....
62878	----	Roller Ratchet Spring Stop Bracket 62877 with 665J and 62850, for 62891.....

No.	Plate	Name
62880	----	Roller Presser (ball bearing) complete, 7/8 in. diam., 3/32 in. face, fine roller, Nos. 230F, 51912, 62840 and 62852.....
62890	8391	Feed Dog (spiked teeth) for 12438, 12452 20192.....
62891	----	Roller Presser (ball bearing) complete, 7/8 in. diam., 1/8 in. face, coarse roller, Nos. 230F, 51909, 62840 and 62878.....
62902	----	Shuttle Driver Body, for 62907.....
62906	22479	Shuttle Race complete, Nos. 907D, 2531, 2533, 24412 and 62909.....
62907	----	Shuttle Race Body 62902 with 24418 and two 1053J, for 62908.....
62908	22479	Shuttle Race Body 62907 with two 2532, for 62909.....
62909	----	Shuttle Race Body 62908 with two 391J, for 62906.....
120342	8400	Oiler (copper plated) with 120343 (Access- ories).....
120343	8400	Oiler Spout, 3-1/2 in. long, for 120342 (Accessories).....
120857	8397	Finger Guard, for 120860.....
120858	8397	" " Holder with 50302J, for 120860.....
120860	8397	Finger Guard complete, Nos. 120857, 120858 and two 236J.....
124371	8397	Thread Lubricator Oil Reservoir Rivet Washer (outside) for 62828.....
125373	22479	Face Plate Thread Guard (upper) Rivet, for 45720.....
132590	9387	Arm Oil Tube Packing (wick) for 12454....
139602	----	Oscillating Rock Shaft 24105 with 908C...
150203	8405	Thread Unwinder Spool Rest Cushion (felt) for 225260.....
200056E	8403	Bobbin Winder Stop Latch Screw, for 225382
200082D	8403	" " Tension Bracket Screw, for 225382.....
200299H	8403	Bobbin Winder Stop Latch Trip Lever Hinge Screw, for 225382.....
200380C	8403	Bobbin Winder Pulley Set Screw, for 202473
200383C	8403	Thread Unwinder Spool Rest Rod Set Screw, for 202490.....
201018C	8403	Thread Unwinder Spool Rest Set Screw, for 225259.....
201499B	8393	Bobbin Winder Tension Stud, for 225461...
201572B	8403	" " " Thumb Nut, for 225462.....

NUMERICAL LIST OF PARTS

No.	Plate	Name
201696J	8403	Thread Unwinder Thread Guide Lock Nut, for 225260.....
201699C	8402	Roller Ball Retaining Nut, for 51882, 51890 51902, 51907, 51909 and 51912.....
202277	----	Bobbin Winder Frame Oil Packing (wick) for 225453.....
202407	8403	Bobbin Winder Tension Spring, for 225462.
202473	8406	" " Pulley with 200380C, for 225382.....
202478	8393	Bobbin Winder Stop Latch Trip Lever, for 225382.....
202490	8405	Thread Unwinder Spool Stand with 200383C, for 225260.....
206417	8403	Roller Ball, for 51882, 51890, 51902, 51907, 51909 and 51912.....
225259	8405	Thread Unwinder Spool Rest with 201018C, for 225260.....
225260	8405	Thread Unwinder complete, Nos. 150203, 201696J, 202490, 225259, 225324, 225326, 225388, 225391 and three wood screws 7/8 in. No. 12.....
225322	8403	Thread Unwinder Thread Guide Rod Washer, for 225324.....
225324	8405	Thread Unwinder Thread Guide Rod with 208E and 225322, for 225260.....
225326	22479	Thread Unwinder Thread Guide Position Cup for 225260.....
225381	8393	Bobbin Winder Spindle, for 225382.....
225382	8406	Bobbin Winder (swinging automatic, right hand) complete, Nos. 200056E, 200082D 200299H, 202473, 202478, 225381, 225433 225444, 225453 to 225456, 225458, 225462, 228026, two each 225459 and wood screws 3/4 in. No. 12 R.H.B.....
225388	8405	Thread Unwinder Spool Rest Rod, for 225260
225390	8405	" " Thread Cone Holder, for inverted cones.....
225391	8405	Thread Unwinder Thread Guide, for 225260.
225433	8406	Bobbin Winder and Tension Bracket Base, for 225382.....
225438	8403	Bobbin Winder Frame Oil Well Cap, for 225453.....
225444	8393	Bobbin Winder Stop Latch, for 225382.....
225453	8393	" " Frame with 202277 and 225438, for 225382.....
225454	8393	Bobbin Winder Frame Hinge Pin, for 225382
225455	8403	" " " Spring, for 225382...
225456	8403	" " " Plunger, for 225382.....

No.	Plate	Name
225458	8393	Bobbin Winder Stop Latch Thumb Lever, for 225382.....
225459	8403	Bobbin Winder Stop Latch Thumb Lever Hinge Stud, for 225382.....
225461	8393	Bobbin Winder Tension Bracket with 201499B, for 225462.....
225462	----	Bobbin Winder Tension Bracket complete for 225382, Nos. 201572B, 202407, 225461 and two 2102.....
228026	----	Bobbin Winder Tension Bracket Screw Washer, for 225382.....
350104C	8401	Roller Screw, for 51882, 51890, 51902, 51907, 51909 and 51912.....

SINGER Needles should be used
in SINGER Machines.
These Needles and their Containers
are marked with the
Company's Trade-Mark "SIMANCO.**" 1

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. 2

SINGER Needles should be used
in SINGER Machines.
These Needles and their Containers
are marked with the
Company's Trade-Mark "SIMANCO.***" 1

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. 2

ILLUSTRATIONS
OF
PARTS

PLATE 8387—FULL SIZE

12453 12454 8582 24131 11119 15763





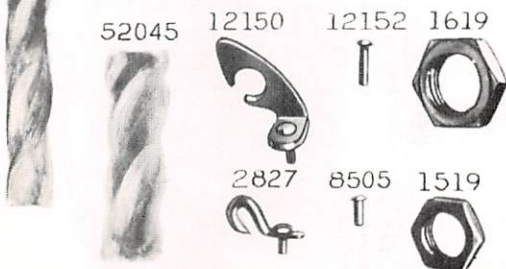


PLATE 8388—ONE-HALF SIZE


16511

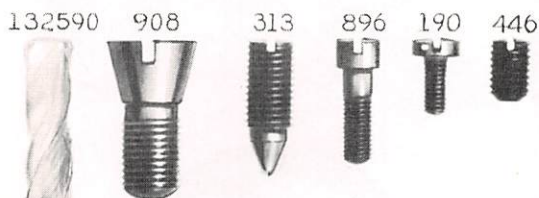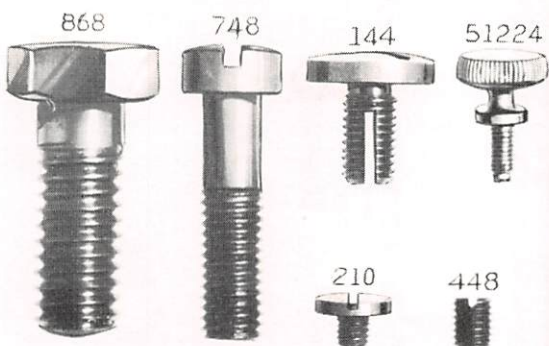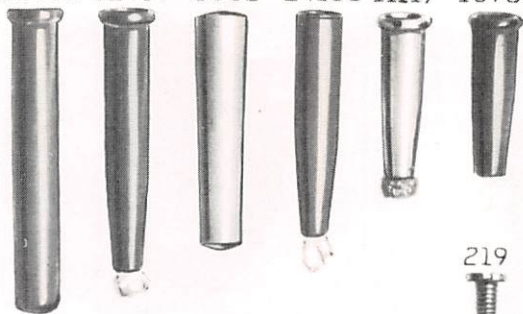

20197

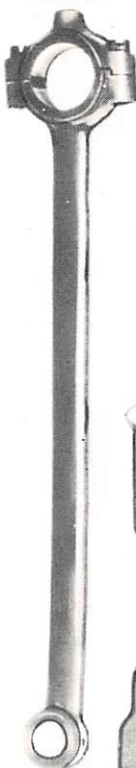

12193

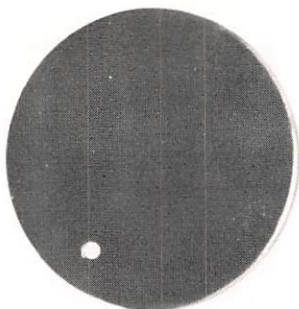


12357




12403




11241

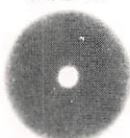

24297

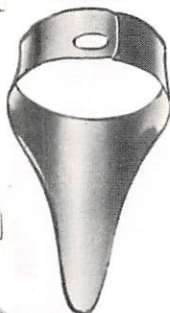

12480

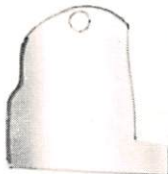

24296

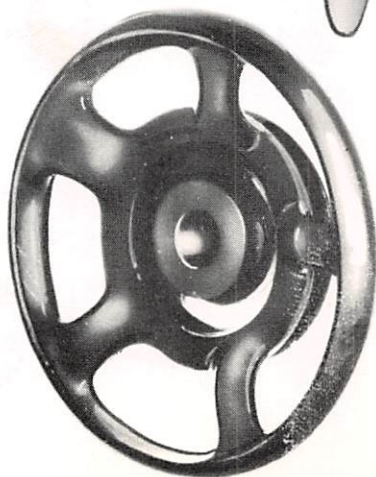


PLATE 8389—ONE-HALF SIZE

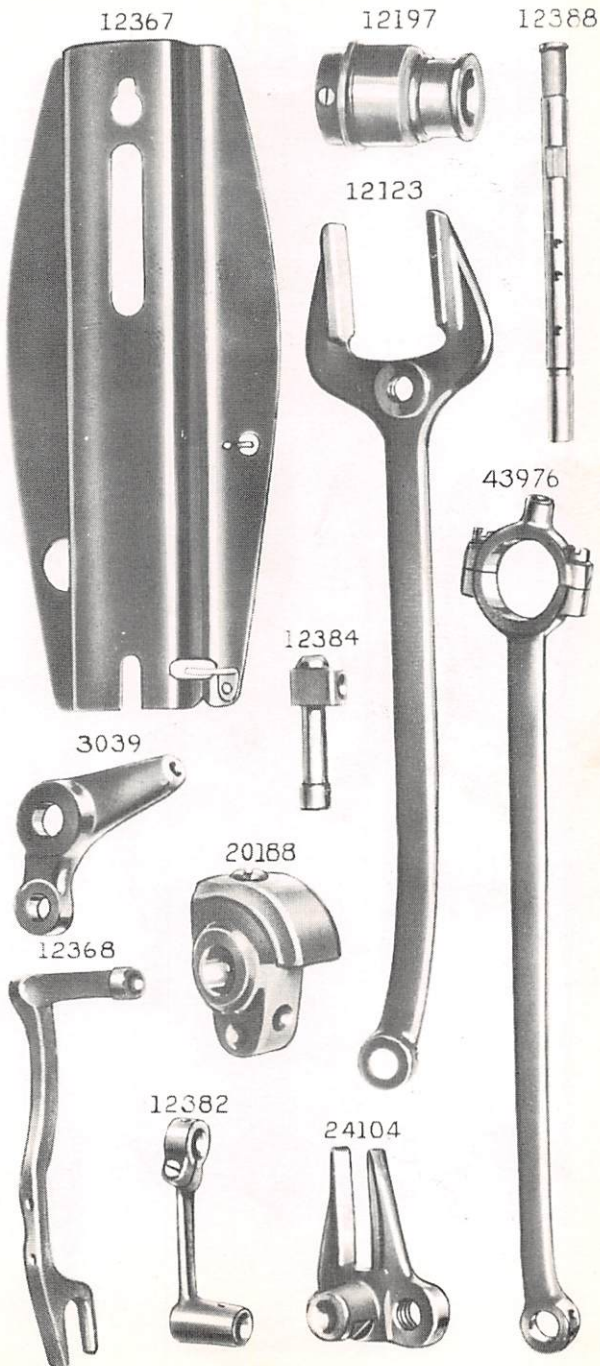


PLATE 8390—FULL SIZE

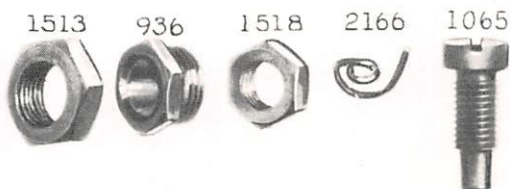
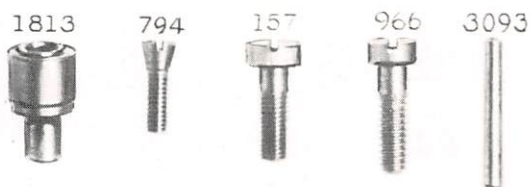
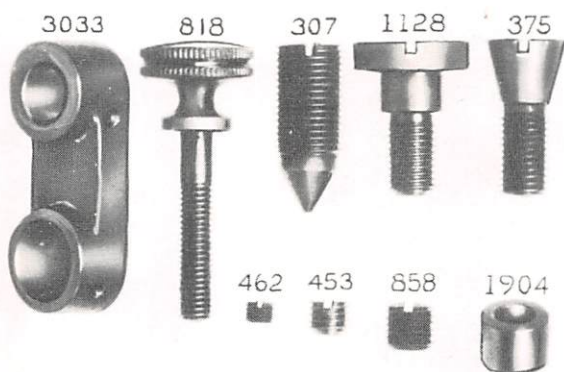
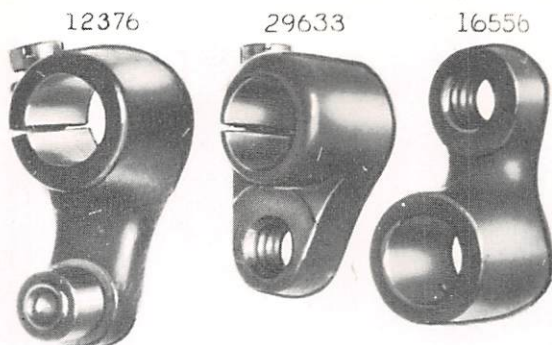


PLATE 8391—FULL SIZE

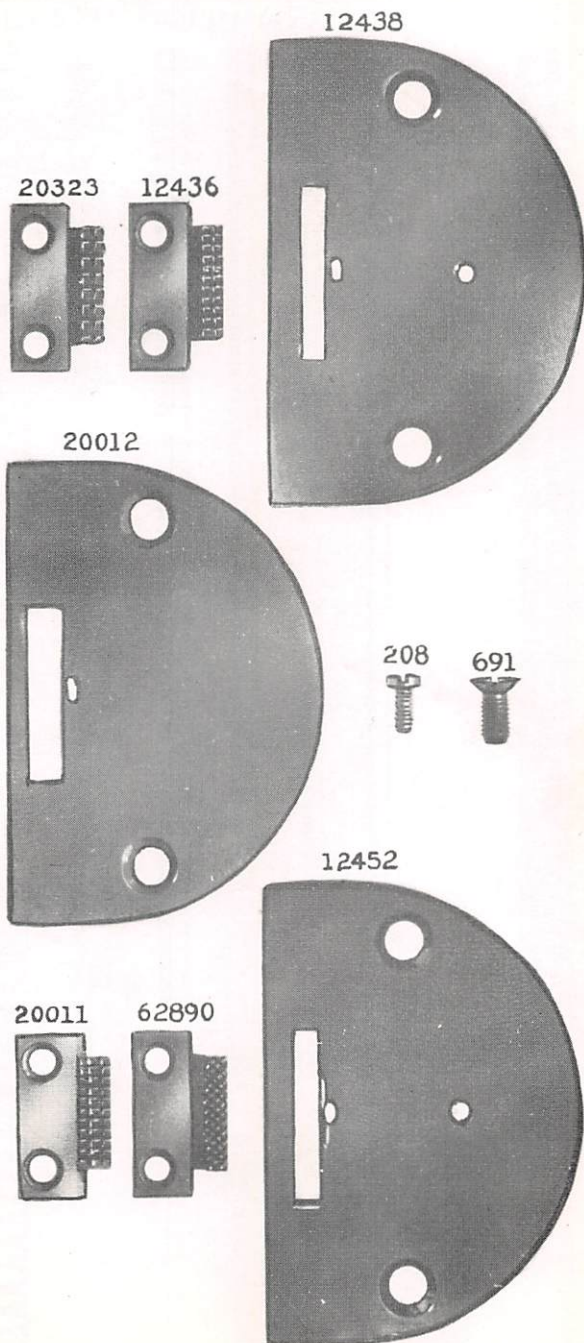


PLATE 8392—ONE-HALF SIZE

16506



12448 19229 19441 16509



16504 11167



12139

20023

4307



12432

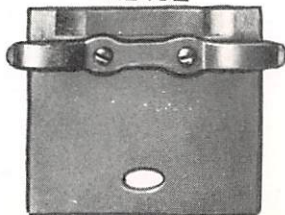


PLATE 8393—ONE-HALF SIZE



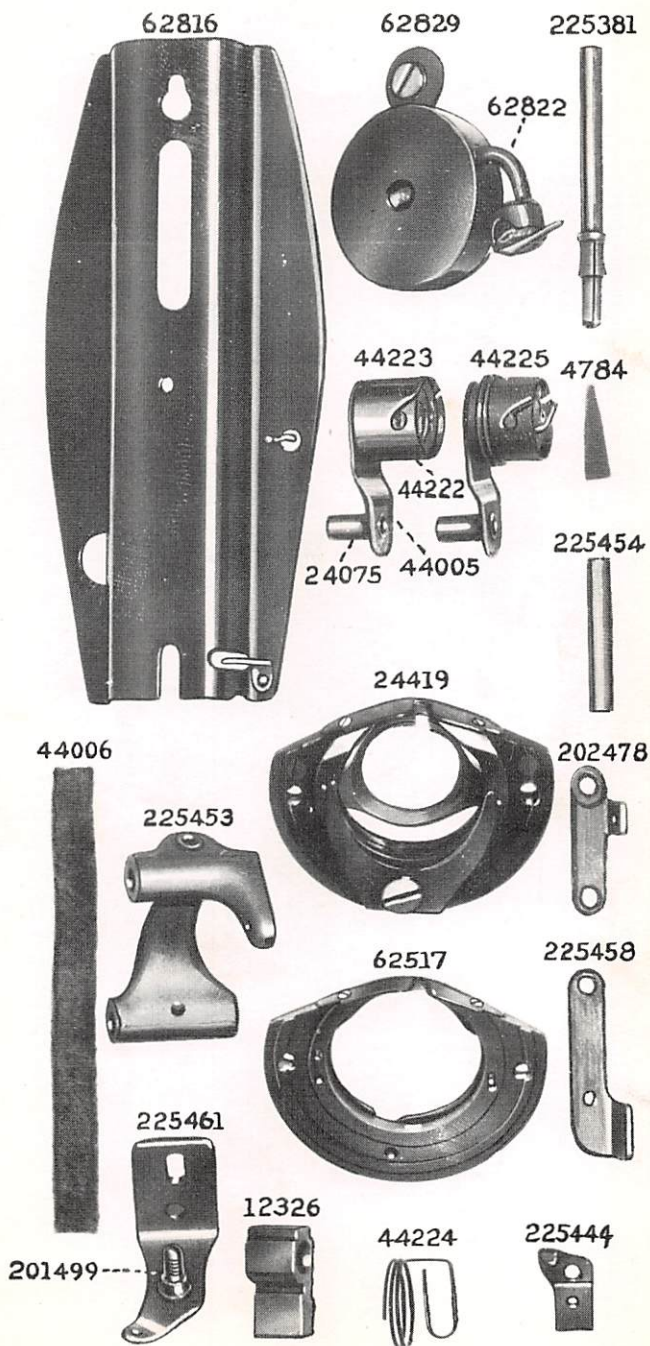


PLATE 8394—FULL SIZE

62849

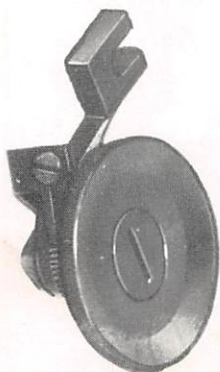


44279

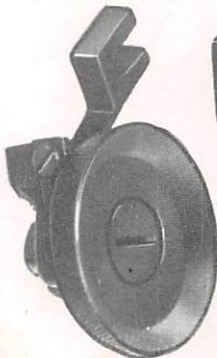


19448



19447

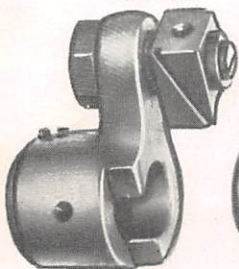

44135

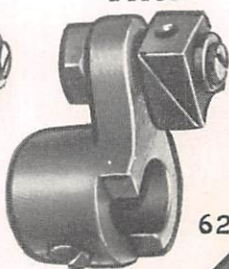

988



62748



12327



19449



233



457



51581



1520



2167



196



226




12424



PLATE 8395—FULL SIZE

689 52016 11170 19444 19446 62677

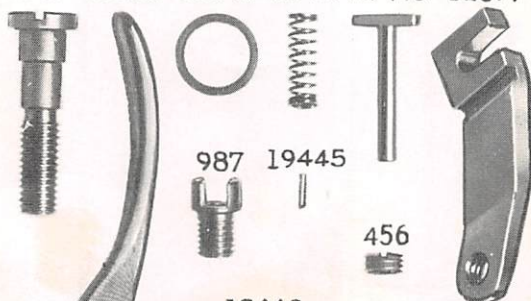


987 19445

456

19442


19443

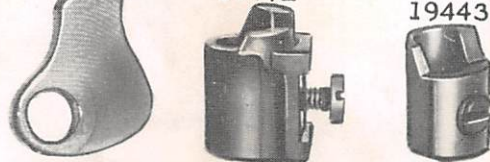

19165

20114

20271

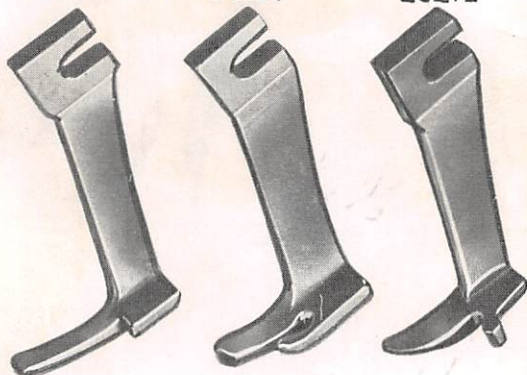

20272

20273

20274

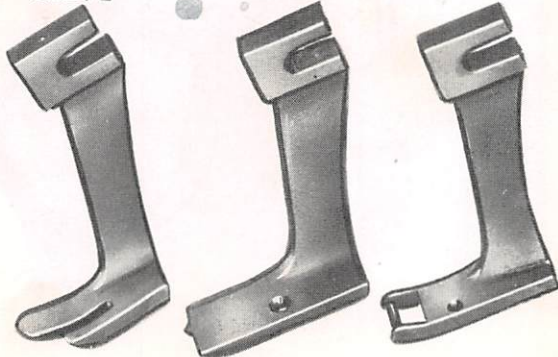


PLATE 8396—FULL SIZE

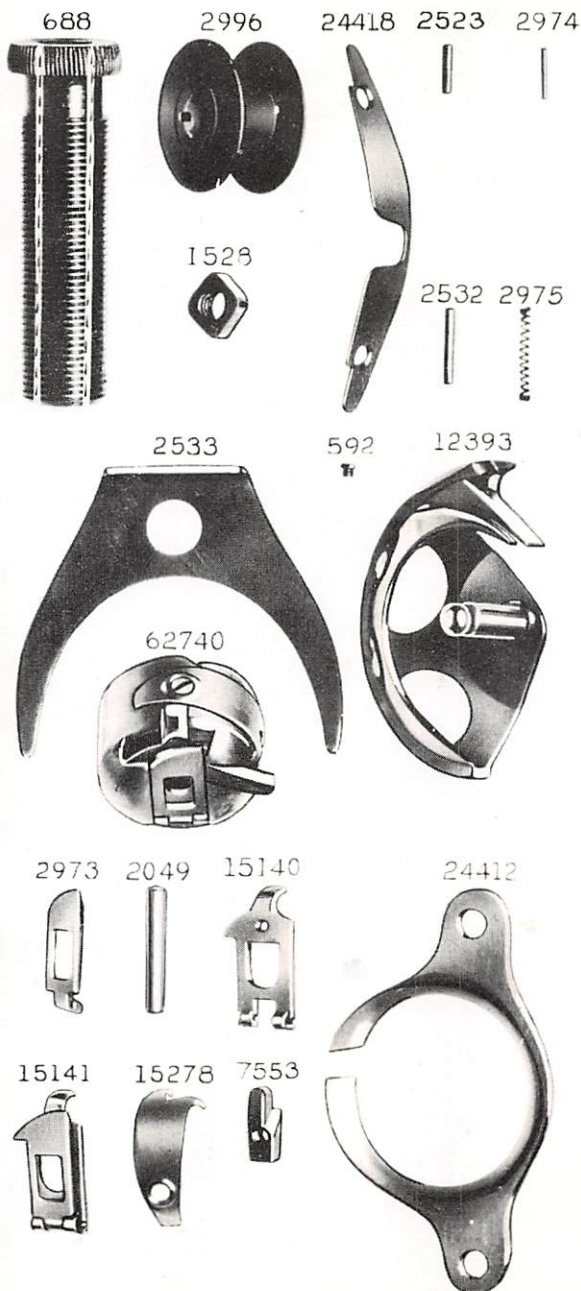


PLATE 8397—FULL SIZE

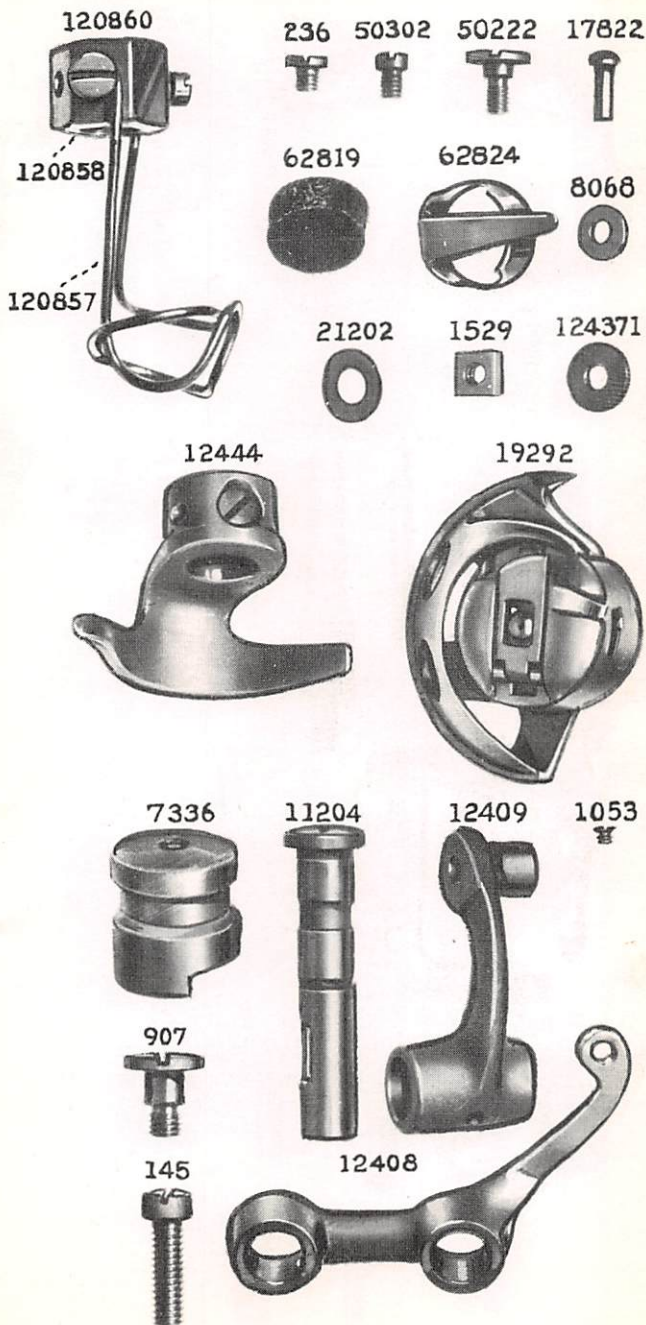


PLATE 8398—FULL SIZE

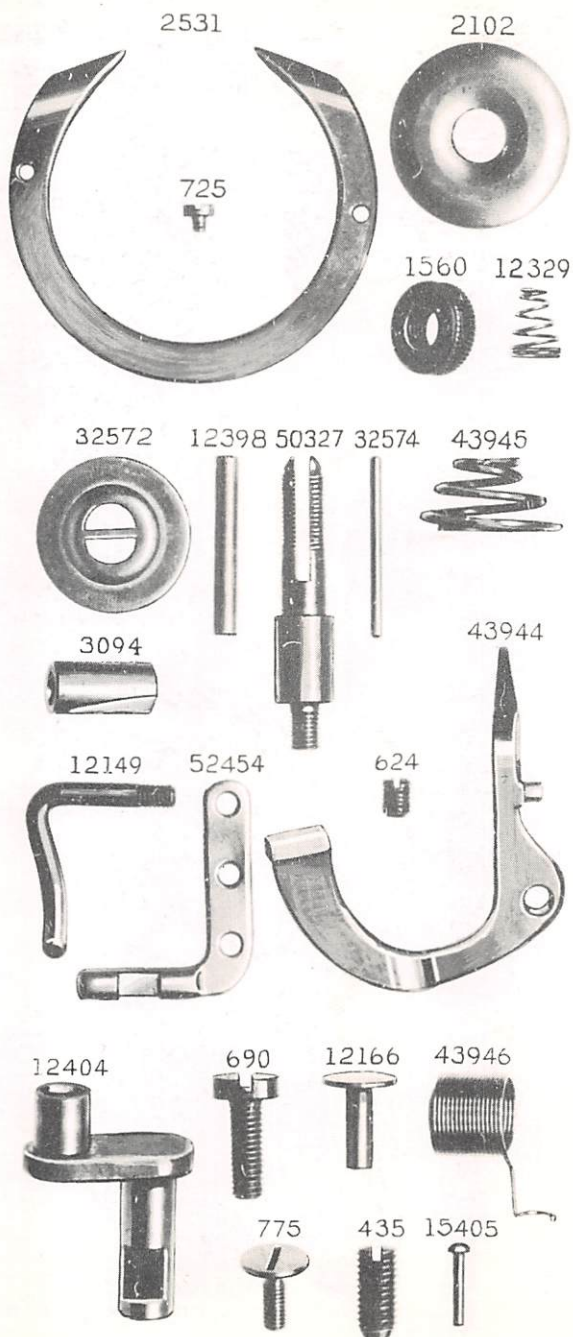


PLATE 8399—FULL SIZE

51075



6055




12405




12361



44139

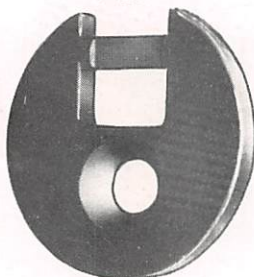

24107



24106



970



9261



158



8418



8419



41930

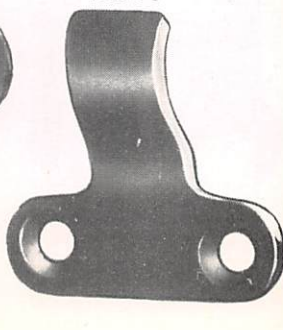



PLATE 8400—ONE-HALF SIZE

26026



120342

120343

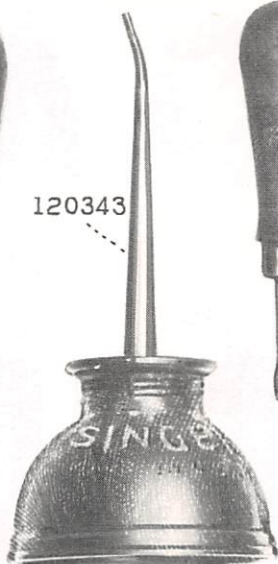

26485



41400



8909



35018




4822



8908



19221

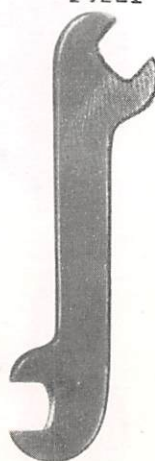


22003



PLATE 8401—FULL SIZE

51892

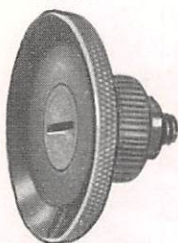

1868



1895



51863



51902



51912



1911



51909



51907



1897



51882



51801



62850



62853



665



350104



50553



PLATE 8402—FULL SIZE

62721



62868



62857

62680



62722



62747



62843



44274



62840



24903



16573



24990



62851



62877



391



230



1766



201699



PLATE 8403—FULL SIZE

178



652



386



200056



766



362



356



201018



225438



225456



76



225459



225455



200299



200082



202407



201572



591



1266



200383



1550



1521



388



16232



200380



201696



225322



206417



PLATE 8404—ONE-HALF SIZE

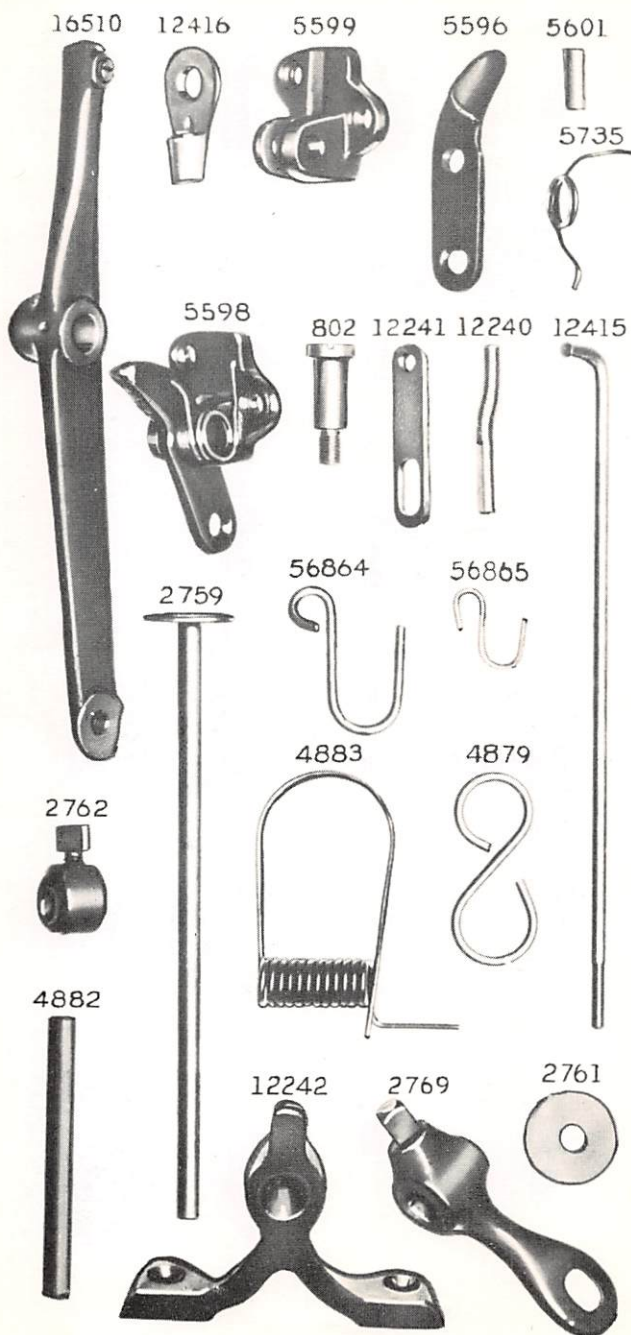


PLATE 8405—ONE-FOURTH SIZE

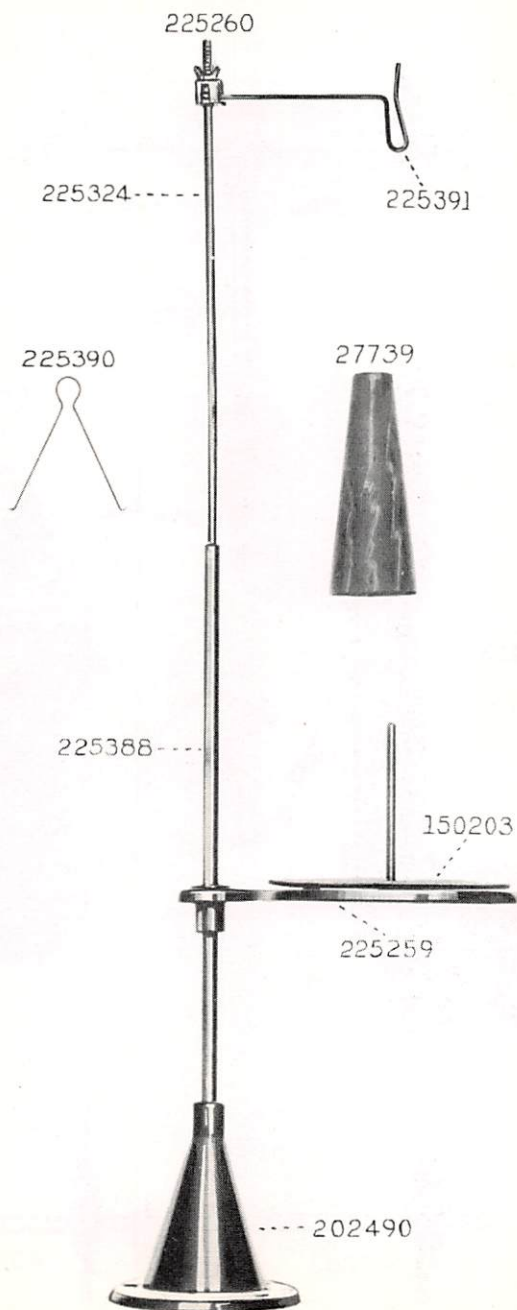


PLATE 8406—ONE-FOURTH SIZE


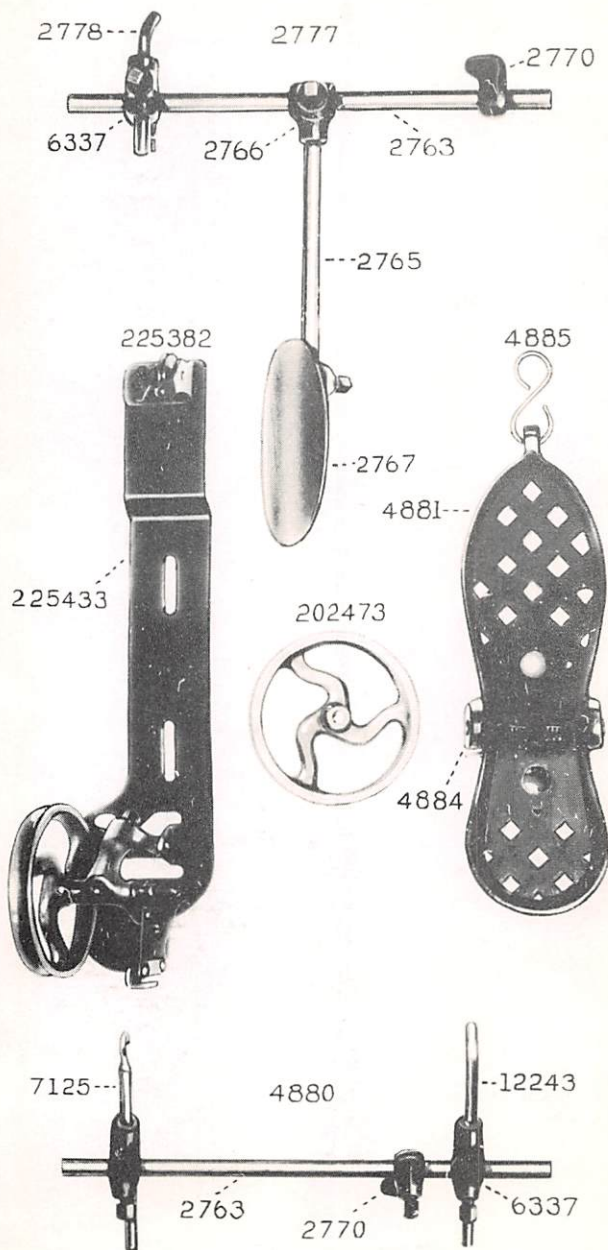


PLATE 8407—ONE-FOURTH SIZE

24079

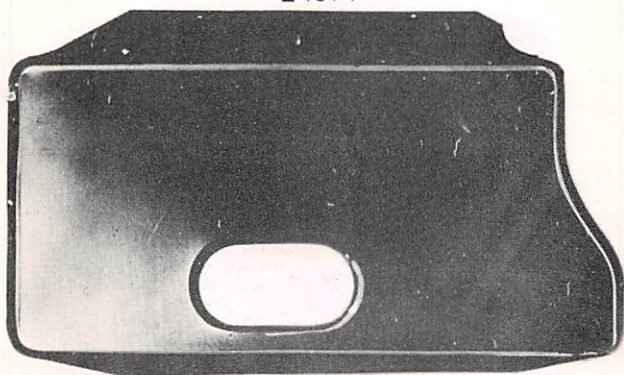

24908


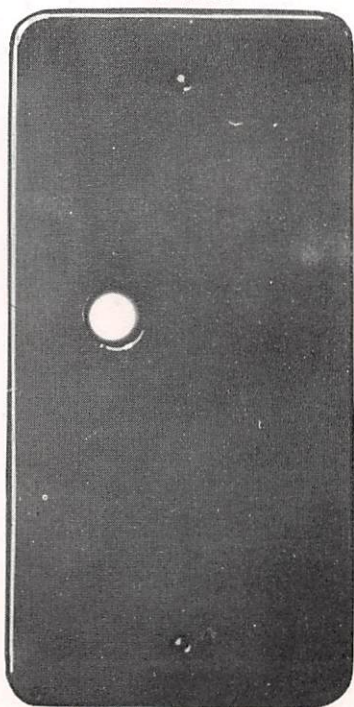


PLATE 8408—ONE-FOURTH SIZE

24108

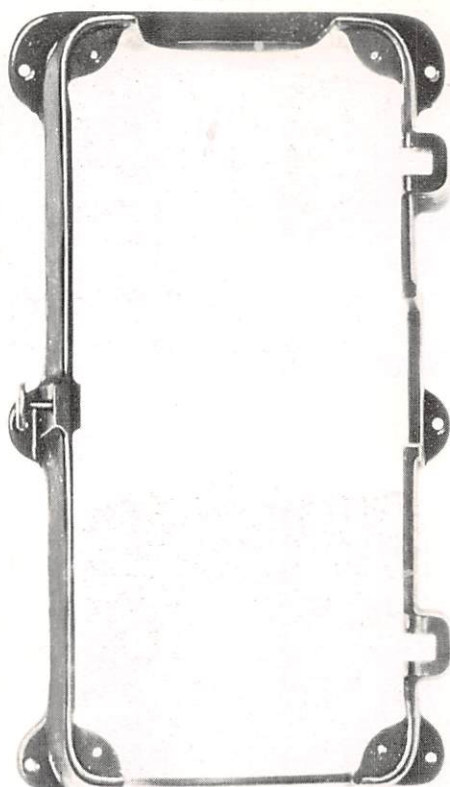

41929

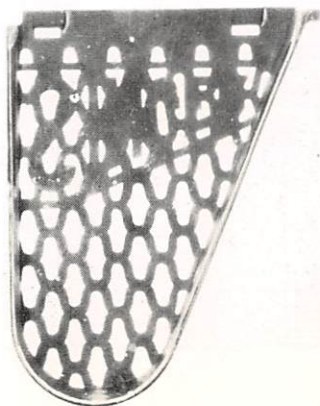


PLATE 22479 - FULL SIZE

52239



52165



225326




45720




125373



62908

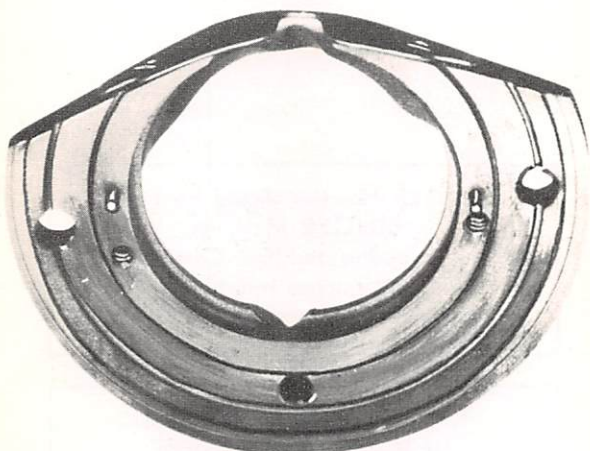

62906

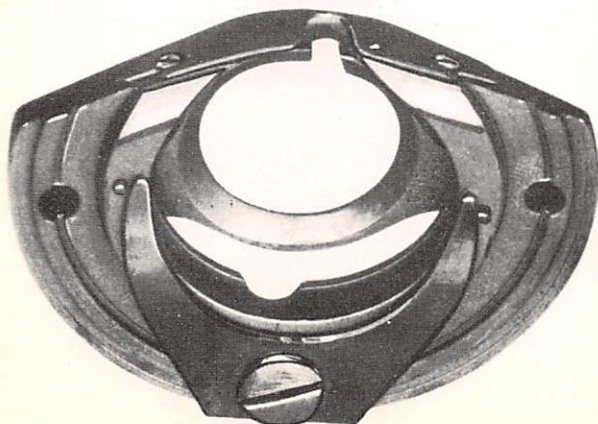

SINGER Needles should be used
in SINGER Machines.
These Needles and their Containers
are marked with the
Company's Trade-Mark "SIMANCO.**" 1

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. 2



