

MACHINE PARTS CHART for SINGER*

491_D


* A Trademark of THE SINGER COMPANY
Copyright © 1973 THE SINGER COMPANY
All Rights Reserved Throughout the World



Diagram illustrating the front suspension assembly components:

- 545051: Lower control arm
- 540453 (2): Ball joint
- 540424: Steering knuckle

540664

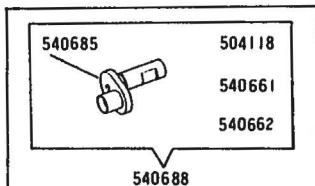

540688


540662

545904


5406 76

545907

540687

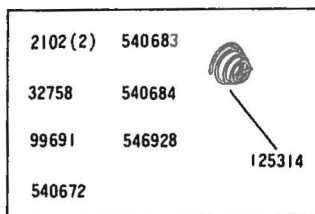

540696

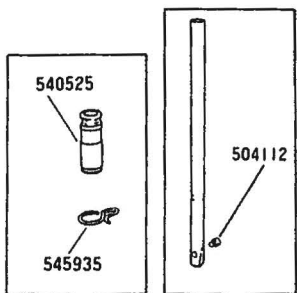

504112

540546

540698

CAT.1901

142061

149057

Diagram illustrating the assembly of a Singer sewing machine, showing various components and their corresponding part numbers:

- 55623: Three small circular components (likely bobbins or spools).
- CAT. 1901: A small rectangular component (likely a needle or foot).
- 41400: A long, thin rod or pin.
- 549184-001: A small screw or fastener.
- 548701: A long screw or fastener.
- 541513: A shorter screw or fastener.
- 541514: A very short screw or fastener.
- 541515-001: A small rectangular component (likely a foot or plate).
- 540522(2): Two small rectangular components (likely feet or plates).
- 540523(2): Two small rectangular components (likely feet or plates).
- 540521(2): Two small circular components (likely washers or spacers).
- 540520(2): Two small rectangular components (likely feet or plates).
- 545927: A rectangular container labeled "SINGER OIL 150 CC" (likely oil).
- 505655-001: The main sewing machine body and base.
- 505656-001: A vertical rod or stand component.

Exploded view diagram of the machine base and oil reservoir assembly. The diagram shows the following components and their part numbers:

- 540500**: Oil reservoir (top cover).
- 545938**: Mounting bracket or support arm.
- 540471**: Fastener (screw or bolt) for the mounting bracket.
- 545064**: Small cylindrical component (possibly a plug or cap).
- 545036**: Small cylindrical component (possibly a plug or cap).
- 545754 (4)**: Four small cylindrical components (possibly O-rings or seals).
- 545925**: Long vertical pin or bolt.

NUMERICAL LIST OF PARTS FOR MACHINE 491D200AA

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
229 (805)	Rotating Hook Oil Flow Regulating Thumb Screw Spring Screw	504129 (850)	Needle Bar Bushing (lower) Set Screw
691 (850)	Throat Plate Screw (2)	504129 (850)	Needle Bar Bushing (upper) Set Screw
2102	Tension Disc (2)	504129 (850)	Presser Bar Bushing (lower) Set Screw
12431	Bed Slide	504134 (850)	Feed Regulating Dial Set Screw
16380	Oil Removing Lint Screen	504134 (850)	Feed Reverse Lever Hinge Stud Collar Set Screw
29852	Oil Removing Tube Retaining Clamp	504145 (809)	Oil Removing Tube Retaining Clamp Screw
32390	Rotating Hook Bobbin Case Holder Position Bracket	505001	Arm Dowel Pin (2)
32758	Thread Take-up Spring	505008	Arm Spool Pin Washer
40394	Rotating Hook Bobbin Case Tension Spring	505151	Tension Releasing Lever Hinge Pin
52033	Throat Plate (small needle hole) for 149031	505152	Tension Releasing Lever Spring
52130	Thread Take-up Lever Thread Eyelet Bushing	505317	Bed Slide complete, Nos. 12431, 154884 and two 154789
52171	Needle Bar Bushing (lower) Thread Eyelet	505349	Rotating Hook Bobbin Case
52239	Arm Spool Pin and Thread Eyelet	505350	Rotating Hook Bobbin Case 505349 with 40394, 504086 and 504087
52454	Thread Retainer	505351	Rotating Hook Bobbin Case Hinge, Nos. 505353, 505354 and 505355
55623	Rotating Hook Bobbin	505353	Rotating Hook Bobbin Case Latch
99691	Tension Regulating Thumb Nut Washer	505354	Rotating Hook Bobbin Case Latch Lever
140411 (802)	Arm Shaft (horizontal) Screw (back)	505355	Rotating Hook Bobbin Case Latch Lever Fulcrum Pin
143042	Rotating Hook Shaft Oil Filter Wick (felt)	505356	Rotating Hook Bobbin Case Latch Spring
143058	Needle Bar Connecting Stud Slide Block	505358	Rotating Hook Bobbin Case complete, Nos. 504032, 505350, 505351 and 505356
143236	Feed Lifting Rock Shaft Oil Plug Screw Washer	505575	Presser Bar Spring
143236	Feed Rock Shaft Oil Plug Screw Washer	505643	Presser Foot (spring hinged) complete
146610	Presser Bar Lifting Lever Spring	505647	Rotating Hook Shaft Oil Filter Wick Holder
149031	Feed Dog 19 teeth (22 teeth per inch)	505648	Rotating Hook Shaft Oil Filter complete, Nos. 143042 and 505647
149111	Face Plate Plug	505649	Presser Bar Bushing (lower)
154781 (850)	Presser Bar Lifting Lever Pin Set Screw	504006	Arm Shaft (horizontal) Flanged Bushing (front)
154781 (850)	Thread Take-up Spring Regulator Set Screw	504034	Needle Bar Connecting Stud with 545340
154789 (809)	Bed Slide Spring Screw (2)	504050	Needle Bar Connecting Stud 504034 with 143058
154884	Bed Slide Spring	504076	Thread Take-up Crank Wearing Plate
154983 (819)	Presser Bar Lifting Lever Connecting Rod Nut (2)	5040524	Needle Bar Bushing (lower)
272111	Feed Bar Connecting Link Oil Wick Clamp	5040528	Needle Bar Bushing (lower) Felt
504002 (850)	Arm Shaft (horizontal) Bushing (center) Set Screw	5040533	Thread Take-up Spring Regulator O-ring
504002 (850)	Arm Shaft (horizontal) Flanged Bushing (back) Set Screw	5040534	Thread Take-up Spring Regulator Rubber Cap
504002 (850)	Arm Shaft (horizontal) Flanged Bushing (front) Set Screw	5040536	Feed Bar Carrier
504002 (850)	Rotating Hook Shaft Bushing (back) Set Screw	5040537	Feed Bar Carrier 5040536 with three 504013
504002 (850)	Rotating Hook Shaft Bushing (front) Set Screw	5040538	Feed Bar Carrier Oil Wick (felt)
504002 (850)	Thread Take-up Lever Link Hinge Stud Set Screw	5040539	Feed Lifting Rock Shaft
504010 (829)	Arm Side Shield Screw	5040540	Feed Lifting Rock Shaft complete, Nos. 143236, 504111, 540539 and 545810
504010 (829)	Thread Take-up Lever Guard Screw	5040541	Feed Lifting Rock Shaft Oil Wick (outer) (cotton)
504010 (829)	Thread Take-up Lever Oil Guard Screw	5040541	Feed Rock Shaft Oil Wick (outer) (cotton)
504013 (850)	Feed Bar Carrier Clamping Screw (2)	5040542	Feed Rock Shaft
504013 (850)	Feed Bar Hinge Pin Clamping Screw	5040543	Feed Rock Shaft complete, Nos. 143236, 540542, 545160 and 545839
504025 (850)	Bell Crank Bracket Set Screw (2)	5040544	Feed Bar complete, Nos. 540537, 540538, 545789, 545791, 545808, 545987 and two 504103
504025 (850)	Feed Reverse Lever Hinge Stud Crank Clamping Screw	5040547	Feed Bar Connecting Link Oil Wick (cotton)
504028 (850)	Feed Rock Shaft Flanged Bushing (front) Set Screw	5040549	Thread Guard (side of arm)
504029 (833)	Feed Rock Shaft Driving Frame Hinge Pin Set Screw (2)	5040606	Arm Shaft (horizontal) and Needle Bar Crank with 504095, 504117, 504120 and 549230
504032 (805)	Rotating Hook Bobbin Case Latch Stop Screw	5040608	Arm Shaft (horizontal) Thrust Collar with two 545313
504047 (833)	Tension Stud Set Screw	5040610	Arm Side Shield with 545770 and 545771
504048	Feed Lifting Rock Shaft Collar Set Screw (Spec. No. 1050) (4)	5040612	Arm Top Cover with 540665 and 545773
504048	Feed Rock Shaft Collar Set Screw (Spec. No. 1050) (2)	5040617	Bell Crank complete
504051 (850)	Feed Dog Screw (2)	5040619	Face Plate with 149111 and 546925
504051 (850)	Feed Regulating Dial Stopper Screw	5040621	Feed and Feed Lifting Eccentric with two 545313
504063 (809)	Presser Foot Screw	5040623	Feed Regulating Dial with 545492, 540689 and 504134
504063 (809)	Slack Thread Regulator Screw	5040624	Feed Regulating Dial Lock Pin
504064 (805)	Arm Screw (intermediate)	5040625	Feed Regulating Dial Lock Pin Spring
504066 (833)	Arm Shaft (horizontal) Bevel Gear Set Screw (2)	5040626	Feed Regulating Plate
504071 (810)	Feed Reverse Lever Clamping Screw	5040628	Feed Reverse Lever with 504071
504071 (810)	Oil Pump (centrifugal) (body) Screw (3)	5040629	Feed Reverse Lever complete, Nos. 504051, 540623, 540624, 540625, 540628, 540690, 549382 and 549383
504084 (810)	Rotating Hook Bobbin Case Holder Position Bracket Screw	5040630	Feed Reverse Lever Hinge Stud
504086 (806)	Rotating Hook Bobbin Case Tension Regulating Screw	5040631	Feed Reverse Lever Hinge Stud 540630 with 545047 and 545825
504087 (806)	Rotating Hook Bobbin Case Tension Spring Screw	5040633	Feed Reverse Lever Hinge Stud Collar with 504134
504094 (833)	Thread Retainer Set Screw	5040635	Feed Reverse Lever Hinge Stud Crank with 504025
504095 (850)	Thread Take-up Crank Set Screw	5040636	Feed Reverse Lever Hinge Stud Crank Connecting Link
504099 (809)	Arm Top Cover Screw (4)	5040637	Feed Reverse Lever Hinge Stud Flanged Bushing
504101 (850)	Arm Shaft (upright) Bevel Gear (lower) Set Screw (2)	5040638	Feed Reverse Lever Hinge Stud Crank Connecting Link Washer (2)
504101 (850)	Rotating Hook Shaft Bevel Gear Set Screw (2)	5040639	Feed Reverse Lever Spring
504102 (833)	Arm Shaft (upright) Bevel Gear (upper) Set Screw (2)	5040641	Feed Reverse Lever Spring Retainer
504103 (803)	Feed Bar Connecting Link Cap Screw (2)	5040642	Feed Reverse Lever Spring Screw Collar
504111 (809)	Feed Lifting Rock Shaft Oil Plug Screw	5040644	Feed Rock Shaft Crank with 549183 and 545181
504112 (850)	Needle Set Screw		
504117 (850)	Thread Take-up Crank Clamping Screw		
504118 (803)	Needle Bar Connecting Link Cap Screw		
504119 (850)	Machine Pulley Set Screw (2)		
504120 (850)	Needle Bar Crank Position Screw		

NUMERICAL LIST OF PARTS FOR MACHINE 491D200AA

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
540645	Feed Rock Shaft Driving Frame complete, Nos. 540635, 540636, 540639, 540642, 540644, 540648, 540649, 540650, 540652, 548091, 549384, two each 540638, 540655, 540656, 540657 and 549288	545160 (809)	Feed Rock Shaft Oil Plug Screw
540648	Feed Rock Shaft Crank Connecting Rod with 545181 and two 545059	545181 (803)	Feed Rock Shaft Crank Connecting Rod Pin Set Screw
540649	Feed Rock Shaft Crank Connecting Rod Pin	545181 (803)	Feed Rock Shaft Crank Pin Set Screw
540650	Feed Rock Shaft Crank Pin	545244 (805)	Feed Reverse Lever Spring Retainer Screw
540652	Feed Rock Shaft Driving Frame with 545264 and two 545072	545264 (804)	Feed Rock Shaft Driving Frame Spring Stud
540653	Feed Rock Shaft Driving Frame Hinge Pin (back)	545295 (805)	Feed Regulating Plate Screw (2)
540654	Feed Rock Shaft Driving Frame Hinge Pin (front)	545313 (803)	Arm Shaft (horizontal) Thrust Collar Set Screw (2)
540655	Feed Rock Shaft Driving Link (large) (2)	545313 (803)	Feed and Feed Lifting Eccentric Set Screw (2)
540656	Feed Rock Shaft Driving Link (small) (2)	545340 (806)	Needle Bar Connecting Stud Clamping Screw
540657	Feed Rock Shaft Driving Link (small) Pin (2)	545403 (819)	Presser Bar Guide and Pressure Regulating Thumb Screw Lock Nut
540660	Needle Bar Connecting Link	545404 (451)	Tension Regulating Thumb Nut Lock Nut (Spec. No. 1019)
540661	Needle Bar Connecting Link 540660 with 540450	545492	Feed Regulating Nut (Spec. No. 1050)
540662	Needle Bar Connecting Link Roller Bearing	545493	Tension Regulating Thumb Nut (Spec. No. 1019)
540662	Thread Take-up Lever Roller Bearing	545753	Arm Screw (front) Washer (2)
540663	Needle Bar Thread Guard	545754	Arm Shaft (upright) Bevel Gear (upper) Set Screw Hole Plug Screw Gasket (2)
540665	Oil Flow Window	545755	Thread Take-up Crank Clamping Screw Hole Plug Screw Gasket
540666	Oil Pipe	545757	Arm Shaft (horizontal) Bevel Gear with two 504066
540667	Oil Pipe complete, Nos. 540666, 545846 and 545847	545758	Arm Shaft (horizontal) Bushing (center)
540669	Presser Bar Lifting Lever with 154781	545761	Arm Shaft (horizontal) Flanged Bushing (front) Oil Tube
540670	Presser Bar Lifting Lever Link	545763	Arm Shaft (upright)
540671	Tension complete, Nos. 32758, 99691, 540672, 540682, 540683, 540684, 546928 and two 2102	545764	Arm Shaft (upright) Bevel Gear (lower) Right Hand Spiral with two 504101
540672	Tension Releasing Disc	545765	Arm Shaft (upright) Bevel Gear (upper) Left Hand Spiral with two 504102
540673	Tension Releasing Lever (body) 545894 with 545057 and 540674	545766	Arm Shaft (upright) Bushing (lower)
540674	Tension Releasing Lever Segment	545767	Arm Shaft (upright) Bushing (upper)
540675	Thread Take-up complete, Nos. 540662, 540676, 540678, 545904 and 545907	545770	Arm Side Shield Wick Spring Holder
540676	Thread Take-up Lever with 52130	545771	Arm Side Shield Wick
540677	Thread Take-up Crank	545773	Arm Top Cover Gasket
540678	Thread Take-up Crank 540677 with 504118, 540661 and 540662	545775	Bed Hole Plug
540680	Rotating Hook Shaft Bushing (front)	545776	Bed Leg (long)
540681	Rotating Hook Shaft Bushing (back)	545777	Bed Leg (short) (3)
540682	Tension Spring	545788	Feed Bar Connecting Link
540683	Tension Stud 545898 with 545493 and 545404-451	545789	Feed Bar Connecting Link 545788 with 272111 and 540547
540684	Tension Releasing Pin	545791	Feed Bar Hinge Pin
540689	Feed Regulating Dial Pin	545799	Feed Lifting Rock Shaft Crank (back) Connecting Rod Hinge Stud
540690	Feed Regulating Dial Stopper	545806	Feed Lifting Rock Shaft Collar with two 504048 (2)
540702	Needle Bar (hollow) with 504112	545807	Feed Lifting Rock Shaft Crank (back) with two 549183
540703	Needle Bar Bushing (upper) Felt	545808	Feed Lifting Rock Shaft Crank (front) with 545043
540705	Machine Pulley with two 504119	545810	Feed Lifting Rock Shaft Oil Wick (cotton)
540706	Arm Shaft (horizontal) Flanged Bushing (back)	545812	Feed Lifting Rock Shaft Crank (back) Connecting Rod with two 545059
540707	Arm Shaft (horizontal) Flanged Bushing (back) Oil Seal	545817	Presser Bar (hollow) O-ring
540708	Arm Shaft (horizontal) Flanged Bushing (back) Ring	545825	Feed Reverse Lever Hinge Stud O-ring
540709	Oil Removing Pump	545836	Feed Rock Shaft Flanged Bushing (front)
540710	Oil Removing Pump Spring Bracket	545837	Feed Rock Shaft Collar with two 504048
540711	Oil Removing Tube	545839	Feed Rock Shaft Oil Wick (cotton)
540712	Oil Removing Tube Retaining Wire	545841	Needle Bar Bushing (upper)
540714	Oil Removing Tube Retaining Spring	545845	Oil Pipe
545033 (805)	Arm Screw (back) (2)	545846	Oil Pipe Clamping Sleeve
545034 (805)	Arm Screw (front) (2)	545847 (805)	Oil Pipe Clamping Sleeve Nut
545036 (819)	Arm Shaft (upright) Bevel Gear (upper) Set Screw Hole Plug Screw (2)	545849	Oil Pipe Clamping Sleeve
545037 (819)	Thread Take-up Crank Clamping Screw Hole Plug Screw	545850 (805)	Oil Pipe Clamping Sleeve Nut
545038 (819)	Arm Shaft (horizontal) Flanged Bushing (front) Oil Tube Cap Screw	545851	Oil Pipe Clamping Sleeve Nut Adapter
545040 (809)	Face Plate Screw (short) (3)	545852	Oil Pipe 545845 with 545849 and 545850 for Oiling Rotating Hook Shaft Bearing (front) 540680
545043 (819)	Feed Lifting Rock Shaft Crank (front) Clamping Screw	545854	Oil Pump (centrifugal) (body) with 545851
545047 (850)	Feed Reverse Lever Hinge Stud Cap Screw	545855	Oil Pump (centrifugal) Cover
545049 (805)	Oil Pump (centrifugal) Impeller Locking Screw	545856	Oil Pump (centrifugal) Impeller
545050 (805)	Oil Pump (centrifugal) Screen Frame Screw (3)	545857	Oil Pump (centrifugal) Screen
545051 (850)	Oil Wick Holder Screw	545858	Oil Pump (centrifugal) Screen Frame
545053 (850)	Presser Bar Lifter Hinge Screw	545859	Oil Wick (cotton) (2)
545054 (850)	Presser Bar Lifting Lever Hinge Screw	545860	Oil Wick Holder
545055 (805)	Rotating Hook Oil Flow Regulating Thumb Screw	545861	Oil Wick Holder complete, Nos. 545051, 545860 and two 545859
545056 (803)	Rotating Hook Shaft Oil Retaining Collar Set Screw (2)	545862	Pair of Gears Nos. 545764 and 545887
545057 (819)	Tension Releasing Lever Screw	545863	Pair of Gears Nos. 545757 and 545765
545059 (810)	Feed Lifting Rock Shaft Crank (back) Connecting Rod Cap Screw (2)	545864	Presser Bar (hollow)
545059 (810)	Feed Rock Shaft Crank Connecting Rod Cap Screw (2)	545868	Presser Bar Lifter
545072 (833)	Feed Rock Shaft Driving Link (small) Pin Set Screw (2)	545871	Presser Bar Lifting Lever Connecting Rod
545099 (803)	Presser Bar Guide Bracket Clamping and Tension Releaser Screw	545872	Presser Bar Lifting Lever Connecting Rod Oil Retaining Disc (felt)
		545873	Presser Bar Lifting Lever Connecting Rod Swivel

NUMERICAL LIST OF PARTS FOR MACHINE 491D200AA

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
545875	Presser Bar Lifting Lever Pin	540688	Thread Take-up Crank 540685 with 504118, 540661 and 540662, in place of 540678
545876	Presser Bar Guide and Pressure Regulating Thumb Screw 549363 with 545403	540696	Tension complete, Nos. 32758, 99691, 125314, 540672, 540683, 540684, 546928 and two 2102, in place of 540671
545883	Rotating Hook Oil Flow Regulating Thumb Screw Spring	540698	Needle Bar (hollow) with 504112, in place of 540702
545884	Rotating Hook Shaft	545935	Needle Bar Bushing (lower) Thread Eyelet, in place of 52171
545885	Rotating Hook Shaft 545884 with 505648	CAT.1901	Needle (135 x 7 #16)
545886	Rotating Hook Shaft 545885 with 545890		
545887	Rotating Hook Shaft Bevel Gear (left hand spiral) with two 504101		
545890	Rotating Hook Shaft Oil Retaining Collar with two 545056		
545892	Slack Thread Regulator		<u>ACCESSORIES AND ATTACHMENTS</u>
545894	Tension Releasing Lever (body)	41400	Machine Rest Pin (wood)
545898	Tension Stud	55623	Rotating Hook Bobbin (3)
545901	Thread Eyelet (side of arm)	505655-001	Universal Bobbin Winder complete (include two wood screws) (purchased assembly)
545902	Thread Take-up Lever Guard	505656-001	Thread Unwinder (for two spools) complete (include three wood screws) (purchased assembly)
545904	Thread Take-up Lever Link	540520	Machine Base and Oil Reservoir Cushion (front) (with two wire nails) (2)
545905	Thread Take-up Lever Link Hinge Stud	540521	Machine Base and Oil Reservoir Cushion (back) (with two wire nails) (2)
545906	Thread Take-up Lever Link Hinge Stud Oil Wick (cotton)	540522	Machine Hinge Connection (2)
545907	Thread Take-up Lever Link Hinge Stud 545905 with 545906	540523	Machine Hinge Connection Cushion (2)
545908	Thread Take-up Lever Oil Guard with 545909	541513	Screw Driver (large)
545909	Thread Take-up Lever Oil Guard wick (cotton)	541514	Screw Driver (small)
545932	Arm Shaft (horizontal) Screw (back) Gasket	541515-001	Cloth Guide (purchased part)
545949	Feed Lifting Rock Shaft Flanged Bushing (2)	545927	Oil Can (950 cc, filled with Singer Type "C" Oil)
545949	Feed Rock Shaft Flanged Bushing (back)	548701	Screw Driver (long)
545950	Rotating Hook (body) with two 549182	549184-001	Cloth Guide Screw (purchased part)
545951	Rotating Hook complete, Nos. 545950, 545954, 545955, three 549187 and four 549186	CAT.1901	Needle (135 x 7 #14) (for 491D200AA) (3)
545954	Rotating Hook Section	CAT.1901	Needle (135 x 7 #16) (for 491D300AA) (3)
545955	Rotating Hook Thread Guard		
545983	Presser Bar Guide Bracket with 545099		<u>MACHINE BASE AND OIL RESERVOIR</u>
545987	Feed Bar		
545990	Rotating Hook and Rotating Hook Bobbin Case Holder complete, Nos. 545951 and 545994	540471	Machine Base and Oil Reservoir Plug (2)
545991	Rotating Hook, Rotating Hook Bobbin Case Holder and Rotating Hook Bobbin Case complete, Nos. 505358 and 545990	540500	Machine Base and Oil Reservoir Gasket (rubber)
545994	Rotating Hook Bobbin Case Holder	545036 (819)	Machine Base and Oil Reservoir Oil Drain Plug Screw
546925	Face Plate Gasket	545064 (805)	Machine and Machine Base and Oil Reservoir Screw Hole Plug Screw
546927	Thread Take-up Spring Regulator with 504047	545754	Machine Base and Oil Reservoir Oil Drain Plug Screw Gasket (4)
546928	Thread Take-up Spring Regulator 546927 with 540533 and 540534	545925	Machine and Machine Base and Oil Reservoir Screw with Washer (for shipping purposes only)
546933	Needle Bar Bushing (lower) 540524 with 52171	545938	Machine Base and Oil Reservoir
548091	Feed Rock Shaft Driving Frame Spring		<u>KNEE LIFTER PARTS</u>
548091	Oil Removing Pump Spring	505402	Rock Shaft Knee Arm Plate
548479	Oil Pump (centrifugal) (body) Position Pin (2)	540686	Rock Shaft Spring (coil)
548970	Presser Bar Lifting Lever Pin Spring	545912	Bell Crank Plunger
549128	Thread Eyelet (side of arm) Screw (Spec. No. 1003)	545913	Rock Shaft
549182 (803)	Rotating Hook Screw (2)	545915	Rock Shaft Crank
549183 (850)	Feed Lifting Rock Shaft Crank (back) Clamping Screw (2)	545917	Rock Shaft Knee Arm
549183 (850)	Feed Rock Shaft Crank Clamping Screw	545918	Rock Shaft Knee Arm Hub
549186 (806)	Rotating Hook Thread Guard Screw (4)	545921	Rock Shaft Spring
549187 (803)	Rotating Hook Section Screw (3)	545922	Rock Shaft Stop Dog
549230 (805)	Arm Shaft (horizontal) Screw Plug (front)	545923	Rock Shaft complete, Nos. 505402, 540686, 545913, 545915, 545917, 545918, 545921, 545922 and 546736
549288 (830)	Feed Reverse Lever Hinge Stud Crank Connecting Link Screw (2)	546736	Rock Shaft Spring (coil) Washer
549336 (825)	Thread Guard (side of arm) Screw		
549363 (819)	Presser Bar Guide and Pressure Regulating Thumb Screw		<u>AVAILABLE AT EXTRA CHARGE</u>
549382	Feed Regulating Screw (Spec. No. 1050)	12481	Feed Dog for 12482 (for heavy material sewing)
549383	Feed Regulating Screw Guide Screw (Spec. No. 1003)	12482	Throat Plate for 12481 (for heavy material sewing)
549384	Feed Reverse Lever Spring Screw (Spec. No. 1019)	52032	Throat Plate (large needle hole) for 149031
CAT.1901	Needle (135 x 7 #14)	142060	Throat Plate (small needle hole) for 149057

PARTS FOR 491D300AA MACHINE
WHICH DIFFER FROM 491D200AA MACHINE

125314	Tension Spring, in place of 540682	540695	Machine Pulley with two 504119 (part for trimmer device)
142061	Throat Plate (large needle hole) for 149057, in place of 52033	545945	Box Wrench
149057	Feed Dog, 21 teeth (22 teeth per inch), in place of 149031	549230	Arm Shaft (horizontal) Screw Plug (back) (part for trimmer device)
540424	Oil Wick Holder, in place of 545860		
540453	Oil Wick (cotton) (2), in place of 545859		
540525	Needle Bar Bushing (lower), in place of 540524		
540546	Needle Bar Bushing (lower) 540525 with 545935, in place of 546933		
540664	Oil Wick Holder complete, Nos. 540424, 545051 and two 540453, in place of 545861		
540685	Thread Take-up Crank, in place of 540677		
540687	Thread Take-up complete, Nos. 540662, 540676, 540688, 545904 and 545907, in place of 540678		