

Form 2148w  
November, 1930  
PRINTED IN U. S. A.

# LIST OF PARTS



## MACHINES

Nos. 61w91 and 61w92

---

THE SINGER MANUFACTURING COMPANY

COPYRIGHT, U. S. A., 1919, 1922, 1924, 1929 AND 1930,  
BY THE SINGER MANUFACTURING CO.  
ALL RIGHTS RESERVED FOR ALL COUNTRIES

## INDEX

---

	PAGE
ACCESSORIES .....	25
BINDER AND FOLDER .....	28
BOBBIN WINDER .....	25
KNEE LIFTER .....	26
KNIFE GRINDER .....	28
MACHINE NO. 61w91 .....	7
"    "    61w92 .....	16
NUMERICAL LIST OF PARTS .....	31
RIBBON REEL .....	27
THROAT PLATES .....	29

# Instructions for Ordering

---

In ordering from this list, use **ONLY** the **PART** number in the **FIRST** column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above cases) must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style or finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.

These letters **MUST BE USED** when they appear in the list and **AFTER** the number, as in the list.

In this series

200001 to 201500 are Screw Numbers.

201501 to 201800 are Nut Numbers.

201801 to 202000 are Roller Numbers.

202001 and upwards are Numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are **NOT TO BE USED** in ordering.

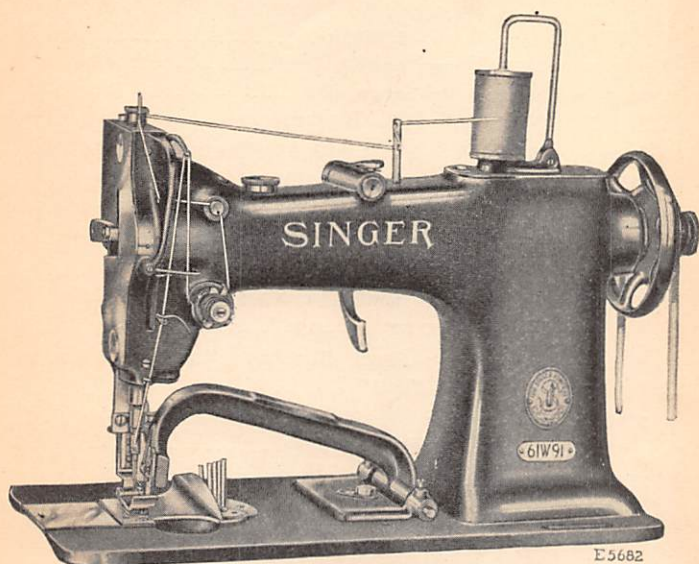
Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (\*) are furnished only when repairs are made at the factory.



## LIST OF PARTS COMPLETE

FOR

**MACHINE No. 61w91****VERTICAL SEAM TRIMMER AND BINDER**

For Trimming and Binding Light and Medium Fabrics at one operation, using Folded Binding. For Ladies'

Waists, Dresses, Muslin Underwear, Wrappers, etc. Also for Binding and Setting in Sleeves.

Knife on Hinged Arm Can Be Thrown  
In or Out of Action.

No.	Plate	Name
*207089	—	Arm .....
207073	10968	" Bushing Hole Plug .....
200352C	10244	" " " " Set Screw
203091	13385	" Cap .....
200278H	10244	" " Screw .....
202248	10244	" " " Washer .....
203089	10947	" " Spool Holder Base .....
203090	10947	" " " " " 203089
with 200079H and 204296 .....		

No.	Plate	Name
200585H	10373	Arm Cap Spool Holder Base Screw
204296	10947	" " " " Wire .....
200079H	13384	" " " " " Hinge Screw .....
203092	—	Arm Cap and Spool Holder complete, Nos. 203090, 203091 and two 200585H .....
204235	13375	Arm Position Pin .....
200010E	13384	" Screw (3) .....
202005	13384	" " Washer (3) .....
206923	13385	" Shaft with 200357E and 203100
202243	10947	" " Bushing (back) with 202244 .....
202244	—	Arm Shaft Bushing (back) Oil Packing (wick) .....
200338C	10244	Arm Shaft Bushing (back) Set Screw .....
207080	13385	Arm Shaft Bushing (front) with 202244 .....
202244	—	Arm Shaft Bushing (front) Oil Packing (wick) .....
200502B	10246	Arm Shaft Bushing (front) Oil Packing Thumb Screw .....
200338C	10244	Arm Shaft Bushing (front) Set Screw .....
202530	13385	Arm Shaft Connection Belt .....
202252	10244	" " " " Pulley with 200327C, 200602E and two 202253 .....
200602E	10244	Arm Shaft Connection Belt Pulley Position Screw .....
200327C	10244	Arm Shaft Connection Belt Pulley Set Screw .....
202253	10244	Arm Shaft Connection Belt Pulley Spring Flange .....
203100	—	Arm Shaft Oil Packing (wick) ....
200357E	10244	" " " " Stop Screw..
202255	10948	Balance Wheel (belt groove $2\frac{1}{8}$ in. diam.) with 200328C and 200335C
200328C	10244	Balance Wheel Position Screw ....
200335C	10244	" " Set Screw .....
*207088	—	Bed .....
207083	13385	" Slide (front) .....
206925	10947	Binder Ease Plate with five 229000
206928	10947	" " " 206925 with 201498B, 206927, 230251 and two 200155F .....

No.	Plate	Name
200577H	13384	Binder Base Plate Screw (2) .....
206927	10947	" Guard .....
201498B	13384	" " Screw .....
225647	10951	" Head, made for tapes or folded strips from $\frac{1}{4}$ to $\frac{3}{4}$ in., in steps of $\frac{1}{32}$ inch .....
200155F	10949	Binder Head Screw .....
230251	10951	" " " Washer .....
229000	13384	" Tape Tension Pin .....
202265	13384	Bobbin .....
*202806	—	" Case .....
202267	13384	" " Latch .....
*202056	—	" " " Pin .....
202269	13384	" " " Plunger .....
202270	13384	" " " Spring .....
202716	13384	" " " Tension Spring .....
200984C	13384	" " " "Regulating Screw .....
200594C	13384	Bobbin Case Tension Spring Screw
202533	13384	Bobbin Case complete, Nos. 200594C, 200984C, 202056, 202267, 202269, 202270, 202716 and 202806 .....
206951	10947	Face Plate .....
206929	13384	Feed Bar with 206970 .....
200641C	10246	" " Hinge Screw (driving)..
201522E	10246	" " " " Nut .....
202756	13384	" " Lifting Connection Link
206932	13384	" " " " " "
		Bushing .....
206970	13384	Feed Bar Lifting Connection Link Bushing (for Feed Bar) .....
200182E	10949	Feed Bar Lifting Connection Link Stop Screw .....
206930	10951	Feed Dog .....
200106E	13384	" " Screw (2) .....
202297	10948	" Driving Connection with 200054E and 202277 .....
202298	13384	Feed Driving Connection Crank with 200038C .....
200038C	13384	Feed Driving Connection Crank Pinch Screw .....
200545C	13384	Feed Driving Connection Hinge Screw .....
201518E	13384	Feed Driving Connection Hinge Screw Nut .....
202277	—	Feed Driving Connection Oil Pack- ing (wick) .....
200054E	10246	Feed Driving Connection Pinch Screw .....



No.	Plate	Name
202300	10246	Feed Driving Eccentric Regulating Bracket .....
203134	—	Feed Driving Eccentric Regulating Bracket 202300 with 202252, two each 201014c and 201525E .....
201014c	13384	Feed Driving Eccentric Regulating Bracket Hinge Screw .....
201525E	13384	Feed Driving Eccentric Regulating Bracket Hinge Screw Nut .....
202301	10246	Feed Driving Eccentric Regulating Bracket Plunger .....
202595	10246	Feed Driving Eccentric Regulating Bracket Plunger Spring .....
200607c	10246	Feed Driving Eccentric Regulating Bracket Plunger Spring Stop Screw .....
201014c	13384	Feed Driving Eccentric Regulating Bracket Stop Screw .....
201525E	13384	Feed Driving Eccentric Regulating Bracket Stop Screw Nut .....
200429c	10246	Feed Driving Eccentric Regulating Screw .....
200383c	10246	Feed Driving Eccentric Regulating Screw Check Screw .....
202303	10948	Feed Driving Rock Shaft .....
206931	—	" " " " 202303 with 200182E, 200641c, 201522E, 202756 and 206929 .....
202305	13384	Feed Driving Rock Shaft Center (2)
200043c	10246	" " " " " Set Screw (2) .....
202306	10948	Feed Lifting Connection with 200054E and 202277 .....
*206948	—	Feed Lifting Connection Crank
206952	13384	" " " " 206948 with 200038c and 200378c
200038c	13384	Feed Lifting Connection Crank Pinch Screw .....
200378c	13386	Feed Lifting Connection Crank Set Screw .....
202307	10246	Feed Lifting Connection Eccentric with 200382c and 200437c .....
200437c	10246	Feed Lifting Connection Eccentric Position Screw .....
200382c	10373	Feed Lifting Connection Eccentric Set Screw .....
200545c	13384	Feed Lifting Connection Hinge Screw .....
201518E	13384	Feed Lifting Connection Hinge Screw Nut .....



No.	Plate	Name
202277	—	Feed Lifting Connection Oil Packing (wick) .....
200054E	10246	Feed Lifting Connection Pinch Screw .....
206933	13385	Feed Lifting Rock Shaft (hollow) and Hook Shaft Bearing with 206932 .....
202625	10949	Feed Lifting Rock Shaft Stop Collar with two 200383c .....
200383c	10246	Feed Lifting Rock Shaft Stop Collar Set Screw .....
202310	13385	Feed Regulating Spindle with 202311, 202443 and 202619 .....
*202311	—	Feed Regulating Spindle Head ....
202443	10244	" " " " Pin
202619	13375	" " " " Position Pin .....
*244010	—	Hook (sewing) .....
244011	13387	" 244010 with 200145c, 200596F, 200614c, 202320, 203101, 206775, 206852 and 244014 .....
244012	—	Hook and Bobbin Case complete, Nos. 202533 and 244011 .....
244013	13375	Hook Counter Balance with 200444c
200444c	13375	" " " Position Screw
206852	13375	" Gib .....
200614c	13386	" " Hinge Screw .....
200596F	13386	" " Screw .....
203101	—	" Oil Wick .....
*202320	—	" Shaft, 11 $\frac{7}{16}$ in. long .....
202323	10244	" " Connection Belt Pulley with 202324 and two 201018c ....
201018c	13375	Hook Shaft Connection Belt Pulley Set Screw .....
202324	10244	Hook Shaft Connection Belt Pulley Spring Flange .....
202260	—	Hook Shaft Oil Packing (wick) (2) .....
206775	10968	Hook Shaft Pin .....
244014	13375	" Washer .....
200145c	13386	" " Screw .....
208490	13387	Knee Lifter Connection Lever ....
202877	—	" " " " 208490 with 202447, 202876 and two 200262H .....
200262H	10248	Knee Lifter Connection Lever Hinge Screw .....
202447	13387	Knee Lifter Connection Lever Lifting Rod with 202302 .....

No.	Plate	Name
202302	10248	Knee Lifter Connection Lever Lifting Rod Cotter Pin .....
202876	13387	Knee Lifter Lifting Lever .....
200262H	10248	" " " Hinge Screw .....
206934	10951	Knife .....
207062	10967	" Arm with 200076D .....
207063	10967	" " Base Plate with two 200061D .....
207064	10967	Knife Arm Base Plate 207063 with 207062 and two 207065 .....
206939	10951	Knife Arm Base Plate Position Plate .....
200574E	13386	Knife Arm Base Plate Position Plate Screw (2) .....
200540E	10949	Knife Arm Base Plate Screw .....
202622	10949	" " " " " Washer
207065	10951	" " Center .....
200061D	10968	" " " Set Screw .....
206941	10951	" " Driving Link .....
200994C	10949	" " " " Hinge Screw (lower) .....
200993C	10949	Knife Arm Driving Link Hinge Screw (upper) .....
202887	10948	Knife Bar .....
206940	10949	" " Cross Head .....
206942	—	" " " " 206940 with 200993C, 200994C and 206941 ....
200898D	10949	Knife Bar Cross Head Screw (2) ..
202889	10373	" " Driving Eccentric with 200382C and 200437C .....
202890	10373	Knife Bar Driving Eccentric Fork with 200382C and 201464C .....
201464C	10968	Knife Bar Driving Eccentric Fork Position Screw .....
200382C	10373	Knife Bar Driving Eccentric Fork Set Screw .....
200437C	10246	Knife Bar Driving Eccentric Position Screw .....
200382C	10373	Knife Bar Driving Eccentric Set Screw .....
202891	10947	Knife Bar Driving Shaft Crank with 200694F and 201525E .....
200694F	10373	Knife Bar Driving Shaft Crank Screw Stud .....
201525E	13384	Knife Bar Driving Shaft Crank Screw Stud Nut .....

No.	Plate	Name
202892	10373	Knife Bar Friction Gib .....
202893	10373	" " Lifting Spring (spiral)
202894	10949	" " " " Bracket
200585H	10373	" " " " "
		Screw (2) .....
200485E	10373	Knife Bar Lifting Spring Thumb Screw .....
206949	10949	Knife Bar Stop Plate (lower) Face Plate Hinge and Holder .....
206950	10949	Knife Bar Stop Plate (upper) and Face Plate Stop .....
200582H	10252	Knife Bar Stop Plate Screw (4) ..
200076D	10949	" Screw .....
202898	10947	" Switch-out Handle with two 200403c .....
200403C	10968	Knife Switch-out Handle Set Screw
202899	10373	" " " Shaft ....
202900	10373	" " " Spring (spiral) .....
202901	10949	*Needle Bar with 200141F .....
202550	13386	" " Bushing .....
207022	—	" " " 202550 with 202901
200352C	10373	" " " Set Screw ....
202331	10248	" " Connecting Link .....
236073	13375	" " " " Oil Guard .....
200161D	10247	Needle Bar Connecting Link Oil Guard Screw .....
202333	10248	Needle Bar Connecting Link Stud with 202254 .....
202254	—	Needle Bar Connecting Link Stud Oil Packing (wick) .....
200374C	13375	Needle Bar Connecting Link Stud Set Screw .....
*206891	—	Needle Bar Connectng Stud .....
202329	10248	" " " " 206891 with 200086c and 202330 .....
202330	—	Needle Bar Connecting Stud Oil Packing (wick) .....
200086C	10248	Needle Bar Connecting Stud Pinch Screw .....
202328	10947	Needle Bar Crank with 200335C, 200428C, 202333 and two 200374C
203117	—	Needle Bar Crank 202328 with 202329, 202331 and 202398 to 202400 .....
203172	10248	Needle Bar Crank Friction Washer
200428C	10248	" " " Position Screw ..
200335C	10244	" " " Set Screw .....
200141F	10248	" Set Screw .....



No.	Plate	Name
244033	—	Presser Bar (hollow) .....
202335	10948	" " 244033 with 200074F..
207072	10249	" " Bushing .....
200352C	10373	" " " Set Screw ....
202339	10249	" " Lifter .....
200653C	10249	" " " Hinge Screw ...
244004	13375	" " Lifting Releasing Lev- er Bracket .....
200260D	10249	Presser Bar Lifting Releasing Lev- er Bracket Guide Screw .....
206608	13375	Presser Bar Lifting Releasing Lev- er Bracket Spring .....
202337	10249	Presser Bar Position Guide .....
202338	10249	" " " " Lever with 200086F .....
200086F	10248	Presser Bar Position Guide Lever Pinch Screw .....
200352C	10373	Presser Bar Position Guide Set Screw .....
202343	10949	Presser Bar Spring .....
202346	10249	" " " Stop Rod .....
200492B	10249	" " Thumb Screw (pres- sure regulating) .....
202090	10949	Presser Foot Hinge Pin .....
206943	—	" " Plate .....
202923	—	" " Shank .....
206944	10951	Presser Foot (hinged) complete, for trimming margins from $\frac{1}{8}$ to $\frac{1}{2}$ in., in steps of $\frac{1}{32}$ in., Nos. 202090, 202923 and 206943 .....
200074F	10249	Presser Foot Screw .....
202397	13386	Take-up (auxiliary) .....
200842E	13386	" " Screw .....
202398	10247	" Lever .....
202399	10247	" " Driving Stud with 202277 .....
202277	—	Take-up Lever Driving Stud Oil Packing (wick) .....
202400	10247	Take-up Lever Hinge Stud with 202423 .....
202423	—	Take-up Lever Hinge Stud Oil Packing (wick) .....
200383C	10246	Take-up Lever Hinge Stud Set Screw .....
202401	10247	Take-up Lever Oiling Felt .....
200132E	10247	" " " " Screw..
244007	10247	Tension Disc (back) .....
244008	10247	" " (front) .....
202404	10247	" Release Plunger .....



No.	Plate	Name
202405	10247	Tension Release Washer .....
202407	10881	" Spring .....
200625F	10247	" Stud with 204925 .....
200061C	10968	" " Set Screw .....
204925	13386	" " Washer .....
201572B	10881	" Thumb Nut .....
202409	10252	Tension complete, Nos. 200625F, 201572B, 202405, 202407, 202410, 244007 and 244008 .....
202410	10252	Thread Controller Spring .....
202411	10252	" " " Stop.....
200132E	10247	" " " Screw
202412	10252	" Guide .....
202413	10252	" " .....
202414	10252	" " .....
202415	10252	" " .....
202979	10252	" " .....
200582H	10252	" " Screw .....
200355H	10252	" " Set Screw .....
200368H	13386	" " " " .....
202091	10252	" Retainer Sleeve .....
202092	10252	" " Spring .....
204058	10252	" " Stud .....
200368H	13386	" " " Set Screw .....
204059	—	Thread Retainer complete, Nos. 202091, 202092 and 204058 .....
206955	—	Throat Plate, 50 needle hole, for needle sizes 14 and 15, with 202534 and two 200582H .....
202534	13386	Throat Plate Bobbin Case Stop
200582H	10252	" " " " " "
		Screw .....
206945	13386	Throat Plate Knife Cutting Plate, for trimming margins $\frac{3}{16}$ , $\frac{7}{32}$ and $\frac{1}{4}$ inch .....
200145C	13386	Throat Plate Knife Cutting Plate Screw .....
206946	10951	Throat Plate complete, 50 needle hole, for needle sizes 14 and 15, for trimming margins $\frac{3}{16}$ , $\frac{7}{32}$ and $\frac{1}{4}$ in., Nos. 206945, 206955 and two 200145C .....
200577H	13384	Throat Plate Screw (2) .....

LIST OF PARTS COMPLETE  
FOR  
**MACHINE No. 61w92**

VERTICAL SEAM TRIMMER

For Light and Medium Fabrics. Knife on Hinged Arm

Can Be Thrown In or Out of Action.

No.	Plate	Name
*207089	—	Arm .....
207073	10968	" Bushing Hole Plug .....
200352C	10244	" " " " Set Screw
203091	13385	" Cap .....
200278H	10244	" " Screw .....
202248	10244	" " " Washer .....
203089	10947	" " Spool Holder Base .....
203090	10947	" " " " " 203089 with 200079H and 204296 .....
200585H	10373	Arm Cap Spool Holder Base Screw
204296	10947	" " " " Wire .....
200079H	13384	" " " " " Hinge Screw .....
203092	—	Arm Cap and Spool Holder complete, Nos. 203090, 203091 and two 200585H .....
204235	13375	Arm Position Pin .....
200010E	13384	" Screw (3) .....
202005	13384	" " Washer (3) .....
206923	13385	" Shaft with 200357E and 203100
202243	10947	" " Bushing (back) with 202244 .....
202244	—	Arm Shaft Bushing (back) Oil Packing (wick) .....
200338C	10244	Arm Shaft Bushing (back) Set Screw .....
207080	13385	Arm Shaft Bushing (front) with 202244 .....
202244	—	Arm Shaft Bushing (front) Oil Packing (wick) .....
200502B	10246	Arm Shaft Bushing (front) Oil Packing Thumb Screw .....
200338C	10244	Arm Shaft Bushing (front) Set Screw .....

No.	Plate	Name
202530	13385	Arm Shaft Connection Belt .....
202252	10244	" " " " Pulley with 200327C, 200602E and two 202253 .....
200602E	10244	Arm Shaft Connection Belt Pulley Position Screw .....
200327C	10244	Arm Shaft Connection Belt Pulley Set Screw .....
202253	10244	Arm Shaft Connection Belt Pulley Spring Flange .....
203100	—	Arm Shaft Oil Packing (wick) ...
200357E	10244	" " " " Stop Screw
202255	10948	Balance Wheel (belt groove $2\frac{1}{8}$ in. diam.) with 200328C and 200335C
200328C	10244	Balance Wheel Position Screw ....
200335C	10244	" " Set Screw .....
*207088	—	Bed .....
207004	13387	" Plate (back) .....
200577H	13384	" " " Screw (2) .....
244001	13387	" " (cover plate) .....
200092D	10949	" " " " Screw .....
244002	—	" Slide (front) .....
244003	13387	" " 244002 with 202115 and two 200139E .....
202115	13386	Bed Slide (front) Spring .....
200139E	13386	" " " " Screw ....
202265	13384	Bobbin .....
*202806	—	" Case .....
202267	13384	" " Latch .....
*202056	—	" " " Pin .....
202269	13384	" " " Plunger .....
202270	13384	" " " Spring .....
202716	13384	" " Tension Spring .....
200984C	13384	" " " " Regulat- ing Screw .....
200594C	13384	Bobbin Case Tension Spring Screw
202533	13384	Bobbin Case complete, Nos. 200594C, 200984C, 202056, 202267, 202269, 202270, 202716 and 202806 .....
206951	10947	Face Plate .....
206929	13384	Feed Bar with 206970 .....
200641C	10246	" " Hinge Screw (driving)..
201522E	10246	" " " " Nut .....
202756	13384	" " Lifting Connection Link
206932	13384	" " " " " "
		Bushing .....
206970	13384	Feed Bar Lifting Connection Link Bushing (for feed bar) .....



No.	Plate	Name
200182E	10949	Feed Bar Lifting Connection Link Stop Screw .....
207025	10968	Feed Dog .....
200106E	13384	" " Screw (2) .....
202297	10948	" Driving Connection with 200054E and 202277 .....
202298	13384	Feed Driving Connection Crank with 200038C .....
200038C	13384	Feed Driving Connection Crank Pinch Screw .....
200545C	13384	Feed Driving Connection Hinge Screw .....
201518E	13384	Feed Driving Connection Hinge Screw Nut .....
202277	—	Feed Driving Connection Oil Pack- ing (wick) .....
200054E	10246	Feed Driving Connection Pinch Screw .....
202300	10246	Feed Driving Eccentric Regulating Bracket .....
203134	—	Feed Driving Eccentric Regulating Bracket 202300 with 202252, two each 201014C and 201525E .....
201014C	13384	Feed Driving Eccentric Regulating Bracket Hinge Screw .....
201525E	13384	Feed Driving Eccentric Regulating Bracket Hinge Screw Nut .....
202301	10246	Feed Driving Eccentric Regulating Bracket Plunger .....
202595	10246	Feed Driving Eccentric Regulating Bracket Plunger Spring .....
200607C	10246	Feed Driving Eccentric Regulating Bracket Plunger Spring Stop Screw .....
201014C	13384	Feed Driving Eccentric Regulating Bracket Stop Screw .....
201525E	13384	Feed Driving Eccentric Regulating Bracket Stop Screw Nut .....
200429C	10246	Feed Driving Eccentric Regulating Screw .....
200383C	10246	Feed Driving Eccentric Regulating Screw Check Screw .....
202303	10948	Feed Driving Rock Shaft .....
206931	—	" " " " 202303 with 200182E, 200641C, 201522E, 202756 and 206929 .....
202305	13384	Feed Driving Rock Shaft Center (2)
200043C	10246	" " " " " Set Screw (2) .....



No.	Plate	Name
202306	10948	Feed Lifting Connection with 200054E and 202277 .....
*206948	—	Feed Lifting Connection Crank
206952	13384	" " " "
		206948 with 200038c and 200378c
200038c	13384	Feed Lifting Connection Crank Pinch Screw .....
200378c	13386	Feed Lifting Connection Crank Set Screw .....
202307	10246	Feed Lifting Connection Eccentric with 200382c and 200437c .....
200437c	10246	Feed Lifting Connection Eccentric Position Screw .....
200382c	10373	Feed Lifting Connection Eccentric Set Screw .....
200545c	13384	Feed Lifting Connection Hinge Screw .....
201518E	13384	Feed Lifting Connection Hinge Screw Nut .....
202277	—	Feed Lifting Connection Oil Pack- ing (wick) .....
200054E	10246	Feed Lifting Connection Pinch Screw .....
206933	13385	Feed Lifting Rock Shaft (hollow) and Hook Shaft Bearing with 206932 .....
202625	10949	Feed Lifting Rock Shaft Stop Col- lar with two 200383c .....
200383c	10246	Feed Lifting Rock Shaft Stop Col- lar Set Screw .....
202310	13385	Feed Regulating Spindle with 202311, 202443 and 202619 .....
*202311	—	Feed Regulating Spindle Head ....
202443	10244	" " " " Pin..
202619	13375	" " " " Posi- tion Pin .....
*244010	—	Hook (sewing) .....
244011	13387	" 244010 with 200145c, 200596E, 200614c, 202320, 203101, 206775, 206852 and 244014 .....
244012	—	Hook and Bobbin Case complete, Nos. 202533 and 244011 .....
244013	13375	Hook Counter Balance with 200444c
200444c	13375	" " " Position Screw

No.	Plate	Name
206852	13375	Hook Gib .....
200614C	13386	" " Hinge Screw .....
200596F	13386	" " Screw .....
203101	—	" Oil Wick .....
*202320	—	" Shaft, 11 $\frac{7}{8}$ in. long .....
202323	10244	" " Connection Belt Pulley with 202324 and two 201018c ....
201018c	13375	Hook Shaft Connection Belt Pulley Set Screw .....
202324	10244	Hook Shaft Connection Belt Pulley Spring Flange .....
202260	—	Hook Shaft Oil Packing (wick) (2)
206775	10968	" " Pin .....
244014	13375	" Washer .....
200145C	13386	" " Screw .....
208490	13387	Knee Lifter Connection Lever .....
202877	—	" " " " 208490 with 202447, 202876 and two 200262H .....
200262H	10248	Knee Lifter Connection Lever Hinge Screw .....
202447	13387	Knee Lifter Connection Lever Lift- ing Rod with 202302 .....
202302	10248	Knee Lifter Connection Lever Lift- ing Rod Cotter Pin .....
202876	13387	Knee Lifter Lifting Lever .....
200262H	10248	" " " " Hinge Screw .....
207007	10951	Knife .....
207066	10967	" Arm with two 200076D .....
207067	10967	" " Base Plate with two 200061D .....
207068	10967	Knife Arm Base Plate 207067 with 207066 and two 207065 .....
207011	13386	Knife Arm Base Plate Position Plate .....
200574E	13386	Knife Arm Base Plate Position Plate Screw (2) .....
200540E	10949	Knife Arm Base Plate Screw ....
202622	10949	" " " " Washer
207065	10951	" " Center .....
200061D	10968	" " " Set Screw .....
207006	13386	" " Driving Link .....
200994C	10949	" " " " Hinge Screw (lower) .....
200993C	10949	Knife Arm Driving Link Hinge Screw (upper) .....

No.	Plate	Name
202887	10948	Knife Bar .....
206940	10949	" " Cross Head .....
207016	—	" " " " 206940 with 200993c, 200994c and 207006 ....
200898D	10949	Knife Bar Cross Head Screw (2) ..
202889	10373	" " Driving Eccentric with 200382c and 200437c .....
202890	10373	Knife Bar Driving Eccentric Fork with 200382c and 201464c .....
201464C	10968	Knife Bar Driving Eccentric Fork Position Screw .....
200382C	10373	Knife Bar Driving Eccentric Fork Set Screw .....
200437C	10246	Knife Bar Driving Eccentric Posi- tion Screw .....
200382C	10373	Knife Bar Driving Eccentric Set Screw .....
202891	10947	Knife Bar Driving Shaft Crank with 200694F and 201525E .....
200694F	10373	Knife Bar Driving Shaft Crank Screw Stud .....
201525E	13384	Knife Bar Driving Shaft Crank Screw Stud Nut .....
202892	10373	Knife Bar Friction Gib .....
202893	10373	" " Lifting Spring (spiral)
202894	10949	" " " " Bracket
200585H	10373	" " " " " " Screw (2) .....
200485E	10373	Knife Bar Lifting Spring Thumb Screw .....
206949	10949	Knife Bar Stop Plate (lower) Face Plate Hinge and Holder .....
206950	10949	Knife Bar Stop Plate (upper) and Face Plate Stop .....
200582H	10252	Knife Bar Stop Plate Screw (4) ..
200076D	10949	" Screw .....
202898	10947	" Stitch-out Handle with two 200403c .....
200403C	10968	Knife Stitch-out Handle Set Screw
202899	10373	" " " Shaft .....
202900	10373	" " " Spring (spiral) .....
202901	10949	Needle Bar with 200141F .....
202550	13386	" " Bushing .....
207022	—	" " " 202550 with 202901 .....
200352C	10373	Needle Bar Bushing Set Screw ...
202331	10248	" " Connecting Link .....
236073	13375	" " " " Oil Guard .....



No.	Plate	Name
200161D	10247	Needle Bar Connecting Link Oil Guard Screw .....
202333	10248	Needle Bar Connecting Link Stud with 202254 .....
202254	—	Needle Bar Connecting Link Oil Packing (wick) .....
200374C	13375	Needle Bar Connecting Link Stud Set Screw .....
*206891	—	Needle Bar Connecting Stud .....
202329	10248	" " " " 206891 with 200086C and 202330 .....
202330	—	Needle Bar Connecting Stud Oil Packing (wick) .....
200086C	10248	Needle Bar Connecting Stud Pinch Screw .....
202328	10947	Needle Bar Crank with 200335C, 200428C, 202333 and two 200374C
203117	—	Needle Bar Crank 202328 with 202329, 202331 and 202398 to 202400 .....
203172	10248	Needle Bar Crank Friction Washer
200428C	10248	" " " Position Screw..
200335C	10244	" " " Set Screw .....
200141F	10248	" Set Screw .....
244033	—	Presser Bar (hollow) .....
202335	10948	" " 244033 with 200074F..
207072	10249	" " Bushing .....
200352C	10373	" " " Set Screw ....
202339	10249	" " Lifter .....
200653C	10249	" " " Hinge Screw ...
244004	13375	" " Lifting Releasing Lever Bracket .....
200260D	10249	Presser Bar Lifting Releasing Lever Bracket Guide Screw .....
206608	13375	Presser Bar Lifting Releasing Lever Bracket Spring .....
202337	10249	Presser Bar Position Guide .....
202338	10249	" " " " Lever with 200086F .....
200086F	10248	Presser Bar Position Guide Lever Pinch Screw .....
200352C	10373	Presser Bar Position Guide Set Screw .....
202343	10949	Presser Bar Spring .....
202346	10249	" " " Stop Rod .....
200492B	10249	" " Thumb Screw (pressure regulating) .....
207012	10951	Presser Foot, for trimming margins from $\frac{3}{32}$ to $\frac{1}{4}$ in., in steps of $\frac{1}{32}$ inch .....



No.	Plate	Name
200074F	10249	Presser Foot Screw .....
202397	13386	Take-up (auxiliary) .....
200842E	13386	" " Screw .....
202398	10247	" Lever .....
202399	10247	" " Driving Stud with 202277 .....
202277	—	Take-up Lever Driving Stud Oil Packing (wick) .....
202400	10247	Take-up Lever Hinge Stud with 202423 .....
202423	—	Take-up Lever Hinge Stud Oil Packing (wick) .....
200383C	10246	Take-up Lever Hinge Stud Set Screw .....
202401	10247	Take-up Lever Oiling Felt .....
200132E	10247	" " " " Screw..
244007	10247	Tension Disc (back) .....
244008	10247	" " (front) .....
202404	10247	" Release Plunger .....
202405	10247	" " Washer .....
202407	10881	" Spring .....
200625F	10247	" Stud with 204925 .....
200061C	10968	" " Set Screw .....
204925	13386	" " Washer .....
201572B	10881	" Thumb Nut .....
202409	10252	Tension complete, Nos. 200625F, 201572B, 202405, 202407, 202410, 244007 and 244008 .....
202410	10252	Thread Controller Spring .....
202411	10252	" " " Stop ....
200132E	10247	" " " " Screw
202412	10252	" Guide .....
202413	10252	" " .....
202414	10252	" " .....
202415	10252	" " .....
202979	10252	" " .....
200582H	10252	" " Screw .....
200355H	10252	" " Set Screw .....
200368H	13386	" " " " .....
202091	10252	" Retainer Sleeve .....
202092	10252	" " Spring .....
204058	10252	" " Stud .....
200368H	13386	" " " Set Screw .....
204059	—	Thread Retainer complete, Nos. 202091, 202092 and 204058 .....
207017	—	Throat Plate, 50 needle hole, for needle sizes 14 and 15, with 202534, 207069 and two 200582H..

No.	Plate	Name
202534	13386	Throat Plate Bobbin Case Stop
200582H	10252	" " " " "
		Screw .....
207013	13386	Throat Plate Knife Cutting Plate, for trimming margins from $\frac{3}{32}$ to $\frac{1}{4}$ in., in steps of $\frac{1}{32}$ inch .....
207069	10968	Throat Plate Knife Cutting Plate Position Pin .....
200583H	13386	Throat Plate Knife Cutting Plate Screw .....
207018	10956	Throat Plate complete, 50 needle hole, for needle sizes 14 and 15, for trimming margins from $\frac{3}{32}$ to $\frac{1}{4}$ in., in steps of $\frac{1}{32}$ in., Nos. 200583H, 207013 and 207017 ....
202872	13386	Throat Plate Position Pin .....
200577H	13384	" " Screw (2) .....

## ACCESSORIES

FOR MACHINE No. 61w91

No.	Plate	Name
202265	13384	Bobbin (5) .....
*225482	—	" Case Screw Driver Blade ...
*225483	—	" " " " Handle ...
225497	12345	Bobbin Case Screw Driver complete, Nos. 225482 and 225483 ..
206934	10951	Knife (3) .....
135 x 5	—	Needles, three each, sizes 12 and 14
206945	13386	Throat Plate Knife Cutting Plate, for trimming margins $\frac{3}{16}$ , $\frac{7}{32}$ and $\frac{1}{4}$ inch .....
228172	—	Drip Pan with four 1 in. wire nails
41400	12345	Machine Rest Pin (wood) .....
12361	13388	Machine Hinge Connection (2) ...
120342	12345	Oiler (copper plated) with 120343..
120343	12345	" Spout, $3\frac{1}{2}$ in. long .....
*225484	—	Screw Driver Blade .....
*225485	—	" " Handle .....
225498	12345	Screw Driver complete ( $7\frac{1}{4}$ in. long), Nos. 225484 and 225485 ..
225554	12345	Wrench (steel) .....

### BOBBIN WINDER

Swing Automatic, Right Hand

225453	10884	Frame with 202277 and 225438 ....
225454	10884	" Hinge Pin .....
202277	—	" Oil Packing (wick) .....
225438	10884	" " Well Cap .....
225455	10884	" Spring .....
225456	10884	" " Plunger .....
202473	10885	Pulley with 200380c .....
200380c	—	" Set Screw .....
225381	10884	Spindle .....
225444	10884	Stop Latch .....
200056E	10884	" " Screw .....
225458	10884	" " Thumb Lever .....
225459	10884	" " " " Hinge Stud
225459	10884	" " " " Joint Stud
202478	10884	" " Trip Lever .....
200299H	10884	" " " " Hinge Screw



No.	Plate	Name
225461	10881	Tension Bracket with 201499B ....
200082D	10881	" " Screw .....
228026	10884	" " " Washer .....
2102	10881	" Disc .....
202407	10881	" Spring .....
201499B	10881	" Stud .....
201572B	10881	" " Thumb Nut .....
225462	10881	Bobbin Winder Tension Bracket complete, Nos. 201572B, 202407, 225461 and two 2102 .....
225433	10885	Bobbin Winder and Tension Bracket Base .....
225382	10885	Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200299H, 202473, 202478, 225381, 225433, 225444, 225453 to 225456, 225458, 225462, 228026, two each 225459 and wood screws $\frac{3}{4}$ in., No. 12, R.H.B. ....

## KNEE LIFTER

2763	14171	Rock Shaft .....
7539	14171	" " Hanger (back) with two wood screws 1 in., No. 10 ..
20093	14171	Rock Shaft Hanger (front) with two wood screws 1 in., No. 10 ..
2765	14171	Rock Shaft Knee Arm .....
2768	—	" " " " 2765 with 2766 and 2767 .....
2766	14171	Rock Shaft Knee Arm Hub with 356c .....
356c	14171	Rock Shaft Knee Arm Hub Set Screw .....
2767	14171	Rock Shaft Knee Plate with 356c..
356c	14171	" " " " Set Screw..
228238	14171	" " Lifting Lever with 356c
228239	—	" " " " 228238 with 8073, 204225, 228240 and 228241..
228240	14171	Rock Shaft Lifting Lever Rod (3 in. long) .....
200529c	14171	Rock Shaft Lifting Lever Rod Set Screw .....
228241	14171	Rock Shaft Lifting Lever Rod Swivel with 200529c .....
204225	14171	Rock Shaft Lifting Lever Rod Swivel Spring .....

No.	Plate	Name
8073	14171	Rock Shaft Lifting Lever Rod Swivel Spring Plunger .....
356c	14171	Rock Shaft Lifting Lever Set Screw
2770	14171	" " Stop Dog with 356c ...
356c	14171	" " " " Set Screw ...
228242	14171	Rock Shaft complete, Nos. 2763, 2768, 7539, 20093, 228239 and two 2770 .....

## RIBBON REEL

225663	—	Ribbon Reel (9 in. diam.) with 225666 .....
225664	13388	Ribbon Reel Supporting Spindle ..
225665	10956	" " " " Base with 225664 and two wood screws $\frac{3}{4}$ in., No. 7 .....
230471	10968	Ribbon Reel Supporting Spindle Hub .....
225666	13388	Ribbon Reel Supporting Spindle Hub 230471 with 225980 .....
225980	13388	Ribbon Reel Supporting Spindle Hub Base .....
225976	—	Ribbon Reel (9 in. diam.) complete, Nos. 225663 and 225665 .....

## FOR MACHINE No. 61w92

Same as for Machine No. 61w91 with the following exceptions:

200157B	10951	Attachment Screw .....
207013	13386	Throat Plate Knife Cutting Plate, for trimming margins from $\frac{3}{32}$ to $\frac{1}{4}$ in., in steps of $\frac{1}{32}$ in., in place of 206945 .....
207007	10951	Knife (3), in place of 206934 .....
228212	—	Drip Pan with four 1 in. wire nails, in place of 228172 .....

Note. Ribbon Reel No. 225976 is not an  
Accessory for 61w92 Machine.

## BINDER AND FOLDER

No.	Plate	Name
231310	10968	Binder and Folder, in gauges $\frac{3}{8}$ , $\frac{1}{2}$ , $\frac{3}{4}$ , $\frac{1}{2}$ and 1 inch .....
206954	13388	Binder Base Plate .....
207028	—	" " " 206954 with 200161D and 206927 .....
206927	10947	Binder Guard .....
200161D	10247	" " Screw .....
200507B	13388	" Thumb Screw .....
207038	—	Binder and Folder on Base Plate complete, Nos. 207028, 231310 and two 200507B .....

## KNIFE GRINDER

FOR MACHINE No. 61w91

206977	—	Emery Wheel, 2 in. diameter .....
206962	10957	" " Driving Shaft .....
201510D	10957	" " " " Nut
204101	10957	" " " " " Washer .....
206963	10957	Emery Wheel Driving Shaft Pulley with two 200403c .....
200403c	10968	Emery Wheel Driving Shaft Pulley Set Screw .....
244040	—	Emery Wheel Guard .....
200054E	10246	" " " Screw .....
206969	—	" " Washer (paper) ....
206964	10957	Knife Grinder Frame with two 54897
54897	10968	" " " Oil Cup .....
206965	10957	" Holder Slide Bracket with 200394C, 200457D and 200473B ..
200457D	10957	Knife Holder Slide Bracket Adjusting Screw .....
206966	10957	Knife Holder Slide Bracket Adjusting Screw Slide Plate .....



No.	Plate	Name
200577H	13384	Knife Holder Slide Bracket Adjusting Screw Slide Plate Screw ....
200394C	10957	Knife Holder Slide Bracket Set Screw .....
206967	10957	Knife Holder Slide Bracket Shaft
200473B	10957	" Set Screw .....
206968	—	Knife Grinder complete, Nos. 200577H, 201510D, 204101, 206962 to 206967, 206977, 244040, two each 200054E and 206969 .....

## FOR MACHINE No. 61w92

This Knife Grinder is the same as for Machine No. 61w91 with the following exceptions:

207026	10957	Knife Holder Slide Bracket with 200394C, 200457D, 200466D and 200473B, in place of 206965 .....
200466D	10968	Knife Set Screw .....
207027	—	Knife Grinder complete, Nos. 200577H, 201510D, 204101, 206962 to 206964, 206966, 206967, 206977, 207026, 244040, two each 200054E and 206969 .....

## THROAT PLATES

## FOR MACHINE No. 61w91

206957	—	Throat Plate, 50 needle hole, for needle sizes 14 and 15, with 202534 and two 200582H .....
206956	—	Throat Plate Knife Cutting Plate, for trimming margins from $\frac{9}{32}$ to $\frac{7}{16}$ in., in steps of $\frac{1}{32}$ inch .....
206958	10956	Throat Plate complete, 50 needle hole, for needle sizes 14 and 15, for trimming margins from $\frac{9}{32}$ to $\frac{7}{16}$ in., in steps of $\frac{1}{32}$ in., Nos. 206956, 206957 and two 200145C..

No.	Plate	Name
206960	—	Throat Plate, 50 needle hole, for needle sizes 14 and 15, with 202534 and two 200582H .....
206959	—	Throat Plate Knife Cutting Plate, for trimming margins $\frac{1}{8}$ and $\frac{1}{2}$ inch .....
206961	10956	Throat Plate complete, 50 needle hole, for needle sizes 14 and 15, for trimming margins $\frac{1}{8}$ and $\frac{1}{2}$ in., Nos. 206959, 206960 and two 200145c .....
206972	—	Throat Plate, 50 needle hole, for needle sizes 14 and 15, with 202534 and two 200582H .....
206971	—	Throat Plate Knife Cutting Plate, for trimming margins $\frac{1}{8}$ and $\frac{5}{32}$ inch .....
206973	10960	Throat Plate complete, 50 needle hole, for needle sizes 14 and 15, for trimming margins $\frac{1}{8}$ and $\frac{5}{32}$ in., for binding, Nos. 206971, 206972 and two 200145c .....
207020	—	Throat Plate, 53 needle hole, for needle sizes 12 and 13, with 202534 and two 200582H .....
207019	—	Throat Plate Knife Cutting Plate, for trimming margins $\frac{3}{16}$ , $\frac{7}{32}$ and $\frac{1}{4}$ inch .....
207021	10960	Throat Plate complete, 53 needle hole, for needle sizes 12 and 13, for trimming margins $\frac{3}{16}$ , $\frac{7}{32}$ and $\frac{1}{4}$ in., Nos. 207019, 207020 and two 200145c .....

**NUMERICAL LIST OF PARTS**  
**FOR**  
**MACHINES**  
**Nos. 61w91 and 61w92**



# NUMERICAL LIST OF PARTS

No.	Plate	Name
356c	14171	Knee Lifter Rock Shaft Knee Arm Hub Set Screw, for 2766 .....
356c	14171	Knee Lifter Rock Shaft Knee Plate Set Screw, for 2767 .....
356c	14171	Knee Lifter Rock Shaft Lifting Lever Set Screw, for 228238 ....
356c	14171	Knee Lifter Rock Shaft Stop Dog Set Screw, for 2770 .....
2102	10881	Bobbin Winder Tension Disc, for 225462 .....
2763	14171	Knee Lifter Rock Shaft, for 228242
Nos. 2765 to 2767, for 2768		
2765	14171	Knee Lifter Rock Shaft Knee Arm
2766	14171	" " " " " "
		Hub with 356c .....
2767	14171	Knee Lifter Rock Shaft Knee Plate with 356c .....
2768	—	Knee Lifter Rock Shaft Knee Arm 2765 with 2766 and 2767, for 228242 .....
2770	14171	Knee Lifter Rock Shaft Stop Dog with 356c, for 228242 .....
7539	14171	Knee Lifter Rock Shaft Hanger (back) with two wood screws 1 in., No. 10, for 228242 .....
8073	14171	Knee Lifter Rock Shaft Lifting Lever Rod Swivel Spring Plunger, for 228239 .....
12361	13388	Machine Hinge Connection .....
20093	14171	Knee Lifter Rock Shaft Hanger (front) with two wood screws 1 in., No. 10, for 228242 .....
41400	12345	Machine Rest Pin (wood) .....
54897	10968	Knife Grinder Frame Oil Cup, for 206964 .....
120342	12345	Oiler (copper plated) with 120343
120343	12345	" Spout, 3½ in. long, for 120342
200010E	13384	Arm Screw .....
200038c	13384	Feed Driving Connection Crank Pinch Screw, for 202298 .....
200038c	13384	Feed Lifting Connection Crank Pinch Screw, for 206952 .....

No.	Plate	Name
200043C	10246	Feed Driving Rock Shaft Center Set Screw .....
200054E	10246	Feed Driving Connection Pinch Screw, for 202297 .....
200054E	10246	Feed Lifting Connection Pinch Screw, for 202306 .....
200054E	10246	Knife Grinder Emery Wheel Guard Screw, for 206968 and 207027 ...
200056E	10884	Bobbin Winder Stop Latch Screw, for 225382 .....
200061D	10968	Knife Arm Center Set Screw, for 207063 and 207067 .....
200061C	10968	Tension Stud Set Screw .....
200074F	10249	Presser Foot Screw, for 202335 ..
200076D	10949	Knife Screw, for 207062 and 207066
200079H	13384	Arm Cap Spool Holder Wire Hinge Screw, for 203090 .....
200082D	10881	Bobbin Winder Tension Bracket Screw, for 225382 .....
200086C	10248	Needle Bar Connecting Stud Pinch Screw, for 202329 .....
200086F	10248	Presser Bar Position Guide Lever Pinch Screw, for 202338 .....
200092D	10949	Bed Plate (cover plate) Screw, for Machine No. 61w92 .....
200106E	13384	Feed Dog Screw .....
200132E	10247	Take-up Lever Oiling Felt Screw..
200132E	10247	Thread Controller Spring Stop Screw .....
200139E	13386	Bed Slide (front) Spring Screw, for 244003 .....
200141F	10248	Needle Set Screw, for 202901 .....
200145C	13386	Hook Washer Screw, for 244011 ..
200145C	13386	Throat Plate Knife Cutting Plate Screw, for 206946, 206958, 206961, 206973 and 207021 .....
200155F	10949	Binder Head Screw, for 206928 ....
200157B	10951	Attachment Screw, for Machine No. 61w92 .....
200161D	10247	Binder Guard Screw, for 207028 ..
200161D	10247	Needle Bar Connecting Link Oil Guard Screw .....
200182E	10949	Feed Bar Lifting Connection Link Stop Screw, for 206931 .....
200260D	10249	Presser Bar Lifting Releasing Lever Bracket Guide Screw .....
200262H	10248	Knee Lifter Connection Lever Hinge Screw, for 202877 .....
200262H	10248	Knee Lifter Lifting Lever Hinge Screw .....



No.	Plate	Name
200278H	10244	Arm Cap Screw .....
200299H	10884	Bobbin Winder Stop Latch Trip Lever Hinge Screw, for 225382 ..
200327C	10244	Arm Shaft Connection Belt Pulley Set Screw, for 202252 .....
200328C	10244	Balance Wheel Position Screw, for 202255 .....
200335C	10244	Balance Wheel Set Screw, for 202255 .....
200335C	10244	Needle Bar Crank Set Screw, for 202328 .....
200338C	10244	Arm Shaft Bushing (back) Set Screw .....
200338C	10244	Arm Shaft Bushing (front) Set Screw .....
200352C	10373	Arm Bushing Hole Plug Set Screw
200352C	10373	Needle Bar Bushing Set Screw ....
200352C	10373	Presser Bar Bushing Set Screw ..
200352C	10373	" " Position Guide Set Screw .....
200355H	10252	Thread Guide Set Screw .....
200357E	10244	Arm Shaft Oil Packing Stop Screw, for 206923 .....
200368H	13386	Thread Guide Set Screw .....
200368H	13386	" Retainer Stud Set Screw ...
200374C	13375	Needle Bar Connecting Link Stud Set Screw, for 202328 .....
200378C	13386	Feed Lifting Connection Crank Set Screw, for 206952 .....
200380C	—	Bobbin Winder Pulley Set Screw, for 202473 .....
200382C	10373	Feed Lifting Connection Eccentric Set Screw, for 202307 .....
200382C	10373	Knife Bar Driving Eccentric Set Screw, for 202889 .....
200382C	10373	Knife Bar Driving Eccentric Fork Set Screw, for 202890 .....
200383C	10246	Feed Driving Eccentric Regulating Screw Check Screw .....
200383C	10246	Feed Lifting Rock Shaft Stop Collar Set Screw, for 202625 .....
200383C	10246	Take-up Lever Hinge Stud Set Screw .....
200394C	10957	Knife Grinder Knife Holder Slide Bracket Set Screw, for 206965 and 207026 .....
200403C	10968	Knife Grinder Emery Wheel Driv- ing Shaft Pulley Set Screw, for 206963 .....



No.	Plate	Name
200403C	10968	Knife Switch-out Handle Set Screw, for 202898 .....
200428C	10248	Needle Bar Crank Position Screw, for 202328 .....
200429C	10246	Feed Driving Eccentric Regulating Screw .....
200437C	10246	Feed Lifting Connection Eccentric Position Screw, for 202307 .....
200437C	10246	Knife Bar Driving Eccentric Posi- tion Screw, for 202889 .....
200444C	13375	Hook Counter Balance Position Screw, for 244013 .....
200457	10957	Knife Holder Slide Bracket Adjust- ing Screw, for 206965 and 207026
200466D	10968	Knife Set Screw, for 207026 .....
200473B	10957	" " " " 206965 and 207026 .....
200485E	10373	Knife Bar Lifting Spring Thumb Screw .....
200492B	10249	Presser Bar Thumb Screw (pres- sure regulating) .....
200502B	10246	Arm Shaft Bushing (front) Oil Packing Thumb Screw .....
200507B	13388	Binder Thumb Screw, for 207038 ..
200529C	14171	Knee Lifter Rock Shaft Lifting Lever Rod Set Screw, for 228241
200540E	10949	Knife Arm Base Plate Screw .....
200545C	13384	Feed Driving Connection Hinge Screw .....
200545C	13384	Feed Lifting Connection Hinge Screw .....
200574E	13386	Knife Arm Base Plate Position Plate Screw .....
200577H	13384	Bed Plate (back) Screw, for Ma- chine No. 61w92 .....
200577H	13384	Binder Base Plate Screw, for Ma- chine No. 61w91 .....
200577H	13384	Throat Plate Screw .....
200577H	13384	Knife Holder Slide Bracket Adjust- ing Screw Slide Plate Screw, for 206968 and 207027 .....
200582H	10252	Knife Bar Stop Plate Screw .....
200582H	10252	Thread Guide Screw, for 206955, 206957, 206960, 206972, 207017 and 207020 .....
200582H	10252	Throat Plate Bobbin Case Stop Screw, for 206955, 206957, 206960, 206972, 207017 and 207020 .....
200583H	13386	Throat Plate Knife Cutting Plate Screw, for 207018 .....

No.	Plate	Name
200585H	10373	Arm Cap Spool Holder Base Screw, for 203092 .....
200585H	10373	Knife Bar Lifting Spring Bracket Screw .....
200594C	13384	Bobbin Case Tension Spring Screw, for 202533 .....
200596F	13386	Hook Gib Screw, for 244011 .....
200602E	10244	Arm Shaft Connection Belt Pulley Position Screw, for 202252 .....
200607C	10246	Feed Driving Eccentric Regulating Bracket Plunger Spring Stop Screw .....
200614C	13386	Hook Gib Hinge Screw, for 244011 .....
200625F	10247	Tension Stud with 204925, for 202409 .....
200641C	10246	Feed Bar Hinge Screw (driving), for 206931 .....
200653C	10249	Presser Bar Lifter Hinge Screw ..
200694F	10373	Knife Bar Driving Shaft Crank Screw Stud, for 202891 .....
200842E	13386	Take-up (auxiliary) Screw .....
200898D	10949	Knife Bar Cross Head Screw .....
200984C	13384	Bobbin Case Tension Spring Regu- lating Screw, for 202533 .....
200993C	10949	Knife Arm Driving Link Hinge Screw (upper), for 206942 and 207016 .....
200994C	10949	Knife Arm Driving Link Hinge Screw (lower), for 206942 and 207016 .....
201014C	13384	Feed Driving Eccentric Regulating Bracket Hinge Screw, for 203134 ..
201014C	13384	Feed Driving Eccentric Regulating Bracket Stop Screw, for 203134 ..
201018C	13375	Hook Shaft Connection Belt Pulley Set Screw, for 202323 .....
201464C	10968	Knife Bar Driving Eccentric Fork Position Screw, for 202890 .....
201498B	13384	Binder Guard Screw, for 206928 ..
201499B	10881	Bobbin Winder Tension Stud, for 225461 .....
201510D	10957	Knife Grinder Emery Wheel Driv- ing Shaft Nut, for 206968 and 207027 .....
201518E	13384	Feed Driving Connection Hinge Screw Nut .....
201518E	13384	Feed Lifting Connection Hinge Screw Nut .....
201522E	10246	Feed Bar Hinge Screw Nut, for 206931 .....



No.	Plate	Name
201525E	13384	Feed Driving Eccentric Regulating Bracket Hinge Screw Nut, for 203134 .....
201525E	13384	Feed Driving Eccentric Regulating Bracket Stop Screw Nut, for 203134 .....
201525E	13384	Knife Bar Driving Shaft Crank Screw Stud Nut, for 202891 .....
201572B	10881	Bobbin Winder Tension Stud Thumb Nut, for 225462 .....
201572B	10881	Tension Thumb Nut, for 202409 ...
202005	13384	Arm Screw Washer .....
*202056	—	Bobbin Case Latch Pin, for 202533
202090	10949	Presser Foot Hinge Pin, for 206944
202091	10252	Thread Retainer Sleeve, for 204059
202092	10252	" " Spring, for 204059..
202115	13386	Bed Slide (front) Spring, for 244003
202243	10947	Arm Shaft Bushing (back) with 202244 .....
202244	—	Arm Shaft Bushing (back) Oil Packing (wick), for 202243 .....
202244	—	Arm Shaft Bushing (front) Oil Packing (wick), for 207080 .....
202248	10244	Arm Cap Screw Washer .....
202252	10244	" Shaft Connection Belt Pulley with 200327c, 200602E and two 202253, for 203134 .....
202253	10244	Arm Shaft Connection Belt Pulley Spring Flange, for 202252 .....
202254	—	Needle Bar Connecting Link Oil Packing (wick) .....
202254	—	Needle Connecting Link Stud Oil Packing (wick), for 202333 .....
202255	10948	Balance Wheel (belt groove $2\frac{1}{8}$ in. diam.) with 200328c and 200335c
202260	—	Hook Shaft Oil Packing (wick) ...
202265	13384	Bobbin .....
202267	13384	" Case Latch, for 202533 .....
202269	13384	" " " Plunger, for 202533
202270	13384	" " " Spring, for 202533
202277	—	" Winder Frame Oil Packing (wick), for 225453 .....
202277	—	Feed Driving Connection Oil Packing (wick), for 202297 .....
202277	—	Feed Lifting Connection Oil Packing (wick), for 202306 .....
202277	—	Take-up Lever Driving Stud Oil Packing (wick), for 202399 ....
202297	10948	Feed Driving Connection with 200054E and 202277 .....



No.	Plate	Name
202298	13384	Feed Driving Connection Crank with 200038c .....
202300	10246	Feed Driving Eccentric Regulating Bracket, for 203134 .....
202301	10246	Feed Driving Eccentric Regulating Bracket Plunger .....
202302	10248	Knee Lifter Connection Lever Lifting Rod Cotter Pin, for 202447 ..
202303	10948	Feed Driving Rock Shaft, for 206931
202305	13384	" " " " Center ..
202306	10948	" Lifting Connection with 200054E and 202277 .....
202307	10246	Feed Lifting Connection Eccentric with 200382c and 200437c .....
202310	13385	Feed Regulating Spindle with 202311, 202443 and 202619 .....
*202311	—	Feed Regulating Spindle Head, for 202310 .....
*202320	—	Hook Shaft, 11 $\frac{7}{8}$ in. long, for 244011
202323	10244	" Shaft Connection Belt Pulley with 202324 and two 201018c ....
202324	10244	Hook Shaft Connection Belt Pulley Spring Flange, for 202323 .....
202328	10947	Needle Bar Crank with 200335c, 200428c, 202333 and two 200374c, for 203117 .....
202329	10248	Needle Bar Connecting Stud 206891 with 200086c and 202330, for 203117 .....
202330	—	Needle Bar Connecting Stud Oil Packing (wick), for 202329 .....
202331	10248	Needle Bar Connecting Link, for 203117 .....
202333	10248	Needle Bar Connecting Link Stud with 202254, for 202328 .....
202335	10948	Presser Bar 244033 with 200074F ..
202337	10249	" " Position Guide .....
202338	10249	" " " " Lever with 200086F .....
202339	10249	Presser Bar Lifter .....
202343	10949	" " Spring .....
202346	10249	" " " Stop Rod .....
202397	13386	Take-up (auxiliary) .....

Nos. 202398 to 202400, for 203117

202398	10247	Take-up Lever .....
202399	10247	" " Driving Stud with 202277 .....

No.	Plate	Name
202400	10247	Take-up Lever Hinge Stud with 202423 .....
202401	10247	Take-up Lever Oiling Felt .....
202404	10247	Tension Release Plunger .....
202405	10247	" " Washer, for 202409
202407	10881	Bobbin Winder Tension Spring, for 225462 .....
202407	10881	Tension Spring, for 202409 .....
202409	10252	Tension complete, Nos. 200625F, 201572B, 202405, 202407, 202410, 244007 and 244008 .....
202410	10252	Thread Controller Spring, for 202409
202411	10252	" " " Stop .....
202412	10252	" Guide .....
202413	10252	" " .....
202414	10252	" " .....
202415	10252	" " .....
202423	—	Take-up Lever Hinge Stud Oil Packing (wick), for 202400 ....
202443	10244	Feed Regulating Spindle Head Pin, for 202310 .....
202447	13387	Knee Lifter Connection Lever Lift- ing Rod with 202302, for 202877
202473	10885	Bobbin Winder Pulley with 200380c, for 225382 .....
202478	10884	Bobbin Winder Stop Latch Trip Lever, for 225382 .....
202530	13385	Arm Shaft Connection Belt .....
202533	13384	Bobbin Case complete, Nos. 200594c, 200984c, 202056, 202267, 202269, 202270, 202716 and 202806, for 244012 .....
202534	13386	Throat Plate Bobbin Case Stop, for 206955, 206957, 206960, 206972, 207017 and 207020 .....
202550	13386	Needle Bar Bushing, for 207022 ...
202595	10246	Feed Driving Eccentric Regulating Bracket Plunger Spring .....
202619	13375	Feed Regulating Spindle Head Posi- tion Pin, for 202310 .....
202622	10949	Knife Arm Base Plate Screw Washer .....
202625	10949	Feed Lifting Rock Shaft Stop Collar with two 200383c .....
202716	13384	Bobbin Case Tension Spring, for 202533 .....
202756	13384	Feed Bar Lifting Connection Link, for 206931 .....
*202806	—	Bobbin Case, for 202533 .....
202872	13386	Throat Plate Position Pin .....



No.	Plate	Name
202876	13387	Knee Lifter Lifting Lever, for 202877 .....
202877	—	Knee Lifter Connection Lever 208490 with 202447, 202876 and two 200262H .....
202887	10948	Knife Bar .....
202889	10373	" " Driving Eccentric with 200382C and 200437C .....
202890	10373	Knife Bar Driving Eccentric Fork with 200382C and 201464C .....
202891	10947	Knife Bar Driving Shaft Crank with 200694F and 201525E .....
202892	10373	Knife Bar Friction Gib .....
202893	10373	" " Lifting Spring (spiral).
202894	10949	" " " " Bracket
202898	10947	" Switch-out Handle with two 200403C .....
202899	10373	Knife Switch-out Handle Shaft ..
202900	10373	" " " Spring (spiral) .....
202901	10949	Needle Bar with 200141F, for 207022
202923	—	Presser Foot Shank, for 206944 ..
202979	10252	Thread Guide .....
203089	10947	Arm Cap Spool Holder Base, for 203090 .....
203090	10947	Arm Cap Spool Holder Base 203089 with 200079H and 204296, for 203092 .....
203091	13385	Arm Cap, for 203092 .....
203092	—	Arm Cap and Spool Holder com- plete, Nos. 203090, 203091 and two 200585H .....
203100	—	Arm Shaft Oil Packing (wick), for 206923 .....
203101	—	Hook Oil Wick, for 244011 .....
203117	—	Needle Bar Crank 202328 with 202329, 202331 and 202398 to 202400 .....
203134	—	Feed Driving Eccentric Regulating Bracket 202300 with 202252, two each 201014C and 201525E .....
203172	10248	Needle Bar Crank Friction Washer
204058	10252	Thread Retainer Stud, for 204059..
204059	—	Thread Retainer complete, Nos. 202091, 202092 and 204058 .....
204101	10957	Knife Grinder Emery Wheel Driv- ing Shaft Nut Washer, for 206968 and 207027 .....
204225	14171	Knee Lifter Rock Shaft Lifting Lev- er Rod Swivel Spring, for 228239



No.	Plate	Name
204235	13375	Arm Position Pin .....
204296	10947	" Cap Spool Holder Wire, for 203090 .....
204925	13386	Tension Stud Washer, for 200625F
206608	13375	Presser Bar Lifting Releasing Lev- er Bracket Spring .....
206775	10968	Hook Shaft Pin, for 244011 .....
206852	13375	" Gib, for 244011 .....
*206891	—	Needle Bar Connecting Stud, for 202329 .....
206923	13385	Arm Shaft with 200357E and 203100
206925	10947	Binder Base Plate with five 229000, for 206928 .....
206927	10947	Binder Guard, for 206928 and 207028
206928	10947	" Base Plate 206925 with 201498B, 206927, 230251 and two 200155F, for Machine No. 61w91
206929	13384	Feed Bar with 206970, for 206931 ..
206930	10951	" Dog, for 206946, 206958, 206961, 206973 and 207021, for Machine No. 61w91 .....
206931	—	Feed Driving Rock Shaft 202303 with 200182E, 200641C, 201522E, 202756 and 206929 .....
206932	13384	Feed Bar Lifting Connection Link Bushing, for 206933 .....
206933	13385	Feed Lifting Rock Shaft (hollow) and Hook Shaft Bearing with 206932 .....
206934	10951	Knife, for Machine No. 61w91 ....
206939	10951	" Arm Base Plate Position Plate, for Machine No. 61w91 ...
206940	10949	Knife Bar Cross Head, for 206942 and 207016 .....
206941	10951	Knife Arm Driving Link, for 206942
206942	—	" Bar Cross Head 206940 with 200993C, 200994C and 206941, for Machine No. 61w91 .....
206943	—	Presser Foot Plate, for 206944 ....
206944	10951	Presser Foot (hinged) complete, for trimming margins from $\frac{1}{8}$ to $\frac{1}{2}$ in., in steps of $\frac{1}{32}$ in., Nos. 202090, 202923 and 206943, for Machine No. 61w91 .....
206945	13386	Throat Plate Knife Cutting Plate, for trimming margins $\frac{1}{16}$ , $\frac{3}{32}$ and $\frac{1}{4}$ in., for 206946 .....

No.	Plate	Name
206946	10951	Throat Plate complete, 50 needle hole, for needle sizes 14 and 15, for trimming margins $\frac{3}{16}$ , $\frac{7}{32}$ and $\frac{1}{4}$ in., Nos. 206945, 206955 and two 200145c, for 206930 .....
*206948	—	Feed Lifting Connection Crank, for 206952 .....
206949	10949	Knife Bar Stop Plate (lower) Face Plate Hinge and Holder .....
206950	10949	Knife Bar Stop Plate (upper) and Face Plate Stop .....
206951	10947	Face Plate .....
206952	13384	Feed Lifting Connection Crank 206948 with 200038c and 200378c
206954	13388	Binder Base Plate, for 207028 ....
206955	—	Throat Plate, 50 needle hole, for needle sizes 14 and 15, with 202534 and two 200582H, for 206946 .....
206956	—	Throat Plate Knife Cutting Plate, for trimming margins from $\frac{9}{32}$ to $\frac{7}{16}$ in., in steps of $\frac{1}{32}$ in., for 206958
206957	—	Throat Plate, 50 needle hole, for needle sizes 14 and 15, with 202534 and two 200582H, for 206958 .....
206958	10956	Throat Plate complete, 50 needle hole, for needle sizes 14 and 15, for trimming margins from $\frac{9}{32}$ to $\frac{7}{16}$ in., in steps of $\frac{1}{32}$ in., Nos. 206956, 206957 and two 200145c, for 206930 .....
206959	—	Throat Plate Knife Cutting Plate, for trimming margins $\frac{11}{32}$ and $\frac{1}{2}$ in., for 206961 .....
206960	—	Throat Plate, 50 needle hole, for needle sizes 14 and 15, with 202534 and two 200582H, for 206961 .....
206961	10956	Throat Plate complete, 50 needle hole, for needle sizes 14 and 15, for trimming margins $\frac{11}{32}$ and $\frac{1}{2}$ in., Nos. 206959, 206960 and two 200145c, for 206930 .....
206962	10957	Knife Grinder Emery Wheel Driving Shaft, for 206968 and 207027
206963	10957	Knife Grinder Emery Wheel Driving Shaft Pulley with two 200403c, for 206968 and 207027 .....

No.	Plate	Name
206964	10957	Knife Grinder Frame with two 54897, for 206968 and 207027 ....
206965	10957	Knife Grinder Knife Holder Slide Bracket with 200394c, 200457D and 200473B, for 206968 .....
206966	10957	Knife Grinder Knife Holder Slide Bracket Adjusting Screw Slide Plate, for 206968 and 207027 ....
206967	10957	Knife Grinder Knife Holder Slide Bracket Shaft, for 206968 and 207027 .....
206968	—	Knife Grinder complete, Nos. 200577H, 201510D, 204101, 206962 to 206967, 206977, 244040, two each 200054E and 206969, for Machine No. 61w91 .....
206969	—	Knife Grinder Emery Wheel Washer (paper), for 206968 and 207027
206970	13384	Feed Bar Lifting Connection Link Bushing (for Feed Bar), for 206929 .....
206971	—	Throat Plate Knife Cutting Plate, for trimming margins $\frac{1}{8}$ and $\frac{5}{32}$ in., for 206973 .....
206972	—	Throat Plate, 50 needle hole, for needle sizes 14 and 15, with 202534 and two 200582H, for 206973 .....
206973	10960	Throat Plate complete, 50 needle hole, for needle sizes 14 and 15, for trimming margins $\frac{1}{8}$ and $\frac{5}{32}$ in., for binding, Nos. 206971, 206972 and two 200145c, for 206930
206977	—	Knife Grinder Emery Wheel, 2 in. diam., for 206968 and 207027 ..
207004	13387	Bed Plate (back), for Machine No. 61w92 .....
207006	13386	Knife Arm Driving Link, for 207016
207007	10951	" for Machine No. 61w92 ....
207011	13386	" Arm Base Plate Position Plate, for Machine No. 61w92 ..
207012	10951	Presser Foot, for trimming margins from $\frac{3}{32}$ to $\frac{1}{4}$ in., in steps of $\frac{1}{32}$ in., for Machine No. 61w92 .....
207013	13386	Throat Plate Knife Cutting Plate, for trimming margins from $\frac{3}{32}$ to $\frac{1}{4}$ in., in steps of $\frac{1}{32}$ in., for 207018 .....



No.	Plate	Name
207016	—	Knife Bar Cross Head 206940 with 200993c, 200994c and 207006, for Machine No. 61w92 .....
207017	—	Throat Plate, 50 needle hole, for needle sizes 14 and 15, with 202534, 207069 and two 200582H, for 207018 .....
207018	10956	Throat Plate complete, 50 needle hole, for needle sizes 14 and 15, for trimming margins from $\frac{3}{32}$ to $\frac{1}{4}$ in., in steps of $\frac{1}{32}$ in., Nos. 200583H, 207013 and 207017, for 207025 .....
207019	—	Throat Plate Knife Cutting Plate, for trimming margins $\frac{3}{16}$ , $\frac{7}{32}$ and $\frac{1}{4}$ in., for 207021 .....
207020	—	Throat Plate, 53 needle hole, for needle sizes 12 and 13, with 202534 and two 200582H, for 207021 .....
207021	10960	Throat Plate complete, 53 needle hole, for needle sizes 12 and 13, for trimming margins $\frac{3}{16}$ , $\frac{7}{32}$ and $\frac{1}{4}$ in., Nos. 207019, 207020 and two 200145c, for 206930 .....
207022	—	Needle Bar Bushing 202550 with 202901 .....
207025	10968	Feed Dog, for coarse work, for 207018, for Machine No. 61w92 ..
207026	10957	Knife Grinder Knife Holder Slide Bracket with 200394c, 200457D, 200466D and 200473B, for 207027
207027	—	Knife Grinder complete, Nos. 200577H, 201510D, 204101, 206962 to 206964, 206966, 206967, 206977, 207026, 244040, two each 200054E and 206969, for Machine No. 61w92 .....
207028	—	Binder Base Plate 206954 with 200161D and 206927, for 207038..
207038	—	Binder and Folder on Base Plate complete, Nos. 207028, 231310 and two 200507B, for Machine No. 61w91 .....
207062	10967	Knife Arm with two 200076D, for 207064 .....
207063	10967	Knife Arm Base Plate with two 200061D, for 207064 .....

## Numerical List of Parts

No.	Plate	Name
207064	10967	Knife Arm Base Plate 207063 with 207062 and two 207065, for Ma- chine No. 61w91 .....
207065	10951	Knife Arm Center, for 207064 and 207068 .....
207066	10967	Knife Arm with two 200076D, for 207068 .....
207067	10967	Knife Arm Base Plate with two 200061D, for 207068 .....
207068	10967	Knife Arm Base Plate 207067 with 207066 and two 207065, for Ma- chine No. 61w92 .....
207069	10968	Throat Plate Knife Cutting Plate Position Pin, for 207017 .....
207072	10249	Presser Bar Bushing .....
207073	10968	Arm Bushing Hole Plug .....
207080	13385	" Shaft Bushing (front) with 202244 .....
207083	13385	Bed Slide (front), for Machine No. 61w91 .....
*207088	—	Bed .....
*207089	—	Arm .....
208490	13387	Knee Lifter Connection Lever, for 202877 .....
225381	10884	Bobbin Winder Spindle, for 225382
225382	10885	Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200299H, 202473, 202478, 225381, 225433, 225444, 225453 to 225456, 225458, 225462, 228026, two each 225459 and wood screws $\frac{3}{4}$ in., No. 12, R.H.B. ....
225433	10885	Bobbin Winder and Tension Brack- et Base, for 225382 .....
225438	10884	Bobbin Winder Frame Oil Well Cap, for 225453 .....
225444	10884	Bobbin Winder Stop Latch, for 225382 .....
Nos. 225453 to 225456, for 225382		
225453	10884	Bobbin Winder Frame with 202277 and 225438 .....
225454	10884	Bobbin Winder Frame Hinge Pin
225455	10884	" " " Spring .....
225456	10884	" " " " Plunger
225458	10884	" " Stop Latch Thumb Lever, for 225382 .....
225459	10884	Bobbin Winder Stop Latch Thumb Lever Hinge Stud, for 225382 ..



No.	Plate	Name
225459	10884	Bobbin Winder Stop Latch Thumb Lever Joint Stud, for 225382 ...
225461	10881	Bobbin Winder Tension Bracket with 201499B, for 225462 .....
225462	10881	Bobbin Winder Tension Bracket complete, Nos. 201572B, 202407, 225461 and two 2102, for 225382 ..
*225482	—	Bobbin Case Screw Driver Blade, for 225497 .....
*225483	—	Bobbin Case Screw Driver Handle, for 225497 .....
*225484	—	Screw Driver Blade, for 225498 ...
*225485	—	" " Handle, for 225498 ...
225497	12345	Bobbin Case Screw Driver complete, Nos. 225482 and 225483 ...
225498	12345	Screw Driver complete (7 $\frac{1}{4}$ in. long), Nos. 225484 and 225485 ..
225554	12345	Wrench (steel) .....
225647	10951	Binder Head, made for tapes or folded strips from $\frac{1}{4}$ to $\frac{3}{4}$ in., in steps of $\frac{1}{32}$ in., for Machine No. 61w91 .....
225663	—	Ribbon Reel (9 in. diam.) with 225666, for 225976 .....
225664	13388	Ribbon Reel Supporting Spindle, for 225665 .....
225665	10956	Ribbon Reel Supporting Spindle Base with 225664 and two wood screws $\frac{3}{4}$ in., No. 7, for 225976 ..
225666	13388	Ribbon Reel Supporting Spindle Hub 230471 with 225980, for 225663 .....
225976	—	Ribbon Reel (9 in. diam.) complete, Nos. 225663 and 225665, for Machine No. 61w91 .....
225980	13388	Ribbon Reel Supporting Spindle Hub Base, for 225666 .....
228026	10884	Bobbin Winder Tension Bracket Screw Washer, for 225382 .....
228172	—	Drip Pan with four 1 in. wire nails, for Machine No. 61w91 .....
228212	—	Drip Pan with four 1 in. wire nails, for Machine No. 61w92 .....
228238	14171	Knee Lifter Rock Shaft Lifting Lever with 356c, for 228239 ....
228239	—	Knee Lifter Rock Shaft Lifting Lever 228238 with 8073, 204225, 228240 and 228241, for 228242 ..
228240	14171	Knee Lifter Rock Shaft Lifting Lever Rod (3 in. long), for 228239




## Numerical List of Parts

No.	Plate	Name
228241	14171	Knee Lifter Rock Shaft Lifting Lever Rod Swivel with 200529c, for 228239 .....
228242	14171	Knee Lifter Rock Shaft complete, Nos. 2763, 2768, 7539, 20093, 228239 and two 2770 .....
229000	13384	Binder Tape Tension Pin, for 206925 .....
230251	10951	Binder Head Screw Washer, for 206928 .....
230471	10968	Ribbon Reel Supporting Spindle Hub, for 225666 .....
231310	10968	Binder and Folder, in gauges $\frac{3}{8}$ , $\frac{13}{16}$ , $\frac{7}{8}$ , $\frac{15}{16}$ and 1 in., for 207038 .....
236073	13375	Needle Bar Connecting Link Oil Guard .....
244001	13387	Bed Plate (cover plate), for Ma- chine No. 61w92 .....
244002	—	Bed Slide (front), for 244003 ....
244003	13387	" " 244002 with 202115 and two 200139E, for Machine No. 61w92 .....
244004	13375	Presser Bar Lifting Releasing Lev- er Bracket .....
244007	10247	Tension Disc (back), for 202409 ..
244008	10247	" " (front), for 202409 ..
*244010	—	Hook (sewing), for 244011 .....
244011	13387	" 244010 with 200145c, 200596F, 200614c, 202320, 203101, 206775, 206852 and 244014, for 244012 ..
244012	—	Hook and Bobbin Case complete, Nos. 202533 and 244011 .....
244013	13375	Hook Counter Balance with 200444c
244014	13375	" Washer, for 244011 .....
244033	—	Presser Bar (hollow), for 202335..
244040	—	Knife Grinder Emery Wheel Guard, for 206968 and 207027 .....


**ILLUSTRATIONS OF PARTS**  
**FOR**  
**MACHINES**  
**Nos. 61w91 and 61w92**

# PLATE 10244—FULL SIZE

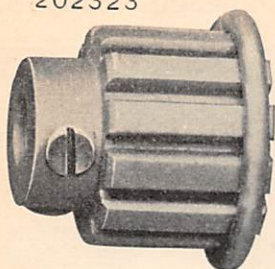202323



202324

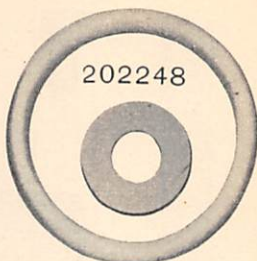


202248

200338



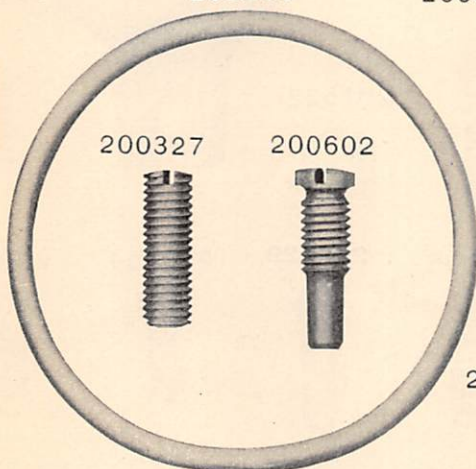202253



200327



200602



200357



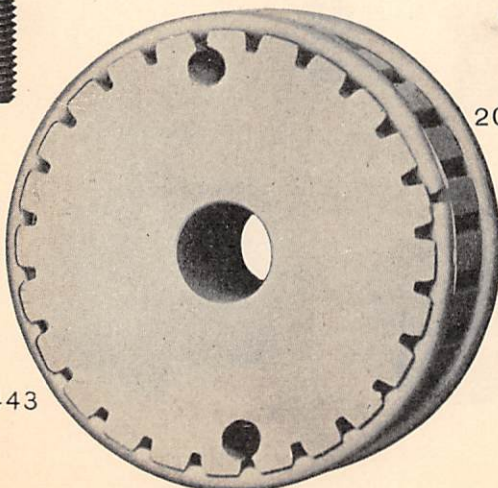
202140



200335



202252



200278



200328



202443





# PLATE 10246—FULL SIZE

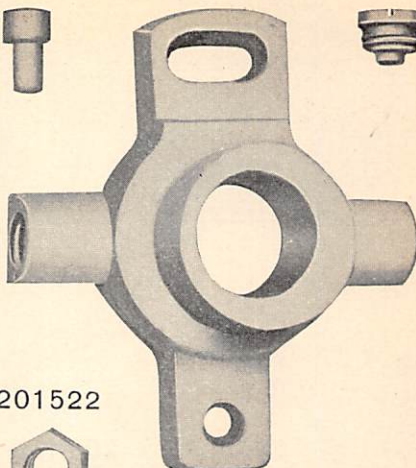
200641



202301



202300



200607



201522



202595



200429



200054



202446



200043



200437



200383



202307

200502

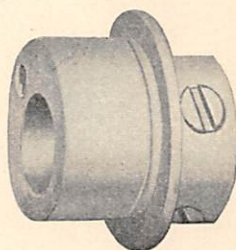


PLATE 10247—FULL SIZE

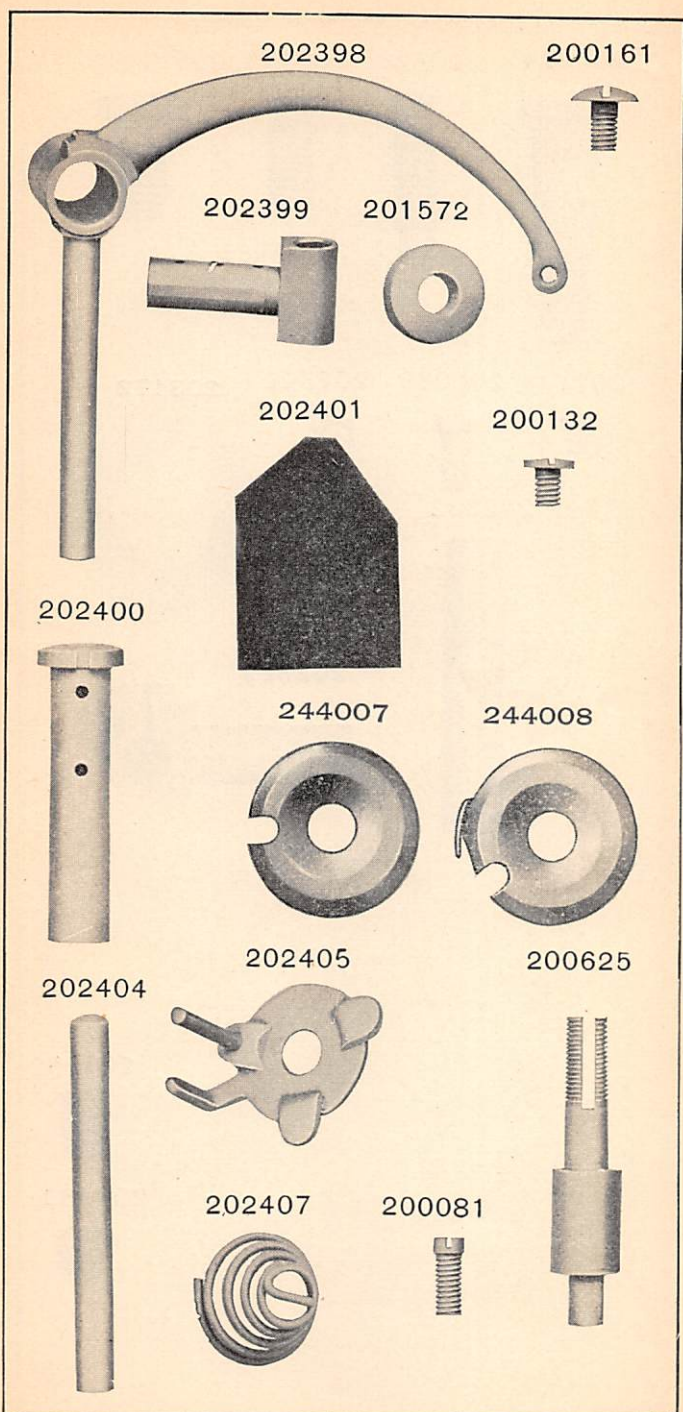


PLATE 10248—FULL SIZE

200224




200428



200335



200262



200141



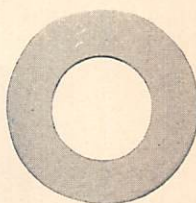
200086



202302



203172



202333



202329



200352



200363






# PLATE 10249--FULL SIZE

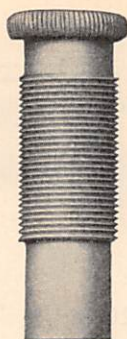202337



200492



200260



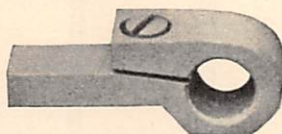
202346



200074



202338



200347



202339



200653



202342



207072

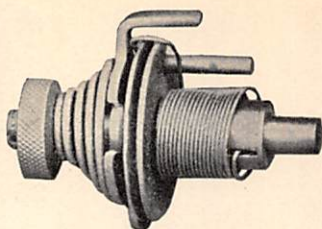


PLATE 10252—FULL SIZE

202411



202409



202412



202413



202414



200389



202410



202417



204058



200582



202415



200355



202091



200366




202092



# PLATE 10373—FULL SIZE

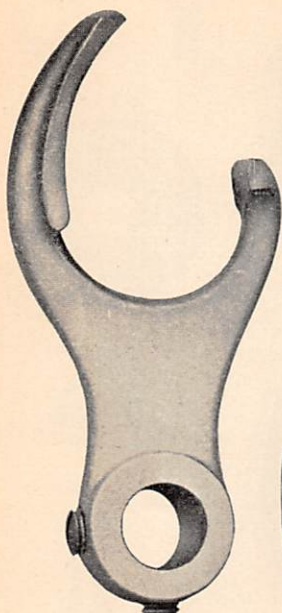202890



200442



200382



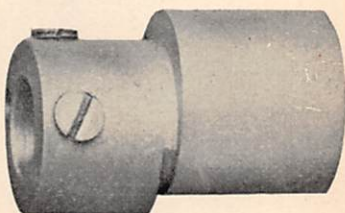
200373



200437



202889



202899



202893



202900



200694



200485



201525



200585



202892



200352




202894





PLATE 10881—FULL SIZE

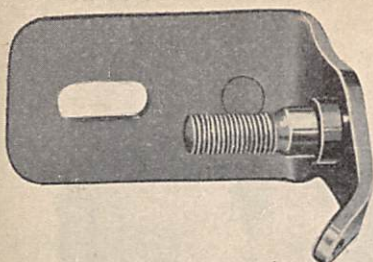225461



200082



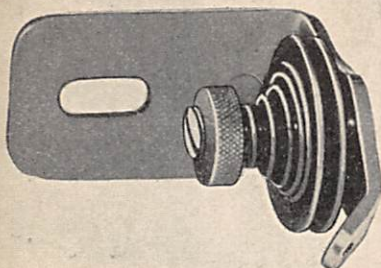
202104



2102



225462



202407



201499



201572



# PLATE 10884—FULL SIZE

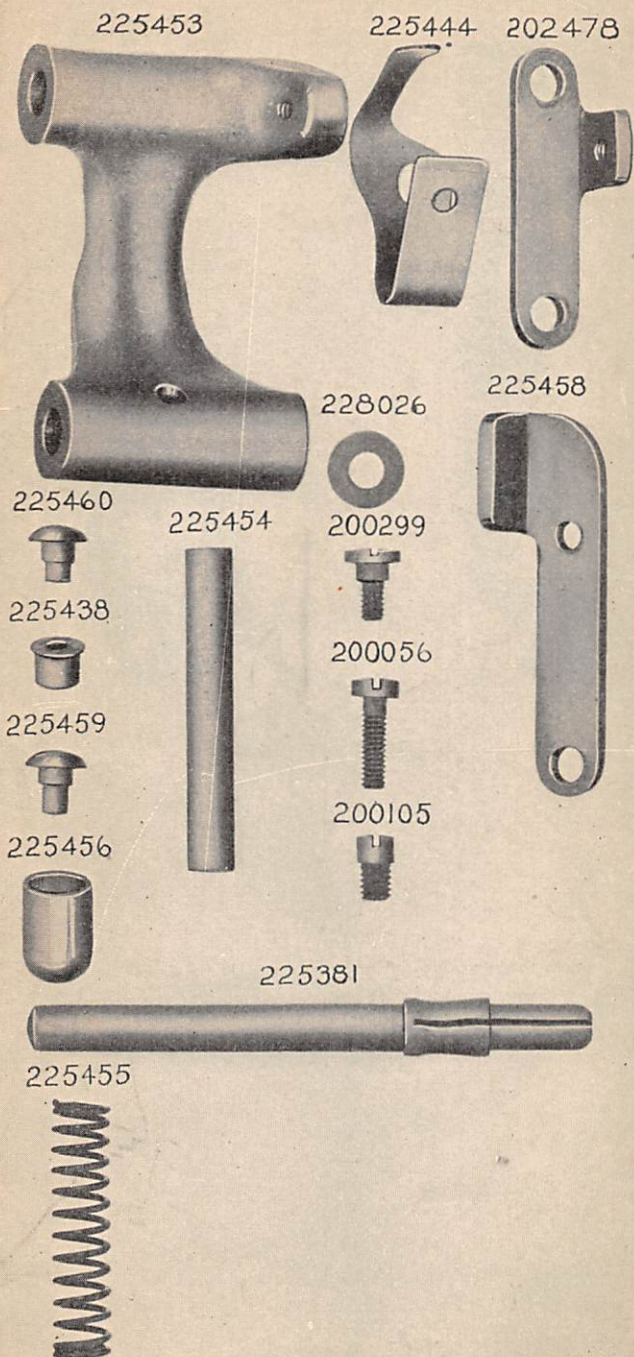


PLATE 10885—ONE-FOURTH SIZE

225433



202473



225382





PLATE 10947—ONE-HALF SIZE

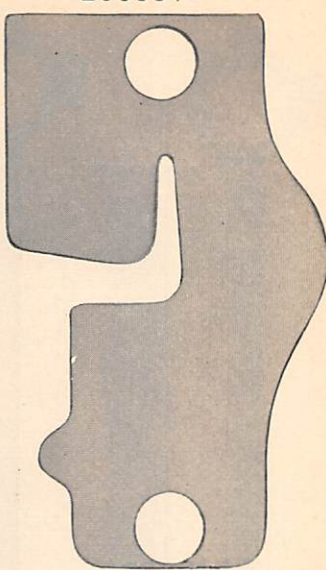
202891




202898



206951




206928

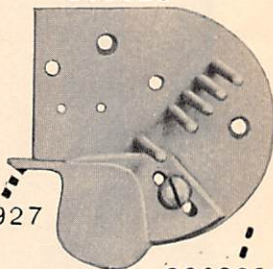

206927

206925

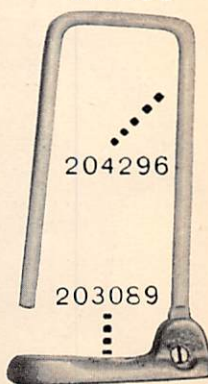203090



204296

203089

202243



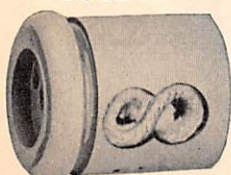


PLATE 10948—ONE-HALF SIZE

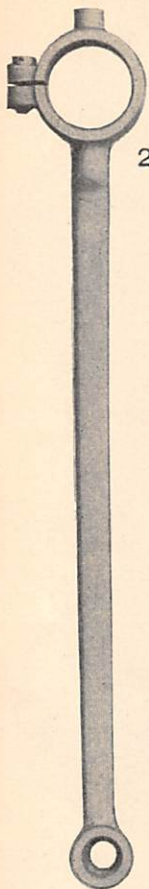202306




202297

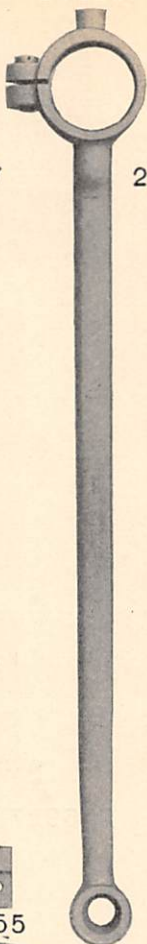

202303



202887



202335



202255


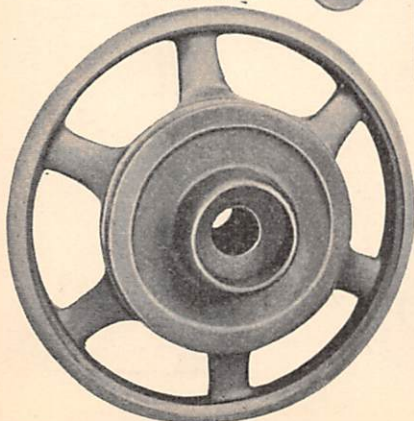


PLATE 10949—FULL SIZE

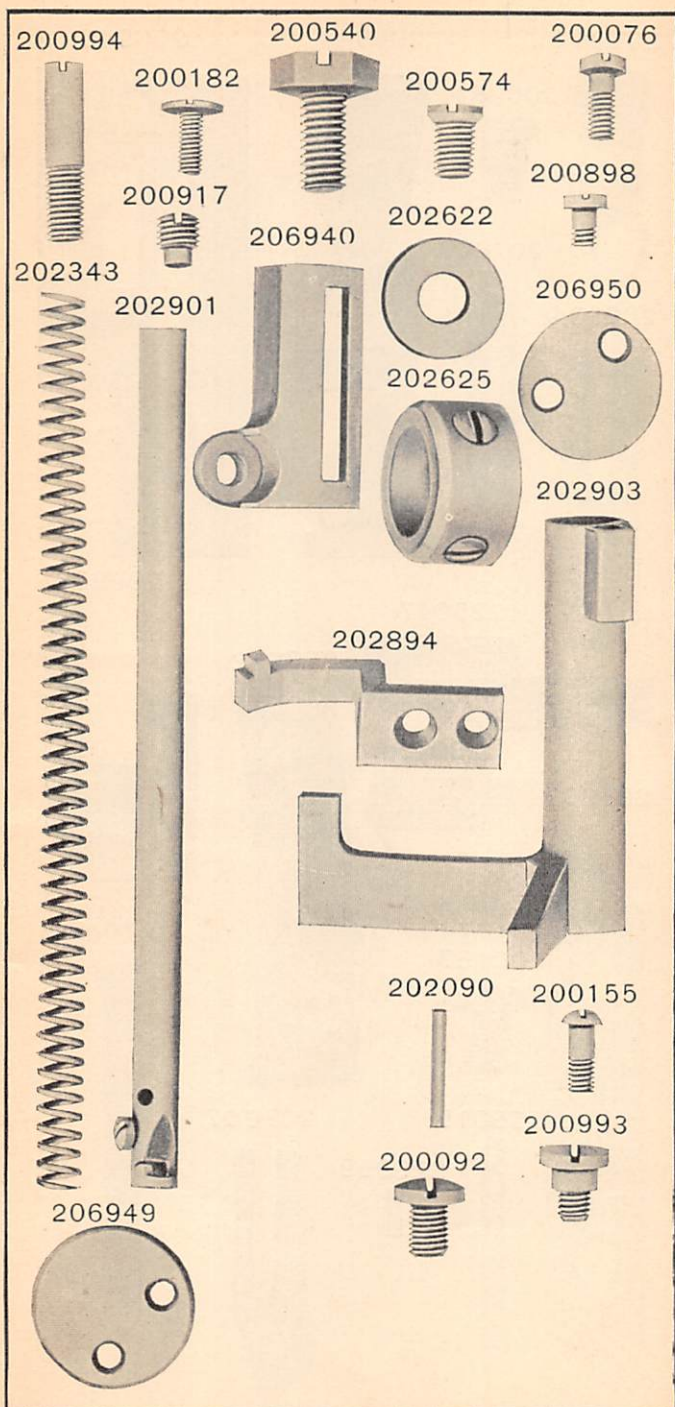



# PLATE 10951—FULL SIZE

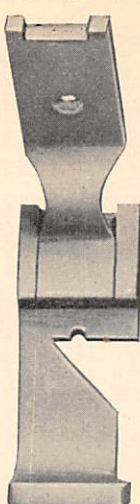
206941




200281



206944



206946

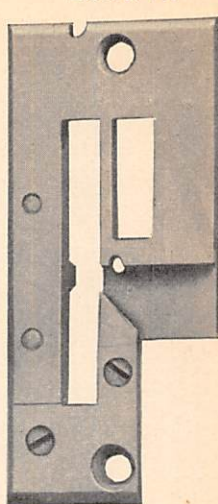


207065



206934



225647



207012



230251



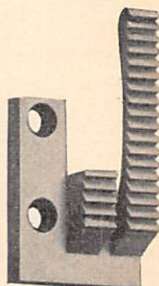
206939



200157



206930




207045



226015



207007

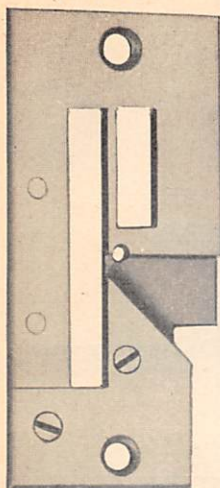


225959

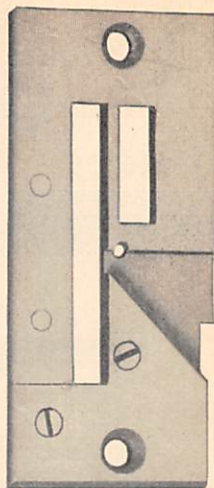


PLATE 10956—FULL SIZE

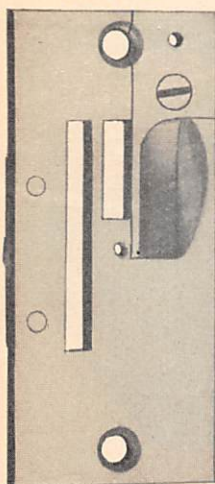
206958



206961



207018



225665

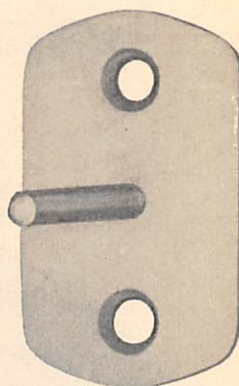


PLATE 10957—ONE-HALF SIZE

200457



200473



200394



200387



201510



204101



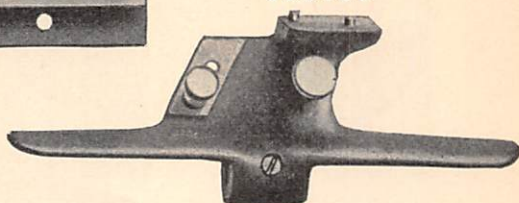
206963



206966




206965



206967



206962



206964


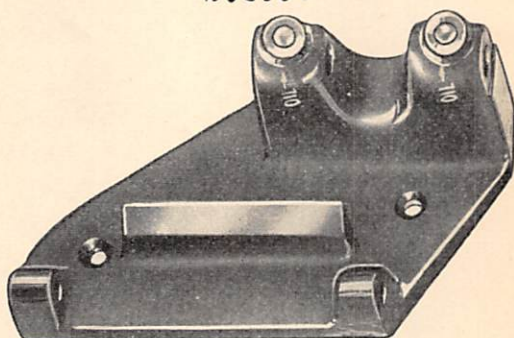




PLATE 10960—FULL SIZE

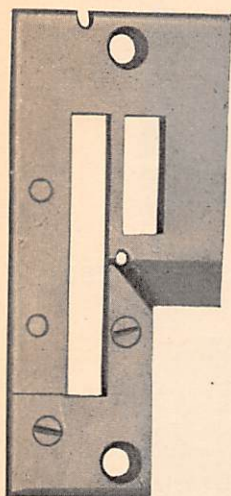206973



207021


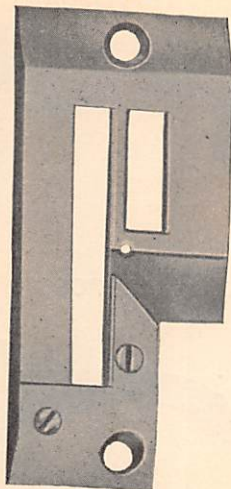


PLATE 10967—ONE-FOURTH SIZE

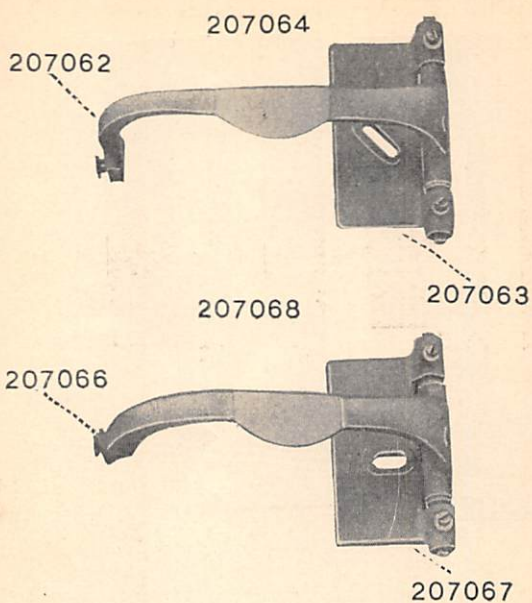

# PLATE 10968—FULL SIZE

230471 200413 200526 200466 200061

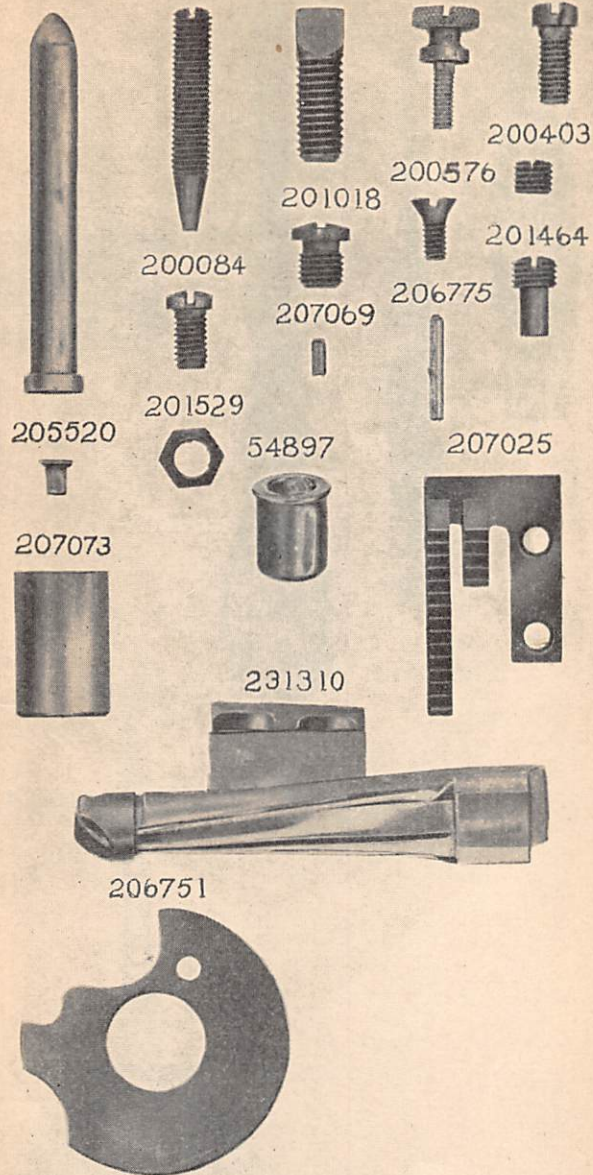




PLATE 12345—ONE-HALF SIZE

41400



225497



225498

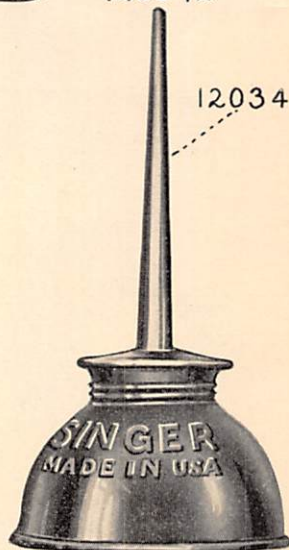


202258



120342

120343



# PLATE 13375—FULL SIZE

204235



200459



244013



200444



200374



202619



207072



206852



201018



236073

202339



202337



244004



200653



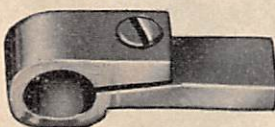
200260



244014



202338



206608



# PLATE 13384—FULL SIZE

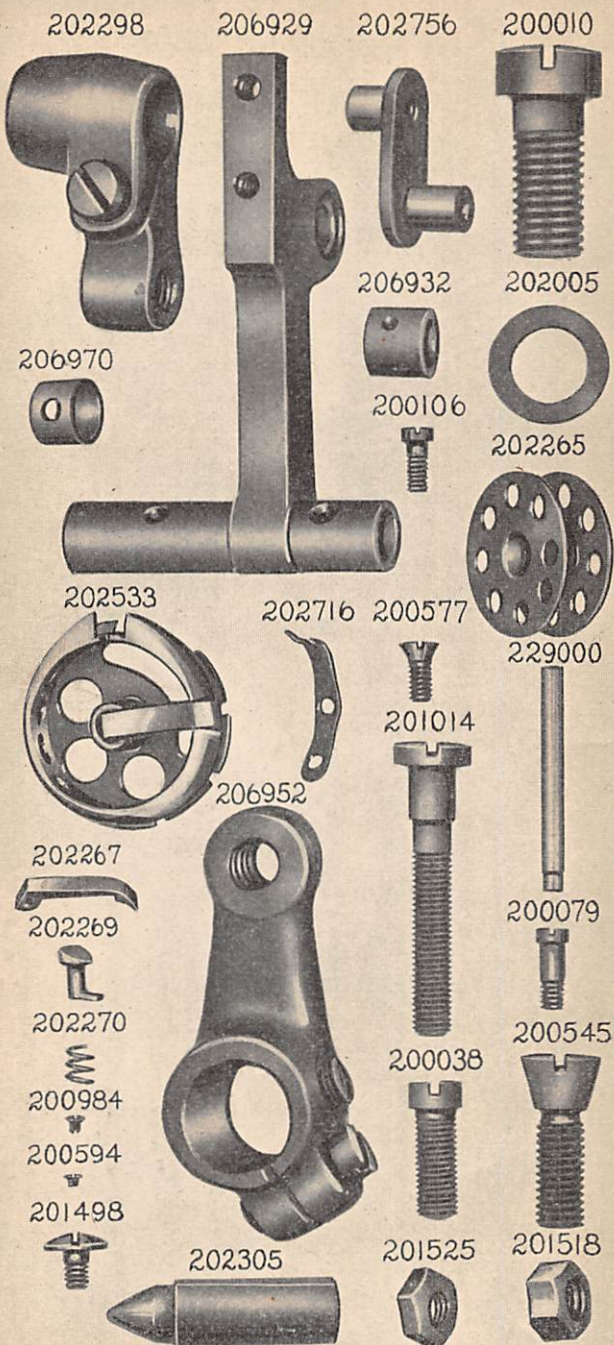


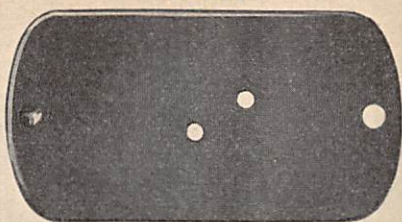


PLATE 13385—ONE-HALF SIZE

206923



203091



206933



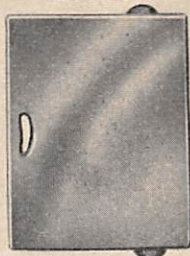
207080




202530



207083



202310



# PLATE 13386—FULL SIZE

202115



202550



207006



202397



202534



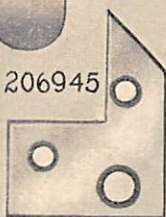
207013




204925



206945



207011



200583



200378



200842



200574



200368



200139



200145



202872



200596



200614



PLATE 13387—ONE-HALF SIZE

244011

244001

244003

202876

202447

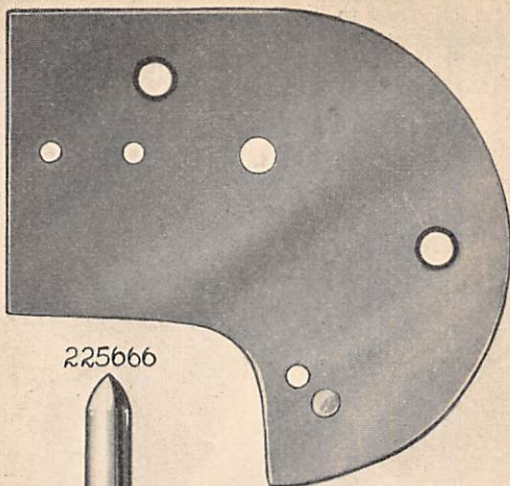
207004

208490

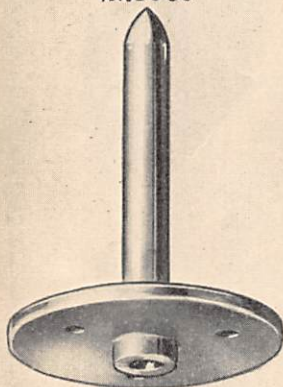


PLATE 13388—FULL SIZE

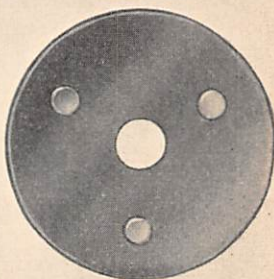
206954



225666



225980



225664




12361



200507



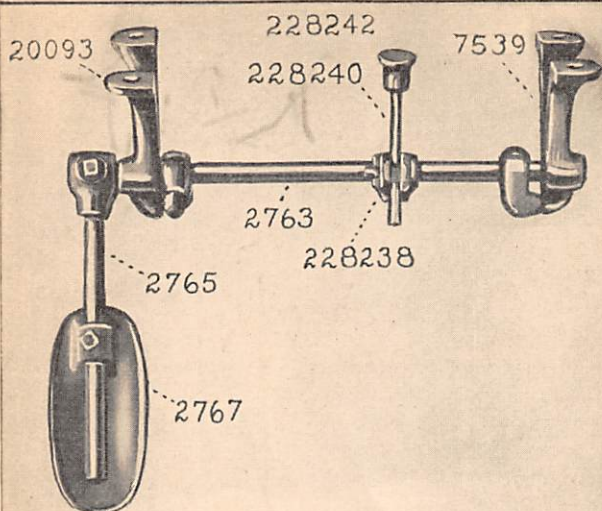PLATE 14171—ONE-FOURTH SIZE



FULL SIZE

