

LIST
OF
PARTS



MACHINES
Nos. 72w19 and 72w20

THE SINGER MANUFACTURING COMPANY

COPYRIGHT, U. S. A.
1919, 1922, 1923, 1924, 1927 AND 1929
BY THE SINGER MANUFACTURING CO.
ALL RIGHTS RESERVED FOR ALL COUNTRIES

INDEX

	PAGE
ACCESSORIES	24
BOBBIN WINDER	24
BOX PLAITER	32
CORD HOLDER	27
HEMMERS	28
KNEE LIFTER	25
LAP SEAM FELLER	33
MACHINE NO. 72w19	7
" " 72w20	22
NUMERICAL LIST OF PARTS	39
OBSOLETE PARTS	35
PICOT EDGE CUTTING DEVICE	34
PRESSER FEET	26

Instructions for Ordering

In ordering from this list, use **ONLY** the **PART** number in the **FIRST** column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above cases) must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.

These letters **MUST BE USED** when they appear in the list and **AFTER** the number, as in the list.

In this series

200001 to 201500 are Screw Numbers.

201501 to 201800 are Nut Numbers.

201801 to 202000 are Roller Numbers.


202001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are **NOT TO BE USED** in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE FOR

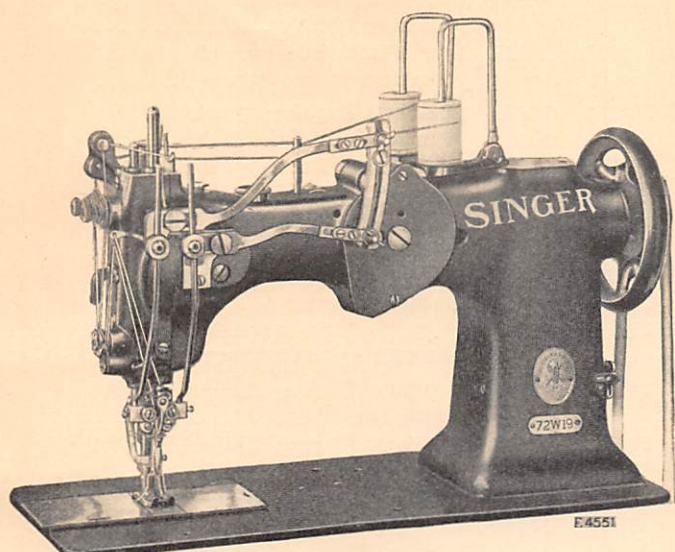

MACHINE No. 72w19

For Ornamental Hemstitching in Handkerchiefs, Shirt
Waists, Neckties, Underwear, etc., with $\frac{1}{16}$ in.
Openings. Has Forward Feed.

No.	Plate	Name
*234705	—	Arm with 202036, 234706, two each 200346c and 213222
204163	12344	Arm Cap
200278H	12311	" " Screw
202248	12307	" " " Washer
213257	13401	" Plate
200571B	11090	" " Screw (2)
204235	13423	" Position Pin (2)
200010E	13402	" Screw (3)
202005	12308	" " Washer (3)
203237	11636	" Shaft
204801	13401	" " Bushing (back) with 202260
202260	—	Arm Shaft Bushing (back) Oil Packing (wick)

No.	Plate	Name
200352C	11635	Arm Shaft Bushing (back) Set Screw
204802	13401	Arm Shaft Bushing (front) with 202036 and 202260
202260	—	Arm Shaft Bushing (front) Oil Packing (wick)
200502B	11635	Arm Shaft Bushing (front) Oil Packing Thumb Screw
202036	13402	Arm Shaft Bushing (front) Position Pin
200352C	11635	Arm Shaft Bushing (front) Set Screw
204804	13401	Arm Shaft Connection with four 200054E (2)
200054E	12307	Arm Shaft Connection Screw
234739	13428	Auxiliary Piercer
234714	13428	" " Holder with 200117F and 200389C
213261	11097	Auxiliary Piercer Holder Bracket with two 200118F
200118F	13402	Auxiliary Piercer Holder Bracket Screw
200117F	11097	Auxiliary Piercer Holder Screw ..
200389C	11642	" " Set Screw
204174	11636	Balance Wheel, 5½ in. diam., (belt groove 2¾ in. diam.), with 200328C and 200335C
200062H	12311	Balance Wheel Adjusting Screw ..
200328C	12311	" " Position Screw
200335C	12311	" " Set Screw
*213235	—	Bed with 203376, 203249, 213191, two each 200362C, 200516E, 200840E and 202299
202258	12153	Bed Hinge Connection (2)
200570E	12311	" " " Screw (4)
203329	13401	" Slide (back)
203301	13401	" " (front)
213710	11635	Bobbin
203210	12312	" Case Base with 202056, 203211 to 203213 and 203216
203211	12312	Bobbin Case Base Latch
*202056	—	" " " " Pin
203212	12312	" " " " Plunger ..
203213	12312	" " " " Spring
203209	12312	" " Cap with 200984C, 203214, 203215 and two 200594C..
203214	12312	Bobbin Case Tension Spring
200984C	12312	" " " " Regulating Screw

No.	Plate	Name
200594C	12312	Bobbin Case Tension Spring Screw
203215	12312	" " Thread Guide
200594C	12312	" " " " Screw
203216	12312	" " Washer (cloth)
203217	12312	Bobbin Case complete, Nos. 203209 and 203210
213945	11636	Face Plate with 200355H, 203751, 207069, two each 200368H, 202090, 204281 and three 200397H
200053C	12311	Face Plate Screw
203751	13423	" " Thread Guide
200397H	13404	" " " " Set Screw
213946	11636	Face Plate complete, Nos. 200098F, 200318H, 202108, 213213, 213214, 213267, 213935, 213941 to 213945, 219866, 219867, 225604, 228026, two each 200089D, 200290C, 203753 and 204059
213789	11090	Feed Bar with 204189
213765	—	" " 213789 with 200214E, 201525E, 201535E, 204200 and 350219E
200214E	13402	Feed Bar Hinge Screw
201525E	13402	" " " " Nut
214424	13423	" " Spring
204189	11635	" " " Hook
212827	13413	" Dog
200106E	12311	" " Screw (2)
350219E	13423	" " Support Screw
201535E	11090	" " " " Nut
206206	13401	" Driving Cam and Gear, 54 teeth, with two 200383C
206609	—	Feed Driving Cam and Gear Driv- ing Gear, 18 teeth
213218	11090	Feed Driving Cam and Gear Driv- ing Gear 206609 with two 200348C
200348C	11090	Feed Driving Cam and Gear Driv- ing Gear Set Screw
201816	12307	Feed Driving Cam and Gear Roller
201850	11090	" " " " " " " " 201816 with 200820C
200820C	11635	Feed Driving Cam and Gear Roller Stud
201517E	11090	Feed Driving Cam and Gear Roller Stud Nut
200383C	12311	Feed Driving Cam and Gear Set Screw
213233	11097	Feed Driving Cam and Gear Shaft
213245	13401	" " " " " " " " Bracket

No.	Plate	Name
200036E	11090	Feed Driving Cam and Gear Shaft Bracket Screw (3)
230743	—	Feed Driving Cam and Gear Shaft Bracket Screw Washer (3)
213172	11636	Feed Driving Rock Shaft
213167	11636	" " " " 213172 with 200002E, 201522E and 204193
202305	12307	Feed Driving Rock Shaft Center (2)
200043C	12311	" " " " " Set Screw (2)
204193	13401	Feed Driving Rock Shaft Con- nection with 200668C and 201525E ..
200002E	13402	Feed Driving Rock Shaft Con- nection Hinge Screw
201522E	13402	Feed Driving Rock Shaft Con- nection Hinge Screw Nut
204200	11635	Feed Driving Rock Shaft Crank with 204189 (on left side) and two 200383C
200383C	12311	Feed Driving Rock Shaft Crank Set Screw
213188	13411	Feed Driving Segment Lever with 213391 and 222526
215700	11635	Feed Driving Segment Lever Clamp with 200031F
215702	—	Feed Driving Segment Lever Clamp 215700 with 215701
215701	11635	Feed Driving Segment Lever Clamp Block
200031F	12311	Feed Driving Segment Lever Clamp Pinch Screw
200668C	13402	Feed Driving Segment Lever Clamp Screw Stud
201525E	13402	Feed Driving Segment Lever Clamp Screw Stud Nut
203741	—	Feed Driving Segment Lever Crank with two 200363C
213246	11097	Feed Driving Segment Lever Crank 203741 with 201517E and 201850..
200363C	11635	Feed Driving Segment Lever Crank Set Screw
*213391	11635	Feed Driving Segment Lever Shaft
222526	13423	" " " " "
		Pin
213809	11101	Feed Driving Segment Lever Shaft Sleeve (split) (left)
204196	12307	Feed Driving Segment Lever Shaft Sleeve (split) (right)
200043C	12311	Feed Driving Segment Lever Shaft Sleeve Set Screw (2)

No.	Plate	Name
201524E	13404	Feed Driving Segment Lever Shaft Sleeve Set Screw Nut (2)
213234	11097	Feed Lifting Cam with 204020 and two 200383c
200383c	12311	Feed Lifting Cam Set Screw
213796	—	" " Rock Shaft
203321	13412	" " " " 213796 with 203238
202305	12307	Feed Lifting Rock Shaft Center (2)
200043c	12311	" " " " " Set Screw (2)
234717	13423	Feed Lifting Rock Shaft Lever with 200049E and 201807
204020	—	Feed Lifting Rock Shaft Lever Cushion (leather)
200049E	13402	Feed Lifting Rock Shaft Lever Pinch Screw
201822	—	Feed Lifting Rock Shaft Lever Roller
201807	11099	Feed Lifting Rock Shaft Lever Roller 201822 with 200261F
200261F	13410	Feed Lifting Rock Shaft Lever Roller Screw Stud
202276	12308	Feed Lifting Rock Shaft Slide Block
203238	12308	" " " " " " 202276 with 200243E and 201531E
200243E	13402	Feed Lifting Rock Shaft Slide Block Hinge Screw
201531E	12308	Feed Lifting Rock Shaft Slide Block Hinge Screw Nut
204206	13402	Feed Regulating Handle
204713	—	" " " 204206 with 200098F, 202622, 204208, 204209, 204213, 204714 and 204925
204208	12307	Feed Regulating Handle Adjustable Stop
200098F	12307	Feed Regulating Handle Adjustable Stop Screw
204925	13402	Feed Regulating Handle Adjustable Stop Screw Washer
204209	12307	Feed Regulating Handle Position Pin
204714	13402	Feed Regulating Handle Shaft
204211	13402	" " " " Crank with 200098F
204212	12307	Feed Regulating Handle Shaft Crank Link
200271E	12311	Feed Regulating Handle Shaft Crank Link Hinge Screw (lower)

No.	Plate	Name
200291E	12307	Feed Regulating Handle Shaft Crank Link Hinge Screw (upper)
200098F	12307	Feed Regulating Handle Shaft Crank Set Screw
204213	12307	Feed Regulating Handle Shaft Sleeve (split)
200362C	12311	Feed Regulating Handle Shaft Sleeve Set Screw
202622	13402	Feed Regulating Handle Shaft Sleeve Washer
202036	13402	Feed Regulating Handle Stop Pin
204715	—	Feed Regulating Handle complete, Nos. 200291E, 204211, 204212 and 204713
*203239	—	Hook (sewing)
203240	12312	" 203239 with 201253F, 201376F and 203251
203290	12312	Hook and Bobbin Case complete, Nos. 203217 and 203240
203241	12312	Hook Bevel Gear Socket, 24 teeth..
200555H	12312	" " " " Screw
203242	12344	" " Pinion, 24 teeth, with two 200383C (2)
200383C	12311	Hook Bevel Pinion Set Screw
203306	13411	" Counter Shaft
203244	12308	" " " Collar with two 200393C
200393C	12308	Hook Counter Shaft Collar Set Screw
203245	12344	Hook Counter Shaft Driving Gear, 44 teeth, with 200362C and 200439C
200439C	12311	Hook Counter Shaft Driving Gear Position Screw
200362C	12311	Hook Counter Shaft Driving Gear Set Screw
203246	12344	Hook Counter Shaft Gear, 22 teeth, with two 200383C
200383C	12311	Hook Counter Shaft Gear Set Screw
202299	—	Hook Counter Shaft Oil Packing (wick)
200840E	12311	Hook Counter Shaft Oil Packing (wick) Stop Screw
213230	11636	Hook Driving Shaft
213191	13412	" " " Bearing with 202299
202299	—	Hook Driving Shaft Bearing Oil Packing (wick)
202126	12308	Hook Driving Shaft Bearing Posi- tion Pin

No.	Plate	Name
200516E	12311	Hook Driving Shaft Bearing Screw
203249	12344	" " " Bushing (eccentric)
202299	—	Hook Driving Shaft Bushing Oil Packing (wick)
200362C	12311	Hook Driving Shaft Bushing Set Screw
213141	11635	Hook Driving Shaft Collar with two 200393C
200393C	12308	Hook Driving Shaft Collar Set Screw
203251	12312	Hook Gib
201376F	13402	" " Hinge Screw
201253F	12312	" " Screw
203307	12335	" Saddle with 202299
202299	—	" " Oil Packing (wick) ...
200006E	12307	" " Screw (4)
225585	12307	" " " Washer (4)
203254	12312	" Washer
203308	12335	Hook Saddle complete, Nos. 200555H, 203241, 203254, 203290 and 203307
203462	—	Hook Saddle Combination complete, Nos. two 203308
203746	13424	Knee Lifter Connection Lever
227444	—	" " " " 203746 with 203747, 227309 and two 200262H
200262H	13428	Knee Lifter Connection Lever Hinge Screw
227309	13424	Knee Lifter Connection Lever Lifting Rod with 202302
202302	13402	Knee Lifter Connection Lever Lifting Rod Cotter Pin
203747	13424	Knee Lifter Lifting Lever
200262H	13428	" " " " Hinge Screw
213244	11098	Needle Bar (hollow)
213387	—	" " 213244 with 201206F, 213256 and 213398
213222	13402	Needle Bar Bushing
200346C	13402	" " " Set Screw
204248	12307	" " Connecting Link
200658C	12307	" " " " Hinge Screw Stud
201519E	12307	Needle Bar Connecting Link Hinge Screw Stud Nut
204249	12308	Needle Bar Connecting Stud with 200072C and 202277

No.	Plate	Name
202277	—	Needle Bar Connecting Stud Oil Packing (wick)
200072c	12308	Needle Bar Connecting Stud Pinch Screw
221480	13402	Needle Bar Guide with 200086c ..
200086c	12308	" " " Pinch Screw ...
213256	11099	" " Thread Guide
234715	13423	" Holder (left) with two 200117F
234716	13423	Needle Holder (right) with two 200117F
213236	11099	Needle Holder Bracket
213398	—	" " " 213236 with 234715, 234716, two each 200797c, 201183F, 201537H and 225604
201206F	13410	Needle Holder Bracket Screw
201183F	13423	" " Cap Screw
200797c	11099	" " Stud
201537H	12319	" " " Nut
225604	13402	" " " Washer
200117F	11097	" Set Screw
221472	13411	" Vibrating Cam and Gear, 48 teeth
221475	—	Needle Vibrating Cam and Gear 221472 with 200062H and 213203..
200062H	12311	Needle Vibrating Cam and Gear Adjusting Screw
221470	13404	Needle Vibrating Cam and Gear Driving Gear, 16 teeth, with two 200383c
200383c	12311	Needle Vibrating Cam and Gear Driving Gear Set Screw
213802	11098	Needle Vibrating Cam and Gear Segment Lever with 201809, 204928 and 215691
234706	—	Needle Vibrating Cam and Gear Segment Lever Bushing
204922	11099	Needle Vibrating Cam and Gear Segment Lever Connecting Link (lower or upper)
204841	—	Needle Vibrating Cam and Gear Segment Lever Connecting Link 204922 with 204923
204923	11642	Needle Vibrating Cam and Gear Segment Lever Connecting Link Bushing
200110B	13404	Needle Vibrating Cam and Gear Segment Lever Connecting Link Screw

No.	Plate	Name
204924	13404	Needle Vibrating Cam and Gear Segment Lever Connecting Link Screw Washer
213241	11098	Needle Vibrating Cam and Gear Segment Lever Connection (lower) with 214005
213242	11098	Needle Vibrating Cam and Gear Segment Lever Connection (upper) with 214005
213243	11098	Needle Vibrating Cam and Gear Segment Lever Connection Bracket
213277	—	Needle Vibrating Cam and Gear Segment Lever Connection Bracket 213243 with 213241, 213242, two each 201275D, 204841, 204924, 213265 and four 200110B..
200571B	11090	Needle Vibrating Cam and Gear Segment Lever Connection Bracket Screw (lower)
200574E	11642	Needle Vibrating Cam and Gear Segment Lever Connection Bracket Screw (upper)
200791E	13404	Needle Vibrating Cam and Gear Segment Lever Connection Screw Stud Slide (2)
228026	10884	Needle Vibrating Cam and Gear Segment Lever Connection Screw Stud Slide Washer (2) ..
201581B	13404	Needle Vibrating Cam and Gear Segment Lever Connection Screw Stud Slide Wing Nut (2)
213265	11100	Needle Vibrating Cam and Gear Segment Lever Connection Slide Block
201275D	13410	Needle Vibrating Cam and Gear Segment Lever Connection Slide Block Screw
206505	11100	Needle Vibrating Cam and Gear Segment Lever Connection Stop Block
200135E	11642	Needle Vibrating Cam and Gear Segment Lever Connection Stop Block Screw
225908	11100	Needle Vibrating Cam and Gear Segment Lever Connection Stop Block Screw Washer

No.	Plate	Name
206008	—	Needle Vibrating Cam and Gear Segment Lever Connection Stop Block complete, Nos. 200135E, 206505 and 225908 (2)
*214005	—	Needle Vibrating Cam and Gear Segment Lever Connection Stud with 204020
201816	12307	Needle Vibrating Cam and Gear Segment Lever Roller
201809	13404	Needle Vibrating Cam and Gear Segment Lever Roller 201816 with 202556
202556	—	Needle Vibrating Cam and Gear Segment Lever Roller Stud
*204928	—	Needle Vibrating Cam and Gear Segment Lever Shaft
202574	11635	Needle Vibrating Cam and Gear Segment Lever Shaft Collar with 200380c
200380c	12319	Needle Vibrating Cam and Gear Segment Lever Shaft Collar Set Screw
215691	11642	Needle Vibrating Cam and Gear Segment Lever Shaft Position Pin
213203	13412	Needle Vibrating Cam and Gear Stud
201501D	13404	Needle Vibrating Cam and Gear Stud Nut
200343c	13404	Needle Vibrating Cam and Gear Stud Set Screw
213240	11100	Needle Vibrating Lever (2)
213250	11100	" " " Bearing (left)
234704	11100	Needle Vibrating Lever Bearing (right)
204020	—	Needle Vibrating Lever Friction (leather)
200117F	11097	Needle Vibrating Lever Set Screw
213826	13413	Piercer
213260	13411	" Bar
214003	—	" " 213260 with 213262 and 221481
221481	13404	Piercer Bar Bushing (lower)
200352c	11635	" " " " Set Screw
213262	11100	Piercer Bar Bushing (upper)
200352c	11635	" " " " Set Screw

No.	Plate	Name
213248	11100	Piercer Bar Driving Cam with two 200362c
213258	11100	Piercer Bar Driving Cam Connection with 200057H and 200066D ..
213247	11642	Piercer Bar Driving Cam Connection 213258 with 200128E, 213248 and 213740
247563	—	Piercer Bar Driving Cam Connection Crank with 200070c
221461	11642	Piercer Bar Driving Cam Connection Crank 247563 with 200740c and 201520H
200740c	11101	Piercer Bar Driving Cam Connection Crank Ball Screw
201520H	11101	Piercer Bar Driving Cam Connection Crank Ball Screw Nut
200070c	11642	Piercer Bar Driving Cam Connection Crank Pinch Screw
200057H	13404	Piercer Bar Driving Cam Connection Pinch Screw
200066D	11642	Piercer Bar Driving Cam Connection Pinch Screw
213740	11101	Piercer Bar Driving Cam Retaining Washer
200128E	11642	Piercer Bar Driving Cam Retaining Washer Screw
200362c	12311	Piercer Bar Driving Cam Set Screw
213249	11101	" " Lifting Bracket with two 201052c
201052c	13423	Piercer Bar Lifting Bracket Set Screw
213804	13411	Piercer Bar Lifting Rock Shaft
215720	11642	" " " " "
		Bushing (2)
200043c	12311	Piercer Bar Lifting Rock Shaft Bushing Set Screw (2)
201524E	13404	Piercer Bar Lifting Rock Shaft Bushing Set Screw Nut (2)
204197	11635	Piercer Bar Lifting Rock Shaft Collar with 200113F
200113F	12308	Piercer Bar Lifting Rock Shaft Collar Set Screw
213255	11098	Piercer Bar Lifting Rock Shaft Crank with 203339, 201812 and 213804
214004	—	Piercer Bar Lifting Rock Shaft Crank 213255 with 213249
203339	11642	Piercer Bar Lifting Rock Shaft Crank Position Pin

No.	Plate	Name
201812	11642	Piercer Bar Lifting Rock Shaft Crank Roller and Stud
213253	11101	Piercer Holder with 200117F
200076D	11642	" " Screw
200117F	11097	" Set Screw
213791	13411	Presser Bar (hollow)
204252	12308	" " Lifter
200550C	12311	" " " Hinge Screw ...
202179	11643	" " Lifting Bracket with 200387C
204254	12307	Presser Bar Lifting Bracket Posi- tion Guide
200362C	12311	Presser Bar Lifting Bracket Posi- tion Guide Set Screw
200387C	11643	Presser Bar Lifting Bracket Set Screw
204327	—	Presser Bar Packing Washer (felt)
200504E	13404	" " Screw Bushing (lower)
204255	13404	" " Spring
200491B	12344	" " Thumb Screw (pres- sure regulating)
200436F	13404	Presser Foot Adjusting Screw
200086F	12308	" " " " Clamp Screw
221479	13404	Presser Foot Hinge Pin
229685	13404	" " " Stud
200397H	13404	" " " " Set Screw
229706	13407	" " Plate (left)
229707	13407	" " " (right)
206653	14214	" " Shank (left) with 200086F, 200397H and 200436F ..
229775	14214	Presser Foot Shank 206653 with 221479 and 229706
229796	13407	Presser Foot Shank (right) with 200086F
229776	14214	Presser Foot Shank 229796 with 221479 and 229707
200086F	12308	Presser Foot Shank (right) Set Screw
229674	13407	Presser Foot Spring
202737	13404	" " " Collar with 200380C
200380C	12319	Presser Foot Spring Collar Set Screw
229711	14214	Presser Foot (hinged) (narrow) complete, Nos. 229685, 229775 and 229776
202068	12153	Spool Holder Base
204551	11636	" " " Bracket (for two spools)

No.	Plate	Name
200257D	13404	Spool Holder Base Bracket Screw
204552	11636	Spool Holder Base Bracket complete, Nos. 204551, two each 200575H and 204297
200575H	12311	Spool Holder Base Screw
204296	12153	" " Wire
200079H	12311	" " " Hinge Screw ...
204297	12153	Spool Holder complete, Nos. 200079H, 202068 and 204296
212920	—	Take-up Cam with 200335c and 200430c
203268	13411	Take-up Cam 212920 with 200383c, 200658c and 201519E
203172	12307	Take-up Cam Friction Washer ...
200430c	12311	" " Position Screw
200383c	12311	" " " " Check Screw
200335c	12311	Take-up Cam Set Screw
203311	13404	" Lever
221454	—	" " 203311 with 204263 ..
204263	13404	" " Bearing with 204264..
204264	11643	" " " Position Pin ..
200042F	12311	" " " Screw
201816	12307	" " Roller
203312	13404	Take-up Lever complete, Nos. 200042F, 201816 and 221454
244007	11643	Tension Disc
202090	11643	" " Position Pin
213267	11101	" Release Cam
200290c	13413	" " " Screw
207069	13423	" " " Stop Pin
213213	13413	" " Lever
200290c	13413	" " " Screw
213214	13413	" " " Spring
200318H	13413	" " " " Screw ...
202075	11643	" " Plunger
203750	13423	" " Slide
206608	13423	" " " Spring
13710	13428	" Spring
200632B	11643	" Stud
200397H	13404	" " Set Screw
201572B	10881	" Thumb Nut
204271	11643	" Washer
203753	13428	Tension complete, Nos. 13710, 200632B, 201572B, 202075, 204271 and two 244007
213934	11644	Thread Controller Bracket

No.	Plate	Name
213935	—	Thread Controller Bracket 213934 with 200152H, 213937 to 213939, two each 200315H, 202098, 213936 and four 213940
202108	13404	Thread Controller Bracket Position Pin
200098F	12307	Thread Controller Bracket Screw..
213936	11644	" " Plate
202098	11644	" " Roller
213937	11644	" " " Guard (back)
213938	11644	" " " " (front)
213939	11644	" " " " Clamp
200152H	11644	" " " " "
		Screw
213940	11644	Thread Controller Roller Guard Clamp Screw Washer
200315H	11644	Thread Controller Roller Screw ..
219866	11644	" " Spring (back)
219867	11644	" " " (front)
213942	11644	" " " Adjusting Col- lar (back)
200089D	11635	Thread Controller Spring Adjusting Collar (back) Clamp Screw
225604	13402	Thread Controller Spring Adjusting Collar (back) Clamp Screw Washer
213941	11644	Thread Controller Spring Adjusting Collar (front) with 200397H
200397H	13404	Thread Controller Spring Adjusting Collar (front) Set Screw
213943	11644	Thread Controller Spring Stop (ad- justable)
200089D	11635	Thread Controller Spring Stop Screw
213944	11644	Thread Controller Spring Stud ...
200355H	12319	" " " " Set Screw
228026	10884	Thread Controller Spring Stud Washer
203313	13413	Thread Guide
204459	13413	" " (2)
204281	11643	" Retainer Guide Wire
202091	11643	" " Sleeve
202092	11643	" " Spring (spiral)
204058	11643	" " Stud
200368H	11643	" " " Set Screw
204059	11643	Thread Retainer complete, Nos. 202091, 202092 and 204058

No.	Plate	Name
212826	13413	Throat Plate with 212863 and two 200587D
200161D	12319	Throat Plate Clamp Screw
212863	13413	" " Needle Guard
200587D	13413	" " " " Screw..
203376	13423	" " Position Pin
200577H	12311	" " Screw

HARRY MEL ANSKY
SEWING MACHINE & SUPPLIES
57 W. 25 ST. N.Y.C. CH. 3-0887

MACHINE No. 72w20

Same as No. 72w19 with the following exceptions:

No.	Plate	Name
234744	13428	Auxiliary Piercer, in place of 234739
234756	13426	Feed Dog, in place of 212827
234767	—	Needle Bar 213244 with 201206F, 213256 and 234765, in place of 213387
234764	13423	Needle Holder Bracket, in place of 213236
234765	—	Needle Holder Bracket 234764 with 234715, 234716, 234766, two each 200172H, 200797C, 201183F, 201537H and 225604, in place of 213398 ..
234766	13423	Needle Holder Thread Guide
200172H	13423	" " " " Screw
234768	13424	" Vibrating Cam and Gear, 48 teeth, in place of 221472
234769	—	Needle Vibrating Cam and Gear 234768 with 200062H and 213203, in place of 221475
213388	13412	Needle Vibrating Cam and Gear Segment Lever Connection (lower) with 214005, in place of 213241
234752	13424	Needle Vibrating Cam and Gear Segment Lever Connection (upper) with 214005, in place of 213242
234753	—	Needle Vibrating Cam and Gear Segment Lever Connection Bracket 213243 with 213388, 234752, two each 201275D, 204841, 204924, 213265 and four 200110B, in place of 213277
234773	13423	Piercer, in place of 213826
234757	—	Presser Foot Plate (left), in place of 229706
234770	—	Presser Foot Plate (right), in place of 229707
234759	—	Presser Foot Shank (left) with 200086F, 200397H and 200436F, in place of 206653
234760	13426	Presser Foot Shank 234759 with 221479 and 234757, in place of 229775

No.	Plate	Name
234761	—	Presser Foot Shank (right) with 200086F, in place of 229796
234771	13426	Presser Foot Shank 234761 with 221479 and 234770, in place of 229776
234772	13426	Presser Foot (hinged) complete, Nos. 229685, 234760 and 234771, in place of 229711
234755	13426	Throat Plate, in place of 212826 ..

ACCESSORIES

FOR MACHINE No. 72w19

No.	Plate	Name
234739	13428	Auxiliary Piercer
213710	11635	Bobbin (10)
*225482	—	" Case Screw Driver Blade ..
*225483	—	" " " " Handle ..
225497	12153	Bobbin Case Screw Driver complete, Nos. 225482 and 225483 ..
225486	13410	Needle Holder Stud Nut Wrench..
213825	13413	Piercer
213826	13413	"
234702	—	Tweezers
130 x 3	—	Needles, twelve, size 12
228213	—	Drip Pan with four 1 in. wire nails
41400	12153	Machine Rest Pin (wood)
120342	12153	Oiler with 120343
120343	12153	" Spout, 3½ in. long
*225484	—	Screw Driver Blade
*225485	—	" " Handle
225498	12153	Screw Driver complete (7¼ in. long, Nos. 225484 and 225485 ...
225554	12153	Wrench (steel)

BOBBIN WINDER

Swing Automatic, Right Hand

225453	10884	Frame with 202277 and 225438
225454	10884	" Hinge Pin
202277	—	" Oil Packing (wick)
225438	10884	" " Well Cap
225455	10884	" Spring
225456	10884	" " Plunger
202473	10885	Pulley with 200380c
200380c	12319	" Set Screw
225381	10884	Spindle
225444	10884	Stop Latch
200056E	10884	" " Screw
225458	10884	" " Thumb Lever
225459	10884	" " " " Hinge Stud
225459	10884	" " " " Joint Stud
202478	10884	" " Trip Lever
200299H	10884	" " " " Hinge Screw

No.	Plate	Name
225461	10881	Tension Bracket with 201499B
200082D	10881	" " Screw
228026	10884	" " Washer
2102	10881	" Disc
202407	10881	" Spring
201499B	10881	" Stud
201572B	10881	" " Thumb Nut
225462	10881	Bobbin Winder Tension Bracket complete, Nos. 201572B, 202407, 225461 and two 2102
225433	10885	Bobbin Winder and Tension Bracket Base
225382	10885	Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200299H, 202473, 202478, 225381, 225433, 225444, 225453 to 225456, 225458, 225462, 228026, two each 225459 and wood screws $\frac{3}{4}$ in., No. 12, R.H.B.

KNEE LIFTER

2763	14171	Rock Shaft
7539	14171	" " Hanger (back) with two wood screws 1 in., No. 10
20093	14171	Rock Shaft Hanger (front) with two wood screws 1 in., No. 10 ..
2765	14171	Rock Shaft Knee Arm
2768	—	" " " " 2765 with 2766 and 2767
2766	14171	Rock Shaft Knee Arm Hub with 356C
356C	14171	Rock Shaft Knee Arm Hub Set Screw
2767	14171	Rock Shaft Knee Plate with 356C
356C	14171	" " " " Set Screw
228238	14171	" " Lifting Lever with 356C
228239	—	" " " " 228238 with 8073, 204225, 228240 and 228241..
228240	14171	Rock Shaft Lifting Lever Rod (3 in. long)
200529C	14171	Rock Shaft Lifting Lever Rod Set Screw
228241	14171	Rock Shaft Lifting Lever Rod Swivel with 200529C
204225	14171	Rock Shaft Lifting Lever Rod Swivel Spring
8073	14171	Rock Shaft Lifting Lever Rod Swivel Spring Plunger

No.	Plate	Name
356c	14171	Rock Shaft Lifting Lever Set Screw
2770	14171	Rock Shaft Stop Dog with 356c ..
356c	14171	" " " " Set Screw..
228242	14171	Knee Lifter Rock Shaft complete, Nos. 2763, 2768, 7539, 20093, 228239 and two 2770

(Other Knee Lifter parts are listed with
parts of machine head.)

FOR MACHINE No. 72w20

Same as Machine No. 72w19 with the following
exceptions:

234744	13428	Auxiliary Piercer, in place of 234739.
234773	13423	Piercer, in place of 213825
(213826		Piercer, not used)

PRESSER FEET

FOR MACHINE No. 72w19

200436F	13404	Presser Foot Adjusting Screw
200086F	12308	" " " " Clamp Screw
221479	13404	Presser Foot Hinge Pin
229685	13404	" " " Stud
200397H	13404	" " " " Set Screw
229706	13407	" " Plate (left)
229707	13407	" " " (right)
206653	14214	" " Shank (left) with 200086F, 200397H and 200436F ..
229775	14214	Presser Foot Shank 206653 with 221479 and 229706
229796	13407	Presser Foot Shank (right) with 200086F
229776	14214	Presser Foot Shank 229796 with 221479 and 229707
200086F	12308	Presser Foot Shank (right) Set Screw

No.	Plate	Name
229711	14214	Presser Foot (hinged) (narrow) complete, Nos. 229685, 229775 and 229776
200436F	13404	Presser Foot Adjusting Screw
200086F	12308	" " " " Clamp Screw
221479	13404	Presser Foot Hinge Pin
229685	13404	" " " Stud
200397H	13404	" " " " Set Screw
229706	13407	" " Plate (left)
229835	—	" " " (right)
229672	—	" " Shank (left) with 200086F, 200397H and 200436F ..
229772	—	Presser Foot Shank 229672 with 221479 and 229706
229796	13407	Presser Foot Shank (right) with 200086F
229836	—	Presser Foot Shank 229796 with 221479 and 229835
200086F	12308	Presser Foot Shank (right) Set Screw
229837	13407	Presser Foot (hinged) complete, Nos. 229685, 229772 and 229836 ..

CORD HOLDER

213289	11098	Cord Holder
200809B	11097	" " Screw

HEMMERS

No.	Plate	Name
230192	11649	Hemmer on Shank, for hems from $\frac{1}{8}$ to $\frac{1}{2}$ inch

Note: State width required on order.

HEMMER (REVERSE)

230190	11649	Hemmer on Shank, for hems from $\frac{1}{8}$ to $\frac{5}{8}$ inch
--------	-------	---

Note: State width required on order.

HEMMER

(Right Hand)

Folds $\frac{5}{16}$ in. Hem

230524	14606	Base Plate with 225706
225706	13410	" " Position Pin
200246B	13410	" " Screw
201525E	13402	" " " Nut
225708	13410	" " Spring
230713	11650	Folder on Shank
200187B	13410	" " " Screw
230484	13410	" " " " Washer
230714	11651	Tongue with two 200133B
200133B	13410	" Screw
230711	11652	Hemmer complete, Nos. 200246B, 201525E, 225708, 230484, 230524, 230713, 230714 and two 200187B..

HEMMER

(Right Hand)

Folds $\frac{3}{8}$ in. Hem

230524	14606	Base Plate with 225706
225706	13410	" " Position Pin
200246B	13410	" " Screw
201525E	13402	" " " Nut
225708	13410	" " Spring
230715	11650	Folder on Shank
200187B	13410	" " " Screw
230484	13410	" " " " Washer
230716	11651	Tongue with two 200103D
200103D	13410	" Screw
230712	11652	Hemmer complete, Nos. 200246B, 201525E, 225708, 230484, 230524, 230715, 230716 and two 200187B..

Hemmers

29

HEMMER

(Right Hand) (Small Opening)

Folds $\frac{5}{32}$, $\frac{3}{16}$ and $\frac{1}{4}$ in. Hems

Note: State width of hem required.

No.	Plate	Name
230524	14606	Base Plate with 225706
225706	13410	" " Position Pin
200246B	13410	" " Screw
201525E	13402	" " " Nut
225708	13410	" " Spring
230532	14608	Folder on Shank
200187B	13410	" " " Screw
230484	13410	" " " " Washer
230533	14608	Tongue with two 200133B
200133B	13410	" Screw
230535	14609	Hemmer complete, Nos. 200246B, 201525E, 225708, 230484, 230524, 230532, 230533 and two 200187B ..

HEMMER

(Right Hand) (Large Opening)

Folds $\frac{5}{32}$, $\frac{3}{16}$ and $\frac{1}{4}$ in. Hems

Note: State width of hem required.

230898	13425	Base Plate
200246B	13410	" " Screw
201525E	13402	" " " Nut
225708	13410	" " Spring
230899	13425	Folder on Shank
200187B	13410	" " " Screw
230484	13410	" " " " Washer
230900	13425	Tongue with two 200164B
200164B	13410	" Screw
230901	—	Hemmer complete, Nos. 200246B, 201525E, 225708, 230484, 230898 to 230900 and two 200187B

HEMMER

(Right Hand)

Folds Hems from $\frac{7}{16}$ to $2\frac{1}{2}$ in., in steps of $\frac{1}{16}$ inch

Note: State width of hem required.

230524	14606	Base Plate with 225706
225706	13410	" " Position Pin
200246B	13410	" " Screw
201525E	13402	" " " Nut

Hemmers

No.	Plate	Name
225708	13410	Base Plate Spring
230540	11650	Folder on Shank
200187B	13410	" " " Screw
230484	13410	" " " " Washer
230539	11651	Tongue with two 200103D
200103D	13410	" Screw
230542	14609	Hemmer complete, Nos. 200246B, 201525E, 225708, 230484, 230524, 230539, 230540 and two 200187B..

HEMMER (REVERSE)

(Right Hand)

Folds Hems from $\frac{1}{4}$ to $2\frac{3}{4}$ in., in steps of $\frac{1}{16}$ inch

Note: State width of hem required.

230756	11651	Base Plate with 225706
225706	13410	" " Position Pin
200246B	13410	" " Screw
201525E	13402	" " " Nut
225708	13410	" " Spring
230537	14608	Folder on Shank
200187B	13410	" " " Screw
230484	13410	" " " " Washer
230536	14608	Tongue with two 200103D
200103D	13410	" Screw
230538	11652	Hemmer (reverse) complete, Nos. 200246B, 201525E, 225708, 230484, 230536, 230537, 230756 and two 200187B

HEMMER (ADJUSTABLE)

(Right Hand)

Folds Hems from $\frac{1}{2}$ to $2\frac{1}{4}$ inches

230524	14606	Base Plate with 225706
225706	13410	" " Position Pin
200246B	13410	" " Screw
201525E	13402	" " " Nut
225708	13410	" " Spring
230519	14606	Bracket (lower) with two 200078D
200158B	13410	" " Screw
230484	13410	" " Washer
230521	14606	" (upper) with 200462B and two 200160B
200078D	12307	Bracket (upper) Screw
230518	14606	Folder Arm and Guard (left)
200160B	13410	" " " " Screw
230520	14606	" and Arm (right)

No.	Plate	Name
200462B	13410	Folder and Arm (right) Adjustable Thumb Screw
226163	13410	Folder and Arm (right) Adjustable Thumb Screw Washer
230523	14606	Tongue (left) with two 200164B ..
200164B	13410	" " Screw
230522	14606	" (right) with two 200164B ...
200164B	13410	" " Screw
230525	14609	Hemmer (adjustable) complete, Nos. 200246B, 201525E, 225708, 226163, 230484, 230518 to 230524 and two 200158B

HEMMER (REVERSE) (ADJUSTABLE)

(Right Hand)

Folds Hems from $\frac{1}{2}$ to $2\frac{1}{2}$ inches

230529	14607	Base Plate with 225706
225706	13410	" " Position Pin
200246B	13410	" " Screw
201525E	13402	" " " Nut
225708	13410	" " Spring
230528	14607	Folder Arm and Guard (left) with two 200155F
200187B	13410	Folder Arm and Guard (left) Screw
230484	13410	" " " " " " "
		Washer
230526	14607	Folder and Arm (right) with two 200155F
200469B	13410	Folder and Arm (right) Adjustable Thumb Screw
226163	13410	Folder and Arm (right) Adjustable Thumb Screw Washer
230530	14607	Tongue (left)
230527	14607	" (right)
200155F	13410	" Screw
230531	14609	Hemmer (reverse) (adjustable) complete, Nos. 200246B, 200469B, 201525E, 225708, 226163, 230484, 230526 to 230530 and two 200187B

HEMMER (ADJUSTABLE)

(Left Hand)

Folds Hems from $\frac{1}{2}$ to $2\frac{1}{4}$ inches

230516	14605	Base Plate with 225706
225706	13410	" " Position Pin
200246B	13410	" " Screw
201525E	13402	" " " Nut
225708	13410	" " Spring

No.	Plate	Name
230515	14605	Bracket (lower) with two 200078D
200158B	13410	" " Screw
230484	13410	" " Washer
230514	14605	" (upper) with 200462B and two 200160B
200078D	12307	Bracket (upper) Screw
230510	14605	Folder Arm and Guard (right)
200160B	13410	" " " " Screw
230511	14605	" and Arm (left)
200462B	13410	" " " " Adjustable Thumb Screw
226163	13410	Folder and Arm (left) Adjustable Thumb Screw Washer
230512	14605	Tongue (left) with two 200164B ...
200164B	13410	" " Screw
230513	14605	" (right) with two 200164B ...
200164B	13410	" " Screw
230517	14609	Hemmer (adjustable) (left hand) complete, Nos. 200246B, 201525E, 225708, 226163, 230484, 230510 to 230516 and two 200158B

BOX PLAITER

(ADJUSTABLE)

230001	14526	Base Plate
230002	14526	" " Arm Bracket with two 200344C
200344C	14527	Base Plate Arm Bracket Adjusting Screw
200048B	14527	Base Plate Arm Bracket Screw ..
230003	14526	" " Cloth Guide (left)
230004	14526	" " " " (right)
200169B	14527	" " " " Screw
200048B	14527	" " Screw
230005	14527	Folder Blade (left) (adjustable) ..
230006	14527	" " (right) (adjustable) ..
230007	14526	" " Plate
200344C	14527	" " " Adjusting Screw
200053B	12311	" " " Screw

No.	Plate	Name
200169B	14527	Folder Blade Screw
230008	14527	Presser Foot
230009	14528	Space Gauge (left)
230010	14528	" " (right)
230011	14528	" " Adjustable Slide (left)
230012	—	" " " " 230011 with 200176B, 200186B, 202603 and 230009
230013	14528	Space Gauge Adjustable Slide (right)
230014	14529	Space Gauge Adjustable Slide 230013 with 200176B, 200186B, 202603 and 230010
200186B	14527	Space Gauge Screw (long)
202603	14527	" " " " Washer
200176B	14527	" " " (short)
200472B	14527	" " Thumb Screw
202603	14527	" " " " Washer
230015	14529	Box Plaiter (adjustable) complete, Nos. 200472B, 202603, 230001 to 230008, 230012, 230014, two 200053B, four 200169B and five 200048B

HARRY WELANSKY
SEWING MACHINES & SUPPLIES
57 W. 25 ST. N.Y.C. CH. 3-0887

LAP SEAM FELLER

(ADJUSTABLE)

For Joining Lace to Cloth or Two Pieces of Cloth with
Double Hemstitch

230260	14581	Base Plate
200157B	13410	" " Screw
230258	14581	Folder on Shank (left)
230259	14581	" " " (right)
200170B	13410	" " Screw
230261	14581	Lap Seam Feller (adjustable) com- plete, Nos. 230258 to 230260 and two 200170B

PICOT EDGE CUTTING DEVICE

No.	Plate	Name
234719	13421	Blade (lower)
350124C	13427	" " Position Screw Stud
201634D	13427	" " " " "
		Thumb Nut
202603	14527	Blade (lower) Position Screw Stud Washer
234720	13421	Blade (upper)
234721	13421	" Arm
234722	13421	" " Bracket with 200036D ..
200036D	11090	" " " Pinch Screw
234723	13421	" " " Support
200077D	13423	" " Screw
234735	13421	" " Shim
234724	13421	" Hinge Stud
200162D	13427	" " " Cap Screw
234725	13421	" Operating Connection
350125F	13427	" " " Hinge Screw (lower)
201319C	13427	Blade Operating Connection Hinge Screw (upper)
234726	13421	Blade Operating Lever
350126C	13427	" " " Screw
201706C	13427	" " " " Nut ...
221486	13427	" Spring
234728	—	Picot Edge Cutting Device complete, Nos. 200162D, 201319C, 201634D, 201706C, 202603, 221486, 234719 to 234726, 350124C, 350125F, 350126C, two each 200077D and 234735
200436F	13404	Presser Foot Adjusting Screw
200086F	12308	" " " " Clamp Screw
221479	13404	Presser Foot Hinge Pin
229685	13404	" " " Stud
200397H	13404	" " " " Set Screw
234729	—	" " Plate (left)
234730	—	" " " (right)
234736	—	" " Shank (left) with 200086F, 200397H and 200436F ..
234731	13427	Presser Foot Shank 234736 with 221479 and 234729
229796	13407	Presser Foot Shank (right) with 200086F

No.	Plate	Name
234732	13427	Presser Foot Shank 229796 with 221479 and 234730
234733	13427	Presser Foot (hinged) complete, Nos. 229685, 234731 and 234732..
234734	—	Picot Edge Cutting Device and Presser Foot complete, Nos. 234728 and 234733

OBsolete PARTS

202470	12320	Bobbin Winder Base
202471	12320	" " Frame
202472	12319	" " " Spring
202474	12320	" " Spindle
227522	12319	" " Stop Latch
202477	12319	" " " " Thumb Lever
227523	12320	Bobbin Winder complete, Nos. 200056E, 200161D, 200221D, 201537H, 202470 to 202474, 202477, 202478, 227522, three 200299H and two round head wood screws $\frac{3}{4}$ in., No. 12
202480	12320	Bobbin Winder Spool Holder Base with 200355H and 202484
202481	12320	Bobbin Winder Spool Holder Base Spool Pin
202482	12319	Bobbin Winder Spool Holder Ten- sion Disc (lower or upper)
202483	12319	Bobbin Winder Spool Holder Ten- sion Disc Spring (brass)
202484	12319	Bobbin Winder Spool Holder Ten- sion Disc Thread Guide
202485	12320	Bobbin Winder Spool Holder com- plete, Nos. 200011D, 202480, 202481, 202483, two 202482 and one wood screw 1 in., No. 12

No.	Plate	Name
213290	11652	Face Plate with 200366H, 202087, 203751, 207069, two each 200368H, 202090 and three 200097H
213266	11097	Face Plate Thread Guide
213291	11652	Face Plate complete, Nos. 200303H, 200577H, 202088, 213213, 213214, 213231, 213267, 213290, two each 200290C, 201537H, 204059, 203753 and three 225604
230534	—	Hemmer Base Plate with 225706 ..
203250	12308	Hook Driving Shaft Collar with two 200393C
213239	11099	Needle Holder Stop Screw Washer
213198	13410	" Vibrating Cam and Gear Driving Gear, 16 teeth, with two 200383C
215697	13411	Needle Vibrating Cam and Gear, 48 teeth
215698	—	Needle Vibrating Cam and Gear 215697 with 200062H and 213203..
213811	13410	Piercer Bar Lifting Rock Shaft Bushing

Nos. 229681 to 229684, for 229705 and 229727

229681	14204	Presser Foot Bracket
229682	14204	" " Heel Spring
229683	14204	" " " " Post
229684	14204	" " " " " Washer
229703	14204	" " Plate (left), for 229769
229704	14204	" " " (right), for 229795
206651	—	" " Shank (left) with 229949, for 229763 and 229769 ..
229769	13407	Presser Foot Shank 206651 with 221479 and 229703, for 229705 ..
206652	—	Presser Foot Shank (right) with 229949, for 229764 and 229795 ..
229795	13407	Presser Foot Shank 206652 with 221479 and 229704, for 229705 ..
229705	14204	Presser Foot (hinged) complete, Nos. 206487, 207127, 229681 to 229684, 229769, 229795, two each 200057F, 201537E and 207125, to be used with Presser Bar 204251
229725	13408	Presser Foot Plate (left), for 229763
229726	13408	" " " (right), for 229764
229763	13408	" " Shank 206651 with 221479 and 229725, for 229727 ..
229764	13408	Presser Foot Shank 206652 with 221479 and 229726, for 229727 ..

No.	Plate	Name
229727	13408	Presser Foot (hinged) complete, Nos. 206487, 207127, 229681 to 229684, 229763, 229764, two each 200057F, 201537E and 207125, to be used with Presser Bar 204251 ..
229731	13409	Presser Foot Plate (left) with 200486D and 213648, for 229791 ..
229732	13409	Presser Foot Plate (right), for 229792
229791	13409	Presser Foot Shank 207136 with 200175H, 205979, 207140 and 229731, for 229733
229792	13409	Presser Foot Shank 207137 with 200175H, 205979, 207140 and 229732, for 229733
213648	13409	Presser Foot (left) Strip Guide, for 229731
229733	13409	Presser Foot (hinged) (adjustable) complete, Nos. 207138, 229791, 229792, two each 200112H and 228026, to be used with Presser Bar 221468
229739	13409	Presser Foot (hinged) (adjustable) complete, Nos. 207138, 229787, 229788, two each 200112H and 228026, to be used with Presser Bar 221468
234703	13413	Tension Release Lever Stop
213805	11101	Thread Controller Roller Guard Washer Thread Guard
213231	13410	Thread Contrcller and Spring complete, Nos. 202085 and 203745 ..
203745	13423	Thread Controller complete, Nos. 200300C, 200581H, 202098, 204274, 204275, 204333 and 213805

HARRY WELANSKY
SEWING MACHINES & SUPPLIES
57 W. 25 ST. N.Y.C. CH. 3-0887

**NUMERICAL LIST OF PARTS
FOR
MACHINES
Nos. 72w19 and 72w20**

NUMERICAL LIST OF PARTS

No.	Plate	Name
356C	14171	Knee Lifter Rock Shaft Knee Arm Hub Set Screw, for 2766
356C	14171	Knee Lifter Rock Shaft Knee Plate Set Screw, for 2767
356C	14171	Knee Lifter Rock Shaft Lifting Lever Set Screw, for 228238
356C	14171	Knee Lifter Rock Shaft Stop Dog Set Screw, for 2770
2102	10881	Bobbin Winder Tension Disc, for 225462
2763	14171	Knee Lifter Rock Shaft, for 228242
Nos. 2765 to 2767, for 2768		
2765	14171	Knee Lifter Rock Shaft Knee Arm
2766	14171	" " " " " "
		Hub with 356C
2767	14171	Knee Lifter Rock Shaft Knee Plate with 356C
2768	—	Knee Lifter Rock Shaft Knee Arm 2765 with 2766 and 2767, for 228242
2770	14171	Knee Lifter Rock Shaft Stop Dog with 356C, for 228242
7539	14171	Knee Lifter Rock Shaft Hanger (back) with two wood screws 1 in., No. 10, for 228242
8073	14171	Knee Lifter Rock Shaft Lifting Lever Rod Swivel Spring Plunger, for 228239
13710	13428	Tension Spring, for 203753
20093	14171	Knee Lifter Rock Shaft Hanger (front) with two wood screws 1 in., No. 10, for 228242
41400	12153	Machine Rest Pin (wood)
120342	12153	Oiler with 120343
120343	12153	" Spout, 3½ in. long, for 120342
200002E	13402	Feed Driving Rock Shaft Connec- tion Hinge Screw, for 213167 ..
200006E	12307	Hook Saddle Screw
200010E	13402	Arm Screw
200011D	12319	Bobbin Winder Spool Holder Ten- sion Disc Screw, for 202485
200031F	12311	Feed Driving Segment Lever Clamp Pinch Screw, for 215700..

No.	Plate	Name
200036E	11090	Feed Driving Cam and Gear Shaft Bracket Screw
200036D	11090	Picot Edge Cutting Blade Arm Bracket Pinch Screw, for 234722
200042F	12311	Take-up Lever Bearing, Screw, for 203312
200043C	12311	Feed Driving Rock Shaft Center Set Screw
200043C	12311	Feed Driving Segment Lever Shaft Sleeve Set Screw
200043C	12311	Feed Lifting Rock Shaft Center Set Screw
200043C	12311	Piercer Bar Lifting Rock Shaft Bushing Set Screw
200048E	14527	Box Plaiter Base Plate Arm Brack- et Screw, for 230015
200048B	14527	Box Plaiter Base Plate Screw, for 230015
200049E	13402	Feed Lifting Rock Shaft Lever Pinch Screw, for 234717
200053B	12311	Box Plaiter Folder Blade Plate Screw, for 230015
200053C	12311	Face Plate Screw
200054E	12307	Arm Shaft Connection Screw, for 204804
200056E	10884	Bobbin Winder Stop Latch Screw, for 225382 and 227523
200057H	13404	Piercer Bar Driving Cam Conne- ction Pinch Screw, for 213258 ...
200057F	13404	Presser Foot Shank Clamp Screw, for 229705 and 229727
200062H	12311	Balance Wheel Adjusting Screw ..
200062H	12311	Needle Vibrating Cam and Gear Adjusting Screw, for 215698, 221475 and 234769
200066D	11642	Piercer Bar Driving Cam Conne- ction Pinch Screw, for 213258 ...
200070C	11642	Piercer Bar Driving Cam Conne- ction Crank Pinch Screw, for 247563
200072C	12308	Needle Bar Connecting Stud Pinch Screw, for 204249
200074F	12308	Presser Foot Screw, for 204251 and 221468
200076D	11642	Piercer Holder Screw
200077D	13423	Picot Edge Cutting Blade Arm Screw, for 234728
200078D	12307	Hemmer Bracket (upper) Screw, for 230515 and 230519

No.	Plate	Name
200079H	12311	Spool Holder Wire Hinge Screw, for 204297
200082D	10881	Bobbin Winder Tension Bracket Screw, for 225382
200086C	12308	Needle Bar Guide Pinch Screw, for 221480
200086F	12308	Presser Foot Adjusting Screw Clamp Screw, for 206653, 229672, 229796 and 234736
200086F	12308	Presser Foot Shank (right) Set Screw, for 229796, 234759 and 234761
200089D	11635	Thread Controller Spring Adjust- ing Collar (back) Clamp Screw, for 213946
200089D	11635	Thread Controller Spring Stop Screw, for 213946
200098F	12307	Feed Regulating Handle Adjustable Stop Screw, for 204713
200098F	12307	Feed Regulating Handle Shaft Crank Set Screw, for 204211
200098F	12307	Thread Controller Bracket Screw, for 213946
200103D	13410	Hemmer Tongue Screw, for 230536, 230539 and 230716
200106E	12311	Feed Dog Screw
200110B	13404	Needle Vibrating Cam and Gear Segment Lever Connecting Link Screw, for 213277 and 234753 ..
200112H	13410	Presser Foot Shank Screw, for 229733 and 229739
200113F	12308	Piercer Bar Lifting Rock Shaft Collar Set Screw, for 204197
200117F	11097	Auxiliary Piercer Holder Screw, for 234714
200117F	11097	Needle Set Screw, for 234715 and 234716
200117F	11097	Needle Vibrating Lever Set Screw
200117F	11097	Piercer Set Screw, for 213253
200118F	13402	Auxiliary Piercer Holder Bracket Screw, for 213261
200128E	11642	Piercer Bar Driving Cam Retain- ing Washer Screw, for 213247 ..
200133B	13410	Hemmer Tongue Screw, for 230533 and 230714
200135E	11642	Needle Vibrating Cam and Gear Segment Lever Connection Stop Block Screw, for 206008
200152H	11644	Thread Controller Roller Guard Clamp Screw, for 213935

No.	Plate	Name
200155F	13410	Hemmer Tongue Screw, for 230526 and 230528
200157B	13410	Lap Seam Feller Base Plate Screw
200158B	13410	Hemmer Bracket (lower) Screw, for 230517 and 230525
200160B	13410	Hemmer Folder Arm and Guard Screw, for 230514 and 230521 ..
200161D	12319	Bobbin Winder Frame Spring Screw, for 227523
200161D	12319	Throat Plate Clamp Screw
200162D	13427	Picot Edge Cutting Blade Hinge Stud Cap Screw, for 234728
200164B	13410	Hemmer Tongue (left) Screw, for 230512 and 230523
200164B	13410	Hemmer Tongue (right) Screw, for 230513 and 230522
200164B	13410	Hemmer Tongue Screw, for 230900
200169B	14527	Box Plaiter Base Plate Cloth Guide Screw, for 230015
200169B	14527	Box Plaiter Folder Blade Screw, for 230015
200170B	13410	Lap Seam Feller Folder Screw, for 230261
200172H	13423	Needle Holder Thread Guide Screw, for 234765
200175H	12308	Presser Foot Spring Screw, for 229787, 229788, 229791 and 229792
200176B	14527	Box Plaiter Space Gauge Screw (short), for 230012 and 230014 ..
200186B	14527	Box Plaiter Space Gauge Screw (long), for 230012 and 230014 ..
200187B	13410	Hemmer Folder on Shank Screw, for 230535, 230538, 230542, 230711, 230712 and 230901
200187B	13410	Hemmer Folder Arm and Guard (left) Screw, for 230531
200214E	13402	Feed Bar Hinge Screw, for 213765
200221D	12319	Bobbin Winder Frame Hinge Screw, for 227523
200243E	13402	Feed Lifting Rock Shaft Slide Block Hinge Screw, for 203238 ..
200246B	13410	Hemmer Base Plate Screw, for 230517, 230525, 230531, 230535, 230538, 230542, 230711, 230712 and 230901
200257D	13404	Spool Holder Base Bracket Screw
200261F	13410	Feed Lifting Rock Shaft Lever Roller Screw Stud, for 201807 ..
200262H	13428	Knee Lifter Connection Lever Hinge Screw, for 227444

Numerical List of Parts

43

No.	Plate	Name
200262H	13428	Knee Lifter Lifting Lever Hinge Screw, for 227444
200271E	12311	Feed Regulating Handle Shaft Crank Link Hinge Screw (lower)
200278H	12311	Arm Cap Screw
200290C	13413	Tension Release Cam Screw, for 213291 and 213946
200290C	13413	Tension Release Lever Screw, for 213291 and 213946
200291E	12307	Feed Regulating Handle Shaft Crank Link Hinge Screw (upper), for 204715
200299H	10884	Bobbin Winder Stop Latch Thumb Lever Hinge Screw, for 227523..
200299H	10884	Bobbin Winder Stop Latch Thumb Lever Joint Screw, for 227523..
200299H	10884	Bobbin Winder Stop Latch Trip Lever Hinge Screw, for 225382 and 227523
200300C	11644	Thread Controller Roller Screw, for 203745
200303H	13410	Tension Release Lever Spring Screw, for 213291
200315H	11644	Thread Controller Roller Screw, for 213935
200318H	13413	Tension Release Lever Spring Screw, for 213946
200328C	12311	Balance Wheel Position Screw, for 204174
200335C	12311	Balance Wheel Set Screw, for 204174
200335C	12311	Take-up Cam Set Screw, for 212920
200343C	13404	Needle Vibrating Cam and Gear Stud Set Screw
200344C	14527	Box Plaiter Base Plate Arm Bracket Adjusting Screw, for 230002
200344C	14527	Box Plaiter Folder Blade Plate Adjusting Screw, for 230002
200346C	13402	Needle Bar Bushing Set Screw, for 234705
200348C	11090	Feed Driving Cam and Gear Driving Gear Set Screw, for 213218..
200352C	11635	Arm Shaft Bushing (back) Set Screw
200352C	11635	Arm Shaft Bushing (front) Set Screw
200352C	11635	Piercer Bar Bushing (lower) Set Screw

HARRY WEINSTEIN
SEWING MACHINE SUPPLIES
37-42 ST. N.Y.C. CH. 3-0887

No.	Plate	Name
200352C	11635	Piercer Bar Bushing (upper) Set Screw
200355H	12319	Bobbin Winder Spool Holder Tension Disc Screw Set Screw, for 202480
200355H	12319	Thread Controller Spring Stud Set Screw, for 213945
200362C	12311	Feed Regulating Handle Shaft Sleeve Set Screw
200362C	12311	Hook Counter Shaft Driving Gear Set Screw, for 203245
200362C	12311	Hook Driving Shaft Bushing Set Screw, for 213235
200362C	12311	Piercer Bar Driving Cam Set Screw, for 213248
200362C	12311	Presser Bar Lifting Bracket Position Guide Set Screw
200363C	11635	Feed Driving Segment Lever Crank Set Screw, for 203741
200366H	11644	Thread Controller Spring Stud Set Screw, for 213290
200368H	11643	Thread Retainer Stud Set Screw, for 213290 and 213945
200380C	12319	Bobbin Winder Pulley Set Screw, for 202473
200380C	12319	Needle Vibrating Cam and Gear Segment Lever Shaft Collar Set Screw, for 202574
200380C	12319	Presser Foot Pressure Regulating Guide Screw, for 207126
200380C	12319	Pressure Foot Spring Collar Set Screw, for 202737
200383C	12311	Feed Driving Cam and Gear Set Screw, for 206206
200383C	12311	Feed Driving Rock Shaft Crank Set Screw, for 204200
200383C	12311	Feed Lifting Cam Set Screw, for 213234
200383C	12311	Hook Bevel Pinion Set Screw, for 203242
200383C	12311	Hook Counter Shaft Gear Set Screw, for 203246
200383C	12311	Needle Vibrating Cam and Gear Driving Gear Set Screw, for 213198 and 221470
200383C	12311	Take-up Cam Position Screw Check Screw, for 203268
200387C	11643	Presser Bar Lifting Bracket Set Screw, for 202179

No.	Plate	Name
200389C	11642	Auxiliary Piercer Set Screw, for 234714
200393C	12308	Hook Counter Shaft Collar Set Screw, for 203244
200393C	12308	Hook Driving Shaft Collar Set Screw, for 203250 and 213141 ...
200397H	13404	Face Plate Thread Guide Set Screw, for 213945
200397H	13404	Presser Foot Hinge Stud Set Screw, for 206653, 229672, 234736 and 234759
200397H	13404	Tension Stud Set Screw, for 213290 and 213945
200397H	13404	Thread Controller Spring Adjusting Collar (front) Set Screw, for 213941
200430C	12311	Take-up Cam Position Screw, for 212920
200436F	13404	Presser Foot Adjusting Screw, for 206653, 229672, 234736 and 234759
200439C	12311	Hook Counter Shaft Driving Gear Position Screw, for 203245
200462B	13410	Hemmer Folder and Arm (left) Adjustable Thumb Screw, for 230514
200462B	13410	Hemmer Folder and Arm (right) Adjustable Thumb Screw, for 230521
200469B	13410	Hemmer Folder and Arm (right) Adjustable Thumb Screw, for 230531
200472B	14527	Box Plaiter Space Gauge Thumb Screw, for 230015
200486D	13410	Presser Foot (left) Strip Guide Screw, for 229731
200491B	12344	Presser Bar Thumb Screw (pressure regulating)
200502B	11635	Arm Shaft Bushing (front) Oil Packing Thumb Screw
200504E	13404	Presser Bar Screw Bushing (lower)
200516E	12311	Hook Driving Shaft Bearing Screw, for 213235
200529C	14171	Knee Lifter Rock Shaft Lifting Lever Rod Set Screw, for 228241
200550C	12311	Presser Bar Lifter Hinge Screw ..
200555H	12312	Hook Bevel Gear Socket Screw, for 203308
200570E	12311	Bed Hinge Connection Screw
200571B	11090	Arm Plate Screw

No.	Plate	Name
200571B	11090	Needle Vibrating Cam and Gear Segment Lever Connection Bracket Screw (lower)
200574E	11642	Needle Vibrating Cam and Gear Segment Lever Connection Bracket Screw (upper)
200575H	12311	Spool Holder Base Screw, for 204552
200577H	12311	Thread Controller Plate Screw, for 213291
200577H	12311	Throat Plate Screw
200581H	11644	Thread Controller Spring Guard Screw, for 203745
200587D	13413	Throat Plate Needle Guard Screw, for 212826
200594C	12312	Bobbin Case Tension Spring Screw, for 203209
200594C	12312	Bobbin Case Thread Guide Screw, for 203209
200632B	11643	Tension Stud, for 203753
200658C	12307	Needle Bar Connecting Link Hinge Screw Stud, for 203268
200668C	13402	Feed Driving Segment Lever Clamp Screw Stud, for 204193
200740C	11101	Piercer Bar Driving Cam Con- nection Crank Ball Screw, for 221461
200791E	13404	Needle Vibrating Cam and Gear Segment Lever Connection Screw Stud Slide
200797C	11099	Needle Holder Stud, for 213398 and 234765
200809B	11097	Cord Holder Screw
200820C	11635	Feed Driving Cam and Gear Roller Stud, for 201850
200840E	12311	Hook Counter Shaft Oil Packing (wick) Stop Screw, for 213235 ..
200984C	12312	Bobbin Case Tension Spring Regu- lating Screw, for 203209
201052C	13423	Piercer Bar Lifting Bracket Set Screw, for 213249
201183F	13423	Needle Holder Cap Screw, for 213398 and 234765
201206F	13410	Needle Holder Bracket Screw, for 213387 and 234767
201253F	12312	Hook Gib Screw, for 203240
201275D	13410	Needle Vibrating Cam and Gear Segment Lever Connection Slide Block Screw, for 213277 and 234753

No.	Plate	Name
201319C	13427	Picot Edge Cutting Blade Operating Connection Hinge Screw (upper), for 234728
201376F	13402	Hook Gib Hinge Screw, for 203240
201499B	10881	Bobbin Winder Tension Stud, for 225461
201501D	13404	Needle Vibrating Cam and Gear Stud Nut
201517E	11090	Feed Driving Cam and Gear Roller Stud Nut, for 213246
201519E	12307	Needle Bar Connecting Link Hinge Screw Stud Nut, for 203268
201520H	11101	Piercer Bar Driving Cam Connection Crank Ball Screw Nut, for 221461
201522E	13402	Feed Driving Rock Shaft Connection Hinge Screw Nut, for 213167
201524E	13404	Feed Driving Segment Lever Shaft Sleeve Set Screw Nut
201524E	13404	Piercer Bar Lifting Rock Shaft Bushing Set Screw Nut
201525E	13402	Feed Bar Hinge Screw Nut, for 213765
201525E	13402	Feed Driving Segment Lever Clamp Screw Stud Nut, for 204193
201525E	13402	Hemmer Base Plate Screw Nut, for 230517, 230525, 230531, 230535, 230538, 230542, 230711, 230712 and 230901
201531E	12308	Feed Lifting Rock Shaft Slide Block Hinge Screw Nut, for 203238 ..
201535E	11090	Feed Dog Support Screw Nut, for 213765
201537H	12319	Bobbin Winder Stop Latch Thumb Lever Joint Screw Nut, for 227523
201537H	12319	Needle Holder Stud Nut, for 213398 and 234765
201537E	12319	Presser Foot Shank Clamp Screw Nut, for 229705 and 229727
201572B	10881	Bobbin Winder Tension Stud Thumb Nut, for 225462
201572B	10881	Tension Thumb Nut, for 203753 ..
201581B	13404	Needle Vibrating Cam and Gear Segment Lever Connection Screw Stud Slide Wing Nut
201634D	13427	Picot Edge Cutting Blade (lower) Position Screw Stud Thumb Nut, for 234728

No.	Plate	Name
201706c	13427	Picot Edge Cutting Blade Operating Lever Screw Nut, for 234728
201807	11099	Feed Lifting Rock Shaft Lever Roller 201822 with 200261r, for 234717
201809	13404	Needle Vibrating Cam and Gear Segment Lever Roller 201816 with 202556, for 213802
201812	11642	Piercer Bar Lifting Rock Shaft Crank Roller and Stud, for 213255
201816	12307	Feed Driving Cam and Gear Roller, for 201850
201816	12307	Needle Vibrating Cam and Gear Segment Lever Roller, for 201809
201816	12307	Take-up Lever Roller, for 203312 ..
201822	—	Feed Lifting Rock Shaft Lever Roller, for 201807
201850	11090	Feed Driving Cam and Gear Roller 201816 with 200820c, for 213246..
202005	12308	Arm Screw Washer
202036	13402	" Shaft Bushing (front) Position Pin, for 204802
202036	13402	Feed Regulating Handle Stop Pin, for 234705
*202056	—	Bobbin Case Base Latch Pin, for 203210
202068	12153	Spool Holder Base, for 204297
202075	11643	Tension Release Plunger, for 203753
202085	11644	Thread Controller Spring, for 213231
202087	11644	" " " Stop, for 213290
202088	11644	Thread Controller Spring Stud with 204925, for 213291
202090	11643	Tension Disc Position Pin, for 213290 and 213945
202091	11643	Thread Retainer Sleeve, for 204059
202092	11643	" " Spring (spiral), for 204059
202098	11644	Thread Controller Roller, for 203745 and 213935
202108	13404	Thread Controller Bracket Position Pin, for 213946
202126	12308	Hook Driving Shaft Bearing Position Pin
202179	11643	Presser Bar Lifting Bracket with 200387c
202248	12307	Arm Cap Screw Washer
202258	12153	Bed Hinge Connection
202260	—	Arm Shaft Bushing (back) Oil Packing (wick), for 204801

No.	Plate	Name
202260	—	Arm Shaft Bushing (front) Oil Packing (wick), for 204802
202276	12308	Feed Lifting Rock Shaft Slide Block, for 203238
202277	—	Bobbin Winder Frame Oil Packing (wick), for 225453
202277	—	Needle Bar Connecting Stud Oil Packing (wick), for 204249
202299	—	Hook Counter Shaft Oil Packing (wick), for 213235
202299	—	Hook Driving Shaft Bearing Oil Packing (wick), for 213191
202299	—	Hook Driving Shaft Bushing Oil Packing (wick)
202299	—	Hook Saddle Oil Packing (wick), for 203307
202302	13402	Knee Lifter Connection Lever Lifting Rod Cotter Pin, for 227309 ..
202305	12307	Feed Driving Rock Shaft Center..
202305	12307	" Lifting Rock Shaft Center ...
202407	10881	Bobbin Winder Tension Spring, for 225462

Nos. 202470 to 202472 (obsolete), for 227523

202470	12320	Bobbin Winder Base
202471	12320	" " Frame
202472	12319	" " " Spring
202473	10885	" " Pulley with 200380c, for 225382 and 227523
202474	12320	Bobbin Winder Spindle (obsolete), for 227523
202477	12319	Bobbin Winder Stop Latch Thumb Lever (obsolete), for 227523
202478	10884	Bobbin Winder Stop Latch Trip Lever, for 225382 and 227523

Nos. 202480 to 202483 (obsolete), for 202485

202480	12320	Bobbin Winder Spool Holder Base with 200355H and 202484
202481	12320	Bobbin Winder Spool Holder Base Spool Pin
202482	12319	Bobbin Winder Spool Holder Tension Disc (lower or upper)
202483	12319	Bobbin Winder Spool Holder Tension Disc Spring (brass)
202484	12319	Bobbin Winder Spool Holder Tension Disc Thread Guide (obsolete), for 202480

No.	Plate	Name
202485	12320	Bobbin Winder Spool Holder complete, Nos. 200011b, 202480, 202481, 202483, two 202482 and one wood screw 1 in., No. 12 (obsolete) ..
202556	—	Needle Vibrating Cam and Gear Segment Lever Roller Stud, for 201809
202574	11635	Needle Vibrating Cam and Gear Segment Lever Shaft Collar with 200380c
202603	14527	Box Plaiter Space Gauge Screw (long) Washer, for 230012 and 230014
202603	14527	Box Plaiter Space Gauge Thumb Screw Washer, for 230015
202603	14527	Picot Edge Cutting Blade (lower) Position Screw Stud Washer, for 234728
202622	13402	Feed Regulating Handle Shaft Sleeve Washer, for 204713
202737	13404	Presser Foot Spring Collar with 200380c
203172	12307	Take-up Cam Friction Washer
203209	12312	Bobbin Case Cap with 200984c, 203214, 203215 and two 200594c, for 203217
203210	12312	Bobbin Case Base with 202056, 203211 to 203213 and 203216, for 203217

Nos. 203211 to 203213, for 203210

203211	12312	Bobbin Case Base Latch
203212	12312	" " " " Plunger ..
203213	12312	" " " " Spring
203214	12312	" " Tension Spring, for 203209
203215	12312	Bobbin Case Thread Guide, for 203209
203216	12312	Bobbin Case Washer (cloth), for 203210
203217	12312	Bobbin Case complete, Nos. 203209 and 203210, for 203290
203237	11636	Arm Shaft
203238	12308	Feed Lifting Rock Shaft Slide Block 202276 with 200243E and 201531E, for 203321
*203239	—	Hook (sewing), for 203240
203240	12312	" 203239 with 201253E, 201376E and 203251, for 203290

No.	Plate	Name
203241	12312	Hook Bevel Gear Socket, 24 teeth, for 203308
203242	12344	Hook Bevel Pinion, 24 teeth, with two 200383c
203244	12308	Hook Counter Shaft Collar with two 200393c
203245	12344	Hook Counter Shaft Driving Gear, 44 teeth, with 200362c and 200439c
203246	12344	Hook Counter Shaft Gear, 22 teeth, with two 200383c
203249	12344	Hook Driving Shaft Bushing (eccentric), for 213235
203250	12308	Hook Driving Shaft Collar with two 200393c (obsolete)
203251	12312	Hook Gib, for 203240
203254	12312	" Washer, for 203308
203268	13411	Take-up Cam 212920 with 200383c, 200658c and 201519E
203290	12312	Hook and Bobbin Case complete, Nos. 203217 and 203240, for 203308
203301	13401	Bed Slide (front)
203306	13411	Hook Counter Shaft
203307	12335	" Saddle with 202299, for 203308
203308	12335	Hook Saddle complete, Nos. 200555H, 203241, 203254, 203290 and 203307, for 203462
203311	13404	Take-up Lever, for 221454
203312	13404	Take-up Lever complete, Nos. 200042r, 201816 and 221454
203313	13413	Thread Guide
203321	13412	Feed Lifting Rock Shaft 213796 with 203238
203329	13401	Bed Slide (back)
203339	11642	Piercer Bar Lifting Rock Shaft Crank Position Pin, for 213255 ..
203376	13423	Throat Plate Position Pin, for 213235
203462	—	Hook Saddle Combination complete, Nos. two 203308
203741	—	Feed Driving Segment Lever Crank with two 200363c, for 213246
203745	13423	Thread Controller complete, Nos. 200300c, 200581H, 202098, 204274, 204275, 204333 and 213805 (obsolete), for 213231
203746	13424	Knee Lifter Connection Lever, for 227444
203747	13424	Knee Lifter Lifting Lever, for 227444

No.	Plate	Name
203750	13423	Tension Release Slide
203751	13423	Face Plate Thread Guide, for 213290 and 213945
203753	13428	Tension complete, Nos. 13710, 200632B, 201572B, 202075, 204271 and 244007, for 213291 and 213946
204020	—	Feed Lifting Rock Shaft Lever Cushion (leather), for 213234 ..
204020	—	Needle Vibrating Lever Friction (leather), for 214005
204058	11643	Thread Retainer Stud, for 204059 ..
204059	11643	Thread Retainer complete, Nos. 202091, 202092 and 204058, for 213291 and 213946
204163	12344	Arm Cap
204174	11636	Balance Wheel, 5 $\frac{1}{4}$ in. diam. (belt groove 2 $\frac{3}{4}$ in. diam.), with 200328c and 200335c
204189	11635	Feed Bar Spring Hook, for 204200 and 213789
204193	13401	Feed Driving Rock Shaft Connec- tion with 200668c and 201525E, for 213167
204196	12307	Feed Driving Segment Lever Shaft Sleeve (split) (right)
204197	11635	Piercer Bar Lifting Rock Shaft Col- lar with 200113F
204200	11635	Feed Driving Rock Shaft Crank with 204189 (on left side) and two 200383c, for 213765
204206	13402	Feed Regulating Handle, for 204713
204208	12307	" " " Adjustable Stop, for 204713
204209	12307	Feed Regulating Handle Position Pin, for 204713
204211	13402	Feed Regulating Handle Shaft Crank with 200098F, for 204715..
204212	12307	Feed Regulating Handle Shaft Crank Link, for 204715
204213	12307	Feed Regulating Handle Shaft Sleeve (split), for 204713
204225	14171	Knee Lifter Rock Shaft Lifting Lever Rod Swivel Spring, for 228239
204235	13423	Arm Position Pin
204248	12307	Needle Bar Connecting Link
204249	12308	" " " Stud with 200072c and 202277

No.	Plate	Name
204251	13412	Presser Bar (hollow) with 200074F, to be used with Presser Feet Nos. 229705 and 229727
204252	12308	Presser Bar Lifter
204254	12307	" " Lifting Bracket Position Guide
204255	13404	Presser Bar Spring
204263	13404	Take-up Lever Bearing with 204264, for 221454
204264	11643	Take-up Lever Bearing Position Pin, for 204263
204271	11643	Tension Washer, for 203753
204274	11644	Thread Controller Plate, for 203745
204275	11644	" " Roller Guard, for 203745
204281	11643	Thread Retainer Guide Wire, for 213945
204296	12153	Spool Holder Wire, for 204297
204297	12153	Spool Holder complete, Nos. 200079H, 202068 and 204296, for 204552
204327	—	Presser Bar Packing Washer (felt)
204333	11644	Thread Controller Spring Guard, for 203745
204459	13413	Thread Guide
204551	11636	Spool Holder Base Bracket (for two spools), for 204552
204552	11636	Spool Holder Base Bracket complete, Nos. 204551, two each 200575H and 204297
204713	—	Feed Regulating Handle 204206 with 200098F, 202622, 204208, 204209, 204213, 204714 and 204925, for 204715
204714	13402	Feed Regulating Handle Shaft, for 204713
204715	—	Feed Regulating Handle complete, Nos. 200291E, 204211, 204212 and 204713
204801	13401	Arm Shaft Bushing (back) with 202260
204802	13401	Arm Shaft Bushing (front) with 202036 and 202260
204804	13401	Arm Shaft Connection with four 200054E
204841	—	Needle Vibrating Cam and Gear Segment Lever Connecting Link 204922 with 204923, for 213277 and 234753

Numerical List of Parts

No.	Plate	Name
204922	11099	Needle Vibrating Cam and Gear Segment Lever Connecting Link (lower or upper), for 204841 ...
204923	11642	Needle Vibrating Cam and Gear Segment Lever Connecting Link Bushing, for 204841
204924	13404	Needle Vibrating Cam and Gear Segment Lever Connecting Link Screw Washer, for 213277 and 234753
204925	13402	Feed Regulating Handle Adjustable Stop Screw Washer, for 204713..
204925	13402	Thread Controller Spring Stud Washer, for 202088
*204928	—	Needle Vibrating Cam and Gear Segment Lever Shaft, for 213802
205979	13410	Presser Foot Hinge Pin, for 229787, 229788, 229791 and 229792
206008	—	Needle Vibrating Cam and Gear Segment Lever Connection Stop Block complete, Nos. 200135E, 206505 and 225908, for Machine No. 72w19
206206	13401	Feed Driving Cam and Gear, 54 teeth, with two 200383c
206487	13410	Presser Foot Shank Slide (left), for 229705 and 229727
206505	11100	Needle Vibrating Cam and Gear Segment Lever Connection Stop Block, for 206008
206608	13423	Tension Release Slide Spring
206609	—	Feed Driving Cam and Gear Driving Gear, 18 teeth, for 213218 ..
206651	—	Presser Foot Shank (left) with 229949 (obsolete), for 229763 and 229769
206652	—	Presser Foot Shank (right) with 229949 (obsolete), for 229764 and 229795
206653	14214	Presser Foot Shank (left) with 200086F, 200397H and 200436F, for 229775
207069	13423	Tension Release Cam Stop Pin, for 213290 and 213945
207125	13410	Presser Foot Clamp Washer (left or right), for 229705 and 229727..
207126	—	Presser Foot Pressure Regulating Guide with 200380c, to be used with Nos. 229705 and 229727

No.	Plate	Name
207127	13410	Presser Foot Shank Slide (right), for 229705 and 229727
207136	13409	Presser Foot Shank (left) (adjust- able), for 229787 and 229791
207137	13409	Presser Foot Shank (right) (adjust- able), for 229788 and 229792
207138	—	Presser Foot Shank Bracket, for 229733 and 229739
207140	13410	Presser Foot Spring, for 229787, 229788, 229791 and 229792
212826	13413	Throat Plate with 212863 and two 200587D, for 212827, for Machine No. 72w19
212827	13413	Feed Dog, for 212826
212863	13413	Throat Plate Needle Guard, for 212826
212920	—	Take-up Cam with 200335c and 200430c, for 203268
213141	11635	Hook Driving Shaft Collar with two 200393c
213167	11636	Feed Driving Rock Shaft 213172 with 200002E, 201522E and 204193
213172	11636	Feed Driving Rock Shaft, for 213167
213188	13411	" " Segment Lever with 213391 and 222526
213191	13412	Hook Driving Shaft Bearing with 202299, for 213235
213198	13410	Needle Vibrating Cam and Gear Driving Gear, 16 teeth, with two 200383c (obsolete)
213203	13412	Needle Vibrating Cam and Gear Stud, for 215698, 221475 and 234769
213213	13413	Tension Release Lever, for 213291 and 213946
213214	13413	Tension Release Lever Spring, for 213291 and 213946
213218	11090	Feed Driving Cam and Gear Driv- ing Gear 206609 with two 200348c
213222	13402	Needle Bar Bushing, for 234705 ..
213230	11636	Hook Driving Shaft
213231	13410	Thread Controller and Spring com- plete, Nos. 202085 and 203745 (ob- solete), for 213291
213233	11097	Feed Driving Cam and Gear Shaft
213234	11097	" Lifting Cam with 204020 and two 200383c
*213235	—	Bed with 203249 203376, 213191, two each 200362c, 200516E, 200840E and 202299

No.	Plate	Name
213236	11099	Needle Holder Bracket, for 213398
213239	11099	“ “ Stop Screw Washer (obsolete)
213240	11100	Needle Vibrating Lever
Nos. 213241 to 213243, for 213277		
213241	11098	Needle Vibrating Cam and Gear Segment Lever Connection (lower) with 214005
213242	11098	Needle Vibrating Cam and Gear Segment Lever Connection (upper) with 214005
213243	11098	Needle Vibrating Cam and Gear Segment Lever Connection Bracket; also for 234753
213244	11098	Needle Bar (hollow), for 213387 and 234767
213245	13401	Feed Driving Cam and Gear Shaft Bracket
213246	11097	Feed Driving Segment Lever Crank 203741 with 201517E and 201850..
213247	11642	Piercer Bar Driving Cam Con- nection 213258 with 200128E, 213248 and 213740
213248	11100	Piercer Bar Driving Cam with two 200362c, for 213247
213249	11101	Piercer Bar Lifting Bracket with two 201052c, for 214004
213250	11100	Needle Vibrating Lever Bearing (left)
213253	11101	Piercer Holder with 200117F
213255	11098	“ Bar Lifting Rock Shaft Crank with 203339 and 213804, for 214004
213256	11099	Needle Bar Thread Guide, for 213387 and 234767
213257	13401	Arm Plate
213258	11100	Piercer Bar Driving Cam Con- nection with 200057H and 200066D, for 213247
213260	13411	Piercer Bar, for 214003
213261	11097	Auxiliary Piercer Holder Bracket with two 200118F
213262	11100	Piercer Bar Bushing (upper), for 214003
213265	11100	Needle Vibrating Cam and Gear Segment Lever Connection Slide Block, for 213277 and 234753
213266	11097	Face Plate Thread Guide (obso- lete)

No.	Plate	Name
213267	11101	Tension Release Cam, for 213291 and 213946
213277	—	Needle Vibrating Cam and Gear Segment Lever Connection Bracket 213243 with 213241, 213242, two each 201275D, 204841, 204924, 213265 and four 200110B, for Machine No. 72w19
213289	11098	Cord Holder
213290	11652	Face Plate with 200366H, 202087, 203751, 207069, two each 200368H, 202090 and three 200397H (obsolete), for 213291
213291	11652	Face Plate complete, Nos. 200303H, 200577H, 202088, 213213, 213214, 213231, 213267, 213290, two each 200290C, 201537H, 203753, 204059 and three 225604 (obsolete)
213387	—	Needle Bar 213244 with 201206F, 213256 and 213398, for Machine No. 72w19
213388	13412	Needle Vibrating Cam and Gear Segment Lever Connection (lower) with 214005, for 234753..
*213391	11635	Feed Driving Segment Lever Shaft, for 213188
213398	—	Needle Holder Bracket 213236 with 234715, 234716, two each 200797C, 201183F, 201537H and 225604, for 213387
213648	13409	Presser Foot (left) Strip Guide (obsolete), for 229731
213710	11635	Bobbin
213740	11101	Piercer Bar Driving Cam Retaining Washer, for 213247
213765	—	Feed Bar 213789 with 200214E, 201525E, 201535E, 204200 and 350219E
213789	11090	Feed Bar with 204189, for 213765 ..
213791	13411	Presser Bar (hollow)
213796	—	Feed Lifting Rock Shaft, for 203321
213802	11098	Needle Vibrating Cam and Gear Segment Lever with 201809, 204928 and 215691
213804	13411	Piercer Bar Lifting Rock Shaft, for 213255
213805	11101	Thread Controller Roller Guard Washer Thread Guard (obsolete), for 203745

Numerical List of Parts

No.	Plate	Name
213809	11101	Feed Driving Segment Lever Shaft Sleeve (split) (left)
213811	13410	Piercer Bar Lifting Rock Shaft Bushing (obsolete)
213825	13413	Piercer, for Machine No. 72w19 ..
213826	13413	" " " " 72w19 ..
213934	11644	Thread Controller Bracket, for 213935
213935	—	Thread Controller Bracket 213934 with 200152H, 213937 to 213939, two each 200315H, 202098, 213936 and four 213940, for 213946

Nos. 213936 to 213940, for 213935

213936	11644	Thread Controller Plate
213937	11644	" " Roller Guard (back)
213938	11644	" " " " (front)
213939	11644	" " " " Clamp
213940	11644	" " " " " "
		Screw Washer

Nos. 213941 to 213945, for 213946

213941	11644	Thread Controller Spring Adjusting Collar (front) with 200397H
213942	11644	Thread Controller Spring Adjusting Collar (back)
213943	11644	Thread Controller Spring Stop (adjustable)
213944	11644	Thread Controller Spring Stud
213945	11636	Face Plate with 200355H, 203751, 207069, two each 200368H, 202090, 204281 and three 200397H
213946	11636	Face Plate complete, Nos. 200098F, 200318H, 202108, 213213, 213214, 213267, 213935, 213941 to 213945, 219866, 219867, 225604, 228026, two each 200089D, 200290C, 203753 and 204059
214003	—	Piercer Bar 213260 with 213262 and 221481
214004	—	Piercer Bar Lifting Rock Shaft Crank 213255 with 213249
*214005	—	Needle Vibrating Cam and Gear Segment Lever Connection Stud with 204020, for 213241, 213242, 213388 and 234752
214424	13423	Feed Bar Spring

Numerical List of Parts

59

No.	Plate	Name
215691	11642	Needle Vibrating Cam and Gear Segment Lever Shaft Position Pin, for 213802
215697	13411	Needle Vibrating Cam and Gear, 48 teeth (obsolete), for 215698
215698	—	Needle Vibrating Cam and Gear 215697 with 200062H and 213203 (obsolete)
215700	11635	Feed Driving Segment Lever Clamp with 200031F, for 215702
215701	11635	Feed Driving Segment Lever Clamp Block, for 215702
215702	—	Feed Driving Segment Lever Clamp 215700 with 215701
215720	11642	Piercer Bar Lifting Rock Shaft Bushing
219866	11644	Thread Controller Spring (back), for 213946
219867	11644	Thread Controller Spring (front), for 213946
221454	—	Take-up Lever 203311 with 204263, for 203312
221461	11642	Piercer Bar Driving Cam Connection Crank 247563 with 200740C and 201520H
221468	—	Presser Bar (hollow) with 200074F, to be used with Presser Feet Nos. 229733 and 229739
221470	13404	Needle Vibrating Cam and Gear Driving Gear, 16 teeth, with two 200383C
221472	13411	Needle Vibrating Cam and Gear, 48 teeth, for 221475
221475	—	Needle Vibrating Cam and Gear 221472 with 200062H and 213203, for Machine No. 72W19
221479	13404	Presser Foot Hinge Pin, for 229763, 229764, 229769, 229772, 229775, 229776, 229795, 229836, 234731, 234732, 234760 and 234771
221480	13402	Needle Bar Guide with 200086C ..
221481	13404	Piercer Bar Bushing (lower), for 214003
221486	13427	Picot Edge Cutting Blade Spring, for 234728
222526	13423	Feed Driving Segment Lever Shaft Pin, for 213188
225381	10884	Bobbin Winder Spindle, for 225382

No.	Plate	Name
225382	10885	Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200299H, 202473, 202478, 225381, 225433, 225444, 225453 to 225456, 225458, 225462, 228026, two each 225459 and wood screws $\frac{3}{4}$ in., No. 12, R.H.B.
225433	10885	Bobbin Winder and Tension Bracket Base, for 225382
225438	10884	Bobbin Winder Frame Oil Well Cap, for 225453
225444	10884	Bobbin Winder Stop Latch, for 225382
Nos. 225453 to 225456, for 225382		
225453	10884	Bobbin Winder Frame with 202277 and 225438
225454	10884	Bobbin Winder Frame Hinge Pin..
225455	10884	" " " Spring
225456	10884	" " " " Plunger
225458	10884	" " Stop Latch Thumb Lever, for 225382
225459	10884	Bobbin Winder Stop Latch Thumb Lever Hinge Stud, for 225382 ...
225459	10884	Bobbin Winder Stop Latch Thumb Lever Joint Stud, for 225382 ...
225461	10881	Bobbin Winder Tension Bracket with 201499B, for 225462
225462	10881	Bobbin Winder Tension Bracket complete, Nos. 201572B, 202407, 225461 and two 2102, for 225382..
*225482	—	Bobbin Case Screw Driver Blade, for 225497
*225483	—	Bobbin Case Screw Driver Handle, for 225497
*225484	—	Screw Driver Blade, for 225498 ...
*225485	—	" " Handle, for 225498 ...
225486	13410	Needle Holder Stud Nut Wrench..
225497	12153	Bobbin Case Screw Driver complete, Nos. 225482 and 225483 ...
225498	12153	Screw Driver complete ($7\frac{1}{4}$ in. long), Nos. 225484 and 225485 ..
225554	12153	Wrench (steel)
225585	12307	Hook Saddle Screw Washer
225604	13402	Face Plate Thread Guide Screw Washer, for 213291 and 213946 ..
225604	13402	Needle Holder Stud Washer, for 213398 and 234765

No.	Plate	Name
225604	13402	Thread Controller Spring Adjusting Collar (back) Clamp Screw Washer, for 213946
225706	13410	Hemmer Base Plate Position Pin, for 230516, 230524, 230529, 230534 and 230756
225708	13410	Hemmer Base Plate Spring, for 230517, 230525, 230531, 230535, 230538, 230542, 230711, 230712 and 230901
225908	11100	Needle Vibrating Cam and Gear Segment Lever Connection Stop Block Screw Washer, for 206008
226021	13413	Presser Foot Shank Spring (left or right), to be used with No. 229727
226163	13410	Hemmer Folder and Arm (left) Adjustable Thumb Screw Washer, for 230517
226163	13410	Hemmer Folder and Arm (right) Adjustable Thumb Screw Washer, for 230525 and 230531
227309	13424	Knee Lifter Connection Lever Lifting Rod with 202302, for 227444..
227444	—	Knee Lifter Connection Lever 203746 with 203747, 227309 and two 200262H
227522	12319	Bobbin Winder Stop Latch (obsolete), for 227523
227523	12320	Bobbin Winder complete, Nos. 200056E, 200161D, 200221D, 201537H, 202470 to 202474, 202477, 202478, 227522, three 200299H and two round head wood screws $\frac{3}{4}$ in., No. 12 (obsolete)
228026	10884	Bobbin Winder Tension Bracket Screw Washer, for 225382
228026	10884	Needle Vibrating Cam and Gear Segment Lever Connection Screw Stud Slide Washer
228026	10884	Presser Foot Shank Screw Washer, for 229733 and 229739
228026	10884	Thread Controller Spring Stud Washer, for 213946
228213	—	Drip Pan with four 1 in. wire nails
228238	14171	Knee Lifter Rock Shaft Lifting Lever with 356c, for 228239
228239	—	Knee Lifter Rock Shaft Lifting Lever 228238 with 8073, 204225, 228240 and 228241, for 228242 ..

No.	Plate	Name
228240	14171	Knee Lifter Rock Shaft Lifting Lever Rod (3 in. long), for 228239
228241	14171	Knee Lifter Rock Shaft Lifting Lever Rod Swivel with 200529c, for 228239
228242	14171	Knee Lifter Rock Shaft complete, Nos. 2763, 2768, 7539, 20093, 228239 and two 2770
229672	—	Presser Foot Shank (left) with 200086F, 200397H and 200436F, for 229772
229674	13407	Presser Foot Spring

Nos. 229681 to 229684 (obsolete), for 229705
and 229727

229681	14204	Presser Foot Bracket
229682	14204	" " Heel Spring
229683	14204	" " " " Post
229684	14204	" " " " Washer
229685	13404	" " Hinge Stud, for 229711, 229837, 234733 and 234772

Nos. 229703 to 229705 (obsolete)

229703	14204	Presser Foot Plate (left), for 229769
229704	14204	" " " (right), for 229795
229705	14204	Presser Foot (hinged) complete, Nos. 206487, 207127, 229681 to 229684, 229769, 229795, two each 200057F, 201537E and 207125, to be used with Presser Bar 204251
229706	13407	Presser Foot Plate (left), for 229772 and 229775
229707	13407	Presser Foot Plate (right), for 229776 and 234770
229711	14214	Presser Foot (hinged) (narrow) complete, Nos. 229685, 229775 and 229776, for Machine No. 72w19 ..

Nos. 229725 to 229727 (obsolete)

229725	13408	Presser Foot Plate (left), for 229763
229726	13408	" " " (right), for 229764
229727	13408	Presser Foot (hinged) complete, Nos. 206487, 207127, 229681 to 229684, 229763, 229764, two each 200057F, 201537E and 207125, to be used with Presser Bar 204251

Nos. 229731 to 229733 (obsolete)

No.	Plate	Name
229731	13409	Presser Foot Plate (left) with 200486D and 213648, for 229791 ..
229732	13409	Presser Foot Plate (right), for 229792
229733	13409	Presser Foot (hinged) (adjustable) complete, Nos. 207138, 229791, 229792, two each 200112H and 228026, to be used with Presser Bar 221468
229737	13409	Presser Foot Plate (right), for 229788
229738	13409	Presser Foot Plate (left), for 229787
229739	13409	Presser Foot (hinged) (adjustable) complete, Nos. 207138, 229787, 229788, two each 200112H and 228026, to be used with Presser Bar 221468 (obsolete)
229763	13408	Presser Foot Shank 206651 with 221479 and 229725 (obsolete), for 229727
229764	13408	Presser Foot Shank 206652 with 221479 and 229726 (obsolete), for 229727
229769	13407	Presser Foot Shank 206651 with 221479 and 229703 (obsolete), for 229705
229772	—	Presser Foot Shank 229672 with 221479 and 229706, for 229837 ..
229775	14214	Presser Foot Shank 206653 with 221479 and 229706, for 229711 ..
229776	14214	Presser Foot Shank 229796 with 221479 and 229707, for 229711 ...
229787	—	Presser Foot Shank 207136 with 200175H, 205979, 207140 and 229738, for 229739
229788	—	Presser Foot Shank 207137 with 200175H, 205979, 207140 and 229737, for 229739
229791	13409	Presser Foot Shank 207136 with 200175H, 205979, 207140 and 229731 (obsolete), for 229733
229792	13409	Presser Foot Shank 207137 with 200175H, 205979, 207140 and 229732 (obsolete), for 229733
229795	13407	Presser Foot Shank 206652 with 221479 and 229704 (obsolete), for 229705

No.	Plate	Name
229796	13407	Presser Foot Shank (right) with 200086F, for 229776, 229836 and 234732
229835	—	Presser Foot Plate (right), for 229836
229836	—	Presser Foot Shank 229796 with 221479 and 229835, for 229837 ..
229837	13407	Presser Foot (hinged) complete, Nos. 229685, 229772 and 229836..
229949	13410	Presser Foot Shank Spring Posi- tion Pin, for 206651 and 206652..

Nos. 230001 to 230008, for 230015

230001	14526	Box Plaiter Base Plate
230002	14526	" " " " Arm Bracket with two 200344c
230003	14526	Box Plaiter Base Plate Cloth Guide (left)
230004	14526	Box Plaiter Base Plate Cloth Guide (right)
230005	14527	Box Plaiter Folder Blade (left) (adjustable)
230006	14527	Box Plaiter Folder Blade (right) (adjustable)
230007	14526	Box Plaiter Folder Blade Plate ..
230008	14527	Presser Foot
230009	14528	Box Plaiter Space Gauge (left), for 230012
230010	14528	Box Plaiter Space Gauge (right), for 230014
230011	14528	Box Plaiter Space Gauge Adjust- able Slide (left), for 230012
230012	—	Box Plaiter Space Gauge Adjust- able Slide 230011 with 200176B, 200186B, 202603 and 230009, for 230015
230013	14528	Box Plaiter Space Gauge Adjust- able Slide (right), for 230014 ..
230014	14529	Box Plaiter Space Gauge Adjust- able Slide 230013 with 200176B, 200186B, 202603 and 230010, for 230015
230015	14529	Box Plaiter (adjustable) complete, Nos. 200472B, 202603, 230001 to 230008, 230012, 230014, two 200053B, four 200169B and five 200048B
230190	11649	Hemmer (reverse) on Shank, for hems from $\frac{1}{8}$ to $\frac{5}{8}$ inch

No.	Plate	Name
230192	11649	Hemmer on Shank, for hems from $\frac{1}{8}$ to $\frac{1}{2}$ inch

Nos. 230258 to 230260, for 230261

230258	14581	Lap Seam Feller Folder on Shank (left)
230259	14581	Lap Seam Feller Folder on Shank (right)
230260	14581	Lap Seam Feller Base Plate
230261	14581	Lap Seam Feller (adjustable) com- plete, Nos. 230258 to 230260 and two 200170B
230484	13410	Hemmer Bracket (lower) Washer, for 230517 and 230525
230484	13410	Hemmer Folder Arm and Guard (left) Screw Washer, for 230531
230484	13410	Hemmer Folder on Shank Screw Washer, for 230535, 230538, 230542, 230711, 230712 and 230901

Nos. 230510 to 230516, for 230517

230510	14605	Hemmer Folder Arm and Guard (right)
230511	14605	Hemmer Folder and Arm (left) ..
230512	14605	" Tongue (left) with two 200164B
230513	14605	Hemmer Tongue (right) with two 200164B
230514	14605	Hemmer Bracket (upper) with 200462B and two 200160B
230515	14605	Hemmer Bracket (lower) with two 200078D
230516	14605	Hemmer Base Plate with 225706 ..
230517	14609	Hemmer (adjustable) (left hand) complete, folds hems from $\frac{1}{2}$ to $2\frac{1}{4}$ in., Nos. 200246B, 201525E, 225708, 226163, 230484, 230510 to 230516 and two 200158B

Nos. 230518 to 230524, for 230525

230518	14606	Hemmer Folder Arm and Guard (left)
230519	14606	Hemmer Bracket (lower) with two 200078D
230520	14606	Hemmer Folder and Arm (right) ..
230521	14606	" Bracket (upper) with 200462B and two 200160B
230522	14606	Hemmer Tongue (right) with two 200164B

No.	Plate	Name
230523	14606	Hemmer Tongue (left) with two 200164B
230524	14606	Hemmer Base Plate with 225706, for 230535, 230542, 230711 and 230712
230525	14609	Hemmer (adjustable) (right hand) complete, folds hems from $\frac{1}{2}$ to $2\frac{1}{4}$ in., Nos. 200246B, 201525E, 225708, 226163, 230484, 230518 to 230524 and two 200158B
Nos. 230526 to 230530, for 230531		
230526	14607	Hemmer Folder and Arm (right) with two 200155F
230527	14607	Hemmer Tongue (right)
230528	14607	" Folder Arm and Guard (left) with two 200155F
230529	14607	Hemmer Base Plate with 225706 ..
230530	14607	" Tongue (left)
230531	14609	Hemmer (reverse) (adjustable) (right hand) complete, folds hems from $\frac{1}{2}$ to $2\frac{1}{2}$ in., Nos. 200246B, 200469B, 201525E, 225708, 226163, 230484, 230526 to 230530 and two 200187B
230532	14608	Hemmer Folder on Shank, for 230535
230533	14608	Hemmer Tongue with two 200133B, for 230535
230534	—	Hemmer Base Plate with 225706 (obsolete)
230535	14609	Hemmer (right hand) complete, folds $\frac{5}{32}$, $\frac{3}{16}$ and $\frac{1}{4}$ in. hems, Nos. 200246B, 201525E, 225708, 230484, 250524, 230532, 230533 and two 200187B. Has smaller opening than 230901
230536	14608	Hemmer Tongue with two 200103D, for 230538
230537	14608	Hemmer Folder on Shank, for 230538
230538	11652	Hemmer (reverse) (right hand) complete, folds hems from $\frac{1}{4}$ to $2\frac{3}{4}$ in., in steps of $\frac{1}{16}$ in., Nos. 200246B, 201525E, 225708, 230484, 230536, 230537, 230756 and two 200187B
230539	11651	Hemmer Tongue with two 200103D, for 230542

No.	Plate	Name
230540	11650	Hemmer Folder on Shank, for 230542
230542	14609	Hemmer (right hand) complete, folds hems from $\frac{7}{16}$ to $2\frac{1}{2}$ in., in steps of $\frac{1}{16}$ in., Nos. 200246B, 201525E, 225708, 230484, 230524, 230539, 230540 and two 200187B..
230711	11652	Hemmer (right hand) complete, folds $\frac{5}{16}$ in. hem, Nos. 200246B, 201525E, 225708, 230484, 230524, 230713, 230714 and two 200187B..
230712	11652	Hemmer (right hand) complete, folds $\frac{3}{8}$ in. hem, Nos. 200246B, 201525E, 225708, 230484, 230524, 230715, 230716 and two 200187B..
230713	11650	Hemmer Folder on Shank, for 230711
230714	11651	Hemmer Tongue with two 200133B, for 230711
230715	11650	Hemmer Folder on Shank, for 230712
230716	11651	Hemmer Tongue with two 200103D, for 230712
230743	—	Feed Driving Cam and Gear Shaft Bracket Screw Washer
230756	11651	Hemmer Base Plate with 225706, for 230538

Nos. 230898 to 230900, for 230901

230898	13425	Hemmer Base Plate
230899	13425	" Folder on Shank
230900	13425	" Tongue with two 200164B ..
230901	—	Hemmer complete, folds $\frac{5}{32}$, $\frac{3}{16}$ and $\frac{1}{4}$ in. hems, Nos. 200246B, 201525E, 225708, 230484, 230898 to 230900 and two 200187B. Has larger opening than 230535
234702	—	Tweezers
234703	13413	Tension Release Lever Stop (obso- lete)
234704	11100	Needle Vibrating Lever Bearing (right)
*234705	—	Arm with 202036, 234706, two each 200346c and 213222
234706	—	Needle Vibrating Cam and Gear Segment Lever Bushing, for 234705
234714	13428	Auxiliary Piercer Holder with 200117F and 200389c

No.	Plate	Name
234715	13423	Needle Holder (left) with two 200117F, for 213398 and 234765 ..
234716	13423	Needle Holder (right) with two 200117F, for 213398 and 234765 ..
234717	13423	Feed Lifting Rock Shaft Lever with 200049E and 201807

Nos. 234719 to 234726, for 234728

234719	13421	Picot Edge Cutting Blade (lower)
234720	13421	" " " " (upper)
234721	13421	" " " " Arm
234722	13421	" " " " "
		Bracket with 200036D
234723	13421	Picot Edge Cutting Blade Arm Bracket Support
234724	13421	Picot Edge Cutting Blade Hinge Stud
234725	13421	Picot Edge Cutting Blade Operating Connection
234726	13421	Picot Edge Cutting Blade Operating Lever
234728	—	Picot Edge Cutting Device com- plete, Nos. 200162D, 201319C, 201634D, 201706C, 202603, 221486, 234719 to 234726, 350124C, 350125F, 350126C, two each 200077D and 234735, for 234734
234729	—	Presser Foot Plate (left), for 234731
234730	—	" " " (right), for 234732
234731	13427	" " Shank 234736 with 221479 and 234729, for 234733 ..
234732	13427	Presser Foot Shank 229796 with 221479 and 234730, for 234733 ...
234733	13427	Presser Foot (hinged) complete, Nos. 229685, 234731 and 234732, for 234734
234734	—	Picot Edge Cutting Device and Presser Foot complete, Nos. 234728 and 234733
234735	13421	Picot Edge Cutting Blade Arm Shim, for 234728
234736	—	Presser Foot Shank (left) with 200086F, 200397H and 200436F, for 234731
234739	13428	Auxiliary Piercer, for Machine No. 72w19
234744	13428	Auxiliary Piercer, for Machine No. 72w20

No.	Plate	Name
234752	13424	Needle Vibrating Cam and Gear Segment Lever Connection (upper) with 214005, for 234753..
234753	—	Needle Vibrating Cam and Gear Segment Lever Connection Bracket 213243 with 213388, 234752, two each 201275D, 204841, 204924, 213265 and four 200110B, for Machine No. 72w20
234755	13426	Throat Plate, for 234756, for Machine No. 72w20
234756	13426	Feed Dog, for 234755
234757	—	Presser Foot Plate (left), for 234760

Nos. 234759 to 234761, for Machine No. 72w20

234759	—	Presser Foot Shank (left) with 200086F, 200397H and 200436F, for 234760
234760	13426	Presser Foot Shank 234759 with 221479 and 234757, for 234772 ..
234761	—	Presser Foot Shank (right) with 200086F, for 234771

Nos. 234764 to 234772, for Machine No. 72w20

234764	13423	Needle Holder Bracket, for 234765
234765	—	" " " 234764 with 234715, 234716, 234766, two each 200172H, 200797C, 201183F, 201537H and 225604, for 234767
234766	13423	Needle Holder Thread Guide, for 234765
234767	—	Needle Bar 213244 with 201206F, 213256 and 234765
234768	13424	Needle Vibrating Cam and Gear, 48 teeth, for 234769
234769	—	Needle Vibrating Cam and Gear 234768 with 200062H and 213203
234770	—	Presser Foot Plate (right), for 229707 and 234771
234771	13426	Presser Foot Shank 234761 with 221479 and 234770, for 234772 ..
234772	13426	Presser Foot (hinged) complete, Nos. 229685, 234760 and 234771..
234773	13423	Piercer, for Machine No. 72w20 ...
244007	11643	Tension Disc, for 203753
247563	—	Piercer Bar Driving Cam Connection Crank with 200070c, for 221461

No.	Plate	Name
350124C	13427	Picot Edge Cutting Blade (lower) Position Screw Stud, for 234728
350125F	13427	Picot Edge Cutting Blade Operating Connection Hinge Screw (lower), for 234728
350126C	13427	Picot Edge Cutting Blade Operating Lever Screw, for 234728
350219E	13423	Feed Dog Support Screw, for 213765


HARRY WELANSKY
SEWING MACHINES & SUPPLIES
57 W. 23 ST. N.Y.C. CH. 3-0887

ILLUSTRATIONS OF PARTS
FOR
MACHINES
Nos. 72w19 and 72w20

ILLUSTRATIONS OF PARTS
FOR
MACHINES
Nos. 12W19 and 12W20

PLATE 10881—FULL SIZE

225461

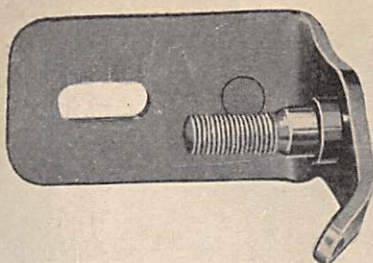

200082




202104



2102



225462

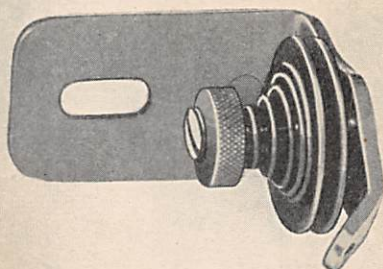

202407



201499



201572



PLATE 10884—FULL SIZE

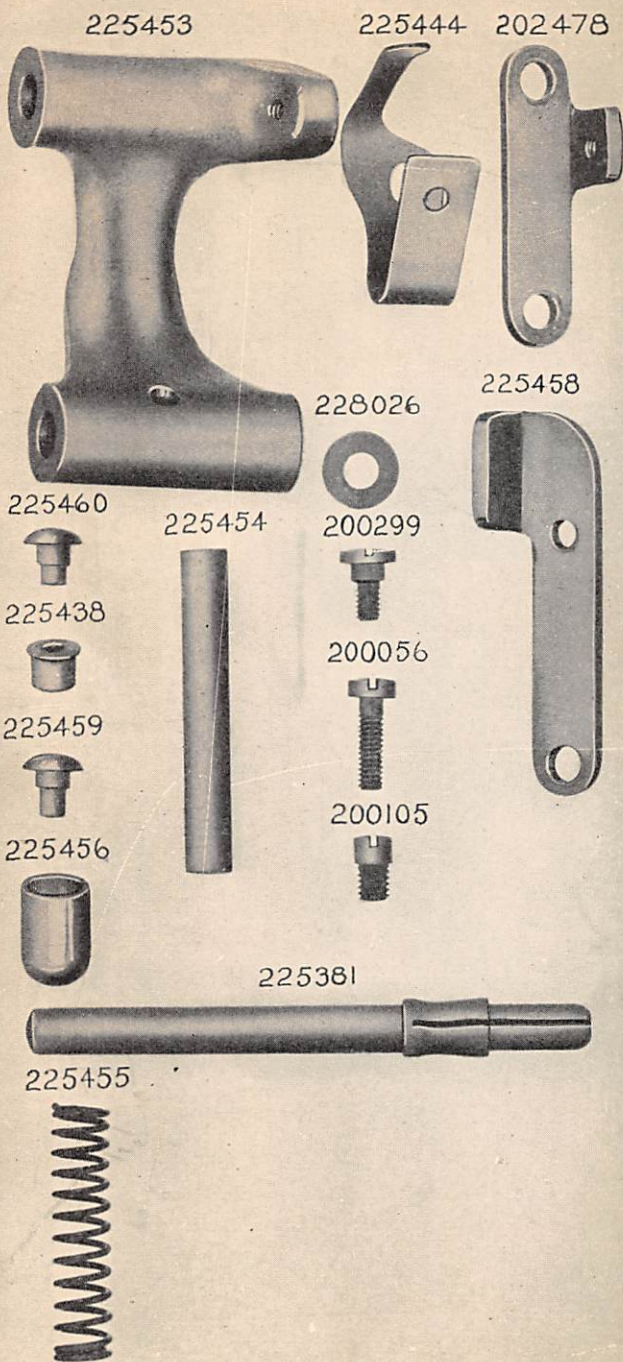


PLATE 10885—ONE-FOURTH SIZE

225433



202473



225382



PLATE 11090—FULL SIZE

200571



200075




200348



201535



213789

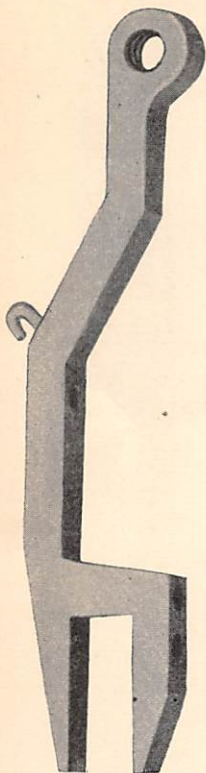

200036



201850



201517



213218

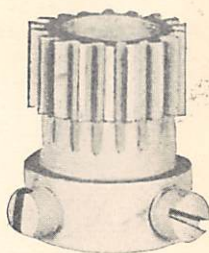


PLATE 11097—FULL SIZE

213261




200117



213266




213246

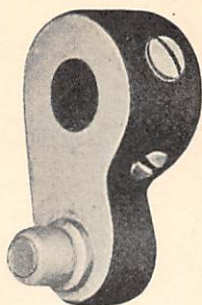

213233



213234

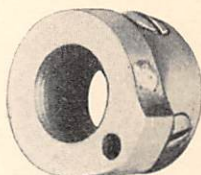

200809



PLATE 11098—ONE-HALF SIZE

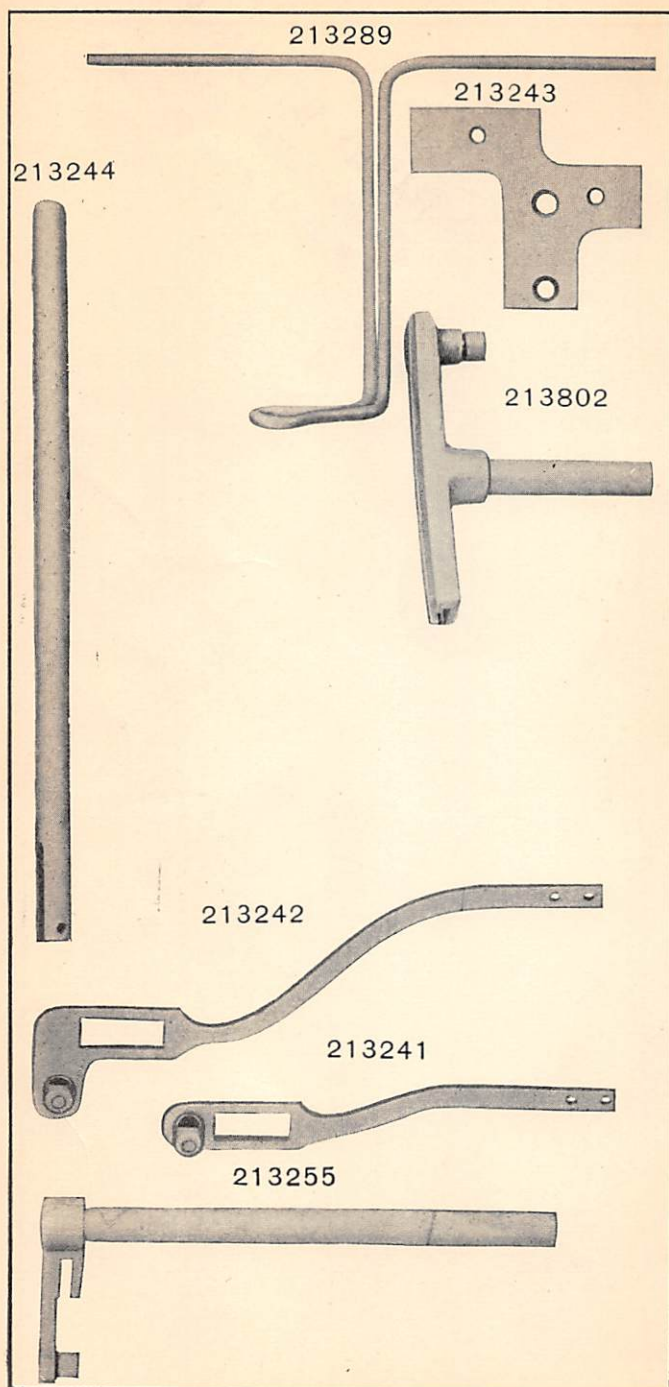


PLATE 11099—FULL SIZE

200797,




201807



213256



213236

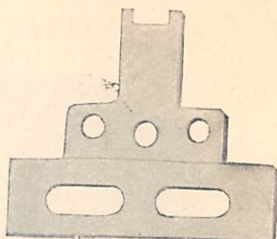

213239



204922



PLATE 11100—FULL SIZE

213265



200280



206505



213240


234704




225908



213248

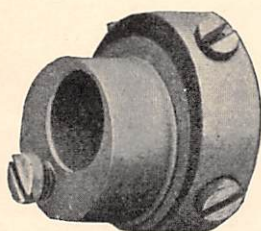

213258

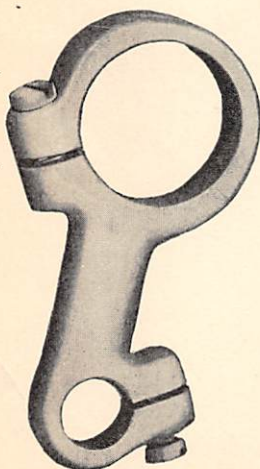

213262



213250


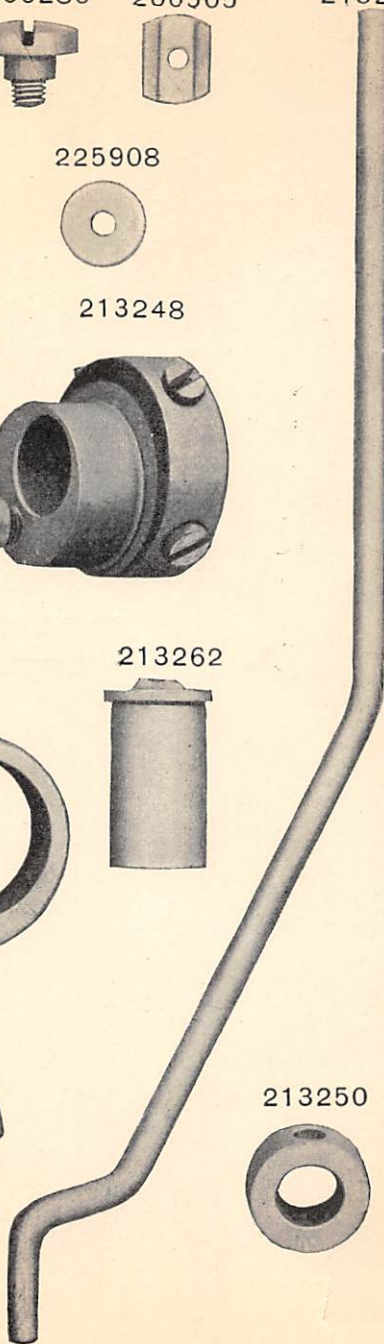


PLATE 11101—FULL SIZE

213740




200740

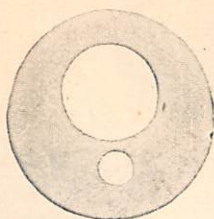

201520




213249

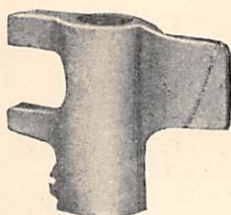

213253



213267

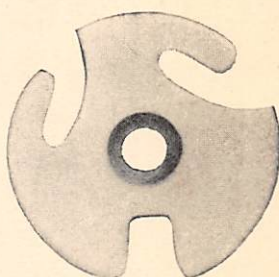

213805



213809



PLATE 11635-FULL SIZE

200352



200502



213710



204189



200820



200363




215701



215700



204200

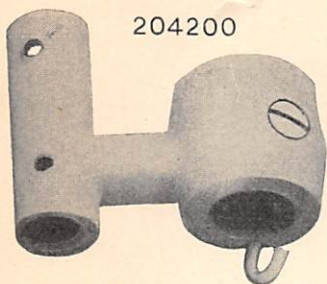

213141



213391



204197



202574



200089



PLATE 11636—ONE-FOURTH SIZE

213945




213946



203237



213167

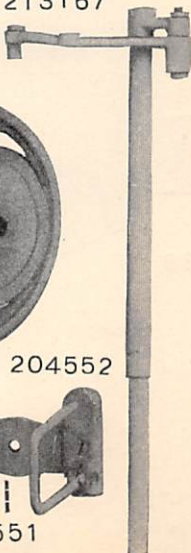


213230



213172



204174

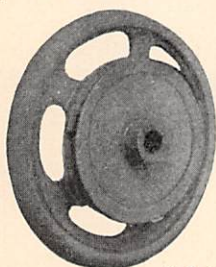

204552



204551



PLATE 11642,-FULL SIZE

200389



200066



200070



200128



215352



204923



200126



227227



200574




200135



215691




221461

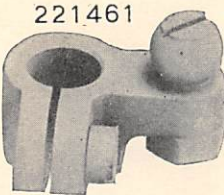

225837



213247

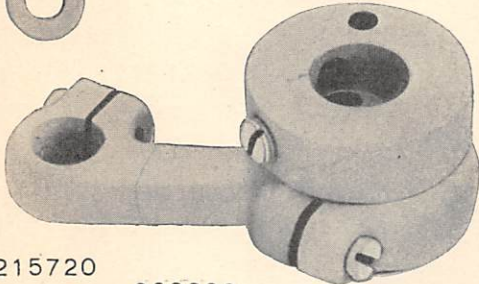

215720



203339



200076



201812



201829



200274



PLATE 11643-FULL SIZE

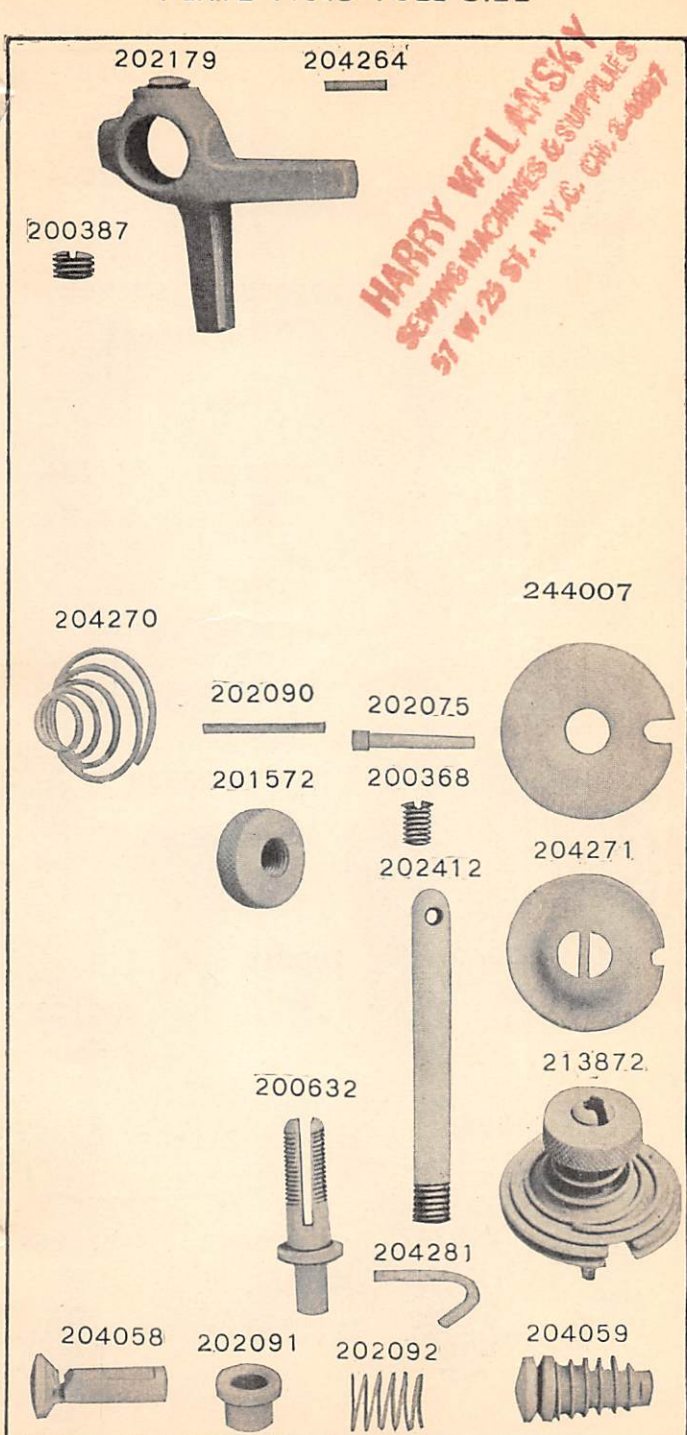


PLATE 11644-FULL SIZE

204274



202084



204275



200581



202098



200300



204333



202087



202088




202085



200366



213934

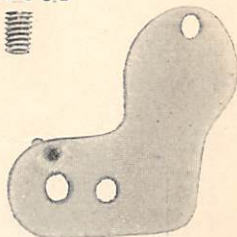

213936



213937



213938



213939



213940




200315




200152



219866

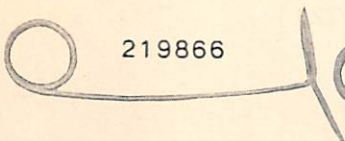

219867

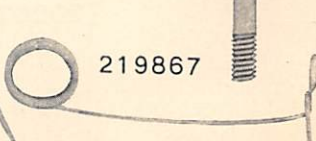

213941



213942



213943




213944



PLATE 11649—FULL SIZE

230190

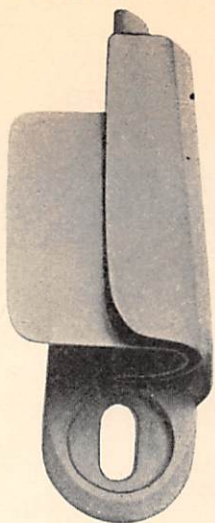

230192

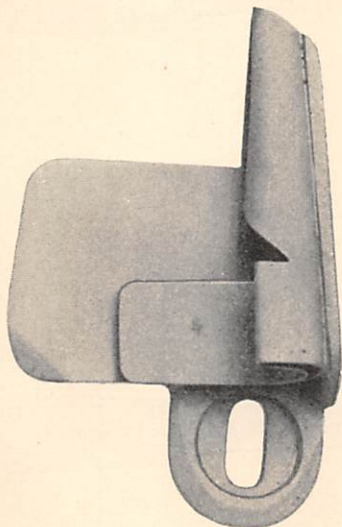


PLATE 11650 —ONE-HALF SIZE




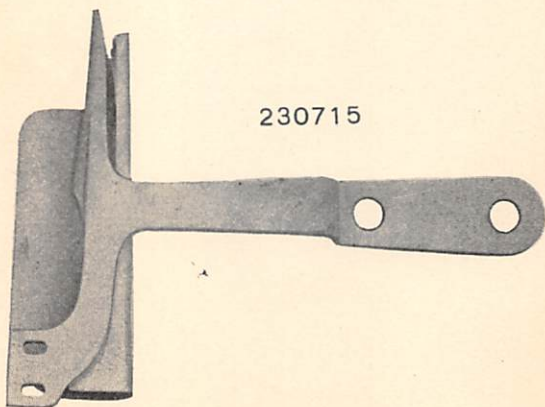


PLATE 11651—ONE-HALF SIZE

230756

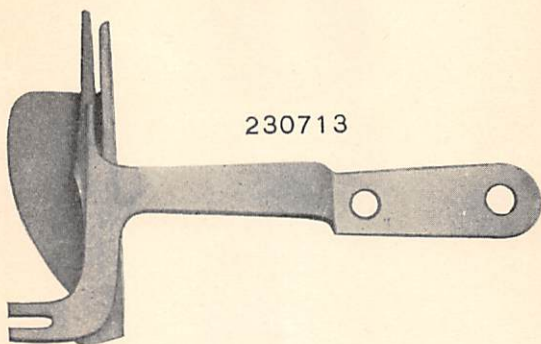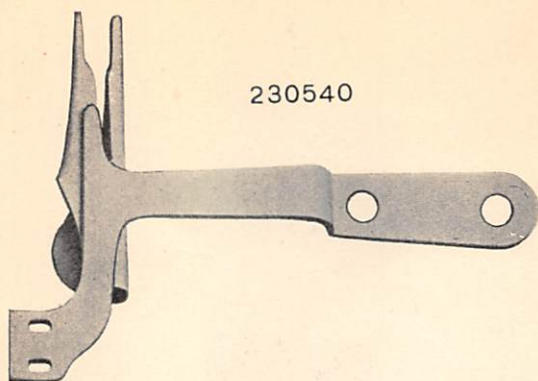

230539



230714



230716



PLATE 11652—ONE-FOURTH SIZE



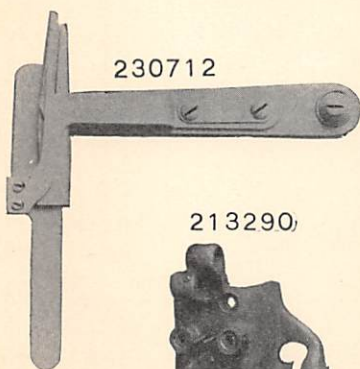


PLATE 12153—ONE-HALF SIZE

41400

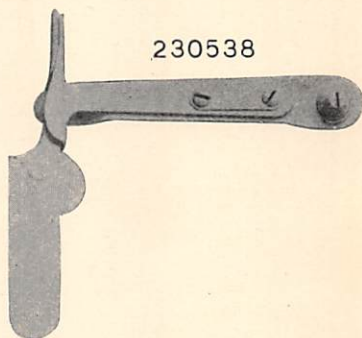

225497

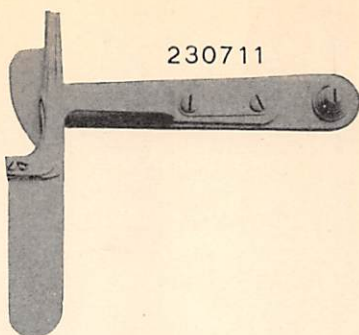

225498




227493



202258



204297

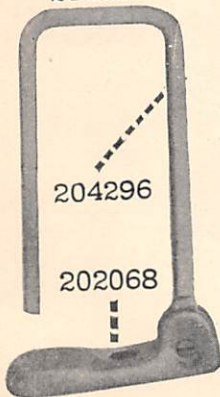

204296

202068

120342

225554



120343

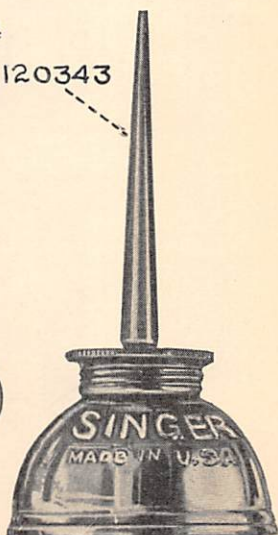


PLATE 12307—FULL SIZE

204248



202305



200658



201519



204208



204254



204196




204212



204213



203172

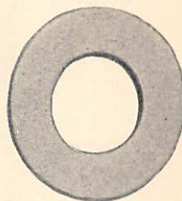

225585



201816



202248



200291



200006



200098



204209



200078



200054



PLATE 12308—FULL SIZE

201531



200684



200175



200113



200086



202628



202126



200074



200125



202276



204249



204252



202062



204293



204250



204269



203238



203244



200072



204202



202005



203250




204273



200393



204253

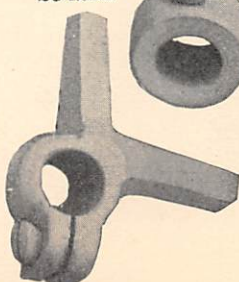

203235



PLATE 12311—FULL SIZE

200570



200062



200439



200278




200335



200328



200963



200550



200271



200042



200577



200516



200362



200378



200053



200043



200575



200430



200840



200031



200437



200383



200106



200079



PLATE 12312 - FULL SIZE

HARRY WELANSKY
SEWING MACHINES & SUPPLIES
ST. W. 3-0887

200984



203214



200594




201253



200600



203254

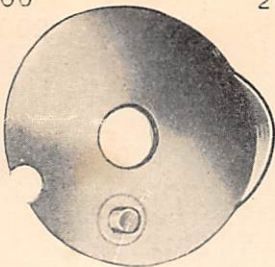


200555




203215



203208

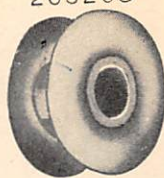

203251

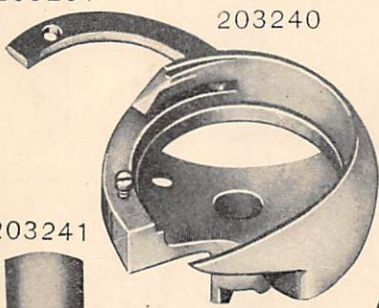


203240

203216



203241

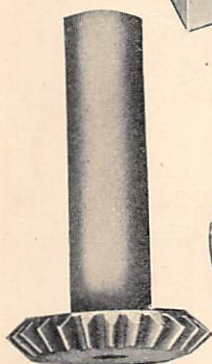


203209



203210



203290

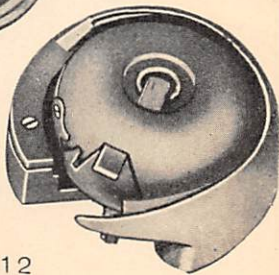

203217



202056



203213



203212



203211



PLATE 12319 - FULL SIZE

200221



200011



200056



200299



200161



200355



201537



200380



227522



202482



202478



202477



202484



202483



200529



202472



200522



200526




202452



PLATE 12320—ONE-HALF SIZE

202473

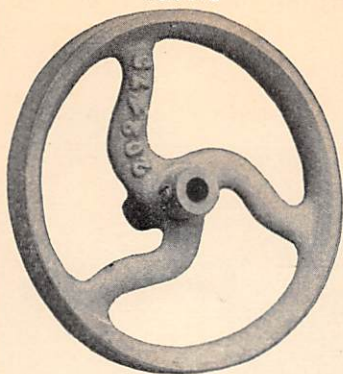

202474




202481



202485



227523

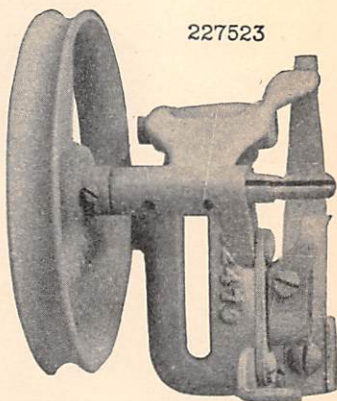

202480



202470




202471



PLATE 12335—FULL SIZE

203307

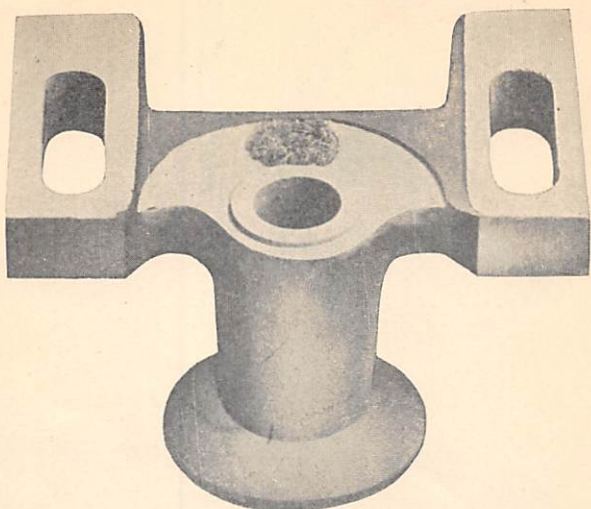

203308


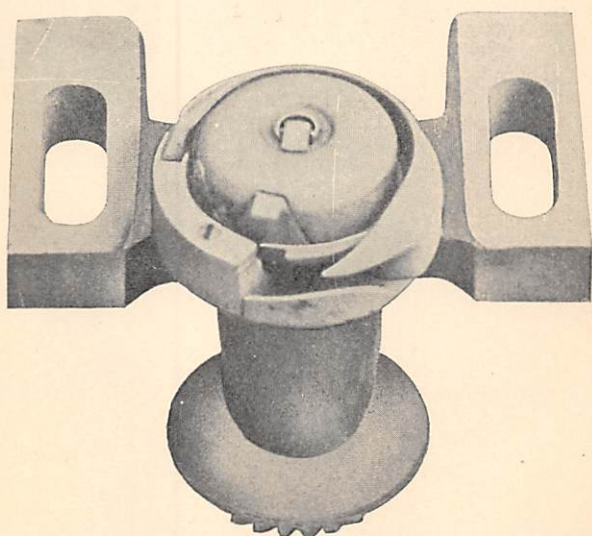


PLATE 12344—FULL SIZE

203249



203246

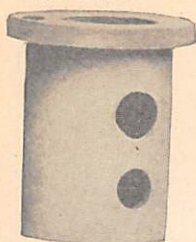


203242



204163



200491

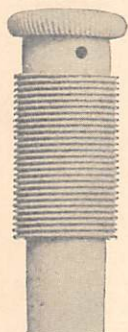

203245

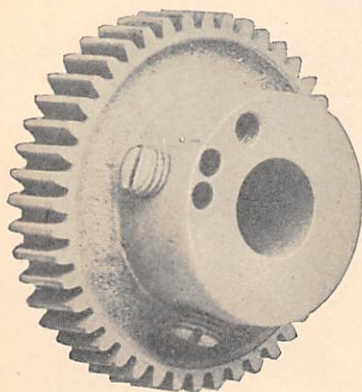


PLATE 13401—ONE-HALF SIZE

203301




203329



204804




213245

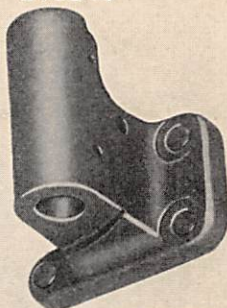


204193




213257

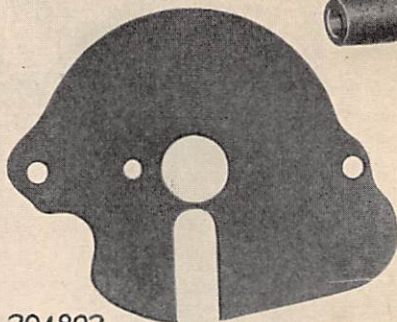

204802

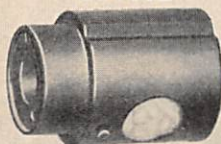

204801

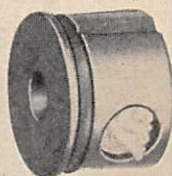

206206

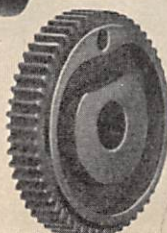


PLATE 13402—FULL SIZE



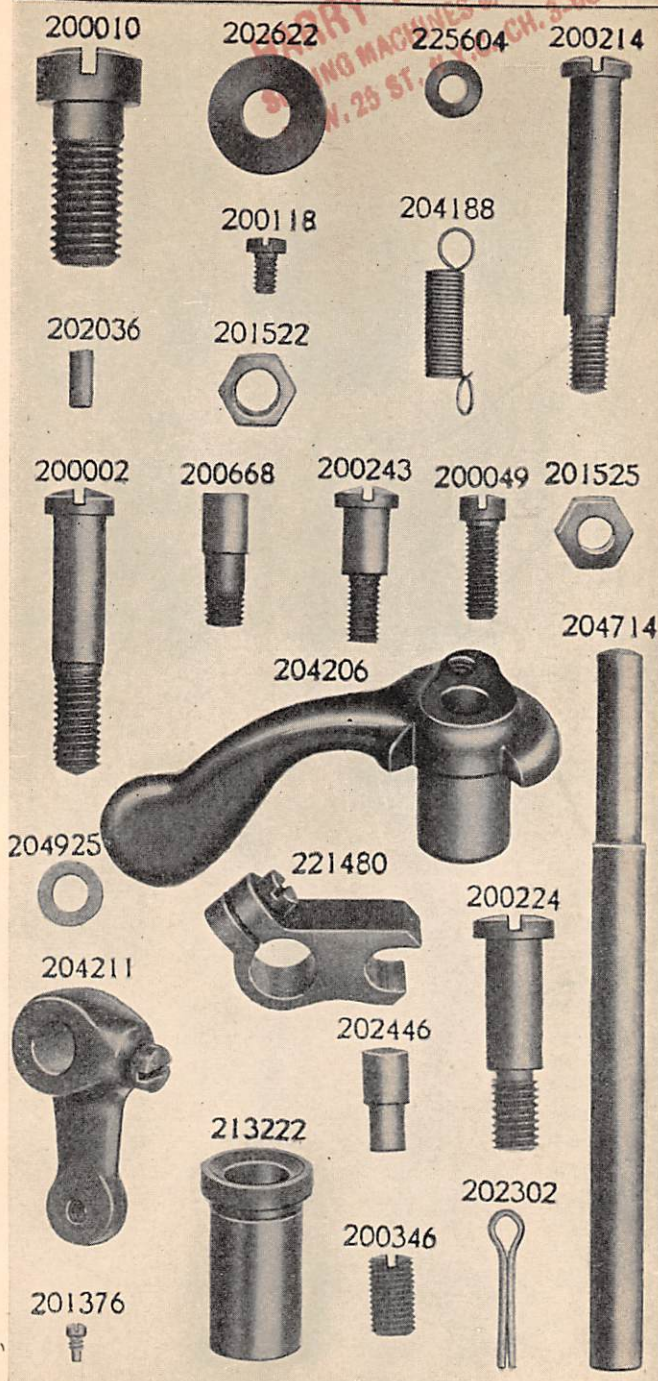


PLATE 13404—FULL SIZE



203311

203312

204263



200436



202108

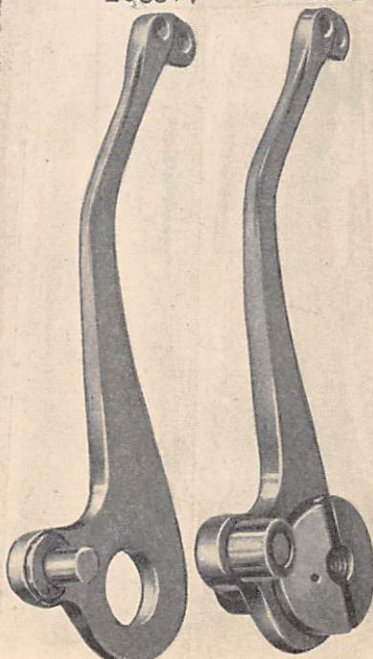


PLATE 13407—FULL SIZE


229706



229707



229796

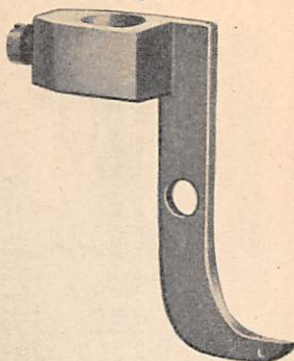


229837



229674



229795

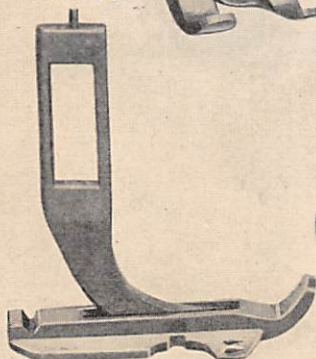

229769

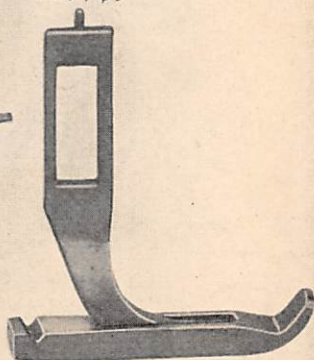


PLATE 13408—FULL SIZE


229725




229726



229727

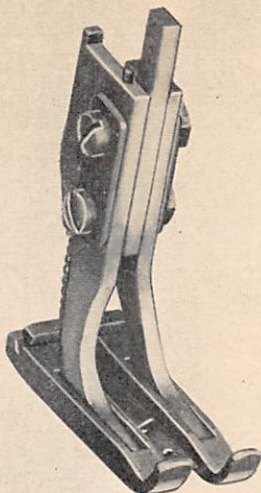

229764

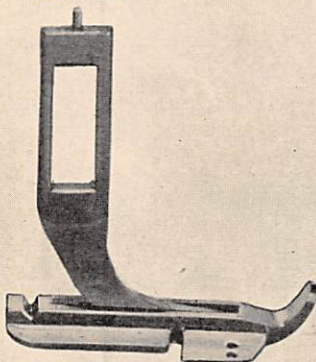

229763


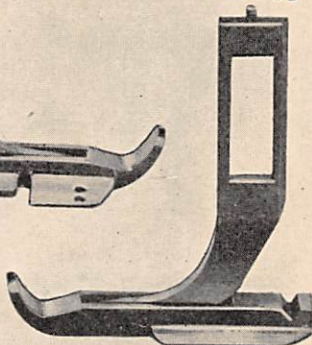


PLATE 13409—FULL SIZE

229731




229733

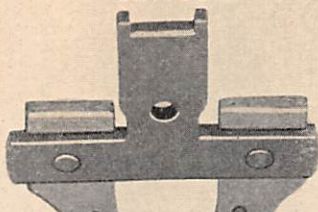

229732



229791

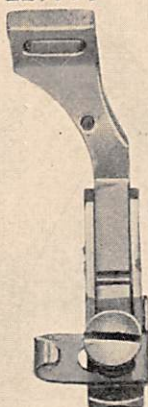


229792




213648



229739

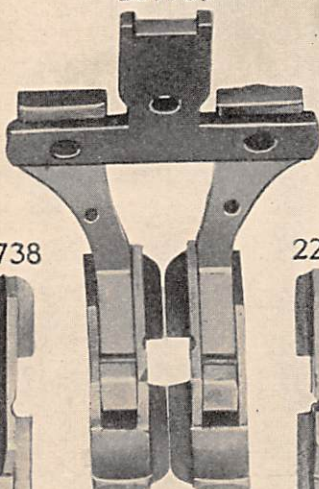

207137



207136



229738



229737



PLATE 13410—FULL SIZE

230484



225708



200246



225706



200103



200158



200187



200160



200133



200462



200164



200469



200155



226163



200157



200170





213198

213811



213231

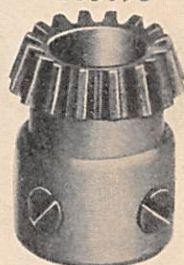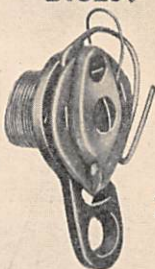

207127



207140



200261



200112



206487



201275



205979



201206



200486



201536



207125



200303



229949



225486

201254



PLATE 13411—ONE-HALF SIZE

213791



203306




213260




213804




213188

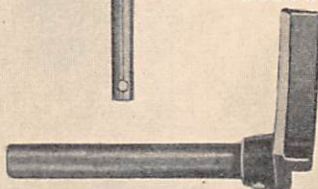

221472

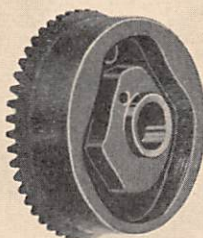

215697

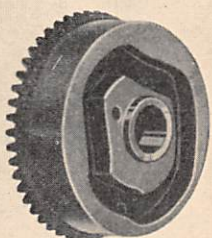

203268

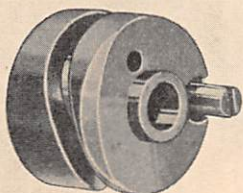


PLATE 13412—ONE-HALF SIZE

203321



213203



213388



204251



213191

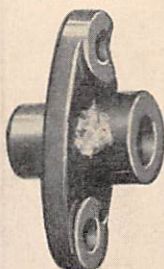


PLATE 13413—FULL SIZE

200290



200318



200587



202872



203313




204459



212863



213213

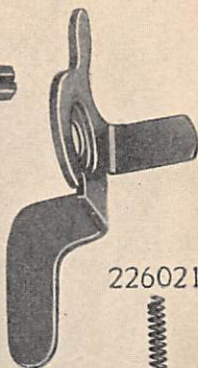

213214



226021



213825



213826



234703




228026



213827



212826

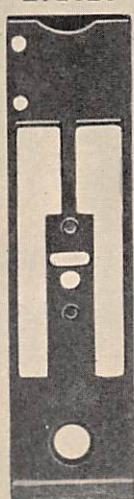

212827



HARRY W. LANKY
SEWING MACHINES & SUPPLIES
87 WEST ST. N.Y.C. C3-0887

PLATE 13421—FULL SIZE

234725




234726



234723




234722

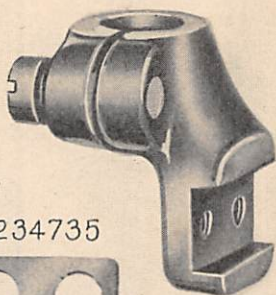

234735



234721

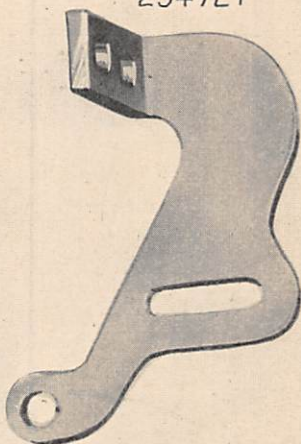

234724



234720



234719

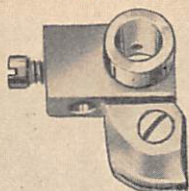


PLATE 13423—FULL SIZE


204235



234715



234716

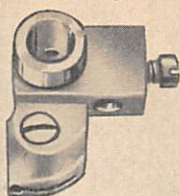


203751



234717



203750

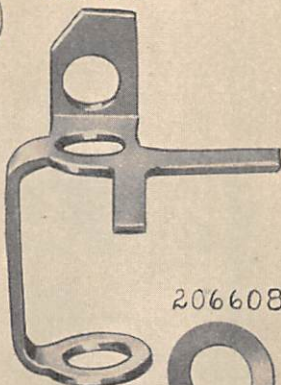


203745



206608



234764

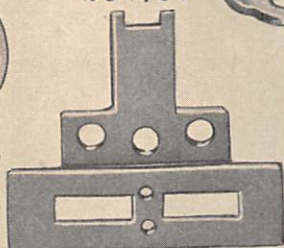

214424



234766



350219



214022 234773

222526



200077



201183



201052



207069



203376



200172



PLATE 13424—ONE-HALF SIZE

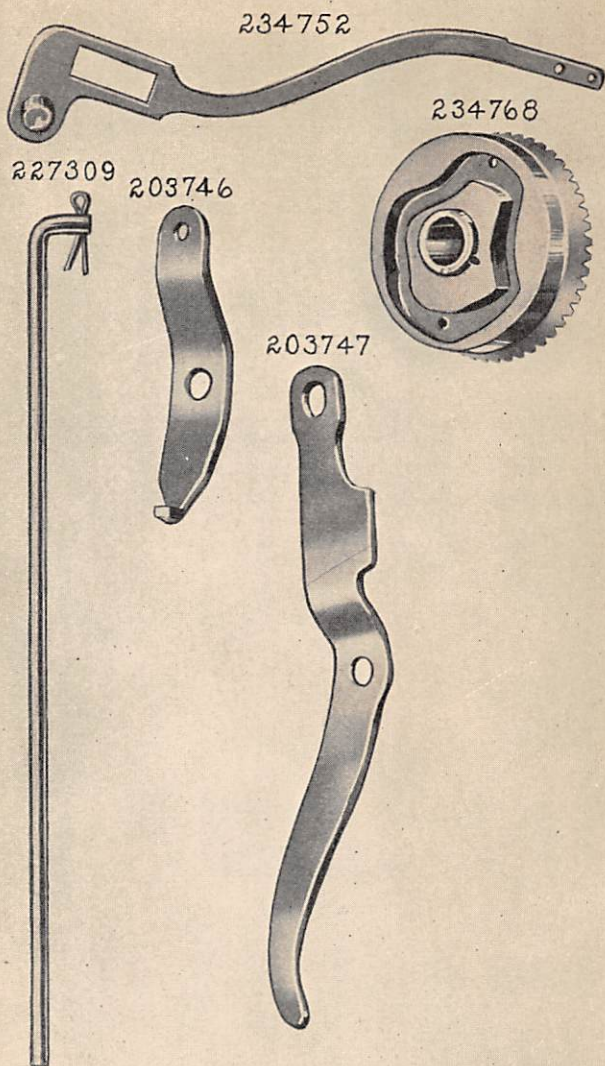


PLATE 13425—ONE-HALF SIZE



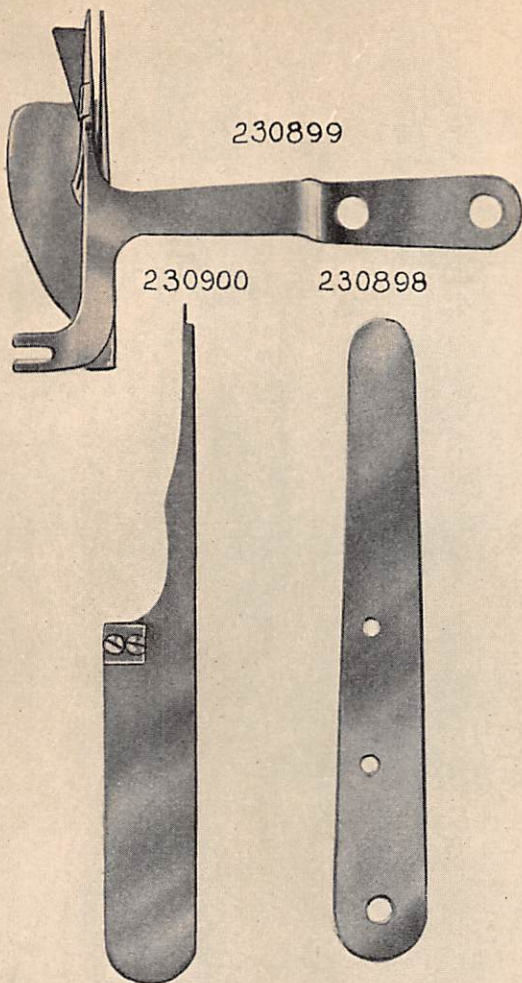


PLATE 13426—FULL SIZE

234772

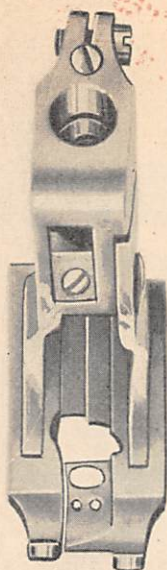


234760

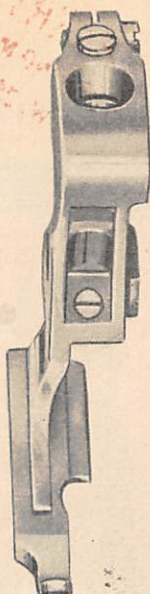

234771



234755

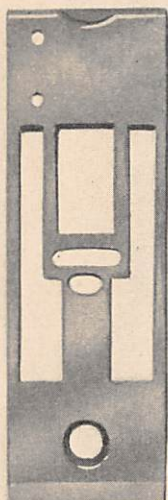

234756



PLATE 13427—FULL SIZE

350124



201634



200162



350125



201319



350126




201706




221486



234733

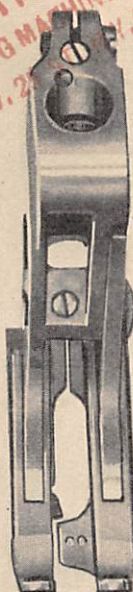

234731

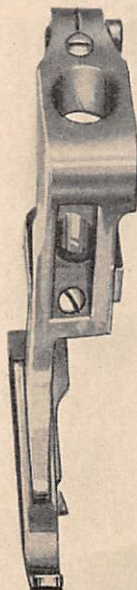

234732



HARRY WELANSKY
SEWING MACHINE & SUPPLIES
57 W. 23rd St. N.Y.C. CH. 3-0887

PLATE 13428—FULL SIZE

203753



13710



234714



200262




234739



234744



PLATE 14171—ONE-FOURTH SIZE

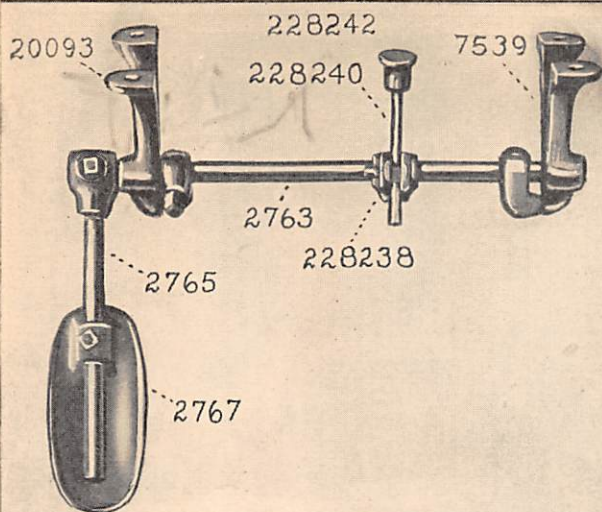

FULL SIZE


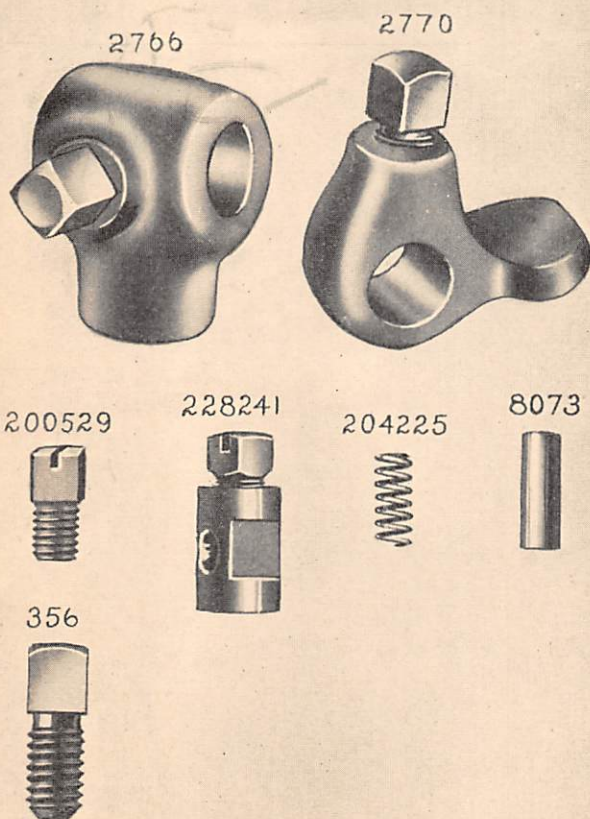


PLATE 14204—FULL SIZE


229705



229703

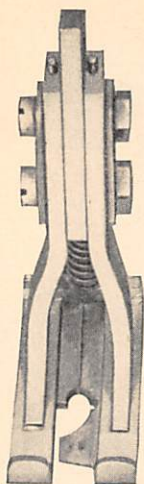

229704



229682



229683



229684



229681



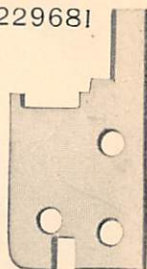


PLATE 14214—FULL SIZE

229776

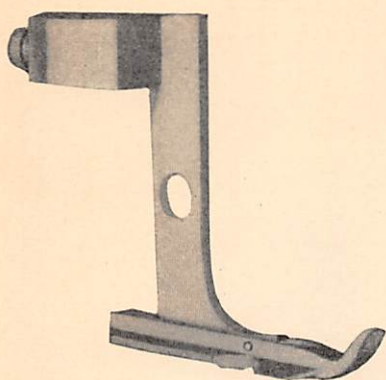


229775

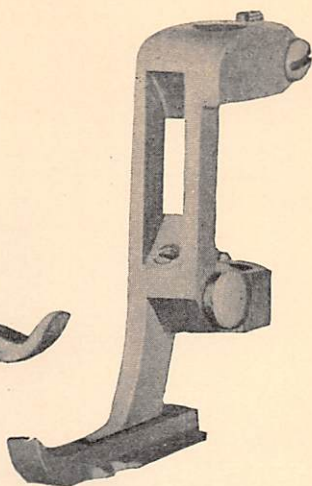

206653




229711

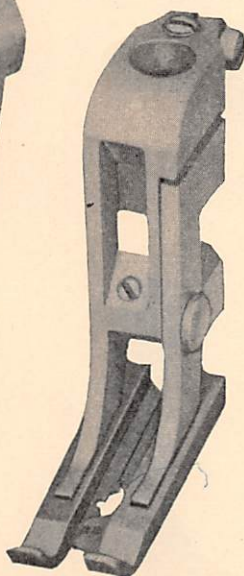


230003




230004

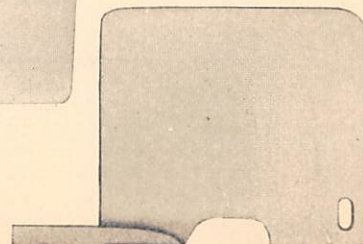

230001

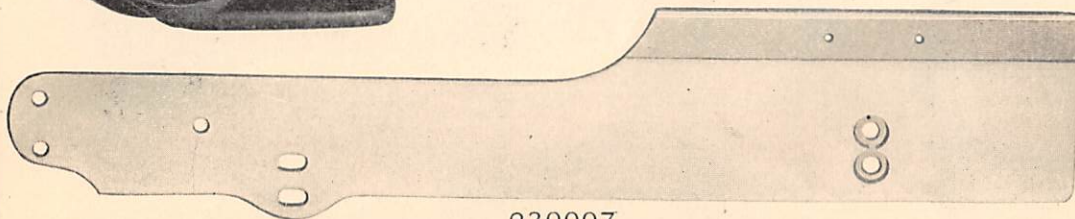

230007



230002

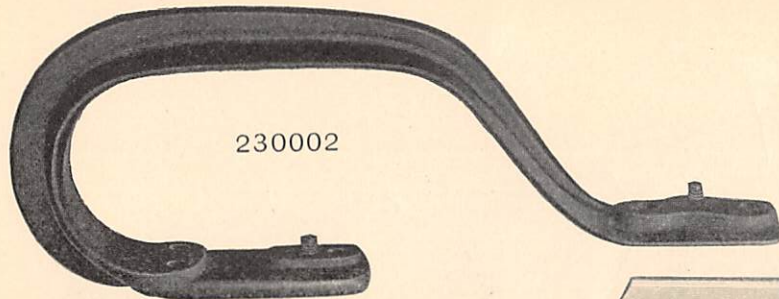


PLATE 14527—FULL SIZE

200048



200053



200472



200344



200169



200186



200176




230008




202603



230005

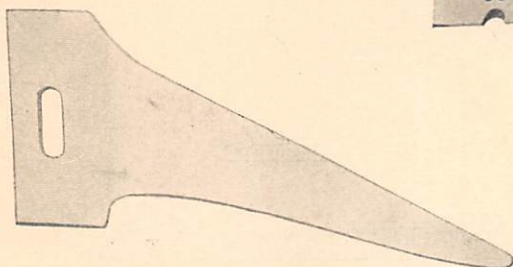

230006

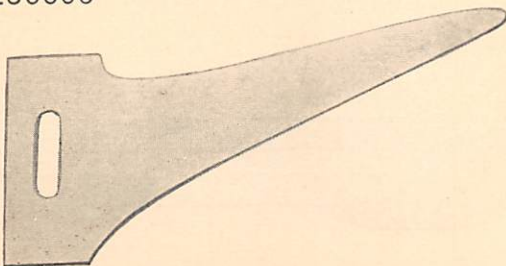

HARRY WELANSKY
SEWING MACHINES SUPPLIES
57 W. 25 ST. N.Y.C. 10001
CH 3-4047

PLATE 14528—FULL SIZE


230010



230009




230013

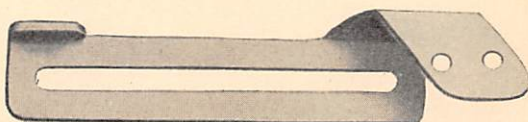

230011



230014

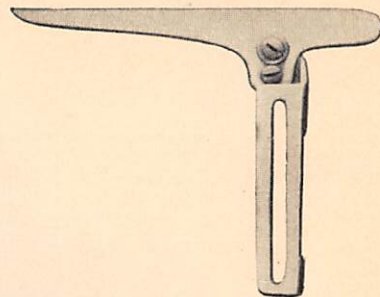

230015



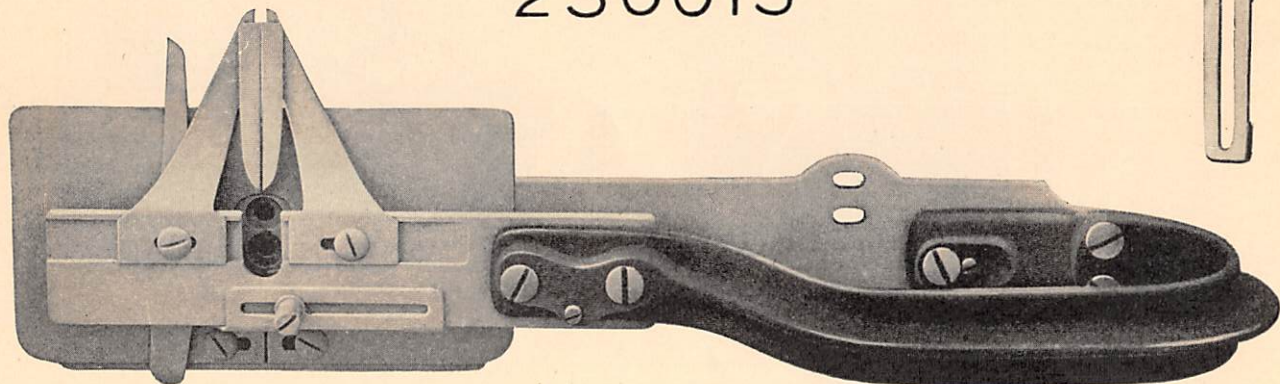


PLATE 14581 -FULL SIZE


230258

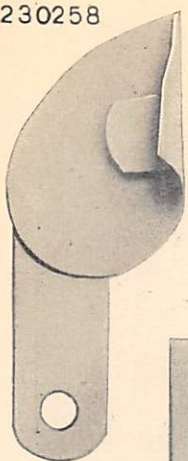

230259

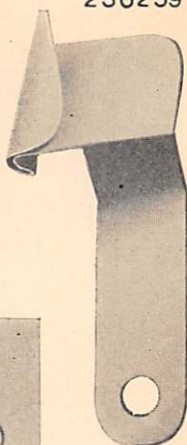

230260

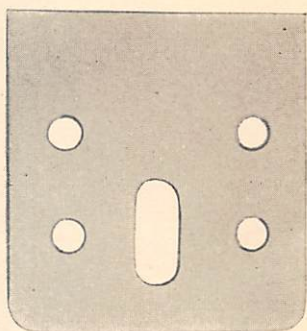

230261



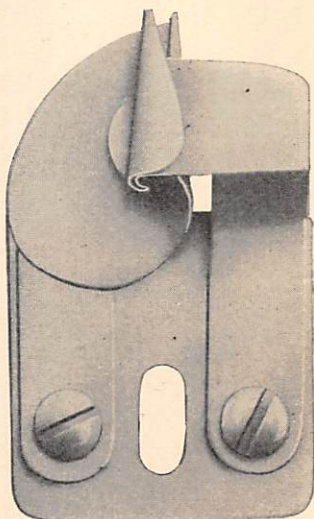


PLATE 14605—ONE-HALF SIZE


230514

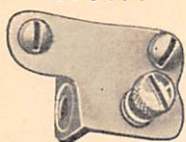


230510

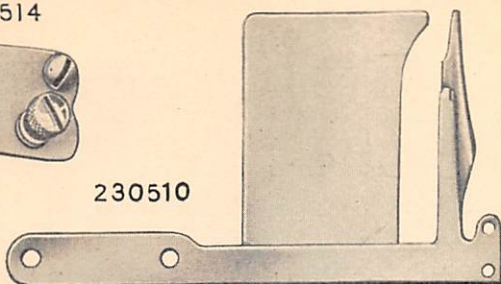


230515

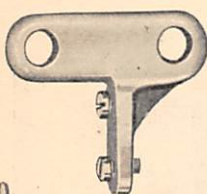


230511

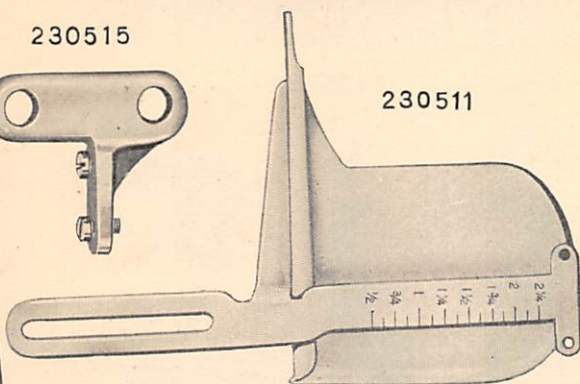

230512

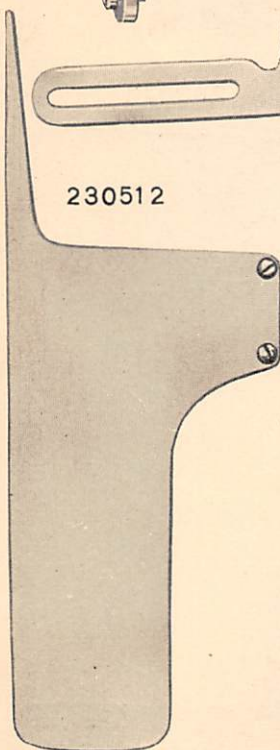

230516




230513




PLATE 14606—ONE-HALF SIZE


230518

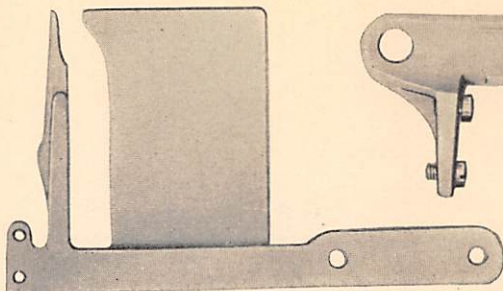

230519

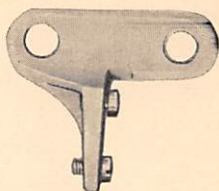


230524




230523



230521

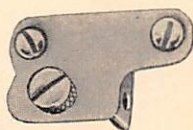

230522

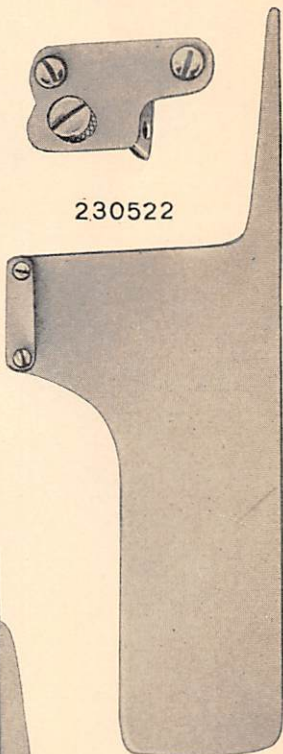

230520

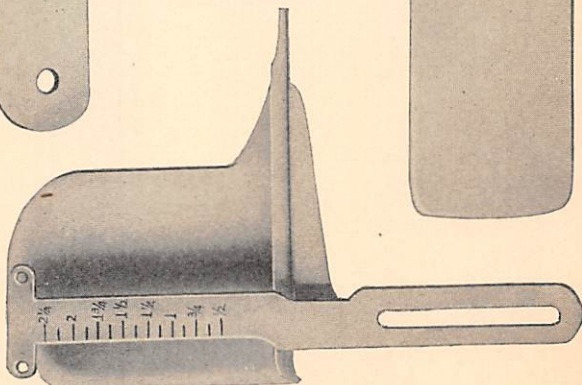


PLATE 14607--ONE-HALF SIZE

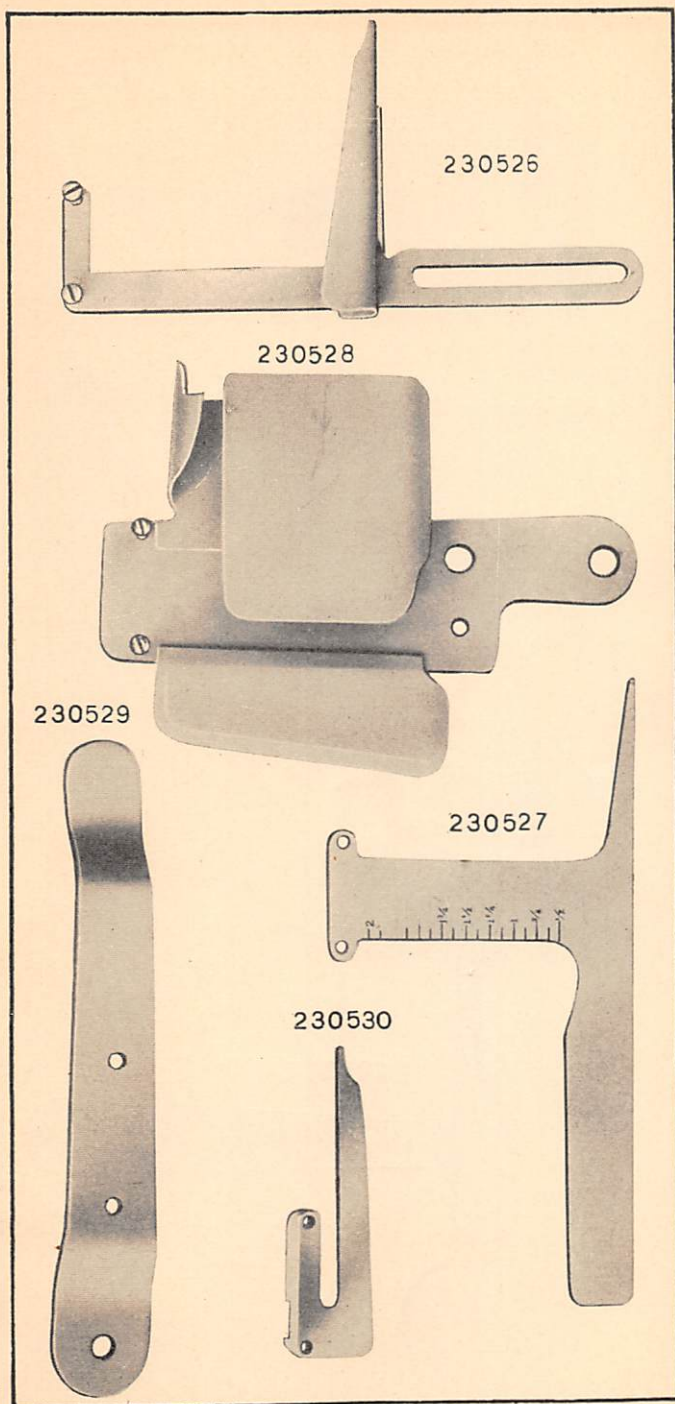


PLATE 14608—ONE-HALF SIZE



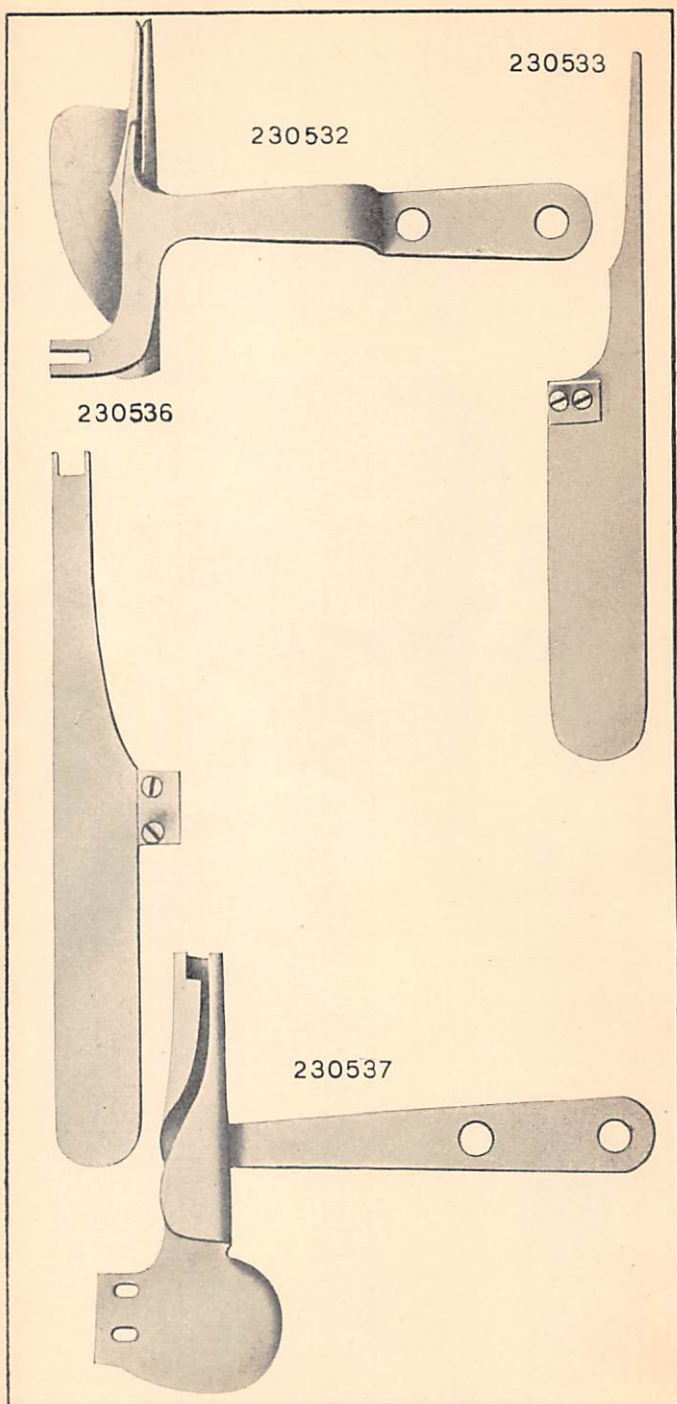


PLATE 14609-ONE-FOURTH SIZE


230517

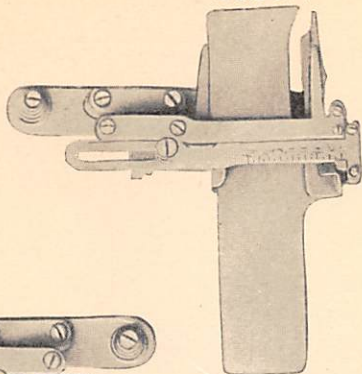


230525

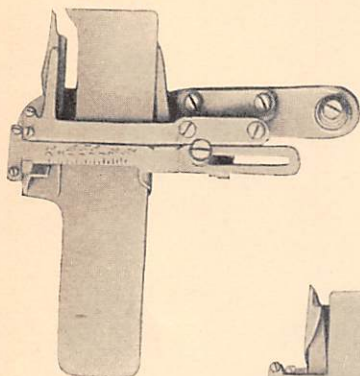

230531

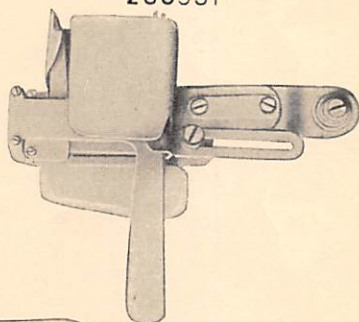

230542

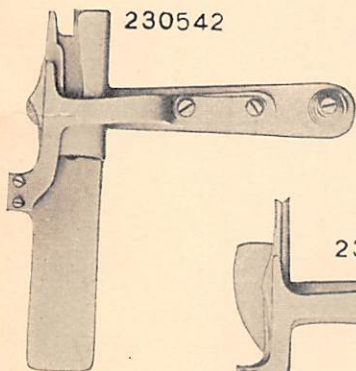

230535

