

SINGER

114W121

LIST OF PARTS



MACHINE No. 114w121

INDEX

	PAGE
ACCESSORIES	18
MACHINE No. 114w121	7
NUMERICAL LIST OF PARTS	25
PARTS FOR VARIOUS CLASSES OF WORK	19
SPOOL WINDING OUTFIT	23

THE SINGER MANUFACTURING COMPANY

Instructions for Ordering

In ordering from this list, use **ONLY** the **PART** number in the **FIRST** column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of part; sent out has its specific number which, although not stamped on Parts (except in above cases) must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.

These letters **MUST BE USED** when they appear in the list and **AFTER** the number, as in the list.

In this series

- 200001 to 201500 are Screw Numbers.
- 201501 to 201800 are Nut Numbers.
- 201801 to 202000 are Roller Numbers.
- 202001 and upward are numbers of Machine Parts.


The figures in the second column refer only to the plate in which the illustration of the part is shown and are **NOT TO BE USED** in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE

FOR

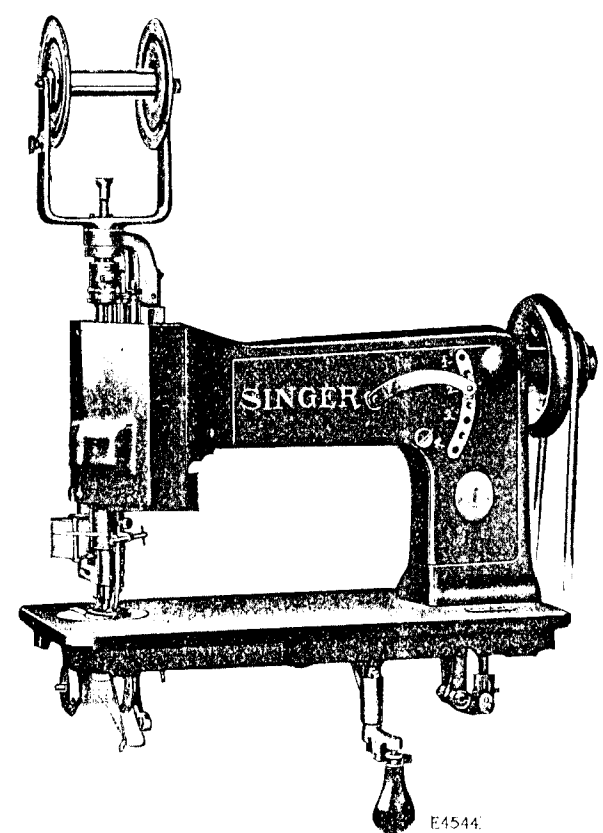

MACHINE No. 114w121

UNIVERSAL FEED. SPIRAL BRAIDING MACHINE

For Ornamenting Ladies' Cloaks and Suits, Millinery, Draperies, etc.

No.	Plate	Name
*243301	—	Arm with 201048b, 243303 and two 222404
231842	12953	Arm Head
222404	12938	" " Position Pin
200011b	12938	" " Screw (2)
231843	12953	" " Sleeve

No.	Plate	Name
231829	12953	Arm Head Sleeve Bearing with two each 200355H, 231830 and four 200076D
231830	12953	Arm Head Sleeve Bearing Friction Gib
200355H	12954	Arm Head Sleeve Bearing Friction Gib Adjusting Screw
200076D	12938	Arm Head Sleeve Bearing Friction Gib Screw
200024D	12938	Arm Head Sleeve Bearing Screw (2)
231605	12938	Arm Head Sleeve Bevel Gear with 201052C
201052C	12941	Arm Head Sleeve Bevel Gear Set Screw
231606	12938	Arm Head Sleeve Collar with two 201021C
201021C	12938	Arm Head Sleeve Collar Set Screw
202004	12941	" Position Pin (2)
200029E	12938	" Screw (4)
243302	12953	" Shaft
203244	12938	" " Collar with two 200393C (3)
200393C	12938	Arm Shaft Collar Set Screw
222412	12938	" " Driving Flange with 200098F and 201032F
201032F	12938	Arm Shaft Driving Flange Position Screw
200098F	12938	Arm Shaft Driving Flange Set Screw
243303	—	Arm Side Cover
201048R	12938	" " " Thumb Screw
*222623	—	Bed
231990	12952	Braid Leader (lower section)
231995	12939	" " (upper section)
231997	12939	" " Pin (long)
231998	12939	" " " (short)
231960	12939	" " Position Pin
231996	12939	" " Rod
231984	12939	" " Spring
665D	12939	" " " Screw
200893D	12939	" " Thumb Screw
231991	—	Braid Leader complete, Nos. 231990, 231995, 231996, 231998, two each 231984, 231997 and four 665D
231704	12469	Cord Spool
243110	12955	" " Bracket
231834	12938	" " " Ball Bearing with twelve 231835

No.	Plate	Name
231835	12938	Cord Spool Bracket Ball Bearing Ball, $\frac{1}{4}$ in. diameter
231836	12938	Cord Spool Bracket Ball Bearing Friction Washer (2)
200055H	12954	Cord Spool Bracket Screw (3)
231852	12938	" " Friction Spring
200479F	12938	" " " " Adjusting Thumb Screw
201215H	12954	Cord Spool Friction Spring Screw (2)
231853	12955	Cord Spool Spindle
222565	12940	Driving Pulley
222416	12940	" " Sleeve
200062H	12939	" " " Screw
231854	12940	Face Plate
200469R	12939	" " Thumb Screw
231734	12939	Feed Bell Crank with 201035F and 201864
231828	12939	Feed Bell Crank Hinge Stud
200378C	12939	" " " " " Set Screw
201864	12939	Feed Bell Crank Roller
201035F	12939	" " " " Screw
243101	12939	" Lever
231736	12939	" " Bracket with 200125F
231737	12939	" " " Guide
231738	12939	" " " " Bearing
231739	—	" " " " " 231738 with 231737, 231740 and two 200581H
200072F	12939	Feed Lever Bracket Guide Bearing Screw (2)
231740	12939	Feed Lever Bracket Guide Cap
200581H	12939	" " " " " Screw
200125F	12939	" " " Set Screw
200680C	12939	" " Hinge Screw Stud
243102	12941	" Recovering Spring (left)
243103	12941	" " " (right)
201051D	12941	" " " Screw (2)
231839	12941	" Regulating Collar with 200692F
200692F	12941	" " " Screw Stud
*231863	—	" Rotating Pinion
*231864	—	" " " Bevel Gear
231865	12941	" " " " " Stud (eccentric)
200337C	12941	Feed Rotating Pinion Bevel Gear Stud Set Screw
231866	12941	Feed Rotating Pinion and Bevel Gear complete, Nos. 231863 and 231864

No.	Plate	Name
231867	12940	Feed Rotating Shaft
231868	12941	" " " Gear (front)
231831	12941	" " " " " "
		Position Pin
231870	12941	Feed Rotating Shaft Gear (rear) with two 200098F
200098F	12938	Feed Rotating Shaft Gear (rear) Set Screw
231746	12942	Feed Slide Bar
231838	12942	" " Block
222433	12941	Looper
222434	12942	" Bracket
222404	12938	" " Position Pin (2)
201058E	12941	" " Screw (2)
222435	12942	" Operating Bell Crank with two 201057F
222436	12942	Looper Operating Bell Crank Bracket
222437	—	Looper Operating Bell Crank Bracket 222436 with 222596 and 222624
202004	12941	Looper Operating Bell Crank Bracket Position Pin (2)
201058E	12941	Looper Operating Bell Crank Bracket Screw (3)
231850	—	Looper Operating Bell Crank Bracket complete, Nos. 201047c, 201622c, 222437, 222445, 222644, 231875 and two 222438
222438	12941	Looper Operating Bell Crank Hinge Block
201057F	12941	Looper Operating Bell Crank Hinge Block Screw Stud
201047c	12941	Looper Operating Bell Crank Hinge Screw
201622c	12941	Looper Operating Bell Crank Hinge Screw Nut
222439	12941	Looper Operating Cam
222526	12941	" " " Position Pin
222640	12941	" " Collar with 350099c
350099c	12941	" " " Set Screw ...
*231873	—	" " Connection (cam end)
231874	12942	Looper Operating Connection 231873 with 222620 and two 197D
231875	—	Looper Operating Connection 231874 with 222435, 222442 and two 205510
*222620	—	Looper Operating Connection (swivel end)

No.	Plate	Name
2269	12941	Looper Operating Connection (swivel end) Position Pin
197D	12941	Looper Operating Connection (swivel end) Screw
222442	12941	Looper Operating Connection Swivel
205510	12941	Looper Operating Connection Swivel Hinge Pin
222641	12941	Looper Operating Gear (spiral) ..
222642	—	" " " 222641 with 222640 and 222643
222643	12943	Looper Operating Gear Spring
222644	12942	" " Shaft
222445	12943	" " " Guide Block with 201052c
201052c	12941	Looper Operating Shaft Guide Block Set Screw
222624	12943	Looper Operating Shaft Sleeve and Gear
222447	12943	Looper Operating Shaft Sleeve Gear
222596	—	" " " " "
		222447 with 200119F
200119F	12943	Looper Operating Shaft Sleeve Gear Set Screw
222448	12943	Looper Position Plate
200099H	12943	" " " Screw
231876	12942	Needle Bar
231877	12942	" " Operating Collar with 350041F
231878	12942	Needle Bar Operating Slide
231879	12943	" " Pinch Collar
350041F	12943	" " " Thumb Set Screw
231880	12943	Needle Bar Position Bracket
201009c	12943	" " " " Screw (2)
231881	12943	Needle Driving Cam with 231753 ..
201836	12943	" " " Roller
231753	12943	" " " " Stud ...
222574	12944	" Plate, for needle sizes 1 to 12
201049D	12943	" " Clamping Thumb Screw
243307	12954	Nipple, for medium spiral braiding
231913	12944	" Carrier
231716	12944	" " Bell Crank
231717	12943	" " " " Hinge Stud (eccentric)
200346c	12943	Nipple Carrier Bell Crank Hinge Stud Set Screw

No.	Plate	Name
231915	12943	Nipple Carrier Guide Block
200145H	12943	" " " " Screw (2)
231718	12944	Nipple Carrier Lifting Connection
231826	12944	" " " " " Extension
231719	12943	Nipple Carrier Lifting Connection Guide Stud
200364C	12943	Nipple Carrier Lifting Connection Guide Stud Set Screw
201412C	12943	Nipple Carrier Lifting Screw Stud
231989	12943	" " Spring
350077D	12943	" " Thumb Screw (pres- sure regulating)
200145H	12943	Nipple Screw (2)
231918	12954	Presser Foot with 231961
243112	12954	" " Clamp with 200854C ..
200854C	12954	" " Set Screw
243113	12944	" " Lever
231761	12944	" " " Swivel
201191F	12954	" " " " Hinge Screw (2)
201185D	12954	Presser Foot Lever Swivel Stop Screw
231762	12954	Presser Foot Lifter with 201074C ..
201074C	12954	" " " Position Screw
231763	12954	" " " Stop Pin
231764	12954	" " " " " Spring
231765	12954	" " Lifting Lever
231961	—	" " Shoe (rubber)
231766	12944	" " Slide Bar
200047D	12954	" " " " Adjusting Screw
222582	12944	Presser Foot Slide Bar Guide
200364C	12943	" " " " " Set Screw
243105	12954	Presser Foot Slide Bar Spring
243106	12954	" " " " " Plunger
222586	12954	" " " " " Stop
200145H	12943	" " " " " " Screw
350127D	12954	Presser Foot Slide Bar Thumb Screw (pressure regulating) ...
231767	12944	Presser Foot Slide Bell Crank
243107	12954	" " " " Hinge Stud (eccentric)
200362C	12954	Presser Foot Slide Bell Crank Hinge Stud Set Screw

No.	Plate	Name
231925	12956	Spool
231926	12956	" Carrier with 200145H, 231952 and 231966
231927	12956	Spool Carrier Bracket with 231929, 231949 and 350042E
231928	12956	Spool Carrier Bracket Position Pin
200583H	12956	" " " Screw
231929	12956	" " Cord Guide
231933	12956	" " Driving Bevel Gear with two 200380C
200380C	12938	Spool Carrier Driving Bevel Gear Set Screw
231934	12956	Spool Carrier Driving Bevel Gear (intermediate)
231935	12956	Spool Carrier Driving Bevel Gear (intermediate) Bracket with 201387F
201387F	12956	Spool Carrier Driving Bevel Gear (intermediate) Bracket Set Screw
200996C	12956	Spool Carrier Driving Bevel Gear (intermediate) Cap Screw
231936	12956	Spool Carrier Driving Bevel Pinion
243311	12956	" " " Gear (1 to 1 stitch)
243312	12956	Spool Carrier Driving Gear (2 to 1 stitch)
243313	12956	Spool Carrier Driving Gear (3 to 1 stitch)
243314	12956	Spool Carrier Driving Gear (4 to 1 stitch)
243315	12956	Spool Carrier Driving Gear Divi- sion Washer (3)
243316	12957	Spool Carrier Driving Gear (inter- mediate) (1 to 1 stitch)
243317	12957	Spool Carrier Driving Gear (inter- mediate) (2 to 1 stitch)
243318	12957	Spool Carrier Driving Gear (inter- mediate) (3 to 1 stitch)
243319	12957	Spool Carrier Driving Gear (inter- mediate) with two 200380C (4 to 1 stitch)
200011D	12938	Spool Carrier Driving Gear (inter- mediate) Screw
200380C	12938	Spool Carrier Driving Gear (inter- mediate) Set Screw
243320	12955	Spool Carrier Driving Gear (inter- mediate) Shaft
243321	12955	Spool Carrier Driving Gear (inter- mediate) Shaft Bracket

No.	Plate	Name
222425	12958	Spool Carrier Driving Gear (intermediate) Shaft Bracket Position Pin
200039E	12958	Spool Carrier Driving Gear (intermediate) Shaft Bracket Screw (3)
243322	12958	Spool Carrier Driving Gear Key
243323	12958	" " " " "
		Shifting Collar with 248A
248A	12958	Spool Carrier Driving Gear Key Shifting Collar Screw
243324	12958	Spool Carrier Driving Gear Key Shifting Crank with 200084E
200084E	12949	Spool Carrier Driving Gear Key Shifting Crank Set Screw
243325	12958	Spool Carrier Driving Gear Key Shifting Lever
243326	12958	Spool Carrier Driving Gear Key Spring
243327	12958	Spool Carrier Driving Sleeve Gear
231943	12958	" " Gear with 231928 and 231960
231944	12958	Spool Carrier Gear Driving Bevel Gear with 201052c
201052c	12941	Spool Carrier Gear Driving Bevel Gear Set Screw
231945	12958	Spool Carrier Gear Driving Gear with two 200380c
231947	12958	Spool Carrier Gear Driving Gear (intermediate)
350039E	12958	Spool Carrier Gear Driving Gear (intermediate) Screw Stud
231946	12946	Spool Carrier Gear Driving Gear Cover
200066D	12958	Spool Carrier Gear Driving Gear Cover Screw (2)
200380c	12938	Spool Carrier Gear Driving Gear Set Screw
231948	12959	Spool Carrier Gear Driving Gear Shaft
231949	12959	Spool Carrier Position Pin
350042E	12959	" " Screw Stud
231965	12959	" " Spring
201684D	12959	" " Adjusting Thumb Nut
231950	12959	Spool Carrier Spring Adjusting Thumb Nut Stop Pin
231966	12959	Spool Carrier Spool Pin
231951	12959	" " Stop Collar with two 201416c

No.	Plate	Name
201416c	12959	Spool Carrier Stop Collar Set Screw
222485	12946	" Holder and Tension Bracket
201058E	12941	" " " " " Screw (2)
201036E	12959	Spool Screw Stud
222590	---	Spool Holder and Tension Bracket complete, Nos. 200132E, 200281D, 201036E, 201039E, 201040D, 202248, 222485, 222588, 222591, 222626 and 222627
231952	12949	Spool Tension Spring
200145D	12943	" " " Screw
222487	12949	Starting Trip Lever with 201054c ..
222488	12949	" " " Block
201054c	12949	" " " Screw Stud
201035E	12939	" " " Hinge Screw ..
222631	12946	" " " (intermediate)
201033D	12949	" " " " Hinge Screw Stud
222490	12949	Starting Trip Lever Rod
231963	12946	" " " Slide
222492	12949	" " " Cap
200110D	12949	" " " " Screw
222493	12949	" " " Spring ..
222494	12949	Stitch Rotating Gear (lower) (for vertical shaft) with 200119E ...
200119E	12943	Stitch Rotating Gear (lower) Set Screw
231956	12949	Stitch Rotating Gear (upper) (for vertical shaft) with two 200125E
200125E	12939	Stitch Rotating Gear (upper) Set Screw
222495	12946	Stitch Rotating Gear Bracket
202004	12941	" " " " Position Pin (2)
201058E	12941	Stitch Rotating Gear Bracket Screw (2)
222496	12949	Stitch Rotating Gear Bracket Shaft (intermediate)
222428	12949	Stitch Rotating Gear Bracket Shaft (intermediate) Gear (back or front) with 200119E
200119E	12943	Stitch Rotating Gear Bracket Shaft (intermediate) Gear Set Screw ..
222535	---	Stitch Rotating Gear Bracket complete, Nos. 201033D, 222490, 222495, 222496, 222503, 222504, 222596, 222631 and two 222428 ..

No.	Plate	Name
231955	12946	Stitch Rotating Gear Shaft (vertical)
227224	12941	Stitch Rotating Gear Shaft Collar with 201052c
201052c	12941	Stitch Rotating Gear Shaft Collar Set Screw
222498	12946	Stitch Rotating Hand Lever with 200084F
222503	—	Stitch Rotating Hand Lever 222498 with 201035F, 222487, 222488 and 222501
222499	12946	Stitch Rotating Hand Lever Handle (wood)
222500	12946	Stitch Rotating Hand Lever Handle Sleeve
222501	—	Stitch Rotating Hand Lever Handle Sleeve 222500 with 206134 and 222499
206134	12949	Stitch Rotating Hand Lever Handle Sleeve Washer
200084F	12949	Stitch Rotating Hand Lever Set Screw
222504	12946	Stitch Rotating Hand Lever Shaft
222447	12943	“ “ “ “ “ Gear
222596	—	Stitch Rotating Hand Lever Shaft Gear 222447 with 200119F
200119F	12943	Stitch Rotating Hand Lever Shaft Gear Set Screw
231957	12955	Stop Bracket
222540	12949	“ “ Interlocking Rod
222613	12949	“ “ “ “ Spring
222541	12949	“ “ “ “ Stop Block
200076D	12938	Stop Bracket Interlocking Rod Stop Block Screw
222538	12949	Stop Bracket Position Pin (2) ...
201058F	12941	“ “ Screw (lower)
350040E	12949	“ “ “ (upper)
231958	—	Stop Bracket complete, Nos. 200076D, 200110D, 201216c, 201863, 222492, 222493, 222540, 222541, 222594, 222613, 231957 and 231963
222628	12949	Stop Cam with 222629
222629	12949	“ “ Driving Stud
222594	12949	“ “ Locking Lever with 201055F
201216c	12949	Stop Cam Locking Lever Hinge Screw

No.	Plate	Name
201863	12949	Stop Cam Roller
201055F	12949	“ “ “ Screw Stud
222511	12959	“ “ Spring
203244	12938	“ “ “ Collar with two 200393c
200393c	12938	Stop Cam Spring Collar Set Screw
222626	12959	Tension Regulating Lever
200281D	12959	“ “ “ Hinge Screw
202248	12959	Tension Regulating Lever Hinge Screw Spring Washer
222627	12959	Tension Regulating Plate
201040D	12959	“ “ “ Hinge Screw
222591	12959	Tension Regulating Spring
201039E	12959	“ “ “ Screw Stud
222588	12959	Thread Controller Spring (light)...
200132E	12959	“ “ “ Screw ...

ACCESSORIES

No.	Plate	Name
231971	—	Gimp Nipple, $\frac{1}{8}$ inch
231975	—	" " $\frac{1}{4}$ inch
231981	12952	" " Holder with 200391c..
200391c	12952	" " Set Screw
231982	12952	" Thread Guide (lower section)
231995	12939	" " " (upper section)
231997	12939	" " " Pin (long)
231998	12939	" " " " (short) ...
231996	12939	" " " Rod
231984	12939	" " " Spring
665D	12939	" " " " Screw ...
231985	—	Gimp Thread Guide complete, Nos. 231982, 231984, 231995, 231996, 231998, two 231997 and four 665D
231903	—	Nipple (plain cording), for No. 3 needle
231905	—	Nipple (plain cording), for No. 5 needle
231907	12952	Nipple (plain cording), for No. 7 needle
231909	—	Nipple (plain cording), for No. 9 needle
231911	—	Nipple (plain cording), for No. 11 needle
231967	12952	Nipple Holder, for plain cording nipple
231887	12952	Nipple (three thread, $\frac{3}{8}$ inch)
231889	—	" " " $\frac{1}{4}$ inch)
231891	—	" " " $\frac{3}{16}$ inch)
222516	12952	" Wrench
231986	—	Presser Foot with 222529
222529	—	" " Shoe (rubber)
231961	—	" " " "
*225482	—	Screw Driver Blade
*225483	—	" " Handle
225497	12469	Screw Driver complete, Nos. 225482 and 225483
222520	12952	Spool Winder Spindle
222521	12469	" " Washer
222518	12469	Thread Knife
222519	12960	Threader Wire
231968	12960	Threading Chain, 15 $\frac{3}{4}$ in. long
36553	12469	Tweezers
27 x 1	—	Needles, eleven, five, size 3, one each sizes 4 to 9

No.	Plate	Name
201219E	12469	Bed Clamping Thumb Screw (2)...
231704	12469	Cord Spool (6)
41564	12469	Machine Rest Pin (wood)
36578	12469	Oiler with 36579
36579	12469	" Spout, 3 $\frac{1}{2}$ in. long, with 120117
120117	—	" " Washer (leather)
26346	12960	Pliers
*225484	—	Screw Driver Blade
*225485	—	" " Handle
225498	12469	Screw Driver complete (7 $\frac{1}{2}$ in. long), Nos. 225484 and 225485 ..
231925	12956	Spool (metal)
222523	12960	" (wood)

PARTS FOR VARIOUS CLASSES OF WORK

FOR THREE THREAD CORDING

231987	12939	Covering Thread Guide (lower sec- tion)
231995	12939	Covering Thread Guide (upper sec- tion)
231997	12939	Covering Thread Guide Pin (long)
231998	12939	" " " " (short)
231996	12939	" " " Rod
231984	12939	" " " Spring
665D	12939	" " " " Screw
231988	—	Covering Thread Guide complete, Nos. 231984, 231987, 231995, 231996, 231998, two 231997 and four 665D
231887	12952	Nipple (three thread, $\frac{3}{8}$ inch)
231889	—	" " " $\frac{1}{4}$ inch)
231891	—	" " " $\frac{3}{16}$ inch)

FOR TWO THREAD CORDING

231988	—	Covering Thread Guide complete, Nos. 231984, 231987, 231995, 231996, 231998, two 231997 and four 665D
--------	---	--

No.	Plate	Name
231903	—	Nipple (plain cording), for No. 3 needle
231904	—	Nipple (plain cording), for No. 4 needle
231905	—	Nipple (plain cording), for No. 5 needle
231906	—	Nipple (plain cording), for No. 6 needle
231907	12952	Nipple (plain cording), for No. 7 needle
231908	—	Nipple (plain cording), for No. 8 needle
231909	—	Nipple (plain cording), for No. 9 needle
231910	—	Nipple (plain cording), for No. 10 needle
231911	—	Nipple (plain cording), for No. 11 needle
231912	—	Nipple (plain cording), for No. 12 needle
231967	12952	Nipple Holder, for plain cording nipples

FOR GIMP EMBROIDERY

231969	—	Gimp Nipple, $\frac{1}{16}$ inch
231971	—	" " $\frac{1}{8}$ inch
231973	12952	" " $\frac{3}{16}$ inch
231975	—	" " $\frac{1}{4}$ inch
231977	—	" " $\frac{5}{16}$ inch
231981	12952	" " Holder with 200391c ..
200391c	12952	" " Set Screw
231982	12952	" Thread Guide (lower section)
231995	12939	" " " (upper section)
231997	12939	" " " Pin (long)
231998	12939	" " " " (short)
231996	12939	" " " Rod
231984	12939	" " " Spring
665D	12939	" " " " Screw ...
231985	—	Gimp Thread Guide complete, Nos. 231982, 231984, 231995, 231996, 231998, two 231997 and four 665D
231918	12954	Presser Foot with 231961, to be used for long stitch
231961	—	Presser Foot Shoe (rubber)

FOR FEATHER STITCHING

No.	Plate	Name
231988	—	Covering Thread Guide complete, Nos. 231984, 231987, 231995, 231996, 231998, two 231997 and four 665D
231969	—	Nipple, $\frac{1}{16}$ inch
231971	—	" " $\frac{1}{8}$ inch
231973	12952	" " $\frac{3}{16}$ inch
231975	—	" " $\frac{1}{4}$ inch
231977	—	" " $\frac{5}{16}$ inch
231981	12952	" Holder with 200391c
200391c	12952	" Set Screw
231918	12954	Presser Foot with 231961, to be used for long stitch
231961	—	Presser Foot Shoe (rubber)

BRAIDING

243019	12952	Braid Guide Post
243020	12952	" " Spring
231981	12952	Nipple Holder with 200391c
200391c	12952	" Set Screw

GUIDES FOR STITCHING THROUGH THE CENTER OF SOUTACHE BRAID

243041	—	Braid Guide, $\frac{1}{16}$ inch
243042	—	" " $\frac{1}{8}$ inch
243043	—	" " $\frac{3}{16}$ inch
243044	—	" " $\frac{1}{4}$ inch
243045	12952	" " $\frac{5}{16}$ inch
243046	—	" " $\frac{3}{4}$ inch
243047	—	" " $\frac{1}{2}$ inch
243048	—	" " $\frac{11}{16}$ inch
243049	—	" " $\frac{3}{4}$ inch

GUIDES FOR STITCHING ON EDGE OF SOUTACHE BRAID

243055	—	Braid Guide, $\frac{3}{16}$ inch
243056	—	" " $\frac{1}{4}$ inch
243057	—	" " $\frac{5}{16}$ inch
243058	12952	" " $\frac{3}{8}$ inch
243059	—	" " $\frac{7}{16}$ inch
243060	—	" " $\frac{1}{2}$ inch
243061	—	" " $\frac{5}{8}$ inch
243062	—	" " $\frac{3}{4}$ inch

GUIDES FOR STITCHING THROUGH THE CENTER OF THIN FLAT BRAID

No.	Plate	Name
243003	—	Braid Guide, $\frac{1}{16}$ inch
243004	—	" " $\frac{1}{8}$ inch
243005	—	" " $\frac{3}{16}$ inch
243006	—	" " $\frac{1}{4}$ inch
243007	12952	" " $\frac{1}{2}$ inch
243008	—	" " $\frac{3}{4}$ inch
243009	—	" " $\frac{5}{8}$ inch
243010	—	" " $\frac{11}{16}$ inch
243011	—	" " $\frac{3}{4}$ inch
243012	—	" " $\frac{13}{16}$ inch
243013	—	" " $\frac{7}{8}$ inch

GUIDES FOR STITCHING ON ROUND BRAID

243066	—	Braid Guide, $\frac{3}{16}$ inch
243067	—	" " $\frac{1}{4}$ inch
243068	—	" " $\frac{1}{2}$ inch
243069	—	" " $\frac{3}{4}$ inch
243070	—	" " $\frac{5}{8}$ inch
243071	12952	" " $\frac{1}{2}$ inch
243072	—	" " $\frac{3}{4}$ inch
243073	—	" " $\frac{5}{8}$ inch

IMITATION TWO NEEDLE CORDING

231990	12952	Braid Leader (lower section)
231995	12939	" " (upper section)
231997	12939	" " Pin (long)
231998	12939	" " " (short)
231996	12939	" " Rod
231984	12939	" " Spring
665D	12939	" " " Screw
231991	—	Braid Leader complete, Nos. 231990, 231995, 231996, 231998, two each 231984, 231997 and four 665D ..
243023	—	Nipple, $\frac{3}{16}$ inch
243024	—	" $\frac{7}{16}$ inch
243025	—	" $\frac{1}{2}$ inch
243026	—	" $\frac{5}{8}$ inch
243027	—	" $\frac{3}{4}$ inch
243028	—	" $\frac{11}{16}$ inch
243029	12952	" $\frac{3}{4}$ inch
243030	—	" $\frac{13}{16}$ inch
243031	—	" $\frac{7}{8}$ inch

No.	Plate	Name
243032	—	Nipple, $\frac{15}{16}$ inch
243033	—	" $\frac{1}{4}$ inch
243034	—	" $\frac{17}{16}$ inch
243035	—	" $\frac{3}{2}$ inch
231981	12952	" Holder with 200391c
200391c	12952	" Set Screw
231918	12965	Presser Foot with 231961
231961	—	" " Shoe (rubber)

SPOOL WINDING OUTFIT

231993	—	Spool Rack
231992	—	" Winder
231994	—	Skein Unwinder

PLATE 12469—ONE-HALF SIZE

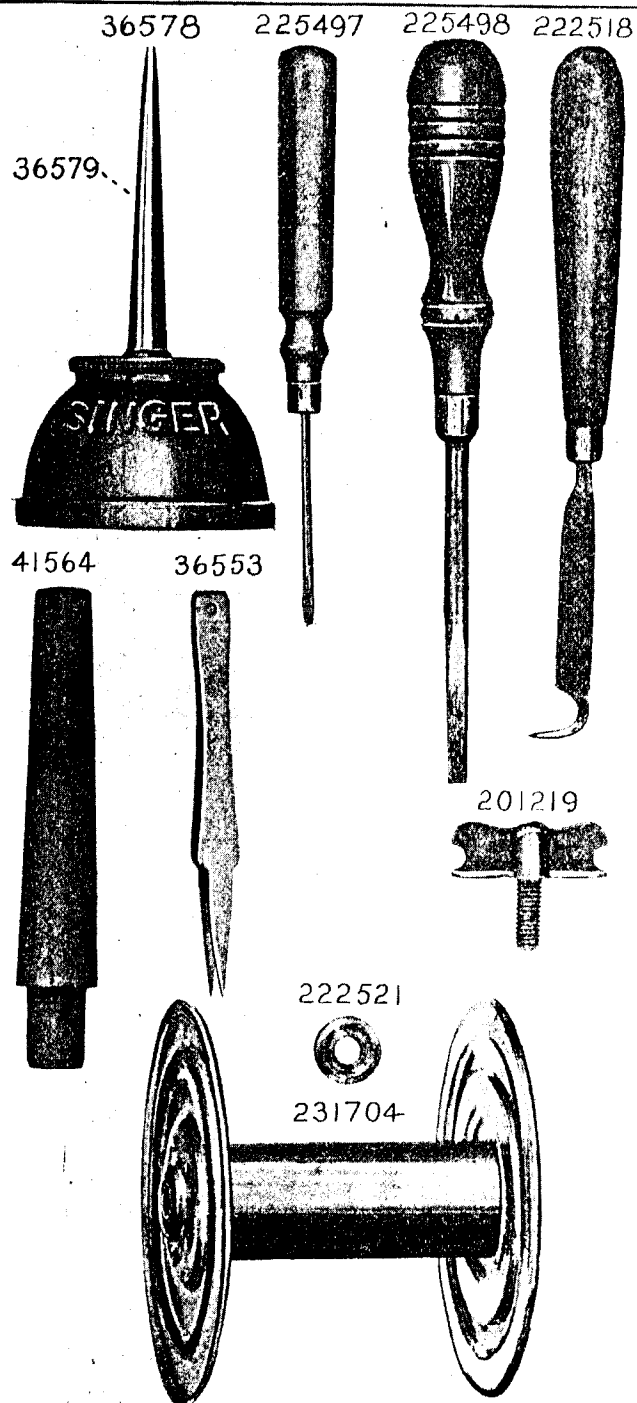


PLATE 12938—FULL SIZE

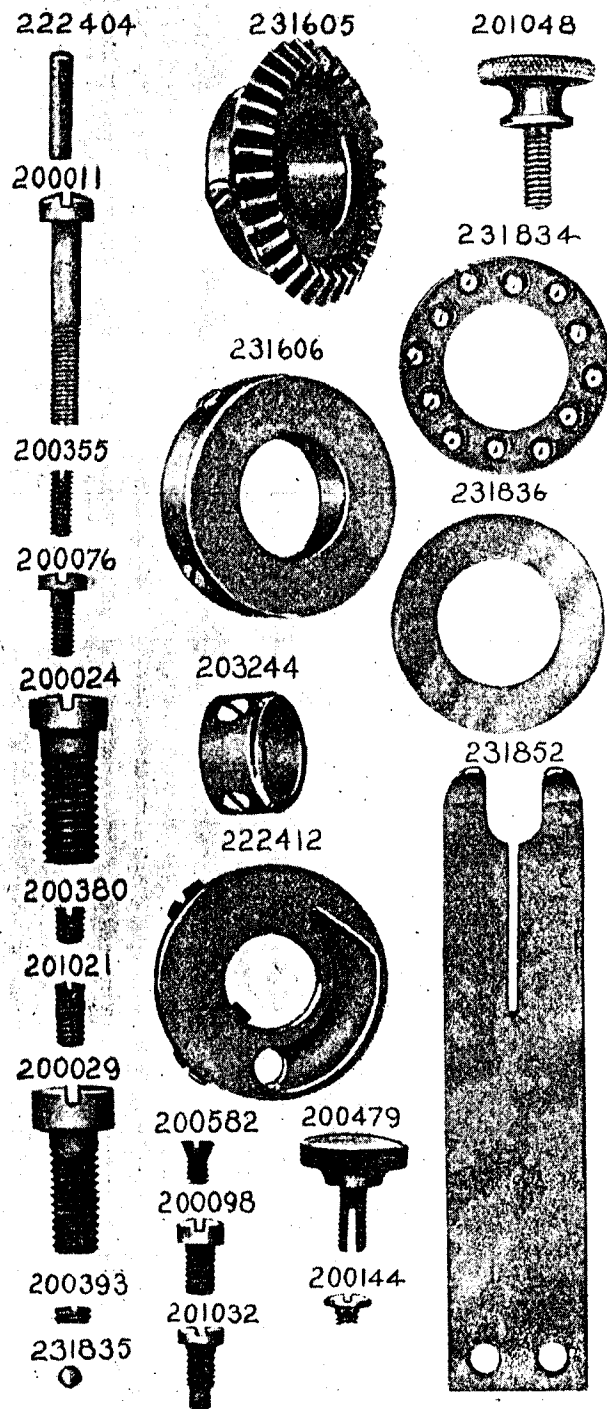


PLATE 12939—FULL SIZE



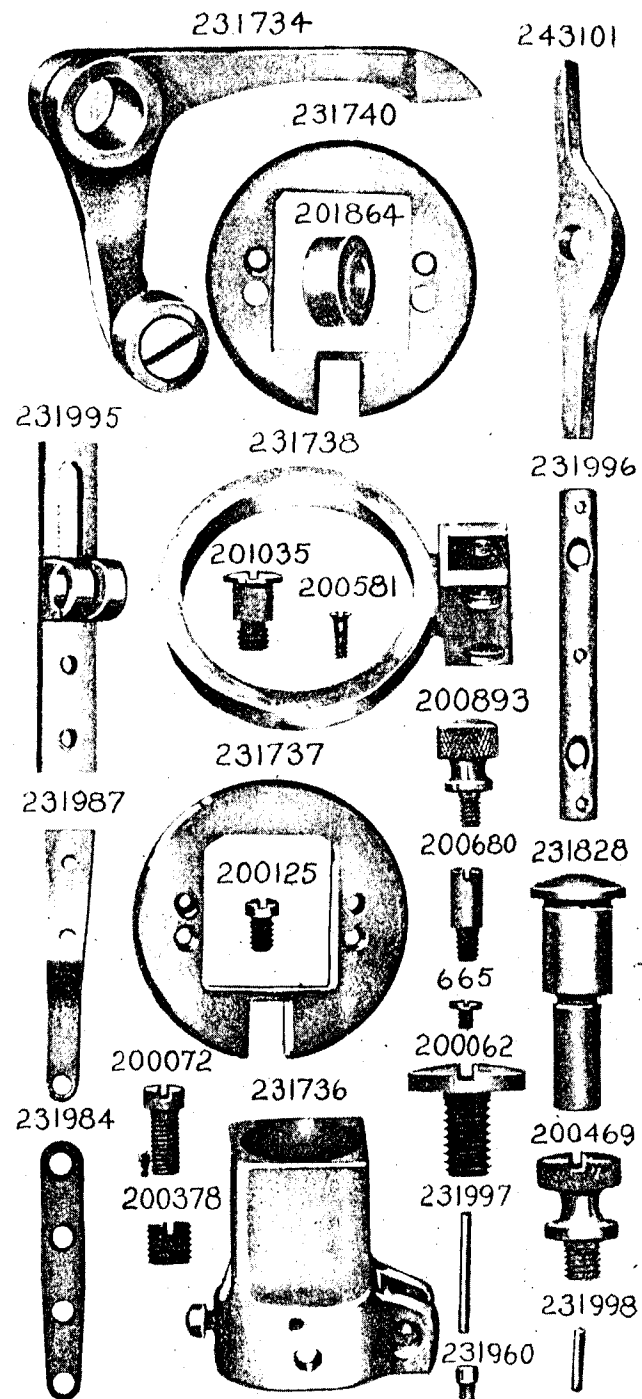


PLATE 12940—ONE-HALF SIZE

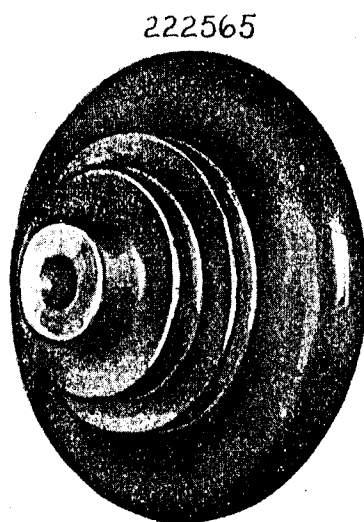

222565



222416




231854

231867



PLATE 12941—FULL SIZE

222426 222427 201051 200692 231865
243102 243103

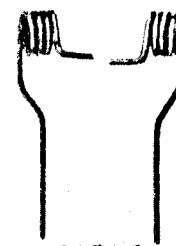

231868




231839




200337



231866

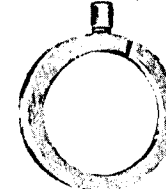


227224

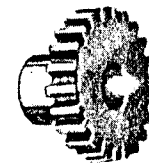

231831



231870

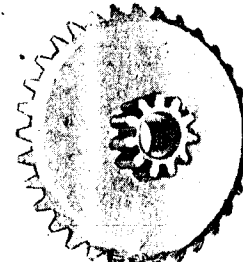

222438

201052


222433



201058



201047




222439

201057



222526



222442

205510

222641

222640



197

202004



201622



2269

350099

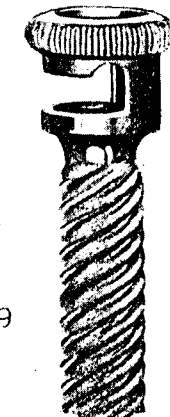


PLATE 12942—ONE-HALF SIZE

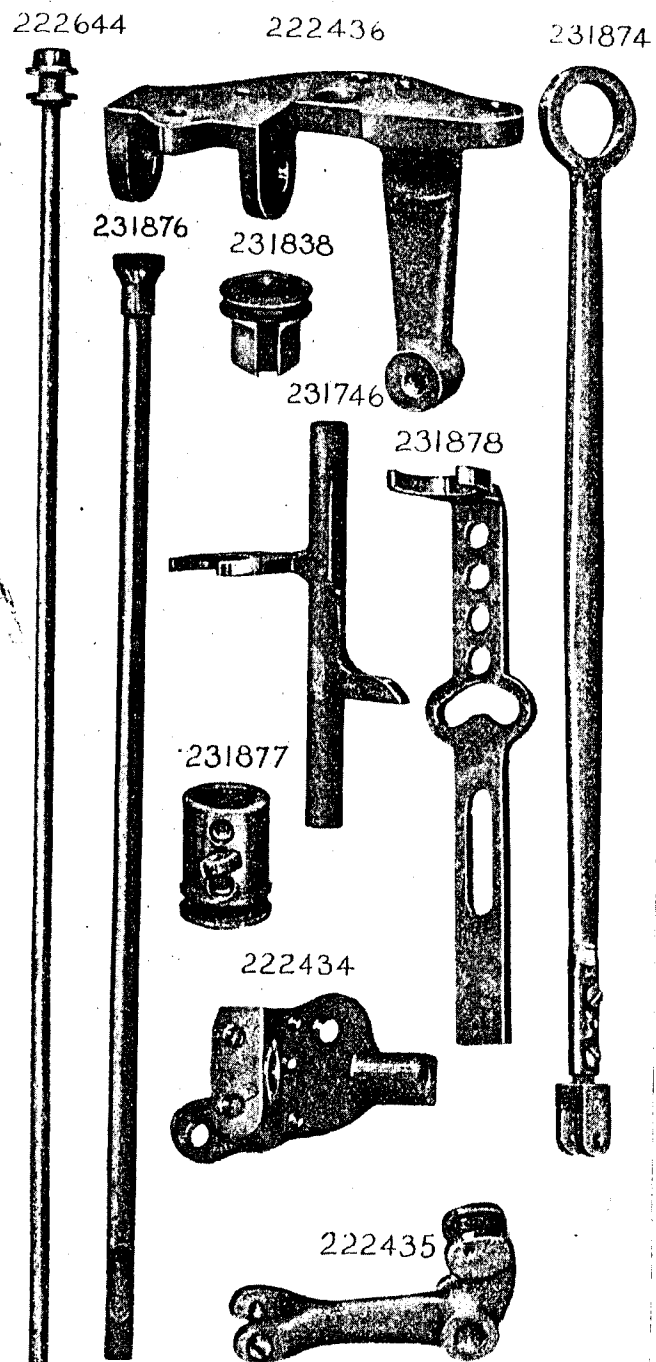


PLATE 12943—FULL SIZE


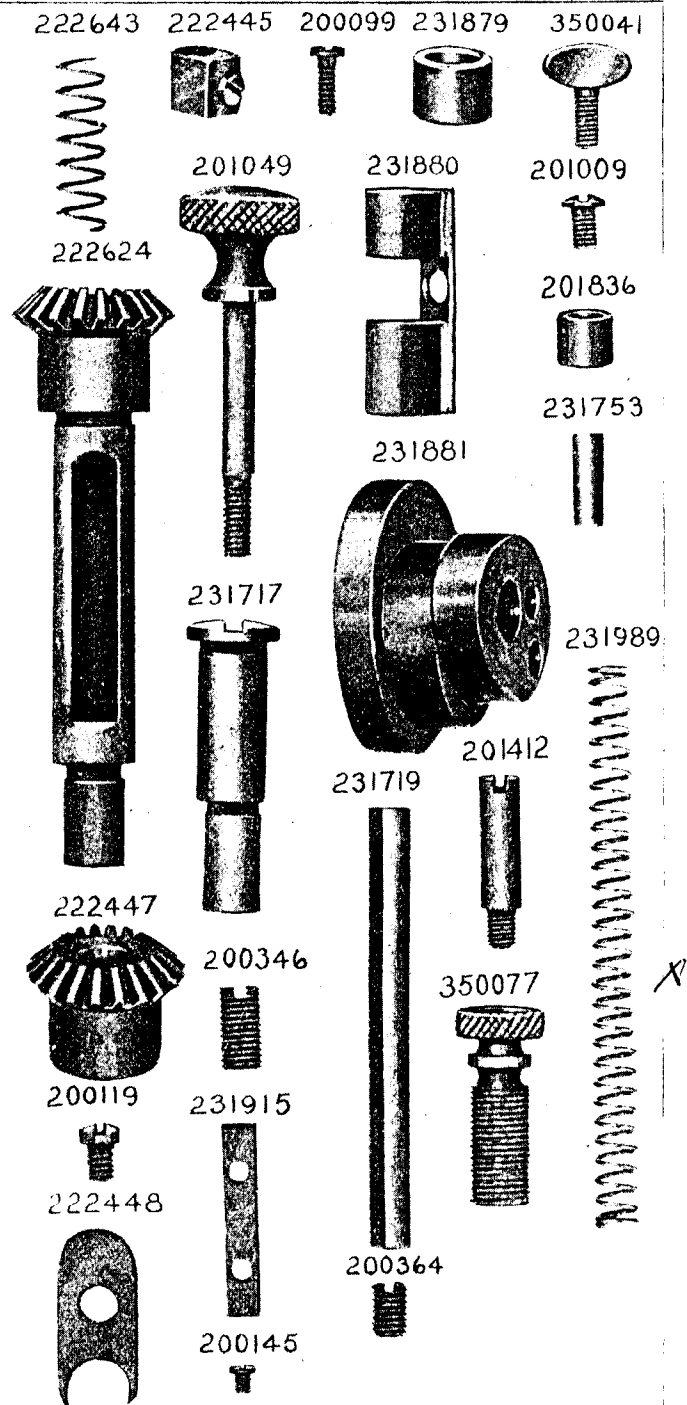


PLATE 12944—ONE-HALF SIZE

222574

243113

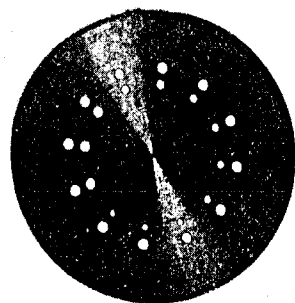

231718

231766

222582

231913

231716

231826

231761

231767

PLATE 12946—ONE-HALF SIZE

231946

222495

222485

222498

231963

231955

222499

222631

222500 222504

PLATE 12949—FULL SIZE

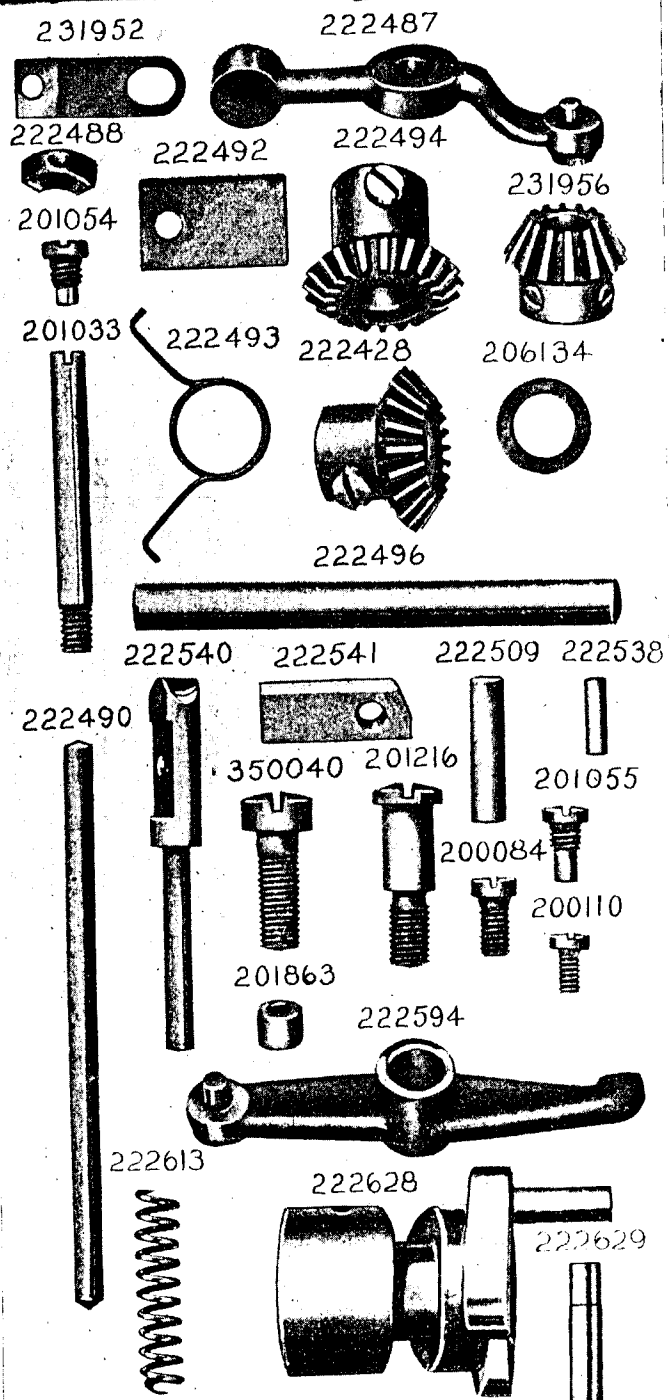


PLATE 12952—FULL SIZE

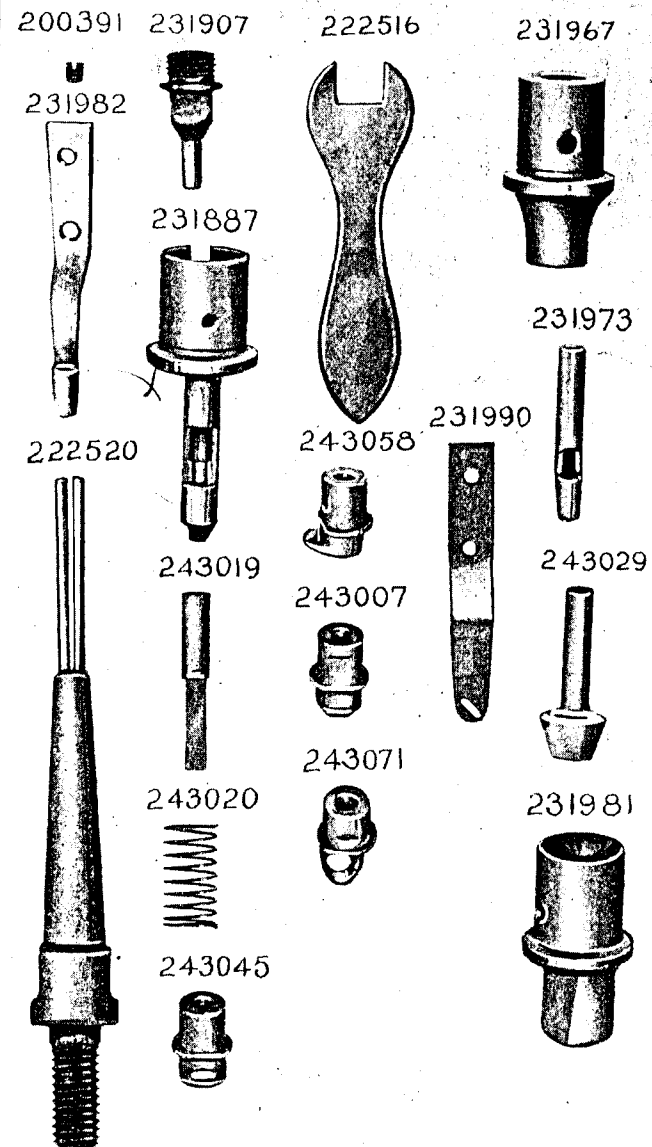


PLATE 12953—ONE-HALF SIZE

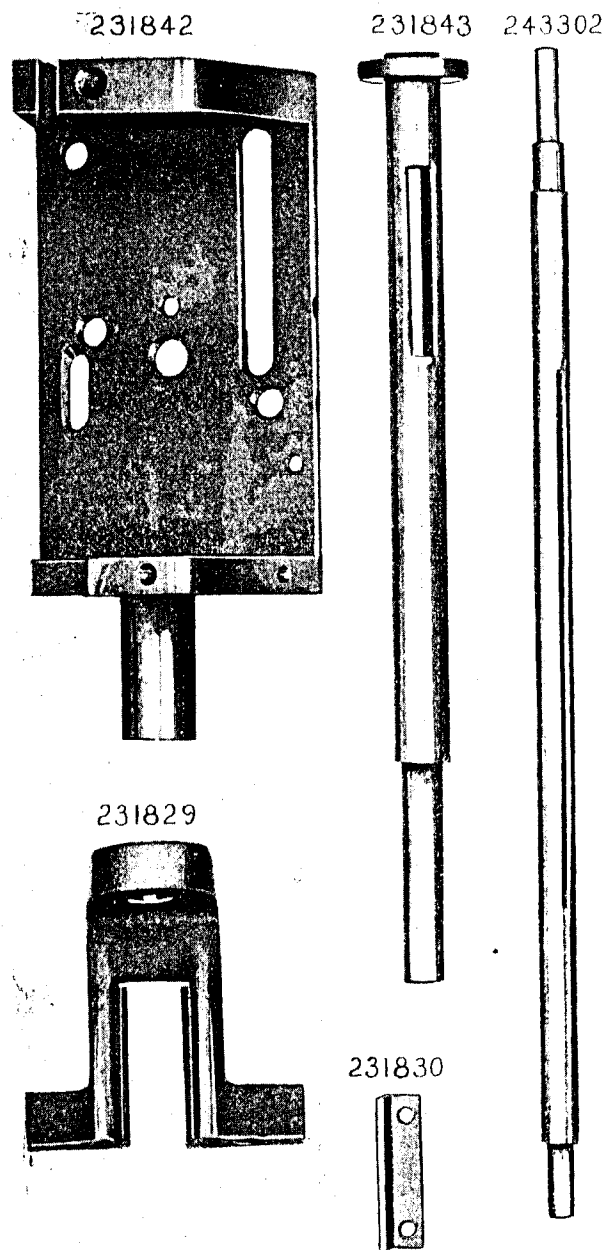


PLATE 12954—FULL SIZE

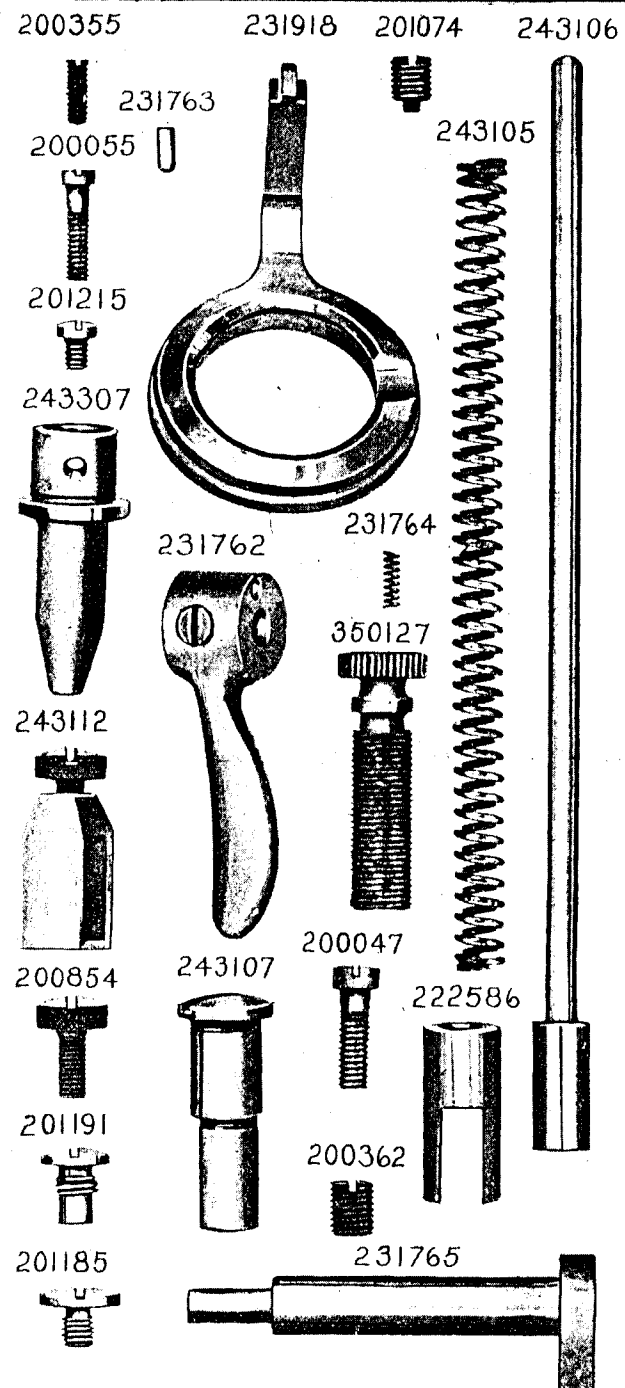


PLATE 12955—ONE-HALF SIZE


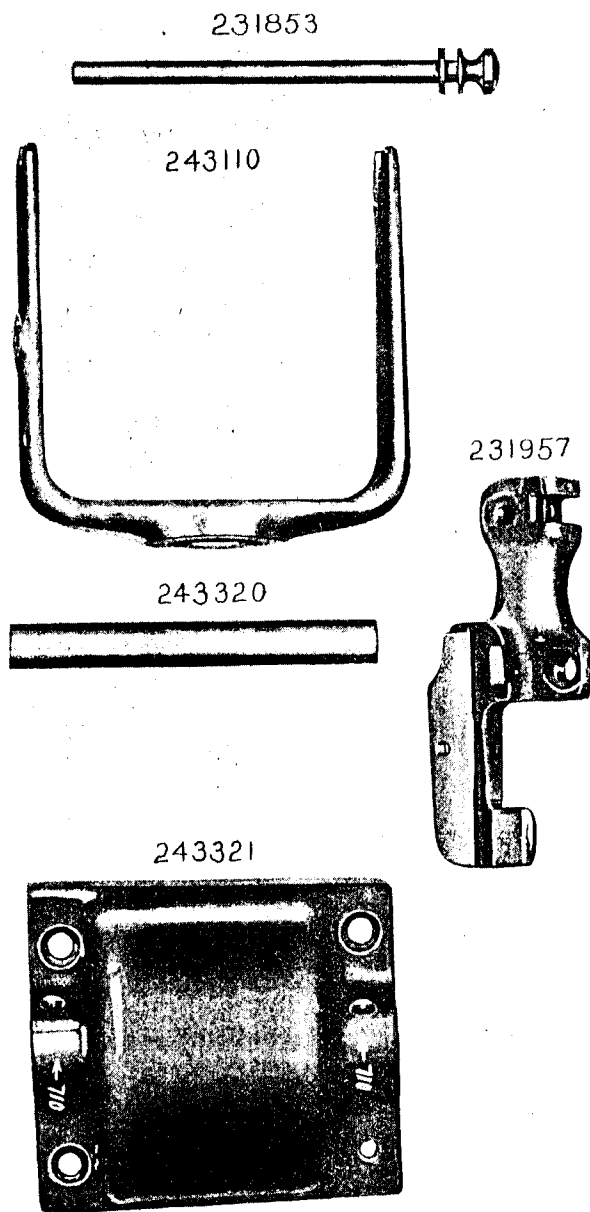


PLATE 12956—FULL SIZE

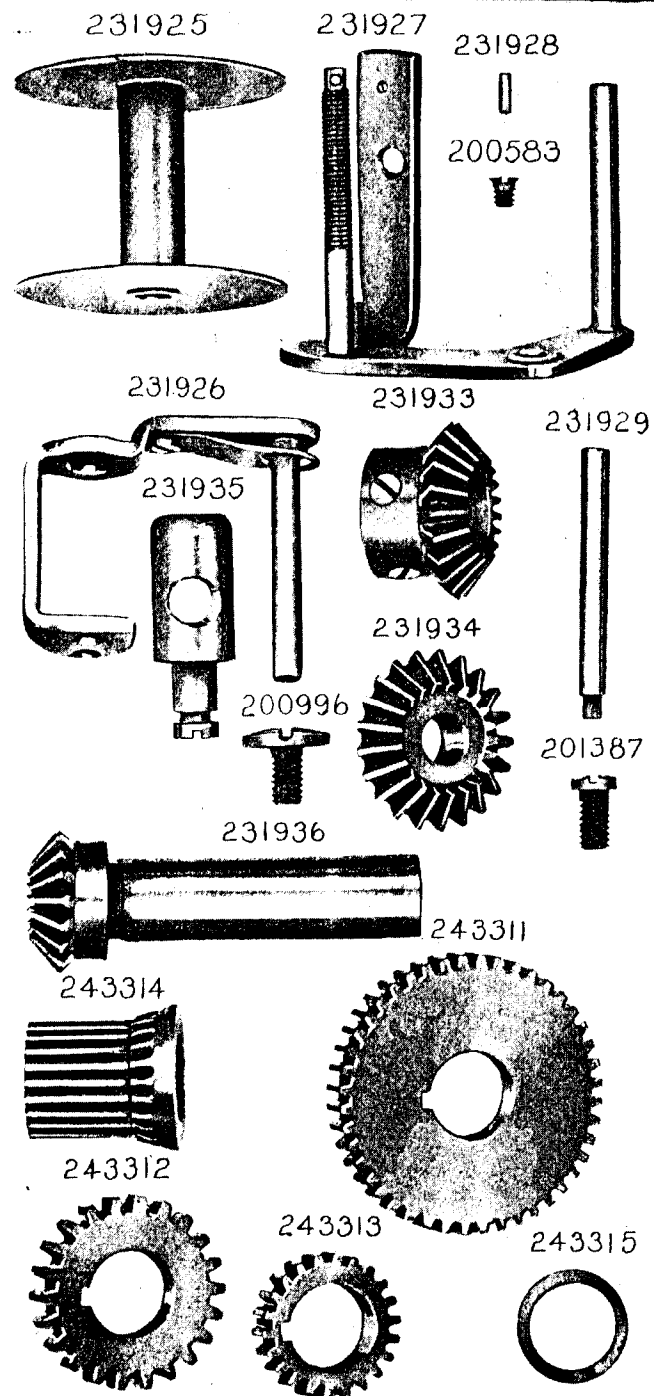

243318

243316

243317

243319

222425

243322

200039

248

230039

231947

231945

231944

243326

243323

243325

243324

231943

200066

243327

PLATE 12959—FULL SIZE

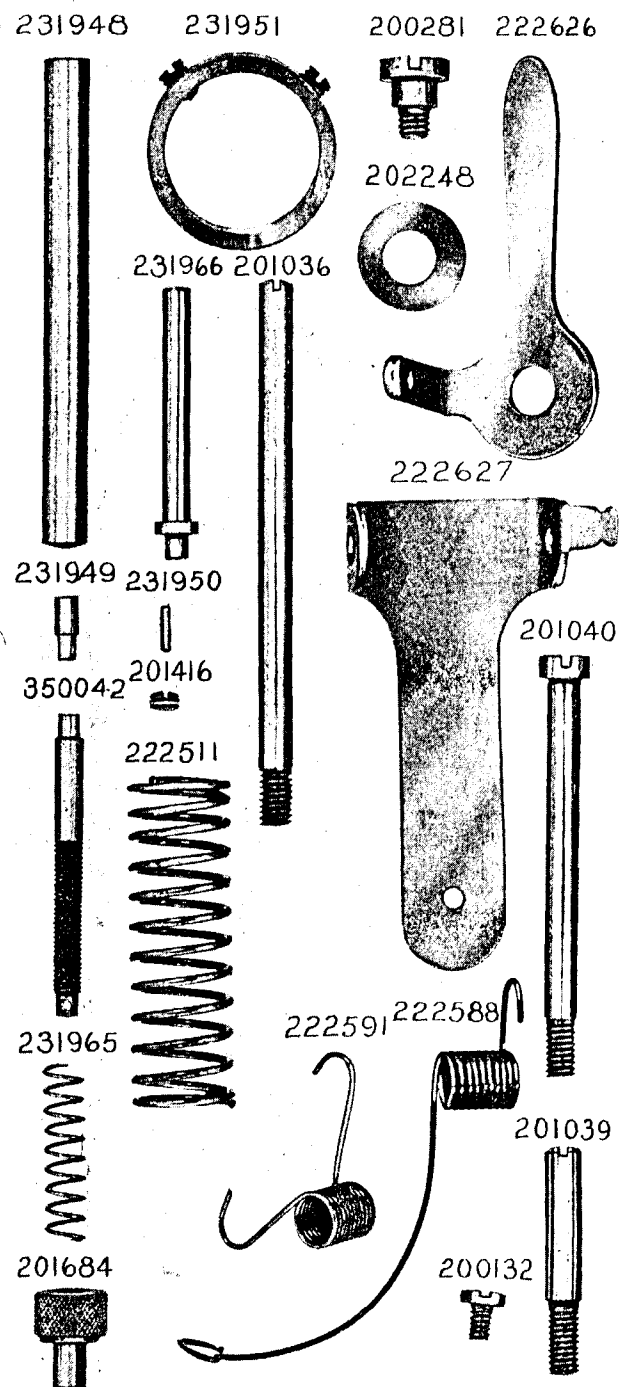


PLATE 12960—ONE-HALF SIZE

