
SILVER STAR®

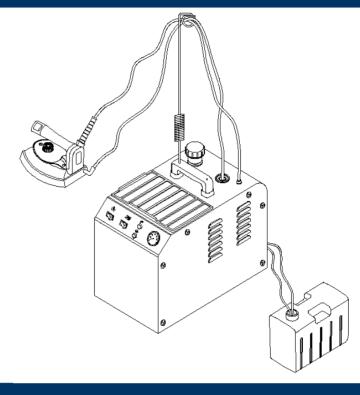

# Steam Generator

User's Manual

Model: SR-5900

\* To use the product correctly, plese read this operation instruction carefully.

http://www.silverstar.co.kr




# NO

Before use	
What is vapor generator	3
Names of parts of product	3
Product specification	4
Circuit diagram	4
Product characteristics	5
Precautions of safety use	6~9
<b>♦</b> Use	
Confirmation before use	9
Assembly and use	10
Water feeding method	10
♠ After use	
Cleaning method	11
♠ Others	
Breakdown drawin:	12
Troubleshooting	13

### What is SR-5900?

SR-5900 is composed of the vapour generated between pressure containers that store water and generate vapours, and the iron that can perform ironing work. This product functions with antomatism of water. Vapour generator owns basic functions of industrial boiler. Miniaturized design is easy in installation and convenient for use. It is the product that can improve work efficiency and save energy, can be used safely and conveniently in common clothes factory, mall, supermarket, tailor's shop, laundry etc..


#### Name of various parts of product

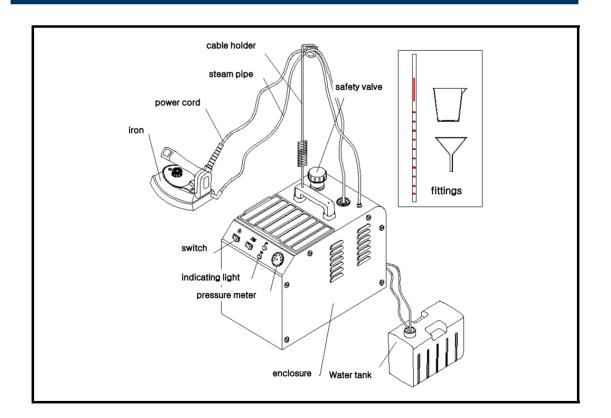

## Product specification

Product name	Vapour generator
Type	SR-5900
Voltage	120/220V~,50/60Hz
Vapour generator power	1,500W
Electric iron power	1,000W
Vapour pressure	3.5bars
Product weight	16kg
Product dimension	420×250×320h

# Circuit diagram

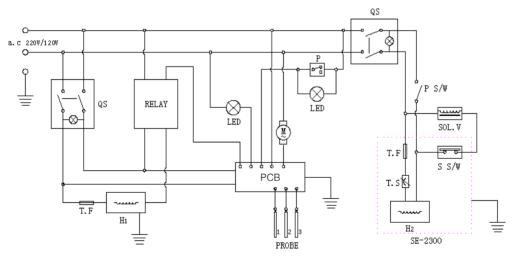

QS: power switch PCB: Pcb board

T.F: Fuser M: Electromagnetic pump

H1: Heater P: Pressure switch

LED: Indicator SOL. V: Electromagnetic valve

P S/W: Switch of iron

S S/W: Vapour switch of ir

T. S: Thermostat of iron

H2: Iron Heater

#### Product characteristics


- This product satisfies relevant technical requirements for customer's safety.
- ♣ This product is energy saving product improving basic energy consumption of boiler.
- ♣ This vapour generator has four major safety devices.
  - automatic pressure cutting switch attached
  - safety valve that can discharge pressure in the vapour container in case of excessive pressure generated because of product abnormality
  - two automatic temperature controllers preventing (over temperature attached) do vou mean of over heat?
  - the fuser installed internally preventing (over temperature) (over heat) beause of failure of thermolator
- ♣ There are two specifications of this vapour generator, 120V and 220V.
  - Before it is connected to the socket for use, whether rated voltage is consistent with voltage required by the product must be confirmed.
- ♣ When electromagnetic valve is started, 2.5 ~ 4.0 BAR vapour bursts out through the iron. If the water in pressure container is used up, no vapour is generated.
- This product includes accessories of hook, measuring cup, funnel, measuring rod etc.
- Refer to Page 4 for other product specifications.
  Refer to Operation Instructions of the product for precautions and use method.
- ♣ When you are using, if water bottle without water, motor temperture become hot, product stop work. Give the water after one hour become work. Use this product (keep water in bottle).

Repair or disassembly of the product at will is not permitte

The agent nearby must be contacted to repair!


### Precautions of safe use

- ♣ The following is indication of precautions marked to prevent occurance of accidents for correct, safe use of product.which is expected to be abided by.
- ♣ Precautions of safe use, such as unexpected hazard caused by inadequate use, are classified by "Warning" and "Caution" according to hazard degree and emergency situation of hazard.

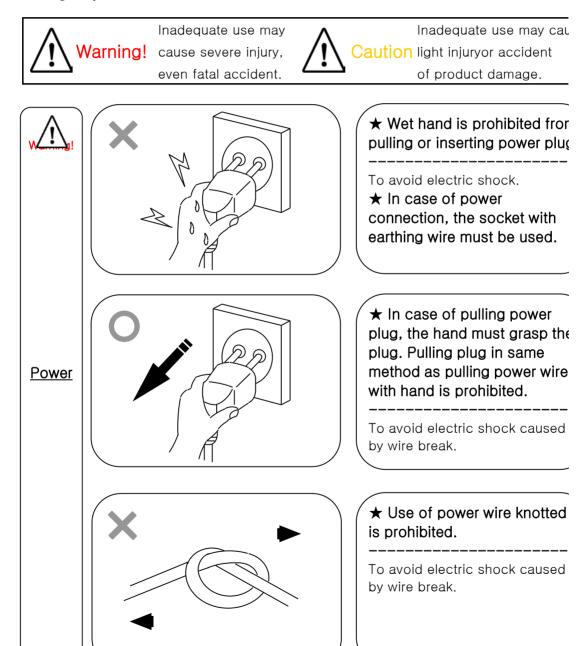

## Precautions of Safe Use




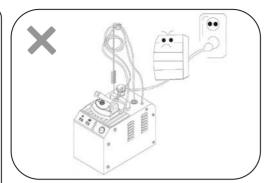

★ Power wire can not be extruded by heavy object or product.

Short circuit of power wire may become the reason of electric shock and fire.


**Power** 

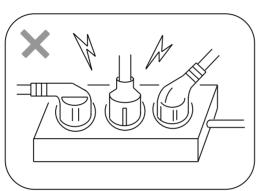

★ It must be used on the pluge more than 120V/25A, 220V/15A individually.

Many products used in the samtime, may become the reason o overtemperature (over heat) and fire.




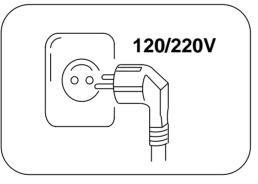

★ It should be used after confirmation of rated voltage conforming to required voltag of product,

Operation of abnormal current may cause a fire.

Use

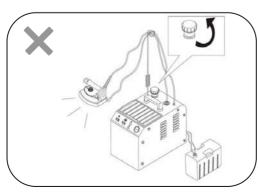


★During use of product, safety valve should not be contacted or opened.

To avoid scald.

#### Precautions of Safe Use




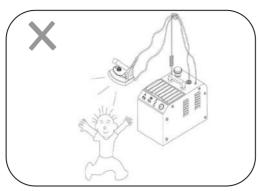

★ It should be paid special attention to that use, or contact by children should be prevented.

To avoid scald.

<u>Use</u>

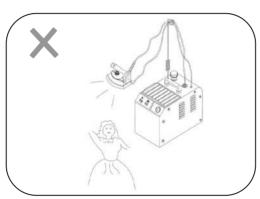


★ During product use, spraying at human body or contacting vapour is prohibited.

★ Except for iron clothes, it car not be used for other purpose.

\_\_\_\_\_

The vapour of high pressure and high temperature may cause

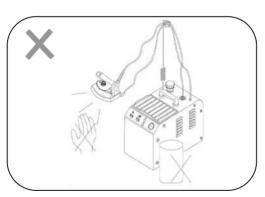


★ During product use, as baseplate temperature is very high, contact with any object should be avoided, Attention should be paid during use.

To avoid scald.



Sweepi ng and keeping

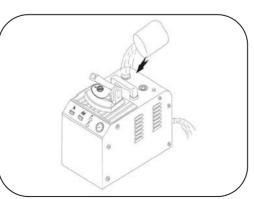


★ In case of idleness for long term, vapour generator should be kept after all water in it is cleaned and dried.

Sediments may be caused in vapour generator kept with

#### Precautions of Safe Use



Sweepi ng and keeping

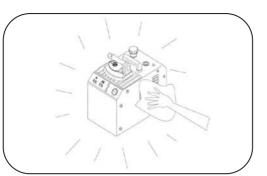

- ★ After use, the cleaning must t made after power plug is pulled out.
- ★ Washing powder or detergent can not be used for cleaning.


-----

To avoid electric shock and shortened service life of produc



Warning!

**Others** 

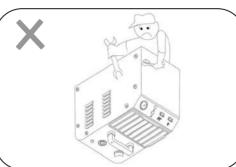


★ Product disassembly or product transformation is prohibited.

It may cause product damage and failure, electric shock.



<u>Others</u>

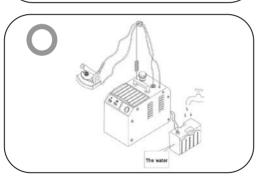


★ Clean water without foreign matters or mineral substance shall be used.

\_\_\_\_\_


It can prolong service life of product.

\* The water can not be used: special water for iron, chemical water preventing calcium, perfume or mixture of perfume.

#### Confirmation before Use

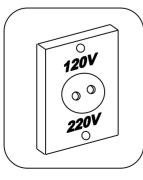


- 1. Confirm the used voltage
- Check if the service voltage is same as the product voltage

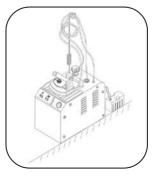

- 2. Use in this k of place
- Plain plateforr surface, level | without inclina

### Assembly and Use

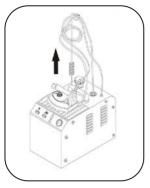


- 1. Setting of hook
- Install the hook according to the drawing, hang power wire and vapour tube on the hook.




2. Put Water


Put water into w bottle, also such pipe and hanst put into bottle to

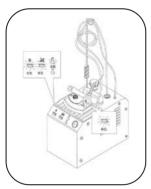

- 3. Power connection
- After confirmation of the voltage insert the plug, switch on power switch and iron switch.

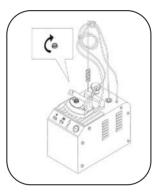


- 4. Thermolator adjusted to hig temperature
- Adjust the the to the position o temperature.

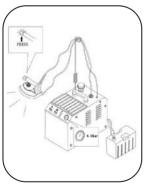


- 5. Normal use
- When the pointer of pressure meter indicate 3.5 bar, LED indicator will light up. Then vapour switch can be pressed for use.
- ♣ When you are using, if water bottle without water, motor temperture become hot, product stop work. Give the water after one hour become work. Use this product (keep water in bottle).

## Cleaning method

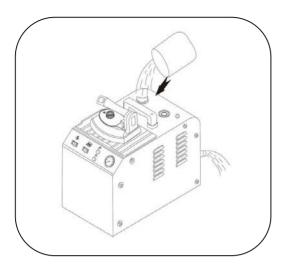

- ★ Clean once a month.
- ★Open the salfly valve, give 1/2 water in this bottle. Throug the valve drain the water(try 2-3 times)
- ★ After repeated operation, power on and heat for about 15 minutes, to eliminate moisture in pressure container completely.(Safety valve should be in open state right now)
- ★ Service life can be prolonged.
- ★When disassembling, the agent should be contacted first to take any measures.

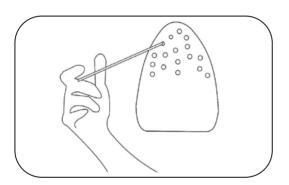


★ Vapour hole on press iron baseplate may be blocked by foreign matters, which requires cleaning by prod often.

\_\_\_\_\_

Thus service life of press iron can be prolonged.

# Breakdown drawing

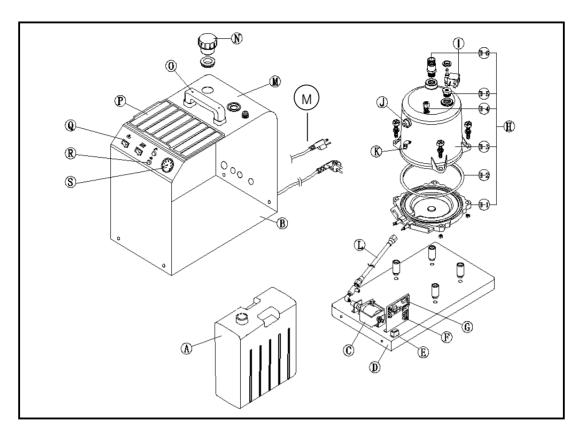

No.	PARTS NAME	No.	PARTS NAME
А	WATER BOTTLE	H6	PRESSURE SAFETY VALVE NIPPLE
В	CASE	I	SOLENOID VALVE(120V/220V)
С	ELECTRICMAGNETIC PUMP	J	PRESSURE CUTTING SWITCH
D	PLATE	K	ELBOW NIPPLE [C TYPE]
Е	RELAY	L	TEFLON HOSE[C TYPE]
F	TERMINAL BLOCK	М	POWER CORD[120V/220V]
G	PCB BOARD	N	PRESSURE SAFETY VALVE
Н	PRESSURE TANK ASSY(120V/220V)	0	HANDLE
H1	HEATING PLATE(120V/220V)	Р	SILICONE IRON REST
H2	SILICONE O - RING(A)	Q	POWER SWITCH
НЗ	HEATING PLATE COVER	R	LAMP (LED)
H4	PRESSURE METER NIPPLE	S	PRESSURE METER
H5	SOLENOID VALVE NIPPLE		

# Troubleshooting


Common problems	Cause	Solution
●The indicating light in front of product is OFF.	<ul><li>The power is cut off.</li><li>The socket is not well connected.</li><li>Failure of socket.</li></ul>	<ul><li>Check if the socket is well connected.</li><li>Check if there is any failure of socket.</li></ul>
●The iron can't be heated up.	is set at lowest position.  ●The temperature of base plate of iron is too low.	<ul> <li>Adjust the automatic thermoregous to necessary position.</li> <li>The base plate of iron is heating pls wait for completion.</li> <li>When heating up is impossible above measures, pls contact you agent for repair.</li> </ul>
●The iron runs normally, but steam amount is little or no steam is produced.	<ul> <li>There is no water in bucket.</li> <li>The steam boiler in front of product is closed.</li> <li>The steam indicating light is not ON.</li> <li>The steam hole at base plate of iron is blocked.</li> </ul>	<ul> <li>Add water to bucket.</li> <li>Turn the switch to ON, waiting f lighting up of indicating light.</li> <li>Wait for steam indicating light to ON.</li> <li>Contact your agent for repair who steam is produced after taking above measures.</li> </ul>
<ul><li>Water jets out from base plate of iron.</li></ul>	<ul> <li>Too much water in bucket.</li> <li>Auto thermoregulator is at low temperature position.</li> <li>The base plate of iron is at middle positoin.</li> </ul>	<ul> <li>Observe the water volume in bucket, and pour it out when ther is too much water</li> <li>Adjust the automatic thermoreging to necessary position.</li> <li>Wait for heating completion of the plate of iron.</li> </ul>
●The steam ejects out continuously,the solenoid valve can not be closed.		Out off power and connect the agent for repair.
●There is sufficient water in bucket, but the steam indicating light is not ON.		Out off power and connect the agent for repair.
●The safety valve is closed, but there is still air leakage.		•Cut off power and connect the agent for repair.
<ul><li>The pressure gauge points to over 4.5bar.</li><li>During use, the steam</li></ul>	• No abnormality present pla	Out off power and connect the agent for repair.
indicating light is twinkling.	•No abnormality present, pls don't worry.	
<ul><li>During use, spot may be left on clothes.</li></ul>	The inappropriate liquid or unclean water is used.	●Refer to page 10 for inappropria water. Tap water should be use





on

d!









kind

m,


plane

tion

rater tion pipe 50.

ιh

rmolator f high



.1.1
ulator
j up,
with
ur
or
o be
nen ing
'e
ulator
oase
ate
d.